CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
RMT-708

SERVICE MANUAL

Self Diagnosis
Supported model

Ver 1.1 2000. 11

Handycam
Handycam Vision™
video8 XR
videoHi8
videoHi8 XR
InfoLITHIUM™ L SERIES

B201 MECHANISM

Photo : CCD-TRV87E

AEP Model
East European Model
North European Model
Russian Model
CCD-TR417E/TR427E/TR617E/TR717E/ TR918E/TRV37E/TRV48E/TRV57E/ TRV67E/TRV87E
UK Model
CCD-TR417E/TR427E/TR717E/ TR918E/TRV37E/TRV48E/ TRV57E/TRV67E/TRV87E
E Model
Hong Kong Model
Australian Model
Chinese Model
CCD-TR317E/TRV47E/TRV57E/ TRV67E/TRV87E
Tourist Model
CCD-TRV47E/TRV57E/TRV67E/TRV87E

For MECHANISM ADJUSTMENT, refer to the "8mm Video MECHANICAL ADJUSTMENT MANUAL Ⅶ" (9-973-801-11).

SPECIFICATIONS

Video camera recorder

System

Video recording system
2 rotary heads
Helical scanning FM system
Audio recording system
Rotary heads, FM system
Video signal
PAL colour, CCIR standards
Usable cassette
8mm video format cassette
CCD-TR317E/TR417E/TR427E/TR617E/TRV37E/TRV47E/TRV48E/TRV57E:
Standard 8
CCD-TR717E/TR918E/TRV67E/TRV87E: Hi8 or standard 8
Recording/playback time (using 90 min. cassette)
SP mode: 1 hour and 30 minutes
LP mode: 3 hours
Fastforward/rewind time (using 90 min. cassette)
Approx. 5 min.
Viewfinder
Electric viewfinder (monochrome)
Image device
CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E:
1/6 inch CCD (Charge Coupled Device)
CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E:
1/4 inch CCD (Charge Coupled Device)
CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E:
Approx. 320,000 pixels
(Effective: Approx. 290,000 pixels)
CCD-TR617E/TR717E/TRV57E/TRV67E:
Approx. 380,000 pixels
(Effective: Approx. 230,000 pixels)
CCD-TR918E/TRV87E:
Approx. 570,000 pixels
(Effective: Approx. 360,000 pixels)
Lens
Combined power zoom lens
Filter diameter 37 mm (1 7/16 in.)
CCD-TR317E/TRV47E:
20× (Optical), 200× (Digital)
CCD-TRV57E: E, HK, AUS, CN, JE/TRV67E: E, HK, AUS, CN, JE/TRV87E: E, HK, AUS, CN, JE:
20× (Optical), 360× (Digital)
CCD-TR417E/TRV37E:
20× (Optical), 40×*(Digital)
CCD-TR427E/TR617E/TR717E/TR918E/TRV48E/TRV57E: AEP, UK, EE, NE, RU/TRV67E: AEP, UK, EE, NE, RU/TRV87E: AEP, UK, EE, NE, RU:
20× (Optical), 80×**(Digital)
* 240× in some areas
** 360× in some areas
Focal length
3.6 - 72 mm (5/32 - 2 7/8 in.)
When converted to a 35 mm still camera
CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E:
51.8 - 1036 mm (2 - 40 6/8 in.)
CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E:
41 - 820 mm (1 5/8 - 32 3/8 in.)
Colour temperature
Auto
Minimum illumination
CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E:
1 lux (F 1.4)
CCD-TR617E/TR717E/TRV57E/TRV67E:
0.3 lux (F 1.4)
CCD-TR918E:
0.7 lux (F 1.4)
CCD-TRV87E:
0.6 lux (F 1.4)
0 lux (in the NightShot mode)***
*** Objects unable to be seen due to the dark can be shot with infrared lighting.

Input/output connectors

S video input (CCD-TRV87E: E, HK, AUS, CN, JE only)/ output (CCD-TR717E/TR918E/TRV67E/TRV87E only)
4-pin mini DIN
Luminance signal: 1 Vp-p, 75 ohms, unbalanced
Chrominance signal: 0.3 Vp-p, 75 ohms, unbalanced
Video output
Phono jack, 1 Vp-p, 75 ohms, unbalanced
Audio input (CCD-TRV87E: E, HK, AUS, CN, JE only)/output
CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E:
Monaural, phone jack, 327 mV
CCD-TR918E/TRV87E:
Phono jacks (2: stereo L and R)
327 mV, (at output impedance 47 kilohms) impedance less than 2.2 kilohms
RFU DC OUT
Special minijack, DC 5V

— Continued on next page —

8 VIDEO CAMERA RECORDER

CCD-TR317E/TR417E/TR427E/TR617E/
TRV37E/TRV47E/TRV48E/TRV57E

Hi8 VIDEO CAMERA RECORDER

CCD-TR717E/TR918E/TRV67E/TRV87E

SONY®

MICROFILM

Headphone jack (CCD-TRV87E only)
Stereo minijack (ø 3.5 mm)
Earphone jack (CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E only)
Monaural minijack (ø 3.5 mm)
LANC control jack
Stereo mini-minijack (ø 2.5 mm)
MIC jack
CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E:
Monaural minijack (ø 3.5 mm)
CCD-TR918E/TRV87E:
Stereo minijack (ø 3.5 mm)

LCD screen

Picture
2.5 inches measured diagonally
50.3 × 37.4 mm (2 × 1 1/2 in.)
Total dot number
61,600 (280 × 220)

General

Power requirements
7.2 V (battery pack)
8.4 V (AC power adaptor)
Average power consumption (when using the battery pack)
During camera recording using
CCD-TR317E/TR417E/TR427E/TR617E/TR717E: 2.3 W
CCD-TR918E: 2.4 W
LCD
CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E: 2.7 W
CCD-TRV87E: 2.8 W
Viewfinder
CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E: 2.3 W
CCD-TRV87E: 2.4 W
Operating temperature
0 °C to 40 °C (32 °F to 104 °F)
Storage temperature
–20 °C to +60 °C (–4 °F to +140 °F)
Dimensions (approx.)
102 × 106 × 212 mm
(4 1/8 × 4 1/4 × 8 3/8 in.) (w/h/d)
Mass (approx.)
CCD-TR317E:
740 g (1 lb 10 oz)
CCD-TR417E/TR427E:
750 g (1 lb 10 oz)
CCD-TR617E/TR717E/TR918E:
770 g (1 lb 11 oz)
CCD-TRV37E/TRV48E:
840 g (1 lb 13 oz)
CCD-TRV57E/TRV67E/TRV87E:
860 g (1 lb 14 oz)
excluding the battery pack, lithium battery, cassette and shoulder strap
CCD-TR317E:
880 g (1 lb 15 oz)
CCD-TR417E/TR427E:
890 g (1 lb 15 oz)
CCD-TR617E/TR717E/TR918E:
910 g (2 lb)
CCD-TRV47E:
970 g (2 lb)
CCD-TRV37E/TRV48E:
980 g (2 lb 2 oz)
CCD-TRV57E/TRV67E/TRV87E:
1.0 kg (2 lb 3 oz)
including the battery pack NP-F330, lithium battery CR2025, cassette and shoulder strap
Supplied accessories
See page 2.

AC power adaptor

Power requirements
100 - 240 V AC, 50/60 Hz
Power consumption
23 W
Output voltage
DC OUT: 8.4 V, 1.5 A in operating mode
Operating temperature
0 °C to 40 °C (32 °F to 104 °F)
Storage temperature
–20 °C to +60 °C (–4 °F to +140 °F)
Dimensions (approx.)
125 × 39 × 62 mm
(5 × 1 9/16 × 2 1/2 in.) (w/h/d)
excluding projecting parts
Mass (approx.)
280 g (9.8 oz)
excluding mains lead

Battery pack

Output voltage
DC 7.2 V
Capacity
5.0 Wh
Dimensions (approx.)
38 × 21 × 71 mm
(1 9/16 × 13/16 × 2 7/8 in.)
(w/h/d)
Mass (approx.)
95 g (3.4 oz)
Type
Lithium ion

Design and specifications are subject to change without notice.

• SUPPLIED ACCESSORIES

Check that the following accessories are supplied with your camcorder.

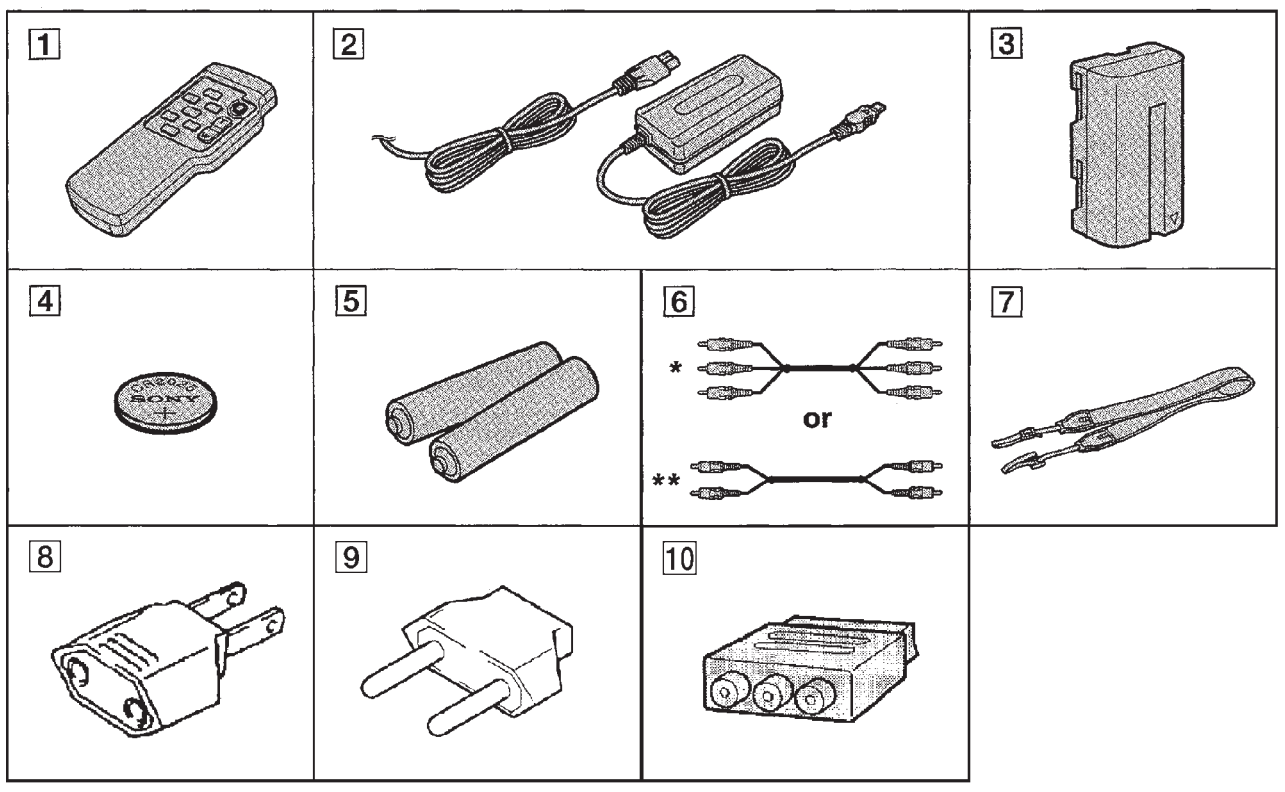

1 **Wireless Remote Commander** (1)
CCD-TR427E/TR617E/TR717E/TR918E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

2 **AC-L10A/L10B/L10C AC power adaptor** (1), **Power cord** (1)

3 **NP-F330 battery pack** (1)

4 **CR2025 lithium battery** (1)
The lithium battery is already installed in your camcorder.

5 **Size AA (R6) battery for Remote Commander** (2)
CCD-TR427E/TR617E/TR717E/TR918E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

6 **A/V connecting cable** (1)
* : CCD-TR918E/TRV87E
** : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E

7 **Shoulder strap** (1)

8 **2-pin conversion adaptor** (1)
CCD-TR317E: E, HK/TRV47E: E, HK/TRV57E: E, HK/TRV67E: E, HK/TRV87E: E, HK

9 **2-pin conversion adaptor** (1)
CCD-TRV47E: JE/TRV57E: JE/TRV67E: JE/TRV87E: JE

10 **21-pin conversion connector** (1)
CCD-TR417E/TR427E/TR617E/TR717E/TR918E/TRV37E/
TRV57E: AEP, EE, NE, RU, UK/
TRV67E: AEP, EE, NE, RU, UK/
TRV87E: AEP, EE, NE, RU, UK

- Abbreviation
  HK : Hong Kong model
  EE : East European model
  NE : North European model
  RU : Russian model
  AUS : Australian model
  HK : Hong Kong model
  CN : Chinese model
  JE : Tourist model

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
   - Keep the temperature of the soldering iron around 270˚C during repairing.
   - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
   - Be careful not to apply force on the conductor when soldering or unsoldering.

Table for difference of function

Model	CCD-TR317E	CCD-TR417E	CCD-TR427E	CCD-TR617E	CCD-TR717E	CCD-TR918E	CCD-TRV37E	CCD-TRV47E	CCD-TRV48E	CCD-TRV57E	CCD-TRV67E	CCD-TRV87E	Remark
Destination	E, AUS, HK, CN	AEP, UK, EE, NE, RU	AEP, UK, EE, NE, RU	AEP, EE, NE, RU	AEP, UK, EE, NE, RU	AEP, UK, EE, NE, RU	AEP, UK, EE, NE, RU	E, AUS, HK, CN, JE	AEP, UK, EE, NE, RU	E, AUS, HK, CN, JE, AEP, UK, EE, NE, RU	E, AUS, HK, CN, JE, AEP, UK, EE, NE, RU	E, AUS, HK, CN, JE, AEP, UK, EE, NE, RU	
Remote commander			RMT-708	RMT-708	RMT-708	RMT-708		RMT-708	RMT-708	RMT-708	RMT-708	RMT-708	RMT-708: with IC301 of MA-374/375 board.
8/Hi8	8	8	8	8	Hi8	Hi8	8	8	8	8	Hi8	Hi8	Hi8: with S-VIDEO jack.
CCD imager	510H	510H	510H	510H	510H	760H	510H	510H	510H	510H	510H	760H	
CCD imager size (inch)	1/6	1/6	1/6	1/4	1/4	1/4	1/6	1/6	1/6	1/4	1/4	1/4	
Lens Optical	20×	20×	20×	20×	20×	20×	20×	20×	20×	20×	20×	20×	
Digital zoom 1	40×	40×(*3)	40×	40×	40×	40×	40×(*3)	40×	40×	40×	40×	40×	
Digital zoom 2	200×	40× (*1), 240× (*3)	80× (*1), 360×	80× (*2), 360×	80× (*1), 360×	80× (*1), 360×	40× (*1), 240× (*3)	200×	80× (*1), 360×	80× (*1), 360×	80× (*1), 360×	80× (*1), 360×	
LCD panel (inch)							2.5	2.5	2.5	2.5	2.5	2.5	2.5: with PD-117 board.
Back light, LCD						○						○	
VTR REC												○ (*4)	
Steady shot				○	○	○				○	○	○	○: with IC451 of SE-100/101 board.
DIGITAL EFFECT						○						○	○: with IC203 of VC-234 board.
Photo mode						○						○	○: with IC203 of VC-234 board.
Audio system	Mono	Mono	Mono	Mono	Mono	Stereo	Mono	Mono	Mono	Mono	Mono	Stereo	
Headphone jack							○	○	○	○	○	○	○: with IC451 of SE-100/101 board.
Night shot	○	○	○	○	○	SUPER	○	○	○	○	○	SUPER	SUPER: with IC203 of VC-234 board.
LASER LINK						○						○	○: with IC751 of VC-234 board.
Video Light				○	○	○				○	○	○	○: with VL-28/29 board.
CD board	CD-239						CD-240						
CF board	CF-66						CF-67						
EJ board	EJ-29						EJ-30						
PD board							PD-117						
MA board	MA-374						MA-375						
PJ board	PJ-99						PJ-100						
SE board				SE-100			SE-101						
VF board	VF-129						VF-129						
VL board				VL-28						VL-29			

*1 AEP2, UK model only
*2 AEP2 model only
*3 AEP1, EE, NE, RU model only
*4 E, AUS, HK, CN, JE model only

- Abbreviation

EE	: East European model	HK	: Hong Kong model
NE	: North European model	CN	: Chinese model
RU	: Russian model	JE	: Tourist model
AUS	: Australian model		

TABLE OF CONTENTS

SERVICE NOTE

1. POWER SUPPLY DURING REPAIRS ··· 7
2. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT) ··· 7

SELF-DIAGNOSIS FUNCTION

1. Self-diagnosis Function ··· 8
2. Self-diagnosis Display ··· 8
3. Service Mode Display ··· 8
3-1. Display Method ··· 8
3-2. Switching of Backup No. ··· 8
3-3. End of Display ··· 8
4. Self-diagnosis Code Table ··· 9

1. GENERAL

Checking supplied accessories ··· 1-1
Quick Start Guide ··· 1-1
Getting Started ··· 1-1
  Using this manual ··· 1-1
  Step 1: Preparing the power supply ··· 1-2
    Installing the battery pack ··· 1-2
    Charging the battery pack ··· 1-2
    Connecting to the mains ··· 1-4
  Step 2: Inserting a cassette ··· 1-4
Recording – Basics ··· 1-4
  Recording a picture ··· 1-4
  Shooting backlit subjects (BACK LIGHT) ··· 1-6
  Shooting in the dark (NightShot) ··· 1-6
  Superimposing the date and time on pictures ··· 1-7
  Checking the recording – END SEARCH/EDITSEARCH/Rec Review ··· 1-7
Playback – Basics ··· 1-7
  Playing back a tape ··· 1-7
  Viewing the recording on TV ··· 1-8
Advanced Recording Operations ··· 1-9
  Recording a still image on a tape – Tape Photo recording ··· 1-9
  Using the wide mode ··· 1-10
  Using the fader function ··· 1-10
  Using special effects – Picture effect ··· 1-11
  Using special effects – Digital effect ··· 1-12
  Using the PROGRAM AE function ··· 1-12
  Adjusting the exposure manually ··· 1-13
  Focusing manually ··· 1-13
  Superimposing a title ··· 1-14
  Making your own titles ··· 1-14
  Using the built-in light ··· 1-15
Advanced Playback Operations ··· 1-16
  Playing back a tape with digital effects ··· 1-16
Editing ··· 1-16
  Dubbing a tape ··· 1-16
Customizing Your Camcorder ··· 1-16
  Changing the menu settings ··· 1-16
  Resetting the date and time ··· 1-18
Additional Information ··· 1-19
  Usable cassettes and playback modes ··· 1-19
  Changing the lithium battery in your camcorder ··· 1-19
  Troubleshooting ··· 1-20
  Self-diagnosis display ··· 1-21
  Warning indicators and messages ··· 1-21
  Using your camcorder abroad ··· 1-21
  Maintenance information and precautions ··· 1-21
Quick Reference ··· 1-23
  Identifying the parts and controls ··· 1-23

2. DISASSEMBLY

2-1. PD-117 BOARD, BACK LIGHT, LIQUID CRYSTAL DISPLAY PANEL (TRV MODEL) ··· 2-2
2-2. FRONT PANEL ASSEMBLY, MA-374/375 BOARD ··· 2-3
2-3. CABINET (R) BLOCK ASSEMBLY ··· 2-4
2-4. MECHANISM DECK-1 ··· 2-5
2-5. EVF BLOCK ASSEMBLY ··· 2-6
2-6. VF-129 BOARD ··· 2-7
2-7. LENS DEVICE, CD-239/240 BOARD ··· 2-8
2-8. DD-134, PJ-99/100, SE-100/101 BOARDS ··· 2-8
2-9. VC-234, EJ-29/30 BOARDS, MECHANISM DECK-2 ··· 2-9
2-10. CF-66 BOARD, LIQUID CRYSTAL DISPLAY PANEL, BACK LIGHT (TR MODEL) ··· 2-11
2-11. CF-67 BOARD, SPEAKER, PUSH SWITCH (TRV MODEL) ··· 2-12
2-12. LCD BLOCK ASSEMBLY, HINGE ASSEMBLY (TRV MODEL) ··· 2-12
2-13. HARNESS PROCESSING OF THE HINGE ASSEMBLY (TRV MODEL) ··· 2-13
2-14. CIRCUIT BOARDS LOCATION ··· 2-14
2-15. FLEXIBLE BOARDS LOCATION ··· 2-15

3. BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM (1/2) ··· 3-1
3-2. OVERALL BLOCK DIAGRAM (2/2) ··· 3-3
3-3. CAMERA/VIDEO BLOCK DIAGRAM (1/2) ··· 3-5
3-4. CAMERA/VIDEO BLOCK DIAGRAM (2/2) ··· 3-7
3-5. VTR/CAMERA CONTROL BLOCK DIAGRAM ··· 3-9
3-6. SERVO BLOCK DIAGRAM ··· 3-11
3-7. MODE CONTROL BLOCK DIAGRAM (1/2) ··· 3-13
3-8. MODE CONTROL BLOCK DIAGRAM (2/2) ··· 3-15
3-9. AUDIO BLOCK DIAGRAM (1/2) ··· 3-17
3-10. AUDIO BLOCK DIAGRAM (2/2) ··· 3-19
3-11. LCD BLOCK DIAGRAM (TRV MODEL) ··· 3-21
3-12. EVF BLOCK DIAGRAM ··· 3-23
3-13. POWER BLOCK DIAGRAM (1/2) ··· 3-25
3-14. POWER BLOCK DIAGRAM (2/2) ··· 3-27

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM (1/2) ··· 4-1
FRAME SCHEMATIC DIAGRAM (2/2) ··· 4-3
4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS ··· 4-5
• CD-239/240 (CCD IMAGER) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM ··· 4-7
• VC-234 (CAMERA PROCESSOR)(1/13) SCHEMATIC DIAGRAM 4-9
• VC-234 (Y/C PROCESSOR)(2/13) SCHEMATIC DIAGRAM ··· 4-11
• VC-234 (MEMORY)(3/13) SCHEMATIC DIAGRAM ··· 4-13
• VC-234 (FOCUS/ZOOM MOTOR DRIVE)(4/13) SCHEMATIC DIAGRAM ··· 4-15
• VC-234 (REC/PB AMP)(5/13) SCHEMATIC DIAGRAM ··· 4-17
• VC-234 (LINE IN/OUT)(6/13) SCHEMATIC DIAGRAM ··· 4-19
• VC-234 (IR TRANSMITTER)(7/13) SCHEMATIC DIAGRAM ··· 4-21
• FP-249 (S/T REEL SENSOR, TAPE TOP), FP-356 (TAPE END), FP-355 (TAPE LED) FLEXIBLE BOARD ··· 4-23
• VC-234 (EVR D/A)(8/13) SCHEMATIC DIAGRAM ··· 4-23
• VC-234 (MODE CONTROL)(9/13) SCHEMATIC DIAGRAM ··· 4-25
• VC-234 (SERVO)(10/13) SCHEMATIC DIAGRAM ··· 4-27

- VC-234 (HI CONTROL)(11/13)
  SCHEMATIC DIAGRAM ··· 4-29
- VC-234 (AUDIO)(12/13)
  SCHEMATIC DIAGRAM ··· 4-31
- VC-234 (DC IN)(13/13)
  SCHEMATIC DIAGRAM ··· 4-33
- VC-234 (CAMERA, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC/PB AMP, LINE IN/OUT, MODE CONTROL, SERVO, HI CONTROL, AUDIO)
  PRINTED WIRING BOARD ··· 4-35
- CF-66 (USER CONTROL)
  PRINTED WIRING BOARD ··· 4-39
- CF-67 (USER CONTROL)
  PRINTED WIRING BOARD ··· 4-43
- CF-66 (USER CONTROL)
  SCHEMATIC DIAGRAM ··· 4-47
- CF-67 (USER CONTROL)
  SCHEMATIC DIAGRAM ··· 4-49
- EJ-29/30 (LANC CONNECTOR), SS-9700 (START/STOP SWITCH)
  PRINTED WIRING BOARDS ··· 4-51
- EJ-29/30 (LANC CONNECTOR)
  SCHEMATIC DIAGRAM ··· 4-53
- PJ-99/100 (AV IN/OUT)
  PRINTED WIRING BOARD ··· 4-56
- PJ-99/100 (AV IN/OUT)
  SCHEMATIC DIAGRAM ··· 4-57
- SE-100/101 (STEADY SHOT)
  PRINTED WIRING BOARD ··· 4-59
- SE-100/101 (STEADY SHOT)
  SCHEMATIC DIAGRAM ··· 4-61
- VL-28/29 (VIDEO LIGHT)
  PRINTED WIRING BOARD AND
  SCHEMATIC DIAGRAM ··· 4-63
- MA-374/375 (MIC AMP)
  PRINTED WIRING BOARD ··· 4-65
- MA-374/375 (MIC AMP)(1/2)
  SCHEMATIC DIAGRAM ··· 4-67
- MA-374/375 (LASER LINK)(2/2)
  SCHEMATIC DIAGRAM ··· 4-69
- PD-117 (RGB LCD DRIVER, TIMING GENERATOR, CG LCD DRIVER, BACK LIGHT DRIVE)
  PRINTED WIRING BOARD ··· 4-71
- FP-152 (PANEL REVERSE)
  FLEXIBLE BOARD ··· 4-74
- PD-117 (RGB LCD DRIVER, TIMING GENERATOR)(1/2)
  SCHEMATIC DIAGRAM ··· 4-75
- PD-117 (CG LCD DRIVER, BACK LIGHT DRIVE)(2/2)
  SCHEMATIC DIAGRAM ··· 4-77
- VF-129 (B/W EVF)
  PRINTED WIRING BOARD ··· 4-80
- VF-129 (B/W EVF)
  SCHEMATIC DIAGRAM ··· 4-81
- DD-134 (DC/DC CONVERTER)
  PRINTED WIRING BOARD ··· 4-83
- DD-134 (DC/DC CONVERTER)
  SCHEMATIC DIAGRAM ··· 4-85

4-3. WAVEFORMS ··· 4-87
4-4. MOUNTED LOCATION ··· 4-91

5 ADJUSTMENTS

1. Before starting adjustment ··· 5-1
1-1. Adjusting items when replacing main parts and boards. ··· 5-2
5-1. CAMERA SECTION ADJUSTMENT ··· 5-4
1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION) ··· 5
1-1-1. List of Service Tools ···
1-1-2. Preparations ···
1-1-3. Precaution ···
1. Setting the Switch ···
2. Order of Adjustments ···
3. Subjects ···
1-2. INITIALIZATION OF D, E, F, 7 PAGE DATA ··· 5-9
1. Initializing the D, E, F, 7 Page Data ··· 5-9
2. Modification of D, E, F, 7 Page Data ··· 5-9
3. D Page Table ···
4. F Page table ···
5. E Page Table ···
6. 7 Page Table ···
1-3. CAMERA SYSTEM ADJUSTMENTS ··· 5-19
1. HALL Adjustment ··· 5
2. Flange Back Adjustment (Using Minipattern Box) ··· 5-20
3. Flange Back Adjustment (Using Flange Back Adjustment Chart and Subject More Than 500m Away) ··· 5-2
3-1. Flange Back Adjustment (1) ··· 5-21
3-2. Flange Back Adjustment (2) ··· 5-21
4. Flange Back Check ··· 5
5. Picture Frame Setting ··· 5-
6. Color Reproduction Adjustment ··· 5-23
7. Auto White Balance & LV Standard Data Input ··· 5-24
8. Auto White Balance Adjustment ··· 5-25
9. White Balance Check ··· 5-
10. Steady Shot Check (CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/ TRV87E) ···
1-4. MONOCHROME ELECTRONIC VIEWFINEDER SYSTEM ADJUSTMENT ··· 5-2
1-4-1. Horizontal Slant Check ··· 5-
1-4-2. Centering Adjustment ··· 5-
1-4-3. Focus Adjustment ··· 5
1-4-4. Aberration Adjustment ··· 5-
1-4-5. Horizontal Amplitude Adjustment (VF-129 board) ··· 5-28
1-4-6. Vertical Amplitude Adjustment (VF-129 board) ··· 5-29
1-4-7. Brightness Adjustment (VF-129 board) ··· 5-29
1-4-8. Horizontal Amplitude, Vertical Amplitude, Focus Check ···
1-5. LCD SYSTEM ADJUSTMENT (CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/ TRV87E) ···
1. LCD Initial Data Input ··· 5-
2. VCO Adjustment (PD-117 board) ··· 5-31
3. RGB AMP Adjustment (PD-117 board) ··· 5-31
4. Contrast Adjustment (PD-117 board) ··· 5-32
5. COM AMP Adjustment (PD-117 board) ··· 5-32
6. V-COM Adjustment (PD-117 board) ··· 5-33
7. White Balance Adjustment (PD-117 board) ··· 5-33
5-2. MECHANISM SECTION ADJUSTMENT ··· 5-34
2-1. OPERATING WITHOUT CASSETTE ··· 5-34
2-2. TAPE PATH ADJUSTMENT ··· 5-34
1. Preparations for Adjustment ··· 5-3
5-3. VIDEO SECTION ADJUSTMENTS ··· 5-35
3-1. PREPARATIONS BEFORE ADJUSTMENTS ··· 5-35
3-1-1. Equipment to Required ··· 5-
3-1-2. Precautions on Adjusting ··· 5-3
3-1-3. Adjusting Connectors ··· 5-
3-1-4. Connecting the Equipments ··· 5-3
3-1-5. Alignment Tape ···
3-1-6. Input/Output Level and Impedance ··· 5-38
3-1-7. Recording Mode (Standard 8/Hi8) switching (CCD-TR717E/TR918E/TRV67E/TRV87E) ··· 5-38

3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT 5-39
1. Initialization of D, E, F, 7 Page Data 5-39
3-3. SERVO SYSTEM ADJUSTMENTS 5-39
1. CAP FG Offset Adjustment (VC-234 board) 5-39
2. Switching Position Adjustment (VC-234 board) 5-39
3-4. VIDEO SYSTEM ADJUSTMENTS 5-40
1. 28 MHz Origin Oscillation Adjustment (VC-234 board) 5-40
2. AFC f_0 Adjustment (VC-234 board) 5-40
3. Filter f_0 Adjustment (VC-234 board) 5-41
4. Y OUT Level Adjustment (VC-234 board) 5-41
5. C OUT Level Adjustment (VC-234 board) 5-42
6. REC Y Current Adjustment (VC-234 board) 5-43
7. REC C/AFM Current Adjustment 5-44
7-1. Preparations only for the PLAYER model 5-44
7-2. REC C Current Check (VC-234 board) 5-44
7-3. REC AFM Current Adjustment (VC-234 board) 5-45
7-4. Processing after completed adjustment only for the PLAYER model 5-45
3-5. IR TRANSMITTER ADJUSTMENTS (CCD-TR918E/TRV87E) 5-46
1. IR Video Carrier Frequency Adjustment (VC-234 board) 5-46
2. IR Video Deviation Adjustment (VC-234 board) 5-46
3. IR Audio Deviation Adjustment (VC-234 board) 5-47
3-6. STEREO AUDIO SYSTEM ADJUSTMENT (CCD-TR918E/TRV87E) 5-48
1. Deviation Adjustment 5-49
1-1. Connections 5-49
1-2. Preparations only for the PLAYER model 5-49
1-3. 1.5 MHz Deviation Adjustment (VC-234 board) 5-49
1-4. 1.7 MHz Deviation Adjustment (VC-234 board) 5-50
1-5. Processing after completed adjustment only for the PLAYER model 5-50
2. BPF f_0 Adjustment (VC-234 board) 5-50
3-7. MONAURAL AUDIO SYSTEM ADJUSTMENT (CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E) 5-51
1. 1.5 MHz Deviation Adjustment (VC-234 board) 5-51
2. BPF f_0 Adjustment (VC-234 board) 5-51
5-4. SERVICE MODE 5-52
4-1. ADJUSTMENT REMOTE COMMANDER 5-52
1. Using the Adjustment Remote Commander 5-52
2. Precautions Upon Using the Adjustment Remote Commander 5-52
4-2. DATA PROCESS 5-53
4-3. SERVICE MODE 5-54
1. Test Mode Setting 5-54
2. Emergency Memory Address 5-55
2-1. EMG code (Emergency code) 5-55
2-2. MSW codes 5-56
3. Bit Value Discrimination 5-57
4. Input/output selection check 5-57
5. LED, LCD (display window) check 5-57
6. Record of Use check 5-58
7. Switch check (1) 5-58
8. Switch check (2) 5-59
9. Headphone jack check (TRV model only) 5-59

6. REPAIR PARTS LIST

6-1. EXPLODED VIEWS 6-1
6-1-1. FRONT PANEL BLOCK ASSEMBLY AND BATTERY PANEL BLOCK ASSEMBLY 6-1
6-1-2. CABINET (R) BLOCK ASSEMBLY (TRV MODEL) (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E) 6-2
6-1-3. CABINET (R) BLOCK ASSEMBLY (TR MODEL) (TR317E/TR417E/TR427E/TR617E/TR717E/TR918E) 6-3
6-1-4. CABINET (L) BLOCK ASSEMBLY 6-4
6-1-5. EVF BLOCK ASSEMBLY AND LENS BLOCK ASSEMBLY 6-6
6-1-6. LCD BLOCK ASSEMBLY (TRV MODEL) (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E) 6-7
6-1-7. CASSETTE COMPARTMENT ASSEMBLY 6-8
6-1-8. LS CHASSIS BLOCK ASSEMBLY 6-9
6-1-9. MECHANISM CHASSIS ASSEMBLY 6-10
6-2. ELECTRICAL PARTS LIST 6-11

* Parts reference sheet and color reproduction frame are shown on page 276 and 277.

SERVICE NOTE

1. POWER SUPPLY DURING REPAIRS

In this unit, about 10 seconds after power is supplied (8.4V) to the battery terminal using the service power cord (J-6082-223-A), the power is shut off so that the unit cannot operate.
This following two methods are available to prevent this. Take note of which to use during repairs.

Method 1.

Connect the servicing remote commander RM-95 (J-6082-053-B) to the LANC jack, and set the remote commander switch to the “ADJ” side.

Method 2.

Use the DC IN terminal. (Use the AC power adaptor.)

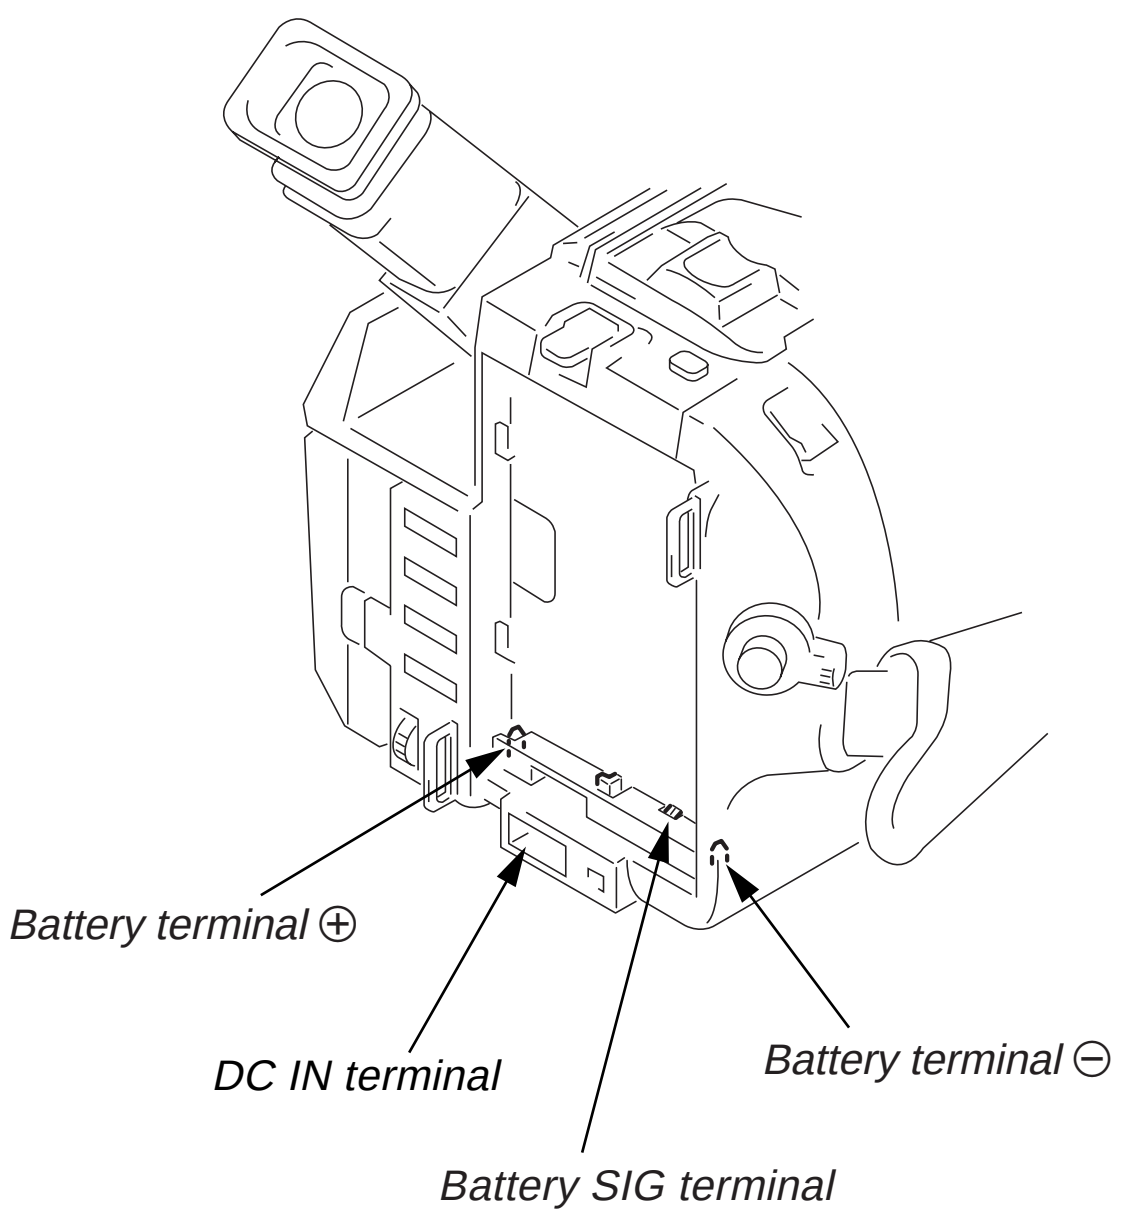
Battery terminal ⊕
DC IN terminal
Battery terminal ⊖
Battery SIG terminal

2. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT)

① Refer to 2-1. to remove the front panel assembly.
② Refer to 2-1. to remove the cabinet (R) assembly.
③ Refer to 2-1. to remove the battery panel assembly.
④ Refer to 2-1. to remove the cabinet (L) assembly.
⑤ Refer to 2-1. to remove the cassette lid assembly.
⑥ Disconnect CN974 of VC-234 board.
⑦ Add +5V from the DC POWER SUPPLY and unload with a pressing the cassette compartment.

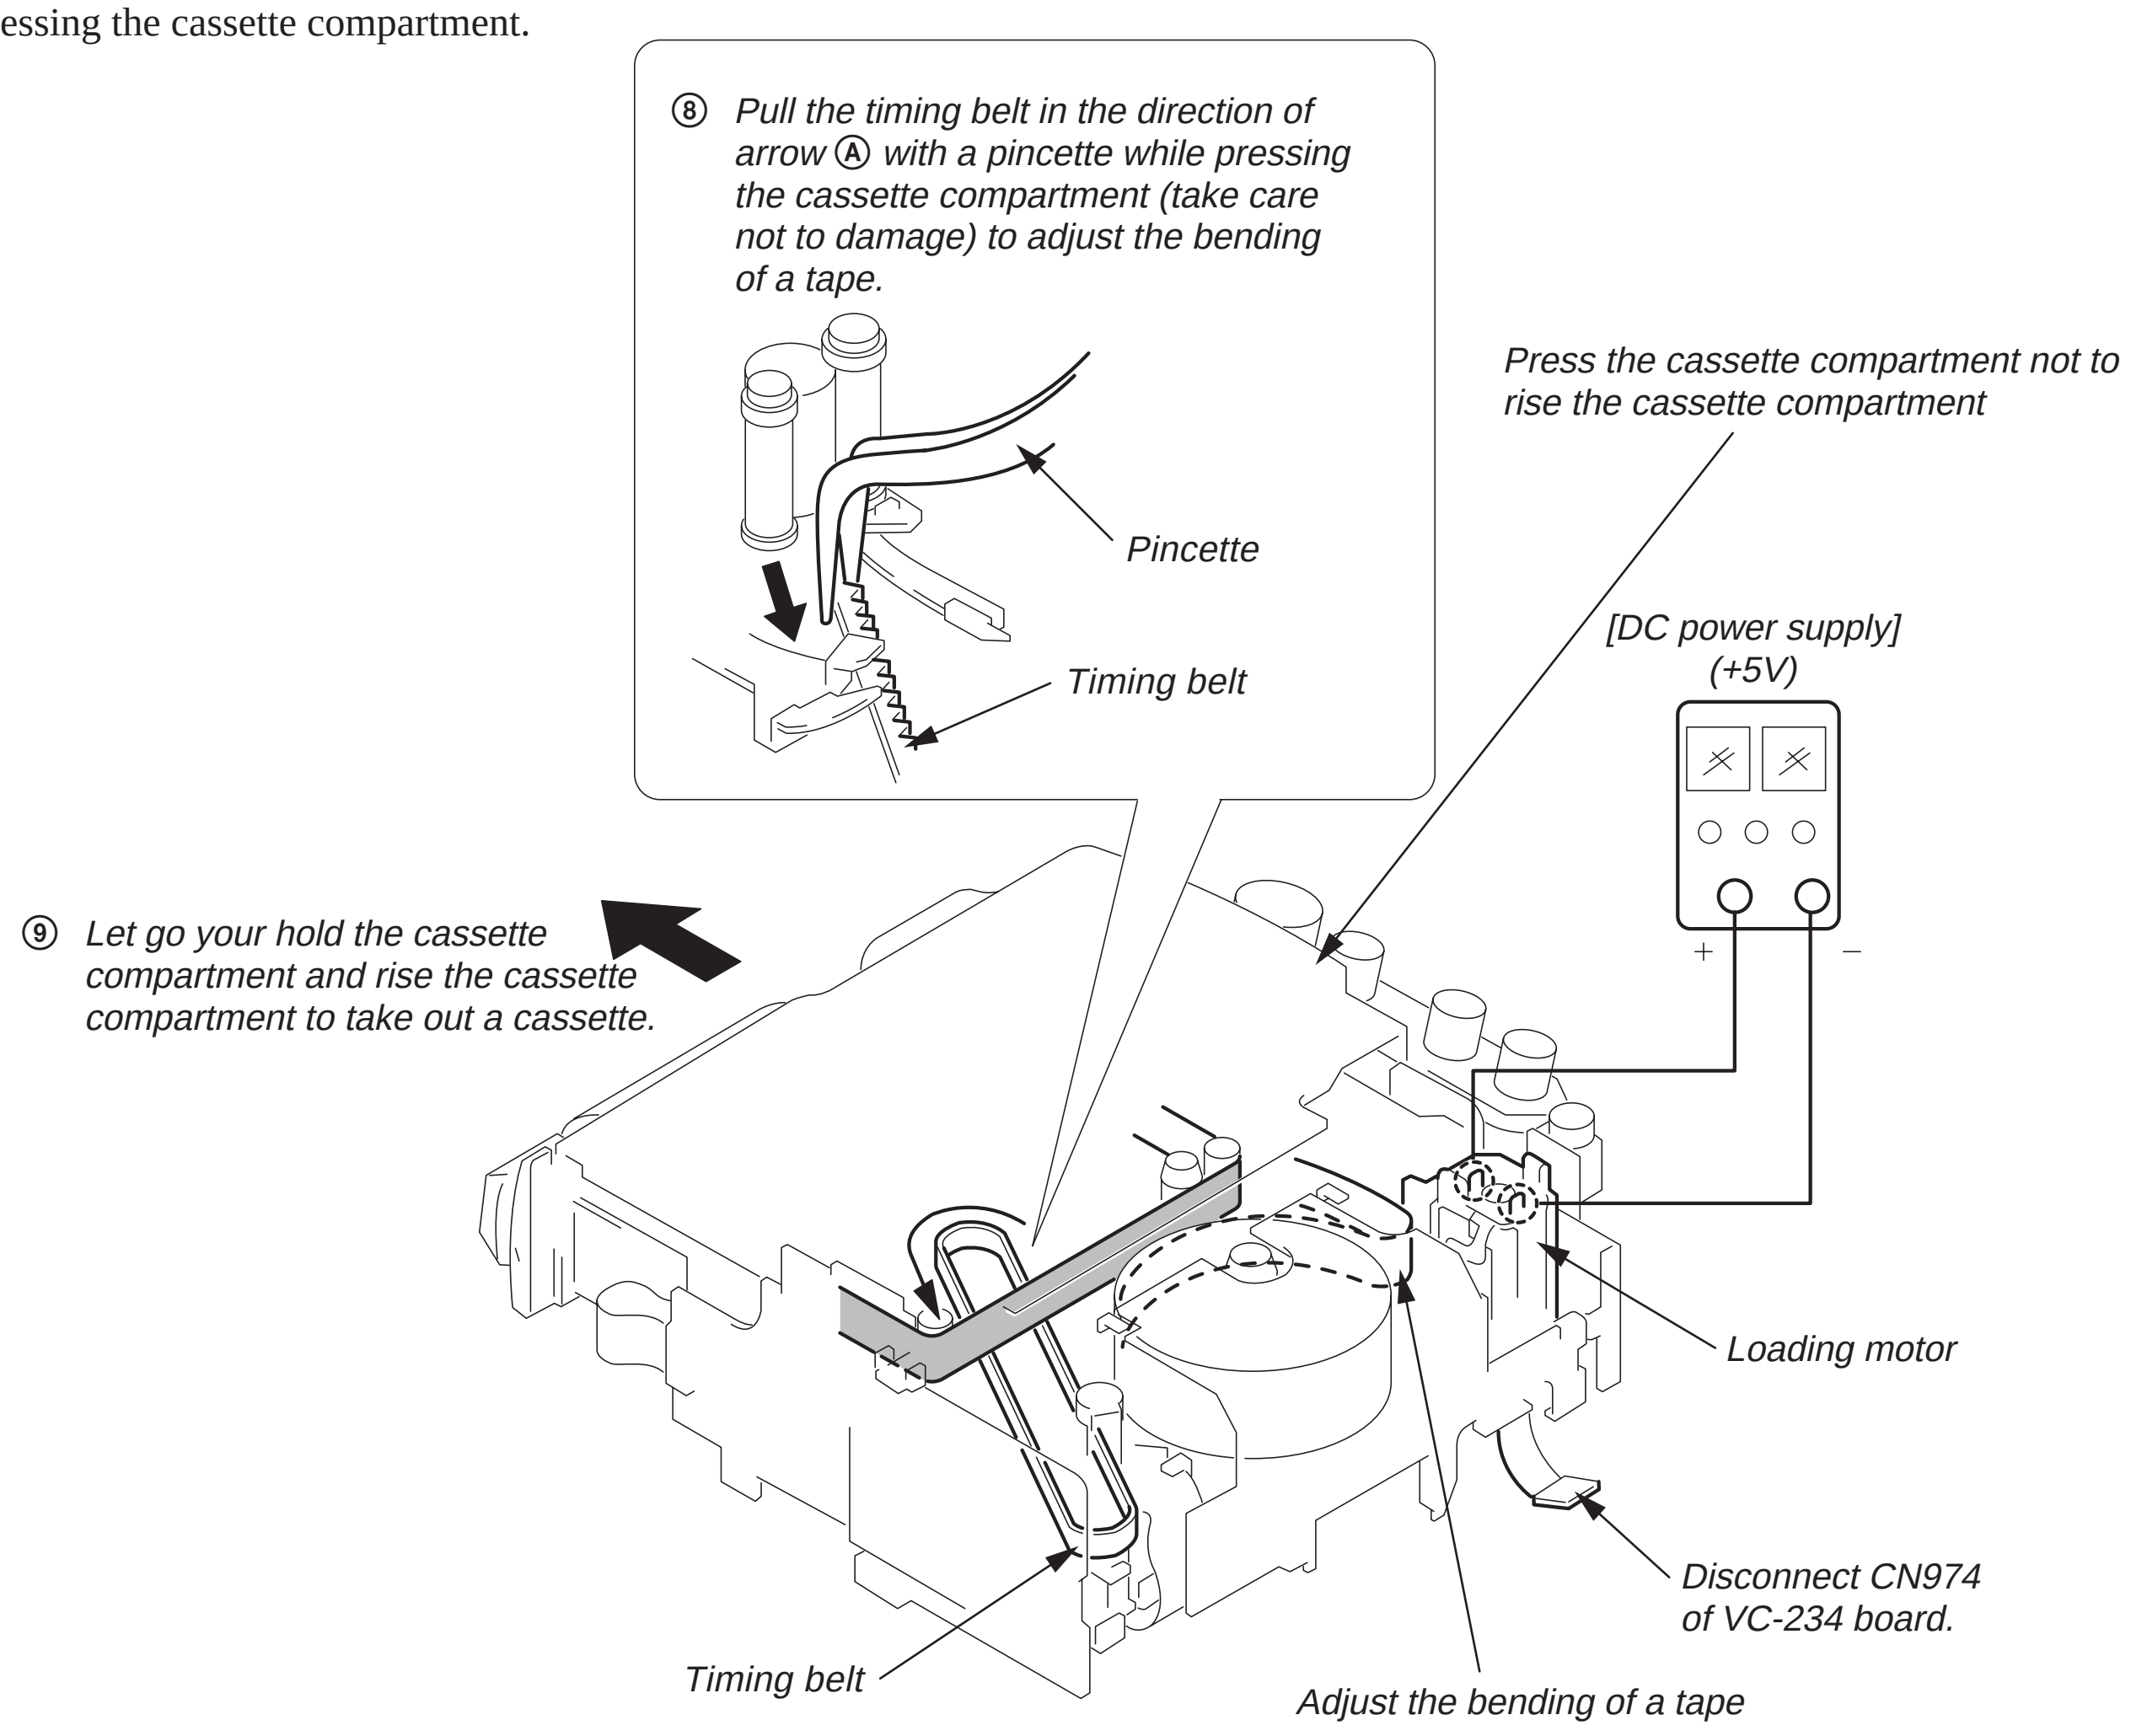
⑧ Pull the timing belt in the direction of arrow Ⓐ with a pincette while pressing the cassette compartment (take care not to damage) to adjust the bending of a tape.

⑨ Let go your hold the cassette compartment and rise the cassette compartment to take out a cassette.

Press the cassette compartment not to rise the cassette compartment

Pincette
Timing belt
[DC power supply]
(+5V)
+
−
Loading motor
Disconnect CN974
of VC-234 board.
Timing belt
Adjust the bending of a tape

SELF-DIAGNOSIS FUNCTION

1. Self-diagnosis Function

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the viewfinder or Display window what to do. This function consists of two display; self-diagnosis display and service mode display.
Details of the self-diagnosis functions are provided in the Instruction manual.

2. Self-diagnosis Display

When problems occur while the unit is operating, the counter of the viewfinder or Display window shows a 4-digit display consisting of an alphabet and numbers, which blinks at 3.2 Hz. This 5-character display indicates the "repaired by:", "block" in which the problem occurred, and "detailed code" of the problem.

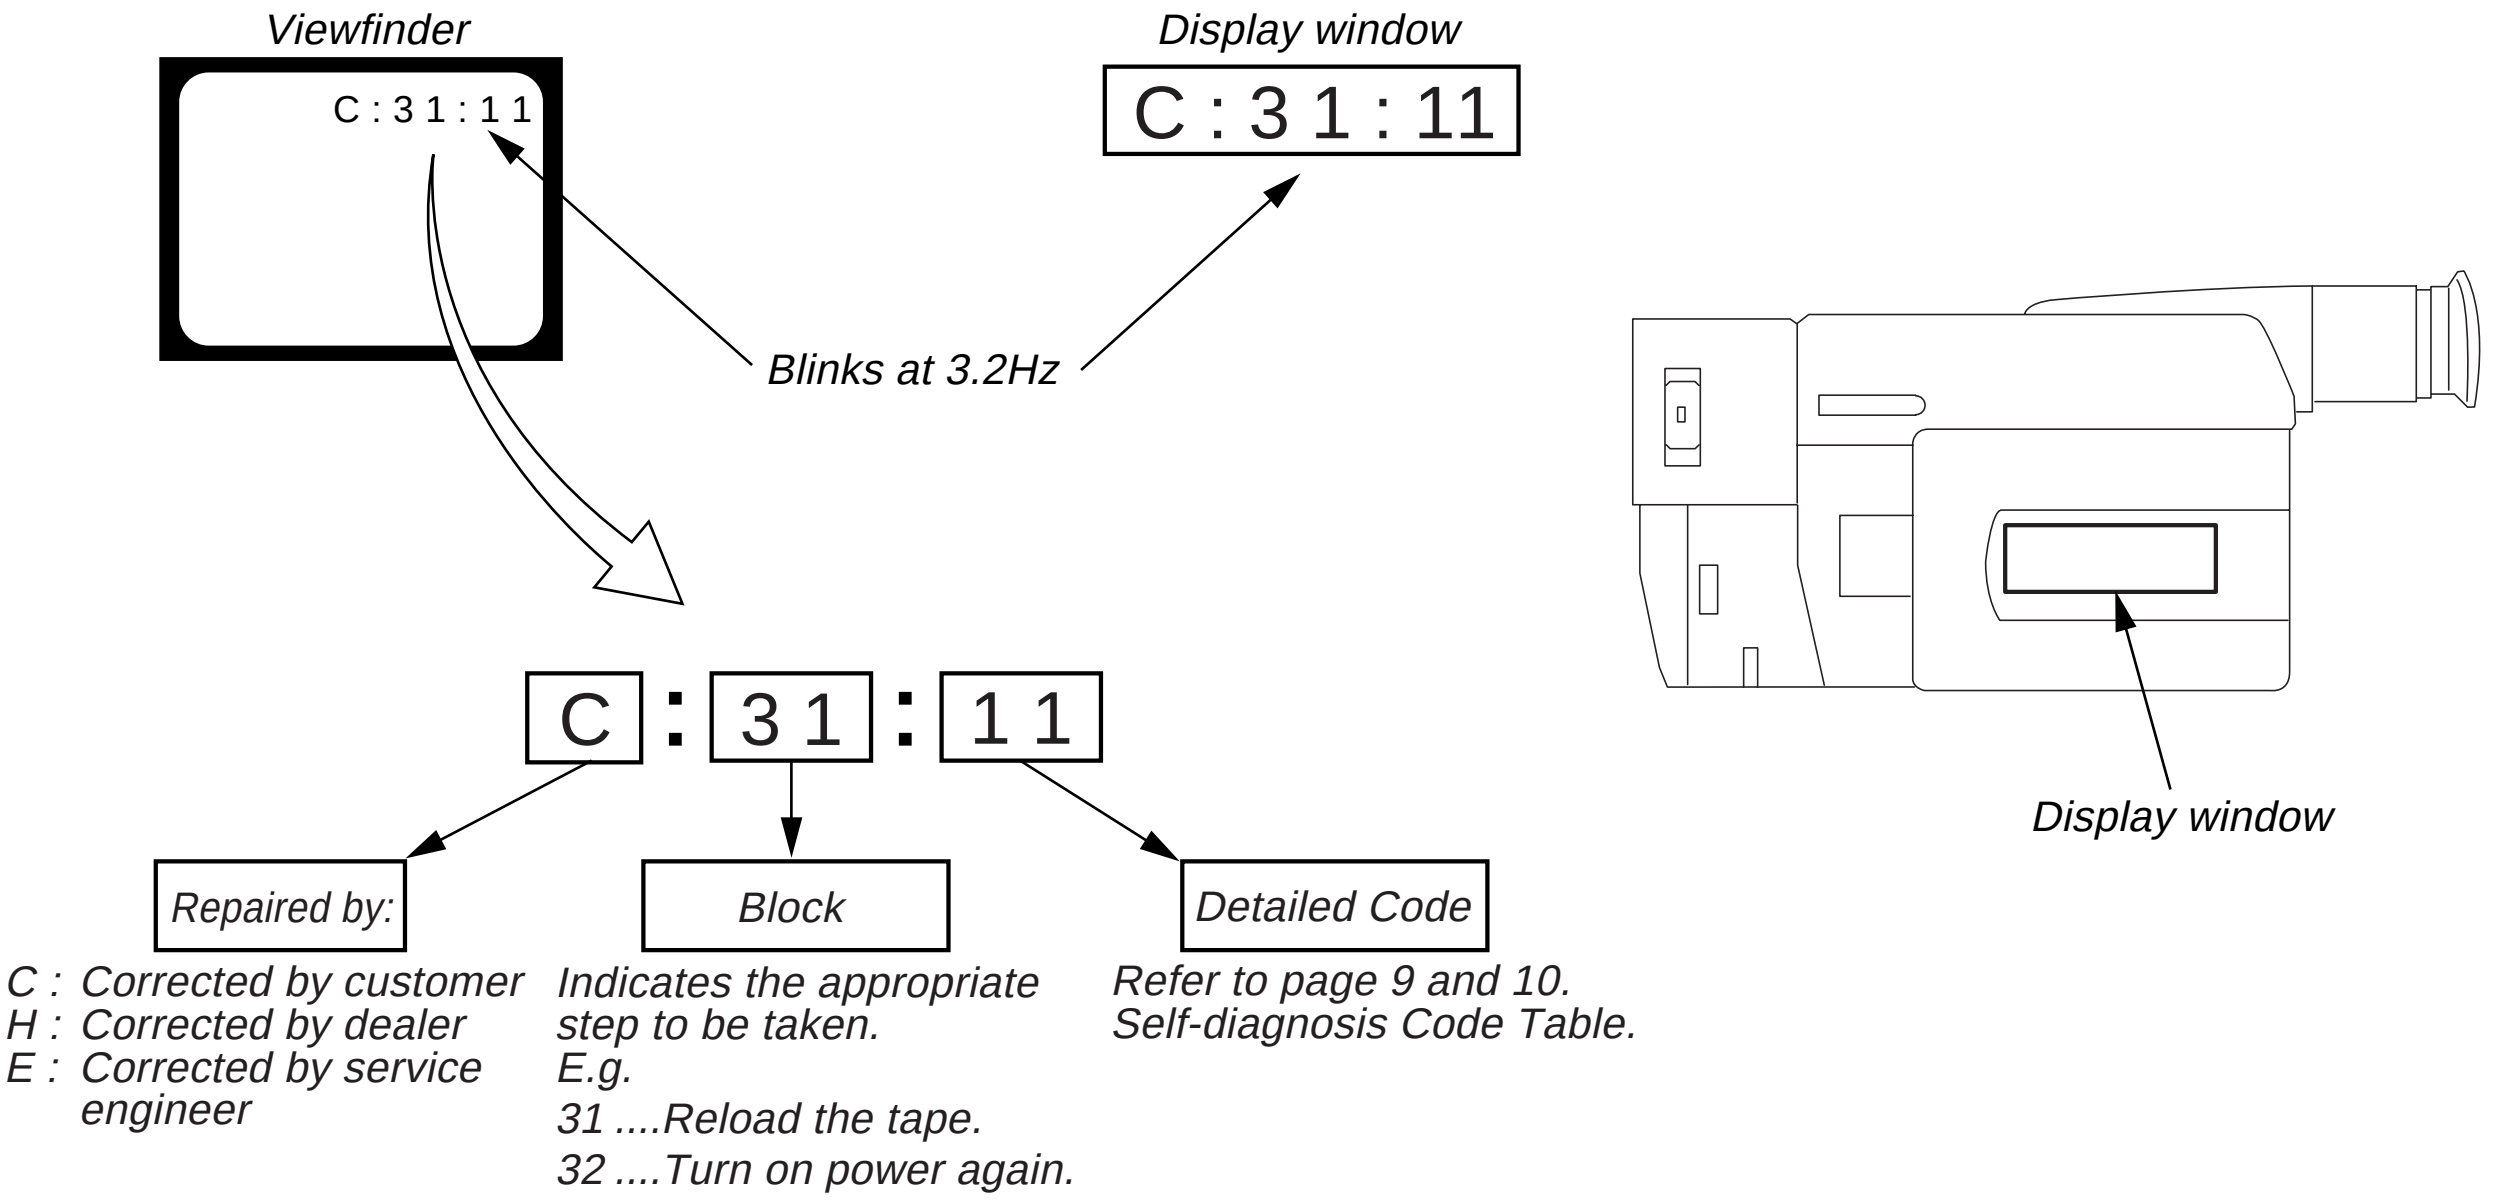

C : Corrected by customer
H : Corrected by dealer
E : Corrected by service engineer

Indicates the appropriate step to be taken.
E.g.
31 ....Reload the tape.
32 ....Turn on power again.

Refer to page 9 and 10.
Self-diagnosis Code Table.

3. Service Mode Display

The service mode display shows up to six self-diagnosis codes shown in the past.

3-1. Display Method

While pressing the "STOP" key, set the switch from OFF to "VTR or PLAYER", and continue pressing the "STOP" key for 5 seconds continuously. The service mode will be displayed, and the counter will show the backup No. and the 5-character self-diagnosis codes.

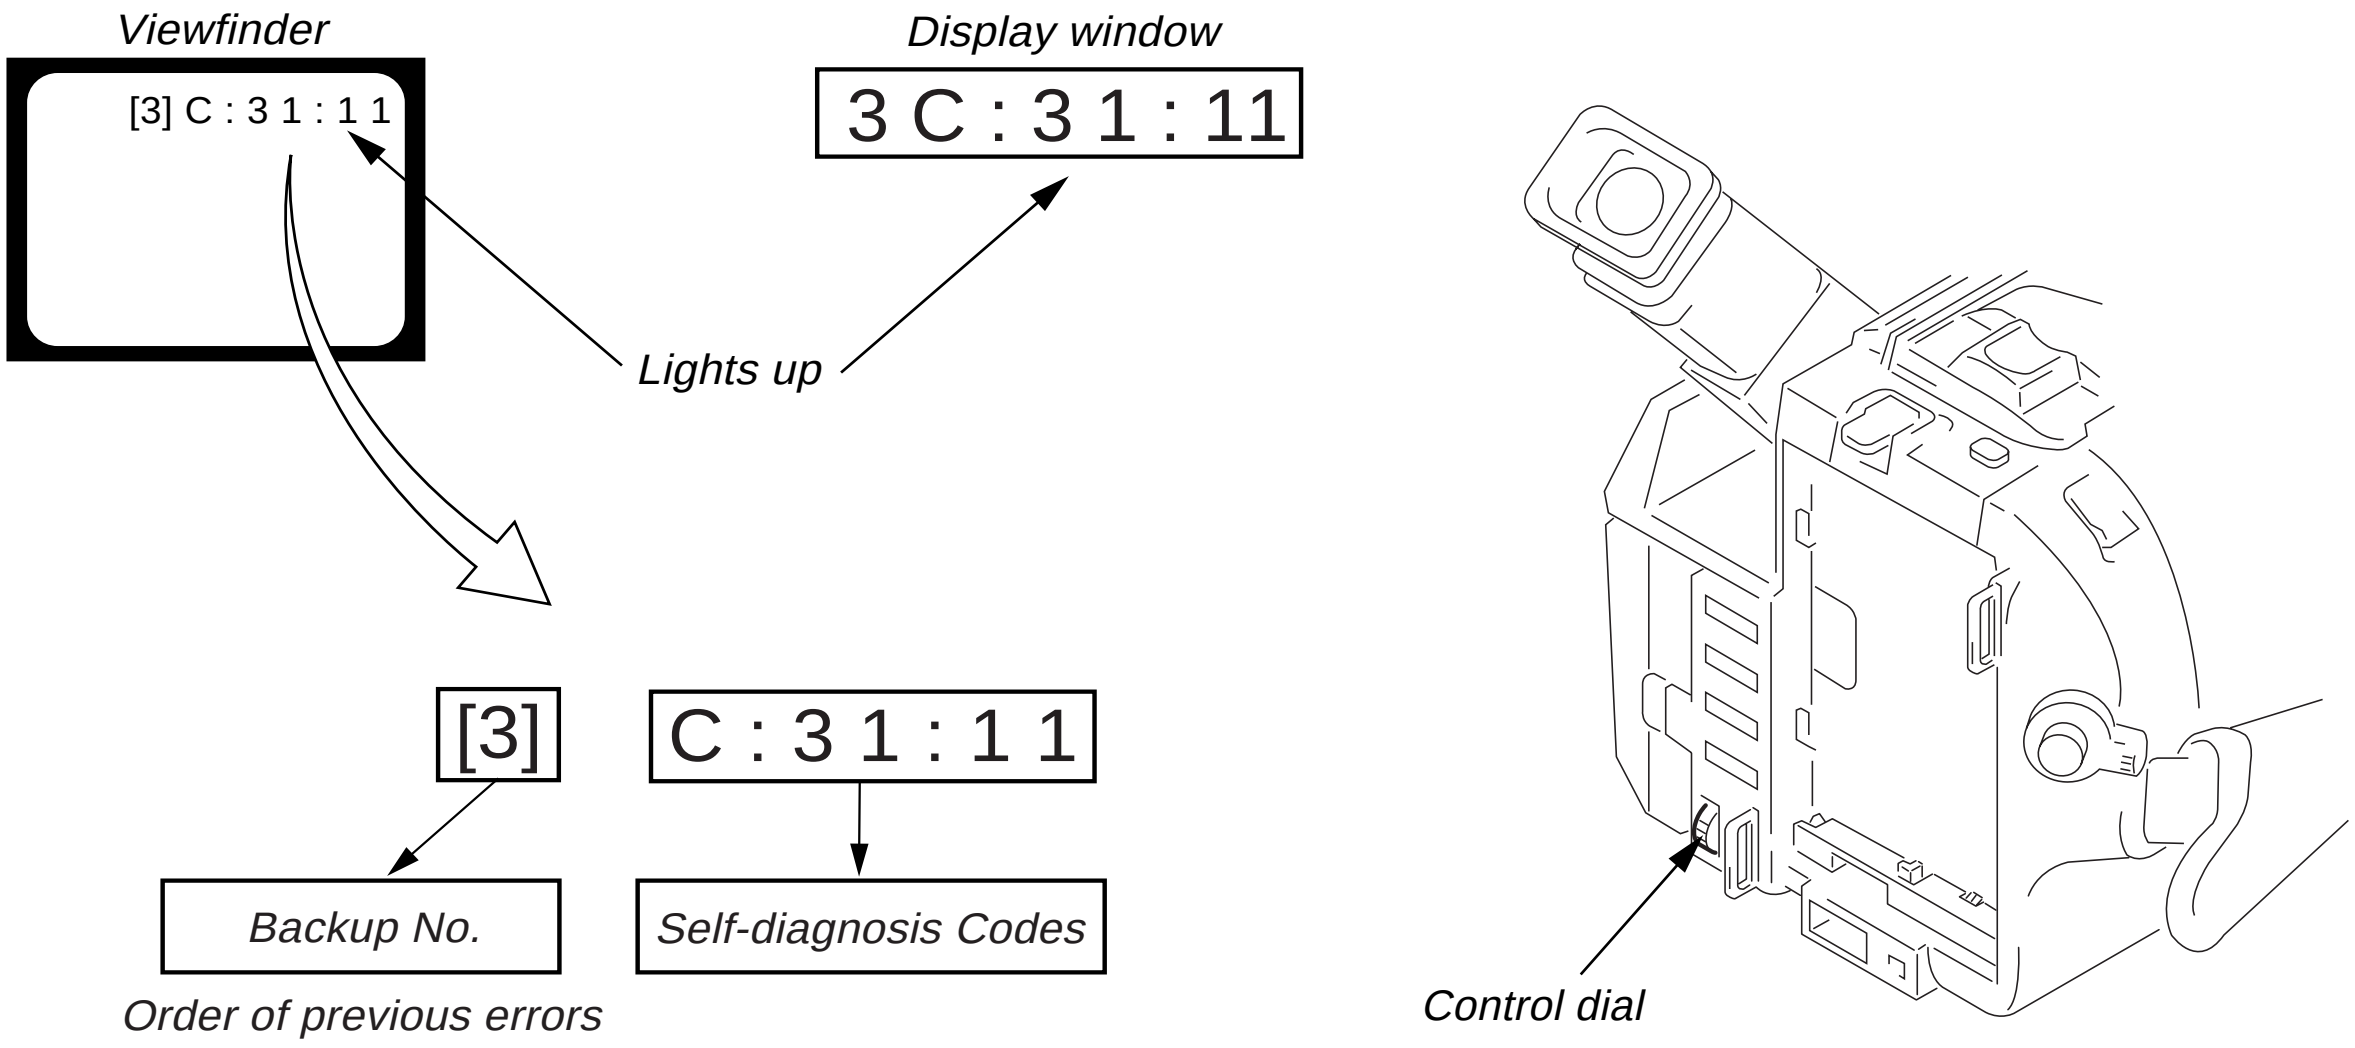

Order of previous errors

3-2. Switching of Backup No.

By rotating the control dial, past self-diagnosis codes will be shown in order. The backup No. in the [] indicates the order in which the problem occurred. (If the number of problems which occurred is less than 6, only the number of problems which occurred will be shown.)

[1] : Occurred first time
[2] : Occurred second time
[3] : Occurred third time
[4] : Occurred fourth time
[5] : Occurred fifth time
[6] : Occurred the last time

3-3. End of Display

Turning OFF the power supply will end the service mode display.

Note: The "self-diagnosis display" data will be backed up by the coin-type lithium battery (CF-66/67 board BH001). When this coin-type lithium battery is disconnected, the "self-diagnosis display" data will be lost by initialization.

4. Self-diagnosis Code Table

Self-diagnosis Code			Symptom/State	Correction
Repaired by:	Block Function	Detailed Code		
C	0 4	0 0	Non-standard battery is used.	Use the InfoLITHIUM battery.
C	2 1	0 0	Condensation.	Remove the cassette, and insert it again after one hour.
C	2 2	0 0	Video head is dirty.	Clean with the optional cleaning cassette.
C	3 1	1 0	LOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3 1	1 1	UNLOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3 1	2 0	T reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3 1	2 1	S reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3 1	2 2	T reel fault.	Load the tape again, and perform operations from the beginning.
C	3 1	2 3	S reel fault.	Load the tape again, and perform operations from the beginning.
C	3 1	3 0	FG fault when starting capstan.	Load the tape again, and perform operations from the beginning.
C	3 1	3 1	FG fault during normal capstan operations.	Load the tape again, and perform operations from the beginning.
C	3 1	4 0	FG fault when starting drum.	Load the tape again, and perform operations from the beginning.
C	3 1	4 1	PG fault when starting drum.	Load the tape again, and perform operations from the beginning.
C	3 1	4 2	FG fault during normal drum operations.	Load the tape again, and perform operations from the beginning.
C	3 1	4 3	PG fault during normal drum operations.	Load the tape again, and perform operations from the beginning.
C	3 1	4 4	Phase fault during normal drum operations.	Load the tape again, and perform operations from the beginning.
C	3 2	1 0	LOAD direction loading motor time-out.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	1 1	UNLOAD direction loading motor time-out.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 0	T reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 1	S reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 2	T reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 3	S reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	3 0	FG fault when starting capstan.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	3 1	FG fault during normal capstan operations.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 0	FG fault when starting drum.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 1	PG fault when starting drum.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 2	FG fault during normal drum operations.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 3	PG fault during normal drum operations.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 4	Phase fault during normal drum operations.	Remove the battery or power cable, connect, and perform operations from the beginning.

Self-diagnosis Code			Symptom/State	Correction
Repaired by:	Block Function	Detailed Code		
E	6 1	0 0	Difficult to adjust focus (Cannot initialize focus.)	Inspect the lens block focus reset sensor (Pin ⑫ of CN551 of VC-234 board) when focusing is performed when the control dial is rotated in the focus manual mode and the focus motor drive circuit (IC551 of VC-234 board) when the focusing is not performed. **Note:** Use the remote commander RM-95 only for the model without the focus dial.
E	6 1	1 0	Zoom operations fault (Cannot initialize zoom lens.)	Inspect the lens block zoom reset sensor (Pin ⑭ of CN551 of VC-234 board) when zooming is performed when the zoom lens is operated and the zoom motor drive circuit (IC551 of VC-234 board) when zooming is not performed.
E	6 2	0 0	Handshake correction function does not work well. (With pitch angular velocity sensor output stopped.)	Inspect pitch angular velocity sensor (SE451 of SE-101 board) peripheral circuits.
E	6 2	0 1	Handshake correction function does not work well. (With yaw angular velocity sensor output stopped.)	Inspect yaw angular velocity sensor (SE452 of SE-101 board) peripheral circuits.

SECTION 1
GENERAL

This section is extracted from instruction manual. (3-868-324-11)

Checking supplied accessories

Make sure that the following accessories are supplied with your camcorder.

Проверка прилагаемых принадлежностей

Убедитесь, что следующие принадлежности прилагаются к Вашей видеокамере.

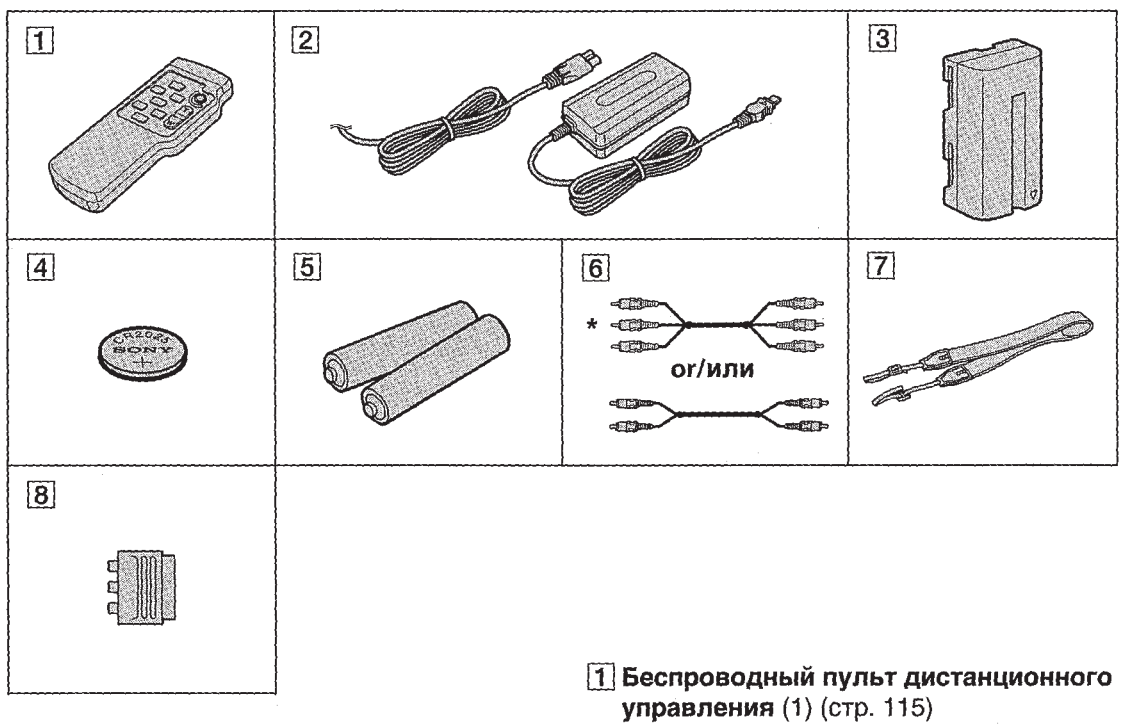

1. **Wireless Remote Commander** (1) (p. 115)
   CCD-TRV48E/TRV57E/TRV67E/TRV87E only
2. **AC-L10A/L10B/L10C AC power adaptor** (1), **Mains lead** (1) (p. 14)
3. **NP-F330 battery pack** (1) (p. 13, 14)
4. **CR2025 lithium battery** (1) (p. 87)
   The lithium battery is already installed in your camcorder.
5. **R6 (size AA) battery for Remote Commander** (2) (p. 115)
   CCD-TRV48E/TRV57E/TRV67E/TRV87E only
6. **A/V connecting cable** (1) (p. 38)
   * for stereo model
7. **Shoulder strap** (1) (p. 111)
8. **21-pin adaptor** (1) (p. 39)

Contents of the recording cannot be compensated if recording or playback is not made due to a malfunction of the camcorder, video tape, etc.

1. **Беспроводный пульт дистанционного управления** (1) (стр. 115)
   Только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E
2. **Сетевой адаптер переменного тока AC-L10A/L10B/L10C** (1), **Шнур электропитания** (1) (стр. 14)
3. **Батарейный блок NP-F330** (1) (стр. 13,14)
4. **Литиевая батарейка CR2025** (1) (стр. 87)
   Литиевая батарейка уже установлена в Вашей видеокамере.
5. **Батарейка R6 (размера AA) для пульта дистанционного управления** (2) (стр. 115)
   Только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E
6. **Соединительный кабель аудио/видео** (1) (стр. 38)
   * Для стереофонической модели
7. **Плечевой ремень** (1) (стр. 111)
8. **21-штырьковый адаптер** (1) (стр. 39)

Содержание записи не может быть компенсировано в случае, если запись или воспроизведение не выполнены из-за неисправности видеокамеры, видеоленты и т.п.

English

Quick Start Guide

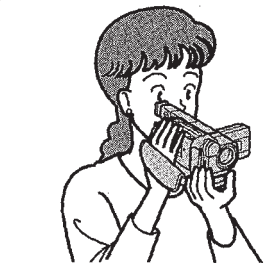

This chapter introduces you to the basic features of your camcorder. See the page in parentheses "( )" for more information.

1 Connecting the mains lead (p. 19)

Use the battery pack when using your camcorder outdoors (p. 13).

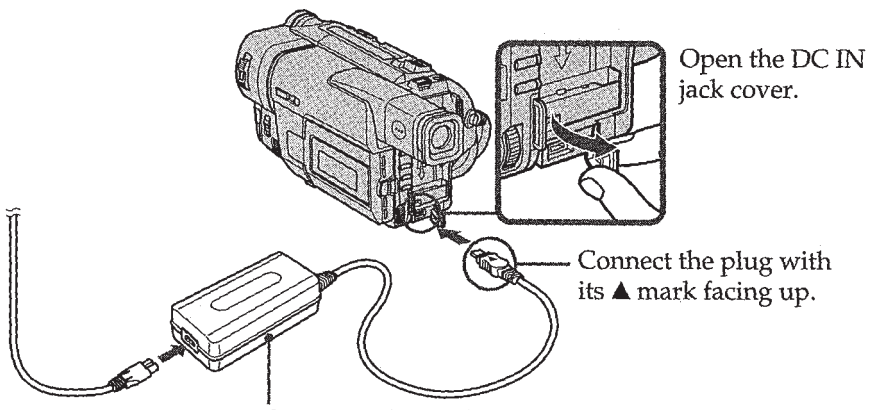
Open the DC IN jack cover.
Connect the plug with its ▲ mark facing up.
AC power adaptor (supplied)

2 Inserting a cassette (p. 21)

❶ Slide EJECT in the direction of the arrow while pressing the small blue button.



❷ Insert a cassette into the cassette compartment with its window facing out.

❸ Close the cassette compartment by pressing the PUSH mark on the cassette compartment. The cassette compartment automatically goes down.

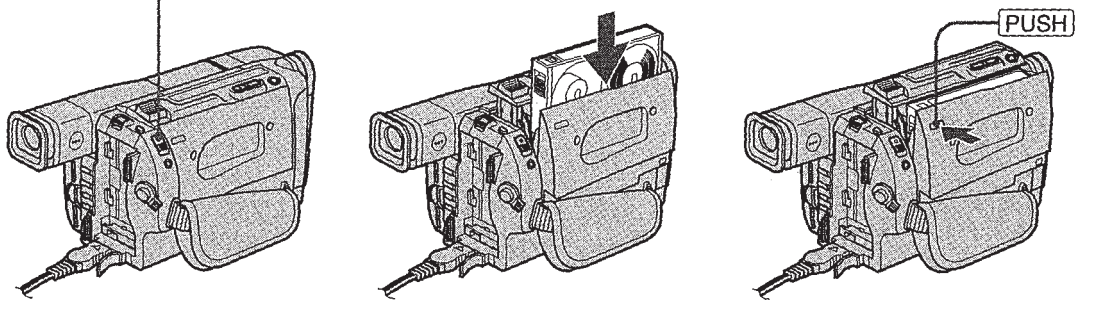

3 Recording a picture (p. 22)

❶ Set the POWER switch to CAMERA while pressing the small green button.



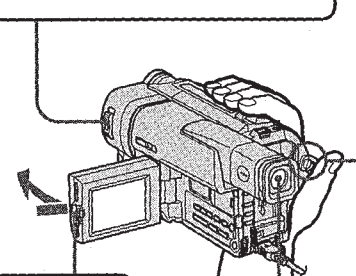

❷ Open the LCD panel while pressing OPEN.

Viewfinder
When the LCD panel is closed, use the viewfinder placing your eye against its eyecup. The picture in the viewfinder is black and white.

❸ Turn STANDBY to STANDBY. The picture appears on the LCD screen.



❹ Press the red button. Your camcorder starts recording. To stop recording, press the red button again.



4 Monitoring the playback picture on the LCD screen (p. 34)

❶ Set the POWER switch to PLAYER while pressing the small green button.



❷ Press ◄◄ to rewind the tape.

REW
◄◄

❸ Press ► to start playback.

PLAY
▷

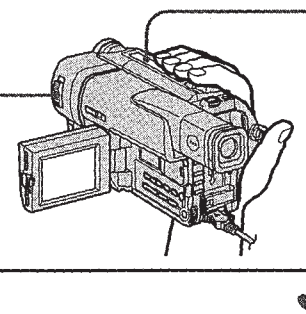

NOTE
Do not pick up your camcorder by holding the viewfinder, the LCD panel or the battery pack.



— Getting started —

Using this manual

The instructions in this manual are for the five models listed in the table on the next page. Before you start reading this manual and operating your camcorder, check the model number by looking at the bottom of your camcorder. The CCD-TRV87E is the model used for illustration purposes. Otherwise, the model name is indicated in the illustrations. Any differences in operation are clearly indicated in the text, for example, "CCD-TRV87E only."
As you read through this manual, buttons and settings on your camcorder are shown in capital letters.
e.g. Set the POWER switch to CAMERA.
When you carry out an operation, you can hear a beep sound to indicate that the operation is being carried out.

— Подготовка к эксплуатации —

Использование данного руководства

Инструкции в данном руководстве предназначены для пяти моделей, указанных в таблице на следующей странице. Прежде, чем прочесть данное руководство, и начать эксплуатацию Вашей видеокамеры, проверьте номер модели на нижней стороне видеокамеры. Для иллюстративных целей используется модель CCD-TRV87E. Или же наименование модели указано на рисунках. Всякие отличия по экплуатации четко указаны в тексте, например, "только модель CCD-TRV87E".
При чтении данного руководства учитывайте, что кнопки и установки на видеокамере показаны заглавными буквами.
Прим.
Установите переключатель POWER в положение CAMERA.
При выполнении операции на видеокамере Вы сможете услышать зуммерный сигнал, подтверждающий выполнение операции.

Using this manual

Использование данного руководства

Types of differences/Типы различий

CCD-	TRV37E	TRV48E	TRV57E	TRV67E	TRV87E
System Система	8	8	8	Hi8	Hi8
S VIDEO OUT	—	—	—	●	●
Digital zoom Цифровой вариообъектив	40× *	80× **	80× **	80× **	80× **
Super NightShot Ночная суперсъемка	—	—	—	—	●
SteadyShot Устойчивая съемка	—	—	●	●	●
Remote sensor Дистанционный датчик	—	●	●	●	●
SUPER LASER LINK	—	—	—	—	●
Photo mode Фоторежим	—	—	—	—	●
PROGRAM AE	●	●	●	●	●
Low lux mode Режим низкого освещения	—	—	—	—	●
Digital effect Цифровой эффект	—	—	—	—	●
Fader function Функция фейдера	●	●	●	●	●
OVERLAP	—	—	—	—	●
WIPE	—	—	—	—	●
Built-in light Встроенная подсветка	—	—	●	●	●
Audio Аудиосигнал	monaural монофонический	monaural монофонический	monaural монофонический	monaural монофонический	stereo стереофонический

● Provided/Имеется
— Not provided/Не имеется

* 240× in some areas/240× в некоторых областях
** 360× in some areas/360× в некоторых областях

Using this manual

Использование данного руководства

Note on TV colour systems

TV colour systems differ from country to country. To view your recordings on a TV, you need a PAL system-based TV.

Copyright precautions

Television programmes, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws.

Precautions on camcorder care

- **The LCD screen and the viewfinder are manufactured using high-precision technology.
However, there may be some tiny black points and/or bright points (red, blue, green or white) that constantly appear on the LCD screen and in the viewfinder.
These points occur normally in the manufacturing process and do not affect the recorded picture in any way.
Effective ratio of pixels and/or screen are 99.99% or more.**
- Do not let your camcorder get wet. Keep your camcorder away from rain and sea water. Letting your camcorder get wet may cause your camcorder to malfunction. Sometimes this malfunction cannot be repaired **[a]**.
- Never leave your camcorder exposed to temperatures above 60°C (140°F), such as in a car parked in the sun or under direct sunlight **[b]**.
- Do not place your camcorder so as to point the viewfinder or the LCD screen toward the sun. The inside of the viewfinder or the LCD screen may be damaged **[c]**.

Примечание по системам цветного телевидения

Системы цветного телевидения отличаются в зависимости от страны. Для просмотра Ваших записей на экране телевизора Вам необходимо использовать телевизор, основанный на системе PAL.

Предостережение об авторском праве

Телевизионные программы, кинофильмы, видеоленты и другие материалы могут быть защищены авторским правом.
Нелицензированная запись таких материалов может противоречить положениям закона об авторском праве.

Меры предосторожности при уходе за видеокамерой

- **Экран ЖКД и видоискатель изготовлены с помощью высокопрецизионной технологии. Однако на экране ЖКД и в видоискателе могут постоянно появляться черные или яркие цветные точки (красные, синие или зеленые). Появление этих точек вполне нормально для процесса съемки и никоим образом не влияет на записываемое изображение. Свыше 99,99% экрана предназначено для эффективного использования.**
- Не допускайте, чтобы видеокамера становилась влажной. Предохраняйте видеокамеру от дождя и морской воды. Если Вы намочите видеокамеру, то это может привести к неисправности аппарата, которая не всегда может быть устранена **[a]**.
- Никогда не оставляйте видеокамеру в месте с температурой выше 60°C (140°F), как, например, в автомобиле, оставленном на солнце или под прямым солнечным светом **[b]**.
- Не распологайте Вашу видеокамеру так, чтобы экран ЖКД был направлен на солнце. Внутреннее устройство видоискателя или экрана ЖКД может быть повреждено **[c]**.

[a]

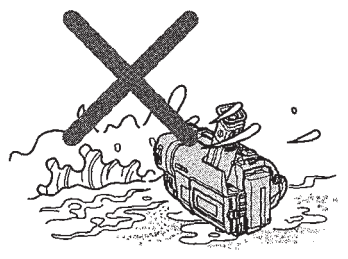

[b]

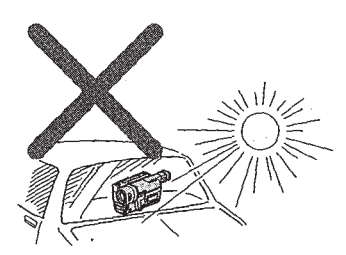

[c]

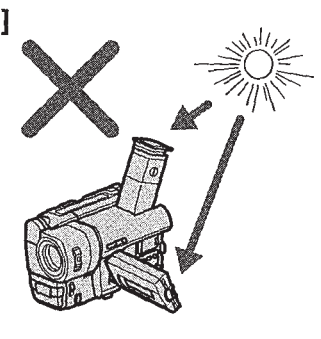

Step 1 Preparing the power supply

Пункт 1 Подготовка источника питания

Installing the battery pack

Install the battery pack to use your camcorder outdoors.

Slide the battery pack down until it clicks.

Установка батарейного блока

Установите батарейный блок для того, чтобы использовать Вашу видеокамеру вне помещения.

Передвиньте батарейный блок вниз так, чтобы он защелкнулся.

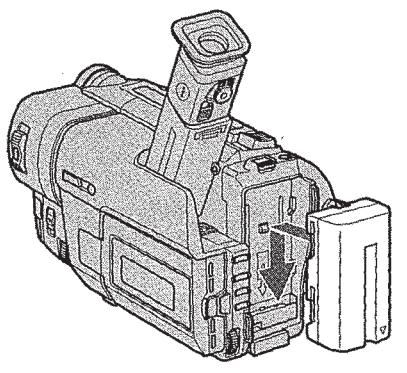

To remove the battery pack
Slide the battery pack out in the direction of the arrow while pressing ↓ BATT RELEASE down.

Для снятия батарейного блока
Передвиньте батарейный блок в направлении стрелки, нажав кнопку ↓ BATT RELEASE вниз.

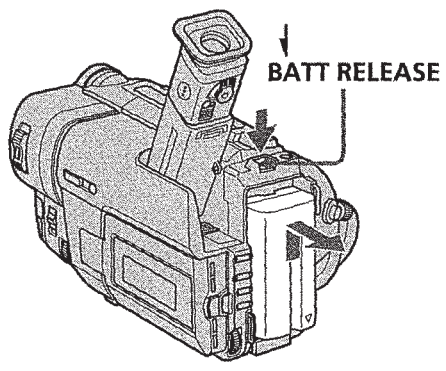

After installing the battery pack
Do not carry your camcorder by holding the battery pack. If you do so, the battery pack may slide off your camcorder unintentionally, damaging your camcorder.

После установки батарейного блока
Не переносите свою видеокамеру, взявшись за батарейный блок. Если Вы так сделаете, батарейный блок может непроизвольно соскользнуть с Вашей видеокамеры и повредить ее.

Step 1 Preparing the power supply

Пункт 1 Подготовка источника питания

Charging the battery pack

Use the battery pack after charging it for your camcorder.
Your camcorder operates only with the "InfoLITHIUM" battery pack (L series).

(1) Open the DC IN jack cover and connect the AC power adaptor supplied with your camcorder to the DC IN jack with the plug's ▲ mark facing up.
(2) Connect the mains lead to the AC power adaptor.
(3) Connect the mains lead to the mains.
(4) Set the POWER switch to OFF (CHARGE). Charging begins. The remaining battery time is indicated in minutes on the display window.

When the remaining battery indicator changes to ▬, **normal charge** is completed. To fully charge the battery **(full charge)**, leave the battery pack attached for about 1 hour after normal charge is completed until FULL appears in the display window. Fully charging the battery allows you to use the battery longer than usual.

Зарядка батарейного блока

Используйте батарейный блок для Вашей видеокамеры после его зарядки.
Ваша видеокамера работает только с батарейным блоком "InfoLITHIUM" (серии L).

(1) Откройте крышку гнезда DC IN и подсоедините сетевой адаптер переменного тока, прилагаемый к Вашей видеокамере, к гнезду DC IN, так чтобы знак штекера ▲ был направлен вверх.
(2) Подсоедините провод электропитания к сетевому адаптеру переменного тока.
(3) Подсоедините провод электропитания к сетевой розетке.
(4) Установите переключатель POWER в положение OFF (CHARGE). Начнется зарядка. В окошке дисплея будет отображаться время оставшегося заряда в минутах.

Если индикатор оставшегося заряда изменится на ▬, это значит, что **нормальная зарядка** завершена. Для полной зарядки батарейного блока **(полная зарядка)** оставьте батарейный блок прикрепленным на месте приблизительно на один час после завершения нормальной зарядки до тех пор, пока в окошко дисплея не появится индикация FULL. Полная зарядка батарейного блока позволяет Вам использовать батарейный блок дольше чем обычно.

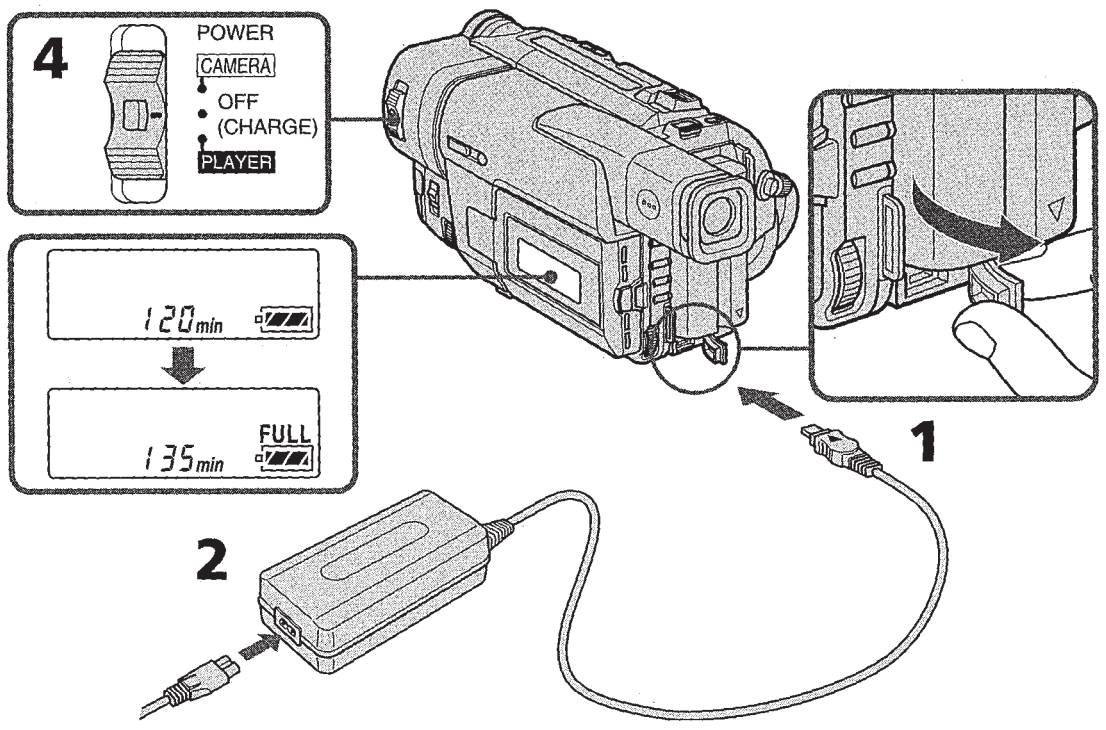

Step 1 Preparing the power supply

Notes

- Prevent metallic objects from coming into contact with the metal parts of the DC plug of the AC power adaptor. This may cause a short-circuit, damaging the AC power adaptor.
- Keep the battery pack dry.
- When the battery pack is not to be used for a long time, charge the battery pack once fully and then use it until it fully discharges again. Keep the battery pack in a cool place.

Remaining battery time indicator
The remaining battery time indicator in the display window roughly indicates the recording time with the viewfinder.

Battery pack
The battery pack is charged a little before it leaves the factory.

Until your camcorder calculates the actual remaining battery time
"– – – – min" appears in the display window.

While charging the battery pack, no indicator appears or the indicator flashes in the display window in the following cases
– The battery pack is not installed correctly.
– The AC power adaptor is disconnected.
– Something is wrong with the battery pack.

Пункт 1 Подготовка источника питания

Примечания

- Не допускайте контакта металлических предметов с металлическими частями штекера постоянного тока сетевого адаптера переменного тока. Это может привести к короткому замыканию и повреждению сетевого адаптера переменного тока.
- Сохраняйте батарейный блок сухим.
- Когда батарейный блок не будет использоваться длительный период времени, полностью зарядите батарейный блок один раз, а затем используйте его до тех пор, пока он снова полностью не разрядится. Храните батарейный блок в прохладном месте.

Индикатор времени оставшегося заряда батарейного блока
Индикатор времени оставшегося заряда батарейного блока в окошке дисплея приблизительно указывает время записи с помощью видоискателя.

Батарейный блок
Батарейный блок уже немного заряжен на предприятии-изготовителе.

До тех пор, пока Ваша видеокамера определит действительное время оставшегося заряда батарейного блока
В окошке дисплея будет отображаться индикация "– – – – min".

Во время зарядки батарейного блока никакой индикатор не появляется, или индикатор будет мигать в окошке дисплея в следующих случаях
– Батарейный блок установлен не правильно.
– Отсоединен сетевой адаптер переменного тока.
– Что-то не в порядке с батарейным блоком.

Step 1 Preparing the power supply

Пункт 1 Подготовка источника питания

Charging time/Время зарядки

Battery pack/ Батарейный блок	Full charge (Normal charge)/ Полная зарядка (нормальная зарядка)
NP-F330 (supplied)/прилагается	150 (90)
NP-F530/F550	210 (150)
NP-F730/F750	300 (240)
NP-F930/F950	390 (330)
NP-F960	420 (360)

Approximate number of minutes to charge an empty battery pack

Приблизительное время в минутах для зарядки полностью разряженного батарейного блока

Recording time/Время записи

CCD-TRV37E/TRV48E/TRV57E/TRV67E

Battery pack/ Батарейный блок	Recording with the viewfinder/ Запись с помощью видоискателя		Recording with the LCD screen/ Запись с помощью экрана ЖКД	
	Continuous*/ Непрерывкая*	Typical**/ Типичная**	Continuous*/ Непрерывная*	Typical**/ Типичная**
NP-F330 (supplied)/прилагается	140 (125)	75 (70)	120 (105)	65 (55)
NP-F530	245 (220)	135 (120)	205 (180)	110 (100)
NP-F550	280 (250)	155 (135)	240 (210)	130 (115)
NP-F730	500 (450)	275 (245)	410 (370)	225 (205)
NP-F750	580 (525)	320 (290)	490 (440)	270 (240)
NP-F930	780 (705)	420 (385)	650 (585)	355 (320)
NP-F950	900 (790)	495 (435)	750 (675)	410 (370)
NP-F960	1035 (930)	570 (510)	880 (790)	490 (440)

CCD-TRV87E

Battery pack/ Батарейный блок	Recording with the viewfinder/ Запись с помощью видоискателя		Recording with the LCD screen/ Запись с помощью экрана ЖКД	
	Continuous*/ Непрерывкая*	Typical**/ Типичная**	Continuous*/ Непрерывная*	Typical**/ Типичная**
NP-F330 (supplied)/прилагается	135 (120)	75 (65)	115 (100)	65 (55)
NP-F530	235 (210)	130 (115)	195 (170)	110 (95)
NP-F550	270 (240)	150 (130)	230 (200)	125 (110)
NP-F730	475 (425)	260 (235)	395 (355)	215 (195)
NP-F750	550 (500)	300 (275)	470 (425)	260 (235)
NP-F930	745 (670)	410 (370)	625 (560)	345 (310)
NP-F950	850 (760)	465 (420)	725 (650)	400 (355)
NP-F960	990 (890)	545 (490)	850 (765)	470 (420)

Step 1 Preparing the power supply

Approximate number of minutes when you use a fully charged battery

Numbers in parentheses "( )" indicate the time using a normally charged battery.

* Approximate continuous recording time at 25°C (77°F). The battery life will be shorter if you use your camcorder in a cold environment.

** Approximate number of minutes when recording while you repeat recording start/stop, zooming and turning the power on/off. The actual battery life may be shorter.

Пункт 1 Подготовка источника питания

Приблизительное время в минутах при использовании полностью заряженного батарейного блока

Числа в скобках "( )" указывают время при использовании батарейного блока с нормальной зарядкой.

* Приблизительное время непрерывной записи при температуре 25°C (77°F). При использовании видеокамеры в холодных условиях срок службы батарейного блока будет короче.

** Приблизительное время в минутах при записи с неоднократным пуском/остановкой записи, наездом видеокамеры и включением/выключением питания. Фактический срок службы заряда батарейного блока может быть короче.

Playing time/Время воспроизведения

CCD-TRV37E/TRV48E/TRV57E/TRV67E

Battery pack/ Батарейный блок	Playing time on LCD screen/ Время воспроизведения на экране ЖКД	Playing time with LCD closed/ Время воспроизведения при закрытом ЖКД
NP-F330 (supplied)/прилагается	125 (110)	145 (130)
NP-F530	215 (190)	260 (230)
NP-F550	250 (220)	295 (260)
NP-F730	430 (385)	525 (475)
NP-F750	510 (460)	610 (550)
NP-F930	680 (610)	825 (740)
NP-F950	780 (700)	930 (830)
NP-F960	915 (820)	1090 (980)

CCD-TRV87E

Battery pack/ Батарейный блок	Playing time on LCD screen/ Время воспроизведения на экране ЖКД	Playing time with LCD closed/ Время воспроизведения при закрытом ЖКД
NP-F330 (supplied)/прилагается	120 (105)	140 (125)
NP-F530	205 (180)	245 (220)
NP-F550	240 (210)	280 (250)
NP-F730	410 (370)	500 (450)
NP-F750	490 (440)	580 (525)
NP-F930	680 (585)	780 (705)
NP-F950	780 (675)	900 (790)
NP-F960	880 (790)	1035 (930)

Step 1 Preparing the power supply

Approximate number of minutes when you use a fully charged battery

Numbers in parentheses "( )" indicate the time using a normally charged battery. The battery life will be shorter if you use your camcorder in a cold environment.

After charging the battery pack

Disconnect the AC power adaptor from the DC IN jack on your camcorder.

Note on the remaining battery time indicator during recording
The indicator may not be correct, depending on the conditions in which you are recording. When you close the LCD panel and open it again, it takes about 1 minute for the correct remaining battery time to be displayed.

What is "InfoLITHIUM"?
The "InfoLITHIUM" is a lithium ion battery pack which can exchange data such as battery consumption with compatible electronic equipment. This unit is compatible with the "InfoLITHIUM" battery pack (L series). Your camcorder operates only with the "InfoLITHIUM" battery. "InfoLITHIUM" L series battery packs have the ⓘ InfoLITHIUM L mark. "InfoLITHIUM" is a trademark of Sony Corporation.

Пункт 1 Подготовка источника питания

Приблизительное время в минутах при использовании полностью заряженного батарейного блока

Числа в скобках "( )" указывают время при использовании батарейного блока с нормальной зарядкой. При использовании видеокамеры в холодных условиях срок службы батарейного блока будет короче.

После зарядки батарейного блока

Отсоедините сетевой адаптер переменного тока от гнезда DC IN на Вашей видеокамере.

Примечания по индикатору времени оставшегося заряда батарейного блока во время записи
Индикатор может быть неправильным в зависимости от условий, в которых выполняется запись. Если Вы закроете панель ЖКД и откроете ее снова, то пройдет около 1 минуты, прежде чем на дисплее появится правильное время оставшегося заряда батарейного блока.

Что такое "InfoLITHIUM"?
"InfolLITHIUM" является литиево-ионным батарейным блоком, который может обмениваться данными, как например потребление батарейного заряда, с совместимой электронной аппаратурой. Это устройство совместимо с батарейным блоком "InfoLITHIUM" (серии L). Ваша видеокамера работает только с батарейным блоком "InfoLITHIUM". На батарейных блоках "InfoLITHIUM" серии L имеется знак ⓘ InfoLITHIUM L.
"InfoLITHIUM" является торговой маркой корпорации Sony Corporation.

Step 1 Preparing the power supply

Connecting to the mains

When you use your camcorder for a long time, we recommend that you power it from the mains using the AC power adaptor.

(1) Open the DC IN jack cover, and connect the AC power adaptor to the DC IN jack on your camcorder with the plug's ▲ mark facing up.
(2) Connect the mains lead to the AC power adaptor.
(3) Connect the mains lead to the mains.

Пункт 1 Подготовка источника питания

Подсоединение к сетевой розетке

Если Вы собираетесь использовать видеокамеру длительное время, рекомендуется использовать питание от электрической сети с помощью сетевого адаптера переменного тока.

(1) Откройте крышку гнезда DC IN и подсоедините сетевой адаптер переменного тока к гнезду DC IN на Вашей видеокамеру, так чтобы знак ▲ на штекере был обращен вверх.
(2) Подсоедините провод электропитания к сетевому адаптеру переменного тока.
(3) Подсоедините провод электропитания к сетевой розетке.

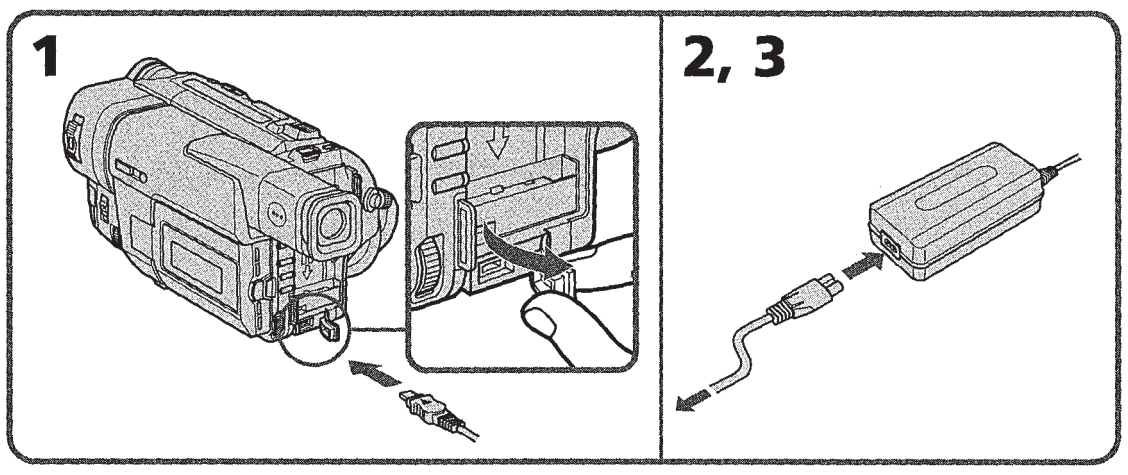

Step 1 Preparing the power supply

PRECAUTION
The set is not disconnected from the AC power source (mains) as long as it is connected to the mains, even if the set itself has been turned off.

Notes

- The AC power adaptor can supply power even if the battery pack is attached to your camcorder.
- The DC IN jack has "source priority". This means that the battery pack cannot supply any power if the mains lead is connected to the DC IN jack, even when the mains lead is not plugged into the mains.

Using a car battery
Use Sony DC Adaptor/Charger (not supplied).

Пункт 1 Подготовка источника питания

ПРЕДОСТЕРЕЖЕНИЕ
Аппарат не отключается от источника питания перем. тока (электрической сети) до тех пор, пока он подключен к электрической сети, даже если сам аппарат выключен.

Примечания

- Питание от сетевого адаптера переменного тока может подаваться даже в случае, если батарейный блок прикреплен к Вашей видеокамере.
- Гнездо DC IN имеет "приоритет источника". Это значит, что питание от батарейного блока не может подаваться, если провод электропитания подсоединен к гнезду DC IN, даже если провод электропитания и не подсоединен к сетевой розетке.

Использование автомобильного аккумулятора
Используйте адаптер/зарядное устройство постоянного тока Sony (не прилагается).

Step 2 Inserting a cassette

When you want to record in the Hi8 system, use Hi8 video cassette **Hi8**. (CCD-TRV67E/TRV87E only)

(1) Prepare the power supply (p. 13).
(2) Slide EJECT in the direction of the arrow while pressing the small blue button. The cassette compartment automatically lifts up and opens.
(3) Insert a cassette with its window facing out and the tab on the cassette up.
(4) Close the cassette compartment by pressing the PUSH mark on the cassette compartment. The cassette compartment automatically goes down.

Пункт 2 Установка кассеты

Если Вы хотите выполнять запись в системе Hi8, используйте видеокассету Hi8 **Hi8** (только модель CCD-TRV67E/TRV87E).

(1) Подготовьте источник питания (стр. 13).
(2) Нажав маленькую синюю кнопку, передвиньте переключатель EJECT в направлении стрелки. Отсек для кассеты автоматически поднимется вверх и откроется.
(3) Вставьте кассету, так чтобы окошко было обращено наружу, а лепесток на кассете вверх.
(4) Закройте отсек для кассеты, нажав метку PUSH на отсеке. Отсек для кассеты автоматически опустится вниз.

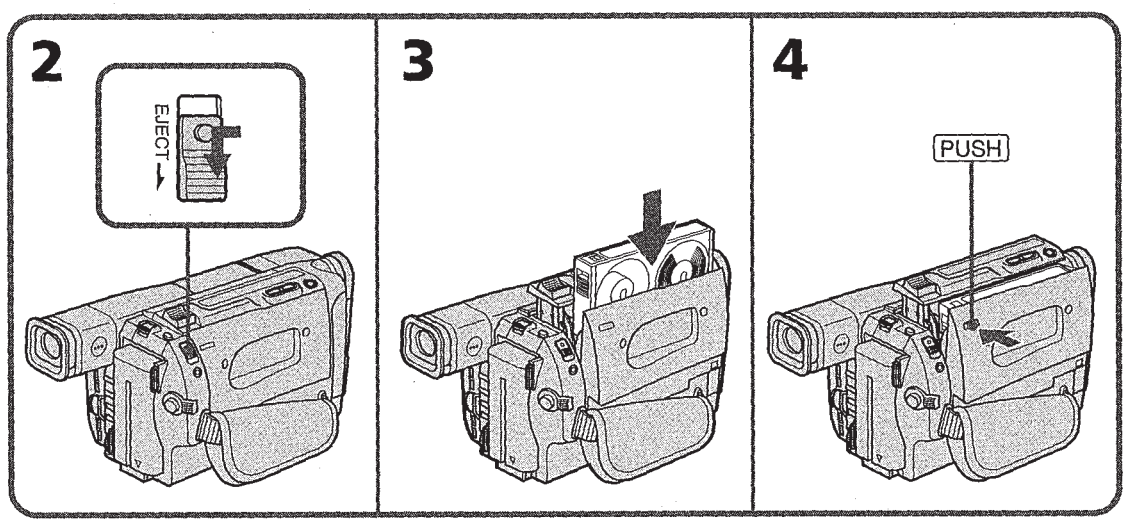

To eject a cassette
Slide EJECT in the direction of the arrow while pressing the small blue button.

Note
Do not press the cassette compartment down. Doing so may cause malfunction.

To prevent accidental erasure
Slide the write-protect tab on the cassette to expose the red mark.

Для извлечения кассеты
Нажав маленькую синюю кнопку, передвиньте переключатель EJECT в направлении стрелки.

Примечание
Не нажимайте вниз отсек для кассеты. Это может привести к неисправности.

Для предотвращения случайного стирания
Передвиньте лепесток защиты записи на кассете, так чтобы появилась красная метка.



— Recording – Basics —

Recording a picture

Your camcorder automatically focuses for you.

(1) Install the power source and insert a cassette. See "Step 1" and "Step 2" for more information (p. 13 to 21).
(2) Set the POWER switch to CAMERA while pressing the small green button. The lens cover opens.
(3) Open the LCD panel while pressing OPEN. The viewfinder automatically turns off.
(4) Turn STANDBY to STANDBY.
(5) Press START/STOP. Your camcorder starts recording. The "REC" indicator appears. The camera recording lamp located on the front of your camcorder lights up. To stop recording, press START/STOP again.
The recording lamp lights up in the viewfinder when you record with the viewfinder.

— Запись – Основные положения —

Запись изображения

Ваша видеокамера автоматически выполняет фокусировку за Вас.

(1) Установите источник питания и вставьте кассету. Подробные сведения приведены в "Пункте 1" и "Пункте 2" (стр. 13 – 21).
(2) Нажав маленькую зеленую кнопку, установите переключатель POWER в положение CAMERA. Откроется крышка объектива.
(3) Нажав кнопку OPEN, откройте панель ЖКД. Видоискатель выключится автоматически.
(4) Поверните рычаг STANDBY в положение STANDBY.
(5) Нажмите кнопку START/STOP. Ваша видеокамера начнет запись. Появится индикатор "REC". Высветится также лампочка записи на передней панели видеокамеры. Для остановки записи нажмите кнопку START/STOP еще раз. При записи с помощью видоискателя в нем будет высвечиваться лампочка записи.

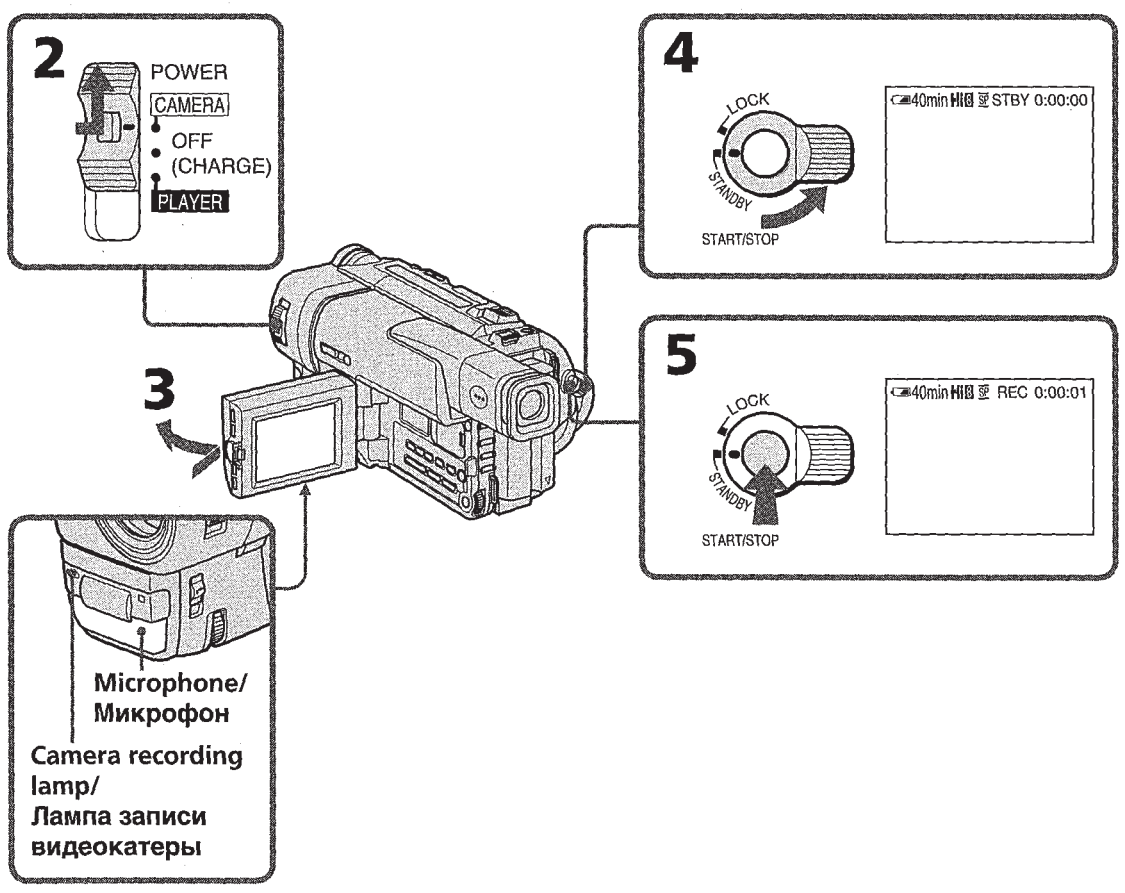

Note
Fasten the grip strap firmly. Do not touch the built-in microphone during recording.

To enable smooth transition
You can make the transition between the last scene you recorded and the next scene smooth as long as you do not eject the cassette. When you exchange the battery pack in the recording mode, set STANDBY to LOCK.

If you leave your camcorder in the standby mode for 5 minutes while the cassette is inserted
Your camcorder automatically turns off. This is to save battery power and to prevent battery and tape wear. To resume the standby mode, turn STANDBY down and up again. To start recording, press START/STOP.

To set the counter to 0:00:00
Press COUNTER RESET (p. 112).

After recording

(1) Turn STANDBY down to LOCK.
(2) Close the LCD panel.
(3) Eject the cassette.
(4) Set the POWER switch to OFF (CHARGE).

After use your camcorder (CCD-TRV57E/TRV67E/TRV87E only)
Remove the battery pack from your camcorder to avoid turning on the built-in light.

Примечание
Плотно пристегните ремень для захвата видеокамеры. Не прикасайтесь к встроенному микрофону во время записи.

Для обеспечения плавного перехода
Вы можете выполнять плавный переход между последним записанным эпизодом и следующим эпизодом до тех пор, пока не извлечете кассету. При замене батарейного блока в режиме записи установите рычаг STANDBY в положение LOCK.

Если Вы оставите Вашу видеокамеру в режиме готовности на 5 минут при вставленной кассете
Видеокамера выключится автоматически. Это предотвращает расход заряда батарейного блока и износ ленты. Для возобновления режима готовности поверните рычаг STANDBY вниз и снова вверх. Для начала записи нажмите кнопку START/STOP.

Для установки счетчика в положение 0:00:00
Нажмите кнопку COUNTER RESET (стр. 112).

После записи

(1) Поверните рычаг STANDBY в положение LOCK.
(2) Закройте панель ЖКД.
(3) Извлеките кассету.
(4) Установите переключатель POWER в положение OFF (CHARGE).

После пользования видеокамерой (только модель CCD-TRV57E/TRV67E/TRV87E)
Выньте батарейный блок из Вашей видеокамеры во избежание включения встроенной подсветки.

Adjusting the LCD screen

To adjust the brightness of the LCD screen, press either of the two buttons on LCD BRIGHT.
The LCD panel moves about 90 degrees to the viewfinder side and about 180 degrees to the lens side.
If you turn the LCD panel over so that it faces the other way, the ☺ indicator appears in the viewfinder and on the LCD screen (**Mirror mode**).

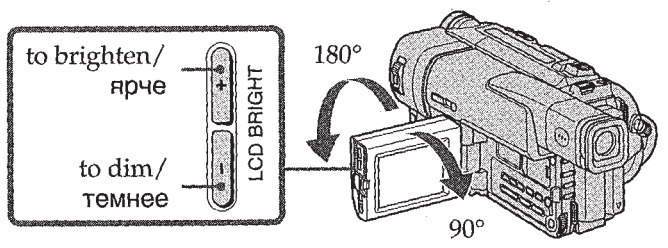

When closing the LCD panel, set it vertically until it clicks, and swing it into the camcorder body.

Note
When using the LCD screen except in the mirror mode, the viewfinder automatically turns off.

When you use the LCD screen outdoors in direct sunlight
The LCD screen may be difficult to see. If this happens, we recommend that you use the viewfinder.

Picture in the mirror mode
The picture on the LCD is a mirror-image. However, the picture will be normal when recorded.

During recording in the mirror mode
DATE and TIME on your camcorder do not work.

Indicators in the mirror mode
- The STBY indicator appears as ▮▮● and REC as ●. Some of the other indicators appear mirror-reversed and others are not displayed.
- The date appears mirror-reversed when the auto date function is working. However, the date will be normal when recorded.

Регулировка экрана ЖКД

Для регулировки яркости экрана ЖКД нажмите одну их кнопок на LCD BRIGHT.
Панель ЖКД может передвигаться примерно на 90 градусов в сторону видоискателя и примерно на 180 градусов в сторону объектива.
Если Вы перевернете панель ЖКД так, что она будет направлена в другую сторону, индикатор ☺ появится в видоискателе и на экране ЖКД (**Зеркальный режим**).

При закрывании панели ЖКД установите ее вертикально, пока не раздастся щелчок, а затем присоедините ее к корпусу видеокамеры.

Примечание
При использовании экрана ЖКД видоискатель автоматически выключается, кроме зеркального режима.

Если Вы используете экран ЖКД вне помещения под прямым солнечным светом
Возможно будет трудно разглядеть экран ЖКД. В этом случае рекомендуется использовать видоискатель.

Изображение в зеркальном режиме
Изображение на экране ЖКД будет отображаться зеркально. Однако запись изображения будет нормальной.

Во время записи в зеркальном режиме
DATE и TIME на Вашей видеокамере не будут работать.

Индикаторы в зеркальном режиме
- Индикатор STBY появится в виде ▮▮●, а индикатор REC в виде ●. Некоторые другие индикаторы появятся в зеркально отображенном виде, а некоторые из них не будут отображаться совсем.
- В случае, если работает функция автоматической даты, то дата будет отображаться зеркально, однако на записи дата будет в нормальном виде.

Using the zoom feature

Move the power zoom lever a little for a slower zoom. Move it further for a faster zoom.
Using the zoom function sparingly results in better-looking recordings.
"T" side: for telephoto (subject appears closer)
"W" side: for wide-angle (subject appears farther away)

Использование функции наезда видеокамеры

Передвиньте рычаг приводного вариообъектива слегка для относительно медленного наезда видеокамеры. Передвиньте его сильнее для ускоренного наезда видеокамеры.
Использование функции наезда видеокамеры в небольшом количестве обеспечивает наилучшие результаты.
Сторона "T" : для телефото (объект приближается)
Сторона "W" : для широкоугольного вида (объект удаляется)

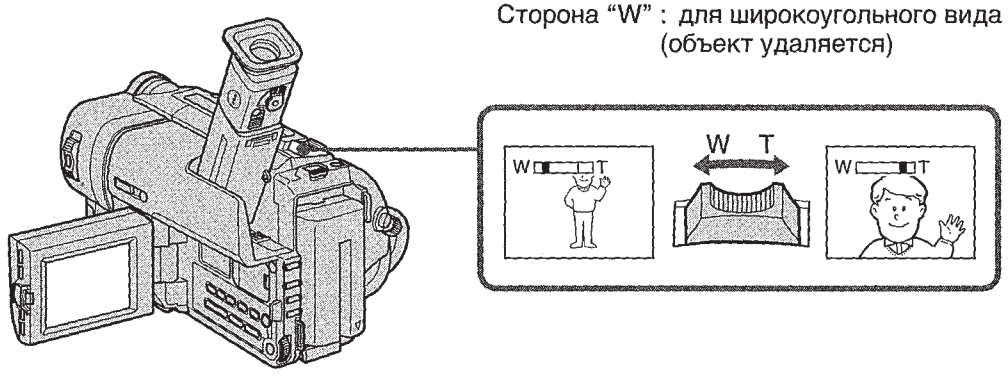

Zoom greater than 20× is performed digitally.
To activate digital zoom, select the digital zoom power in D ZOOM in the menu settings. (p. 70)
The picture quality deteriorates as the picture is processed digitally.

Наезд видеокамеры более 20x выполненяется цифровым методом. Для активизация цифрового вариообъектива, выберите увеличение цифрового вариообъектива в команде D ZOOM в установках меню. (стр. 70)
Качество изображения ухудшается при цифровой обработке изображения.



The right side of the bar shows the digital zooming zone.
The digital zooming zone appears when you select the digital zoom power in D ZOOM in the menu settings./
Правая сторона полосы на экране показывает зону цифровой трансфокации. Зона цифровой трансфокации появляется, когда Вы выбираете увеличение цифрового вариообъетивка в команде D ZOOM в установках меню.

When you shoot close to a subject
If you cannot get a sharp focus, move the power zoom lever to the "W" side until the focus is sharp. You can shoot a subject that is at least about 80 cm (about 2 feet 5/8 inch) away from the lens surface in the telephoto position, or about 1 cm (about 1/2 inch) away in the wide-angle position.

Notes on digital zoom
- Digital zoom starts to function when zoom exceeds 20×.
- The picture quality deteriorates as you go toward the "T" side.

При съемке объекта с близкого положения
Если Вы не можете получить четкой фокусировки, передвиньте рычаг приводного вариообъектива в сторону "W" до получения четкой фокусировки. Вы можете выполнять съемку объекта в положении телефото, который отстоит по крайней мере на расстоянии 80 см от поверхности объектива или же около 1 см в положении широкоугольного вида.

Примечания к наезду видеокамеры цифровым методом
- Цифровой вариообъектив начинает срабатывать в случае, если наезд видеокамеры превышает 20x.
- Качество изображения ухудшается по мере приближения к стороне "T".

Recording a picture

Запись изображения

To record pictures with the viewfinder – adjusting the viewfinder

If you record pictures with the LCD panel closed, check the picture with the viewfinder. Adjust the viewfinder lens to your eyesight so that the indicators in the viewfinder come into sharp focus.

Lift up the viewfinder and move the viewfinder lens adjustment lever.

Для записи изображений с помощью видоискателя – регулировка видоискателя

Если Вы будете записывать изображения при закрытой панели ЖКД, проверьте изображение с помощью видоискателя. Отрегулируйте объектив видоискателя в соответствии со своим зрением, так чтобы индикаторы в видоискателе были четко сфокусированы.

Поднимите видоискатель и подвигайте рычаг регулировки объектива видоискателя.

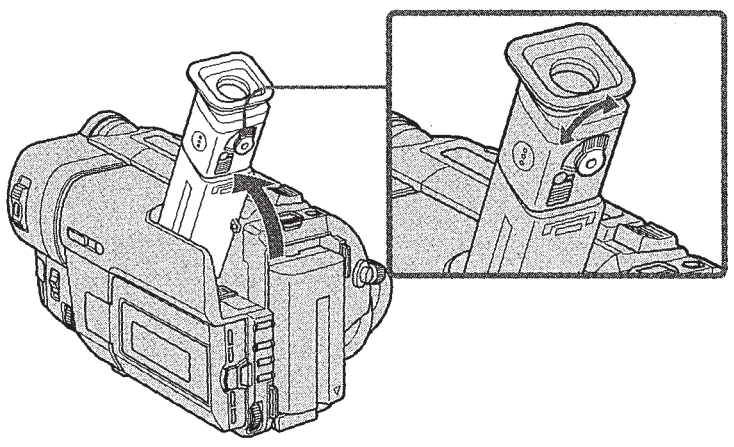

Recording a picture

Запись изображения

Indicators displayed in the recording mode

The indicators are not recorded on tape.

Индикаторы, отображаемые в режиме записи

Индикаторы не записываются на ленту.

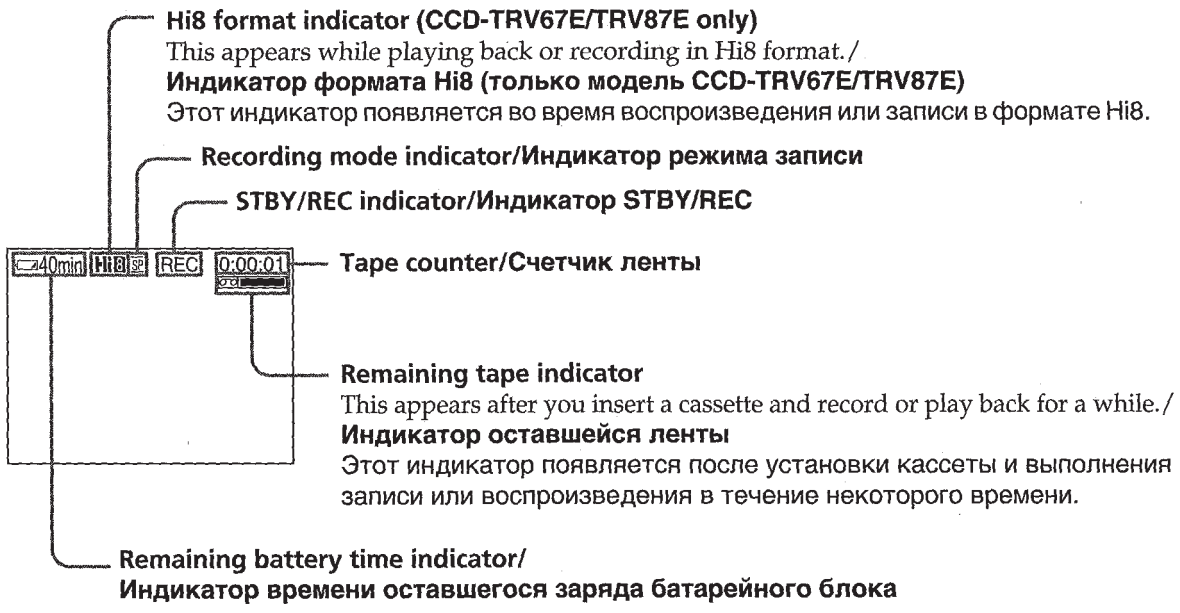

Hi8 format indicator (CCD-TRV67E/TRV87E only)
This appears while playing back or recording in Hi8 format./
Индикатор формата Hi8 (только модель CCD-TRV67E/TRV87E)
Этот индикатор появляется во время воспроизведения или записи в формате Hi8.

Recording mode indicator/Индикатор режима записи

STBY/REC indicator/Индикатор STBY/REC

Tape counter/Счетчик ленты

Remaining tape indicator
This appears after you insert a cassette and record or play back for a while./
Индикатор оставшейся ленты
Этот индикатор появляется после установки кассеты и выполнения записи или воспроизведения в течение некоторого времени.

Remaining battery time indicator/
Индикатор времени оставшегося заряда батарейного блока

Shooting backlit subjects (BACK LIGHT)

When you shoot a subject with the light source behind the subject or a subject with a light background, use the backlight function.

Press BACK LIGHT in the recording or standby mode.
The ▧ indicator appears in the viewfinder or on the LCD screen.
To cancel, press BACK LIGHT again.

Съемка объектов с задней подсветкой (BACK LIGHT)

Если Вы выполняете съемку объекта с источником света позади него или же объекта со светлым фоном, используйте функцию задней подсветки.

Нажмите кнопку BACK LIGHT в режиме записи или ожидания.
В видоискателе или на экране ЖКД появится индикатор ▧.
Для отмены нажмите кнопку BACK LIGHT еще раз.

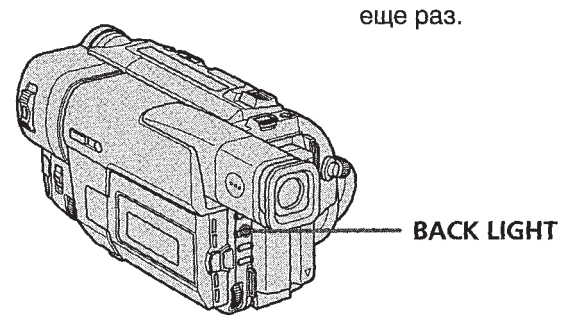

If you press EXPOSURE when shooting backlit subjects
The backlight function will be canceled.

Если вы нажмете кнопку EXPOSURE при выполнении съемки объектов с задней подсветкой
Функция задней подсветки будет отменена.

Recording a picture

Запись изображения

Shooting in the dark (NightShot)

The NightShot function enables you to shoot a subject in a dark place. For example, you can satisfactorily record the environment of nocturnal animals for observation when you use this function.

While your camcorder is in the standby mode, slide NIGHTSHOT to ON.
◙ and "NIGHTSHOT" indicators flash on the LCD screen or in the viewfinder. To cancel the NightShot function, slide NIGHTSHOT to OFF.

Съемка в темноте (Ночная съемка)

Функция ночной съемки позволяет Вам выполнять съемку объектов в темных местах. Например, Вы сможете с успехом выполнять съемку ночных животных для наблюдения при использовании данной функции.

В то время, когда видеокамера находится в режиме ожидания, передвиньте переключатель NIGHTSHOT в положение ON. Индикаторы ◙ и "NIGHTSHOT" начнут мигать на экране ЖКД или в видоискателе. Для отмены функции ночной съемки передвиньте переключатель NIGHTSHOT в положении OFF.

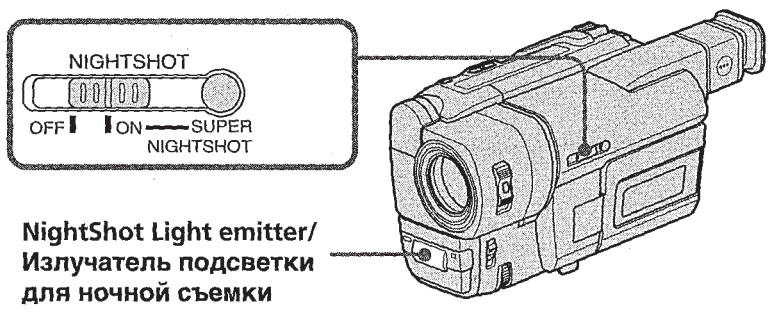

Using the Super NightShot mode – CCD-TRV87E only

The Super NightShot mode makes subjects more than four times brighter than those recorded in the NightShot mode.

(1) Slide NIGHTSHOT to ON in the standby mode. ◙ indicator appears on the LCD screen or in the viewfinder.
(2) Press SUPER NIGHTSHOT. S◙ and "SUPER NIGHTSHOT" indicators flash on the LCD screen or in the viewfinder.
To cancel the Super NightShot mode, press SUPER NIGHTSHOT again.

Using the NightShot Light

The picture will be clearer with the NightShot Light on. To enable NightShot Light, set N.S.LIGHT to ON in the menu settings (p. 70).

Использование режима ночной суперсъемки — Только модель CCD-TRV87E

Режим ночной суперсъемки делает объекты более, чем в четыре раза ярче, чем при записи их в режиме ночной съемки.

(1) Передвиньте NIGHTSHOT в положение ON в режиме ожидания. Индикатор ◙ появится на экране ЖКД или в видоискателе.
(2) Нажмите SUPER NIGHTSHOT. Индикаторы S◙ и "SUPER NIGHTSHOT" будут мигать на экране ЖКД или в видоискателе.
Для отмены режима ночной суперсъемки снова нажмите SUPER NIGHTSHOT.

Использование прдсветки для ночной съемки

Изображение станет ярче, если включить функцию ночной подсветки. Для включения функции ночной подсветки установите команду N.S.LIGHT в положение ON в установках меню (стр. 70).

Recording a picture

Запись изображения

Notes
- Do not use the NightShot function in bright places (ex. outdoors in the daytime). This may cause your camcorder to malfunction.
- When you keep NIGHTSHOT set to ON in normal recording, the picture may be recorded in incorrect or unnatural colours.
- If focusing is difficult with the autofocus mode when using the NightShot function, focus manually.

While using the NightShot function, you can not use the following functions:
- Exposure
- PROGRAM AE
- Fader* (CCD-TRV87E only)
- Digital effect* (CCD-TRV87E only)

* You cannot use these functions only in the Super NightShot mode.

Shutter speed in the Super NightShot mode (CCD-TRV87E only)
The shutter speed will be automatically changed depending on the brightness of the scene.

The SUPER NIGHTSHOT button does not work (CCD-TRV87E only):
- while the fader function is set or in use
- while the digital effect fnuction is in use
- when NIGHTSHOT is set to OFF

NightShot Light
NightShot Light rays are infrared and so are invisible. The maximum shooting distance using the NightShot Light is about 3 m (10 feet).
The shooting distance will be twice or more in the Super NightShot mode (CCD-TRV87E only).

Примечания
- Не используйте функцию ночной съемки в ярких местах (например, на улице в дневное время). Это может привести к неисправности Вашей видеокамеры.
- Если Вы удерживаете NIGHTSHOT в положении ON во время нормальной записи, изображение может быть записано в неправильных или ненатуральных цветах.
- Если фокусировка затруднена в автоматическом режиме при использовании функции ночной съемки, выполните фокусировку вручную.

При использовании функции ночной съемки Вы не можете использовать следующие функции:
- Экспозиция
- PROGRAM AE
- Фейдер* (только модель CCD-TRV87E)
- Цифровой эффект* (только модель CCD-TRV87E)

* Вы не можете использовать эти функции только в режиме ночной суперсъемки.

Скорость затвора в режиме ночной суперсъемки (только модель CCD-TRV87E)
Скорость затвора будет автоматически изменяться в зависимости от яркости сцены.

Кнопка SUPER NIGHTSHOT не работает (только модель CCD-TRV87E):
- если установлена или используется функция фейдера
- если используется функция цифрового эффекта
- если переключатель NIGHTSHOT установлен в положение OFF

Подсветка для ночной съемки
Лучи подсветки для ночной съемки являются инфракрасными и поэтому невидимыми. Максимальное расстояние для съемки при использовании подсветки для ночной съемки равно примерно 3 м.
Расстояние для съемки будет в два или более раз больше в режиме ночной суперсъемки (только модель CCD-TRV87E).

Recording a picture

Superimposing the date and time on pictures

You can record the date or time displayed in the viewfinder or on the LCD screen superimposed on the picture.
Carry out the following operations in the standby or recording mode.

Press DATE to record the date.
Press TIME to record the time.
Press DATE (or TIME), then press TIME (or DATE) to record the date and time.

Press DATE and/or TIME again. The date and/or time indicator disappears.

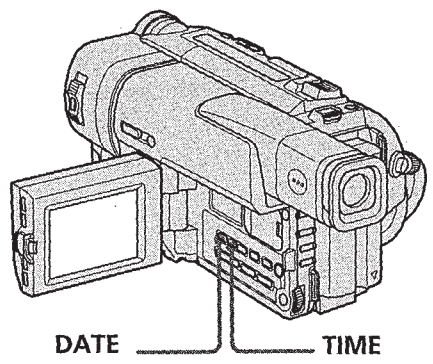

The default clock setting is set to London time for United Kingdom and to Paris time for the other European countries. You can reset the clock in the menu settings (p. 70).

Note
The date and time indicators recorded manually cannot be deleted.

If you do not record the date and time in the picture
Record the date and time in the black screen as the background for about 10 seconds, then erase the date and time indicators before starting actual recording.

Запись изображения

Наложение даты и времени на изображения

Вы можете записывать дату или время, отображаемые в видоискателе или на экране ЖКД, которые будут наложены на изображение.
Выполните следующие операции в режиме ожидания или записи.

Нажмите кнопку DATE для записи даты.
Нажмите кнопку TIME для записи даты.
Нажмите кнопку DATE (или TIME), затем нажмите кнопку TIME (или DATE) для записи даты и времени.

Нажмите кнопку DATE и/или TIME еще раз. Индикатор даты и/или времени исчезнет.

Часы установлены по умолчанию на время Лондона для Соединенного Королевства и на время Парижа для других европейских стран. Вы можете переустановить часы в установках меню (стр. 70).

Примечание
Индикаторы даты и времени, записанные вручную, не могут быть удалены.

Если Вы не записываете дату и время на изображении
Запишите дату и время на фоне черного экрана в течение 10 секунд, затем сотрите индикаторы даты и времени перед тем, как начать действительную запись.

Checking the recording
– END SEARCH / EDITSEARCH / Rec Review

You can use these buttons to check the recorded picture or shoot so that the transition between the last recorded scene and the next scene you record is smooth.

Проверка записи
– END SEARCH / EDITSEARCH / Просмотр записи

Вы можете использовать эти кнопки для проверки записанного изображения или съемки, так чтобы переход между последним записанным эпизодом и следующим записываемым эпизодом был плавным.

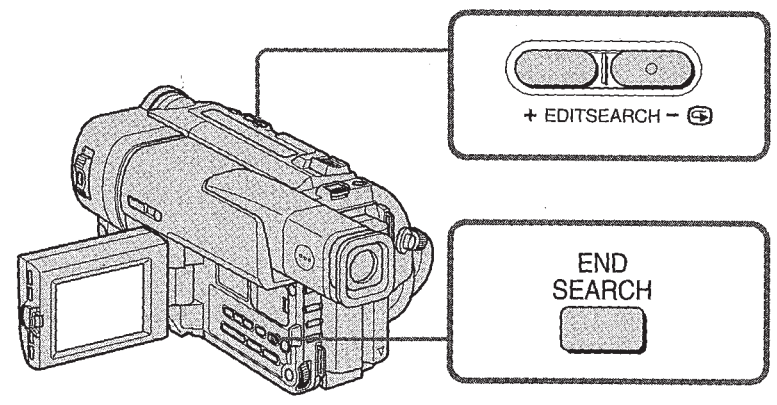

END SEARCH

You can go to the end of the recorded section after you record.

Press END SEARCH in the standby mode.
The last 5 seconds of the recorded section are played back and playback stops. You can monitor the sound from the speaker, headphones (CCD-TRV87E only) or an earphone (CCD-TRV37E/TRV48E/TRV57E/TRV67E only).

Note
If you start recording after using the end search function, occasionally, the transition between the last scene you recorded and the next scene may not be smooth.

Once you eject the cassette after you have recorded on the tape
The end search function does not work.

END SEARCH

Вы можете дойти до конца записанной части ленты после выполнения записи.

Нажмите END SEARCH в режиме ожидания.
Последние 5 ссекунд записанной части будут воспроизведены и воспроизведение остановится. Вы можете контролировать звук через акустическую систему, головные телефоны (только модель CCD-TRV87E) или наушники (только модель CCD-TRV37E/TRV48E/TRV57E/TRV67E).

Примечание
Если Вы случайно начнете запись после использования функции поиска конца записи, переход между последней записанной сценой и следующей записываемой сценой может не быть плавным.

Если Вы вынули кассету после записи на ленту
Функция поиска конца записи работать не будет.

Checking the recording
– END SEARCH / EDITSEARCH / Rec Review

EDITSEARCH

You can search for the next recording start point.

Hold down the +/– (⊜) side of EDITSEARCH in the standby mode. The recorded section is played back.
  + : to go forward
  – : to go backward
Release EDITSEARCH to stop playback. If you press START/STOP, re-recording begins from the point you released EDITSEARCH. You cannot monitor the sound.

Rec Review

You can check the last recorded section.

Press the – (⊜) side of EDITSEARCH momentarily in the standby mode.
The last few seconds of the recorded section are played back. You can monitor the sound from the speaker, headphones (CCD-TRV87E only) or an earphone (CCD-TRV37E/TRV48E/TRV57E/TRV67E only).

Проверка записи
– END SEARCH / EDITSEARCH / Просмотр записи

EDITSEARCH

Вы можете выполнять поиск места начала следующей записи.

Держите нажатой сторону +/– (⊜) кнопки EDITSEARCH в режиме ожидания. Будет воспроизведена записанная часть.
  + : для продвижения вперед
  – : для продвижения назад
Отпустите кнопку EDITSEARCH для остановки воспроизведения. Если Вы нажмете кнопку START/STOP, начнется перезапись с того места, где Вы отпустили кнопку EDITSEARCH. Вы не можете контролировать звук.

Просмотр записи

Вы можете проверить последнюю записанную часть.

Нажмите кратковременно сторону – (⊜) кнопки EDITSEARCH в режиме ожидания. Последние несколько секунд записанной части будут воспроизведены и воспроизведение остановится. Вы можете контролировать звук через акустическую систему, головные телефоны (только модель CCD-TRV87E) или наушники (только модель CCD-TRV37E/TRV48E/TRV57E/TRV67E).

— Playback – Basics —

Playing back a tape

You can monitor the playback picture on the LCD screen or in the viewfineder. If you close the LCD panel, you can monitor the playback picture in the viewfineder. You can control playback using the Remote Commander supplied with your camcorder. (CCD-TRV48E/TRV57E/TRV67E/TRV87E only)

(1) Install the power source and insert the recorded tape.
(2) Set the POWER switch to PLAYER while pressing the small green button.
(3) Open the LCD panel while pressing OPEN.
(4) Press ◀◀ to rewind the tape.
(5) Press ▶ to start playback.
(6) To adjust the volume, press either of the two buttons on VOLUME. The speaker on your camcorder is silent when the LCD panel is closed.

— Воспроизведение – Основные положения —

Воспроизведение ленты

Вы можете контролировать воспроизводимое изображение на экране ЖКД или в видоискателе. Если Вы закроете панель ЖКД Вы можете контролировать воспроизводимое изображение в видоискателе. Вы можете контролировать воспроизведение с использованием пульта дистанционного управления, прилагаемого к Вашей видеокамере (только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E).

(1) Установите источник питания и вставьте записанную ленту.
(2) Нажав маленькую зеленую кнопку, установите переключатель POWER в положение PLAYER.
(3) Нажав кнопку OPEN, откройте панель ЖКД.
(4) Нажмите кнопку ◀◀ для ускоренной перемотки ленты назад.
(5) Нажмите кнопку ▶ для включения воспроизведения.
(6) Для регулировки громкости нажимайте одну из двух кнопок VOLUME. Если панель ЖКД на Вашей видеокамере закрыта, динамик не будет работать.

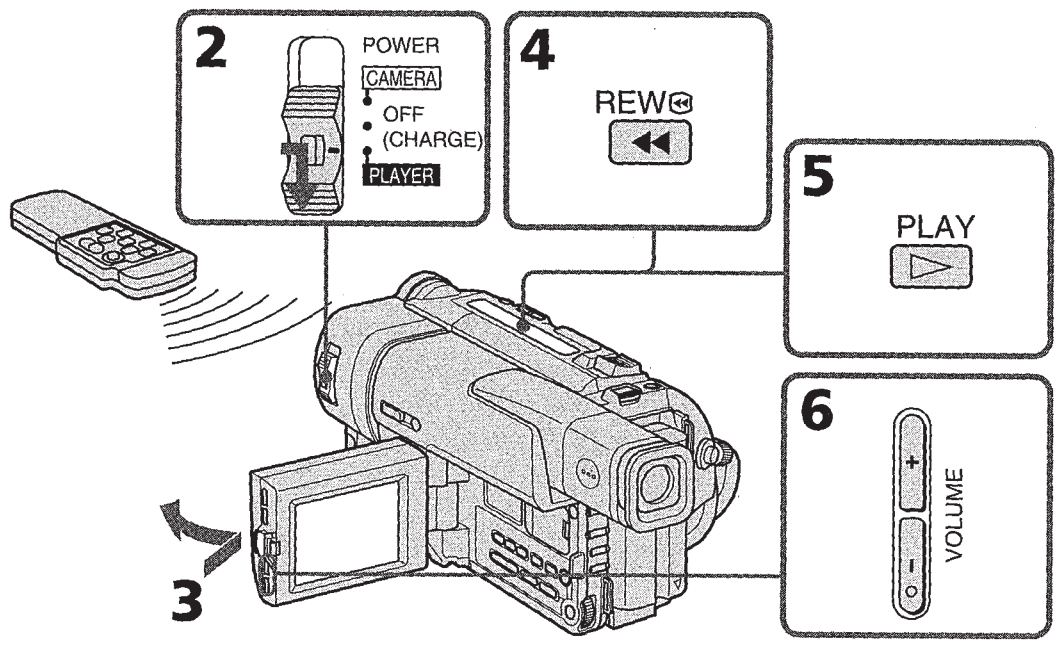

To stop playback
Press ■.

Для остановки воспроизведения
Нажмите кнопку ■.

When monitoring on the LCD screen
You can turn the LCD panel over and move it back to the camcorder body with the LCD screen facing out **[a]**. You can adjust the angle of the LCD panel by lifting the LCD panel up by 15 degrees **[b]**.

Во время контроля на экране ЖКД
Вы можете повернуть панель управления и придвинуть ее обратно на место к корпусу видеокамеры, так что экран ЖКД будет обращен наружу **[a]**. Вы можете отрегулировать угол панели ЖКД, подняв панель ЖКД вверх на 15 градусов **[b]**.

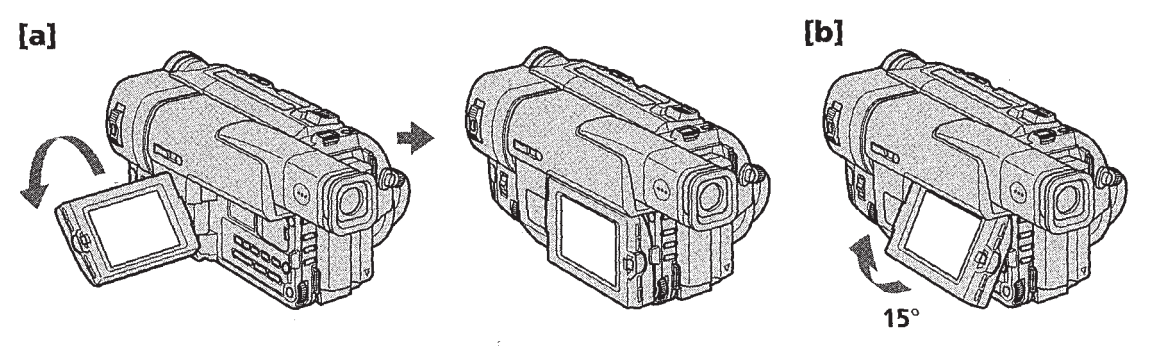

To control the display of the screen indicators

Press DISPLAY on your camcorder or the Remote Commander (CCD-TRV48E/TRV57E/TRV67E/TRV87E only) supplied with your camcorder.
The indicators appear on the LCD screen.
To make the indicators disappear, press DISPLAY again.

Для управления дисплеем экранных индикаторов

Нажмите кнопку DISPLAY на Вашей видеокамере или на пульте дистанционного управления (только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E)., который прилагается к Вашей видеокамере.
На экране ЖКД появятся индикаторы.
Для того, чтобы индикаторы исчезли, нажмите еще раз кнопку DISPLAY.

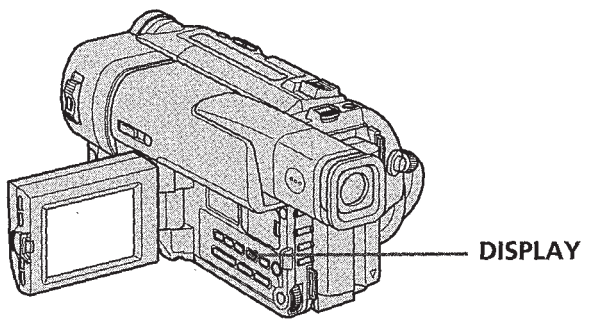

Various playback modes

To operate video control buttons, set the POWER switch to PLAYER.

To view a still picture (playback pause)

Press ❚❚ during playback. To resume playback, press ❚❚ or ►.

To advance the tape

Press ►► in the stop mode. To resume normal playback, press ►.

To rewind the tape

Press ◄◄ in the stop mode. To resume normal playback, press ►.

To locate a scene monitoring the picture (picture search)

Keep pressing ◄◄ or ►► during playback. To resume normal playback, release the button.

To monitor the high-speed picture while advancing or rewinding the tape (skip scan)

Keep pressing ◄◄ while rewinding or ►► while advancing the tape. To resume rewinding or advancing, release the button.

To view the picture at slow speed (slow playback)

– CCD-TRV48E/TRV57E/TRV67E/TRV87E only
Press ❚► on the Remote Commander during playback. To resume normal playback, press ►.

To search the last scene recorded (END SEARCH)

Press END SEARCH in the stop mode. The last 5 seconds of the recorded section plays back and stops.

Переменные режимы воспроизведения

Для управления кнопками видеоконтроля, установите переключатель POWER в положение PLAYER.

Для просмотра неподвижного изображения (пауза воспроизведения)

Нажмите во время воспроизведения кнопку ❚❚. Для возобновления обычного воспроизведения нажмите кнопку ❚❚ или кнопку ►.

Для ускоренной перемотки ленты вперед

Нажмите в режиме остановки кнопку ►►. Для возобновления обычного воспроизведения нажмите кнопку ►.

Для ускоренной перемотки ленты назад

Нажмите в режиме остановки кнопку ◄◄. Для возобновления обычного воспроизведения нажмите кнопку ►.

Для обнаружения эпизода при контроле изображения (поиск изображения)

Держите нажатой кнопку ◄◄ или ►► во время воспроизведения. Для возобновления обычного воспроизведения отпустите кнопку.

Для контроля изображения на высокой скорости во время ускоренной перемотки ленты вперед или назад (поиск методом прогона)

Держите нажатой кнопку ◄◄ во время ускоренной перемотки ленты назад или кнопку ►► во время ускоренной перемотки ленты вперед. Для возобновления обычной перемотки ленты вперед или назад отпустите кнопку.

Для просмотра изображения на медленной скорости (замедленное воспроизведение)

– только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E
Нажмите во время воспроизведения кнопку ❚► на пульте дистанционного управления. Для возобновления обычного воспроизведения нажмите кнопку ►.

Для поиска последнего записанного эпизода (END SEARCH)

Нажмите в режиме остановки кнопку END SEARCH. Будут воспроизведены последние 5 секунд записанной части, и воспроизведение остановится.

In the various playback modes
Sound is muted.

When the playback pause mode lasts for 5 minutes
Your camcorder automatically enters the stop mode. To resume playback, press ►.

If slow playback lasts for about 1 minute (CCD-TRV48E/TRV57E/TRV67E/TRV87E only)
Your camcorder automatically returns to normal speed.

When you play back a tape recorded in the LP mode
Noise may appear during playback pause mode, slow playback (CCD-TRV48E/TRV57E/TRV67E/TRV87E only) or picture search.

The tapes recorded in the Hi8 format (CCD-TRV37E/TRV48E/TRV57E only)
You can play back the tapes recorded in the Hi8 video system on your camcorder.

В переменных режимах воспроизведения
Звук будет приглушен.

Если режим паузы воспроизведения продлится 5 минут
Ваша видеокамера автоматически войдет в режим остановки. Для возобновления воспроизведения воспроизведения нажмите кнопку ►.

Если замедленное воспроизведение продлится около 1 минуты (только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E).
Ваша видеокамера автоматически переключится на нормальную скорость.

При воспроизведении ленты, записанной в режиме LP
В режиме паузы воспроизведения, замедленного воспроизведения (только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E) или поиска изображения могут появиться помехи.

Ленты, записанные в формате Hi8 (только модель CCD-TRV37E/TRV48E/TRV57E)
Вы можете воспроизводить на Вашей видеокамере ленты, записанные в видеосистеме Hi8.

Viewing the recording on TV

Connect your camcorder to your TV or VCR with the A/V connecting cable supplied with your camcorder to watch the playback picture on the TV screen. You can operate the playback control buttons in the same way as when you monitor playback pictures on the LCD screen. When monitoring the playback picture on the TV screen, we recommend that you power your camcorder from the mains using the AC power adaptor (p. 19). Refer to the operating instructions of your TV or VCR.

Open the jack cover. Connect your camcorder to the TV using the A/V connecting cable. Then, set the TV/VCR selector on the TV to VCR.

Просмотр записи на экране телевизора

Подсоедините Вашу видеокамеру к Вашему телевизору или КВМ с помощью соединительного кабеля аудио/видео, который прилагается к Вашей видеокамере для просмотра воспроизводимого изображения на экране телевизора. Вы можете оперировать кнопками управления воспроизведением таким же способом, как при управлении воспроизводимым изображением на экране ЖКД. При управлении воспроизводимым изображением на экране телевизора рекомендуется подключить питание к Вашей видеокамере от сетевой розетки с помощью сетевого адаптера переменного тока (стр. 19). См. инструкцию по эксплуатации Вашего телевизора или КВМ.

Откройте крышку гнезд. Подсоедините Вашу видеокамеру к телевизору с помощью соединительного кабеля аудио/видео. Затем, установите переключатель TV/VCR на Вашем телевизоре в положение VCR.

CCD-TRV37E/TRV48E/TRV57E/TRV67E

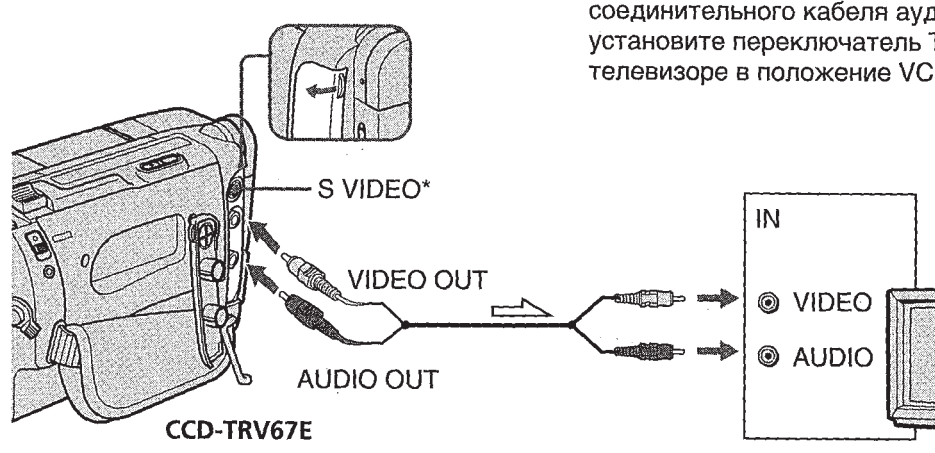

⇨ : Signal flow/Передача сигнала

* CCD-TRV67E only/только модель CCD-TRV67E

CCD-TRV87E

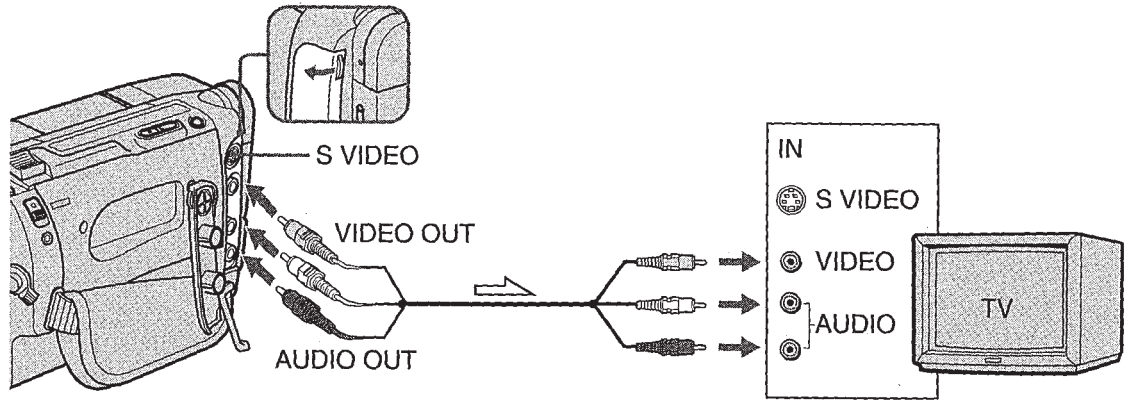

⇨ : Signal flow/Передача сигнала

Viewing the recording on TV

If your TV is already connected to a VCR

Connect your camcorder to the LINE IN input on the VCR by using the A/V connecting cable supplied with your camcorder. Set the input selector on the VCR to LINE.

If your TV or VCR is a monaural type

– CCD-TRV87E only
Connect the yellow plug for video and the white plug for audio on both your camcorder and the TV or the VCR (you do not connect the red plug). With this connection, the sound is monaural.

If your TV/VCR has a 21-pin connector (EUROCONNECTOR)

Use the 21-pin adaptor supplied with your camcorder.



To connect to a TV or VCR without Video/Audio input jacks

Use a PAL system RFU adaptor (not supplied). Refer to the operating instructions of your TV or VCR and the RFU adaptor. With an RFU adaptor, the sound is monaural even on stereo models.

If your TV or VCR has an S video jack (CCD-TRV67E/TRV87E only)
Connect using an S video cable (not supplied) to obtain high-quality pictures. With this connection, you do not need to connect the yellow (video) plug of the A/V connecting cable. Connect the S video cable (not supplied) to the S video jacks on both your camcorder and the TV or the VCR.

Monitoring the picture from a TV or VCR (CCD-TRV87E only)
You can monitor the picture on the LCD screen. Connect your camcorder to the outputs on the TV or VCR.

Просмотр записи на экране телевизора

Если Ваш телевизор уже подсоединен к КВМ

Подсоедините Вашу видеокамеру к входному гнезду LINE IN на КВМ с помощью соединительного кабеля аудио/видео, который прилагается к Вашей видеокамере. Установите селектор входного сигнала на КВМ в положение LINE.

Если Ваш телевизор или КВМ монофонического типа

– Только модель CCD-TRV87E
Подсоедините желтый штекер для видеосигнала и белый штекер для аудиосигнала к Вашей видеокамере и телевизору или КВМ (Вам не нужно подсоединять красный штекер).
При данном соединении звук будет монофоническим.

Если в Вашем телевизоре/КВМ имеется 21-штырьковый разъем (EUROCONNECTOR)

Используйте 21-штырьковый, прилагаемый к Вашему компьютеру.



Для подсоединения к Вашему телевизору или КВМ без входных гнезд аудио/видео

Используйте ВЧ-адаптер системы PAL (не прилагается). Смотрите инструкцию по эксплуатации Вашего телевизора или КВМ и ВЧ-адаптера. При использовании ВЧ-адаптера звук будет монофоническим даже на стереофонических моделях.

Если в Вашем телевизоре или КВМ имеется гнездо S видео (только модель CCD-TRV67E/TRV87E)
Выполните соединение с помощью кабеля S видео (не прилагается) для получения высококачественного изображения. При данном соединении Вам не нужно подсоединять желтый штекер (видео) соединительного кабеля аудио/видео. Подсоедините кабель S видео (не прилагается) к гнездам S видео на Вашей видеокамере и Вашем телевизоре или КВМ.

Контроль изображения от телевизора или КВМ (только модель CCD-TRV87E)
Вы можете контролировать изображение на экране ЖКД. Подсоедините Вашу видеокамеру к выходным гнездам на телевизоре или КВМ.

Viewing the recording on TV

Using the AV cordless IR receiver

– CCD-TRV87E only
Once you connect the AV cordless IR receiver (not supplied) to your TV or VCR, you can easily view the picture on your TV. For details, refer to the operating instructions of the AV cordless IR receiver.

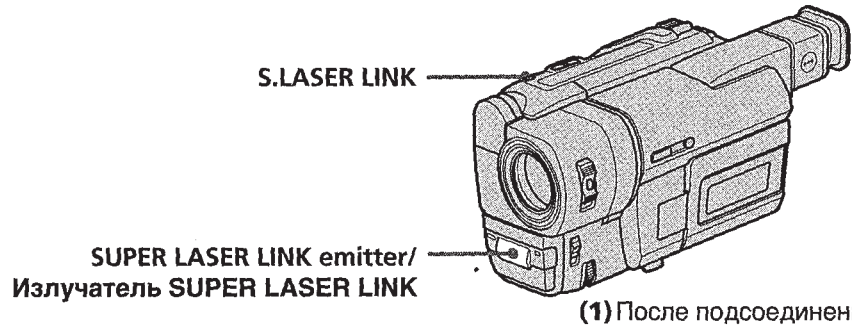

(1) After connecting your TV and AV cordless IR receiver, set the POWER switch on the AV cordless IR receiver to ON.
(2) Turn the TV on and set the TV/VCR selector on the TV to VCR.
(3) Press S.LASER LINK. The lamp of S.LASER LINK lights up.
(4) Press ► on your camcorder to start playback.
(5) Point the SUPER LASER LINK emitter at the AV cordless IR receiver. Adjust the position of your camcorder and the AV cordless IR receiver to obtain clear playback pictures.



To cancel the super laser link function
Press S.LASER LINK. The lamp on the S.LASER LINK button goes out.

If you turn the power off
Super laser link turns off automatically.

Note
When super laser link is activated (the S.LASER LINK button is lit), your camcorder consumes power. Press S.LASER LINK to turn off the super laser link function when it is not needed.

Просмотр записи на экране телевизора

Использование беспроводного ИК аудиовидеоприемника

– Только модель CCD-TRV87E
После подсоединения беспроводного ИК аудиовидеоприемника к Вашему телевизору (не прилагается) Вы можете легко наблюдать изображение на экране Вашего телевизора. Подробные сведения содержатся в инструкции по эксплуатации беспроводного ИК аудиовидеоприемника.

(1) После подсоединения к Вашему телевизору беспроводного ИК аудиовидеоприемника установите переключатель POWER на беспроводном ИК аудиовидеоприемнике в положение ON.
(2) Включите телевизор и установите селектор TV/VCR на телевизоре в положение VCR.
(3) Нажмите кнопку S.LASER LINK. Высветится лампочка S.LASER LINK.
(4) Нажмите кнопку ► на Вашей видеокамере для начала включения воспроизведения.
(5) Направьте излучатель SUPER LASER LINK на беспроводный ИК аудиовидео-приемник. Отрегулируйте положение Вашей видеокамеры и беспроводного ИК аудиовидеоприемника для получения четкого воспроизводимого изображения.

Для отмены функции лазерного суперканала передачи сигналов
Нажмите кнопку S.LASER LINK. Лампочка на кнопке S.LASER LINK погаснет.

Если Вы выключите питание
Лазерный суперканал передачи сигналов выключится автоматически.

Примечание
При включенном лазерном канале передачи сигналов (при этом высвечивается кнопка S.LASER LINK) Ваша видеокамера потребляет питание. Нажмите кнопку S.LASER LINK для выключения функции лазерного суперканала передачи сигналов, если она не требуется.

— Advanced Recording Operations —

Recording a still image on a tape – Tape Photo recording

– CCD-TRV87E only
You can record a still picture like a photograph. This mode is useful when you want to record a picture such as a photograph or when you print a picture using a video printer (not supplied).

— Усовершенствованные операции съемки —

Запись неподвижного изображения на ленту – фотосъемка на ленту

Только модель CCD-TRV87E
Вы можете записывать неподвижное изображение подобно фотографии. Данный режим полезен, если Вы хотите записывать изображение в виде фотоснимка или же при выполнении отпечатков с помощью видеопринтера (не прилагается).

NORMAL PHOTO/ ОБЫЧНОЕ ФОТО This mode records a still picture for about seven seconds./ В этом режиме неподвижное изображение записывается около семи секунд.

FADE PHOTO/ ФОТО С ВВЕДЕНИЕМ/ ВЫВЕДЕНИЕМ



SHUTTER PHOTO/ ФОТО С ЗАТВОРОМ



(1) While your camcorder is in the standby mode, select the photo mode in the menu settings (p. 70).
(2) Keep pressing PHOTO lightly until a still picture appears. The CAPTURE indicator appears. Recording does not start yet.
To change the still picture, release PHOTO, select a still picture again, and then press and hold PHOTO lightly.
(3) Press PHOTO deeper.
The still picture in the viewfinder or on the LCD screen is recorded for about seven seconds. The sound during those seven seconds is also recorded.
The still image is displayed in the viewfinder or on the LCD screen until recording is completed.

(1) В то время, когда Ваша видеокамера находится в режиме ожидания, выберите фоторежим в установках меню (стр. 70).
(2) Держите слегка нажатой кнопку PHOTO до тех пор, пока не появится неподвижное изображение. Появится индикация CAPTURE. Запись пока еще не началась.
Для изменения неподвижного изображения отпустите кнопку PHOTO, выберите неподвижное изображение снова, а затем нажмите и держите слегка нажатой кнопку PHOTO.
(3) Нажмите кнопку PHOTO сильнее.
Неподвижное изображение в видоискателе или на экране ЖКД будет записываться около семи секунд. В течение этих семи секунд будет записываться и звук.
Неподвижное изображение будет отображаться в видоискателе или на экране ЖКД до тех пор, пока запись не будет закончена.

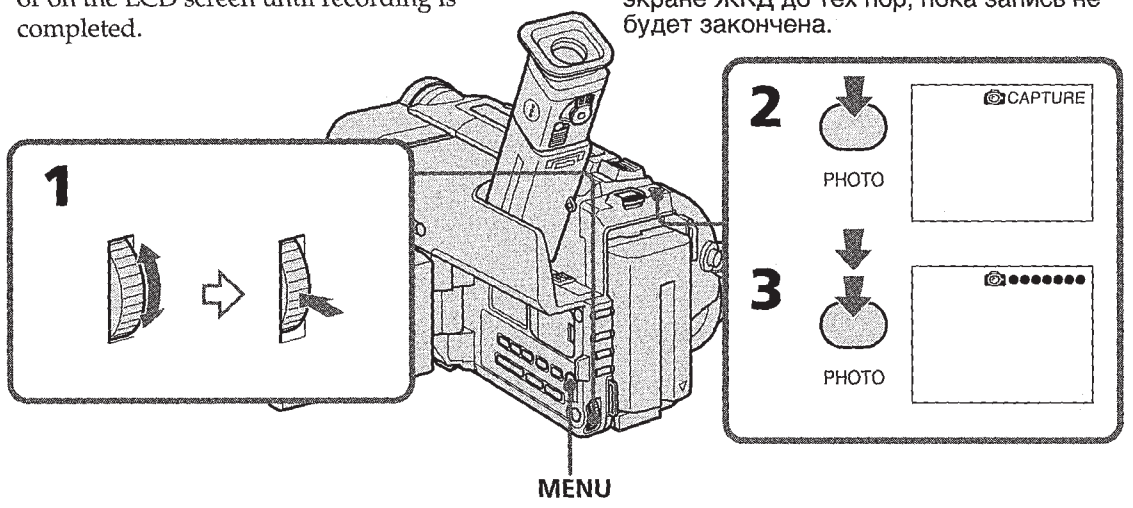

Recording a still image on a tape – Tape Photo recording

Notes
- During tape photo recording, you cannot change the mode or setting of the following functions:
  - – Digital effect
  - – Fader
  - – PROGRAM AE
  - – Picture effect
  - – Exposure
  - – Wide mode
  - – Backlight
  - – Super NightShot
- The PHOTO button does not work:
  - – while the digital effect function is set or in use.
  - – while the fader function is in use.
- When recording a still picture, do not shake your camcorder. The picture may fluctuate.

To use the tape photo recording function during normal CAMERA recording
Press PHOTO deeper. The still picture is then recorded for about seven seconds and your camcorder returns to the standby mode. You cannot select another still picture.

Запись неподвижного изображения на ленту – фотосъемка на ленту

Примечания
- Во время фотосъемки на ленту Вы не можете изменять режим или установку следующих функций:
  - – Цифровой эффект
  - – Фейдер
  - – PROGRAM AE
  - – Эффект изображения
  - – Экспозиция
  - – Широкоэкранный режим
  - – Задняя подсветка
  - – Ночная суперсъемка
- Кнопка PHOTO не работает:
  - – если установлена или используется функция цифрового эффекта.
  - – если используется функция фейдера.
- При записи неподвижного изображения не трясите Вашу видеокамеру. Изображение может быть неустойчивым.

Для использования функции фотосъемки на ленту во время обычной записи в режиме CAMERA
Нажмите кнопку PHOTO сильнее. Неподвижное изображение будет записываться около семи секунд, а затем видеокамера вернется в режим ожидания. Вы не сможете при этом выбрать другое неподвижное изображение.

Recording a still image on a tape – Tape Photo recording

Printing the still picture

You can print a still picture by using the video printer (not supplied). Connect the video printer using the A/V connecting cable supplied with your camcorder.
Connect the yellow plug of the cable to the video jack on both your camcorder the video printer. Refer to the operating instructions of the video printer as well.

Запись неподвижного изображения на ленту — фотосъемка на ленту

Печатание неподвижного изображения

Вы можете напечатать неподвижное изображение с помощью видеопринтера (не прилагается). Подсоедините видеопринтер с использованием соединительного кабеля аудио/видео, прилагаемого к Вашей видеокамере.
Подсоедините желтый разъем кабеля к видеогнезду на Вашей видеокамере и видеопринтере. Смотрите также инструкцию по эксплуатации видеопринтера.

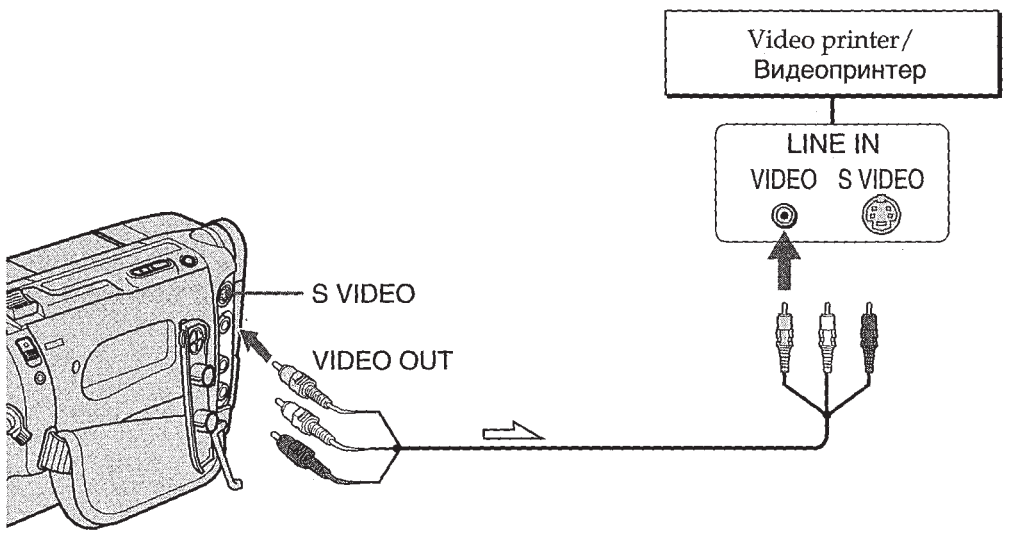

⇨ : Signal flow/Передача сигнала

If the video printer is equipped with S video input
Use the S video connecting cable (not supplied). Connect it to the S VIDEO jack and the S video input of the video printer.

Если видеопринтер оснащен входом S-видео
Используйте соединительный кабель S-видео (не прилагается). Подсоедините его к гнезду S-VIDEO и входу S-видео на видеопринтере.

Using the wide mode

You can record a cinema-like picture (CINEMA) or a 16:9 wide picture to watch on the 16:9 wide-screen TV (16:9FULL). Refer to the operating instructions of your TV.

CINEMA
Black bands appear on the screen during recording in the CINEMA mode **[a]**, playing back on a normal TV **[b]** or a wide-screen TV **[c]**. If you set the screen mode of the wide-screen TV to the zoom mode, a picture without black bands appears **[d]**.

16:9FULL
The picture during recording in the 16:9FULL mode **[e]**, or playing back on a normal TV **[f]** or a wide-screen TV **[g]** is horizontally compressed. If you set the screen mode of the wide-screen TV to the full mode, you can watch pictures of normal images **[h]**.

Использование широкоэкранного режима

Вы можете записывать изображение наподобие кино (CINEMA) или широкоэкранное изображение 16:9 для просмотра на широкоэкранном телевизоре 16:9 (16:9FULL). Обратитесь к инструкции по эксплуатации Вашего телевизора.

CINEMA
Черные полосы появятся на экране во время записи в режиме CINEMA **[a]**, воспроизведения на обычном телевизоре **[b]** или на широкоэкранном телевизоре **[c]**. Если Вы установите экранный режим на широкоэкранном телевизоре в режим масштабирования, то изображение появится без черных полос **[d]**.

16:9FULL
Изображение во время записи в режиме 16:9 FULL **[e]**, либо во время воспроизведения на обычном телевизоре **[f]** или широкоэкранном телевизоре **[g]** будет сжато по горизонтали. Если Вы установите экранный режим широкоэкранного телевизора в полноэкранный режим, Вы можете просматривать изображения обычных съемок **[h]**.

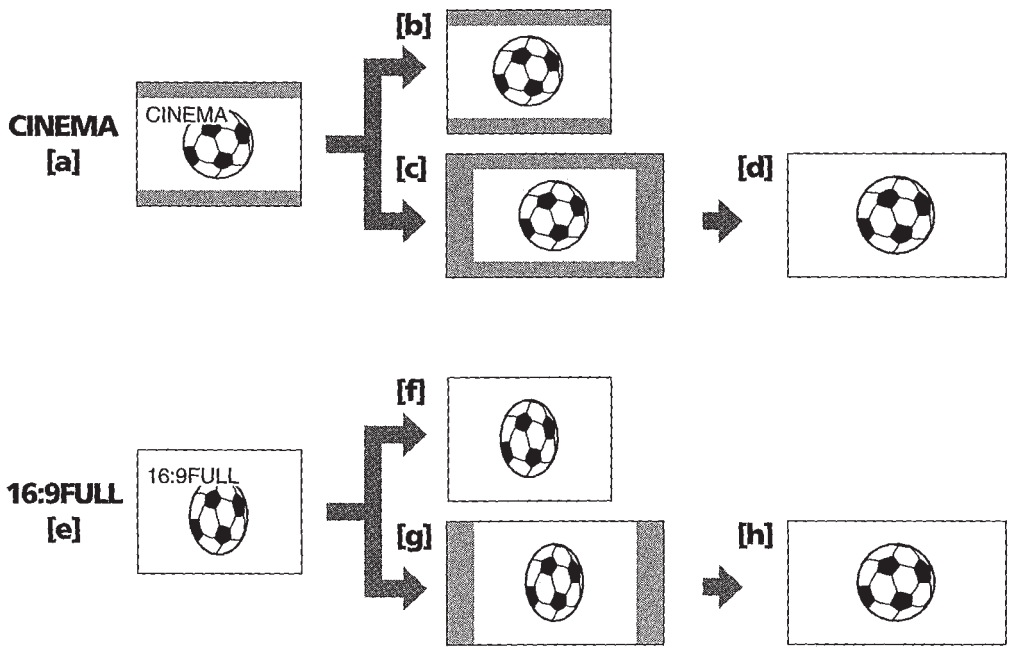

Using the wide mode

In the standby mode, set 16:9WIDE to CINEMA or 16:9FULL in the menu settings (p. 70).

Использование широкоэкранного режима

В режиме ожидания установите 16:9WIDE в положение CINEMA или 16:9FULL в установках меню (стр. 70).

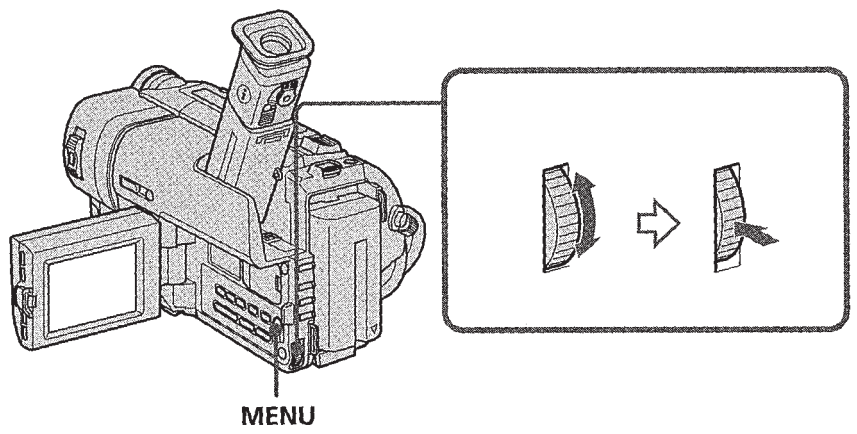

To cancel the wide mode

Set 16:9WIDE to OFF in the menu settings.

If the wide mode is set to 16:9FULL (CCD-TRV57E/TRV67E/TRV87E only)
The SteadyShot function does not work. If you select 16:9FULL in the menu settings when the SteadyShot function is working, "✋" flashes and the SteadyShot function does not function.

In the wide mode
You cannot select the old movie function with DIGITAL EFFECT (CCD-TRV87E only) and the bounce function with FADER.

Date or time indicator
When you record in the 16:9FULL mode, the date or time indicator will be widened on wide-screen TVs.

During recording
You cannot change or cancel the wide mode. When you cancel the wide mode, set your camcorder to the standby mode and then set 16:9WIDE to OFF.

Для отмены широкоэкранного режима

Установите команду 16:9WIDE в положение OFF в установках меню.

Если широкоэкранный режим установлен в положение 16:9FULL (только модель CCD-TRV57E/TRV67E/TRV87E)
Функция устойчивой съемки не работает. Если Вы выберите команду 16:9FULL в установках меню в то время, когда работает функция устойчивой съемки, начнет мигать индикация "✋", и функция устойчивой съемки работать не будет.

В широкоэкранном режиме
Вы не можете выбрать функцию старинного кино с помощью команды DIGITAL EFFECT (только модель CCD-TRV87E) и функцию перескакивания с помощью команды FADER.

Индикатор даты или времени
Если Вы выполняете запись в режиме 16:9FULL, индикатор даты или времени расширится на широкоэкранном телевизоре.

Во время записи
Вы не можете изменить или отменить широкоэкранный режим.
Для отмены широкоэкранного режима установите Вашу видеокамеру на режим ожидания, а затем установите 16:9WIDE на OFF.

Using the fader function

You can fade in or out to give your recording a professional appearance.

Использование функции фейдера

Вы можете выполнять плавное введение и выведение изображения, чтобы придать Вашей съемке профессиональный вид.

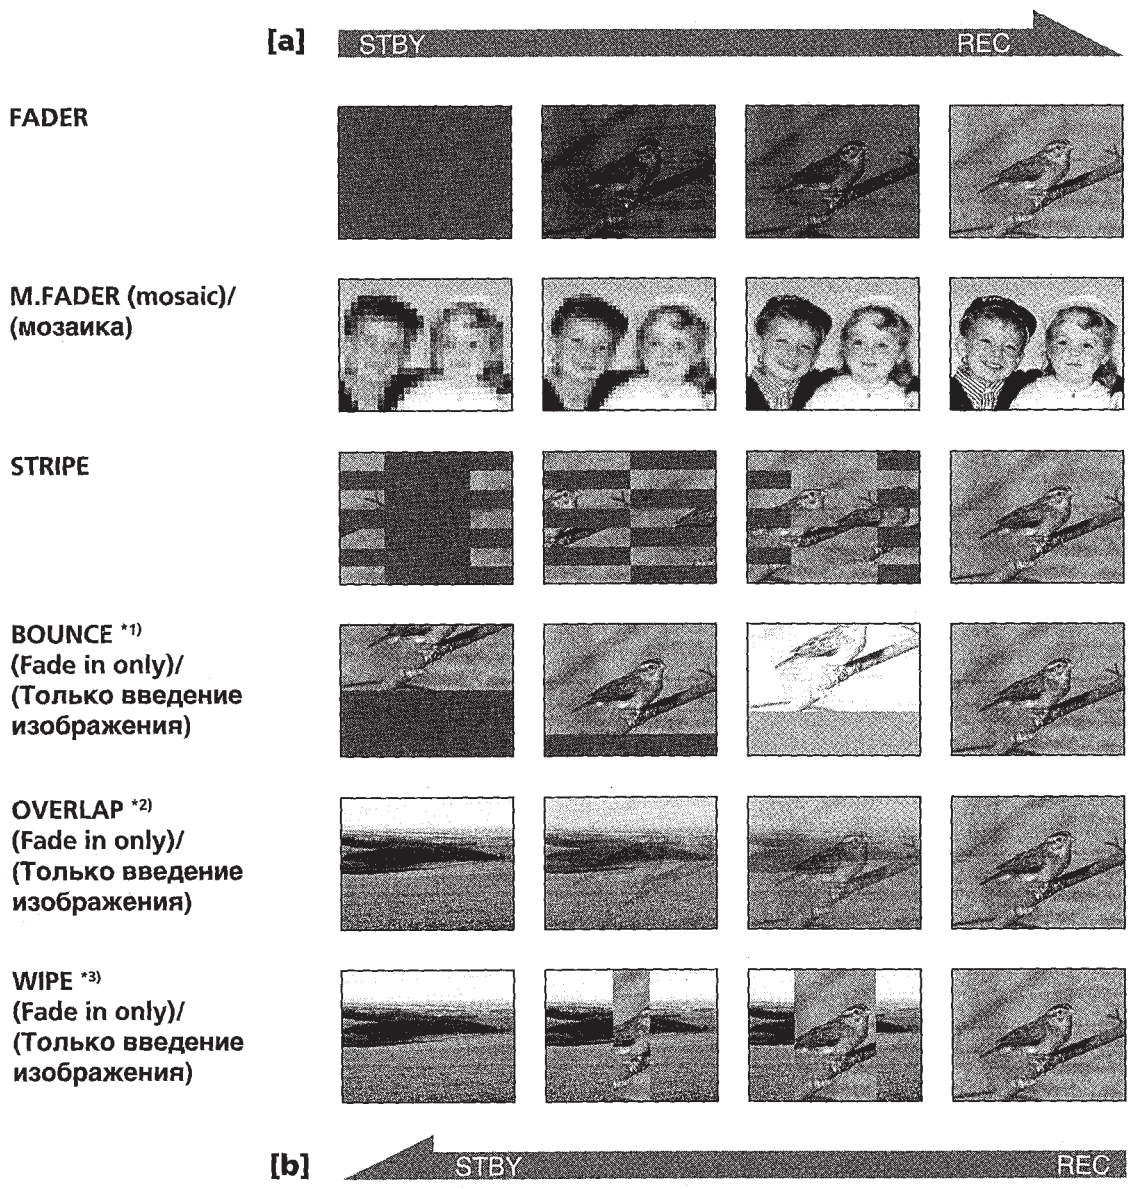

MONOTONE
When fading in, the picture gradually changes from black-and-white to colour.
When fading out the picture gradually changes from colour to black-and-white.

*1) You can use this function only when D ZOOM is set to OFF.
*2) CCD-TRV87E only
*3) CCD-TRV87E only. The sound does not wipe away.

MONOTONE
При введении изображение будет постепенно изменяться от черно-белого до цветного.
При выведении изображение будет постепенно изменяться от цветного до чернобелого.

*1) Вы можете использовать эту функцию только при установке команды D ZOOM на OFF.
*2) Только модель CCD-TRV87E
*3) Только модель CCD-TRV87E. Звук при этом не убирается.

Using the fader function

(1) When fading in [a]
In the standby mode, press FADER until the desired fader indicator flashes.
When fading out [b]
In the recording mode, press FADER until the desired fader indicator flashes.
The indicator changes as follows:
FADER → M.FADER → STRIPE → BOUNCE → MONOTONE → OVERLAP (CCD-TRV87E only) → WIPE (CCD-TRV87E only) → no indicator
The last selected fader mode is indicated first of all.

(2) Press START/STOP. The fader indicator stops flashing.

Использование функции фейдера

(1) При введении изображения [a]
В режиме ожидания, нажимайте кнопку FADER до тех пор, пока не начнет мигать нужный индикатор фейдера.
При выведении изображения [b]
В режиме записи, нажимайте кнопку FADER до тех пор, пока не начнет мигать нужный индикатор фейдера.
Индикатор будет изменяться следующим образом:
FADER → M.FADER → STRIPE → BOUNCE → MONOTONE → OVERLAP (только модель CCD-TRV87E) → WIPE (только модель CCD-TRV87E) → без индикатора
Последний из выбранных режимов фейдера отображается первым.

(2) Нажмите кнопку START/STOP. Индикатор фейдера перестанет мигать.

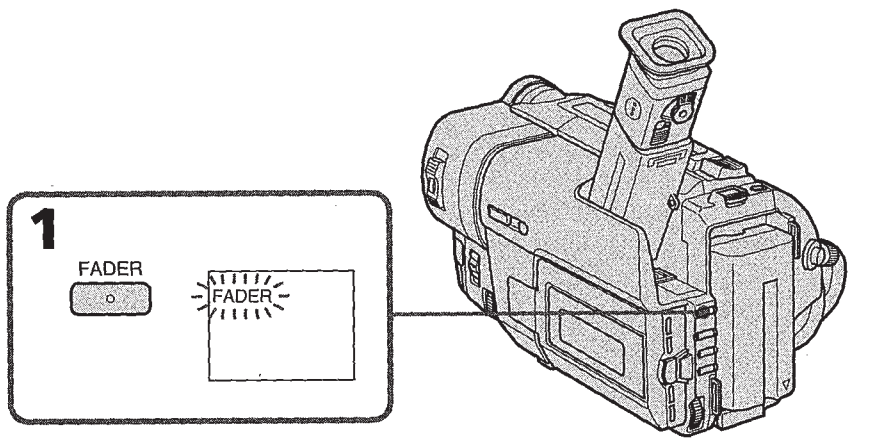

To cancel the fader function

After the fade in/out is carried out : Your camcorder automatically returns to the normal mode.
Before the fade in/out is carried out : Before pressing START/STOP, press FADER until the indicator disappears.

Для отмены функции фейдера

После того, как выполнено введение/выведение изображения: Ваша видеокамера автоматически вернется в обычный режим.
Перед тем, как выполнить введение/выведение изображения: Перед тем, как нажать кнопку START/STOP, нажимайте кнопку FADER до тех пор, пока не исчезнет индикатор.

Using the Fader function

Note (CCD-TRV87E only)
You cannot use the following functions while using the fader function. Also, you cannot use the fader function while using the following functions.
- Digital effect
- Low lux mode of PROGRAM AE (Overlap/Wipe function only)
- Super NightShot
- Tape Photo recording

The date, time indicator and title do not fade in or fade out
Erase them before operating the fader function if they are not needed.

If you do not record anything before operating the wipe or overlap function (CCD-TRV87E only)
Your camcorder stores the image on the tape. As the image is being stored, the WIPE or OVERLAP indicator flashes quickly, and the picture you are shooting disappears from the viewfinder. Depending on the tape condition, the picture may not be recorded clearly.

While using the bounce function, you cannot use the following functions:
- Exposure
- Focus
- Zoom
- Picture effect

Note on the bounce function
The BOUNCE indicator does not appear in the following mode or functions:
- D ZOOM is set to the mode other than OFF in the menu settings
- Wide mode
- Picture effect
- PROGRAM AE

Использование функции фейдера

Примечание (только модель CCD-TRV87E)
Вы не можете использовать следующие функции во время использования функции фейдера. Также, Вы не можете использовать функцию фейдера во время использования следующих функций.
- Цифровой эффект
- Режим низкой освещенности PROGRAM AE (только функция наложения/вытеснения изображения шторкой)
- Ночная суперсъемка
- Фотосъемка на ленту

Индикатор даты, времени и титр не вводятся и не выводятся вместе с изображением
Удалите их перед тем, как включить функцию фейдера, если они не нужны.

Если Вы не записывали ничего перед включением функции вытеснения шторкой или наложения изображения (только модель CCD-TRV87E)
Ваша видеокамера хранит изображение на ленте. Во время сохранения изображения индикатор WIPE или OVERLAP будет быстро мигать, а изображение, которое Вы снимаете, исчезнет в видоискателе. В зависимости от состояния ленты, изображение может быть записано нечетко.

Во время использования функции перескакивания Вы не можете использовать следующие функции:
- Экспозиция
- Фокусировка
- Трансфокация
- Эффект изображения

Примечание по функции перескакивания
Индикатор BOUNCE не появляется в следующих режимах или при использовании следующих функций:
- Команда D ZOOM установлена на режим, отличный от OFF в установках меню
- Широкоэкранный режим
- Эффект изображения
- PROGRAM AE

Using special effects – Picture effect

You can digitally process images to obtain special effects like those in films or on the TV.

PASTEL [a] :	The contrast of the picture is emphasized, and the picture looks like an animated cartoon.
NEG. ART [b] :	The colour and brightness of the picture is reversed.
SEPIA :	The picture is sepia.
B&W :	The picture is monochrome (black-and-white).
SOLARIZE [c] :	The light intensity is clearer, and the picture looks like an illustration.
MOSAIC [d] :	The picture is mosaic.
SLIM [e] :	The picture expands vertically.
STRETCH [f] :	The picture expands horizontally.

Использование специальных эффектов – Эффект изображения

Вы можете выполнять обработку изображения цифровым методом для получения специальных эффектов, как в кинофильмах или на экранах телевизоров.

PASTEL [a] :	Подчеркивается контрастность изображения, которому придается мультипликационный вид.
NEG. ART [b] :	Цвет и яркость изображения будут негативными.
SEPIA :	Изображение будет в цвете сепии.
B&W :	Изображение будет монохроматическим (черно-белым).
SOLARIZE [c] :	Яркость света будет усиленной, а изображение будет выглядеть как иллюстрация.
MOSAIC [d] :	Изображение будет мозаическим.
SLIM [e] :	Изображение растянется по вертикали.
STRETCH [f] :	Изображение растянется по горизонтали.

[a]

[b]

[c]

[d]

[e]

[f]

Using special effects – Picture effect

(1) Press PICTURE EFFECT in the standby or recording mode.
The picture effect indicator appears.

(2) Turn the SEL/PUSH EXEC dial to select the desired picture effect mode.
The indicator changes as follows:
PASTEL ←→ NEG.ART ←→ SEPIA ←→ B&W ←→ SOLARIZE ←→ MOSAIC ←→ SLIM ←→ STRETCH

Использование специальных эффектов – Эффект изображения

(1) Нажмите кнопку PICTURE EFFECT в режиме ожидания или режиме записи.
Появится индикатор эффекта изображения.

(2) Поверните диск SEL/PUSH EXEC для выбора режима нужного эффекта изображения.
Индикатор будет изменяться следующим образом:
PASTEL ←→ NEG.ART ←→ SEPIA ←→ B&W ←→ SOLARIZE ←→ MOSAIC ←→ SLIM ←→ STRETCH

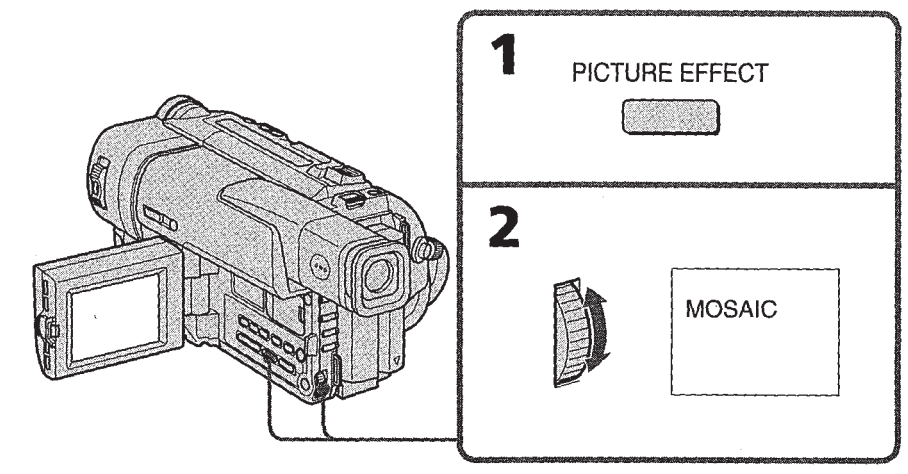

To turn the picture effect function off

Press PICTURE EFFECT.

While using the picture effect function (CCD-TRV87E only)
You cannot select the old movie mode with DIGITAL EFFECT.

When you turn the power off
Your camcorder automatically returns to the normal mode.

Для выключения функции эффекта изображения

Нажмите кнопку PICTURE EFFECT.

При использовании функции эффекта изображения (только модель CCD-TRV87E)
Вы не можете выбрать режим старинного кино с помощью команды DIGITAL EFFECT.

Если Вы выключите питание
Ваша видеокамера автоматически вернется в обычный режим.

Using special effects – Digital effect

– CCD-TRV87E only

You can add special effects to recorded pictures using the various digital functions. The sound is recorded normally.

STILL
You can record a still picture so that it is superimposed on a moving picture.

FLASH (FLASH MOTION)
You can record still pictures successively at constant intervals.

LUMI. (LUMINANCEKEY)
You can swap a brighter area in a still picture with a moving picture.

TRAIL
You can record the picture so that an incidental image like a trail is left.

SLOW SHTR (SLOW SHUTTER)
You can slow down the shutter speed. The slow shutter mode is good for recording dark pictures more brightly.

OLD MOVIE
You can add an old movie type atmosphere to pictures. Your camcorder automatically sets the wide mode to CINEMA, picture effect to SEPIA, and the appropriate shutter speed.

Использование специальных эффектов – Цифровой эффект

– Только модель CCD-TRV87E

Вы можете добавлять специальные эффекты к записываемому изображению с помощью разных цифровых функций. Записываемый звук будет обычным.

STILL
Вы можете записывать неподвижное изображение, которое можно налагать на подвижное изображение.

FLASH (FLASH MOTION)
Вы можете записывать неподвижные изображения в последовательности через определенные интервалы.

LUMI. (LUMINANCEKEY)
Вы можете изменять яркие места на неподвижном изображении на подвижные изображения.

TRAIL
Вы можете записывать изображение с эффектом запаздывания.

SLOW SHTR (SLOW SHUTTER)
Вы можете замедлить скорость затвора. Режим медленного затвора является подходящим для записи темных изображений в более ярком свете.

OLD MOVIE
Вы можете привносить атмосферу старинного кино в изображения. Ваша видеокамера будет автоматически устанавливать широкоэкранный режим в положение CINEMA, эффект изображения в положение SEPIA, и выставлять соответствующую скорость затвора.

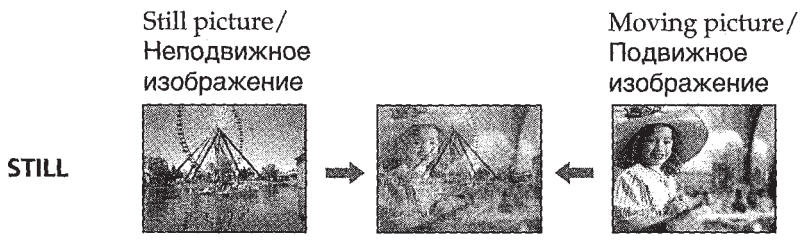

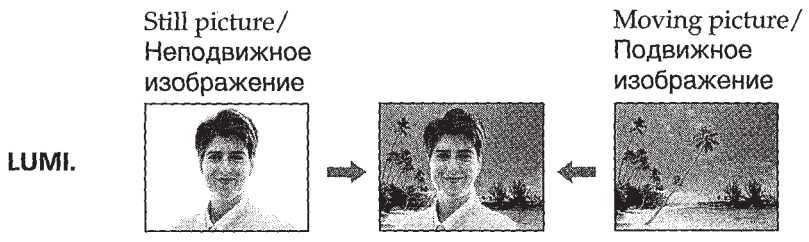

Using special effects – Digital effect

(1) While your camcorder is in the standby or recording mode, press DIGITAL EFFECT. The digital effect indicator appears.
(2) Turn the SEL/PUSH EXEC dial to select the desired digital effect mode.
The indicator changes as follows:
STILL ←→ FLASH ←→ LUMI. ←→ TRAIL ←→ SLOW SHTR ←→ OLD MOVIE
(3) Press the SEL/PUSH EXEC dial. The indicator lights up and the bars appear. In the STILL and LUMI. modes, the still picture is stored in memory.
(4) Turn the SEL/PUSH EXEC dial to adjust the effect as follows:

STILL – The rate of the still picture you want to superimpose on the moving picture
FLASH – The interval of flash motion
LUMI. – The colour scheme of the area in the still picture which is to be swapped with a moving picture
TRAIL – The vanishing time of the incidental image
SLOW SHTR – Shutter speed. The larger the shutter speed number, the slower the shutter speed
OLD MOVIE – No adjustment necessary

The more bars there are on screen, the stronger the digital effect. The bars appear in the following modes: STILL, FLASH, LUMI. and TRAIL.

Использование специальных эффектов – Цифровой эффект

(1) В то время, когда Ваша видеокамера находится в режиме ожидания или режиме записи, нажмите кнопку DIGITAL EFFECT. Появится индикатор цифрового эффекта.
(2) Поверните диск SEL/PUSH EXEC для выбора режима нужного цифрового эффекта.
Индикатор будет изменяться следующим образом:
STILL ←→ FLASH ←→ LUMI. ←→ TRAIL ←→ SLOW SHTR ←→ OLD MOVIE
(3) Нажмите диск SEL/PUSH EXEC. Высветится индикатор и появятся полосы. В режимах STILL и LUMI. неподвижное изображение будет сохранено в памяти.
(4) Поверните диск SEL/PUSH EXEC для регулировки эффекта Следующим образом.

STILL – Интенсивность неподвижного изображения, которое Вы хотите наложить на подвижное изображение
FLASH – Интервал прерывистого движения
LUMI. – Цветовая гамма участка на неподвижном изображении, который будет заменен на подвижное изображение
TRAIL – Время исчезания побочного изображения
SLOW SHTR – Скорость затвора. Чем больше величина скорости затвора, тем медленнее скорость затвора
OLD MOVIE – Не требуется никаких регулировок

Чем больше прямоугольников на экране, тем сильнее цифровой эффект. Прямоугольники появляются в следующих режимах: STILL, FLASH, LUMI. и TRAIL.

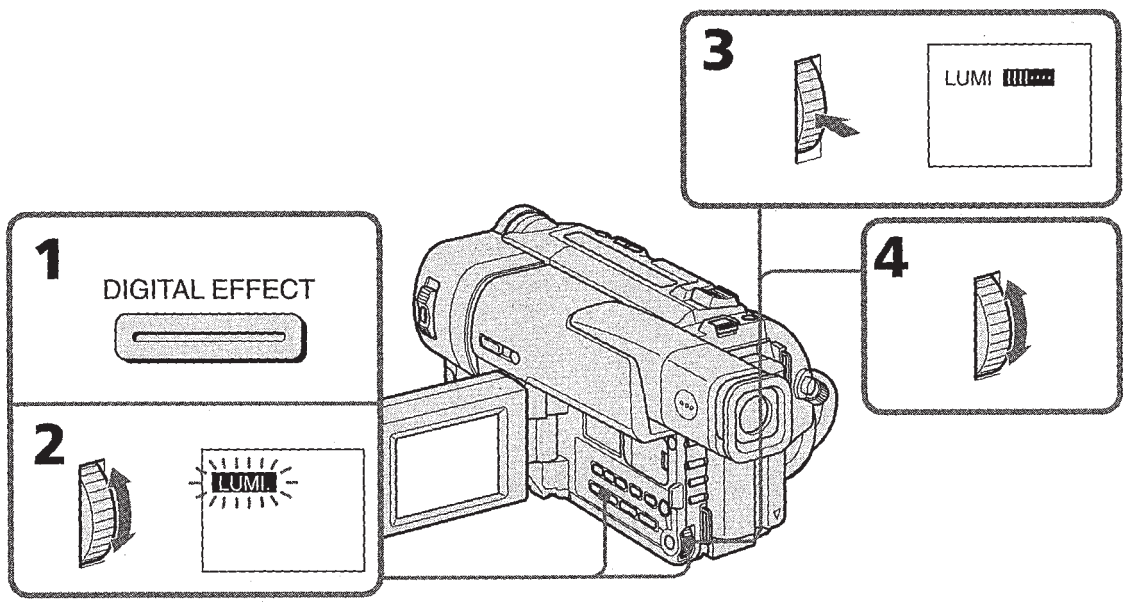

Using special effects – Digital Effect

To cancel the digital effect

Press DIGITAL EFFECT. The digital effect indicator disappears.

Notes
- The following functions do not work during digital effect:
  - Fader
  - Low lux mode of PROGRAM AE
  - Tape Photo recording
  - Super NightShot
- The following function does not work in the slow shutter mode:
  - Exposure
  - PROGRAM AE
- The following functions do not work in the old movie mode:
  - Exposure
  - Wide mode
  - Picture effect
  - PROGRAM AE

When you turn the power off

The digital effect will be automatically canceled.

When recording in the slow shutter mode

Auto focus may not be effective. Focus manually using a tripod.

Shutter speed

Shutter speed number	Shutter speed
SLOW SHTR 1	1/25
SLOW SHTR 2	1/12
SLOW SHTR 3	1/6
SLOW SHTR 4	1/3

Использование специальных эффектов – Цифровой эффект

Для отмены цифрового эффекта

Нажмите кнопку DIGITAL EFFECT. Индикатор цифрового эффекта исчезнет.

Примечания
- Следующие функции не работают при использовании цифрового эффекта:
  - Фейдер
  - Режим низкой освещенности PROGRAM AE
  - Фотосъемка на ленту
  - Ночная суперсъемка
- Следующие функции не работают в режиме медленного затвора:
  - Экспозиция
  - PROGRAM AE
- Следующие функции не работают в режиме старинного кино:
  - Экспозиция
  - Широкоэкранный режим
  - Эффект изображения
  - PROGRAM AE

При выключении питания

Цифровой эффект будет автоматически отменен.

При записи в режиме медленного затвора

Автоматическая фокусировка может быть не эффективной. Выполните фокусировку вручную, используя треногу.

Скорость затвора

Величина скорости затвора	Скорость затвора
SLOW SHTR 1	1/25
SLOW SHTR 2	1/12
SLOW SHTR 3	1/6
SLOW SHTR 4	1/3

Using the PROGRAM AE function

You can select PROGRAM AE (Auto Exposure) mode to suit your specific shooting requirements.

Spotlight mode
This mode prevents people's faces, for example, from appearing excessively white when shooting subjects lit by strong light in the theatre.

Soft portrait mode
This mode brings out the subject while creating a soft background for subjects such as people or flowers.

Sports lesson mode
This mode minimizes shake on fast-moving subjects such as in tennis or golf.

Beach & ski mode
This mode prevents people's faces from appearing dark in strong light or reflected light, such as at a beach in midsummer or on a ski slope.

Sunset & moon mode
This mode allows you to maintain atmosphere when you are recording sunsets, general night views, fireworks displays and neon signs.

Landscape mode
This mode is for when you are recording distant subjects such as mountains and prevents your camcorder from focusing on glass or metal mesh in windows when you are recording a subject behind glass or a screen.

Low lux mode (CCD-TRV87E only)
This mode makes subjects brighter in insufficient light.

Использование функции PROGRAM AE

Вы можете выбрать режим PROGRAM AE (автоматическая экспозиция) в соответствии со специфическими требованиями к съемке.

Режим прожекторного освещения
Данный режим предотвращает, к примеру, лица людей от появления в чрезмерно белом свете при выполнении съемки людей, освещенных сильным светом в театре.

Мягкий портретный режим
Этот режим позволяет выделить объект, создавая мягкий фон, и подходит для съемки, например, людей или цветов.

Режим спортивных состязаний
Этот режим позволяет минимизировать дрожание при съемке быстро движущихся предметов, например, при игре в теннис или гольф.

Пляжный и лыжный режим
Этот режим предотвращает появление темных лиц людей в зоне сильного света или отраженного света, например, на пляже в разгар лета или на снежном склоне.

Режим захода солнца и луны
Этот режим позволяет в точности отражать обстановку при съемке заходов солнца, общих ночных видов, фейерверков и неоновых реклам.

Ландшафтный режим
Этот режим позволяет выполнять съемку отдаленных объектов, таких как горы, например, и предотвращает фокусировку видеокамеры на стекло или металлическую решетку на окнах, когда Вы выполняете запись объектов позади стекла или решетки.

Режим низкой освещенности (только модель CCD-TRV87E)
Этот режим делает объекты ярче при недостаточном освещении.

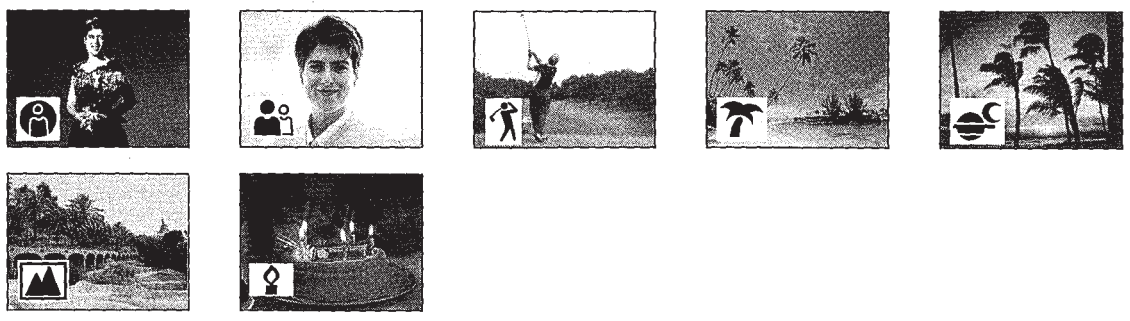

Using the PROGRAM AE function

(1) Press PROGRAM AE in the standby mode.
The PROGRAM AE indicator appears.
(2) Turn the SEL/PUSH EXEC dial to select the desired PROGRAM AE mode.
The indicator changes as follows:
↔ ↔ ↔ ↔ ↔ ↔
(CCD-TRV87E only)

Использование функции PROGRAM AE

(1) Нажмите кнопку PROGRAM AE в режиме ожидания.
Появится индикатор PROGRAM AE.
(2) Поверните диск SEL/PUSH EXEC для выбора нужного режима PROGRAM AE.
Индикатор будет изменяться следующим образом:
↔ ↔ ↔ ↔ ↔ ↔
(только модель CCD-TRV87E)

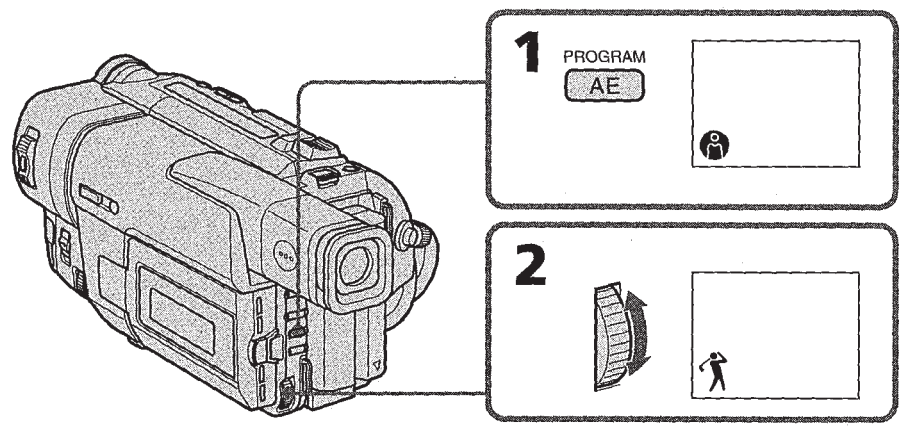

To turn the PROGRAM AE function off

Press PROGRAM AE.

Для выключения функции PROGRAM AE

Нажмите кнопку PROGRAM AE.

Using the PROGRAM AE function

Notes
- In the spotlight, sports lesson and beach & ski modes, you cannot take close-ups. This is because your camcorder is set to focus only on subjects in the middle to far distance.
- In the sunset & moon and landscape modes, your camcorder is set to focus only on distant subjects.
- The following functions do not work in the PROGRAM AE mode:
  - Slow shutter (CCD-TRV87E only)
  - Old movie (CCD-TRV87E only)
  - NightShot
  - Bounce
- The following functions do not work in the low lux mode (CCD-TRV87E only):
  - Digital effect
  - Overlap
  - Wipe
  - Exposure
- If you press PROGRAM AE when using the NightShot function, the PROGRAM AE indicator flashes and the PROGRAM AE function does not work.

If you are recording under a discharge tube such as a fluorescent lamp, sodium lamp or mercury lamp

Flickering or changes in colour may occur in the following modes. If this happens, turn the PROGRAM AE function off.
- Soft portrait mode
- Sports lesson mode

Использование функции PROGRAM AE

Примечания
- В режимах прожекторного освещения, спортивных состязаний, а также в пляжном и лыжном режиме Вы не можете выполнять съемку крупным планом. Это объясняется тем, что Ваша видеокамера настроена для фокусировки только на объекты, находящиеся на среднем и дальнем расстояниях.
- В режиме захода солнца и луны, а также в ландшафтном режиме Ваша видеокамера настроена на фокусировку только на дальние объекты.
- Следующие функции не работают в режиме PROGRAM AE:
  - Медленный затвор (только модель CCD-TRV87E)
  - Старинное кино (только модель CCD-TRV87E)
  - Ночная съемка
  - Перескакивание
- Следующие функции не работают в режиме низкой освещенности (только модель CCD-TRV87E):
  - Цифровой эффект
  - Наложение изображения
  - Вытеснение изображения шторкой
  - Экспозиция
- Если Вы нажмете кнопку PROGRAM AE во время использования функции ночной съемки, начнет мигать индикатор PROGRAM AE, и функция PROGRAM AE не будет работать.

Если Вы выполняете запись при освещении от газоразрядной лампы, как например, люминесцентной натриевой лампы или ртутной лампы

В следующих режимах может возникнуть мерцание или неустойчивые процессы. Если это произойдет, выключите функцию PROGRAM AE.
- Мягкий портретный режим
- Режим спортивных состязаний

Adjusting the exposure manually

You can manually adjust and set the exposure. Adjust the exposure manually in the following cases:
- The subject is backlit
- Bright subject and dark background
- To record dark pictures (e.g. night scenes) faithfully

(1) Press EXPOSURE in the standby or recording mode.
The exposure indicator appears.
(2) Turn the SEL/PUSH EXEC dial to adjust the brightness.

Регулировка экспозиции вручную

Вы можете отрегулировать и установить экспозицию вручную.
Отрегулируйте экспозицию вручную в следующих случаях:
- Объект на фоне задней подсветки
- Яркий объект на темном фоне
- Для записи темных изображений (например, ночных сцен) с большой достоверностью

(1) Нажмите кнопку EXPOSURE в режиме ожидания или записи.
Появится индикатор экспозиции.
(2) Поверните диск SEL/PUSH EXEC для регулировки яркости.

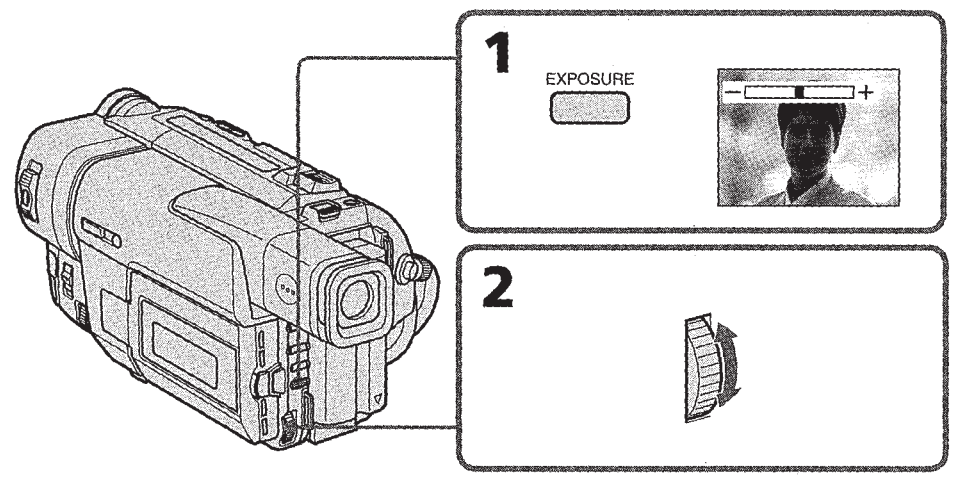

To return to the automatic exposure mode

Press EXPOSURE again.

Note
When you adjust the exposure manually, the following function and modes do not work:
- Backlight
- Slow shutter (CCD-TRV87E only)
- Old movie (CCD-TRV87E only)

Your camcorder automatically returns to the automatic exposure mode:
- if you change the PROGRAM AE mode
- if you slide NIGHTSHOT to ON

Для возврата в режим автоматической экспозиции

Нажмите кнопку EXPOSURE еще раз.

Примечание
При выполнении регулировки вручную следующие функции и режимы не работают:
- Задняя подсветка
- Медленный затвор (только модель CCD-TRV87E)
- Старинное кино (только модель CCD-TRV87E)

Ваша видеокамера автоматически возвращается к режиму автоматической экспозиции:
- если Вы изменяете режим PROGRAM AE
- если Вы переместите NIGHTSHOT в положение ON

Focusing manually

You can gain better results by manually adjusting the focus in the following cases:
- The autofocus mode is not effective when shooting
  - subjects through glass coated with water droplets
  - horizontal stripes
  - subjects with little contrast with backgrounds such as walls and sky
- When you want to change the focus from a subject in the foreground to a subject in the background
- Shooting a stationary subject when using a tripod

Фокусировка вручную

Вы можете получить лучшие результаты путем регулировки вручную в следующих случаях:
- Режим автоматической фокусировки является неэффективным при выполнении съемки
  - объектов через стекло, покрытое каплями воды
  - горизонтальных полос
  - объектов с малой контрастностью на таком фоне, как стена или небо
- Если Вы хотите выполнить изменение фокусировки объекта на переднем плане на объект на заднем плане
- При выполнении съемки стационарных объектов с использованием треноги



(1) Set FOCUS to MANUAL in the standby or recording mode. The indicator appears.
(2) Turn NEAR/FAR to sharpen focus.

(1) Установите переключатель FOCUS в положение MANUAL в режиме ожидания или режиме записи. Появится индикатор .
(2) Поверните регулятор NEAR/FAR для получения четкой фокусировки.

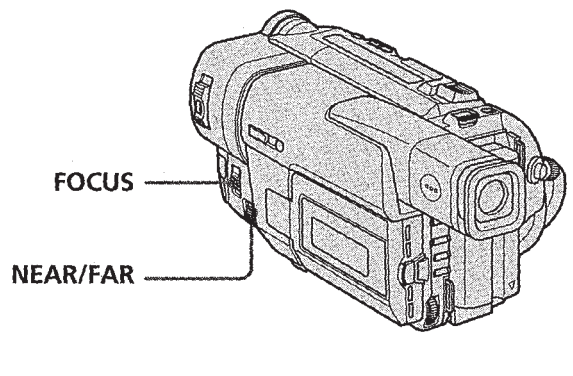

To return to the autofocus mode

Set FOCUS to AUTO.

Для возвращения в режим автоматической фокусировки

Установите переключатель FOCUS в положение AUTO.

Focusing manually

To record distant subjects

When you press FOCUS down to INFINITY, the lens focuses on infinity and ▲ indicator appears. When you release FOCUS, your camcorder returns to the manual focus mode. Use this mode when your camcorder focuses on near objects even though you are trying to shoot a distant object.

To focus precisely

Adjust the zoom by first focusing at the "T" (telephoto) position and then shooting at the "W" (wide-angle) positon. This makes focusing easier.

When you shoot close to the subject

Focus at the end of the "W" (wide-angle) position.

☞ changes to the following indicators:

▲ when recording a distant subject.

● when the subject is too close to focus on.

Фокусировка вручную

Для съемки удаленных объектов

Если Вы нажмете вниз кнопку FOCUS в положение INFINITY, объектив выполнит фокусировку на бесконечность и появится индикатор ▲. Если Вы отпустите кнопку FOCUS, Ваша видеокамера вернется в режим ручной фокусировки. Используйте этот режим, если Ваша видеокамера выполняет фокусировку на ближние объекты, даже если Вы пытаетесь выполнить съемку отдаленного объекта.

Для точной фокусировки

Отрегулируйте сперва вариообъектив для фокусировки в положение "T" (телефото), а затем выполняйте съемку в положении "W" (широкого угла). Это облегчит фокусировку.

Если Вы выполняете съемку вблизи объекта

Выполните фокусировку в конце положения "W" (широкого угла).

☞ изменяется на следующие индикаторы:

▲ при записи удаленного объекта.

● если объект находится слишком близко, чтобы выполнить фокусировку на него.

Superimposing a title

You can select one of eight preset titles and two custom titles (p. 62). You can also select the language, colour, size and position of titles.

Наложение титра

Вы можете выбрать один из восьми предварительно установленных титров и два созданных Вами титра (стр. 62). Вы можете также выбрать язык, цвет, размер и положение титров.

(1) Press TITLE in the standby mode.

(2) Turn the SEL/PUSH EXEC dial to select 🗀, then press the dial.

(3) Turn the SEL/PUSH EXEC dial to select the desired title, then press the dial. The titles are displayed in the language you selected.

(4) Change the colour, size, or position, if necessary.
  ① Turn the SEL/PUSH EXEC dial to select the colour, size, or position, then press the dial. The item appears.
  ② Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial.
  ③ Repeat steps ① and ② until the title is laid out as desired.

(5) Press the SEL/PUSH EXEC dial again to complete the setting.

(6) Press START/STOP to start recording.

(7) When you want to stop recording the title, press TITLE.

(1) Нажмите кнопку TITLE в режиме ожидания.

(2) Поверните диск SEL/PUSH EXEC для выбора индикации 🗀, а затем нажмите диск.

(3) Поверните диск SEL/PUSH EXEC для выбора нужного титра, а затем нажмите диск. Титры будут отображаться на выбранном Вами языке.

(4) Измените цвет, размер или положение титра, если нужно.
  ① Поверните диск SEL/PUSH EXEC для выбора цвета, размера или положения титра, а затем нажмите диск. Появится нужный пункт.
  ② Поверните диск SEL/PUSH EXEC для выбора нужного пункта, а затем нажмите диск.
  ③ Повторяйте пункты ① и ② до тех пор, пока титр не будет выглядеть, как нужно.

(5) Нажмите диск SEL/PUSH EXEC еще раз для завершения установки.

(6) Нажмите кнопку START/STOP для начала записи.

(7) Если Вы хотите остановить запись титра, нажмите кнопку TITLE.

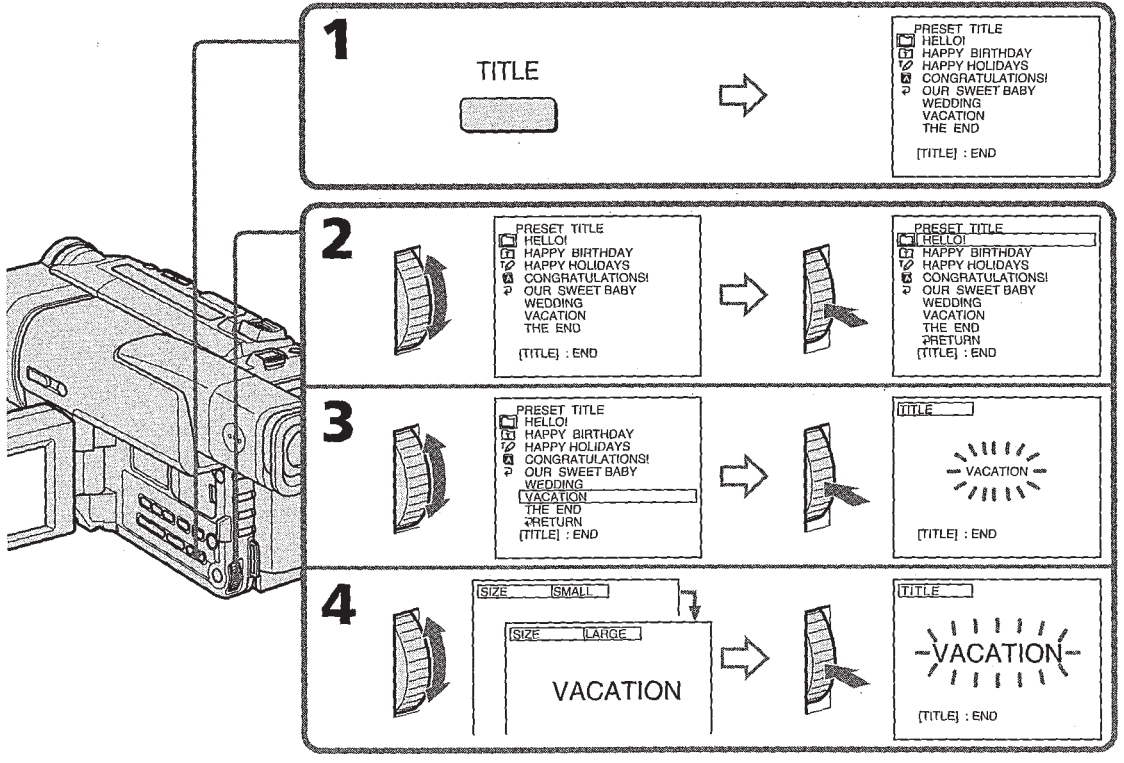

Superimposing a title

To superimpose the title while you are recording

Press TITLE while you are recording, and carry out steps 2 to 5. When you press the SEL/PUSH EXEC dial at step 5, the title is superimposed.

To select the language of a preset title

If you want to change the language, select 🅰 before step 2. Then select the desired language and return to step 2.

Note

Both the date and time or either of them may not be displayed depending on the size or position of the title.

If you display the menu or title menu while superimposing a title

The title is not recorded while the menu or title menu is displayed.

To use the custom title

If you want to use the custom title, select 🗀 in step 2.
If you have not made any custom title, "– – – – ..." appears on the display.

Title setting

- The title colour changes as follows :
  WHITE ←→ YELLOW ←→ VIOLET ←→ RED ←→ CYAN ←→ GREEN ←→ BLUE
- The title size changes as follows :
  SMALL ←→ LARGE
  You cannot input more than 13 characters in LARGE size.
- The title position changes as follows :
  1 ←→ 2 ←→ 3 ←→ 4 ←→ 5 ←→ 6 ←→ 7 ←→ 8 ←→ 9
  The larger the position number, the lower the title is positioned.
  When you select the title size "LARGE", you cannot choose position 9.
  When you select the title size "LARGE" in the CINEMA mode, you cannot choose position 8 nor 9.

When you are selecting and setting the title

You cannot superimpose the title displayed on the screen.

When you superimpose a title while you are recording

The beep does not sound.

Наложение титра

Для наложения титра во время записи

Нажмите кнопку TITLE во время записи и выполните действия пунктов со 2 по 5. Если Вы нажмете диск SEL/PUSH EXEC в пункте 5, титр будет наложен на изображение.

Для выбора языка предварительно установленного титра

Если Вы хотите изменить язык, выберите индикацию 🅰 перед выполнением действия пункта 2. Затем выберите нужный язык и вернитесь к пункту 2.

Примечание

Индикация даты и времени или же одна из них не могут отображаться на дисплее в зависимости от размера или положения титра.

Если на дисплее отображается меню или меню титров во время наложения титра

Титр не записывается во время отображения на дисплее меню или меню титров.

Для использования созданного Вами титра

Если Вы хотите использовать созданный Вами титр, выберите индикацию 🗀 в пункте 2.
Если Вы не создали своего собственного титра, на дисплее появится индикация "– – – – ...".

Установка титра

- Цвет титра изменяется следующим образом:
  WHITE (БЕЛЫЙ) ←→ YELLOW (ЖЕЛТЫЙ) ←→ VIOLET (ФИОЛЕТОВЫЙ) ←→ RED (КРАСНЫЙ) ←→ CYAN (ГОЛУБОЙ) ←→ GREEN (ЗЕЛЕНЫЙ) ←→ BLUE (СИНИЙ)
- Размер титра изменяется следующим образом:
  SMALL (МАЛЕНЬКИЙ) ←→ LARGE (БОЛЬШОЙ)
  Вы не можете ввести более 13 символов при размере LARGE.
- Положение титра изменяется следующим образом:
  1 ←→ 2 ←→ 3 ←→ 4 ←→ 5 ←→ 6 ←→ 7 ←→ 8 ←→ 9
  Чем больше номер положения титра, тем ниже будет расположен титр.
  Если Вы выберите размер "LARGE", Вы не сможете выбрать положение 9.
  Когда Вы выбираете размер титра "LARGE" в режиме CINEMA, Вы не сможете выбрать положение 8 или 9.

Во время выбора и установки титра

Вы не можете налагать на изображение титр, отображаемый на экране.

При наложении титра во время записи

Зуммерного сигнала не будет.

Making your own titles

You can make up to two titles and store them in your camcorder. Each title can have up to 20 characters.

(1) Press TITLE in the standby or PLAYER mode.

(2) Turn the SEL/PUSH EXEC dial to select ✎, then press the dial.

(3) Turn the SEL/PUSH EXEC dial to select the first line (CUSTOM1) or second line (CUSTOM2), then press the dial.

(4) Turn the SEL/PUSH EXEC dial to select the column of the desired character, then press the dial.

(5) Turn the SEL/PUSH EXEC dial to select the desired character, then press the dial.

(6) Repeat steps 4 and 5 until you have selected all characters and completed the title.

(7) To finish making your own titles, turn the SEL/PUSH EXEC dial to select [SET], then press the dial. The title is stored in memory.

(8) Press TITLE to make the title menu disappear.

Создание своих собственных титров

Вы можете создать два собственных титра и хранить их в памяти видеокамеры. Каждый титр может состоять из 20 символов.

(1) Нажмите кнопку TITLE в режиме ожидания или режиме PLAYER.

(2) Поверните диск SEL/PUSH EXEC для выбора индикации ✎, а затем нажмите диск.

(3) Поверните диск SEL/PUSH EXEC для выбора первой строки (CUSTOM1) или второй строки (CUSTOM2), а затем нажмите диск.

(4) Поверните диск SEL/PUSH EXEC для выбора колонки с нужным символом, а затем нажмите диск.

(5) Поверните диск SEL/PUSH EXEC нужного символа, а затем нажмите диск.

(6) Повторяйте действия пунктов 4 и 5 до тех пор, пока не выберите все символы и не составите полностью титр.

(7) Для завершения создания своих собственных титров поверните диск SEL/PUSH EXEC для выбора команды [SET], а затем нажмите диск. Титр будет занесен в память.

(8) Нажмите кнопку TITLE, чтобы меню титров исчезло.

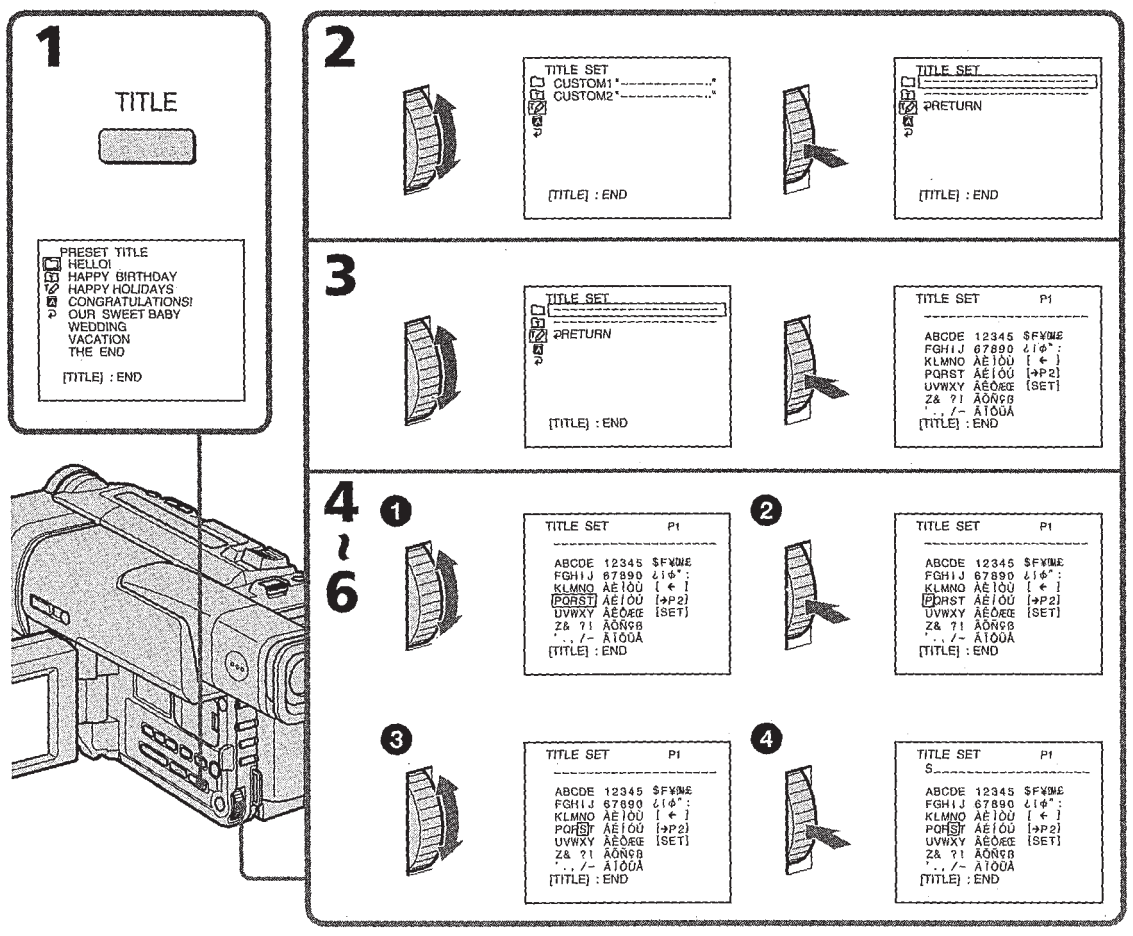

Making your own titles

To change a title you have stored

In step 3, select CUSTOM1 or CUSTOM2, depending on which title you want to change, then press the SEL/PUSH EXEC dial. Turn the SEL/PUSH EXEC dial to select [←], then press the dial to delete the title. The last character is erased. Enter the new title as desired.

If you take 5 minutes or longer to enter characters in the standby mode while a cassette is in your camcorder

The power automatically goes off. The characters you have entered remain stored in memory. Turn STANDBY down once and then up again, then proceed from step 1.

We recommend setting the POWER switch to PLAYER or removing the cassette so that your camcorder does not automatically turn off while you are entering title characters.

If you select [→P2]

The menu for selecting alphabet and Russian characters appear. Select [→P1] to return to the previous screen.

To delete the title

Select [←]. The last character is erased.

Создание своих собственных титров

Для изменения сохраненного в памяти титра

В пункте 3, выберите команду CUSTOM1 или CUSTOM2 в зависимости от того, какой титр Вы хотите изменить, а затем нажмите диск SEL/PUSH EXEC. Поверните диск SEL/PUSH EXEC для выбора индикации [←], а затем нажмите диск для удаления титра. Последний символ будет удален. Введите новый нужный символ.

Если при вводе символов пройдет 5 минут или более в режиме ожидания при вставленной кассете в Вашу видеокамеру

Питание автоматически выключится. Введенные символы будут сохранены в памяти. Поверните вниз, а затем снова вверх регулятор STANDBY, а затем выполните действия, начиная с пункта 1.

Рекомендуется установить переключатель POWER в положение PLAYER или вынуть кассету, так чтобы Ваша видеокамера автоматически не выключалась при вводе символов титров.

Если Вы выбрали команду [→P2]

Появится меню для выбора алфавита и русских букв. Выберите команду [→P1], чтобы вернуться к предыдущему экрану.

Для удаления титра

Выберите команду [←]. Последний символ будет удален.

Using the built-in light

– CCD-TRV57E/TRV67E/TRV87E only

You can use the built-in light to suit your shooting situation. The recommended distance between the subject and camcorder is about 1.5 m (5 feet).

Slide LIGHT to ON while your camcorder is in the standby mode. The built-in light turns on. The built-in light turns on/off by turning STANDBY to STANDBY/LOCK.

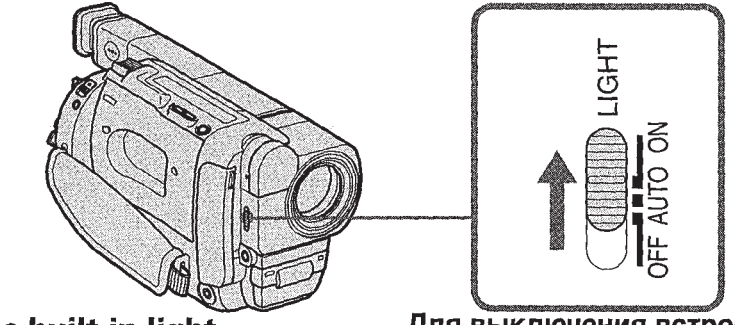

To turn off the built-in light

Slide LIGHT to OFF.

To turn on the built-in light automatically

Slide LIGHT to AUTO.

The built-in light automatically turns on and off according to the ambient brightness.

However, the built-in light automatically turns off if the built-in light turns on for more than about 5 minutes. In this case, turn STANDBY down once and up again.

CAUTION

Be careful not to touch the lighting section, because the plastic window and surrounding surfaces are hot while the light is on. It remains hot for a while after the light is turned off.

DANGER

Not to be handled by children.
Emits intense heat and light.
Use with caution to reduce the risk of fire or injury to persons.
Do not direct light at persons or materials from less than 1.22 m (4 feet) during use and until cool.
Slide LIGHT to OFF when not in use.

Использование встроенной подсветки

– Только модель CCD-TRV57E/TRV67E/TRV87E

Вы можете использовать встроенную подсветку в соответствии с условиями съемки. Рекомендуемое расстояние между объектом и видеокамерой равно около 1,5 м.

Передвиньте переключатель LIGHT в положение ON в то время, когда видеокамера находится в режиме ожидания. Встроенная подсветка включится. Встроенная подсветка включается/выключается путем поворота регулятора STANDBY положение STANDBY/LOCK.

Для выключения встроенной подсветки

Передвиньте переключатель LIGHT в положение OFF.

Для автоматического включения встроенной подсветки

Передвиньте переключатель LIGHT в положение AUTO.

Встроенная подсветка будет автоматически включаться и выключаться в соответствии с окружающими условиями освещения.

Однако, встроенная подсветка автоматически выключится, если она будет находиться во включенном состоянии около пяти минут. В этом случае, поверните регулятор STANDBY вниз и снова вверх.

ВНИМАНИЕ

Будьте осторожны, чтобы не прикасаться к секции подсветки, поскольку пластмассовое окно и прилегающая поверхность являются горячими при включенной подсветке. Эта секция будет оставаться горячей и некоторое время после выключения подсветки.

ОСТОРОЖНО

Детям пользоваться подсветкой запрещено.
Он излучает сильное тепло и свет.
Соблюдайте осторожность, чтобы не допустить случайного воспламенения предметов и не травмировать людей вокруг.
Не направляйте подсветку на людей или материалы с расстояния менее 1,22 м во время пользования аппаратом до тех пор, пока он не остынет.
Передвиньте переключатель LIGHT в положение OFF, если не будете пользоваться подсветкой.

Using the built-in light

Notes

- The battery pack is quickly discharging while the built-in light is turned on. Slide LIGHT to OFF when not in use.
- When you do not use your camcorder, slide LIGHT to OFF and remove the battery pack to avoid turning on the built-in light.
- When flickering occurs while shooting in the auto mode, slide LIGHT to ON.
- The built-in light may turn on/off when you use the PROGRAM AE or backlight function while shooting in the auto mode.
- The built-in light may be turned off when inserting or ejecting a cassette.
- While the end search function is working, the built-in light is turned off.

Replacing the bulb

Use the Sony XB-3D halogen lamp (not supplied). The supplied halogen lamp is not on the market. Purchase the Sony XB-3D halogen lamp.

Remove the power source before replacing the bulb.

(1) Remove the built-in light unit while pushing the hole under the built-in light unit using a wire.
(2) Turn the bulb housing counterclockwise and detach from the built-in light unit.
(3) Replace the bulb using a dry cloth.
(4) Attach the bulb housing turning it clockwise, then replace the built-in light unit.

Использование встроенной подсветки

Примечания

- Батарейный блок быстро разряжается при включенной подсветке. Передвиньте переключатель LIGHT в положение OFF, если подсветка не используется.
- Если Вы не используете Вашу видеокамеру, передвиньте переключатель LIGHT в положение OFF и выньте батарейный блок во избежание включения встроенной подсветки.
- В случае мерцания во время съемки в автоматическом режиме передвиньте переключатель LIGHT в положение ON.
- Встроенная подсветка может включаться/выключаться при использовании функции PROGRAM AE или функции задней подсветки во время съемки в автоматическом режиме.
- Встроенная подсветка может выключаться при установке или извлечении кассеты.
- При использовании функции поиска конца записи на ленте встроенная подсветка выключается.

Замена лампы накаливания

Используйте галогенную лампу Sony XB-3D (не прилагается). Прилагаемая галогенная лампа не поступает в розничную продажу. Приобретите галогенную лампу Sony XB-3D.

Перед заменой лампы накаливания выньте источник питания.

(1) Выньте встроенное устройство подсветки, нажав на отверстие под встроенным устройством с помощью проволоки.
(2) Поверните корпус лампы накаливания против часовой стрелки и отсоедините лампу от встроенного устройства подсветки.
(3) Установите на место лампу накаливания с помощью сухой ткани.
(4) Прикрепите корпус лампы накаливания, повернув его по часовой стрелке, и установите на место встроенное устройство подсветки.

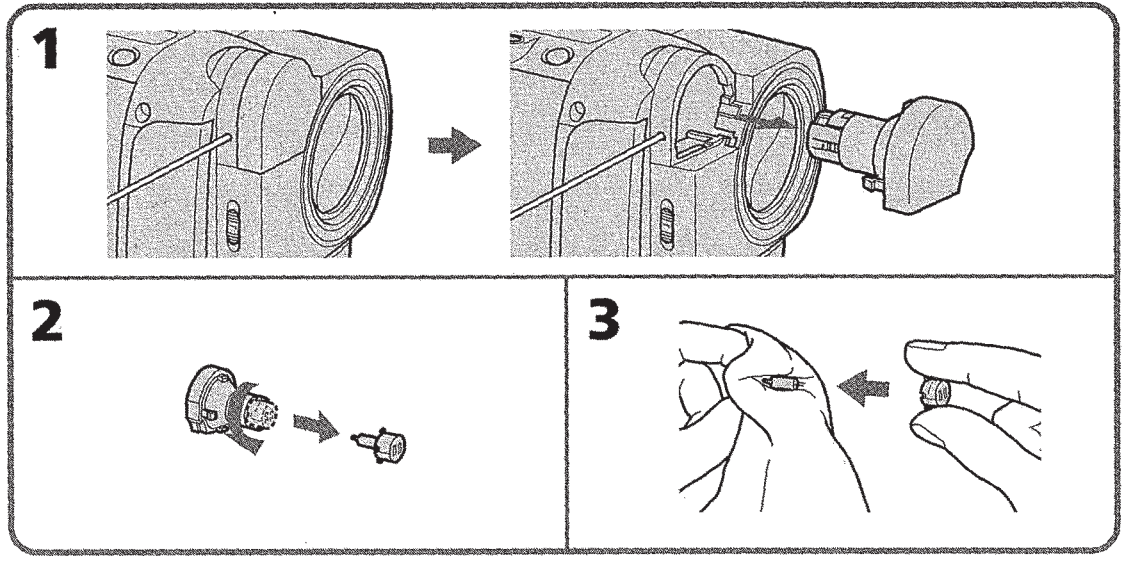

Using the built-in light

CAUTION

- When replacing the bulb, use only the Sony XB-3D halogen lamp (not supplied) to reduce the risk of fire.
- To prevent possible burn hazard, disconnect the power source before replacing and do not touch the bulb until the bulb becomes cool enough to handle (for about 30 minutes or more).

Note

To prevent the bulb from being smudged with finger prints, handle it with a dry cloth, etc. If the bulb is smudged, wipe it completely.

Использование встроенной подсветки

ВНИМАНИЕ

- При замене лампы накаливания используйте только галогенную лампу Sony XB-3D (не прилагается) для уменьшения вероятности воспламенения.
- Для предотвращения опасности получения ожога, отсоедините источник питания перед тем, как заменить лампу накаливания, и не прикасайтесь к лампе до тех пор, пока она достаточно не остынет (около 30 минут или более).

Примечание

Для предотвращения загрязнения лампы накаливания от отпечатков пальцев обращайтесь с ней осторожно, используя сухую ткань. В случае загрязнения лампы накаливания тщательно протрите ее.

— Advanced Playback Operations —

Playing back a tape with digital effects

– CCD-TRV87E only

During playback, you can process a scene using the digital effect functions: STILL, FLASH, LUMI. and TRAIL.

(1) During playback, press DIGITAL EFFECT and turn the SEL/PUSH EXEC dial until the desired digital effect indicator (STILL, FLASH, LUMI. or TRAIL) flashes.

(2) Press the SEL/PUSH EXEC dial.
The digital effect indicator lights up and the bars appear. In the STILL or LUMI. mode, the picture where you press the SEL/PUSH EXEC dial is stored in memory as a still picture.

(3) Turn the SEL/PUSH EXEC dial to adjust the effect.
For details of each digital effect function, see page 51.

— Усовершенствованные операции воспроизведения —

Воспроизведение ленты с цифровыми эффектами

– Только модель CCD-TRV87E

Во время воспроизведения, Вы можете видоизменять изображение с помощью функций: STILL, FLASH, LUMI. и TRAIL.

(1) Во время воспроизведения, нажмите кнопку DIGITAL EFFECT и поворачивайте диск SEL/PUSH EXEC до тех пор, пока не начнет мигать индикатор нужного цифрового эффекта (STILL, FLASH, LUMI. или TRAIL).

(2) Нажмите диск SEL/PUSH EXEC.
Высветится индикатор цифрового эффекта и появятся полосы. В режиме STILL или LUMI. изображение, на котором Вы нажмете кнопку диск SEL/PUSH EXEC, будет занесено в память как неподвижное изображение.

(3) Поверните диск SEL/PUSH EXEC для регулировки эффекта изображения.
Подробные сведения по каждой функции цифровых эффектов приведены на стр. 51.

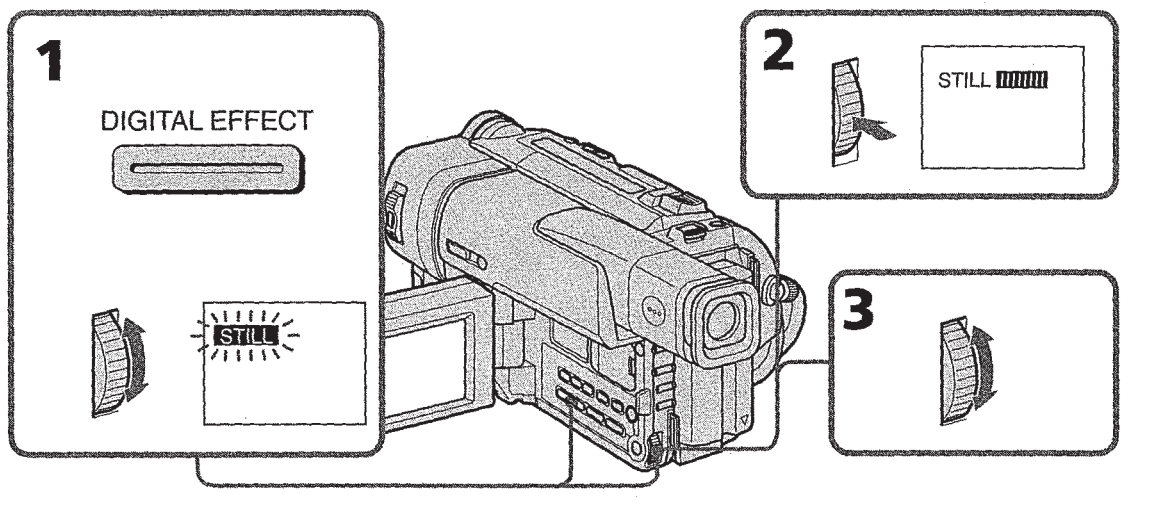

To cancel the digital effect function

Press DIGITAL EFFECT.

Notes

- You cannot process externally input scenes using the digital effect function.
- To record pictures that you have processed using the digital effect function, record the pictures on the VCR.

STILL and LUMI. modes

- You can search a picture to image-process by pressing ►► or ◄◄ in the playback mode. However, noise appears on the picture.
- You cannot delete a picture stored in memory even if you stop playing back a tape.

When you set the POWER switch to OFF (CHARGE)

The digital effect function is automatically canceled.

Для отмены функции цифровых эффектов

Нажмите кнопку DIGITAL EFFECT.

Примечания

- Вы не можете обрабатывать внутренне введеные сцены с использованием функции цифровых эффектов.
- Для записи изображений, которые обработаны с использованием функции цифровых эффектов, записывайте изображения на КВМ.

Режимы STILL и LUMI.

- Вы можете выполнять поиск видоизмененного изображения, нажимая кнопку ►► или ◄◄ в режиме воспроизведения. Однако, на изображении появятся помехи.
- Вы не можете удалить изображение, сохраненное в памяти, даже если Вы остановите воспроизведение ленты.

Если Вы установите переключатель POWER в положение OFF (CHARGE)

Функция цифровых эффектов будет автоматически отменена.

— Editing —

Dubbing a tape

Using the A/V connecting cable or S video connecting cable (not supplied)

Connect your camcorder to the VCR using the A/V connecting cable supplied with your camcorder.

(1) Insert a blank tape (or a tape you want to record over) into the VCR, and insert the recorded tape into your camcorder.

(2) Set the input selector on the VCR to LINE.
Refer to the operating instructions of your VCR for more information.

(3) Set the POWER switch to PLAYER.

(4) Play back the recorded tape on your camcorder.

(5) Start recording on the VCR.
Refer to the operating instructions of your VCR for more information.

—Монтаж —

Перезапись ленты

Использование соединительного кабеля аудио/видео или соединительного кабеля S-видео (не прилагается)

Подсоедините Вашу видеокамеру к КВМ с помощью соединительного кабеля аудио/видео, который прилагается к Вашей видеокамере.

(1) Вставьте незаписанную ленту (или ленту, на которую Вы хотите выполнить запись) в КВМ и вставьте записанную ленту в Вашу видеокамеру.

(2) Установите селектор на КВМ в положение LINE. Смотрите инструкцию по эесплуатации Вашего КВМ для получения дальнейшей информации.

(3) Установите переключатель POWER в положение PLAYER.

(4) Начните воспроизведение записанной ленты на Вашей видеокамере.

(5) Начните запись на Вашем КВМ.
Смотрите инструкцию по эесплуатации Вашего КВМ для получения дальнейшей информации.

CCD-TRV37E/TRV48E/TRV57E/TRV67E

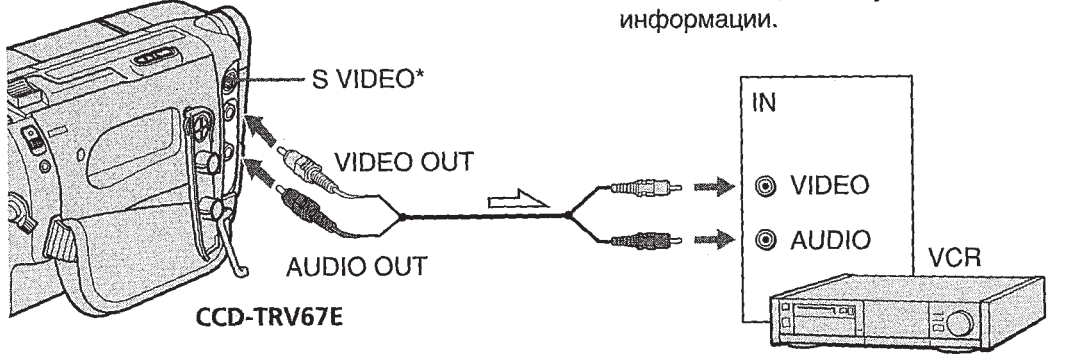

⇨ : Signal flow/Передача сигнала

* CCD-TRV67E only/только модель CCD-TRV67E

CCD-TRV87E

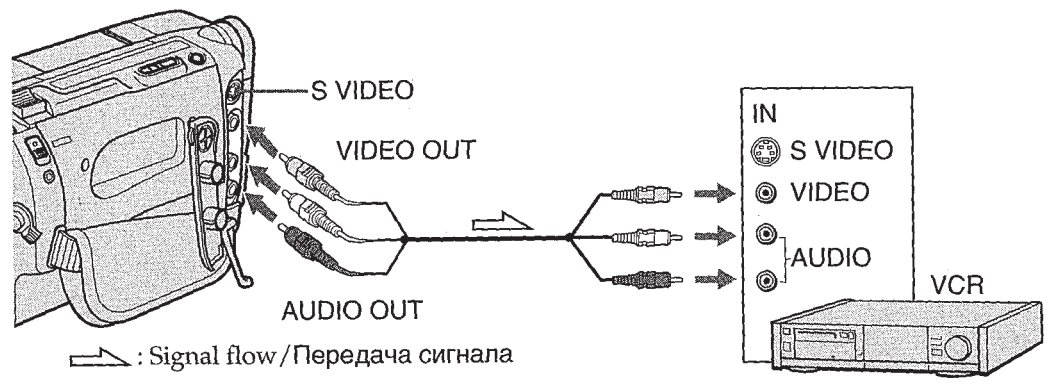

⇨ : Signal flow/Передача сигнала

Dubbing a tape

When you have finished dubbing a tape

Press ■ on both your camcorder and the VCR.

To prevent deterioration of pictures from dubbing

Set EDIT to ON in the menu settings before dubbing.

If you have displayed the screen indicators on the TV

Make the indicators disappear by pressing DISPLAY so that they will not be superimposed on the edited tape.

You can edit on VCRs that support the following systems

8 8 mm, Hi8 Hi8, D Digital8, VHS VHS, SVHS S-VHS, VHSC VHSC, SVHSC S-VHSC, β Betamax, Mini DV mini DV or DV DV

If your VCR is a monaural type (CCD-TRV87E only)

Connect the yellow plug for video and the white plug for audio on both your camcorder and the VCR. You do not connect the red plug. With this connection, the sound will be monaural.

Connect using an S video cable (not supplied) to obtain high-quality pictures (CCD-TRV67E/TRV87E only)

With this connection, you do not need to connect the yellow (video) plug of the A/V connecting cable.
Connect an S video cable (not supplied) to the S video jacks of both your camcorder and the VCR.

Перезапись ленты

Если Вы закончили перезапись ленты

Нажмите кнопку ■ как на видеокамере, так и на КВМ.

Для предотвращения ухудшения изображения при перезаписи

Перед выполнением перезаписи установите переключатель EDIT на ON в установках меню.

При отображении экранных индикаторов на экране телевизора

Добейтесь того, чтобы индикаторы исчезли, нажав кнопку DISPLAY, так чтобы они не были наложены на монтажную ленту.

Вы можете выполнять монтаж на КВМ, которые совместимы со следующими системами

8 8 mm, Hi8 Hi8, D Digital8, VHS VHS, SVHS S-VHS, VHSC VHSC, SVHSC S-VHSC, β Betamax, Mini DV mini DV или DV DV

Если Ваш КВМ монофонического типа (только модель CCD-TRV87E)

Подсоедините желтый штекер для видеосигнала, а белый штекер для аудиосигнала к видеокамере и к КВМ. Вам не нужно подсоединять красный штекер. При таком подсоединении звук будет монофоническим.

Выполните подсоединение с помощью кабеля S видео (не прилагается) для получения высококачественных изображений (только модель CCD-TRV67E/TRV87E)

При таком подсоединении Вам не нужно подсоединять желтый (видео) штекер соединительного кабеля аудио/видео.
Подсоедините кабель S видео (не прилагается) к гнездам S видео на Вашей видеокамере и КВМ.

— Customizing Your Camcorder —

Changing the menu settings

To change the mode settings in the menu settings, select the menu items with the SEL/PUSH EXEC dial. The default settings can be partially changed. First, select the icon, then the menu item and then the mode.

(1) In the standby or PLAYER mode, press MENU.

(2) Turn the SEL/PUSH EXEC dial to select the desired icon, then press the dial to set.

(3) Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial to set.

(4) Turn the SEL/PUSH EXEC dial to select the desired mode, and press the dial to set.

(5) If you want to change other items, select ⮐ RETURN and press the dial, then repeat steps from 2 to 4.
For details, see “Selecting the mode setting of each item” (p. 72).

— Выполнение индивидуальных установок на видеокамере —

Изменение установок меню

Для изменения установок режима в установках меню выберите пункты меню с помощью диска SEL/PUSH EXEC. Установки по умолчанию может быть частично изменены. Сначала выберите пиктограмму, затем пункт меню, а затем режим.

(1) В режиме ожидания или режиме PLAYER нажмите кнопку MENU.

(2) Поверните диск SEL/PUSH EXEC для выбора нужной пиктограммы, а затем нажмите диск для установки.

(3) Поверните диск SEL/PUSH EXEC для выбора нужной пиктограммы, а затем нажмите диск для установки.

(4) Поверните диск SEL/PUSH EXEC для выбора нужной пиктограммы, а затем нажмите диск для установки.

(5) Если Вы хотите изменить другие пункты, выберите команду ⮐ RETURN, а затем нажмите диск, после чего повторите действия пунктов со 2 по 4.
Подробные сведения приведены в разделе “Выбор установок режима по каждому пункту” (стр. 77).

Changing the menu settings

Изменение установок меню

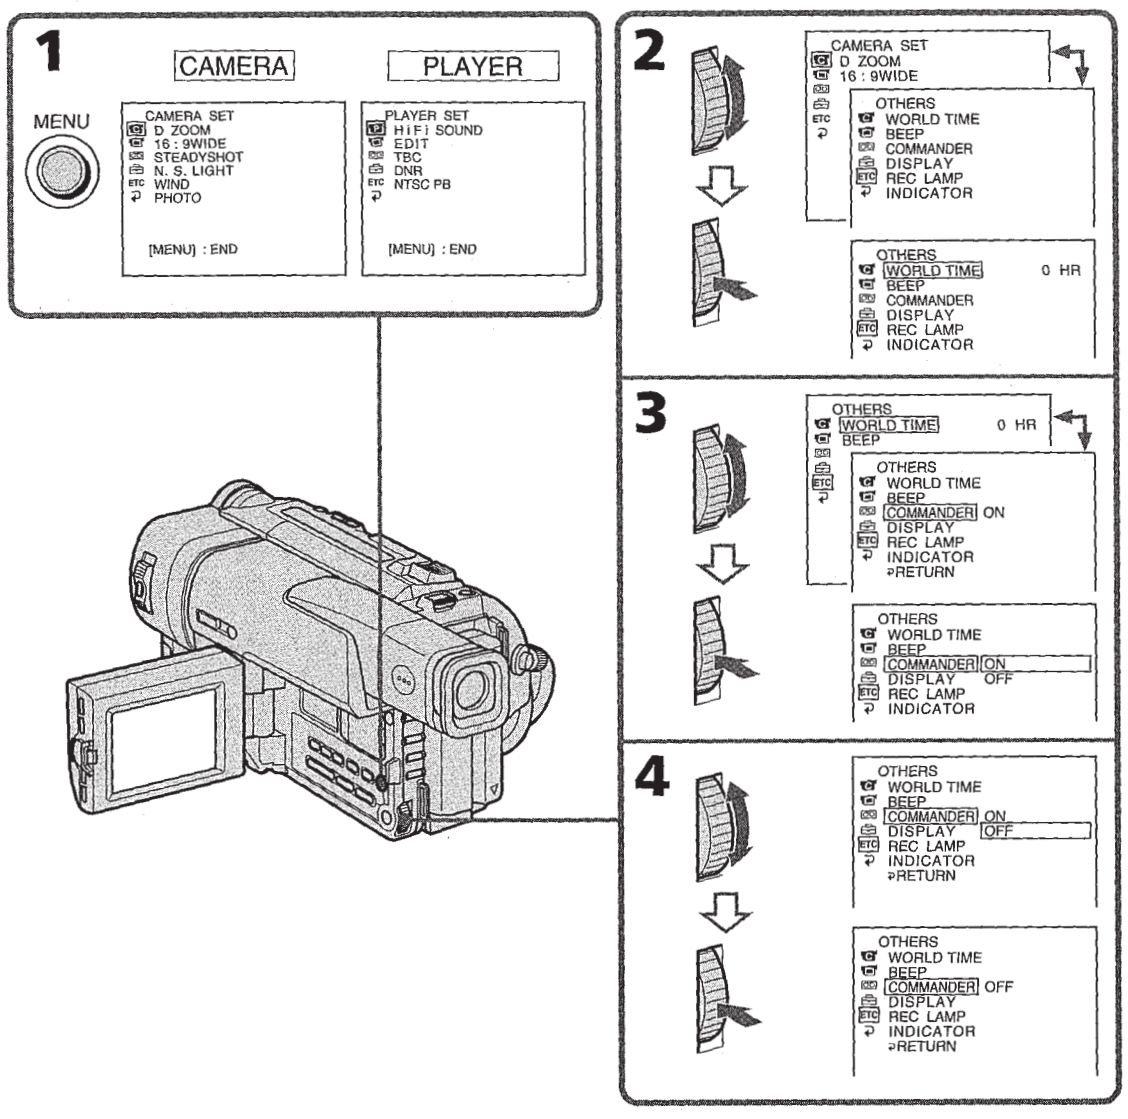

To make the menu display disappear
Press MENU.

Для того, чтобы исчезла индикация меню
Нажмите кнопку MENU.

Changing the menu settings

Изменение установок меню

Menu items are displayed as the following icons:

- CAMERA SET
- PLAYER SET
- LCD SET
- TAPE SET
- SETUP MENU
- OTHERS

Depending on your camcorder model
The menu display may be different from that in this illustration.

Пункты меню отображаются в виде следующих пиктограмм:

- CAMERA SET
- PLAYER SET
- LCD SET
- TAPE SET
- SETUP MENU
- OTHERS

В зависимости от модели Вашей видеокамеры
Дисплей меню может отличаться от от того, что приведен на рисунке.

English

Selecting the mode setting of each item ● is the default setting.

Menu items differ according to whether the POWER switch is set to PLAYER or CAMERA.
The LCD screen shows only the items you operte at the moment.

Icon/item	Mode	Meaning	POWER switch
D ZOOM	● OFF	If you set to OFF, digital zoom is deactivated and up to 20× is carried out.	CAMERA
	ON*	If you set to ON, digital zoom is activated and more than 20× to 40× is performed digitally. (p. 25) (CCD-TRV37E only)	
	● OFF	If you set to OFF, digital zoom is deactivated and up to 20× is carried out.	
	40× 80×**	If you set to 40×/80×, digital zoom is activated and more than 20× to 40×/80× is performed digitally. (p. 25) (CCD-TRV48E/TRV57E/TRV67E/TRV87E only)	
16:9WIDE	● OFF	—	CAMERA
	CINEMA	To record in the CINEMA mode (p. 44)	
	16:9FULL	To record in the 16:9FULL mode	
STEADYSHOT (CCD-TRV57E/TRV67E/TRV87E only)	● ON	To compensate for camera-shake	CAMERA
	OFF	To cancel the SteadyShot function. Natural pictures are produced when shooting a stationary object with a tripod.	
N.S.LIGHT	● ON	To use the NightShot Light function (p. 29)	CAMERA
	OFF	To cancel the NightShot Light function	
WIND (CCD-TRV87E only)	● OFF	—	CAMERA
	ON	To reduce wind noise when recording in strong wind	
PHOTO (CCD-TRV87E only)	● NORMAL	To activate the normal photo function	CAMERA
	FADE	To activate the fade photo function	
	SHUTTER	To activate the shutter photo function	

* 40×/240× in some areas
** 360× in some areas

Notes on the SteadyShot function (CCD-TRV57E/TRV67E/TRV87E only)
- The SteadyShot function will not correct excessive camera-shake.
- Attachment of a conversion lens (not supplied) may influence the SteadyShot function.
- SteadyShot does not operate in the 16:9FULL mode. If you set STEADYSHOT to ON in the menu settings, the "" indicator flashes.

If you cancel the SteadyShot function (CCD-TRV57E/TRV67E/TRV87E only)
The SteadyShot off indicator "" appears. Your camcorder prevents excessive compensation for camera-shake.

Changing the menu settings

Icon/item	Mode	Meaning	POWER switch
HiFi SOUND (CCD-TRV87E only)	● STEREO	To play back a stereo tape or dual sound track tape	PLAYER
	1	To play back a monaural tape or dual sound track tape with main sound	
	2	To play back a dual sound track tape with sub sound	
EDIT	● OFF	—	PLAYER
	ON	To minimize picture deterioration when editing	
TBC	● ON	To correct jitter	PLAYER
	OFF	To not correct jitter. Set TBC to OFF when playing back a tape on which you have dubbed over and recorded the signal of a TV game or similar machine.	
TBC stands for "Time Base Corrector".			
DNR	● ON	To reduce picture noise	PLAYER
	OFF	To reduce a conspicuous afterimage when the picture has a lot of movement	
DNR stands for "Digital Noise Reduction".			
NTSC PB	● ON PAL TV	To play back a tape recorded in the NTSC colour system on a PAL system TV	PLAYER
	NTSC 4.43	To play back a tape recorded in the NTSC colour system on a TV with the NTSC 4.43 mode	
LCD B. L.	● BRT NORMAL	To set the brightness on the LCD screen normal	PLAYER CAMERA
	BRIGHT	To brighten the LCD screen	
LCD COLOUR		To adjust the colour on the LCD screen 	PLAYER CAMERA

Note on the playback of the NTSC tapes
You can play back tapes recorded in the NTSC video system.
When you play back a tape on a Multi System TV, select the best mode while viewing the picture on the TV.

In more than 5 minutes after removing the power source
The "WIND" (CCD-TRV87E only) "COMMANDER" (CCD-TRV48E/TRV57E/TRV67E/TRV87E only) "EDIT" and "HiFi SOUND" (CCD-TRV87E only) items are returned to their default settings.
The other menu items are held in memory even when the battery is removed, as long as the lithium battery is installed.

Note on LCD B.L.
When you use power sources other than the battery pack, "BRIGHT" is automatically selected.

Changing the menu settings

Icon/item	Mode	Meaning	POWER switch
REC MODE	● SP	To record in SP (Standard Play) mode	CAMERA
	LP	To increase the recording time to twice the SP mode	
ORC TO SET		To automatically adjust the recording condition to get the best possible recording. Press START/STOP to start adjustment. Your camcorder takes about 10 seconds to check the tape condition and then returns to the standby mode.	CAMERA
ORC stands for "Optimizing the Recording Condition".			
REMAIN	● AUTO	To display the remaining tape bar: • for about 8 seconds after your camcorder is turned on and calculates the remaining amount of tape • for about 8 seconds after a cassette is inserted and your camcorder calculates the remaining amount of tape • for about 8 seconds after ► is pressed in PLAYER mode • for about 8 seconds after DISPLAY is pressed to display the screen indicators • for the period of tape rewinding, forwarding or picture search in the PLAYER mode	PLAYER CAMERA
	ON	To always display the remaining tape bar	

Notes on the LP mode
- When you record a tape in the LP mode on your camcorder, we recommend playing the tape on your camcorder. When you play back the tape on other camcorders or VCRs, noise may occur in pictures or sound.
- Noise may occur also when you play on your camcorder tapes recorded in the LP mode on other camcorders or VCRs.

Notes on ORC setting
- Each time you eject the cassette, the ORC setting will be canceled. If necessary, reset the setting.
- You cannot use this setting on a tape with the red mark on the cassette exposed.
  (i. e. the tape is write-protected)
- When you set ORC TO SET, a non-recorded section of about 0.1 seconds appears on the tape. However, note that this non-recorded section disappears from the tape when you continue recording from this section.
- To check if you have already set the ORC setting, select ORC TO SET in the menu settings. "ORC ON" is displayed if ORC TO SET is already set.

Changing the menu settings

Icon/item	Mode	Meaning	POWER switch
🗄 **CLOCK SET**		To reset the date or time (p. 82)	CAMERA
AUTO DATE	● ON	To record the date for 10 seconds after recording has started	CAMERA
	OFF	To cancel the auto date function	
LTR SIZE	● NORMAL	To display selected menu items in normal size	PLAYER CAMERA
	2×	To display selected menu items at twice the normal size	
DEMO MODE	● ON	To make the demonstration appear	CAMERA
	OFF	To cancel the demonstration mode	

Notes on DEMO MODE

- You cannot select DEMO MODE when a cassette is inserted in your camcorder.
- DEMO MODE is set to STBY (Standby) at the factory and the demonstration starts about 10 minutes after you have set the POWER switch to CAMERA without a cassette inserted.
  To cancel the demonstration, insert a cassette, set the POWER switch to other than CAMERA, or set DEMO MODE to OFF.
- When NIGHTSHOT is set to ON, the NIGHTSHOT indicator appears in the viewfinder or on the LCD screen and you cannot select DEMO MODE in the menu settings.

Changing the menu settings

Icon/item	Mode	Meaning	POWER switch
ETC **WORLD TIME**		To set the clock to the local time. Turn the SEL/PUSH EXEC dial to set a time difference. The clock changes by the time difference you set here. If you set the time difference to 0, the clock returns to the originally set time.	CAMERA
BEEP	● MELODY	To output the melody when you start/stop recording or when an unusual condition occurs on your camcorder	PLAYER CAMERA
	NORMAL	To output the beep sound instead of the melody	
	OFF	To cancel the melody and beep sound	
COMMANDER (CCD-TRV48E/TRV57E/TRV67E/TRV87E only)	● ON	To activate the Remote Commander supplied with your camcorder	PLAYER CAMERA
	OFF	To deactivate the Remote Commander to avoid remote control misoperation caused by other VCR's remote control	
DISPLAY	● LCD	To show the display on the LCD screen and viewfinder	PLAYER CAMERA
	V-OUT/LCD	To show the display on the TV screen, LCD screen and viewfinder	
REC LAMP	● ON	To light up the camera recording lamp at the front of your camcorder	CAMERA
	OFF	To turn the camera recording lamp off so that the subject is not aware of the recording	
INDICATOR (CCD-TRV87E only)	● BL OFF	To turn off the backlight on display window	PLAYER CAMERA
	BL ON	To turn on the backlight	

Note (CCD-TRV87E only)

If you press DISPLAY with "DISPLAY" set to "V-OUT/LCD" in the menu settings, the picture from a TV or VCR will not appear on the LCD screen even when your camcorder is connected to outputs on the TV or VCR.

Notes on INDICATOR (CCD-TRV87E only)

- When you select "BL ON", battery life is reduced by about 10 percent during recording.
- When you use power sources other than the battery pack, "BL ON" is automatically selected.

Resetting the date and time

The default clock setting is set to London time for United Kingdom and to Paris time for the other European countries.
The date and time are held in memory by the lithium battery. If you replace the lithium battery with the battery pack or other power source connected, you need not reset the date and time. You must reset the date and time when the lithium battery becomes dead with no power source installed.
First, set the year, then the month, the day, the hour and then the minute.

(1) While your camcorder is in the standby mode, press MENU to display the menu.
(2) Turn the SEL/PUSH EXEC dial to select 🗄, then press the dial.
(3) Turn the SEL/PUSH EXEC dial to select CLOCK SET, then press the dial.
(4) Turn the SEL/PUSH EXEC dial to adjust the desired year, then press the dial.
(5) Set the month, day and hour by turning the SEL/PUSH EXEC dial and pressing the dial.
(6) Set the minute by turning the SEL/PUSH EXEC dial and pressing the dial by the time signal. The clock starts to move.
(7) Press MENU to make the menu disappear. The time indicator appears.

Переустановка даты и времени

Часы установлены по умолчанию на время Лондона для моделей Соединенного Королевства и на время Парижа для моделей других европейских стран.
Дата и время сохраняются в памяти с помощью литиевой батарейки. Если Вы от литиевой батарейки переключитесь на батарейный блок или другой подсоединенный источник питания, Вам нужно будет переустановить дату и время. Вам нужно также переустановить дату и время, когда литиевая батарейка разрядится и в это время не будет вставлен источник питания.
Сначала установите год, затем месяц, день, час и минуту.

(1) В режиме ожидания видеокамеры нажмите кнопку MENU для отображения меню.
(2) Поверните диск SEL/PUSH EXEC для выбора индикации 🗄, а затем нажмите диск.
(3) Поверните диск SEL/PUSH EXEC для выбора команды CLOCK SET, а затем нажмите диск.
(4) Поверните диск SEL/PUSH EXEC для выбора нужного года, а затем нажмите диск.
(5) Установите месяц, день и час путем вращения диска SEL/PUSH EXEC и нажимания диска.
(6) Установите минуту путем вращения диска SEL/PUSH EXEC и нажимания диска в момент передачи сигнала точного времени. Часы начнут функционировать.
(7) Нажмите кнопку MENU для того, чтобы исчезло меню. Появится индикатор времени.

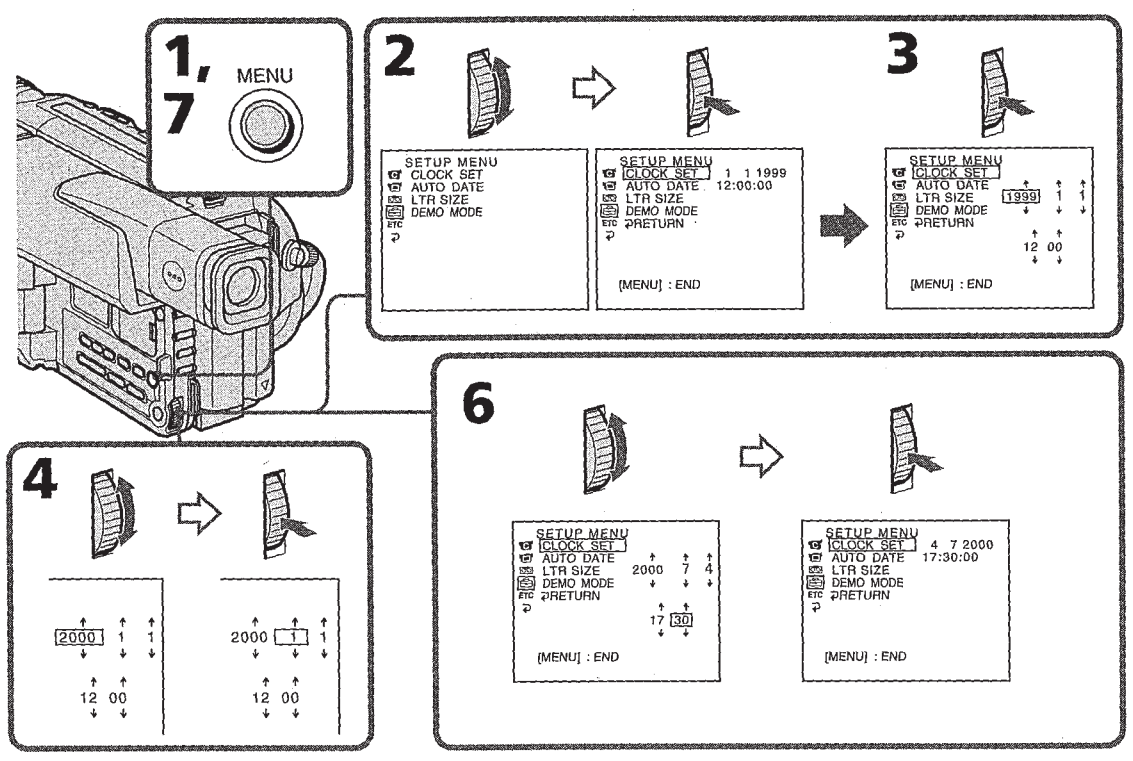

Resetting the date and time

To check the preset date and time

Press DATE to display the date indicator.
Press TIME to display the time indicator.
Press DATE (or TIME) and then press TIME (or DATE) to simultaneously display the date and time indicator.
Press DATE and/or TIME again. The date and/or time indicator disappears.

The year changes as follows:

1999 ↔ 2000 ← ···· → 2029

Auto date function

When you use your camcorder for the first time, turn it on and reset the date and time to your time before you start recording (p. 82). The date is automatically recorded for 10 seconds after you start recording **(Auto date function)**. This function works only once a day.

Note on the time indicator

The internal clock of your camcorder operates on a 24-hour cycle.

Note on the auto date function

You can change the AUTO DATE setting by selecting ON or OFF in the menu settings. The auto date function automatically displays the date once a day.
However, the date may automatically appear more than once a day if:

- you reset the date and time.
- you eject and insert the tape again.
- you stop recording within 10 seconds.
- you set AUTO DATE to OFF once and set it back ON in the menu settings.

Переустановка даты и времени

Для проверки предварительно установленных даты и времени

Нажмите кнопку DATE для отображения индикатора даты. Нажмите кнопку TIME для отображения индикатора времени. Нажмите кнопку DATE (или TIME), а затем нажмите кнопку TIME (или DATE) для одновременного отображения индикатора даты и времени. Нажмите еще раз кнопку DATE и/или TIME. Индикатор даты и/или времени исчезнет.

Год изменяется следующим образом:

1999 ↔ 2000 ← ···· → 2029

Функция автоматической даты

Если Вы используете видеокамеру первый раз, включите ее и переустановите дату и время в соответствии со своим часовым поясом, прежде чем начать запись (стр. 82). Даты будет автоматически записываться в течение 10 секунд после начала записи **(функция автоматической даты)**. Эта функция работает один раз в день.

Примечание по индикатору времени

Встроенные часы Вашей видеокамеры работают в 24-часовом режиме.

Примечание по функции автоматической даты

Вы можете изменять установку AUTO DATE путем выбора положений ON или OFF в установках меню. Функция автоматической даты автоматически отбражает дату один раз в день.
Однако, дата может автоматически появляться больше одного раза при:

- переустановке даты и времени.
- выталкивании и установке ленты обратно на место.
- остановке записи в пределах 10 секунд.
- установке команды AUTO DATE в положение OFF и возвращении в положение ON в установках меню.

— Additional Information —

Usable cassettes and playback modes

Selecting the cassette type

– CCD-TRV67E/TRV87E only

You can use both Hi8 and standard 8 mm video cassettes on your camcorder. When you use a Hi8 video cassette, recording and playback are carried out in the Hi8 system. When you use a standard 8 mm video cassette, recording and playback are carried out in the standard 8 mm system.
If you play back a tape recorded on a different video recorder on your camcorder, the playback mode is automatically selected according to the format in which the tape has been recorded.

This Hi8 system is an extension of the standard 8 mm system, and was developed to produce higher quality pictures.
You cannot playback a tape recorded in the Hi8 system correctly on video recorder/players other than a Hi8 video recorder/player.

What is Video 8 XR/video Hi8 XR ?

– CCD-TRV37E/TRV48E/TRV57E/TRV87E only

"Video 8 XR"/"video Hi8 XR" is a function that further enhances the image quality of Video 8/video Hi8. This function allows you to record and playback pictures with clearer details.
Video tapes recorded on a camcorder having the "XR" function show excellent picture quality when they are played back on an "XR" camcorder.
The playback quality will be the normal quality of the standard 8 mm/Hi8 camcorder when video tapes recorded on an "XR" camcorder are played back by a conventional standard 8 mm/Hi8 camcorder or when video tapes recorded on a conventional standard 8 mm/Hi8 camcorder are played back on the "XR" camcorder.

* "XR" stands for "Extended Resolution."

— Дополнительная информация —

Используемые кассеты и режимы воспроизведения

Выбор типа кассеты

– Только модель CCD-TRV67E/TRV87E

Вы можете использовать на Вашей видеокамере либо видеокассеты Hi8, либо стандартные 8-мм видеокассеты. Если Вы используете видеокассету Hi8, запись и воспроизведение будут выполняться в системе Hi8. Если Вы используете стандартную 8-мм видеокассету, запись и воспроизведение будут выполняться в стандартной 8-мм системе.
Если Вы будете воспроизводить на Вашей видеокамере ленту, записанную на разных видеомагнитофонах, то режим воспроизведения будет выбираться автоматически в соответствии с форматом, в котором была записана лента.

Система Hi8 является модификацией стандартной 8-мм системы и была разработана для получения высококачественных изображений.
Вы не сможете воспроизвести надлежащим образом ленту, записанную в системе Hi8, на видеомагнитофоне/плейере, который не относится к видеомагнитофону/плейеру Hi8.

Что такое Video 8 XR/video Hi8 XR ?

– Только модель CCD-TRV37E/TRV48E/TRV57E/TRV87E

"Video 8 XR"/"video Hi8 XR" является функцией, которая еще больше повышает качество изображения формата Video 8/video Hi8. Эта функция позволяет Вам записывать и воспроизводить изображения с утонченными деталями.
Видеоленты, записанные на видеокамере, имеющей функцию "XR", обеспечивают превосходное качество изображения при воспроизведении на видеокамере "XR".
Качество воспроизведения будет обычным качеством видеокамеры стандарта 8 мм/Hi8, когда видеоленты, записанные на видеокамере "XR", воспроизводятся на обычной видеокамере стандарта 8 мм/Hi8 или когда видеоленты, записанные на обычной видеокамере, воспроизводятся на видеокамере "XR".

* "XR" означает "улучшенная разрешающая способность".

When you play back

The playback mode (SP/LP) and system, Hi8 or standard 8 mm(CCD-TRV67E/TRV87E only) are automatically selected according to the format in which the tape has been recorded. The quality of the recorded picture in the LP mode, however, will not be as good as the SP mode.

Note on AFM HiFi stereo

– CCD-TRV87E only

When you play back a tape, the sound will be monaural if:
- You record the tape on your camcorder, then play it back on an AFM HiFi monaural video recorder/player.
- You record the tape on an AFM HiFi monaural video recorder, then play it back on your camcorder.

Foreign 8 mm video

Because TV colour systems differ from country to country, you may not be able to play back foreign pre-recorded tapes. Refer to "Using your camcorder abroad" to check the TV colour systems used in foreign countries.

Playing back an NTSC-recorded tape

You can play back tapes recorded in the NTSC video system using the SP mode.
If the tape is recorded in the AFM HiFi system, the AFM HiFi sound is reproduced. (CCD-TRV87E only)
However, note that the following will occur during playback of an NTSC-recorded tape.
- When playing back a tape on a TV screen, you may not get the original colour depending on the TV. When you play back on a Multi System TV, set NTSC PB to the desired mode in the menu settings.
- During playback, a black band appears on the lower part of the viewfinder.
- You cannot play back a tape recorded in the NTSC video system with the LP mode neither on the LCD nor on a TV screen.
- If a tape has portions recorded in PAL and NTSC video systems, the tape counter reading is not correct. This discrepancy is due to the difference between the counting cycle of the two video systems.
- You cannot edit the NTSC-recorded tape onto another VCR.

При выполнении воспроизведения

Режим воспроизведения (SP/LP) и система, Hi8/стандартная 8-мм система (только модель CCD-TRV67E/TRV87E) выбираются автоматически в соответствии с форматом, в котором была выполнена запись на ленте. Однако, качество записанного изображения в режиме LP не будет таким хорошим, как в режиме SP.

Примечание по системе AFM HiFi

– Только модель CCD-TRV87E

При воспроизведении ленты звук будет монофоническим, если:
- Вы запишите ленту на Вашем компьютере, а затем будете воспроизводить ее на монофоническом видеомагнитофоне/плейере AFM HiFi.
- Вы запишите ленту на монофоническом видеомагнитофоне/плейере AFM HiFi, а затем будете воспроизводить на Вашем компьютере.

Иностранные 8-мм видеоленты

Поскольку системы цветного телевидения отличаются от страны к стране, возможно Вы не сможете воспроизводить иностранные предварительно записанные ленты. См. раздел "Использование Вашей видеокамеры за границей" для проверки систем цветного телевидения, используемых в других странах.

Воспроизведение лент, записанных в системе NTSC

Вы можете воспроизводить ленты, записанные в системе NTSC, используя режим SP.
Если лента записана в системе AFM HiFi, то будет воспроизводиться звук AFM HiFi. (Только модель CCD-TRV87E)
Однако, имейте в виду, что во время воспроизведения лент, записанных в системе NTSC, будет иметь место следующее.
- При воспроизведении ленты на экране телевизора Вы можете не получить первоначальные цвета в зависимости от типа телевизора. При воспроизведении на мультисистемном телевизоре установите переключатель NTSC PB на нужный режим в установках меню.
- Во время воспроизведения в нижней части видоискателя будет появляться черная полоса.
- Вы не можете воспроизводить ленту, записанную в видеосистеме NTSC в режиме LP, ни на экране ЖКД, ни на экране телевизора.
- Если на ленте имеются участки, записанные в видеосистемах PAL и NTSC, то функционирование счетчика ленты будет неправильным. Это расхождение объясняется разницей между счетными циклами двух видеосистем.
- Вы не можете выполнять монтаж ленты, записанной в системе NTSC, на другой КВМ.

When you play back a dual sound track tape

– CCD-TRV87E only

When you play back a dual sound track tape recorded in an AFM HiFi stereo system, set "HiFi SOUND" to the desired mode in the menu settings (p. 70).

Sound from speaker

HiFi Sound Mode	Playing back a stereo tape	Playing back a dual sound track tape
STEREO	Stereo	Main sound and sub sound
1	Monaural	Main sound
2	Unnatural sound	Sub sound

You cannot record dual sound programmes on your camcorder.

При воспроизведении ленты с двойной звуковой дорожкой

– Только модель CCD-TRV87E

При воспроизведении ленты с двойной звуковой дорожкой на стереофонической системе AFM HiFi установите команду "HiFi SOUND" на нужный режим в установках меню (стр. 70).

Звук от динамика

Режим звучания HiFi	Воспроизведение стереофонической ленты	Воспроизведение ленты с двойной звуковой дорожкой
STEREO	Стерео	Главный звук и вспомогательный звук
1	Монофонический звук	Главный звук
2	Необычный звук	Вспомогательный звук

Вы не можете записывать программы с двойным звучанием на Вашей видеокамере.

Changing the lithium battery in your camcorder

When replacing the lithium battery, keep the battery pack or other power source attached. Otherwise, you will need to reset the date, time and other items in the menu settings hold in memory by the lithium battery.

Insert the battery with the positive (+) side facing out. When the battery becomes weak or dead, the 🔋 indicator flashes in the viewfinder for about 5 seconds when you set the POWER switch to CAMERA. In this case, **replace the battery with a Sony CR2025 lithium battery. Use of any other battery may present a risk of fire or explosion.** Discard used batteries according to the manufacturer's instructions.

Замена литиевой батарейки в Вашей видеокамере

При замене литиевой батарейки батарейный блок или другой источник питания должен быть прикреплен к видеокамере. В противном случае Вам понадобится переустанавливать дату, время и другие пункты в установках меню, хранимых в памяти видеокамеры с помощью литиевой батарейки.

Вставьте батарейку так, чтобы положительный (+) полюс был обращен наружу. Если батарейка станет или разрядится, индикатор 🔋 будет мигать в видоискателе около 5 секунд, если переключатель POWER установлен в положение CAMERA. В этом случае, **замените батарейку на аналогичную литиевую батарейку Sony CR2025. Использование какой-либо другой батарейки создает риск воспламенения или взрыва.** Ликвидируйте использованные батарейки в соответствии с инструкциями предприятия-изготовителя.



WARNING

The battery may explode if mistreated. Do not recharge, disassemble, nor dispose of it in fire.

Lithium battery
- Keep the lithium battery out of the reach of children.
- Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to ensure good contact.

Lithium battery installed at the factory

This battery may not last 1 year.

ПРЕДУПРЕЖДЕНИЕ

Если с батарейкой неправильно обращаться, она может взорваться. Не перезаряжайте, не разбирайте и не бросайте в огонь батарейку.

Литиевая батарейка
- Храните литиевую батарейку в месте, не доступном для детей.
- В случае, если кто-либо случайно проглотит батарейку, следует немедленно обратиться к врачу.
- Протрите батарейку сухой тканью для обеспечения хорошего контакта.

Литиевая батарейка, установленная на заводе

Этой батарейки может не хватить на 1 год.

Changing the lithium battery in your camcorder

Changing the lithium battery

(1) Open the LCD panel and open the lid of the lithium battery compartment.
(2) Push the lithium battery down once and pull it out from the holder.
(3) Install a Sony CR2025 lithium battery with the positive (+) side facing out.
(4) Close the lid.

Замена литиевой батарейки в Вашей видеокамере

Замена литиевой батарейки

(1) Откройте панель ЖКД и откройте крышку отсека для литиевой батарейки.
(2) Нажмите литиевую батарейку вниз один раз и выньте ее из держателя.
(3) Установите литиевую батарейку Sony CR2025 так, чтобы положительный (+) полюс был обращен наружу.
(4) Закройте крышку.

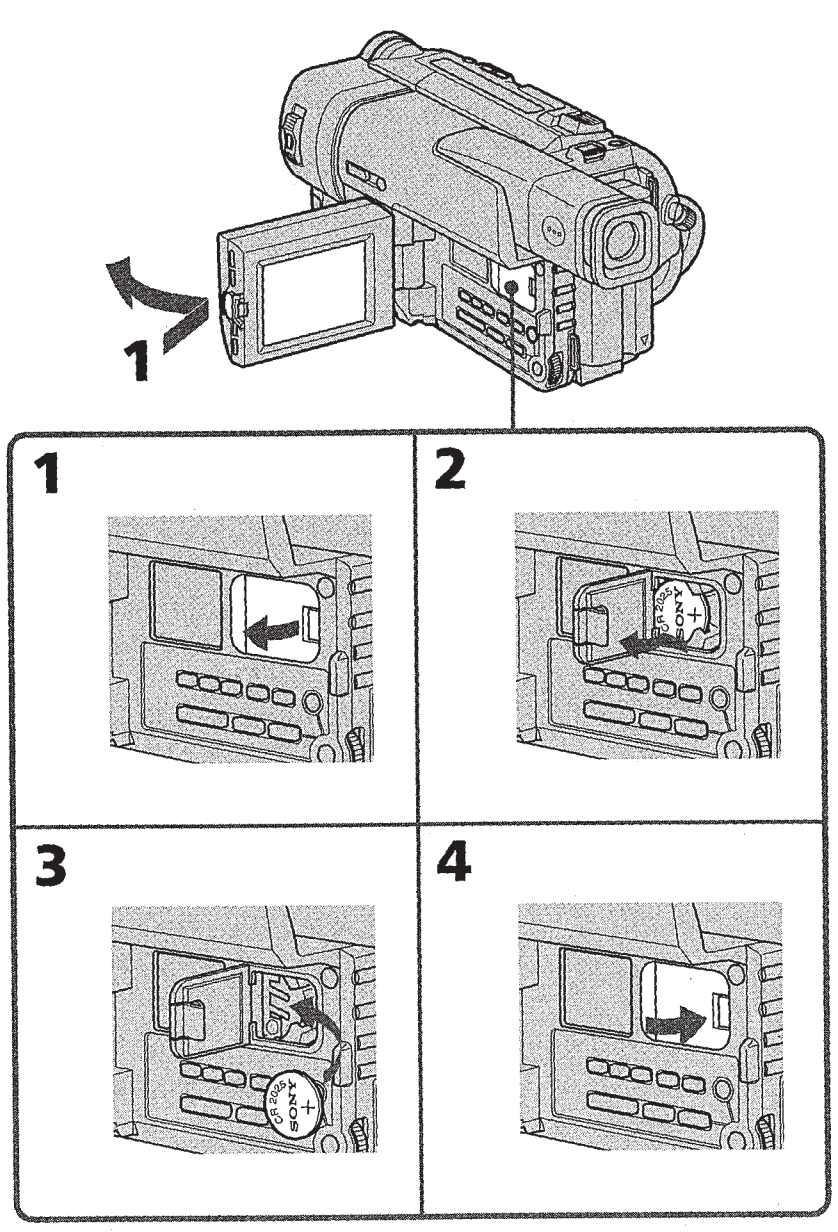

English

Troubleshooting

If you run into any problem using your camcorder, use the following table to troubleshoot the problem. If the problem persists, disconnect the power source and contact your Sony dealer or local authorized Sony service facility. If "C:□□:□□" appears on the LCD screen or in the viewfinder, the self-diagnosis display function has worked. See page 92.

In the recording mode

Symptom	Cause and/or Corrective Actions
START/STOP does not operate.	• The POWER switch is set to OFF (CHARGE) or PLAYER. → Set it to CAMERA. (p. 22) • STANDBY is set to LOCK. → Turn STANDBY to STANDBY. (p. 22) • The tape has run out. → Rewind the tape or insert a new one. (p. 21, 34) • The write-protect tab is set to expose the red mark. → Use a new tape or slide the tab. (p. 21) • The tape is stuck to the drum (moisture condensation). → Remove the cassette and leave your camcorder for at least 1 hour to acclimatize. (p. 100)
The power goes off.	• While being operated in the CAMERA mode, your camcorder has been in the standby mode for more than 5 minutes. → Turn STANDBY down once and then up again. (p. 22)
The image on the viewfinder screen is not clear.	• The viewfinder lens is not adjusted. → Adjust the viewfinder lens. (p. 27)
The SteadyShot function does not work. (CCD-TRV57E/TRV67E/TRV87E only)	• STEADYSHOT is set to OFF in the menu settings. → Set it to ON. (p. 70) • The SteadyShot function does not work when the wide mode is set to 16:9FULL.
The autofocusing function does not work.	• FOCUS is set to MANUAL. → Set it to AUTO. (p. 58) • Shooting conditions are not suitable for autofocus. → Set FOCUS to MANUAL to focus manually. (p. 58)
The fader function does not work. (CCD-TRV87E only)	• The digital effect function is working. → Cancel it. (p. 51)
The ⊗ indicator flashes in the viewfinder.	• The video heads may be dirty. → Clean the heads using the Sony V8-25CLD cleaning cassette (not supplied). (p. 101)
The picture does not appear in the viewfinder.	• The LCD panel is open. → Close the LCD panel. (p. 24)
A vertical band appears when you shoot a subject such as lights or a candle flame against a dark background.	• The contrast between the subject and background is too high. This is not a malfunction.
A vertical band appears when you shoot a very bright subject.	• This is not a malfunction.
Some tiny white spots appear in the viewfinder or on the LCD screen. (CCD-TRV87E only)	• Slow shutter, low lux or Super NightShot mode is activated. This is not a malfunction.
An unknown picture is displayed in the viewfinder or on the LCD screen.	• If 10 minutes elapse after you set the POWER switch to CAMERA or DEMO MODE is set to ON in the menu settings without a cassette inserted, your camcorder automatically starts the demonstration. → Insert a cassette and the demonstration stops. You can also cancel DEMO MODE. (p. 75)

(Continued on the following page)

Troubleshooting

Symptom	Cause and/or Corrective Actions
The picture is recorded in incorrect or unnatural colours.	• NIGHTSHOT is set to ON. → Set it to OFF. (p. 29)
Picture appears too bright, and the subject does not appear in the viewfinder or on the LCD screen.	• NIGHTSHOT is set to ON in a bright place. → Set it to OFF, or use the NightShot function in a dark place. (p. 29)

In the playback mode

Symptom	Cause and/or Corrective Actions
The tape does not move when a video control button is pressed.	• The POWER switch is set to CAMERA or OFF (CHARGE). → Set it to PLAYER. (p. 34) • The tape has run out. → Rewind the tape. (p. 34)
The playback picture is not clear or does not appear.	• The television's video channel is not adjusted correctly. → Adjust it. (p. 38) • EDIT is set to ON in the menu settings. → Set it to OFF. (p. 70) • The video head may be dirty. → Clean the heads using the Sony V8-25CLD cleaning cassette (not supplied). (p. 101)
No sound or only a low sound is heard when playing back a tape.	• The stereo tape is played back with HiFi SOUND set to 2 in the menu settings. (CCD-TRV87E only) → Set it to STEREO. (p. 70) • The volume is turned to minimum. → Turn up the volume. (p. 34)
The sound is muted or images do not appear when monitoring the picture from TV on the LCD screen. (CCD-TRV87E only)	→ Pull out A/V connecting cable from AUDIO/VIDEO jack, then connect it again.

In the recording and playback modes

Symptom	Cause and/or Corrective Actions
The power does not turn on.	• The battery pack is not installed, or is dead or nearly dead. → Install a charged battery pack. (p. 13, 14) • The AC power adaptor is not connected to the mains. → Connect the AC power adaptor to the mains. (p. 14, 19)
The end search function does not work.	•The tape was ejected after recording. •You have not recorded on the new cassette yet.

Troubleshooting

Symptom	Cause and/or Corrective Actions
The battery pack is quickly discharged.	• The operating temperature is too low. • The battery pack is not fully charged. → Charge the battery pack again. (p. 14) • The battery pack is completely dead, and cannot be recharged. → Replace with a new battery pack. (p. 13)
The battery remaining indicator does not indicate the correct time.	• You have used the battery pack in an extremely hot or cold environment for a long time. • The battery pack is completely dead, and cannot be recharged. → Replace with a new battery pack. (p. 13) • The battery is dead. → Use a charged battery pack. (p. 13, 14)
The power goes off although the battery remaining indicator indicates that the battery pack has enough power to operate.	→ Charge the battery pack fully again so that the indication on the battery remaining indicator is correct.
The cassette cannot be removed from the holder.	• The power source is disconnected. → Connect it firmly. (p. 13, 19) • The battery is dead. → Use a charged battery pack. (p. 13, 14)
The ▣ and ⏏ indicators flash and no functions except for cassette ejection work.	• Moisture condensation has occurred. → Remove the cassette and leave your camcorder for at least 1 hour to acclimatize. (p. 100)

Others

Symptom	Cause and/or Corrective Actions
The Remote Commander supplied with your camcorder does not work. (CCD-TRV48E/TRV57E/TRV67E/TRV87E only)	• COMMANDER is set to OFF in the menu settings. → Set it to ON. (p. 70) • Something is blocking the infrared rays. → Remove the obstacle. • The batteries inserted in the battery holder with the + – polarities incorrectly matching the + – marks. → Insert the batteries with the correct polarity. (p. 116) • The batteries are dead. → Insert new ones. (p. 116)
The date or time indicator does not appear, and the bars "--:--:--" appear.	• Reset the date and time. (p. 82)
The picture from a TV or VCR does not appear even when your camcorder is connected to outputs on the TV or VCR. (CCD-TRV87E only)	• DISPLAY is set to V-OUT/LCD in the menu settings. → Set it to LCD. (p. 70)
The melody or beep sounds for 5 seconds.	• Moisture condensation has occurred. → Remove the cassette and leave your camcorder for at least 1 hour to acclimatize. (p. 100) • Some troubles has occurred in your camcorder. → Remove the cassette and insert it again, then operate your camcorder.
While charging the battery pack, no indicator appears or the indicator flashes in the display window.	• The AC power adaptor is disconnected. → Connect it firmly. (p. 14, 19) • Something is wrong with the battery pack. → Contact your Sony dealer or local authorized Sony service facility.

English

Self-diagnosis display

Your camcorder has a self-diagnosis display function.
This function displays the current condition of your camcorder as a 5-digit code (a combination of a letter and figures) in the viewfinder, on the LCD screen or in the display window. If a 5-digit code is displayed, check the following code chart. The last two digits (indicated by □□) will differ depending on the state of your camcorder.

Viewfinder (or LCD screen)



Self-diagnosis display

- C:□□:□□
  You can service your camcorder yourself.
- E:□□:□□
  Contact your Sony dealer or local authorized Sony facility.

Five-digit display	Cause and/or Corrective Actions
C:04:□□	• You are using a battery pack that is not an "InfoLITHIUM" battery pack. ➔ Use an "InfoLITHIUM" battery pack. (p. 18)
C:21:□□	• Moisture condensation has occurred. ➔ Remove the cassette and leave your camcorder for at least 1 hour to acclimatize. (p. 100)
C:22:□□	• The video heads are dirty. ➔ Clean the heads using the Sony V8-25CLD cleaning cassette (not supplied). (p. 101)
C:31:□□ C:32:□□	• A malfunction other than the above that you can service has occurred. ➔ Remove the cassette and insert it again, then operate your camcorder. ➔ Disconnect the mains lead of the AC power adaptor or remove the battery pack. After reconnecting the power source, operate your camcorder.
E:61:□□ E:62:□□	• A malfunction that you cannot service has occurred. ➔ Contact your Sony dealer or local authorized Sony service facility and inform them of the 5-digit code. (example: E:61:10)

If you are unable to rectify the problem even if you try corrective actions a few times, contact your Sony dealer or local authorized Sony service facility.

English

Warning indicators and messages

If indicators and messages appear in the viewfinder, on the LCD screen or in the display window, check the following:
See the page in parentheses "(   )" for more information.
The indicators and messages are displayed in yellow.

Warning indicators

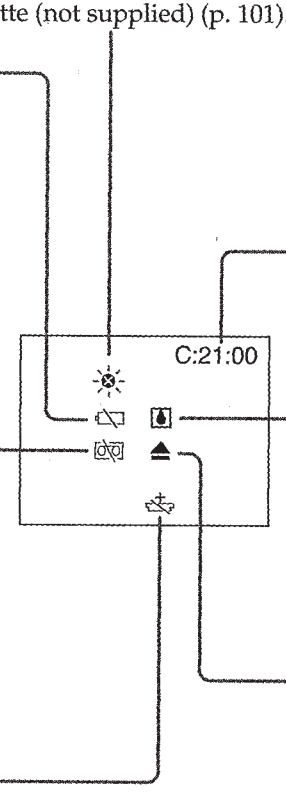

The video heads are dirty
Slow flashing:
- You need to clean the heads using the Sony V8-25CLD cleaning cassette (not supplied) (p. 101).

The battery is dead or nearly dead
Slow flashing:
- The battery is nearly dead.

Fast flashing:
- The battery is dead (p. 14).
- The battery is completely dead, and cannot be recharged.

Depending on conditions, the 🔋 indicator may flash, even if there are 5 to 10 minutes remaining.

Warning indicator as to tape
Slow flashing:
- The tape is near the end.
- No tape is inserted (p. 21).*
- The write-protect tab on the cassette is out (red) (p. 21).*

Fast flashing:
- The tape has run out (p. 21, 34).*

The lithium battery is weak or is not installed (p. 87)

Self-diagnosis display (p. 92)

Moisture condensation has occurred*
Fast flashing:
- Eject the cassette, turn off your camcorder, and leave it for about 1 hour with the cassette compartment open (p. 100).

You need to eject the cassette
Slow flashing:
- The write-protect tab on the cassette is out (red) (p. 21).*

Fast flashing:
- Moisture condensation has occurred (p. 100).
- The tape has run out (p. 21, 34).*
- The self-diagnosis display function is activated (p. 92).*

Warning messages

• CLOCK SET	Reset the date and time (p. 82).
• For "InfoLITHIUM" BATTERY ONLY	Use an "InfoLITHIUM" battery pack (p. 18).
• 🎞 CLEANING CASSETTE	The video heads are dirty (p. 101).
• START/STOP KEY	Press the START/STOP button to activate the ORC setting. This message is displayed in white. (p. 74).
• ORC	The ORC setting is working. This message is displayed in white (p. 74).

* You hear the melody or beep sound.

Using your camcorder abroad

Using your camcorder abroad

You can use your camcorder in any country or area with the AC power adaptor supplied with your camcorder within 100 V to 240 V AC, 50/60 Hz.

Your camcorder is a PAL system based camcorder. If you want to view the playback picture on a TV, it must be a PAL system based TV with VIDEO/AUDIO input jack.
The following shows TV colour systems used overseas.

PAL system
Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Great Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, etc.

PAL-M system
Brazil

PAL-N system
Argentina, Paraguay, Uruguay

NTSC system
Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

SECAM system
Bulgaria, France, Guyana, Hungary, Iran, Iraq, Monaco, Poland, Russia, Ukraine, etc.

Simple setting of clock by time difference

You can easily set the clock to the local time by setting a time difference. Select WORLD TIME in the menu settings. See page 76 for more information.

Использование Вашей видеокамеры за границей

Использование Вашей видеокамеры за границей

Вы можете использовать Вашу видеокамеру в любой стране или области с помощью сетевого адаптера переменного тока, прилагаемого к Вашей видеокамере, который можно использовать в пределах от 100 В до 240 В переменного тока с частотой 50/60 Гц.

Ваша видеокамера основана на системе PAL. Если Вы хотите просмотреть воспроизводимое изображение на телевизоре, то это должен быть телевизор, основанный на системе PAL, с входными гнездами VIDEO/AUDIO.
Ниже приведены системы цветного телевидения, используемые за рубежом.

Система PAL
Австралия, Австрия, Бельгия, Великобритания, Германия, Голландия, Гонконг, Дания, Испания, Италия, Китай, Кувейт, Малайзия, Новая Зеландия, Норвегия, Португалия, Сингапур, Словацкая Республика, Таиланд, Финляндия, Чешская Республика, Швейцария, Швеция и т.д.

Система PAL-M
Бразилия

Система PAL-N
Аргентина, Парагвай, Уругвай

Система NTSC
Багамские острова, Боливия, Венесуэла, Канада, Колумбия, Корея, Мексика, Перу, Суринам, США, Тайвань, Филиппины, Центральная Америка, Чили, Эквадор, Ямайка, Япония и т.д.

Система SECAM
Болгария, Венгрия, Гвиана, Ирак, Иран, Монако, Польша, Россия, Украина, Франция и т.д.

Простая установка разницы во времени на часах

Вы можете легко установить часы на местное время путем установки разницы во времени. Выберите команду WORLD TIME в установках меню. Подробные сведения приведены на стр. 81.

Maintenance information and precautions

Moisture condensation

If your camcorder is brought directly from a cold place to a warm place, moisture may condense inside your camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or your camcorder may not operate correctly. If there is moisture inside your camcorder, the beep sounds and the ▣ indicator flashes. When the ⏏ indicator flashes at the same time, the cassette is inserted in your camcorder. If moisture condenses on the lens, the indicator will not appear.

If moisture condensation occurred

None of the functions except cassette ejection will work. Eject the cassette, turn off your camcorder, and leave it for about 1 hour with the cassette compartment open. Your camcorder can be used again if the ▣ indicator does not appear when the power is turned on again.

Note on moisture condensation
Moisture may condense when you bring your camcorder from a cold place into a warm place (or vice versa) or when you use your camcorder in a hot place as follows:
- You bring your camcorder from a ski slope into a place warmed up by a heating device
- You bring your camcorder from an air-conditioned car or room into a hot place outside
- You use your camcorder after a squall or a shower
- You use your camcorder in a high temperature and humidity place

How to prevent moisture condensation
When you bring your camcorder from a cold place into a warm place, put your camcorder in a plastic bag and tightly seal it. Remove the bag when the air temperature inside the plastic bag has reached the surrounding temperature (after about 1 hour).

Информация по уходу за аппаратом и меры предосторожности

Конденсация влаги

Если видеокамера принесена прямо из холодного места в теплое, то внутри видеокамеры, на поверхности ленты или на объективе может произойти конденсанция влаги. В таком состоянии лента может прилипнуть к барабану головки и будет повреждена или же видеокамера не сможет работать надлежащим образом. Если внутри видеокамеры произошла конденсация влаги, то прозвучит зуммерный сигнал, а на экране ЖКД будет мигать индикатор ▣. Если в то же самое время будет мигать индикатор ⏏, это значит, что в видеокамеру вставлена кассета. Если влага сконденсировалась на объективе, индикатор появляться не будет.

Если произошла конденсация влаги

Ни одна из функций, кроме выталкивания кассеты, не будет работать. Извлеките кассету, выключите видеокамеру и оставьте ее приблизительно на 1 час с открытым отсеком для кассеты. Если при повторном включении питания индикатор ▣ не появится на дисплее, Вы можете снова пользоваться видеокамерой.

Примечание по конденсации влаги
Влага может образоваться, если Вы принесете Вашу видеокамеру из холодного места в теплое (или наоборот) или когда Вы используете Вашу видеокамеру в жарком месте в следующих случаях:
- Вы принесли Вашу видеокамеру с лыжного склона в помещение, где функционирует обогреватель
- Вы принесли Вашу видеокамеру из автомобиля или из комнаты с воздушным кондиционированием в жаркое место на улице
- Вы используете видеокамеру после грозы или дождя
- Вы используете Вашу видеокамеру в очень жарком и влажном месте

Как предотвратить конденсацию влаги
Если видеокамера принесена из холодного места в теплое, то положите видеокамеру в полиэтиленовый пакет и плотно заклейте его. Выньте видеокамеру из полиэтиленового пакета, когда температура воздуха внутри пакета достигнет температуры окружающего воздуха (приблизительно через 1 час).

Maintenance information

Cleaning the video head

To ensure normal recording and clear pictures, clean the video heads. The video head may be dirty when:

- The ⊗ indicator and “CLEANING CASSETTE” message appear one after another or the ⊗ indicator flashes on the LCD screen or in the viewfinder.
- Playback pictures contain noise.
- Playback pictures are hardly visible.
- Playback pictures do not appear.

If this happens, clean the video heads with the Sony V8-25CLD cleaning cassette (not supplied).

Информация по уходу за аппаратом

Чистка видеоголовок

Для обеспечения нормальной записи и четкого изображения следует периодически чистить видеоголовки. Видеоголовки возможно загрязнены, если:

- На экране ЖКД или в видоискателе появляются один за другим индикатор ⊗ и сообщение “CLEANING CASSETTE” или же мигат индикатор ⊗.
- воспроизводимое изображение содержит помехи.
- воспроизводимое изображение с трудом различимо.
- воспроизводимое изображение не появляется на экране.

Если это произошло, почистите видеоголовки с помощью очистительной кассеты Sony V8-25CLD (не прилагается).

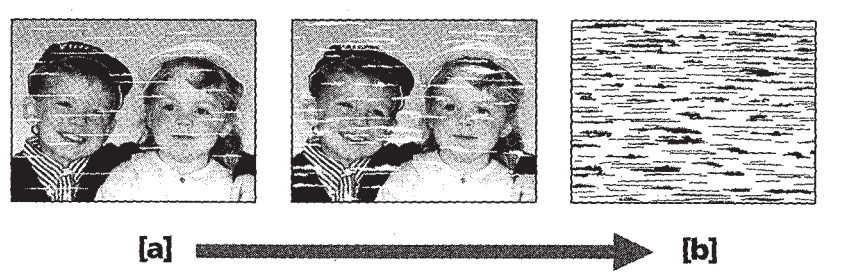

[a] Slightly dirty
[b] Very dirty

[a] Слегка загрязнены
[b] Очень загрязнены

Note on video heads

When the playback pictures are still contain noise even if you have cleaned the video heads with a cleaning cassette, the video heads may have worn down due to long use. If this is the case, they must be replaced with new heads. Contact your Sony dealer or local authorized Sony service facility.

Cleaning the LCD screen

If fingerprints or dust make the LCD screen dirty, we recommend using a LCD Cleaning Kit (not supplied) to clean the LCD screen.

Примечание по видеоголовкам

Если воспроизводимое изображение все еще содержит помехи даже после того, как Вы почистили видеоголовки с помощью очистительной кассеты, то, возможно, видеоголовки уже износились вследствие длительной эксплуатации видеокамеры. В этом случае, их следует заменить на новые. Обратитесь в сервисный центр Sony или в местное уполномоченное предприятие по обслуживанию изделий Sony.

Чистка экрана ЖКД

Если на экране ЖКД появятся отпечатки или пыль, рекомендуется воспользоваться очистительным набором для ЖКД (не прилагается) для чистки ЖКД.

Removing dust from inside the viewfinder

(1) ❶Remove the screw with a screwdriver (not supplied). ❷Then, while holding the RELEASE knob up, ❸turn the eyecup in a counterclockwise direction and pull it out.
(2) Clean the surface with a commercially available blower for a still camera.
(3) Turn the eyecup in a clockwise direction, then replace the screw.

Удаление пыли изнутри видоискателя

(1) ❶ Удалите винт с помощью отвертки (не прилагается). ❷ Затем, удерживая кнопку RELEASE вверху, ❸ поверните окуляр против часовой стрелки и вытащите его.
(2) Почистите поверхность с помощью воздуходувки для фотоаппаратов, которая приобретается отдельно.
(3) Поверните окуляр по часовой стрелке, а затем установите на место винт.

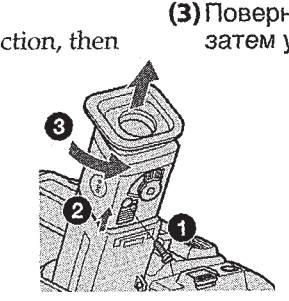

Caution

Do not remove any other screws. You may remove only the screw to remove the eyecup.

Precautions

Camcorder operation

- Operate your camcorder on 7.2 V (battery pack) or 8.4 V (AC power adaptor).
- For DC or AC operation, use the accessories recommended in this operating instructions.
- If any solid object or liquid get inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch set to OFF (CHARGE) when you are not using your camcorder.
- Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.
- Keep your camcorder away from strong magnetic fields or mechanical vibration.
- Do not touch the LCD screen with your fingers or a sharp-pointed object.
- If your camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.

Внимание

Не отвинчивайте другие винты. Вы можете отвинчивать только винт для снятия окуляра.

Меры предосторожности

Эксплуатация видеокамеры

- Эксплуатируйте видеокамеру от 7,2 В (батарейный блок) или 8,4 В (сетевой адаптер переменного тока)
- Что касается эксплуатации видеокамеры от постоянного и переменного тока, используйте принадлежности, рекомендуемые в данной инструкции по эксплуатации.
- Если какой-нибудь твердый предмет или жидкость попали внутрь корпуса, то выключите видеокамеру и проверьте ее у дилера Sony перед дальнейшей ее эксплуатацией.
- Избегайте грубого обращения с видеокамерой или механических ударов. Будьте особенно осторожны с объективом.
- Если видеокамера не используется, держите выключатель POWER в положении OFF (CHARGE).
- Не заворачивайте Вашу видеокамеру, например, в полотенце, и не эксплуатируйте ее в таком состоянии. В противном случае может произойти повышение температуры внутри видеокамеры.
- Держите Вашу видеокамеру подальше от сильных магнитных полей или механической вибрации.
- Не прикасайтесь к экрану ЖКД своими пальцами или острыми предметами.
- При эксплуатации Вашей видеокамеры в холодном месте, на экране ЖКД может появляться остаточное изображение. Это не является неисправностью.
- При эксплуатации Вашей видеокамеры, задняя сторона экрана ЖКД может нагреваться. Это не является неисправностью.

Built-in light

– CCD-TRV57E/TRV67E/TRV87E only

- Do not knock or jolt the built-in light while it is turned on as it may damage the bulb or shorten the life of the bulb.
- Do not leave the built-in light on while it is resting on or against something; it may cause a fire or damage the built-in light.

On handling tapes

Do not insert anything into the small holes on the rear of the cassette. These holes are used to sense the type and thickness of the tape and if the recording tab is in or out.

Camcorder care

- When your camcorder is not to be used for a long time, remove the battery. (CCD-TRV37E/TRV48E only)
- Remove the tape, and periodically turn on the power, operate the CAMERA and PLAYER sections and play back a tape for about 5 minutes when your camcorder is not to be used for a long time.
- Clean the lens with a soft brush to remove dust. If there are fingerprints on the lens, remove them with a soft cloth.
- Clean the camcorder body with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.
- Do not let sand get into your camcorder. When you use your camcorder on a sandy beach or in a dusty place, protect it from the sand or dust. Sand or dust may cause your camcorder to malfunction, and sometimes this malfunction cannot be repaired.

AC power adaptor

- Unplug the unit from the mains when you are not using the unit for a long time. To disconnect the mains lead, pull it out by the plug. Never pull the mains lead itself.
- Do not operate the unit with a damaged cord or if the unit has been dropped or damaged.
- Do not bend the mains lead forcibly, or place a heavy object on it. This will damage the cord and may cause fire or electrical shock.

Встроенная подсветка

– Только модель CCD-TRV57E/TRV67E/TRV87E

- Не стучите по устройству подсветки и не трясите его в то время, когда оно включено, поскольку это может повредить лампу накаливания или сократить ее срок службы.
- Не оставляйте встроенную подсветку включенной в то время, когда она на чем-то лежит или направлена на какой-либо предмет; это может привести к пожару или повредить внутренню подсветку.

Относительно обращения с лентами

Не вставляйте ничего в маленькие отверстия на задней стороне кассеты. Эти отверстия используются для определения типа и толщины ленты, а также для определения наличия или отсутствия лепестка защиты записи на ленте.

Уход за видеокамерой

- Если Ваша видеокамера не будет используется в течение длительного периода времени, выньте батарейный блок (только модель CCD-TRV37E/TRV48E).
- Выньте ленту и периодически включайте питание, оперируйте устройствами CAMERA и PLAYER и воспроизводите ленту порядка 5-х минут если Ваша видеокамера не будет используется в течение длительного периода времени.
- Чистите объектив с помощью мягкой кисточки для удаления пыли. Если имеются отпечатки пальцев на объективе, то удалите их с помощью мягкой ткани.
- Чистите корпус видеокамеры с помощью сухой мягкой ткани или мягкой ткани, слегка смоченной раствором умеренного моющего средства. Не используйте каких-либо типов растворителей, которые могут повредить отделку.
- Не допускайте попадания песка в видеокамеру. Если Вы используете видеокамеру на песчаном пляже или в каком-либо пыльном месте, предохраните аппарат от песка или пыли. Песок или пыль могут привести к неисправности аппарата, которая иногда может быть неисправимой.

Сетевой адаптер переменного тока

- Отсоедините аппарат от электрической сети, если он не используется длительное время. Для отсоединения сетевого шнура потяните его за разъем. Никогда не тяните за сам шнур.
- Не эксплуатируйте аппарат с поврежденным шнуром или же в случае, если аппарат упал или был поврежден.
- Не сгибайте сетевой провод силой и не ставьте на него тяжелые предметы. Это повредит провод и может привести к пожару или поражению электрическим током.

- Prevent metallic objects from coming into contact with the metal parts of the connecting section. If this happens, a short may occur and the unit may be damaged.
- Always keep metal contacts clean.
- Do not disassemble the unit.
- Do not apply mechanical shock or drop the unit.
- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment. AM receivers and video equipment disturb AM reception and video operation.
- The unit becomes warm during use. This is not a malfunction.
- Do not place the unit in locations that are:
  - – Extremely hot or cold
  - – Dusty or dirty
  - – Very humid
  - – Vibrating

Battery pack

- Use only the specified charger or video equipment with the charging function.
- To prevent accident from a short circuit, do not allow metal objects to come into contact with the battery terminals.
- Keep the battery pack away from fire.
- Never expose the battery pack to temperatures above 60°C (140°F), such as in a car parked in the sun or under direct sunlight.
- Keep the battery pack dry.
- Do not expose the battery pack to any mechanical shock.
- Do not disassemble nor modify the battery pack.
- Attach the battery pack to the video equipment securely.
- Charging while some capacity remains does not affect the original battery capacity.

Notes on dry batteries

– CCD-TRV48E/TRV57E/TRV67E/TRV87E only

To avoid possible damage from battery leakage or corrosion, observe the following:

- Be sure to insert the batteries with the + – polarities matched to the + – marks.
- Dry batteries are not rechargeable.
- Do not use a combination of new and old batteries.
- Do not use different types of batteries.
- Current flows from batteries when you are not using them for a long time.
- Do not use leaking batteries.

If batteries are leaking

- Wipe off the liquid in the battery compartment carefully before replacing the batteries.
- If you touch the liquid, wash it off with water.
- If the liquid get into your eyes, wash your eyes with a lot of water and then consult a doctor.

If any problem occurs, unplug your camcorder and contact your nearest Sony dealer.

- Будьте осторожны, чтобы никакие металлические предметы не соприкасались с металлическими частями соединительной секции. Если это случится, то может произойти короткое замыкание, и аппарат может быть поврежден.
- Всегда поддерживайте металлические контакты в чистоте.
- Не разбирайте аппарат.
- Не подвергайте аппарат механической вибрации и не роняйте его.
- При использовании аппарата, особенно во время зарядки, держите его подальше от приемников АМ-радиовещания и видеоаппаратуры. Приемники АМ-радиовещания и видеоаппаратура нарушают АМ-радиоприем и работу видеоаппаратуры.
- В процессе эксплуатации аппарат нагревается. Это является вполне нормальным.
- Не размещайте аппарат в местах:
  - – Чрезмерно жарких или холодных
  - – Пыльных или грязных
  - – Очень влажных
  - – Подверженных вибрации

Батарейный блок

- Используйте только указанное зарядное устройство или видеооборудование для функции зарядки.
- Для предотвращения несчастного случая вследствие короткого замыкания не позволяйте металлическим предметам соприкосаться с контактами батарейного блока.
- Храните батарейный блок подальше от огня.
- Никогда не подвергайте батарейный блок воздействию температуры свыше 60°C, как например, в автомобиле, припаркованном на солнце или под прямым солнечным светом.
- Сохраняйте батарейный блок сухим.
- Не подвергайте батарейный блок каким-либо механическим ударам.
- Не разбирайте и не модифицируйте батарейный блок.
- Надежно прикрепляйте батарейный блок к видеоаппаратуре.
- Зарядка при оставшейся мощности не влияет на исходную емкость батарейного блока.

Примечание к сухим батарейкам

–Только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E)

Во избежание возможного повреждения видеокамеры вследствие утечки внутреннего вещества батареек или коррозии соблюдайте следующее:

- При установке батареек соблюдайте правильную полярность + – в соответствии с метками + –.
- Сухие батарейки нельзя перезаряжать.
- Не используйте новые батарейки вместе со старыми.
- Не используйте батарейки разного типа.
- Если батарейки не используются длительное время, они постепенно разряжаются.
- Не используйте батарейки, которые потекли.

Если произошла утечка внутреннего вещества батареек

- Перед тем, как заменить батарейки, тщательно протрите остатки жидкости в отсеке для батареек.
- В случае попадания жидкости на кожу, промойте жидкость водой.
- В случае попадания жидкости в глаза, промойте свои глаза большим количеством воды, после чего обратитесь к врачу.

В случае возникновения каких-либо проблем, отключите Вашу видеокамеру от источника питания и обратитесь в ближайший сервисный центр Sony.

Identifying the parts and controls

Обозначение частей и регуляторов

Camcorder

Видеокамера

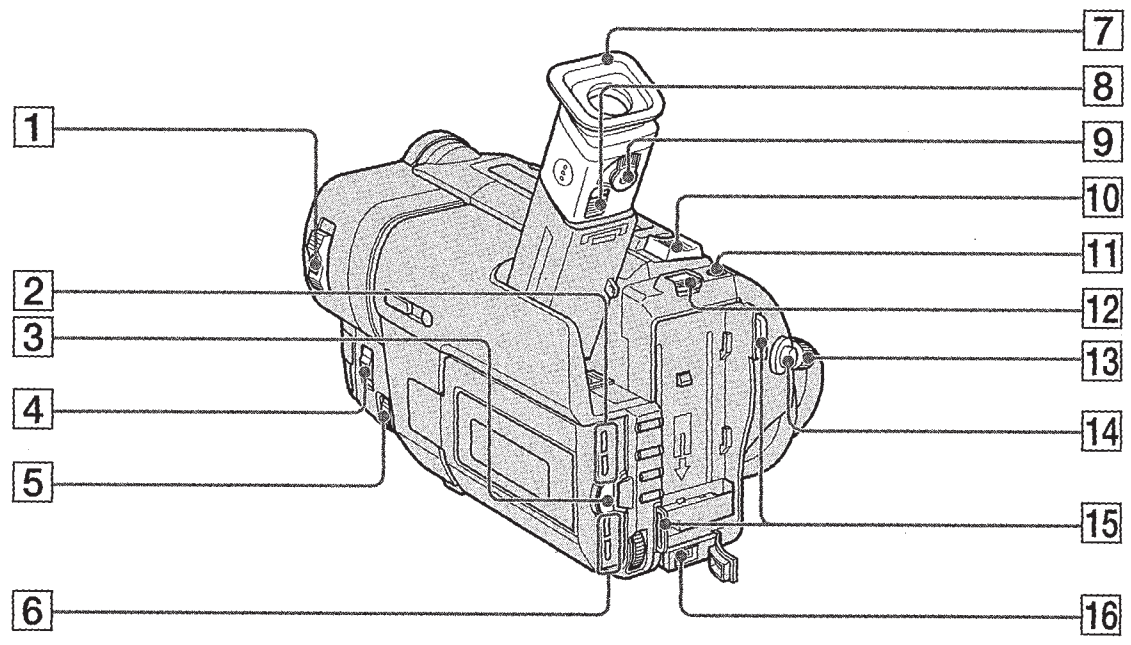

1 **POWER switch** (p. 22)
2 **LCD BRIGHT buttons** (p. 24)
3 **OPEN button** (p. 22)
4 **FOCUS switch** (p. 58)
5 **NEAR/FAR dial** (p. 58)
6 **VOLUME buttons** (p. 34)
7 **Eyecup** (p. 102)
8 **Eyecup RELEASE knob** (p. 102)
9 **Viewfinder lens adjustment lever** (p. 27)
10 **Power zoom lever** (p. 25)
11 **PHOTO button** (CCD-TRV87E only) (p. 41)
12 **BATT RELEASE lever** (p. 13)
13 **STANDBY switch** (p. 22)
14 **START/STOP button** (p. 22)
15 **Hooks for shoulder strap**
16 **DC IN jack** (p. 14, 19)

This mark indicates that this product is a genuine accessory for Sony video products.
When purchasing Sony video products, Sony recommends that you purchase accessories with this "GENUINE VIDEO ACCESSORIES" mark.

1 **Переключатель POWER** (стр. 22)
2 **Кнопки LCD BRIGHT** (стр. 24)
3 **Кнопка OPEN** (стр. 22)
4 **Переключатель FOCUS** (стр. 58)
5 **Диск NEAR/FAR** (стр. 58)
6 **Кнопки VOLUME** (стр. 34)
7 **Окуляр** (стр. 102)
8 **Кнопка окуляра RELEASE** (стр. 102)
9 **Рычаг регулировки объектива видоискателя** (стр. 27)
10 **Рычаг приводного вариообъектива** (стр. 25)
11 **Кнопка PHOTO** (только модель CCD-TRV87E) (стр. 41)
12 **Рычаг BATT RELEASE** (стр. 13)
13 **Переключатель STANDBY** (стр. 22)
14 **Кнопка START/STOP** (стр. 22)
15 **Крючок для плечевого ремня**
16 **Гнездо DC IN** (стр. 14, 19)

Данный знак означает, что это изделие является подлинной принадлежностью для видеоаппаратуры Sony. При покупке видеоаппаратуры Sony рекомендуется приобретать для нее принадлежности Sony с таким знаком "GENUINE VIDEO ACCESSORIES".

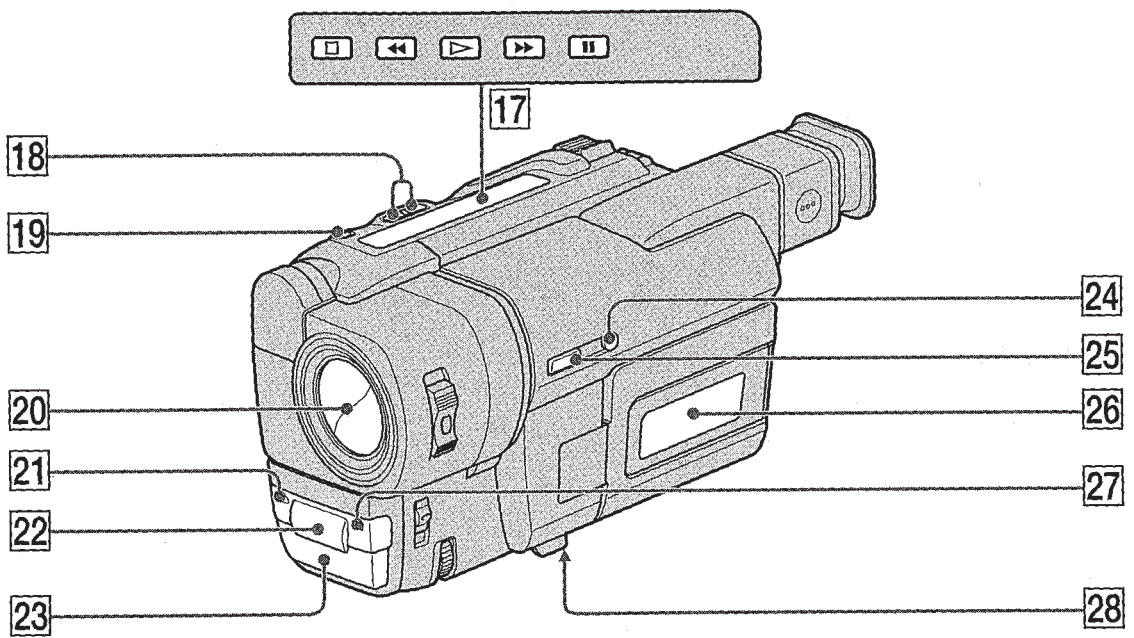

17 **Video control buttons** (p. 34, 36)
  ■ STOP (stop)
  ◀◀ REW (rewind)
  ▶ PLAY (playback)
  ▶▶ FF (fastforward)
  ❚❚ PAUSE (pause)
18 **EDITSEARCH button** (p. 32)
19 **S.LASER LINK button** (CCD-TRV87E only) (p. 40)
20 **Lens cover** (p. 22)
21 **Camera recording lamp** (p. 22)
22 **Infrared rays emitter** (p. 29, 40)
23 **Microphone**
24 **SUPER NIGHTSHOT button** (CCD-TRV87E only) (p. 29)
25 **NIGHTSHOT switch** (p. 29)
26 **Display window** (p. 117)
27 **Remote sensor** (CCD-TRV48E/TRV57E/TRV67E/TRV87E only) (p. 115)
28 **Tripod receptacle** (base)
  Make sure that the length of the tripod screw is less than 6.5 mm (9/32 inch). Otherwise, you cannot attach the tripod securely and the screw may damage your camcorder.

What is SUPER LASER LINK? (CCD-TRV87E only)
The SUPER LASER LINK system sends and receives pictures and sound between video equipment having the mark by using infrared rays.

17 **Кнопки видеоконтроля** (стр. 34, 36)
  ■ STOP (остановка)
  ◀◀ REW (ускоренная перемотка назад)
  ▶ PLAY (воспроизведение
  ▶▶ FF (ускоренная перемотка вперед)
  ❚❚ PAUSE (пауза)
18 **Кнопка EDITSEARCH** (стр. 32)
19 **Кнопка S.LASER LINK** (только модель CCD-TRV87E) (стр. 40)
20 **Крышка объектива** (стр. 22)
21 **Лампочка записи видеокамеры** (стр. 22)
22 **Излучатель инфракрасных лучей** (стр. 29, 40)
23 **Микрофон**
24 **Кнопка SUPER NIGHTSHOT** (только модель CCD-TRV87E) (стр. 29)
25 **Переключатель NIGHTSHOT** (стр. 29)
26 **Окошко дисплея** (стр. 117)
27 **Датчик дистанционного управления** (только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E) (стр. 115)
28 **Гнездо для треноги** (основание)
  Убедитесь, что длина винта треноги менее 6,5 мм. В противном случае Вы не сможете надежно прикрепить треногу, а винт может повредить Вашу видеокамеру.

Что такое SUPER LASER LINK? (Только модель CCD-TRV87E)
Система SUPER LASER LINK посылает и принимает сигналы изображения и звука между между видеоаппаратурой, имеющей знак с помощью инфракрасных лучей.

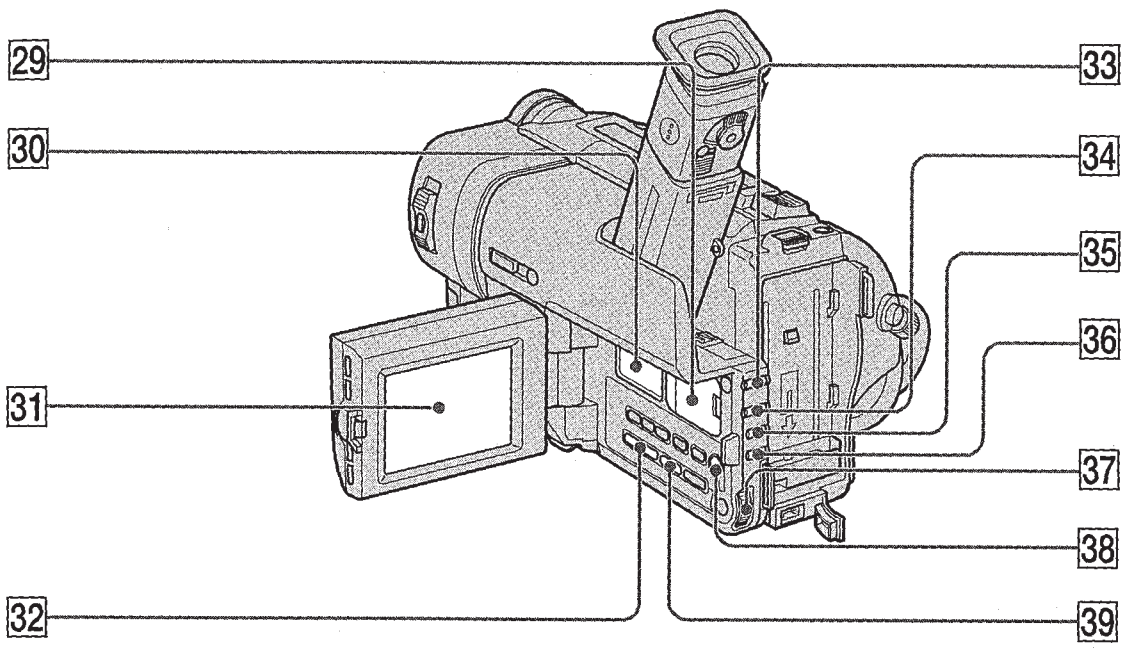

29 **Lithium battery compartment** (p. 88)
30 **Speaker**
31 **LCD screen** (p. 24)
32 **DIGITAL EFFECT button** (CCD-TRV87E only) (p. 52)
33 **FADER button** (p. 47)
34 **BACK LIGHT button** (p. 28)
35 **PROGRAM AE button** (p. 55)
36 **EXPOSURE button** (p. 57)
37 **SEL/PUSH EXEC dial** (p. 41, 71)
38 **MENU button** (p. 71)
39 **PICTURE EFFECT button** (p. 50)

Attaching the shoulder strap
Attach the shoulder strap supplied with your camcorder to the hooks for the shoulder strap.

29 **Отсек для литиевой батарейки** (стр. 88)
30 **Динамик**
31 **Экран ЖКД** (стр. 24)
32 **Кнопка DIGITAL EFFECT** (только модель CCD-TRV87E) (стр. 52)
33 **Кнопка FADER** (стр. 47)
34 **Кнопка BACK LIGHT** (стр. 28)
35 **Кнопка PROGRAM AE** (стр. 55)
36 **Кнопка EXPOSURE** (стр. 57)
37 **Диск SEL/PUSH EXEC** (стр. 41, 71)
38 **Кнопка MENU** (стр. 71)
39 **Кнопка PICTURE EFFECT** (стр. 50)

Прикрепление плечевого ремня
Прикрепите плечевой ремень, прилагаемый к Вашей видеокамере, к крючкам для плечевого ремня.



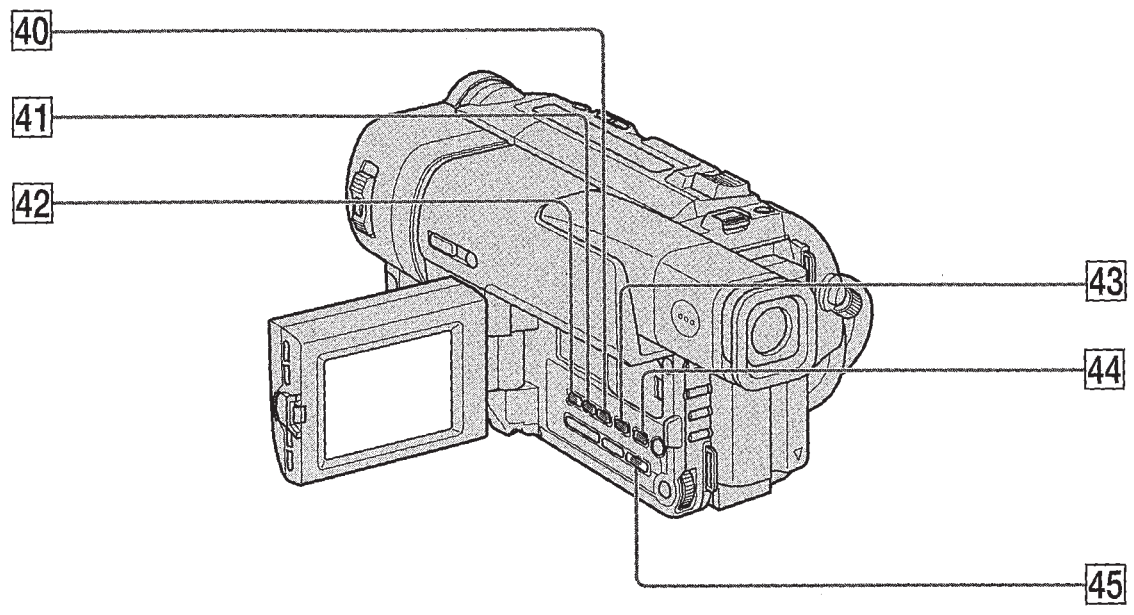

40 **COUNTER RESET button** (p. 23)
41 **TIME button** (p. 31)
42 **DATE button** (p. 31)
43 **DISPLAY button** (p. 35)
44 **END SEARCH button** (p. 32)
45 **TITLE button** (p. 60)

40 **Кнопка COUNTER RESET** (стр. 23)
41 **Кнопка TIME** (стр. 31)
42 **Кнопка DATE** (стр. 31)
43 **Кнопка DISPLAY** (стр. 35)
44 **Кнопка END SEARCH** (стр. 32)
45 **Кнопка TITLE** (стр. 60)

These are trademarks./Торговые знаки.

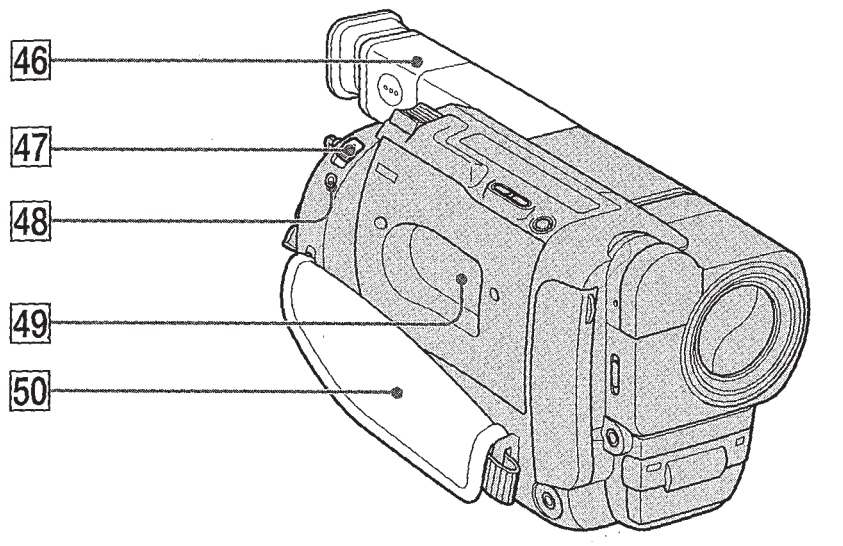

46 **Viewfinder** (p. 27)

47 **EJECT switch** (p. 21)

48 **LANC ⓛ control jack**
LANC stands for Local Application Control Bus System. The ⓛ control jack is used for controlling the tape transport of video equipment and other peripherals connected to the video equipment. This jack has the same function as the jack indicated as CONTROL L or REMOTE.

49 **Cassette compartment** (p. 21)

50 **Grip strap**

46 **Видоискатель** (стр. 27)

47 **Выключатель EJECT** (стр. 21)

48 **Гнездо управления LANC ⓛ**
LANC означает систему канала местного управления. Гнездо управления ⓛ используется для контроля за перемещением ленты видеоаппаратуры и периферийных устройств, подключенных к ней. Данное гнездо имеет такую же функцию, как и разъемы, обозначенные как CONTROL L или REMOTE.

49 **Кассетный отсек** (стр. 21)

50 **Ремень для захвата**

Fastening the grip strap

Прикрепление ремня для захвата



Fasten the grip strap firmly.

Прикрепите ремень для захвата надежно.

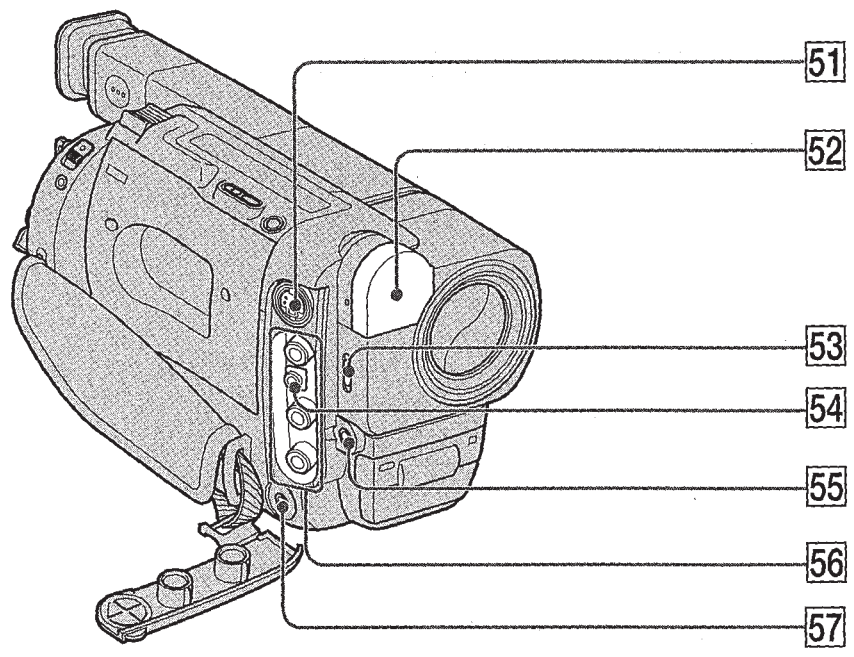

51 **S VIDEO jack** (CCD-TRV67E/TRV87E only) (p. 38)

52 **Built-in light** (CCD-TRV57E/TRV67E/TRV87E only) (p. 64)

53 **LIGHT switch** (CCD-TRV57E/TRV67E/TRV87E only) (p. 64)

54 **RFU DC OUT (RFU adaptor DC output) jack** (p. 39)

55 **MIC jack (PLUG IN POWER)**
Connect an external microphone (not supplied). This jack also accepts a "plug-in-power" microphone.
If you connect a 2-pin microphone, supply power from DC OUT jack.
In this case, WIND in the menu settings does not function. (CCD-TRV87E only)

56 **AUDIO/VIDEO jacks** (p. 38)

57 **🎧 (headphones) jack** (CCD-TRV87E only)/**◎ (earphone) jack** (CCD-TRV37E/TRV48E/TRV57E/TRV67E only)
When you use headphones (CCD-TRV87E only)/earphone (CCD-TRV37E/TRV48E/TRV57E/TRV67E only), the speaker on your camcorder is silent.

51 **Гнездо S VIDEO** (только модель CCD-TRV67E/TRV87E) (стр. 38)

52 **Встроенная подсветка** (только модель CCD-TRV57E/TRV67E/TRV87E) (стр. 64)

53 **Выключатель LIGHT** (только модель CCD-TRV57E/TRV67E/TRV87E) (стр. 64)

54 **Гнездо RFU DC OUT (выход пост. тока ВЧ-адаптера)** (стр. 39)

55 **Гнездо MIC (PLUG IN POWER)**
Для подсоединения внешнего микрофона (не прилагается). Это гнездо также позволяет подключить микрофон "с выключателем питания". При подсоединении 2-штырькового микрофона, подвод питания следует выполнять через гнездо DC OUT.
В этом случае функция WIND в установках меню не работает. (Только модель CCD-TRV87E)

56 **Гнезда VIDEO/AUDIO** (стр. 38)

57 **🎧 гнездо (головных телефонов)** (только модель CCD-TRV87E)/**◎ гнездо (наушников)** (только модель CCD-TRV37E/TRV48E/TRV57E/TRV67E)
При использовании головныхх телефонов (только модель CCD-TRV87E)/наушников (только модель CCD-TRV37E/RV48E/TRV57E/TRV67E) акустическая система Вашей видеокамеры будет молчать.

Remote Commander

– CCD-TRV48E/TRV57E/TRV67E/TRV87E only

The buttons that have the same name on the Remote Commander as on your camcorder function identically to the buttons on your camcorder.

Пульт дистанционного управления

– Только модель CCD-TRV48E/TRV57E/TRV67E/TRV87E)

Кнопки пульта дистанционного управления, которые имеют одинаковые наименования с кнопками на видеокамере, функционируют идентично.

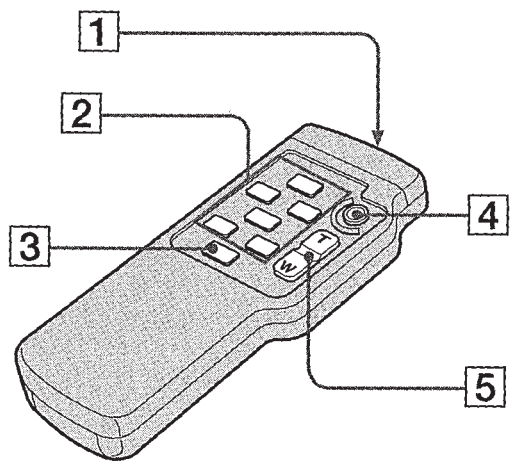

1 **Transmitter**
Point toward the remote sensor to control your camcorder after turning on your camcorder.

2 **Video control buttons** (p. 36)

3 **DISPLAY button** (p. 35)

4 **START/STOP button** (p. 22)

5 **Power zoom button** (p. 25)

1 **Передатчик**
Нацельте в направлении дистанционного датчика Вашей видеокамеры после включения видеокамеры.

2 **Кнопки видеоконтроля** (стр. 36)

3 **Кнопка DISPLAY** (стр. 35)

4 **Кнопка START/STOP** (стр. 22)

5 **Кнопка приводного вариообъектива** (стр. 25)

To prepare the Remote Commander

Insert 2 R6 (size AA) batteries by matching the + and – polarities on the batteries to the + – marks inside the battery compartment.

Для подготовки пульта дистанционного управления

Вставьте 2 батарейки R6 (размера AA), соблюдая надлежащую полярность + и – на батарейках в соответствии со знаками + – внутри отсека для батареек.

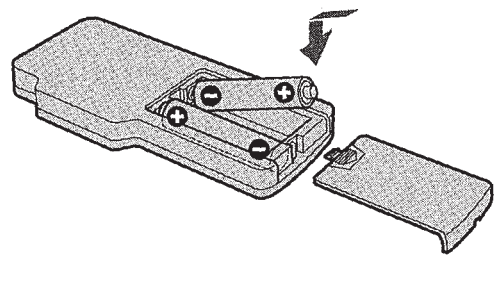

Notes on the Remote Commander

- Point the remote sensor away from strong light sources such as direct sunlight or overhead lighting. Otherwise, the Remote Commander may not function properly.
- Your camcorder works in the commander mode VTR 2. Commander modes 1, 2 and 3 are used to distinguish your camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR in the commander mode VTR 2, we recommend changing the commander mode or covering the sensor of the VCR with black paper.

Примечания к пульту дистанционного управления

- Держите дистанционный датчик подальше от сильных источников света, как например, прямые солнечные лучи или иллюминация. В противном случае дистанционное управление может не действовать.
- Данная видеокамера работает в режиме пульта дистанционного управления VTR 2. Режимы пульта дистанционного управления 1, 2 и 3 используются для отличия данной видеокамеры от других КВМ фирмы Sony во избежание неправильной работы дистанционного управления. Если Вы используете другой КВМ фирмы Sony, работающий в режиме VTR 2, мы рекомендуем Вам изменить режим пульта дистанционного управления или закрыть дистанционный датчик КВМ черной бумагой.

Operation indicators

LCD screen and Viewfinder/Экран ЖКД и видоискатель

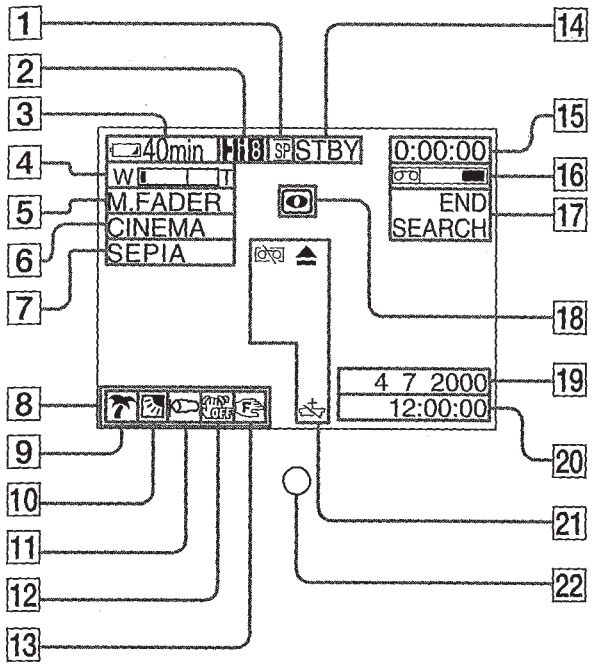

1 **Recording mode indicator** (p. 74)/**Mirror mode indicator** (p. 24)

2 **Hi8 format indicator** (CCD-TRV67E/TRV87E only) (p. 28, 84)

3 **Remaining battery time indicator** (p. 28)

4 **Exposure indicator** (p. 57)/**Zoom indicator** (p. 25)

5 **Fader indicator** (p. 47)/**Digital effect indicator** (CCD-TRV87E only) (p. 52)

6 **Wide mode indicator** (p. 44)

7 **Picture effect indicator** (p. 50)

8 **LCD bright indicator** (p. 24)/**Volume indicator** (p. 34)

9 **PROGRAM AE indicator** (p. 54)

10 **Backlight indicator** (p. 28)

11 **Wind indicator** (CCD-TRV87E only) (p. 72)

12 **SteadyShot off indicator** (CCD-TRV57E/TRV67E/TRV87E only) (p. 72)

13 **Manual focusing indicator** (p. 58)

Рабочие индикаторы

Display window/Окошко дисплея

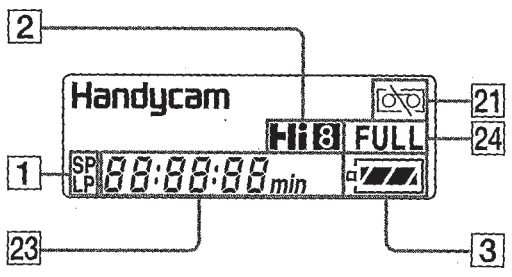

1 **Индикатор режима записи** (стр. 74)/**индикатор зеркального режима** (стр. 24)

2 **Индикатор формата Hi8** (только модель CCD-TRV67E/TRV87E) (стр. 28, 84)

3 **Индикатор оставшегося заряда батарейного блока** (стр. 28)

4 **Индикатор экспозиции** (стр. 57)/**индикатор вариообъектива** (стр. 25)

5 **Индикатор фейдера** (стр. 47)/**индикатор цифрового эффекта** (только модель CCD-TRV87E) (стр. 52)

6 **Индикатор широкоформатного режима** (стр. 44)

7 **Индикатор эффекта изображения** (стр. 50)

8 **Индикатор яркости ЖКД** (стр. 24)/**индикатор громкости** (стр. 34)

9 **Индикатор PROGRAM AE** (стр. 54)

10 **Индикатор задней подсветки** (стр. 28)

11 **Индикатор ветрового фильтра** (только модель CCD-TRV87E) (стр. 77)

12 **Индикатор выключенной устойчивой съемки** (только модель CCD-TRV57E/TRV67E/TRV87E) (стр. 77)

13 **Индикатор ручной фокусировки** (стр. 58)

14 **STBY/REC indicator** (p. 22)/**Video control mode indicator** (p. 36)

15 **Tape counter indicator** (p. 28)/**Self-diagnosis display indicator** (p. 92)/**Photo mode indicator** (CCD-TRV87E only) (p. 41)

16 **Remaining tape indicator** (p. 28)

17 **END SEARCH indicator** (p. 32)

18 **NIGHTSHOT indicator** (p. 29)

19 **AUTO DATE indicator** (p. 83)/**Date indicator** (p. 31, 82)

20 **Time indicator** (p. 31, 82)

21 **Warning indicators** (p. 93)

22 **Recording lamp** (p. 22)

23 **Date or time indicator** (p. 31, 83)/**Tape counter indicator** (p. 28)/**Self-diagnosis display indicator** (p. 92)/**Remaining battery time indicator** (p. 14)

24 **FULL charge indicator** (p.14)

14 **Индикатор STBY/REC** (стр. 22)/**Индикатор режима видеоконтроля** (стр. 36)

15 **Индикатор счетчика ленты** (стр. 28)/**индикатор функции самодиагностики** (стр. 97)/**индикатор фоторежима** (только модель CCD-TRV87E) (стр. 41)

16 **Индикатор оставшейся ленты** (стр. 28)

17 **Индикатор END SEARCH** (стр. 32)

18 **Индикатор NIGHTSHOT** (стр. 29)

19 **Индикатор AUTO DATE** (стр. 83)/**индикатор даты** (стр. 31, 82)

20 **Индикатор времени** (стр. 31, 82)

21 **Предупреждающие индикаторы** (стр. 98)

22 **Лампочка записи** (стр. 22)

23 **Индикатор даты или времени** (стр. 31, 83)/**индикатор счетчика ленты** (стр. 28)/**индикатор функции самодиагностики** (стр. 97)/**индикатор времени оставшегося заряда батарейного блока** (стр. 14)

24 **Индикатор зарядки FULL** (стр. 14)

SECTION 2
DISASSEMBLY

The following flow chart shows the disassembly procedure.

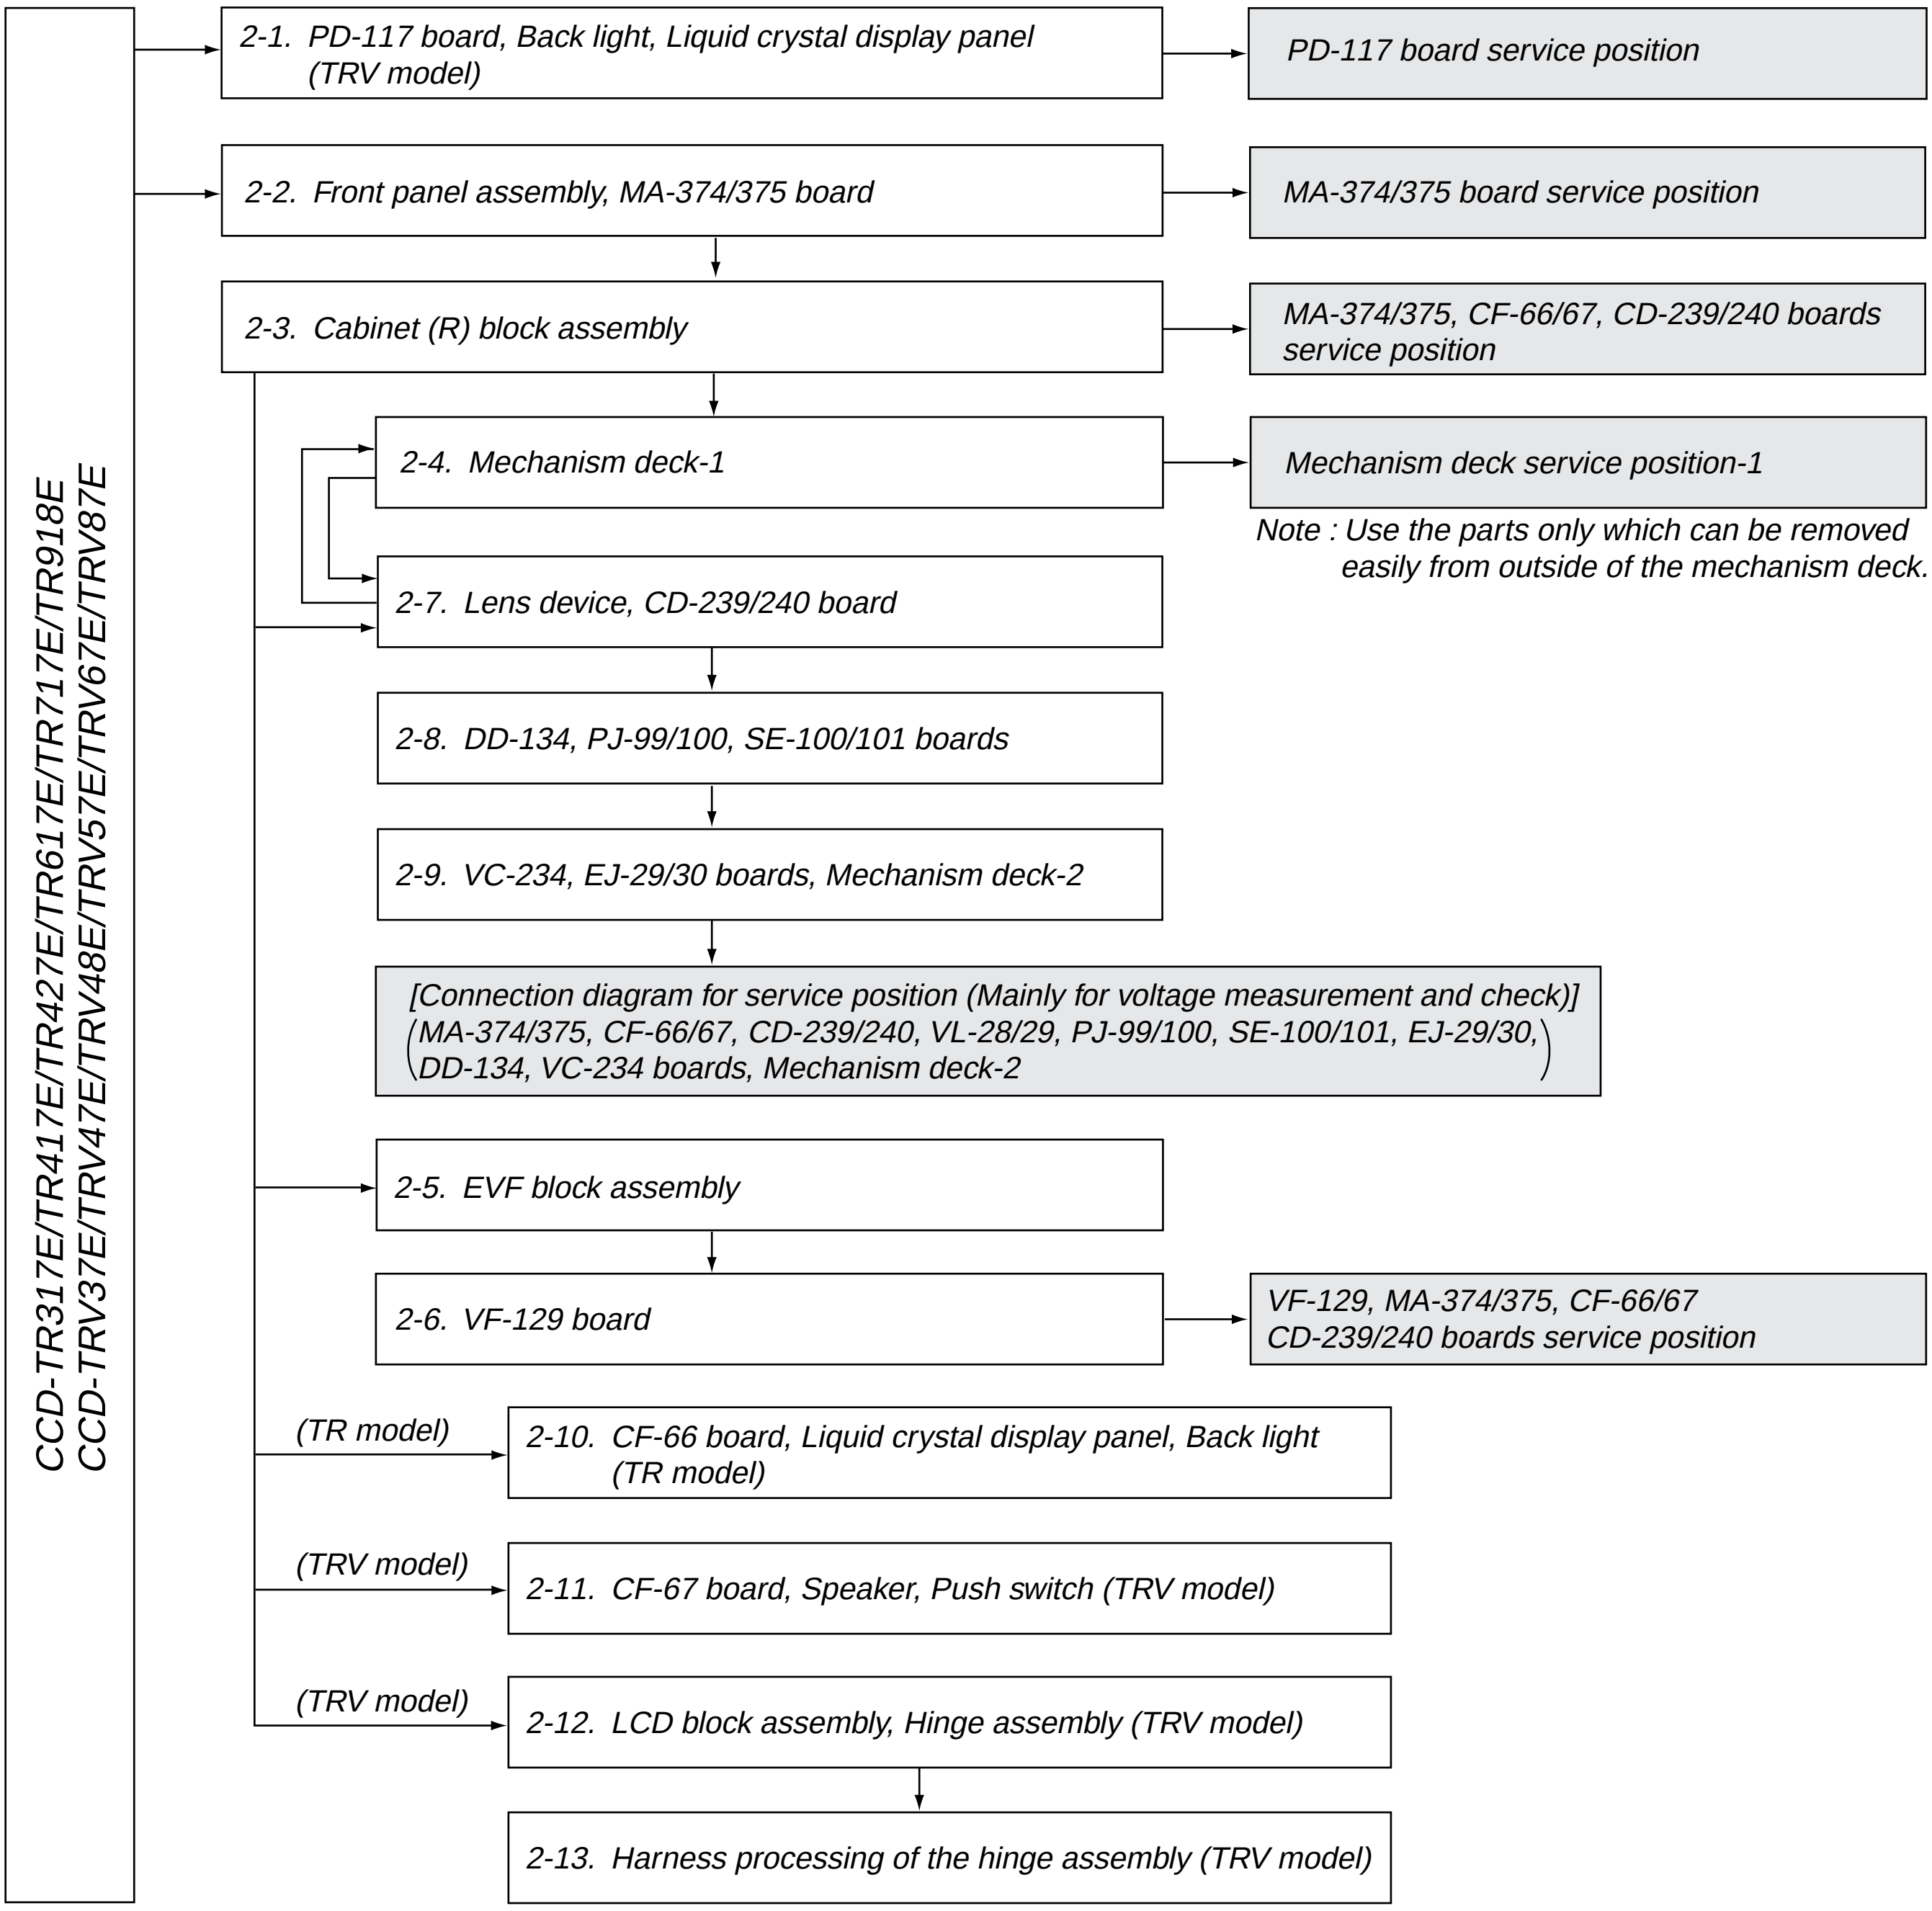
CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
2-1. PD-117 board, Back light, Liquid crystal display panel (TRV model)
PD-117 board service position
2-2. Front panel assembly, MA-374/375 board
MA-374/375 board service position
2-3. Cabinet (R) block assembly
MA-374/375, CF-66/67, CD-239/240 boards service position
2-4. Mechanism deck-1
Mechanism deck service position-1
Note : Use the parts only which can be removed easily from outside of the mechanism deck.
2-7. Lens device, CD-239/240 board
2-8. DD-134, PJ-99/100, SE-100/101 boards
2-9. VC-234, EJ-29/30 boards, Mechanism deck-2
[Connection diagram for service position (Mainly for voltage measurement and check)]
(MA-374/375, CF-66/67, CD-239/240, VL-28/29, PJ-99/100, SE-100/101, EJ-29/30, DD-134, VC-234 boards, Mechanism deck-2)
2-5. EVF block assembly
2-6. VF-129 board
VF-129, MA-374/375, CF-66/67 CD-239/240 boards service position
(TR model)
2-10. CF-66 board, Liquid crystal display panel, Back light (TR model)
(TRV model)
2-11. CF-67 board, Speaker, Push switch (TRV model)
(TRV model)
2-12. LCD block assembly, Hinge assembly (TRV model)
2-13. Harness processing of the hinge assembly (TRV model)

TR model	*: CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E*
TRV model	*: CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E*
Super night shot model	*: CCD-TR918E/TRV87E*
TR night shot model	*: CCD-TR317E/TR417E/TR427E/TR617E/TR717E*
TRV night shot model	*: CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E*
Stereo model	*: CCD-TR918E/TRV87E*
TR steady shot model	*: CCD-TR617E/TR717E/TR918E*
Video light model	*: CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E*
TR video light model	*: CCD-TR617E/TR717E/TR918E*
TRV video light model	*: CCD-TRV57E/TRV67E/TRV87E*
No video light model	*: CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E*
AEP, EE, NE, RU, UK model	*: CCD-TR417E/TR427E/TR617E/TR717E/TR918E/TRV37E/TRV48E/TRV57E: AEP, EE, NE, RU, UK/ TRV67E: AEP, EE, NE, RU, UK/TRV87E: AEP, EE, NE, RU, UK*

- Abbreviation

EE	: East European model
NE	: North European model
RU	: Russian model

NOTE: Follow the disassembly procedure in the numerical order given.

2-1. PD-117 BOARD, BACK LIGHT, LIQUID CRYSTAL DISPLAY PANEL (TRV MODEL)

REMOVING THE BACK LIGHT

(TRV87E MODEL)

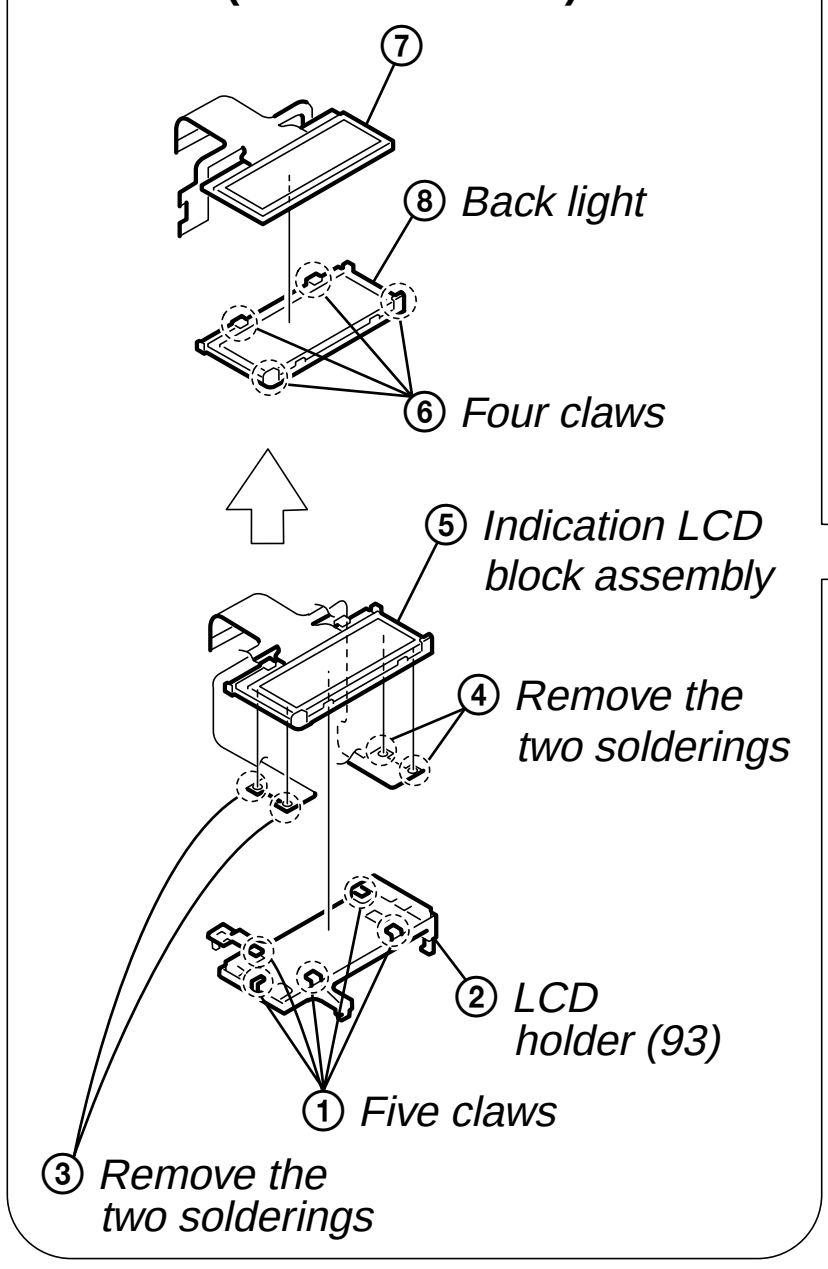
⑦
⑧ Back light
⑥ Four claws
⑤ Indication LCD block assembly
④ Remove the two solderings
② LCD holder (93)
① Five claws
③ Remove the two solderings

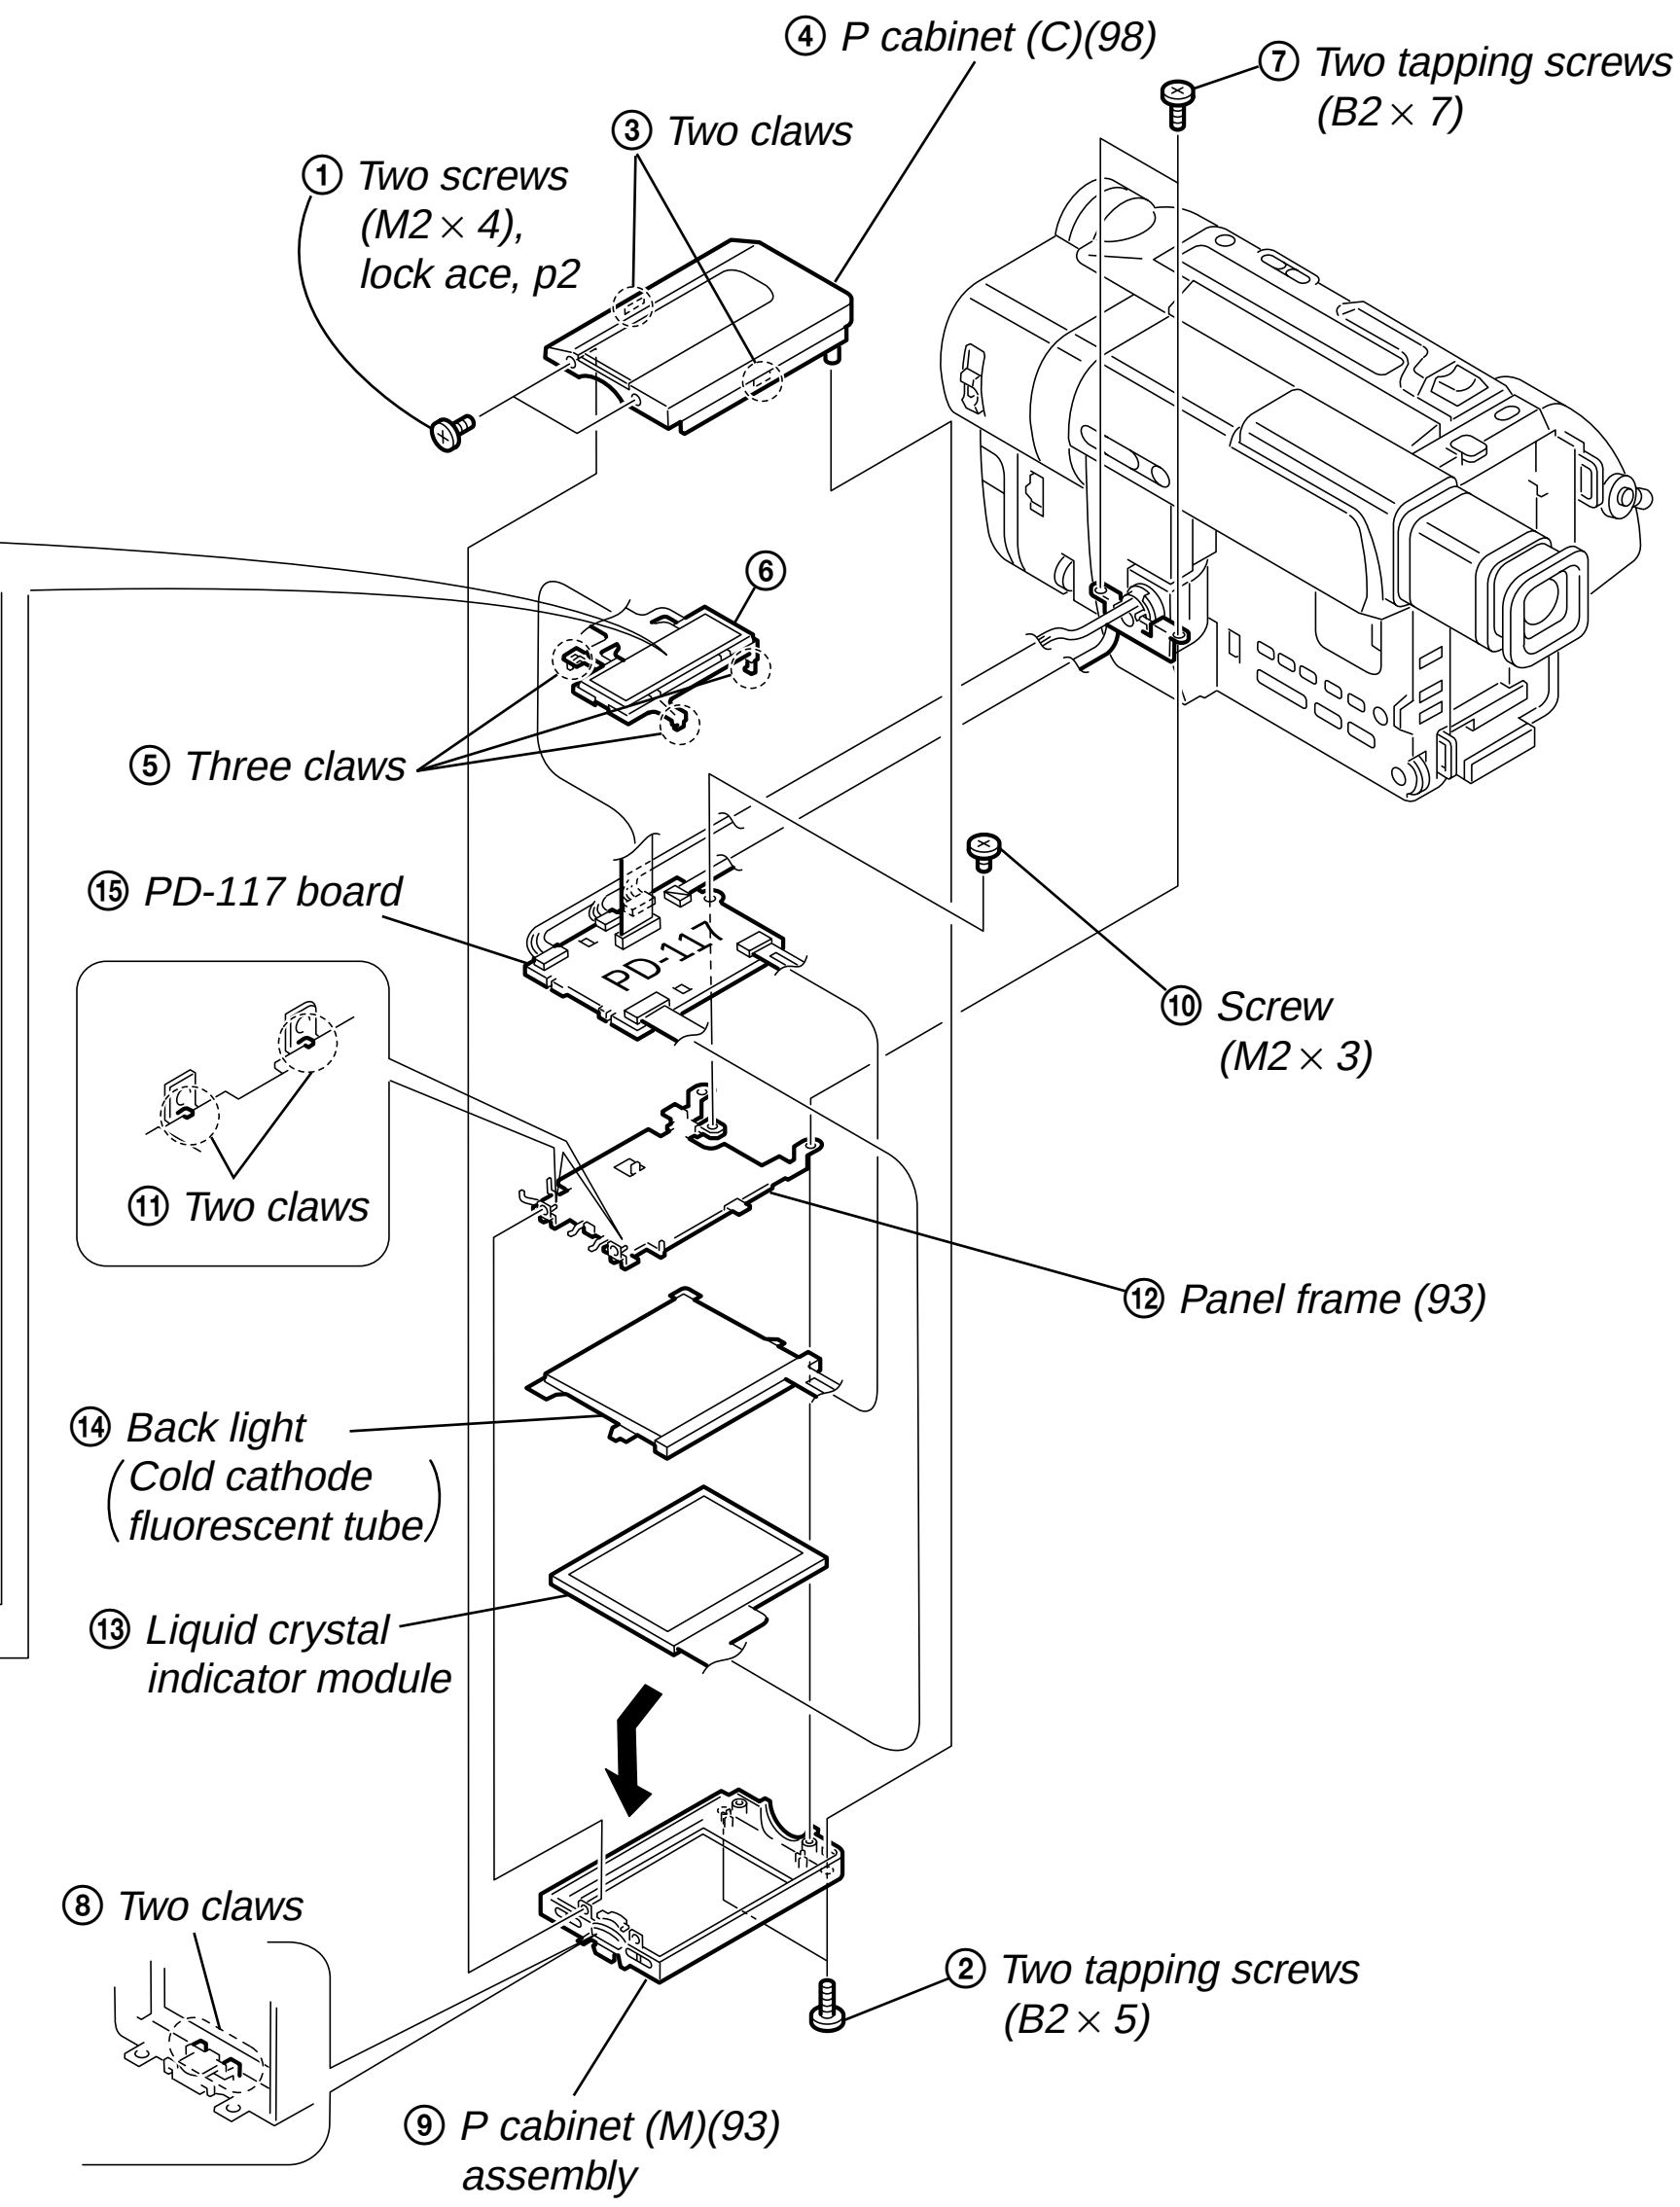
④ P cabinet (C)(98)
⑦ Two tapping screws (B2 × 7)
③ Two claws
① Two screws (M2 × 4), lock ace, p2
⑥
⑤ Three claws
⑮ PD-117 board
PD-117
⑩ Screw (M2 × 3)
⑪ Two claws
⑫ Panel frame (93)
⑭ Back light (Cold cathode fluorescent tube)
⑬ Liquid crystal indicator module
⑧ Two claws
② Two tapping screws (B2 × 5)
⑨ P cabinet (M)(93) assembly

REMOVING THE LIQUID CRYSTAL DISPLAY PANEL

(TRV NIGHT SHOT MODEL)

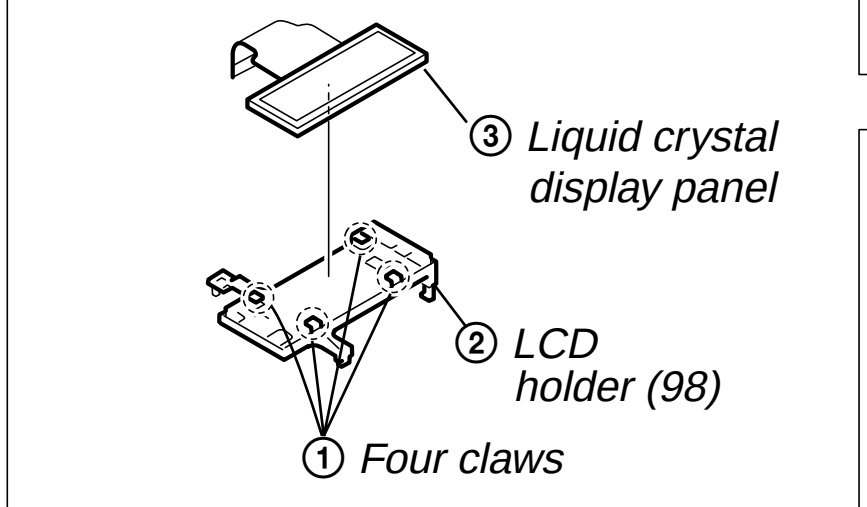
③ Liquid crystal display panel
② LCD holder (98)
① Four claws

(PRECAUTION DURING INSTALLATION)

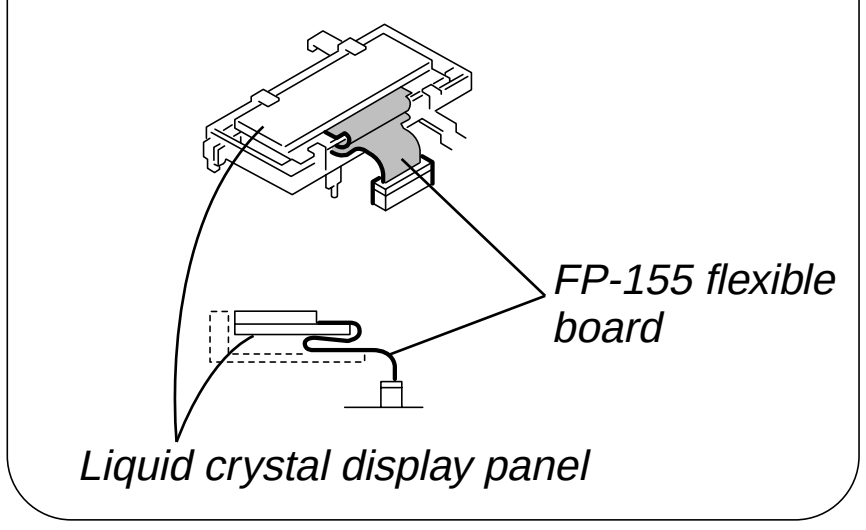
FP-155 flexible board
Liquid crystal display panel

[PD-117 BOARD SERVICE POSITION]

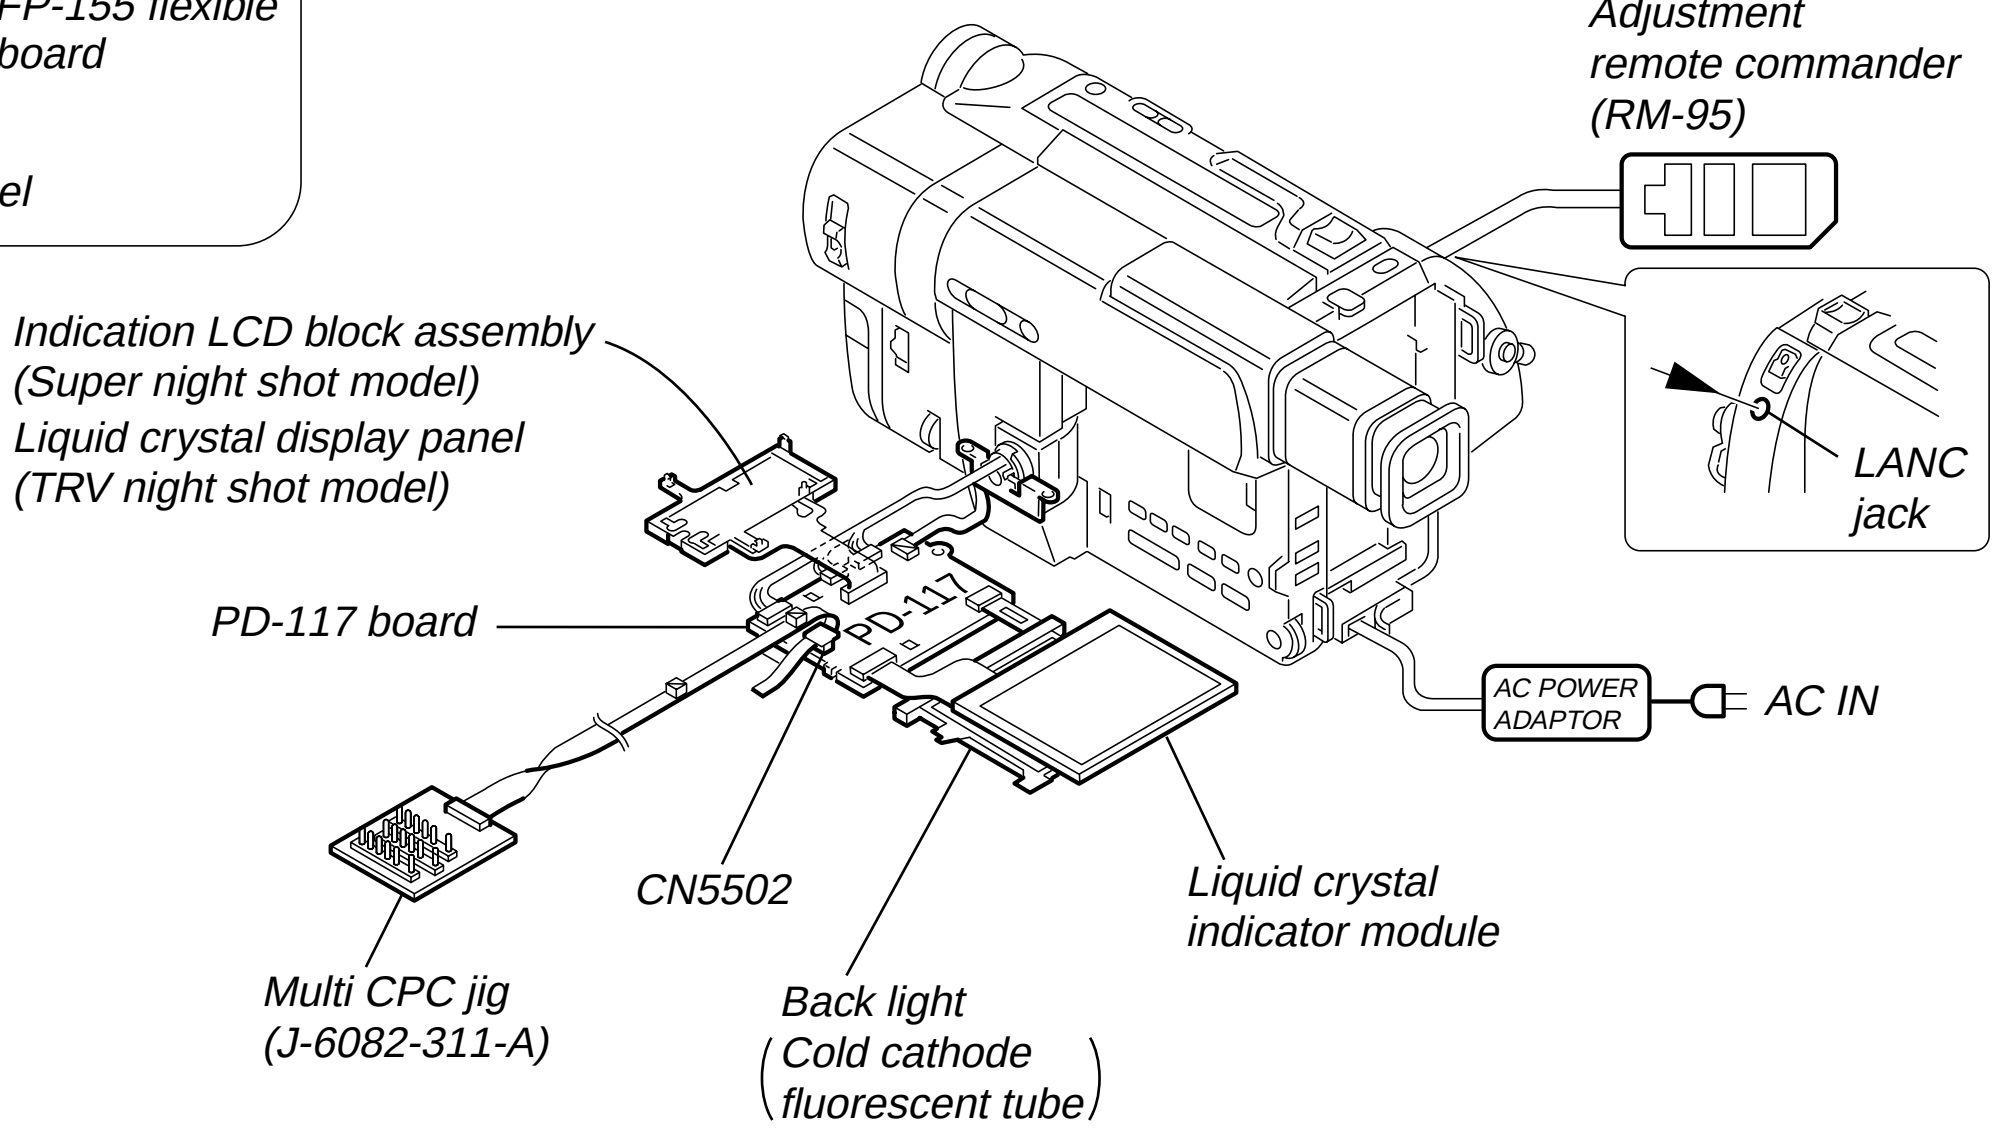
Adjustment remote commander (RM-95)
Indication LCD block assembly (Super night shot model)
Liquid crystal display panel (TRV night shot model)
LANC jack
PD-117 board
PD-117
AC POWER ADAPTOR
AC IN
CN5502
Liquid crystal indicator module
Multi CPC jig (J-6082-311-A)
Back light (Cold cathode fluorescent tube)

2-2. FRONT PANEL ASSEMBLY, MA-374/375 BOARD

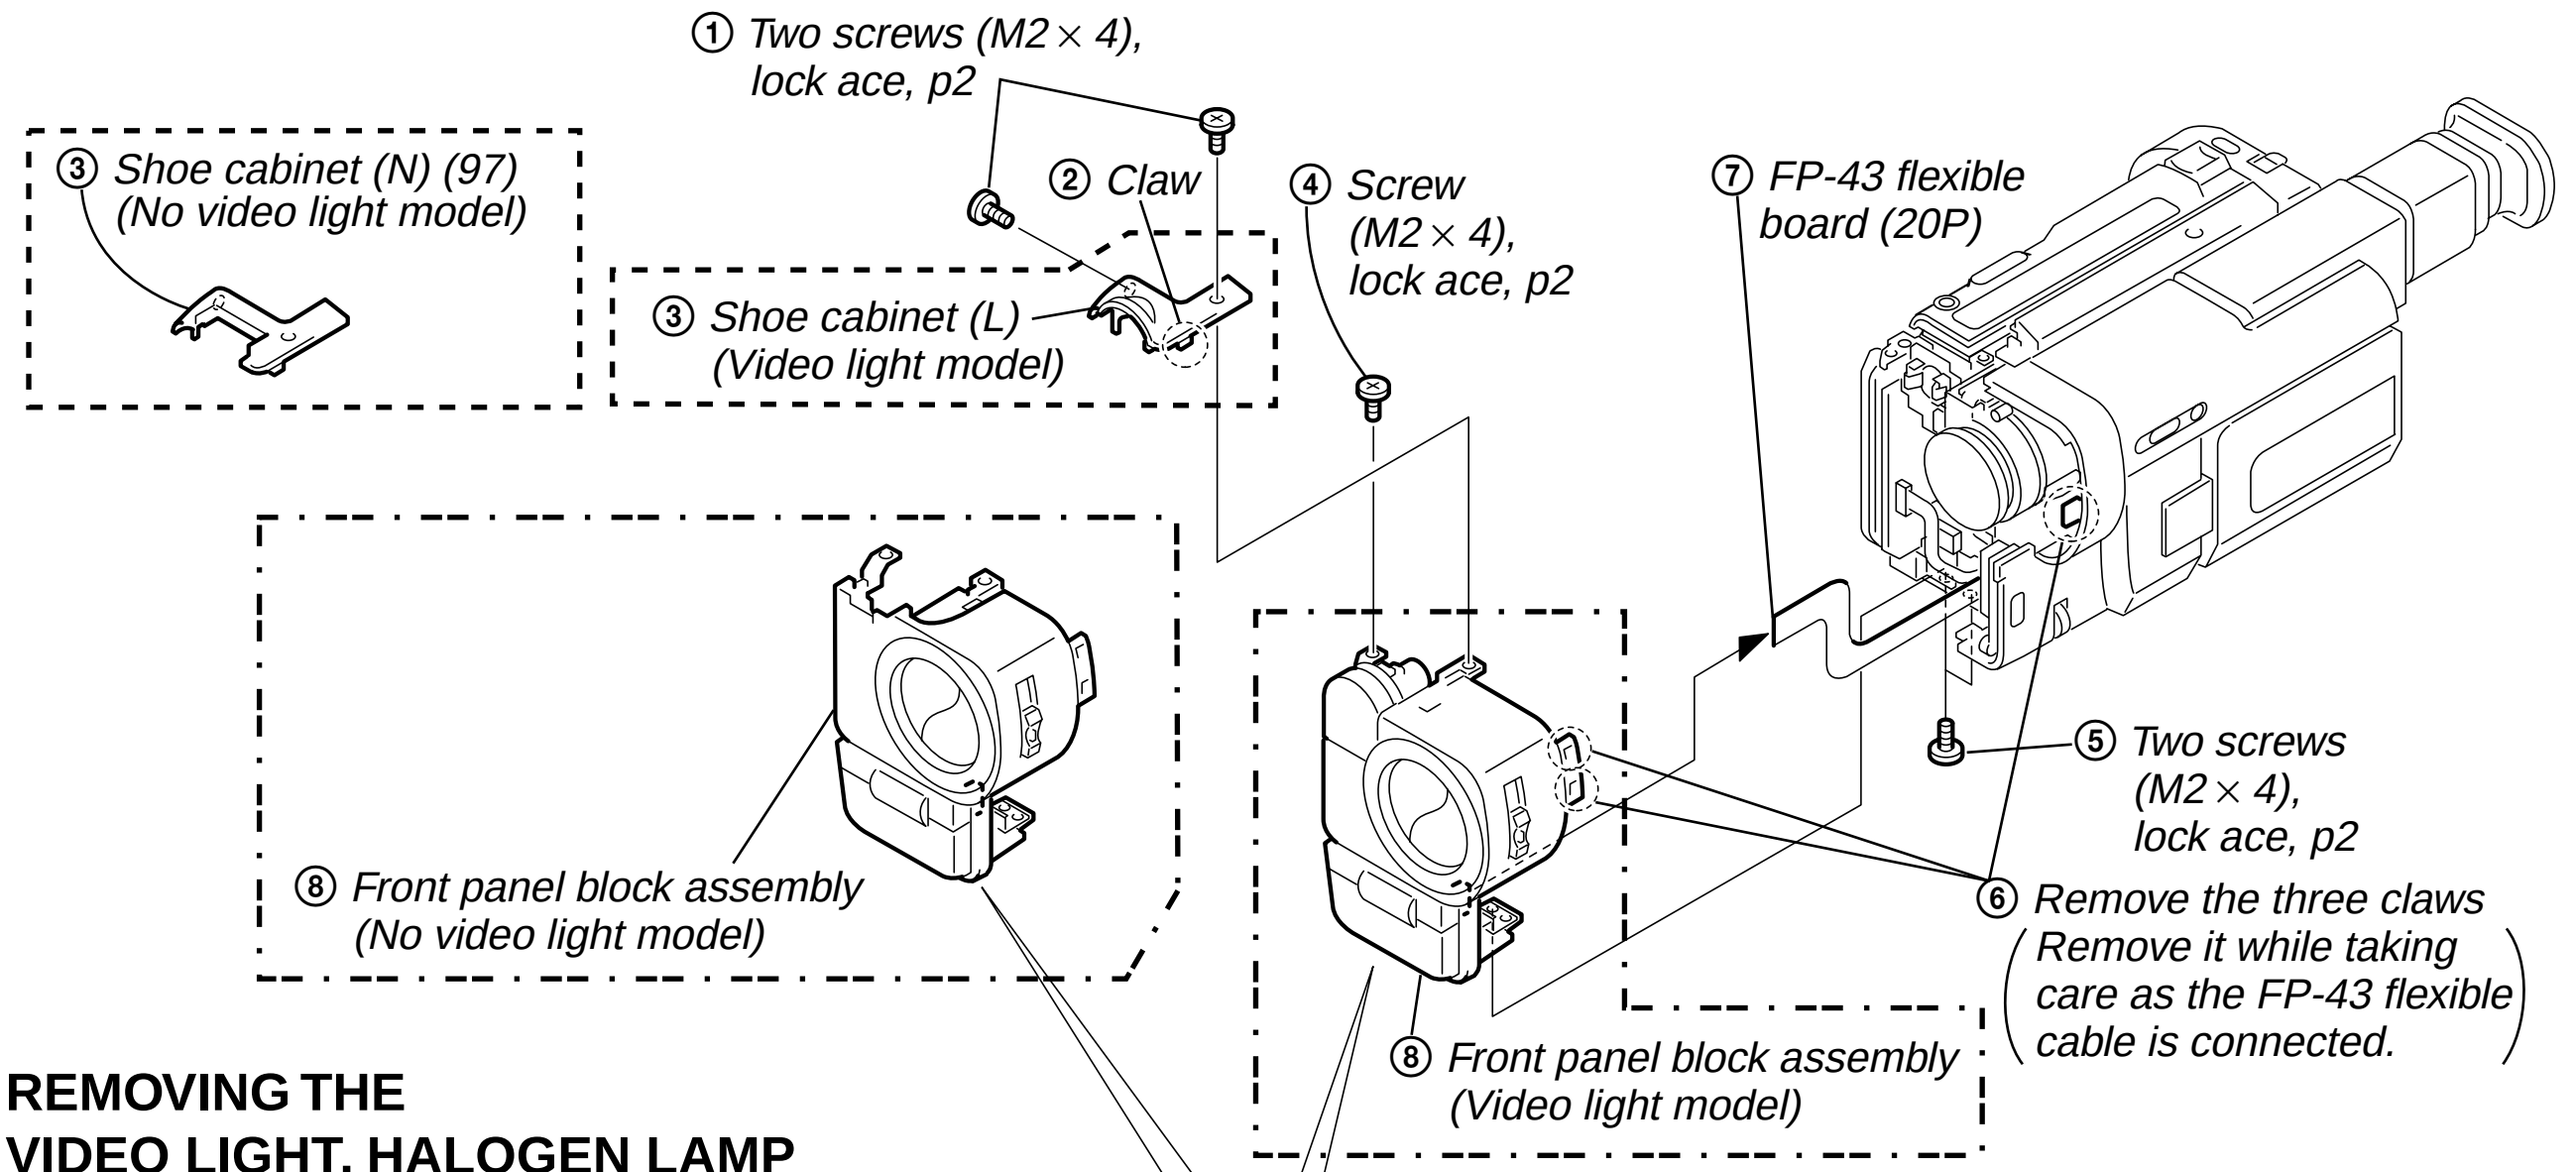
① Two screws (M2 × 4), lock ace, p2
③ Shoe cabinet (N) (97) (No video light model)
② Claw
③ Shoe cabinet (L) (Video light model)
④ Screw (M2 × 4), lock ace, p2
⑦ FP-43 flexible board (20P)
⑤ Two screws (M2 × 4), lock ace, p2
⑥ Remove the three claws
Remove it while taking care as the FP-43 flexible cable is connected.
⑧ Front panel block assembly (No video light model)
⑧ Front panel block assembly (Video light model)

REMOVING THE VIDEO LIGHT, HALOGEN LAMP

(VIDEO LIGHT MODEL)

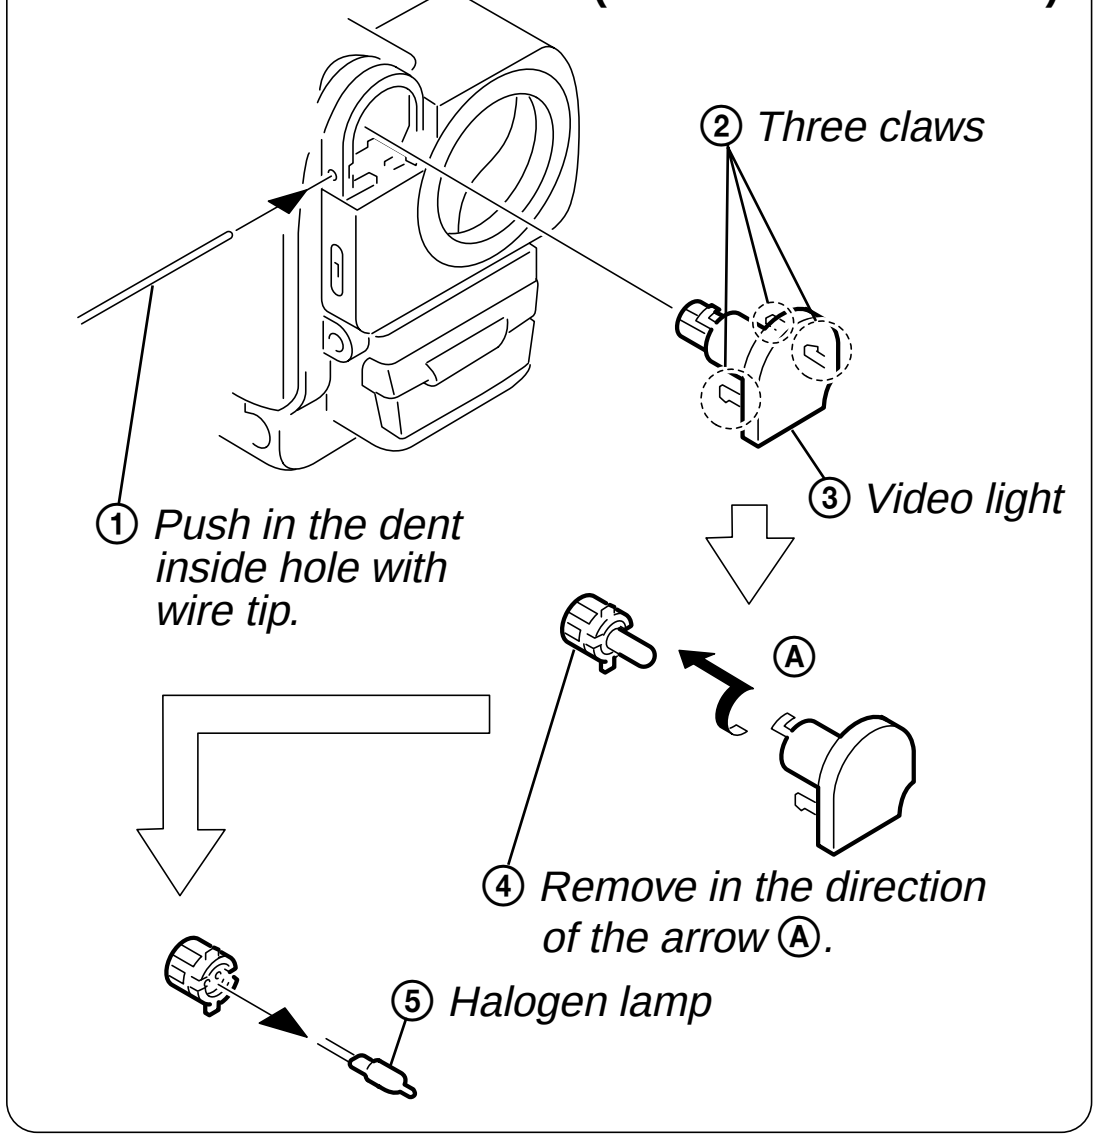
② Three claws
③ Video light
① Push in the dent inside hole with wire tip.
Ⓐ
④ Remove in the direction of the arrow Ⓐ.
⑤ Halogen lamp

REMOVING THE MA-374/375 BOARD, MICROPHONE, FRONT PANEL (97) ASSEMBLY

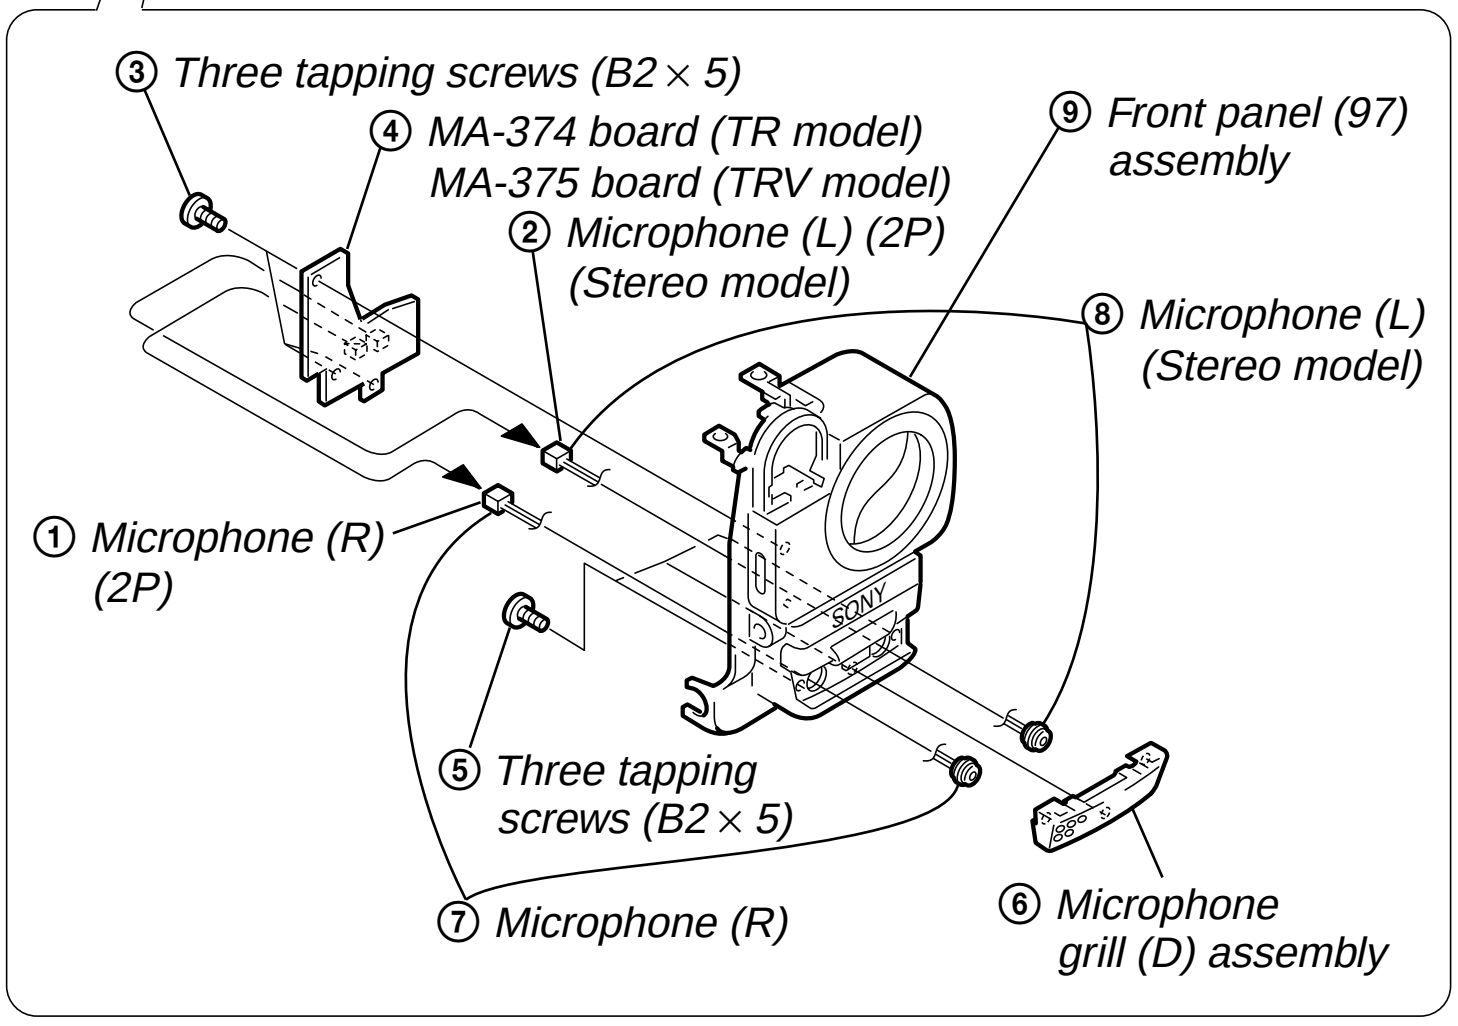
③ Three tapping screws (B2 × 5)
④ MA-374 board (TR model)
MA-375 board (TRV model)
⑨ Front panel (97) assembly
② Microphone (L) (2P) (Stereo model)
⑧ Microphone (L) (Stereo model)
① Microphone (R) (2P)
SONY
⑤ Three tapping screws (B2 × 5)
⑦ Microphone (R)
⑥ Microphone grill (D) assembly

[MA-374/375 BOARD SERVICE POSITION]

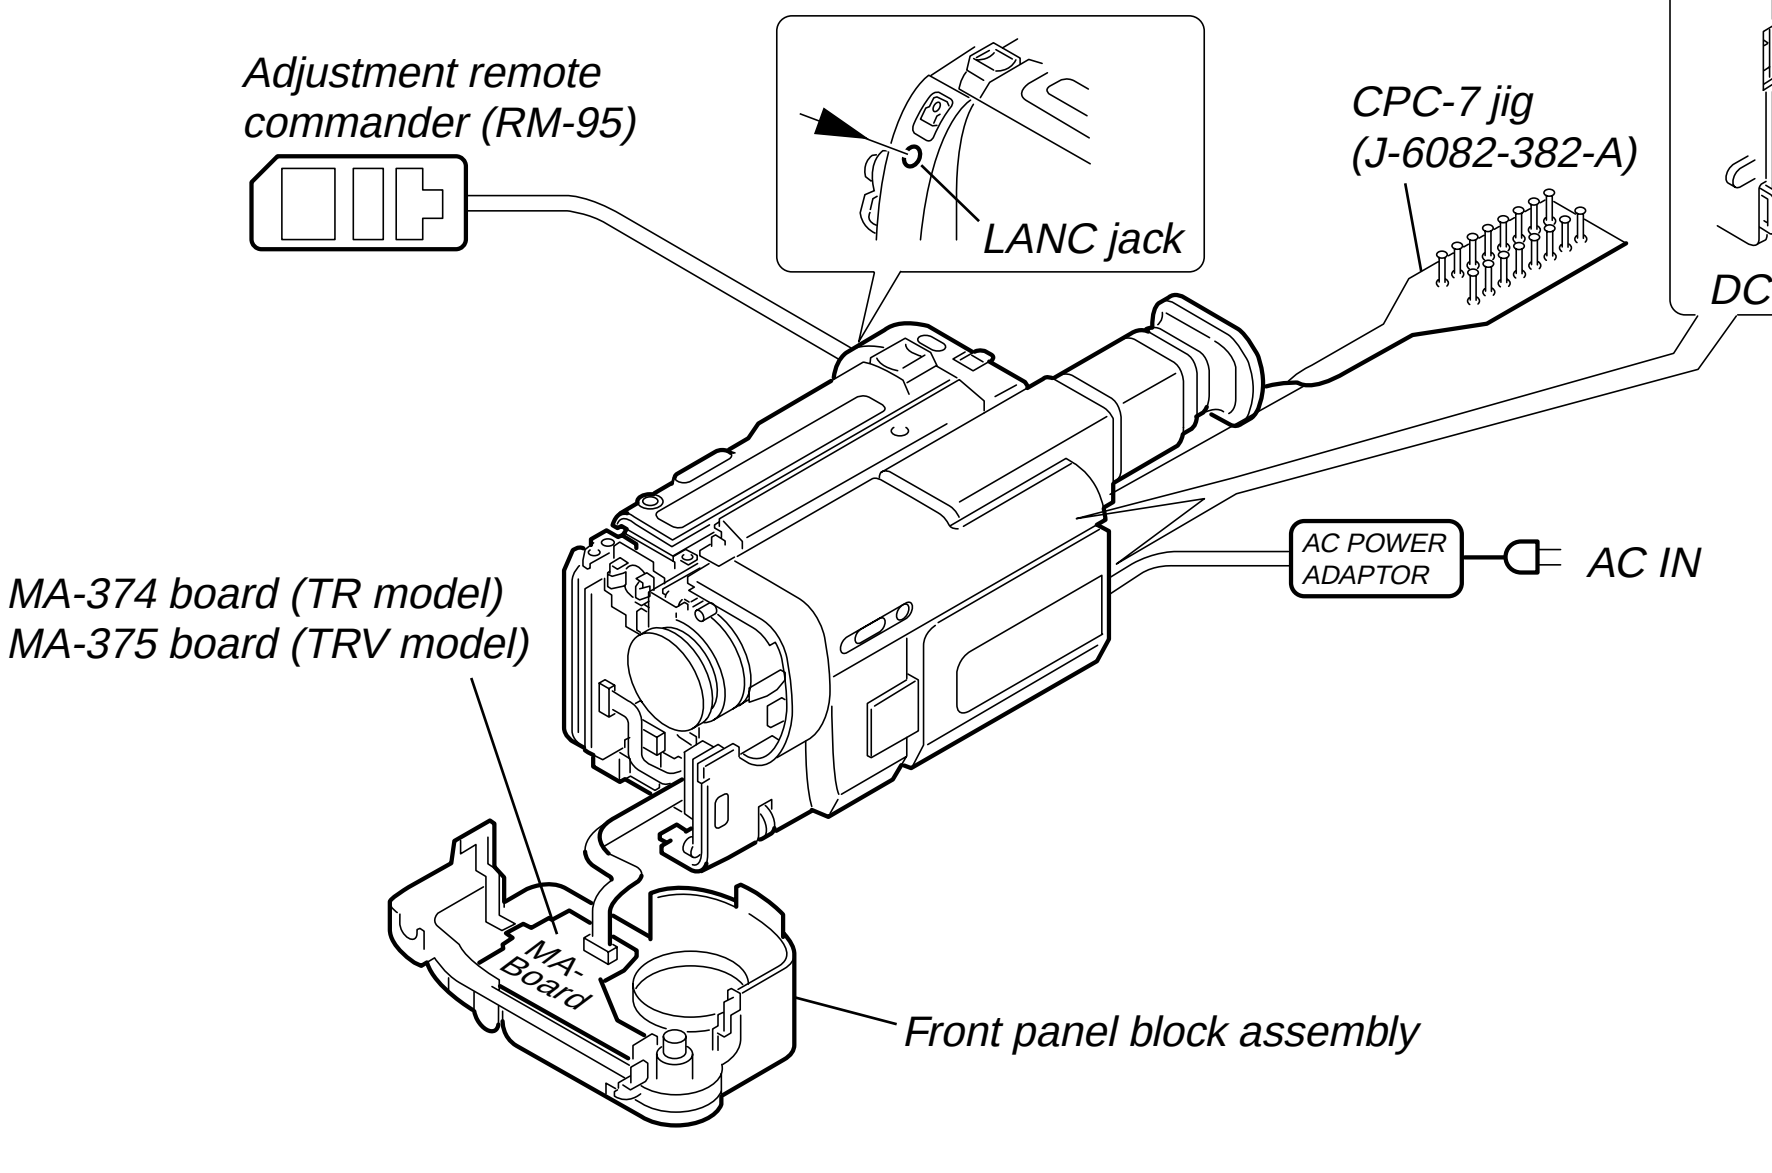
Adjustment remote commander (RM-95)
LANC jack
CPC-7 jig (J-6082-382-A)
AC POWER ADAPTOR
AC IN
MA-374 board (TR model)
MA-375 board (TRV model)
MA-Board
Front panel block assembly

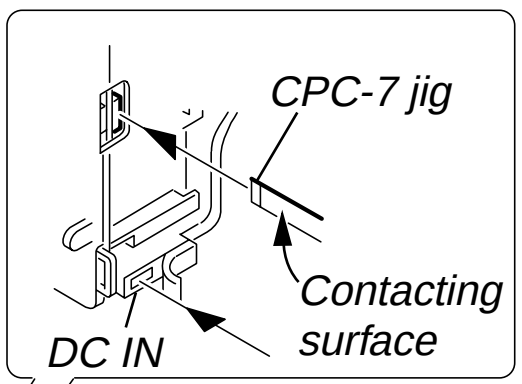
CPC-7 jig
Contacting surface
DC IN

REMOVING THE CPC LID (BT)

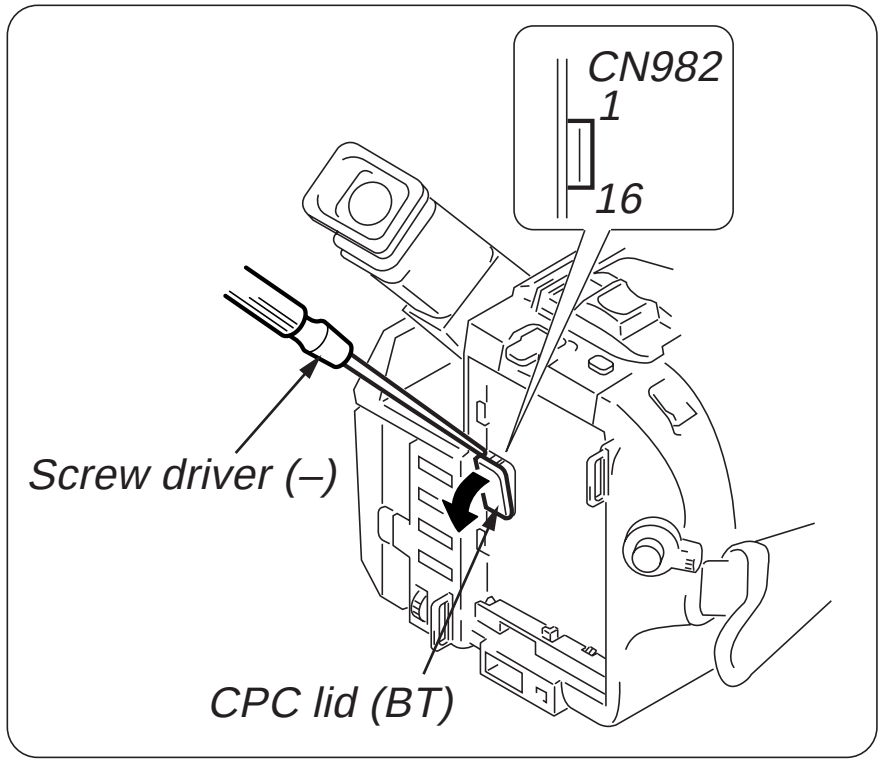
CN982
1
16
Screw driver (–)
CPC lid (BT)

2-3. CABINET (R) BLOCK ASSEMBLY

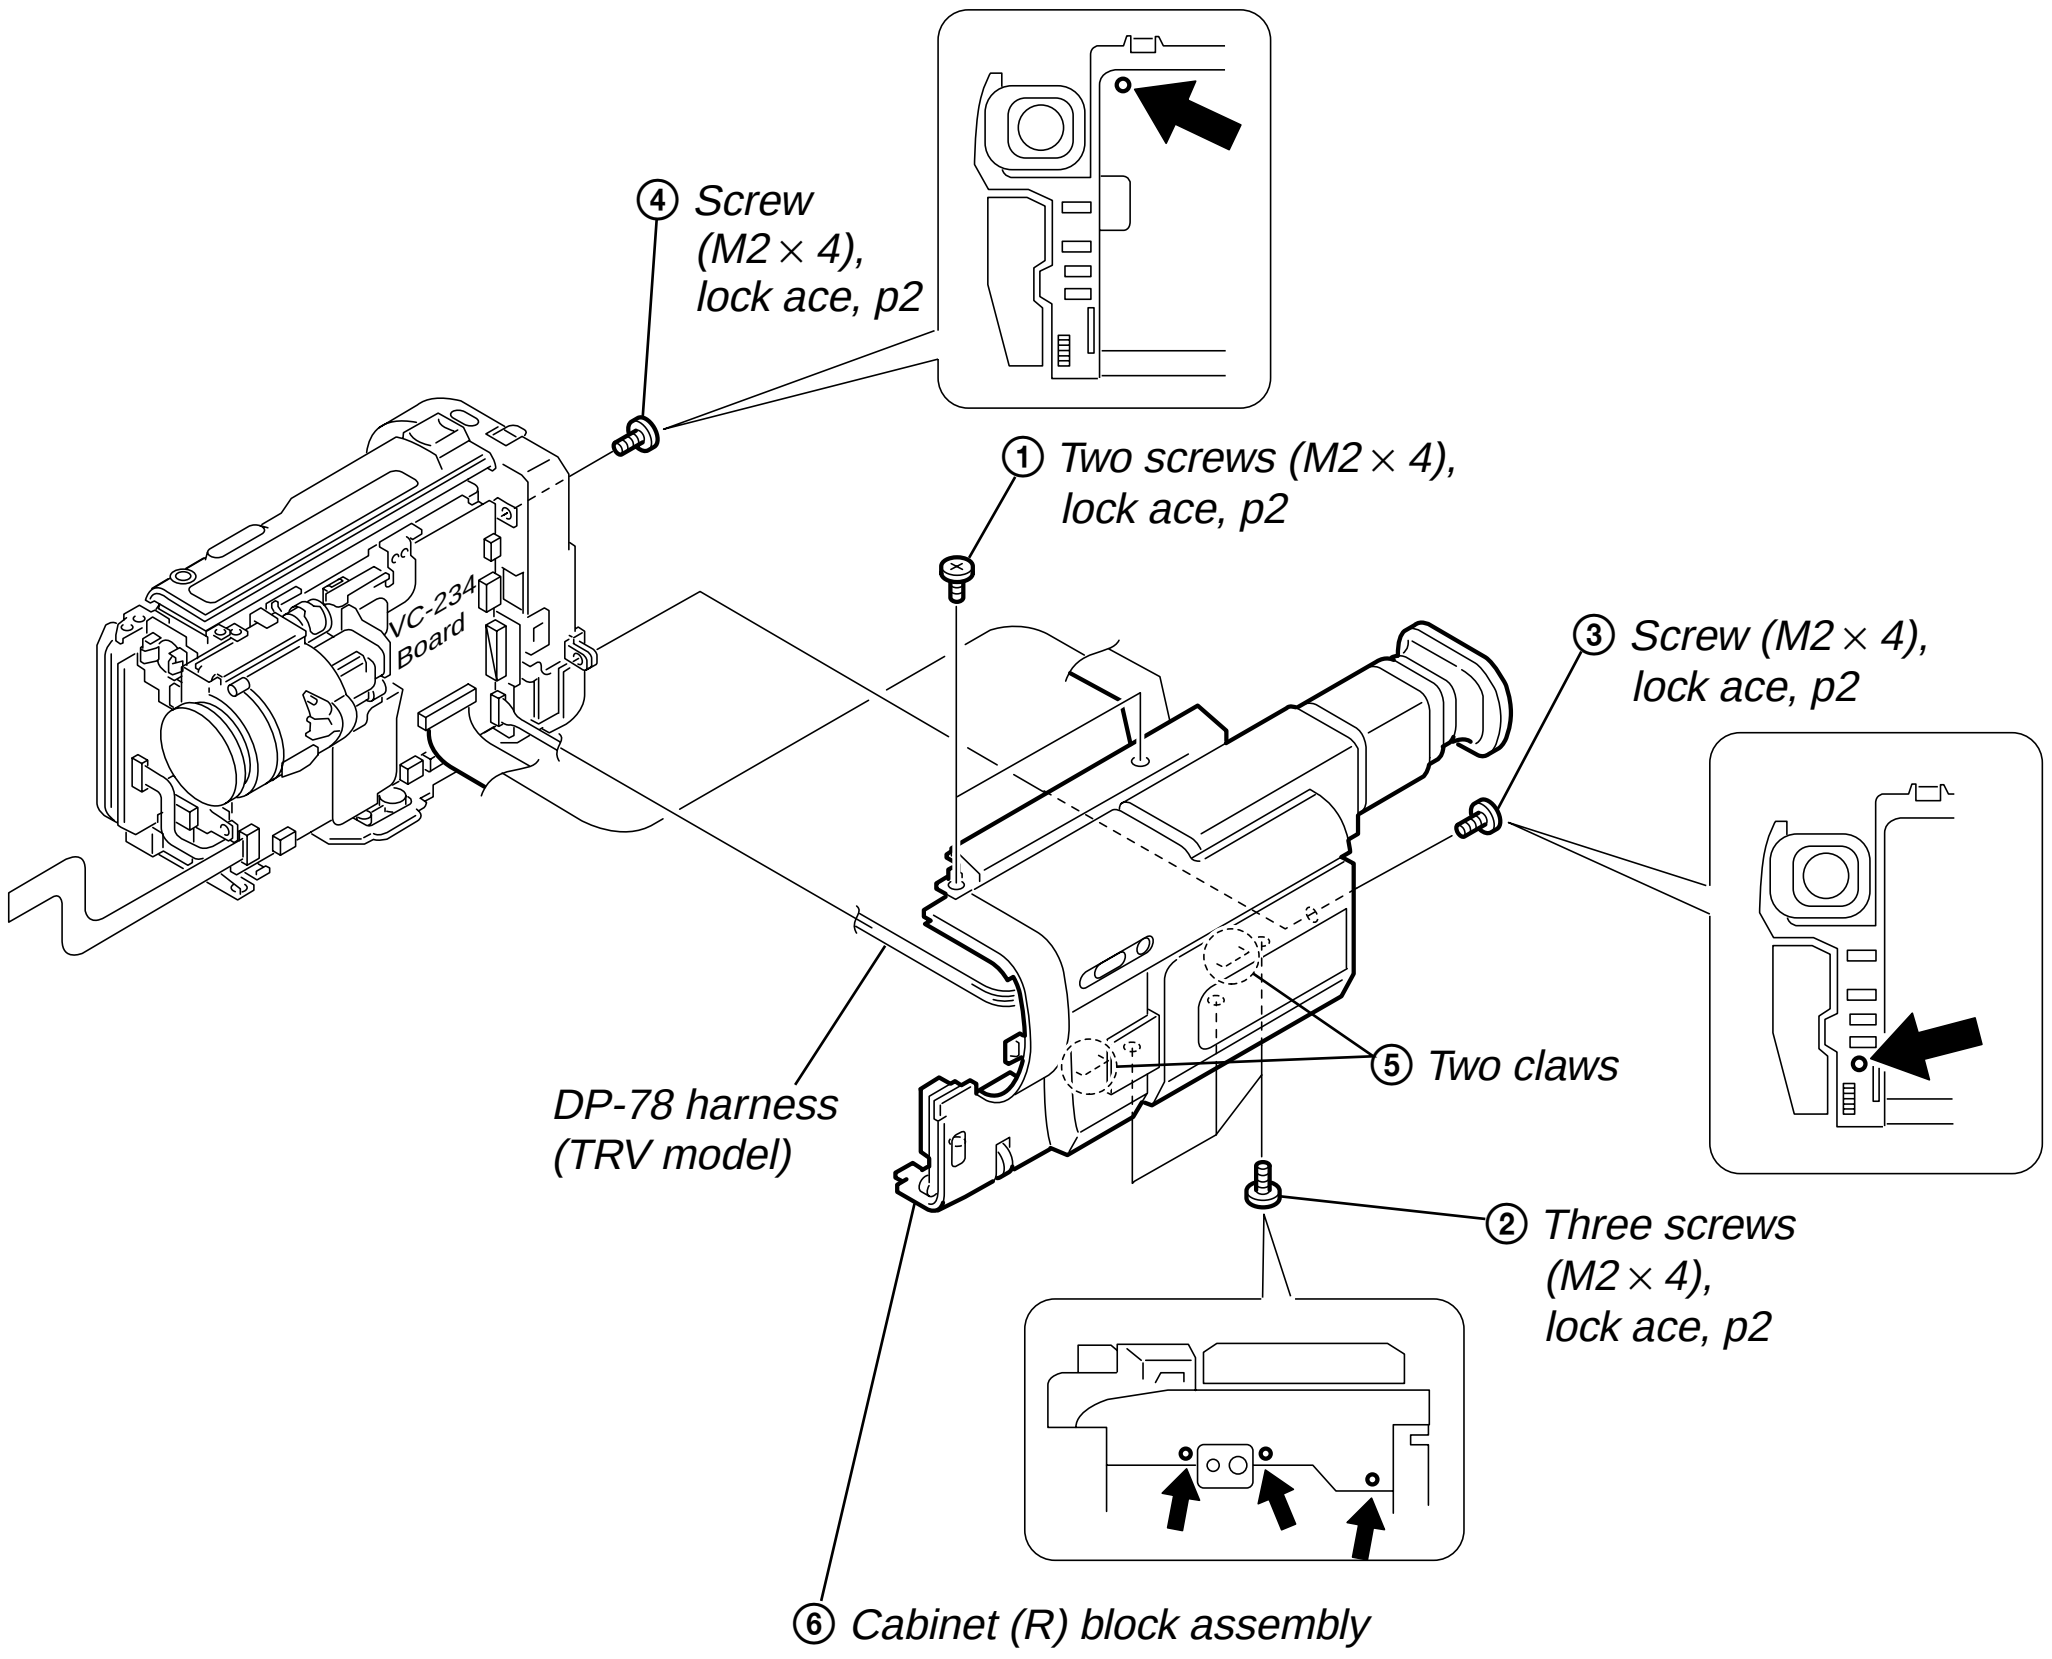
④ Screw (M2 × 4), lock ace, p2
① Two screws (M2 × 4), lock ace, p2
③ Screw (M2 × 4), lock ace, p2
VC-234 Board
⑤ Two claws
DP-78 harness (TRV model)
② Three screws (M2 × 4), lock ace, p2
⑥ Cabinet (R) block assembly

[MA-374/375, CF-66/67, CD-239/240 BOARDS SERVICE POSITION]

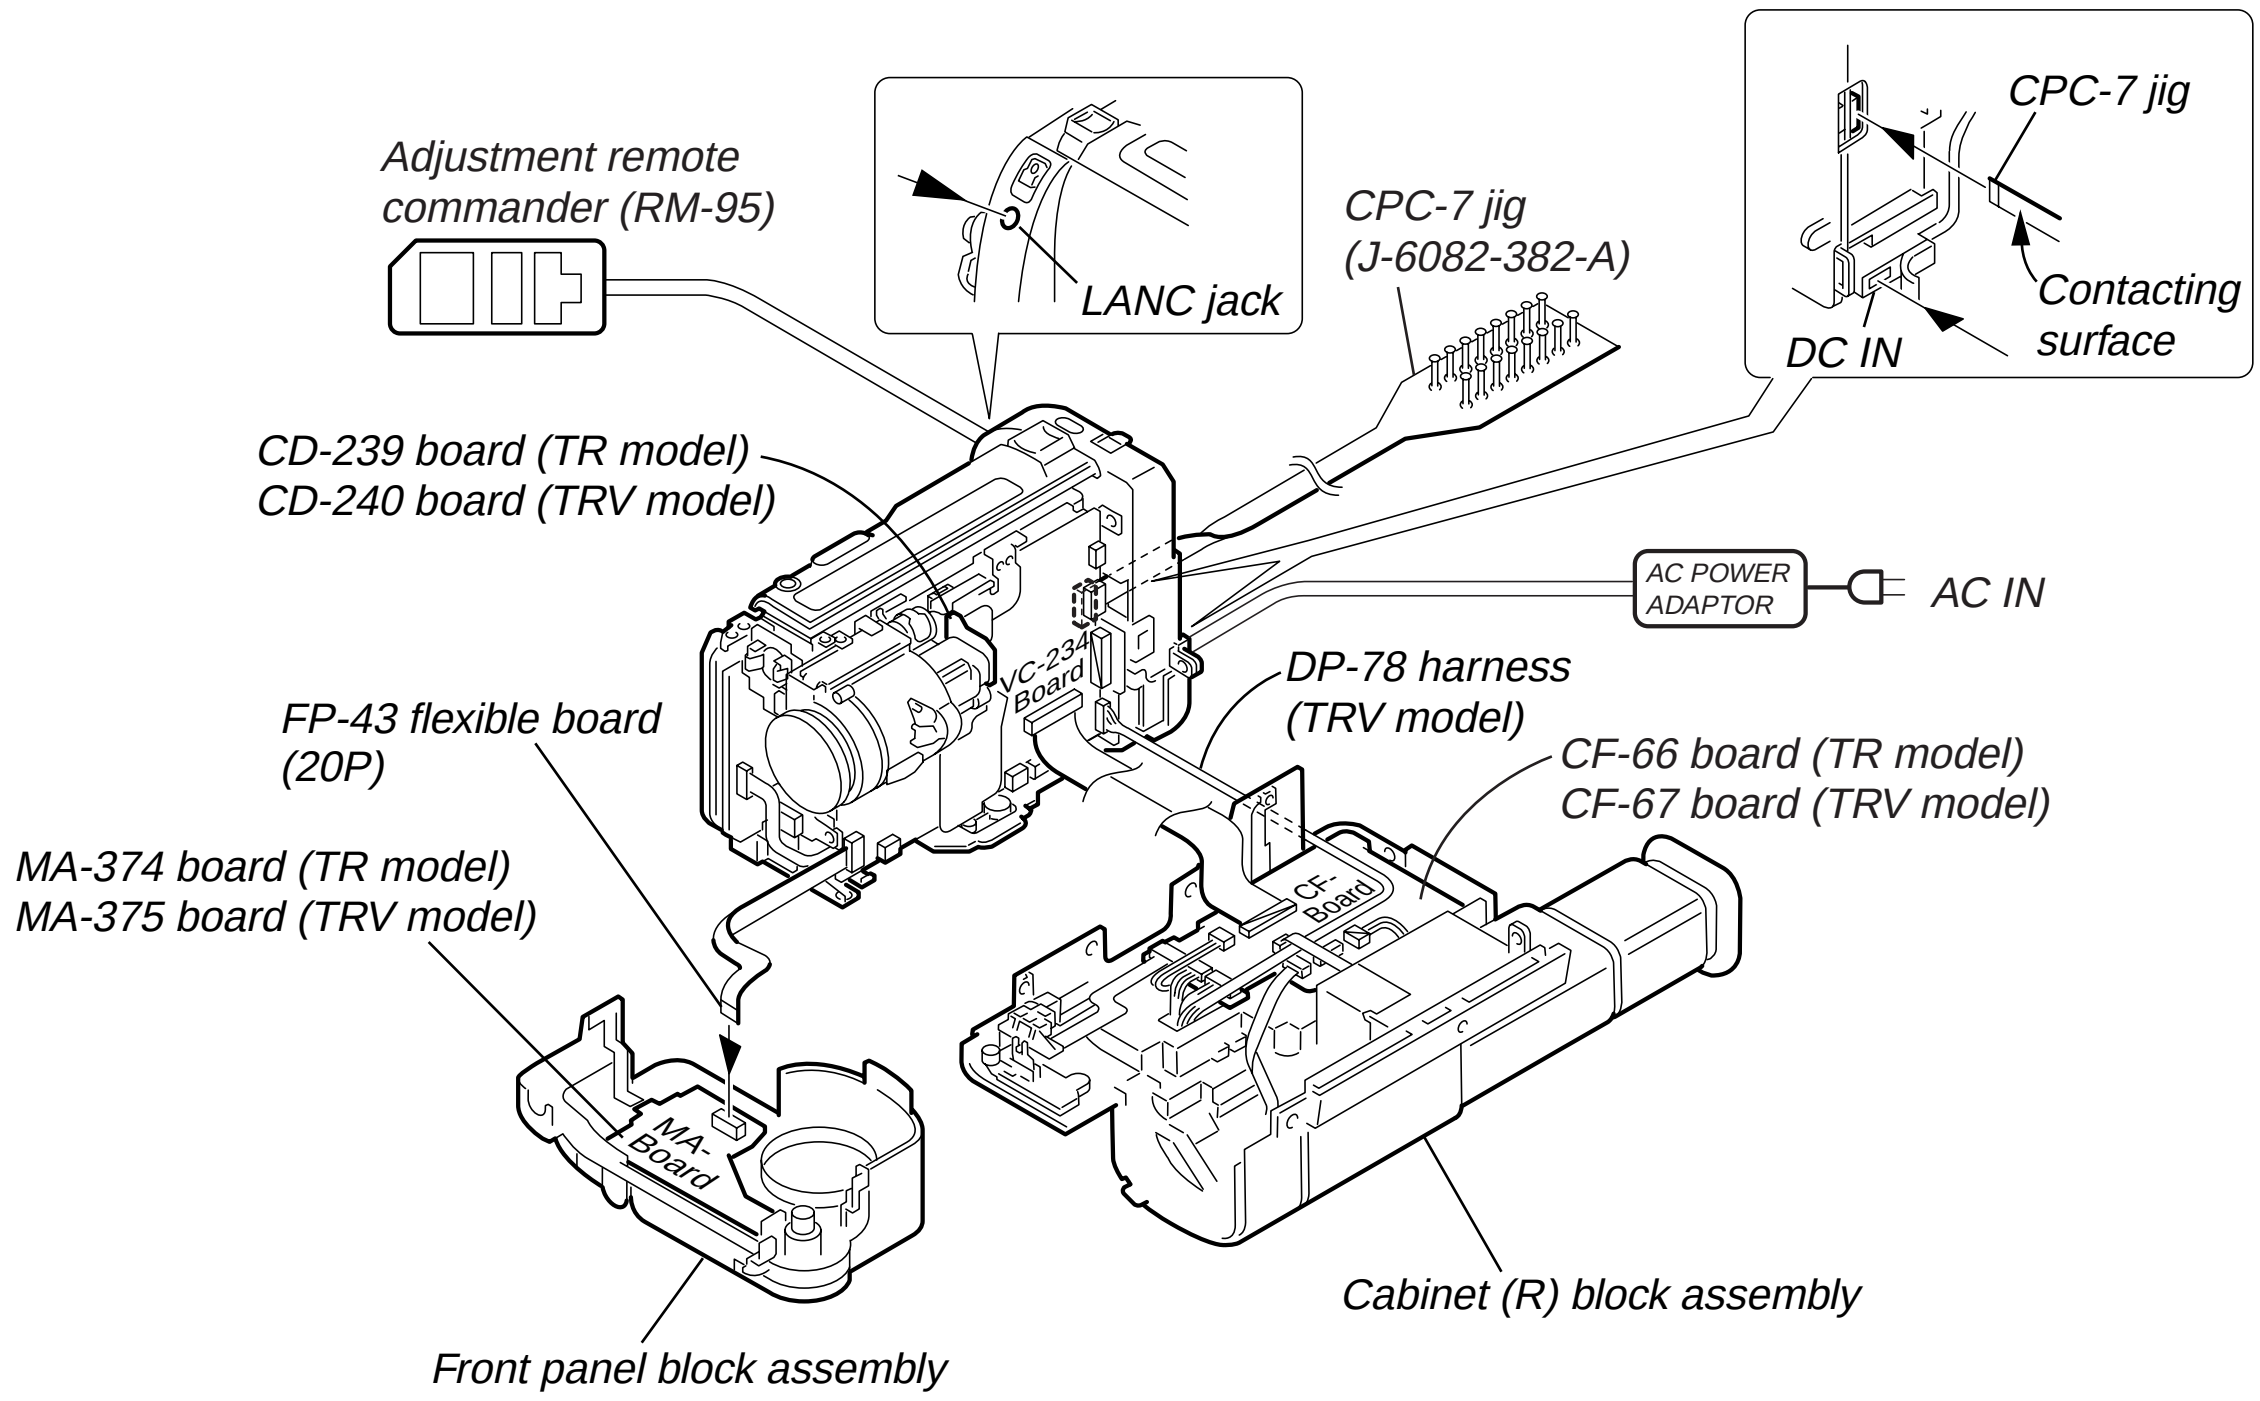
Adjustment remote commander (RM-95)
LANC jack
CPC-7 jig (J-6082-382-A)
CPC-7 jig
Contacting surface
DC IN
CD-239 board (TR model)
CD-240 board (TRV model)
AC POWER ADAPTOR
AC IN
VC-234 Board
DP-78 harness (TRV model)
FP-43 flexible board (20P)
CF-66 board (TR model)
CF-67 board (TRV model)
MA-374 board (TR model)
MA-375 board (TRV model)
CF-Board
MA-Board
Cabinet (R) block assembly
Front panel block assembly

2-4. MECHANISM DECK-1

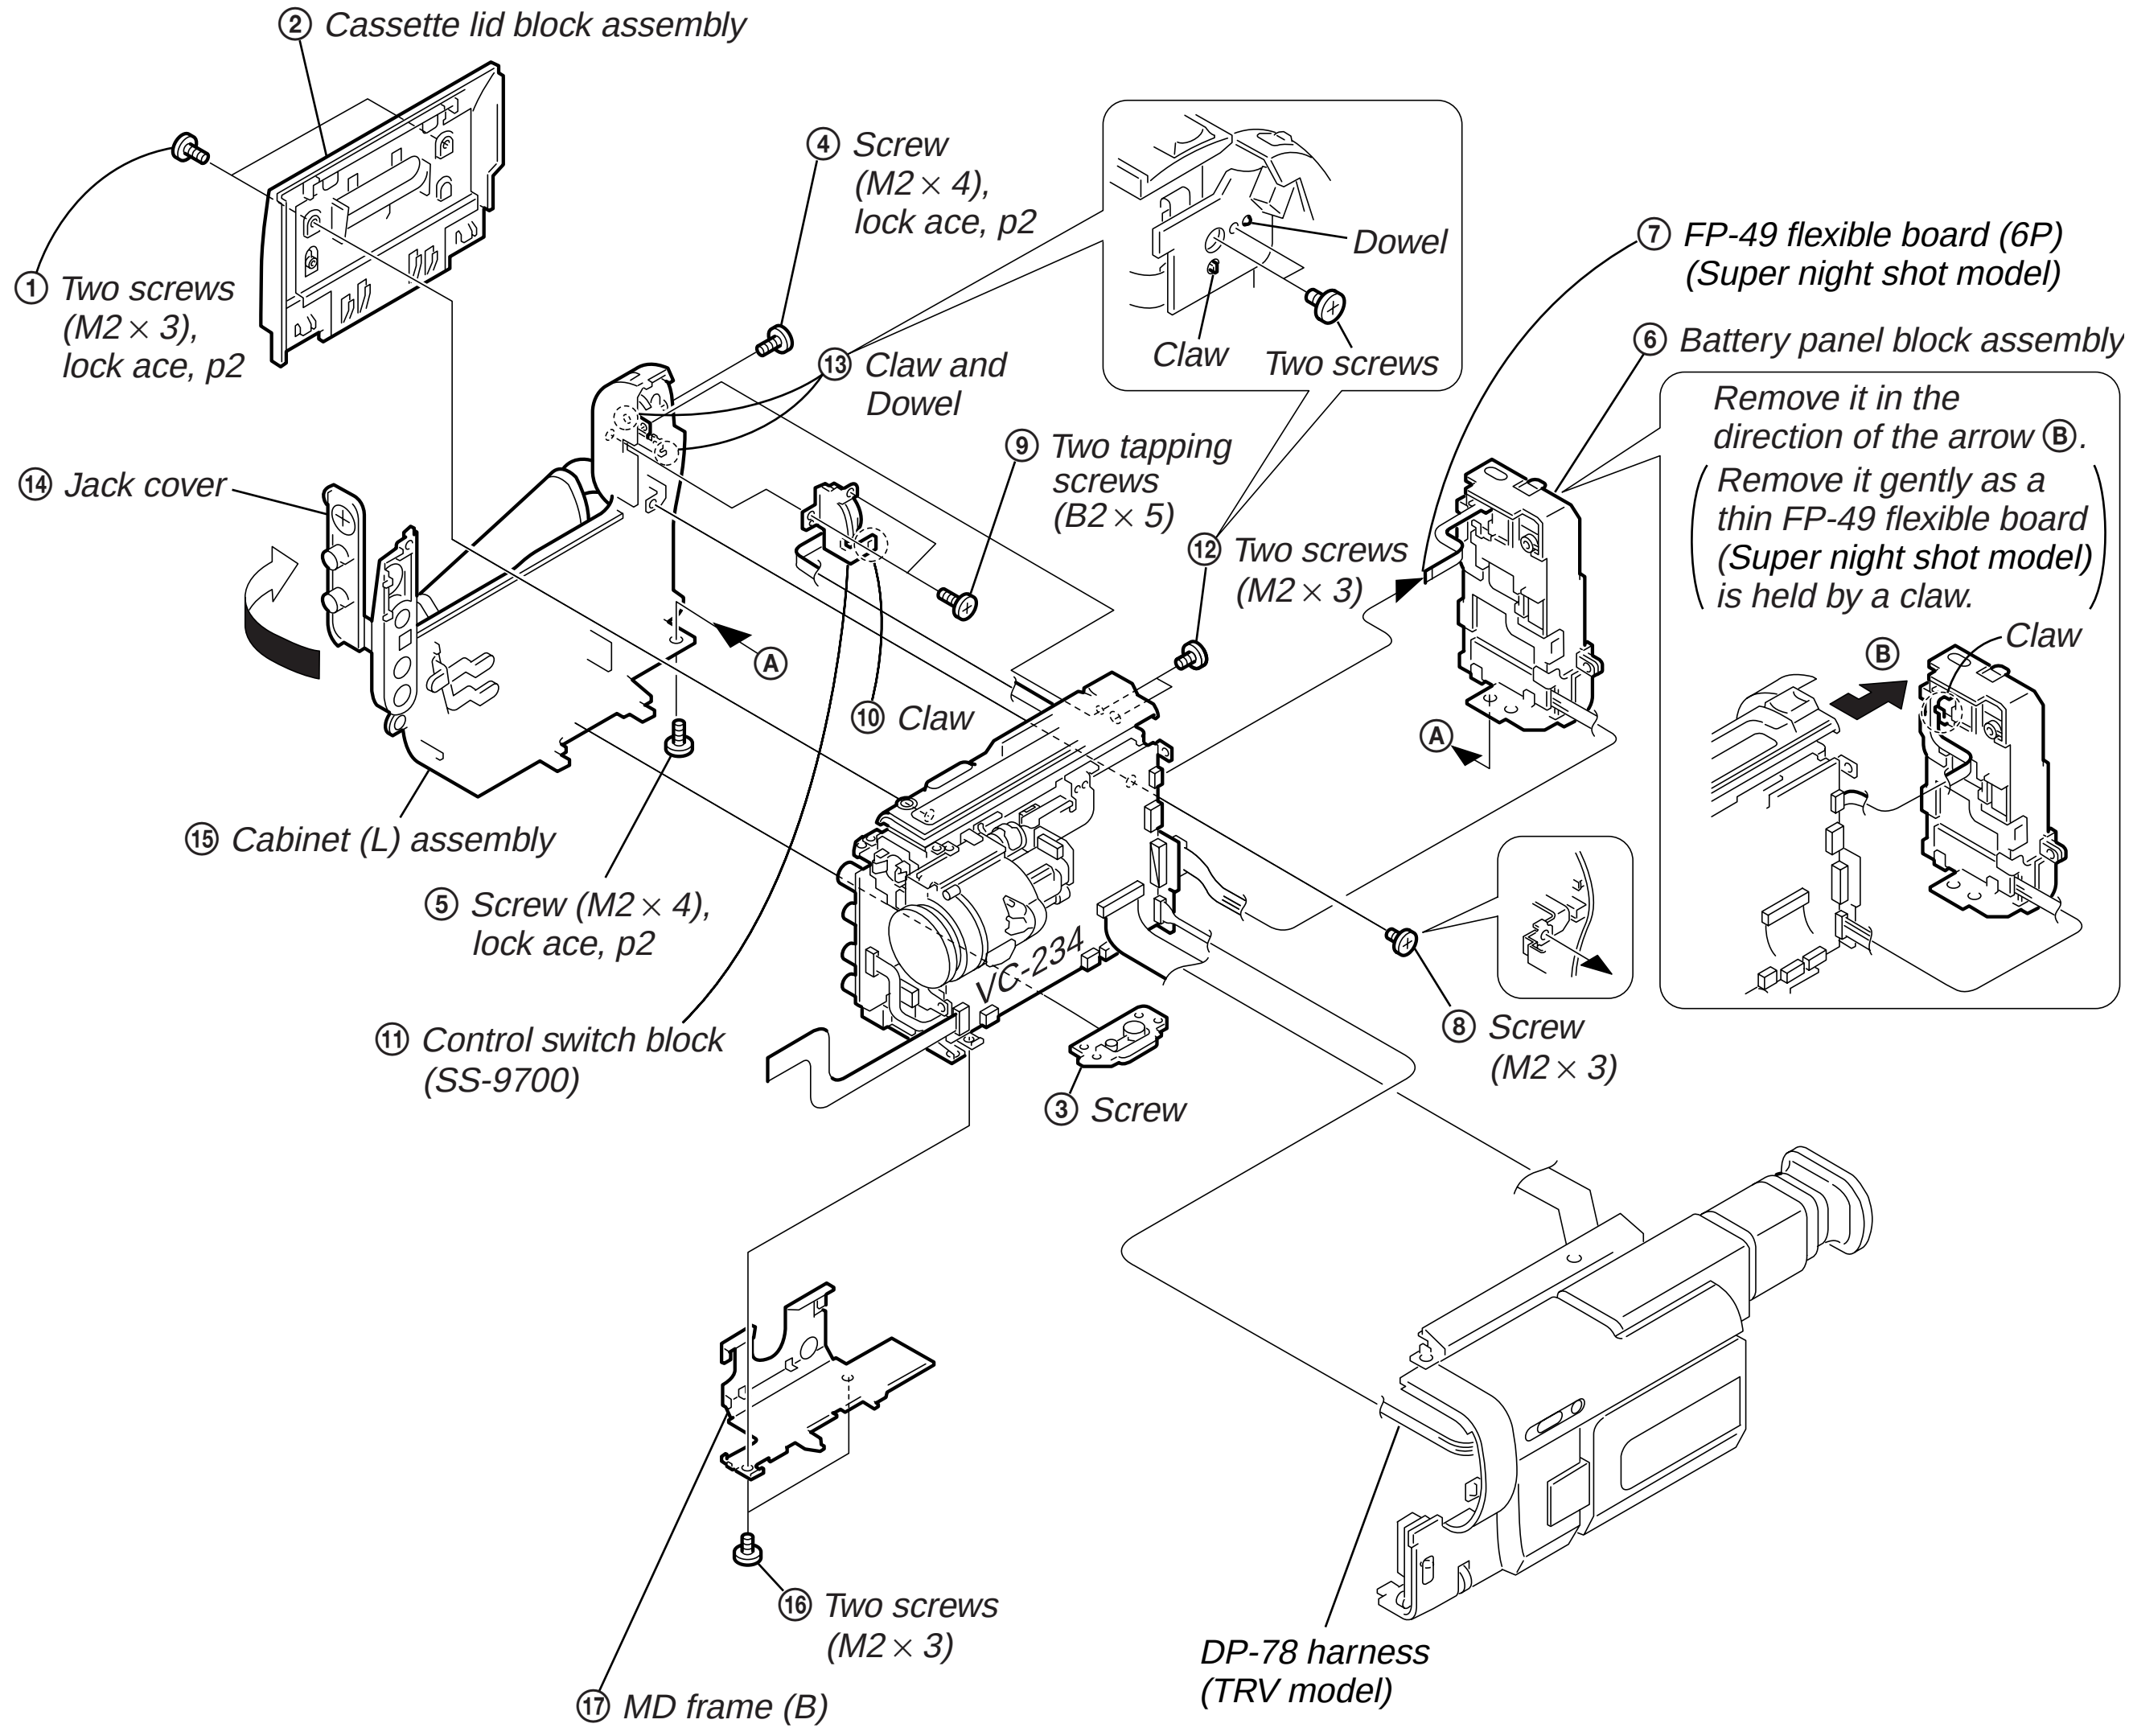
② Cassette lid block assembly
④ Screw (M2 × 4), lock ace, p2
Dowel
Claw
Two screws
⑦ FP-49 flexible board (6P) (Super night shot model)
① Two screws (M2 × 3), lock ace, p2
⑬ Claw and Dowel
⑥ Battery panel block assembly
Remove it in the direction of the arrow Ⓑ.
Remove it gently as a thin FP-49 flexible board (Super night shot model) is held by a claw.
⑨ Two tapping screws (B2 × 5)
⑭ Jack cover
⑫ Two screws (M2 × 3)
Claw
Ⓑ
Ⓐ
⑩ Claw
Ⓐ
⑮ Cabinet (L) assembly
⑤ Screw (M2 × 4), lock ace, p2
VC-234
⑪ Control switch block (SS-9700)
⑧ Screw (M2 × 3)
③ Screw
⑯ Two screws (M2 × 3)
DP-78 harness (TRV model)
⑰ MD frame (B)

[AEP, EE, NE, RU, UK MODEL]

Remove the MD frame (B) and IM shield assembly (97) after completing step ⑯.

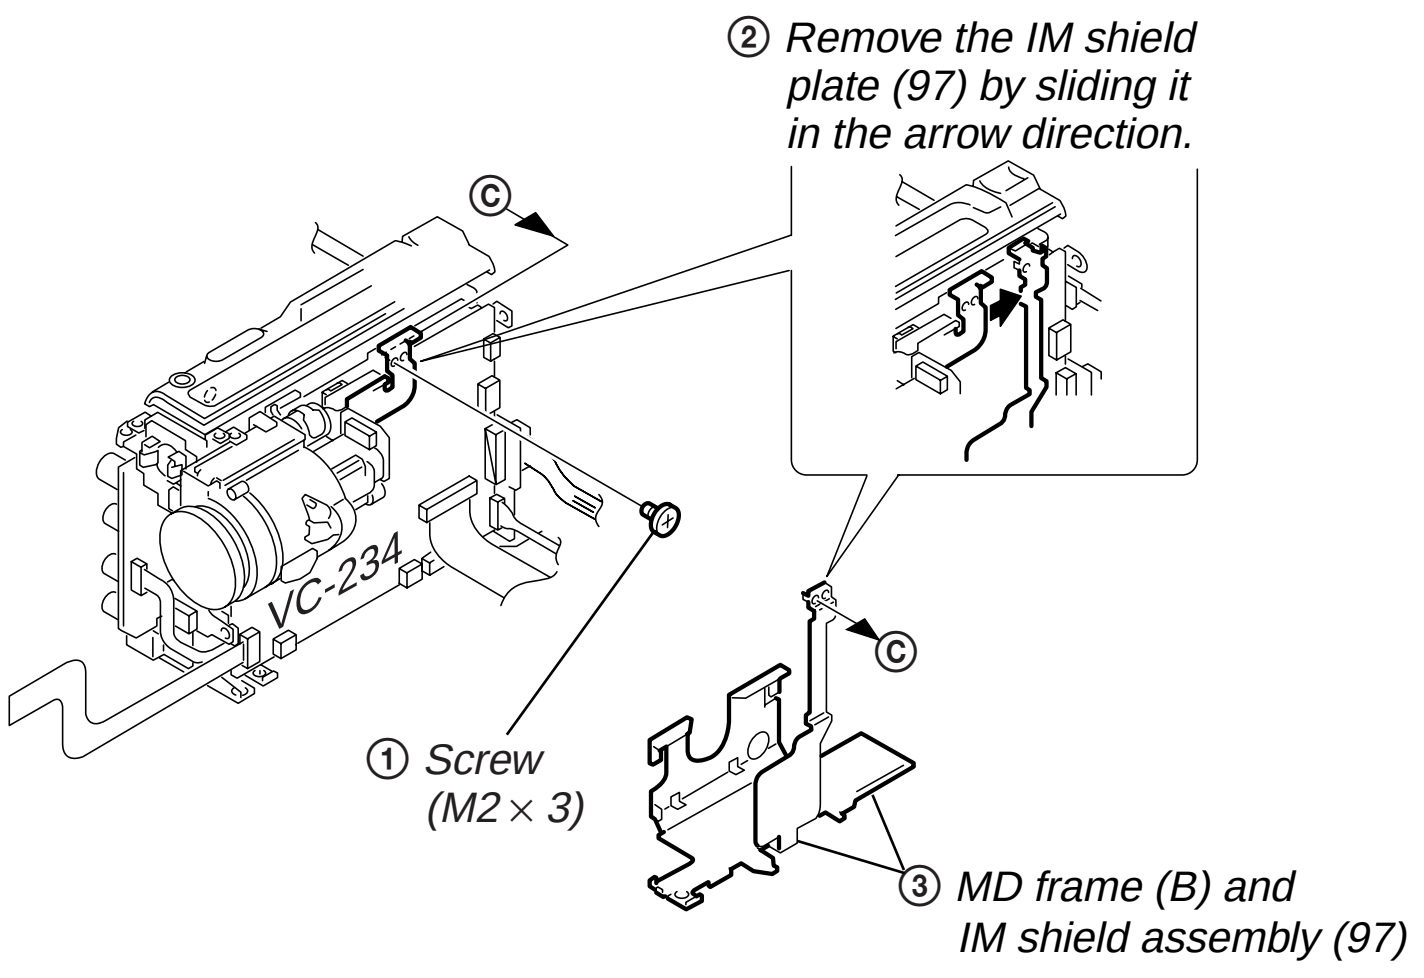
② Remove the IM shield plate (97) by sliding it in the arrow direction.
Ⓒ
VC-234
Ⓒ
① Screw (M2 × 3)
③ MD frame (B) and IM shield assembly (97)

[MECHANISM DECK SERVICE POSITION-1]

Note: *Use the parts only which can be removed easily from outside of the mechanism deck.*

- ***How to move up the cassette compartment manually***

(Press the cassette compartment in the direction of the arrow Ⓒ to move it up in the direction of the arrow Ⓓ.)

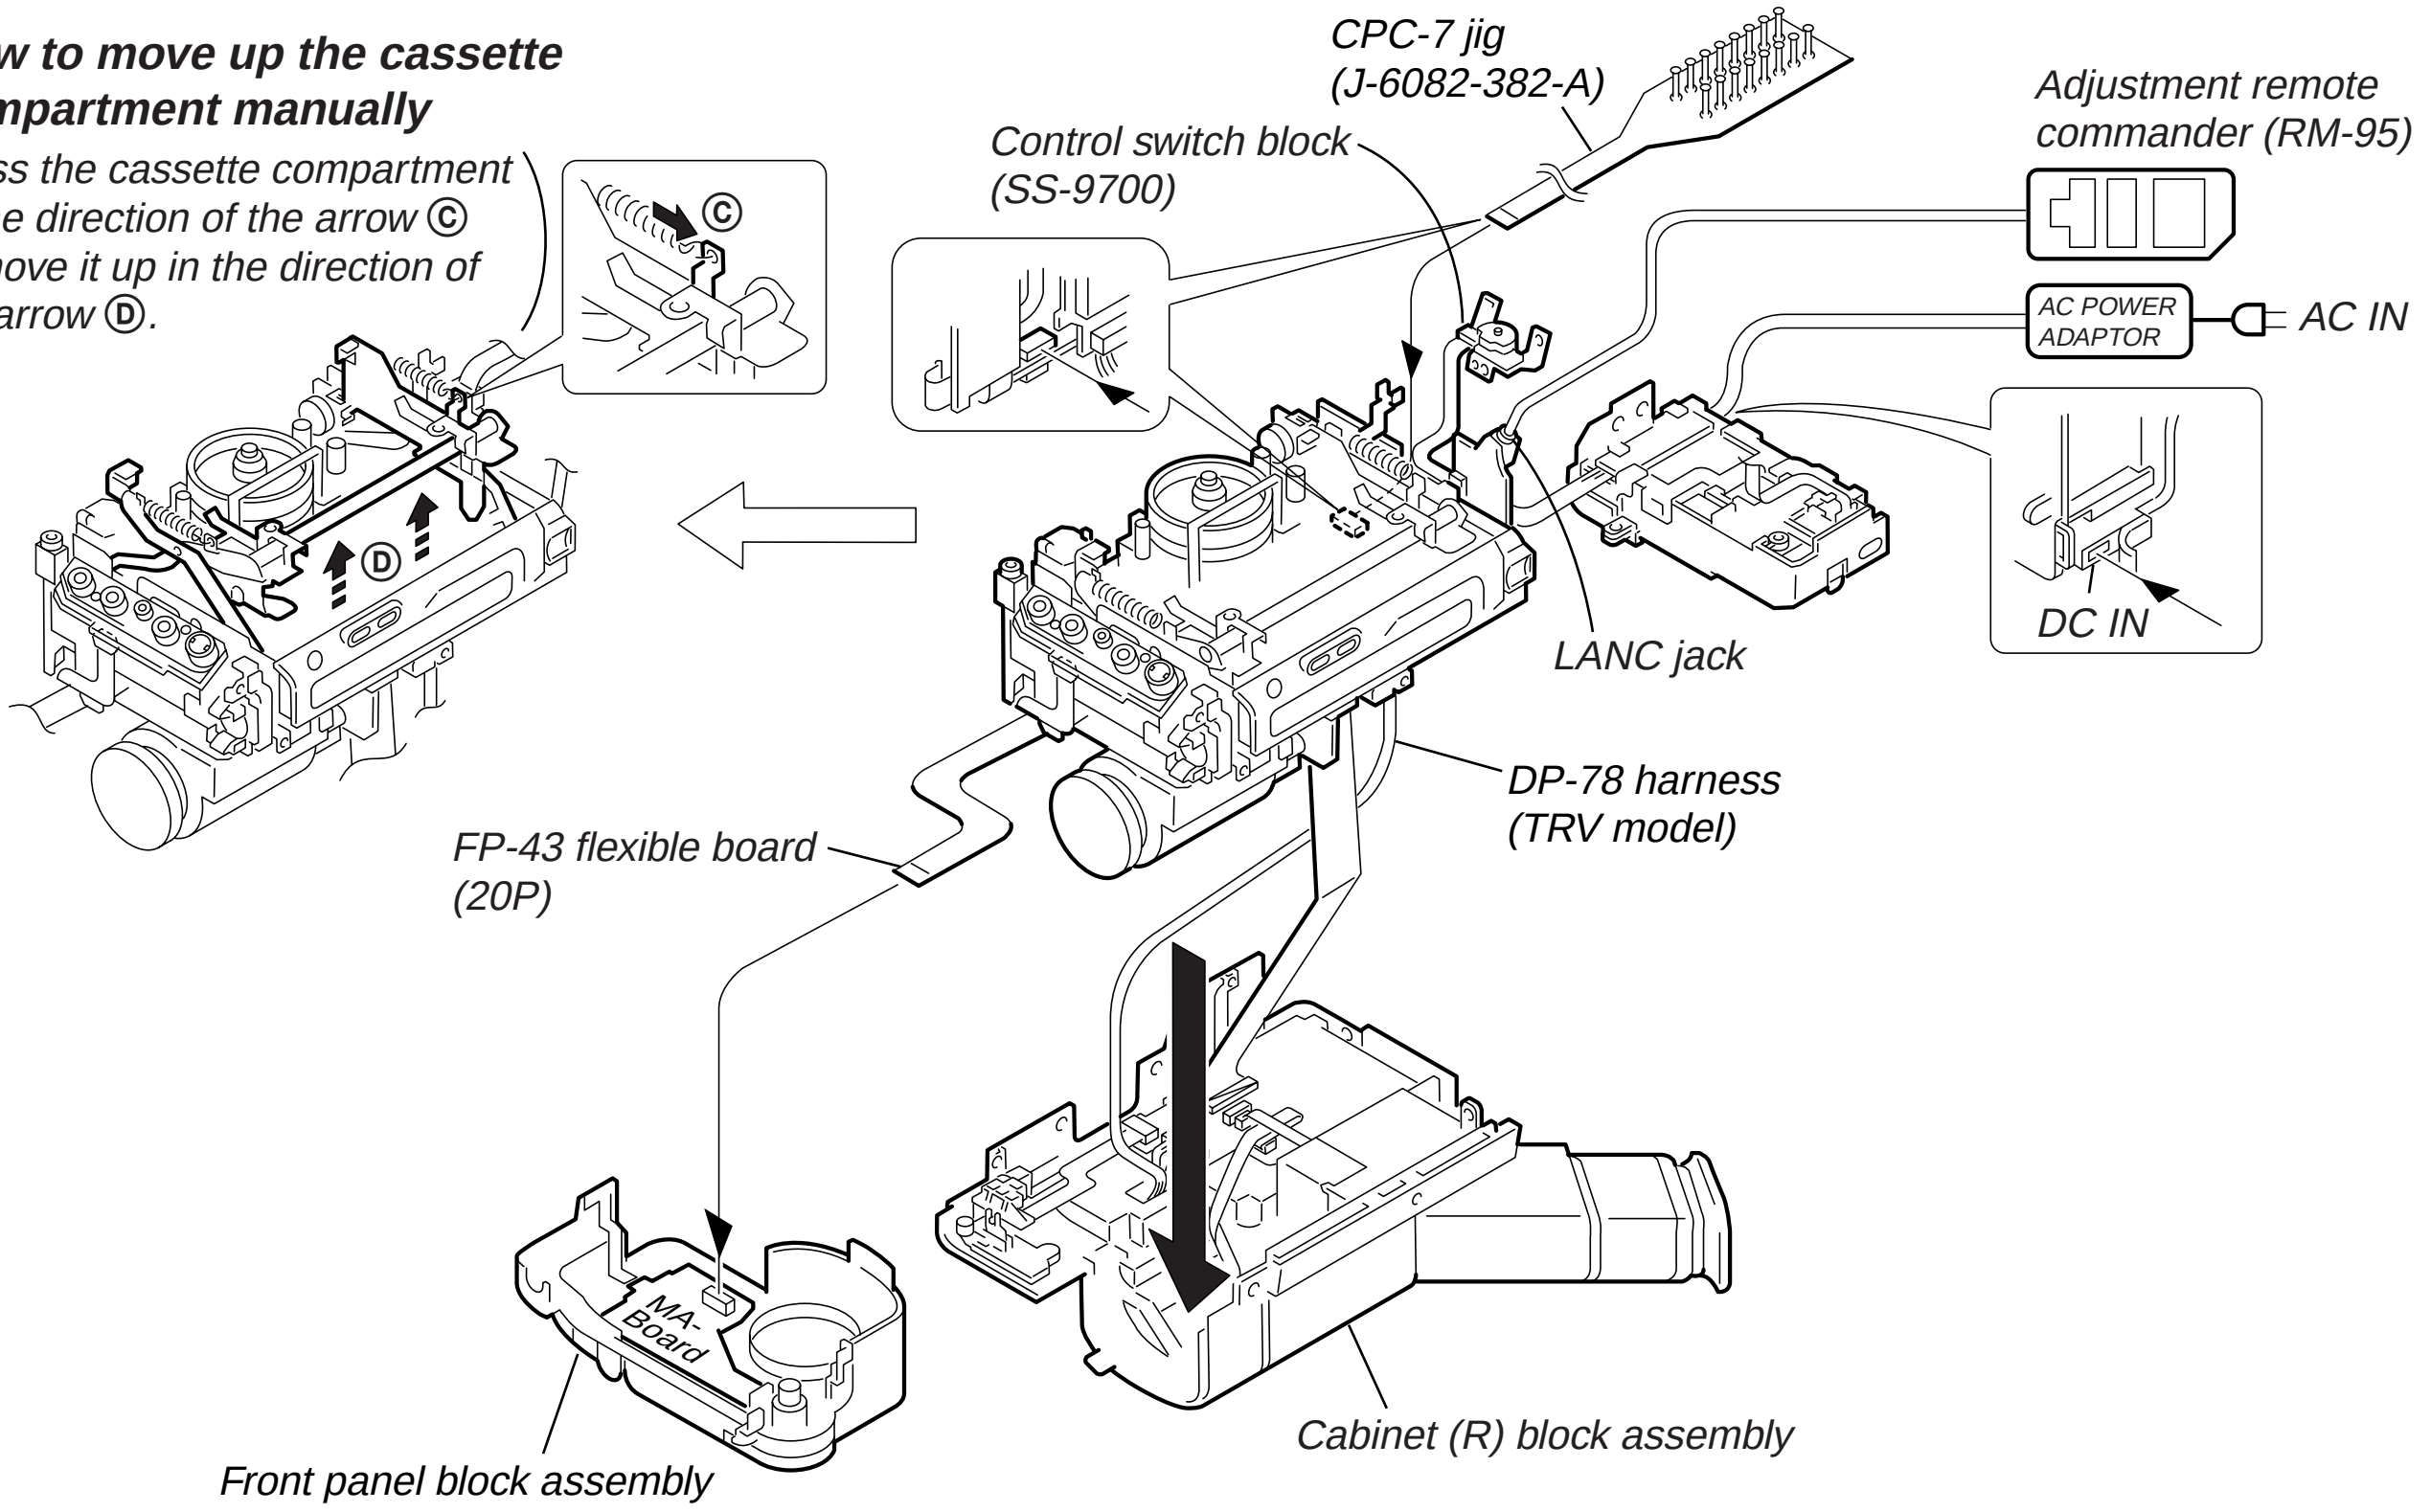

Ⓒ
Ⓓ
CPC-7 jig
(J-6082-382-A)
Adjustment remote
commander (RM-95)
Control switch block
(SS-9700)
AC POWER
ADAPTOR
AC IN
DC IN
LANC jack
DP-78 harness
(TRV model)
FP-43 flexible board
(20P)
MA-
Board
Front panel block assembly
Cabinet (R) block assembly

2-5. EVF BLOCK ASSEMBLY

[TR MODEL]

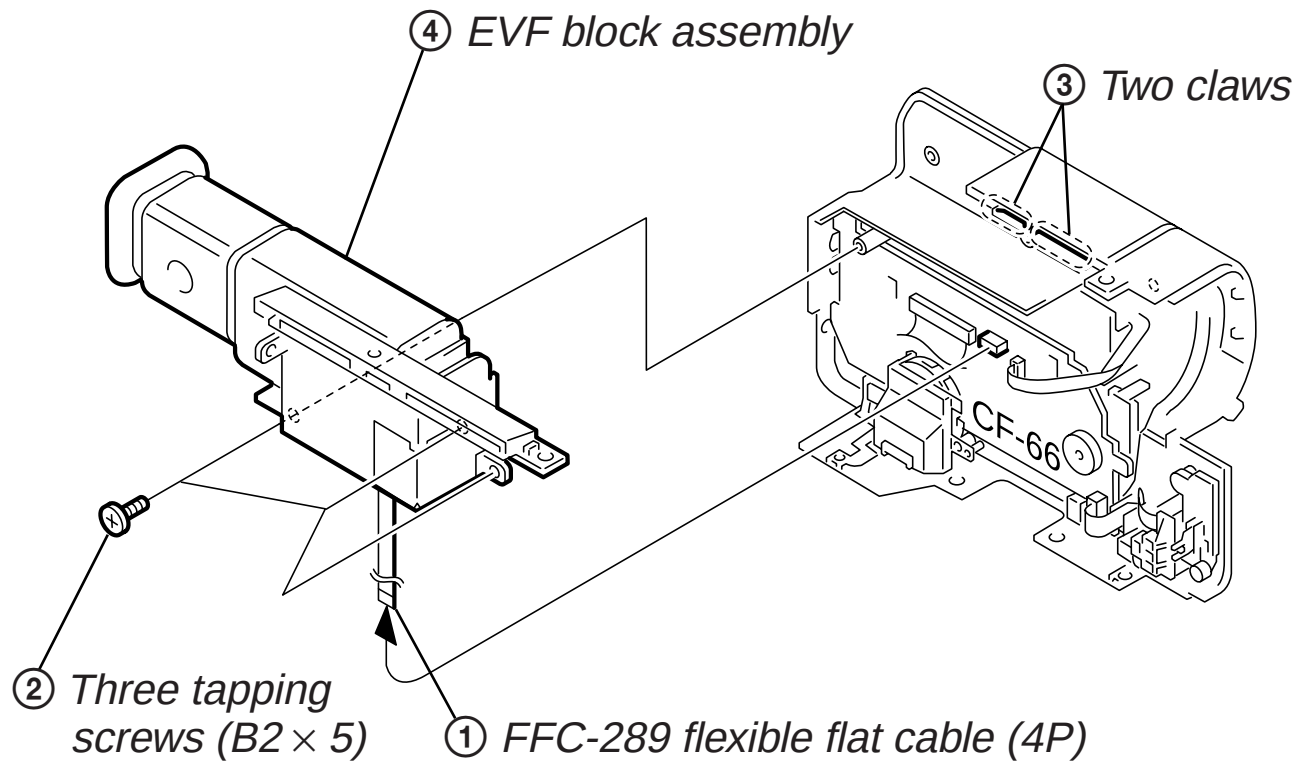

④ EVF block assembly
③ Two claws
CF-66
② Three tapping
screws (B2 × 5)
① FFC-289 flexible flat cable (4P)

[TRV MODEL]

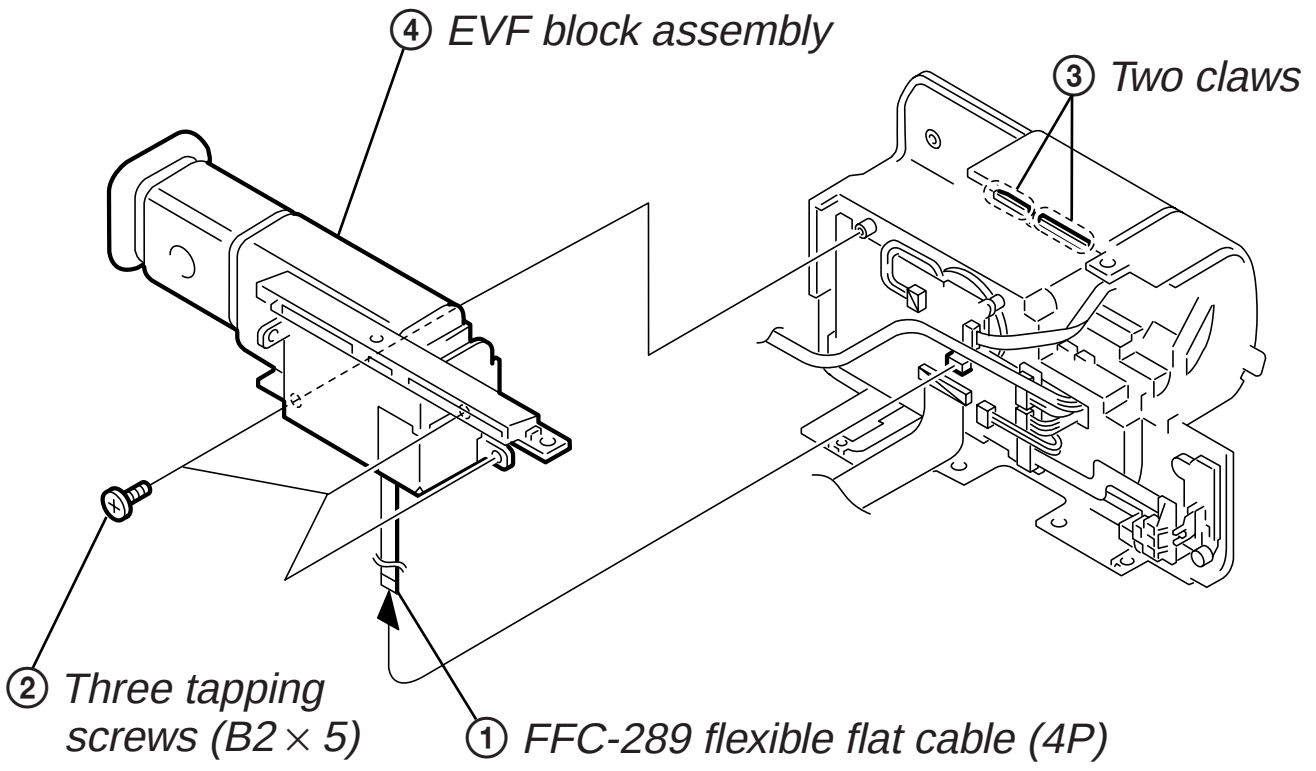

④ EVF block assembly
③ Two claws
② Three tapping
screws (B2 × 5)
① FFC-289 flexible flat cable (4P)

2-6. VF-129 BOARD

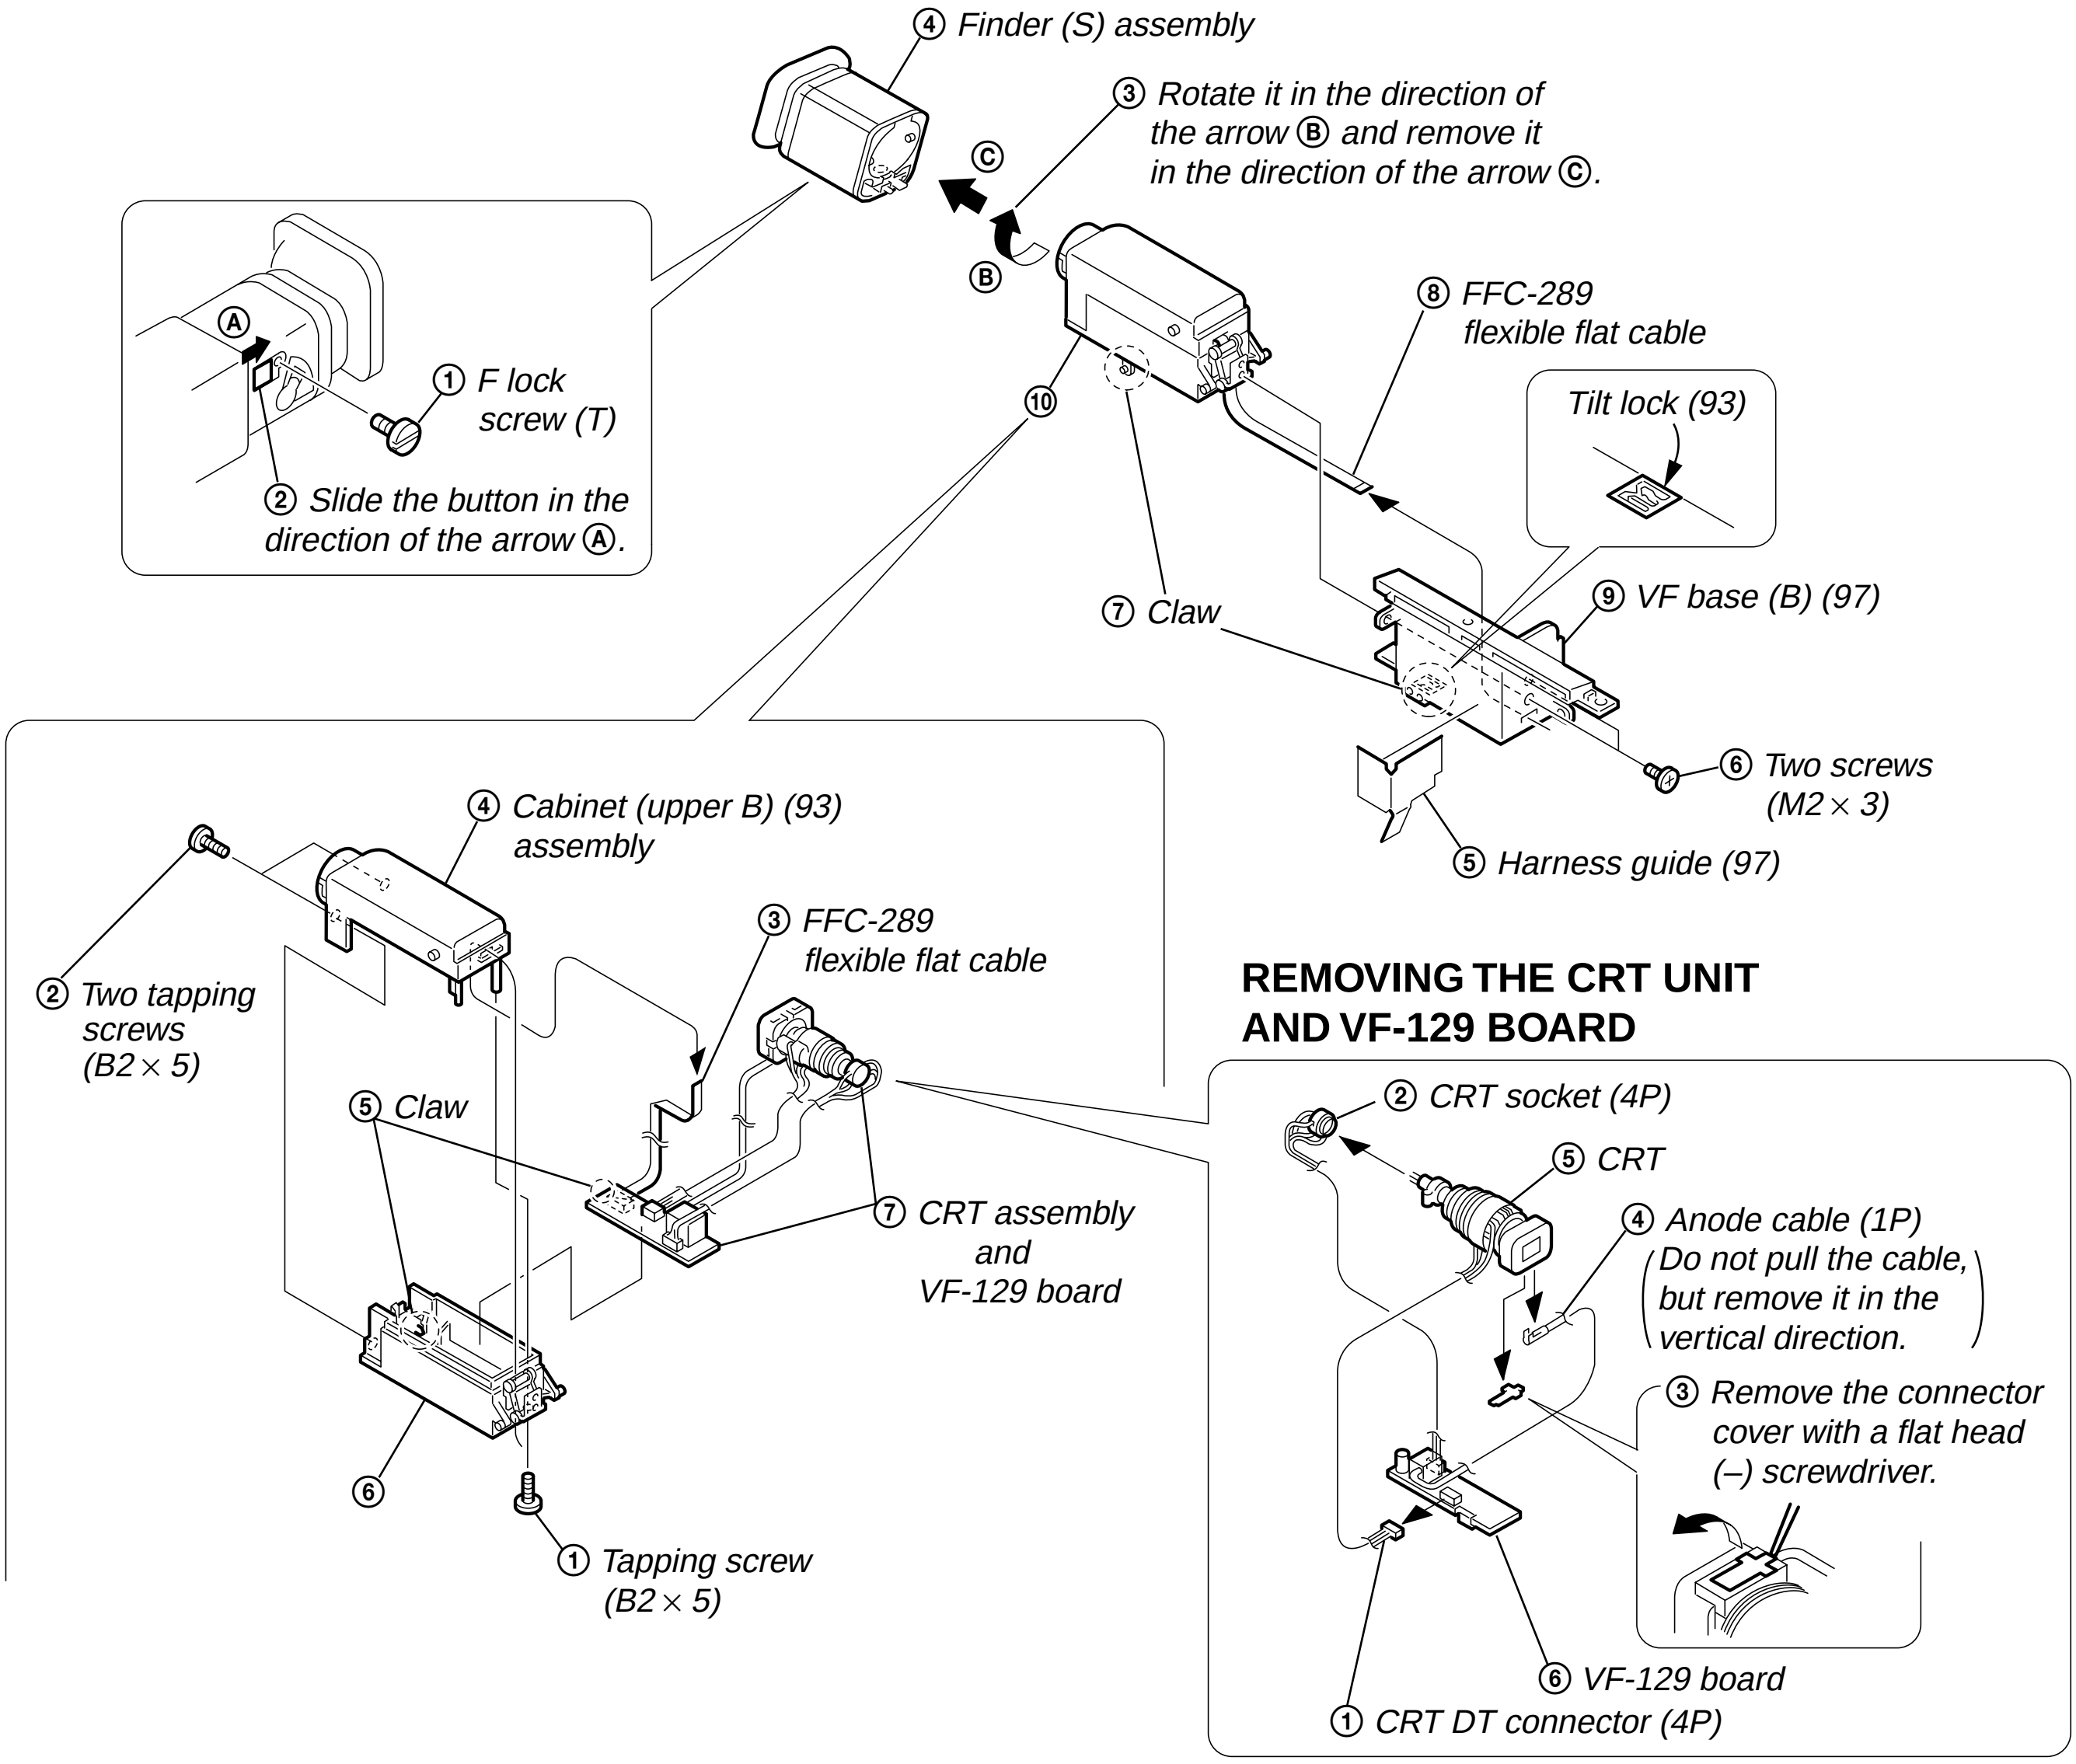
④ Finder (S) assembly
③ Rotate it in the direction of the arrow Ⓑ and remove it in the direction of the arrow Ⓒ.
Ⓒ
Ⓑ
Ⓐ
① F lock screw (T)
② Slide the button in the direction of the arrow Ⓐ.
⑧ FFC-289 flexible flat cable
Tilt lock (93)
⑩
⑦ Claw
⑨ VF base (B) (97)
⑥ Two screws (M2 × 3)
⑤ Harness guide (97)
④ Cabinet (upper B) (93) assembly
③ FFC-289 flexible flat cable
② Two tapping screws (B2 × 5)
⑤ Claw
⑦ CRT assembly and VF-129 board
⑥
① Tapping screw (B2 × 5)

REMOVING THE CRT UNIT AND VF-129 BOARD

② CRT socket (4P)
⑤ CRT
④ Anode cable (1P)
(Do not pull the cable, but remove it in the vertical direction.)
③ Remove the connector cover with a flat head (–) screwdriver.
⑥ VF-129 board
① CRT DT connector (4P)

[VF-129, MA-374/375, CF-66/67, CD-239/240 BOARDS SERVICE POSITION]

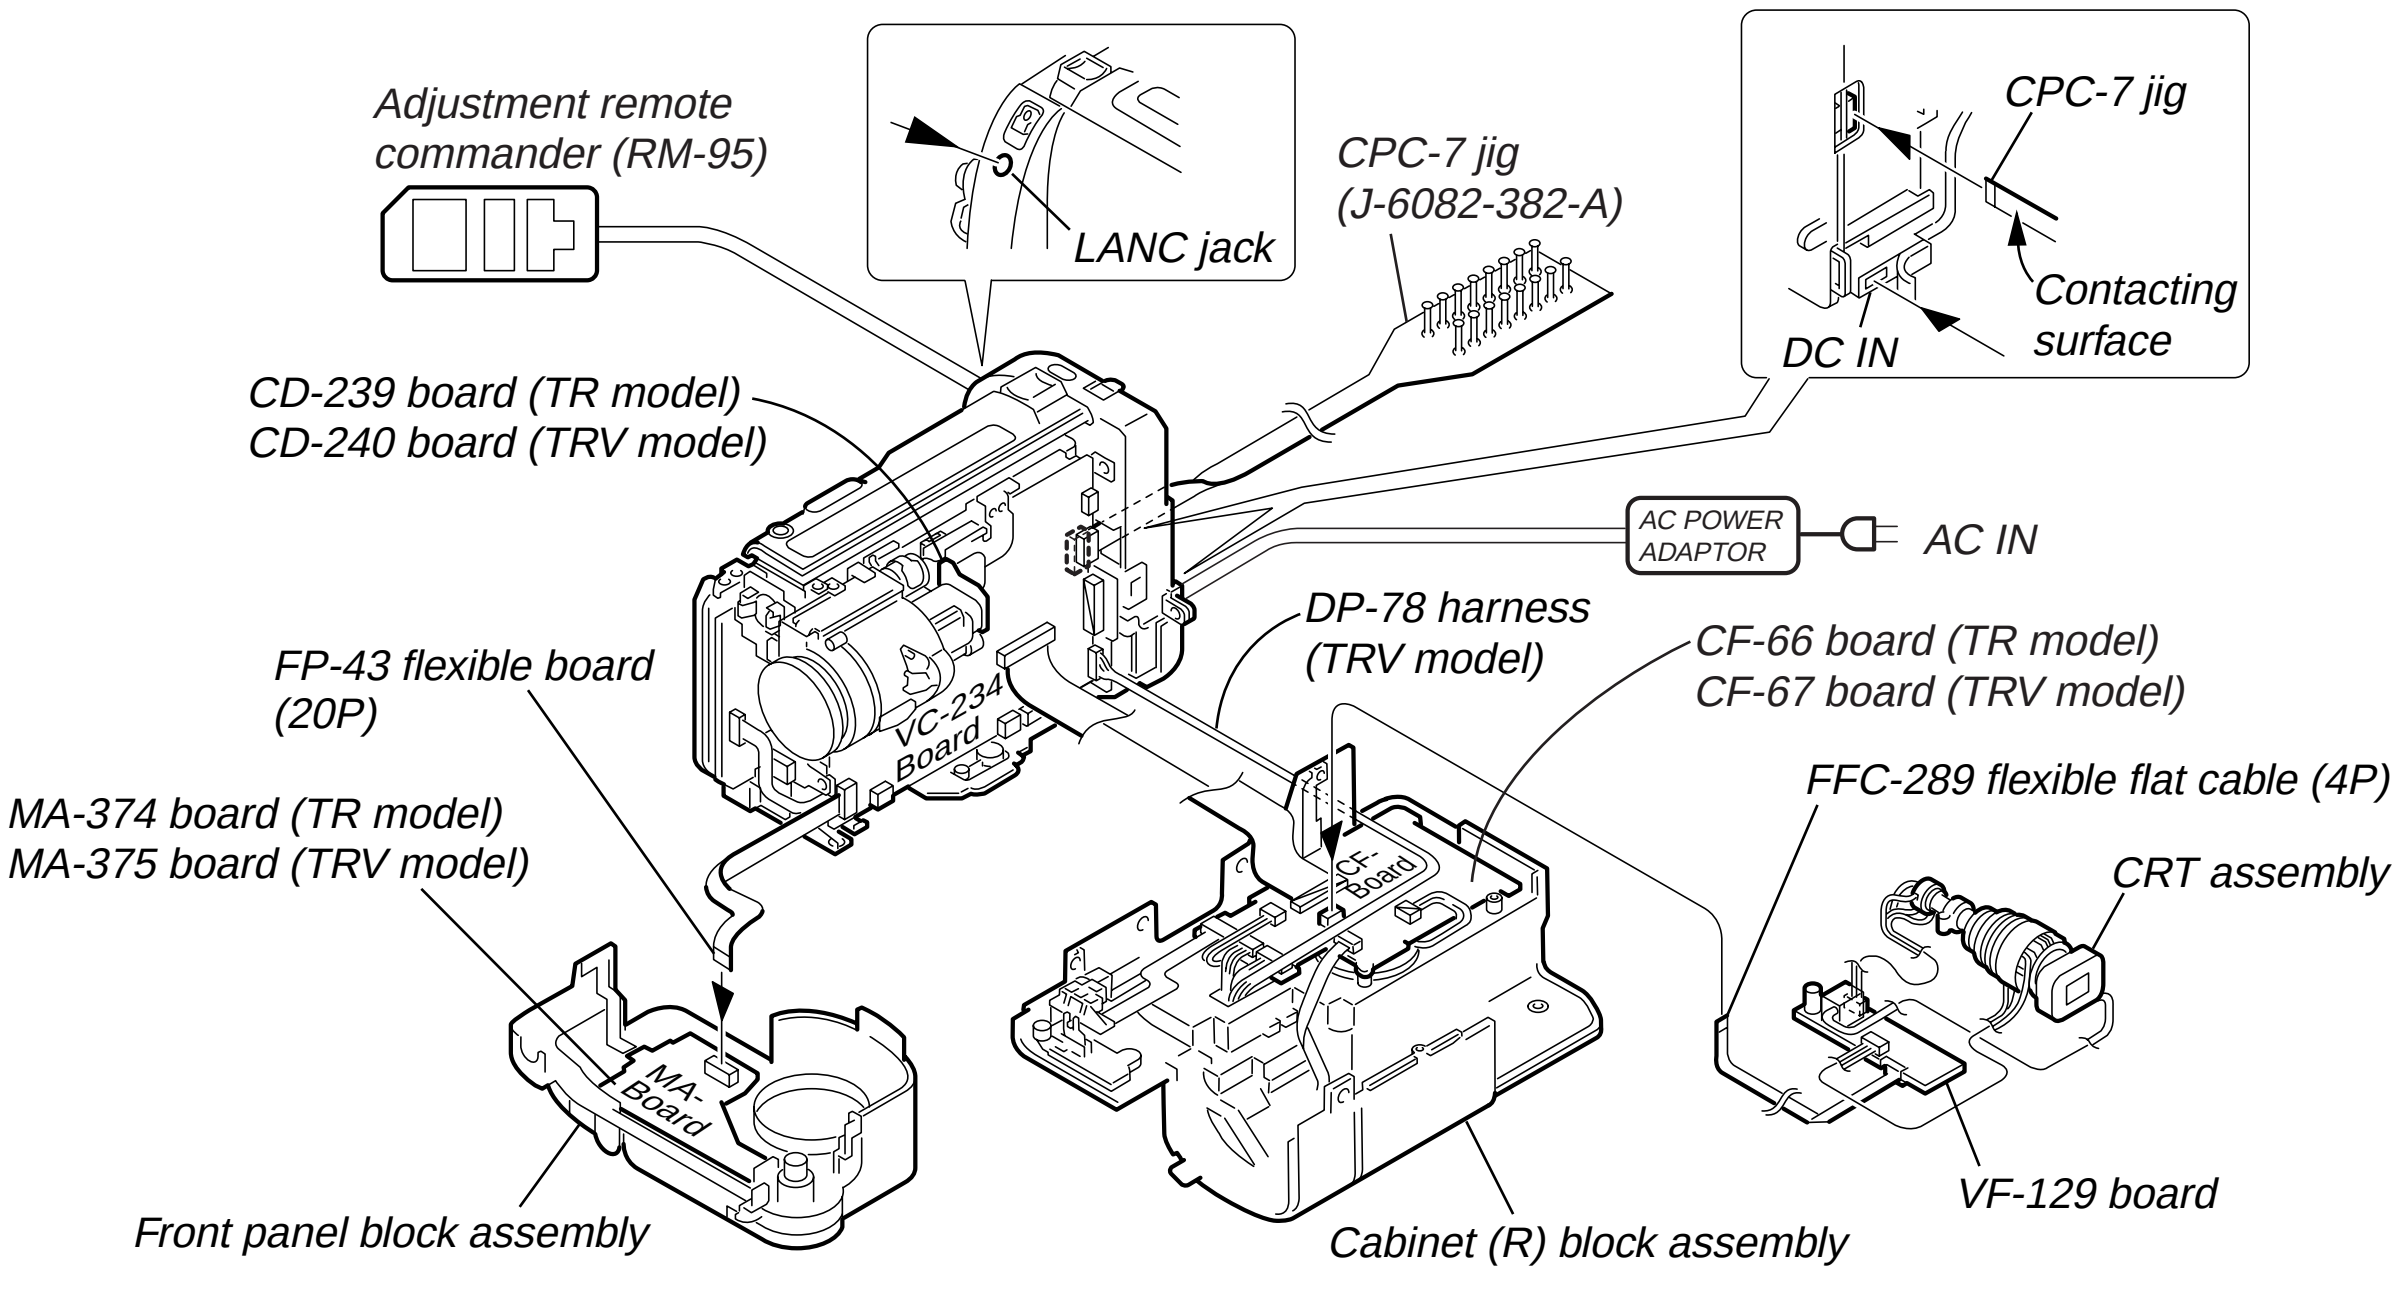
Adjustment remote commander (RM-95)
LANC jack
CPC-7 jig (J-6082-382-A)
CPC-7 jig
Contacting surface
DC IN
CD-239 board (TR model)
CD-240 board (TRV model)
AC POWER ADAPTOR
AC IN
FP-43 flexible board (20P)
DP-78 harness (TRV model)
CF-66 board (TR model)
CF-67 board (TRV model)
VC-234 Board
CF-Board
FFC-289 flexible flat cable (4P)
CRT assembly
MA-374 board (TR model)
MA-375 board (TRV model)
MA-Board
VF-129 board
Front panel block assembly
Cabinet (R) block assembly

2-7. LENS DEVICE, CD-239/240 BOARD

[VIDEO LIGHT MODEL]

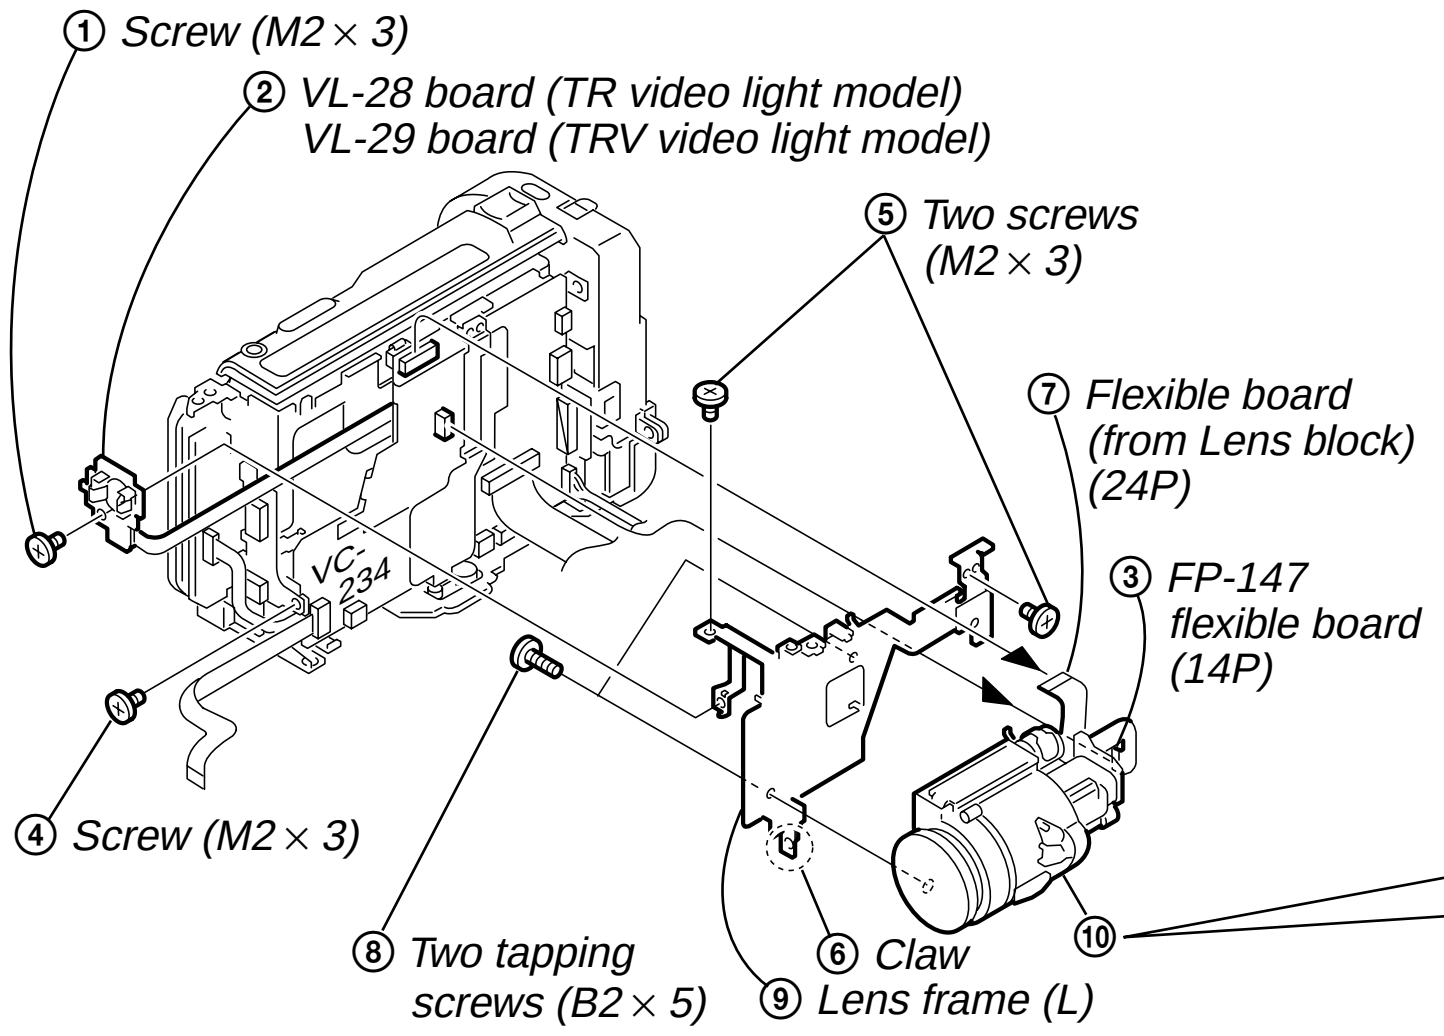
① Screw (M2 × 3)
② VL-28 board (TR video light model)
VL-29 board (TRV video light model)
⑤ Two screws
(M2 × 3)
⑦ Flexible board
(from Lens block)
(24P)
③ FP-147
flexible board
(14P)
VC-234
④ Screw (M2 × 3)
⑧ Two tapping
screws (B2 × 5)
⑥ Claw
⑨ Lens frame (L)
⑩

[NO VIDEO LIGHT MODEL]

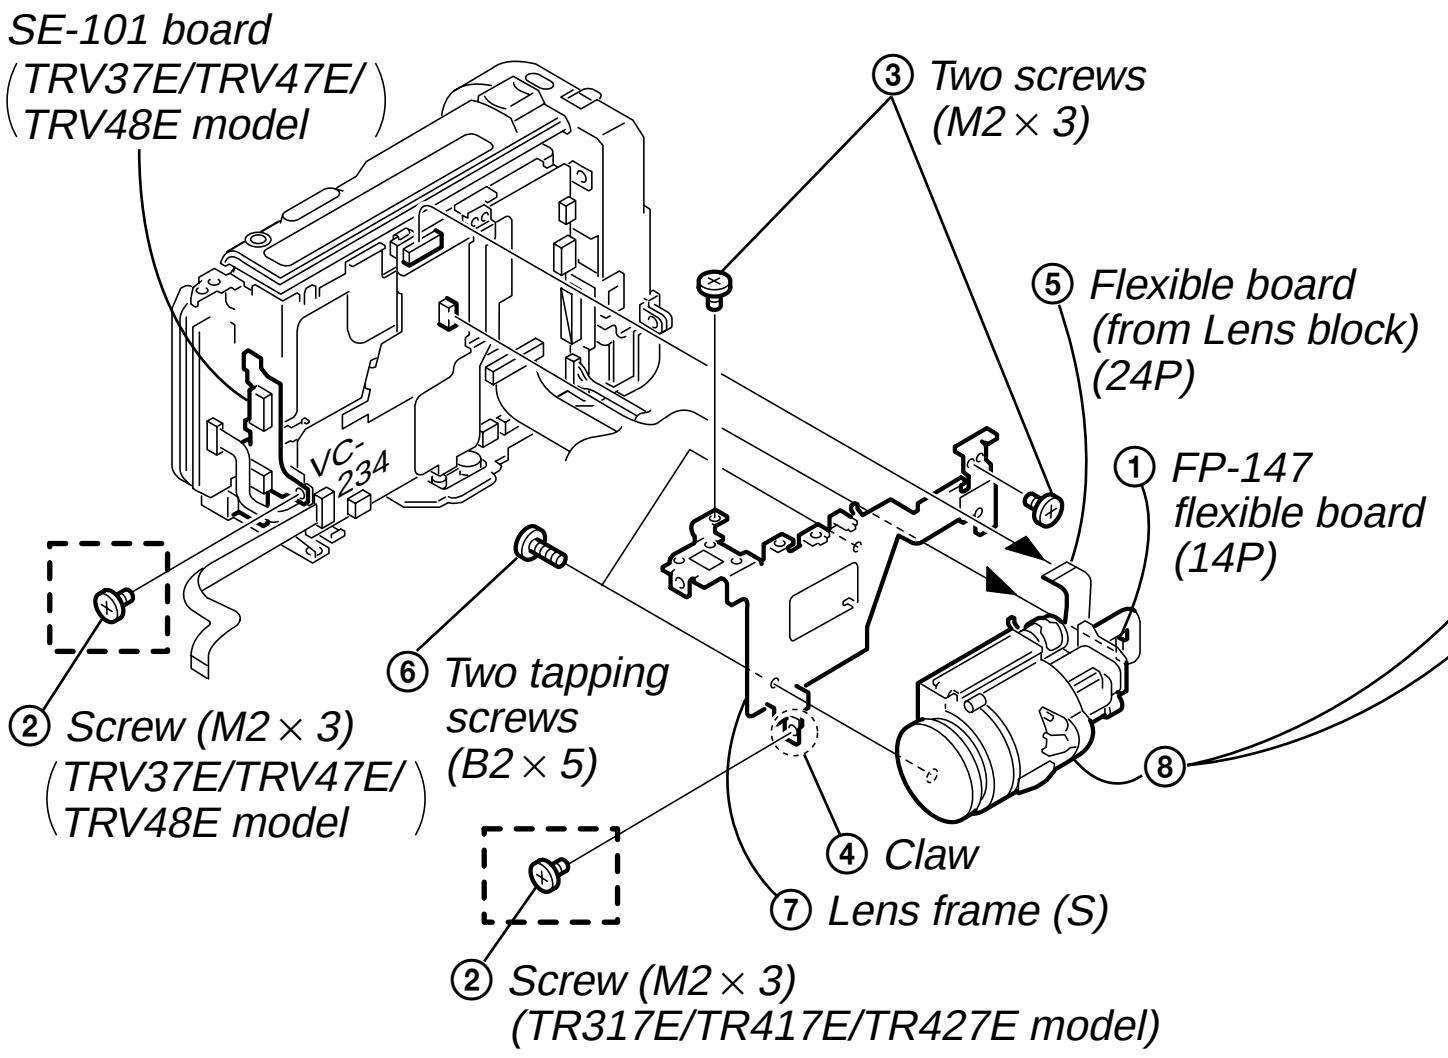
SE-101 board
(TRV37E/TRV47E/
TRV48E model)
③ Two screws
(M2 × 3)
⑤ Flexible board
(from Lens block)
(24P)
① FP-147
flexible board
(14P)
VC-234
② Screw (M2 × 3)
(TRV37E/TRV47E/
TRV48E model)
⑥ Two tapping
screws
(B2 × 5)
⑧
④ Claw
⑦ Lens frame (S)
② Screw (M2 × 3)
(TR317E/TR417E/TR427E model)

REMOVING THE LENS DEVICE, CD-239/240 BOARD

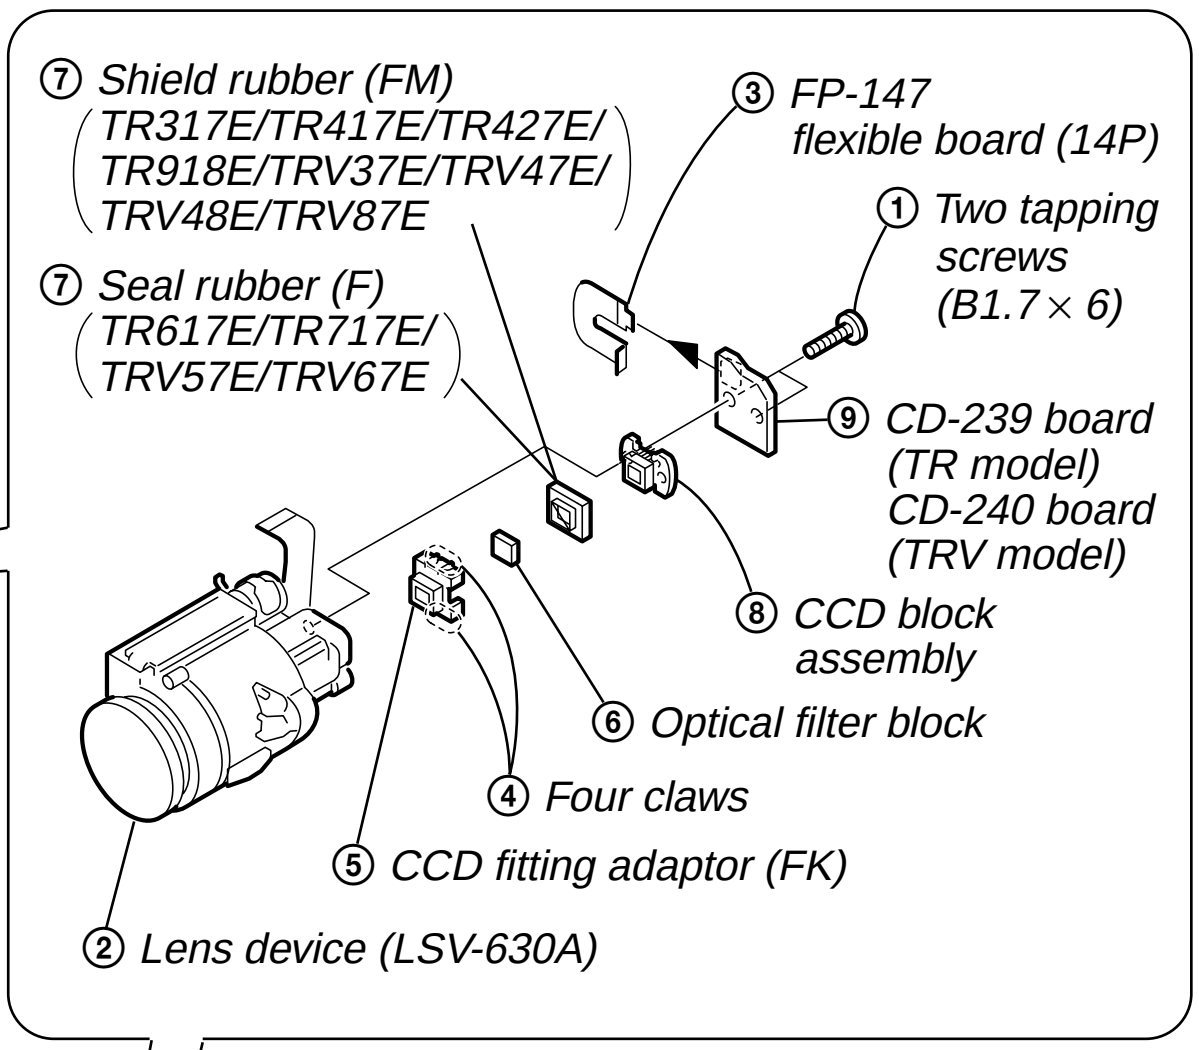
⑦ Shield rubber (FM)
(TR317E/TR417E/TR427E/
TR918E/TRV37E/TRV47E/
TRV48E/TRV87E)
⑦ Seal rubber (F)
(TR617E/TR717E/
TRV57E/TRV67E)
③ FP-147
flexible board (14P)
① Two tapping
screws
(B1.7 × 6)
⑨ CD-239 board
(TR model)
CD-240 board
(TRV model)
⑧ CCD block
assembly
⑥ Optical filter block
④ Four claws
⑤ CCD fitting adaptor (FK)
② Lens device (LSV-630A)

(PRECAUTION DURING INSTALLATION)

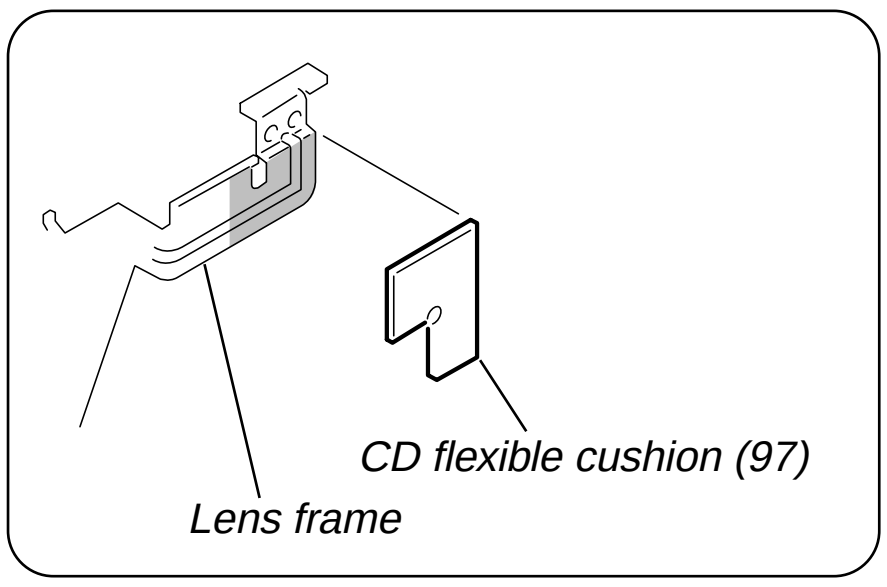
CD flexible cushion (97)
Lens frame

2-8. DD-134, PJ-99/100, SE-100/101 BOARDS

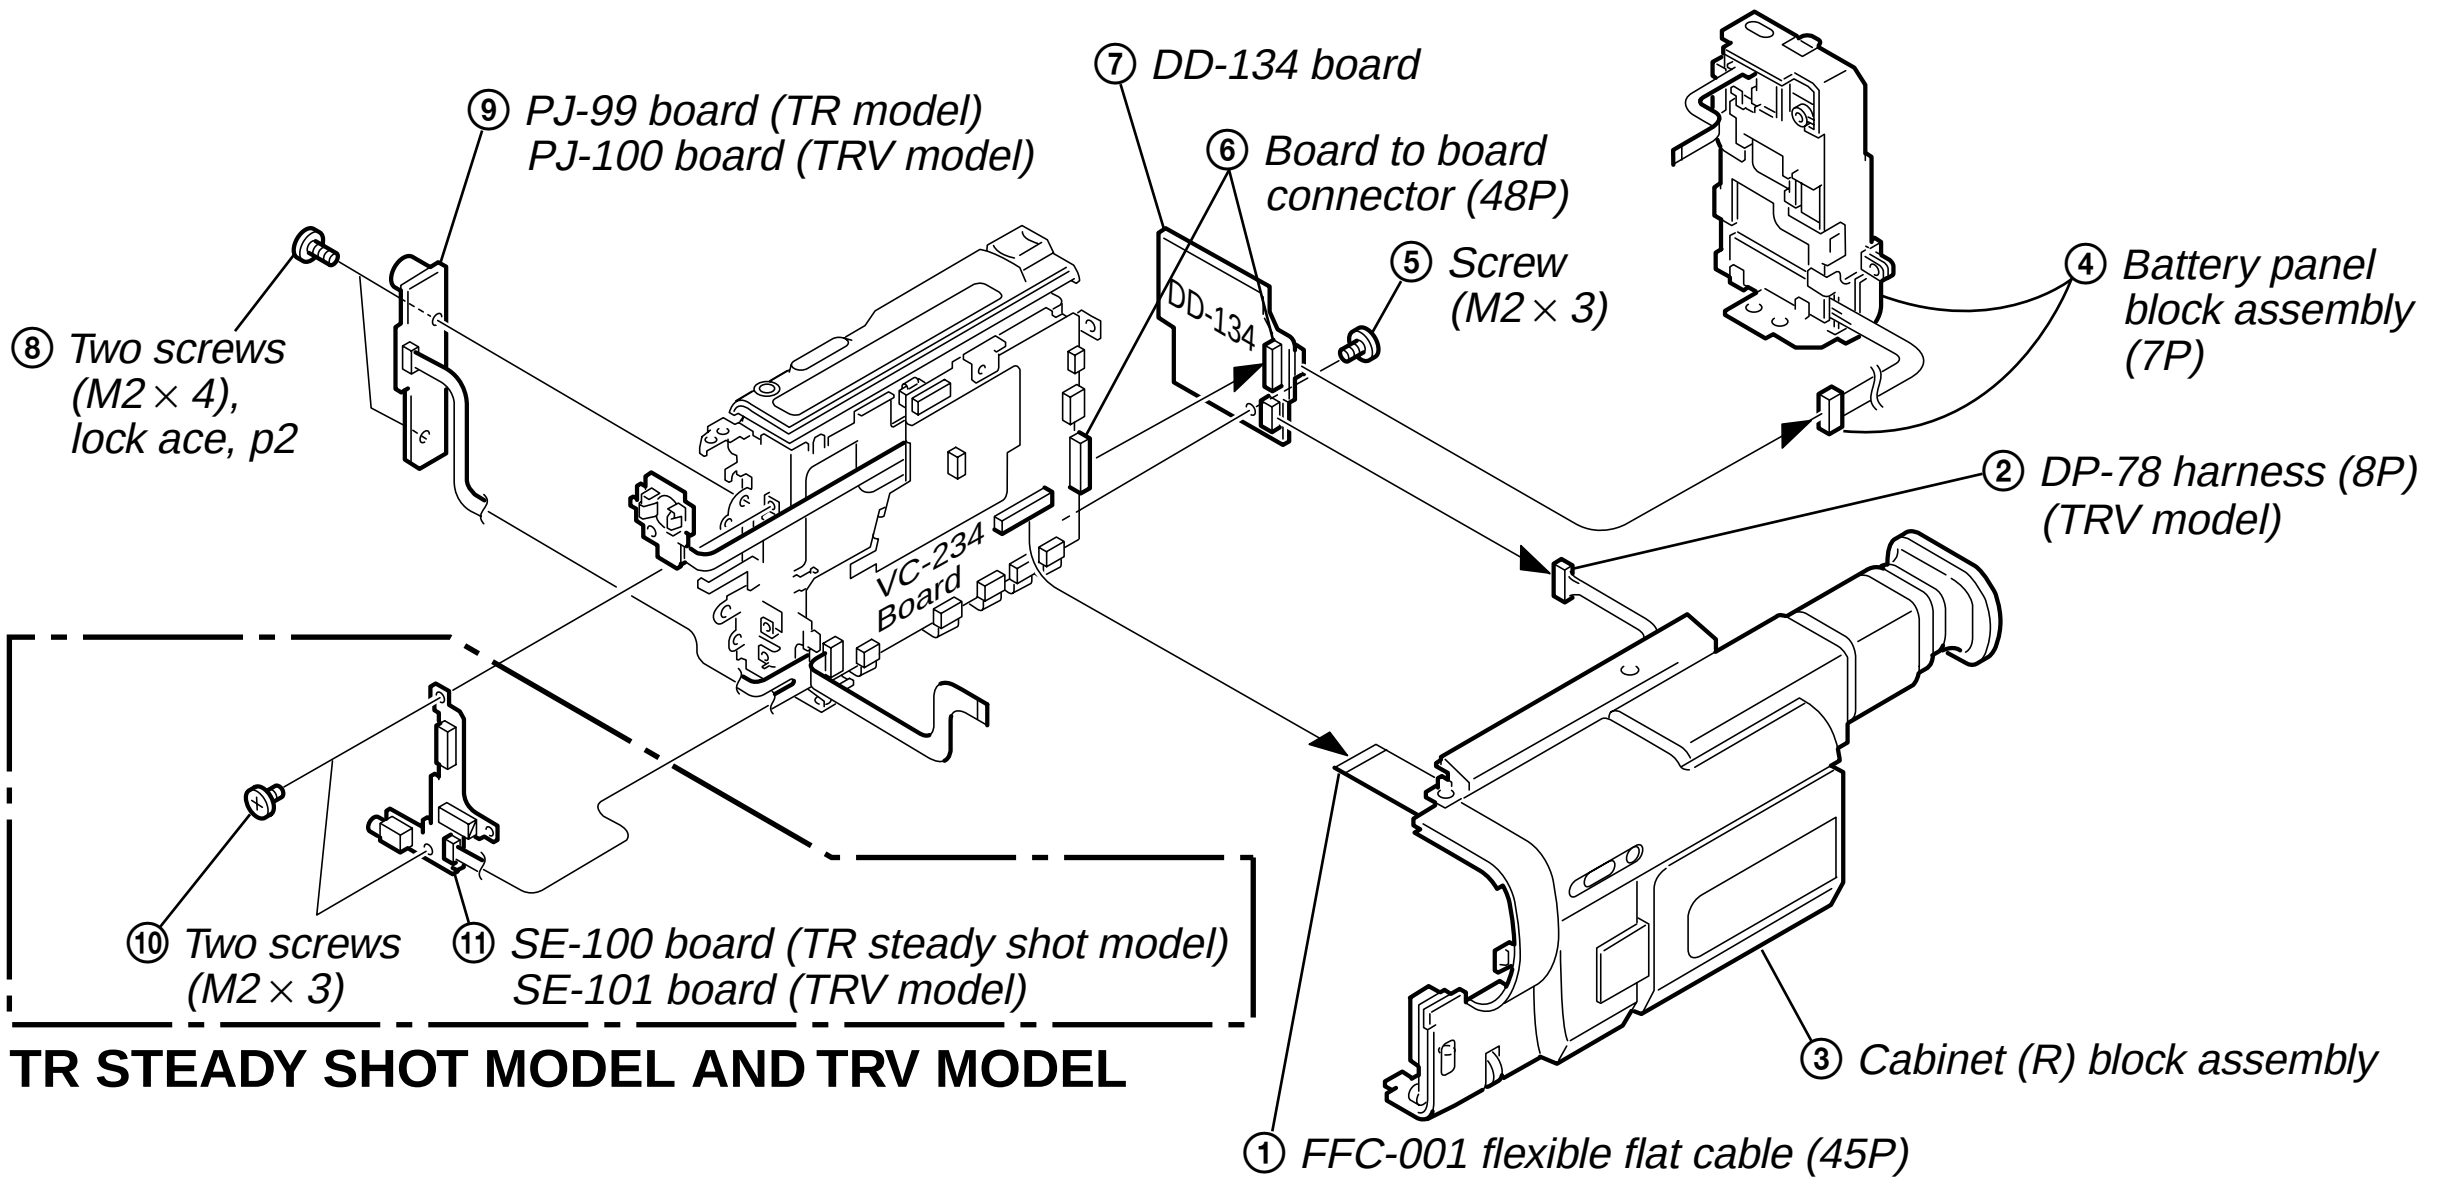
⑦ DD-134 board
⑨ PJ-99 board (TR model)
PJ-100 board (TRV model)
⑥ Board to board
connector (48P)
⑤ Screw
(M2 × 3)
④ Battery panel
block assembly
(7P)
⑧ Two screws
(M2 × 4),
lock ace, p2
DD-134
VC-234
Board
② DP-78 harness (8P)
(TRV model)
⑩ Two screws
(M2 × 3)
⑪ SE-100 board (TR steady shot model)
SE-101 board (TRV model)
TR STEADY SHOT MODEL AND TRV MODEL
③ Cabinet (R) block assembly
① FFC-001 flexible flat cable (45P)

2-9. VC-234, EJ-29/30 BOARDS, MECHANISM DECK-2

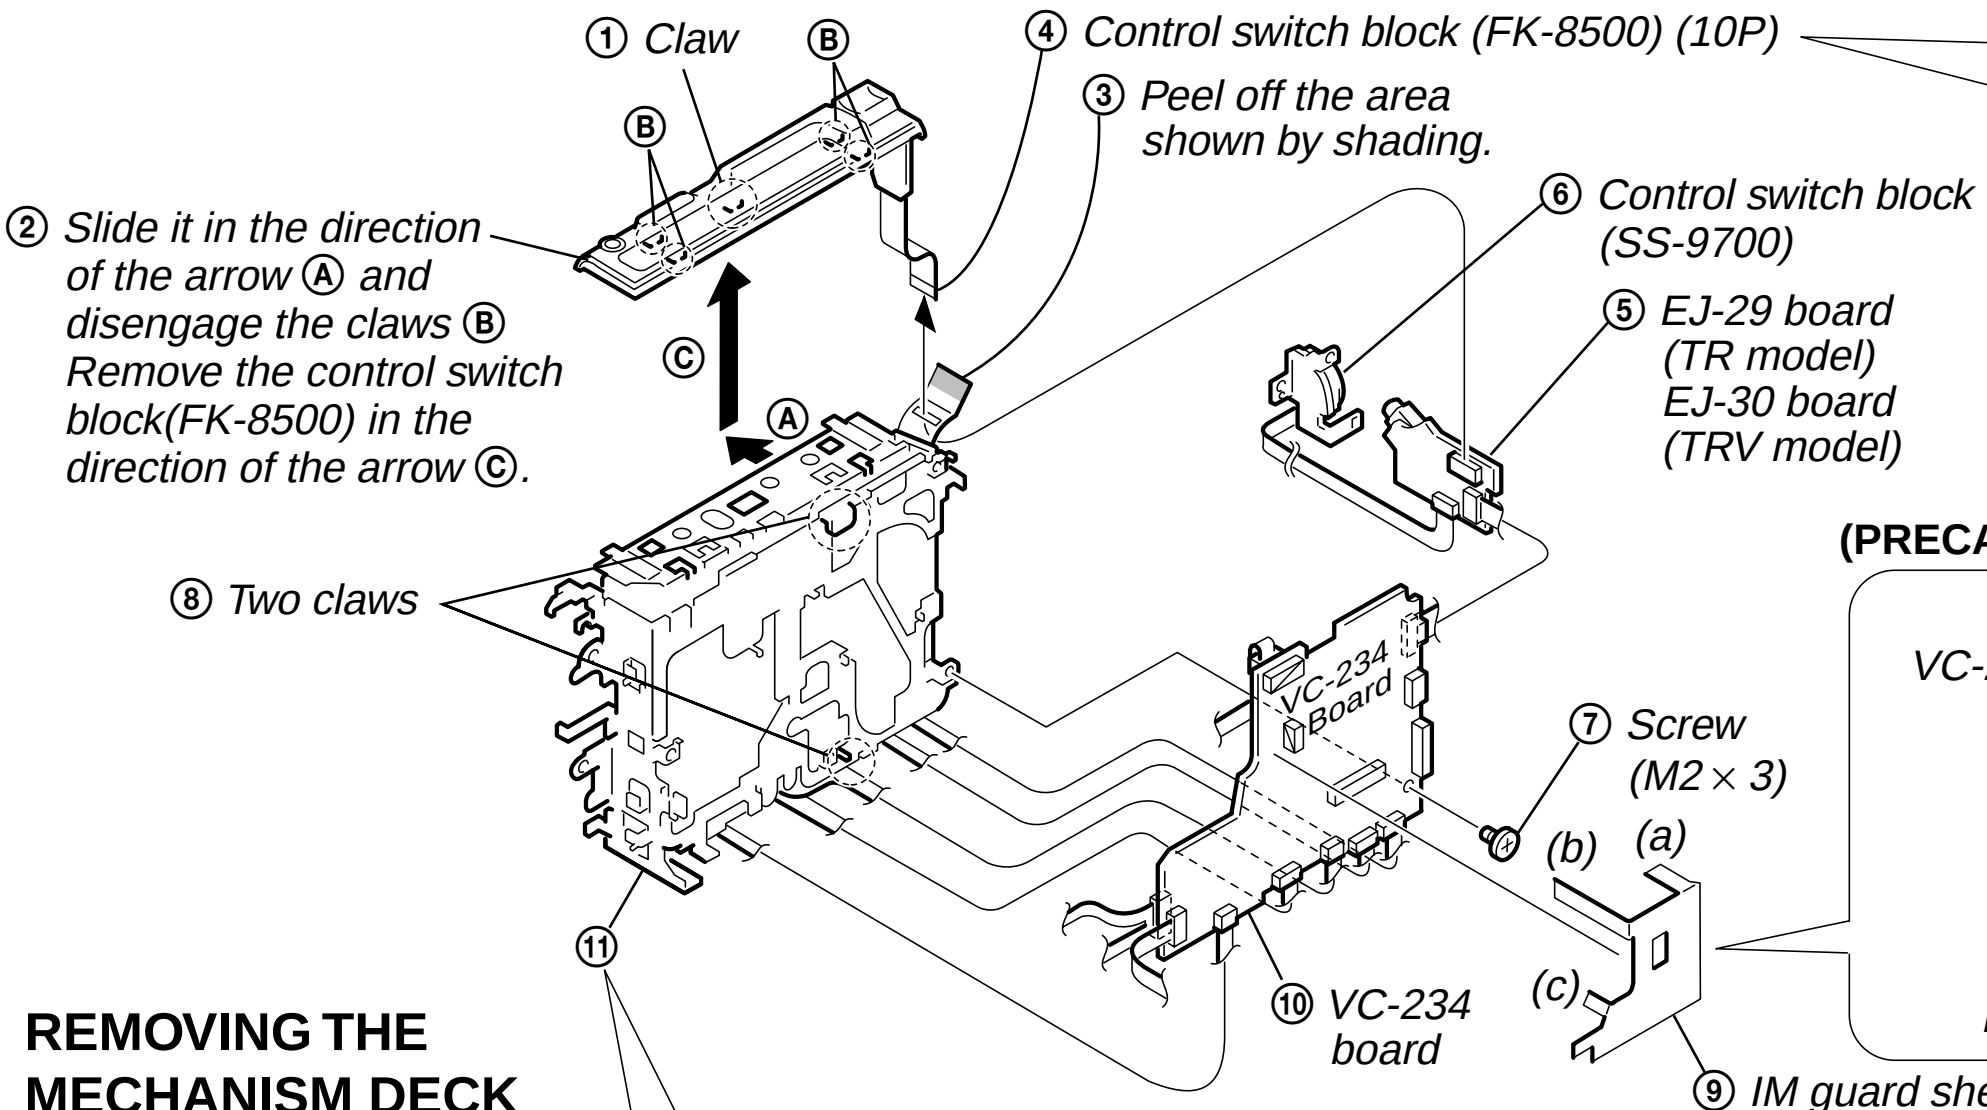
① Claw
Ⓑ
Ⓑ
④ Control switch block (FK-8500) (10P)
③ Peel off the area shown by shading.
Ⓒ
Ⓐ
⑥ Control switch block (SS-9700)
⑤ EJ-29 board (TR model) EJ-30 board (TRV model)
⑧ Two claws
VC-234 Board
⑦ Screw (M2 × 3)
(b)
(a)
(c)
⑪
⑩ VC-234 board
⑨ IM guard sheet (97)

② Slide it in the direction of the arrow Ⓐ and disengage the claws Ⓑ
Remove the control switch block(FK-8500) in the direction of the arrow Ⓒ.

PRECAUTION DURING INSTALLATION

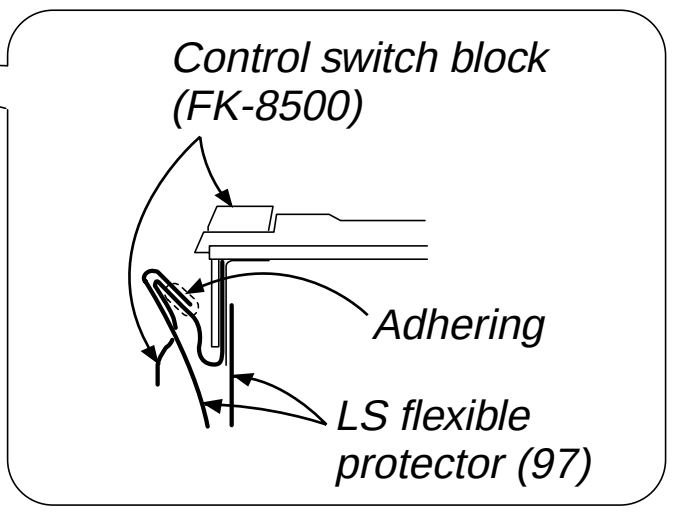
Control switch block (FK-8500)
Adhering
LS flexible protector (97)

(PRECAUTION DURING INSTALLATION)

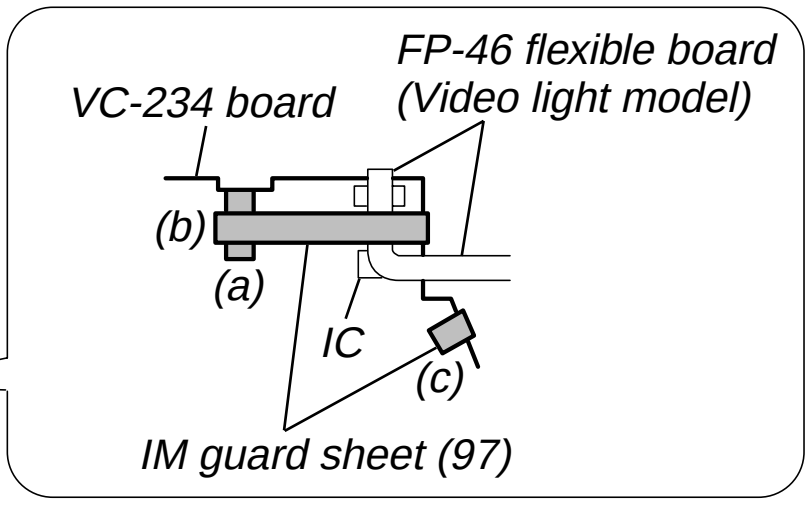
VC-234 board
FP-46 flexible board (Video light model)
(b)
(a)
IC
(c)
IM guard sheet (97)

REMOVING THE MECHANISM DECK

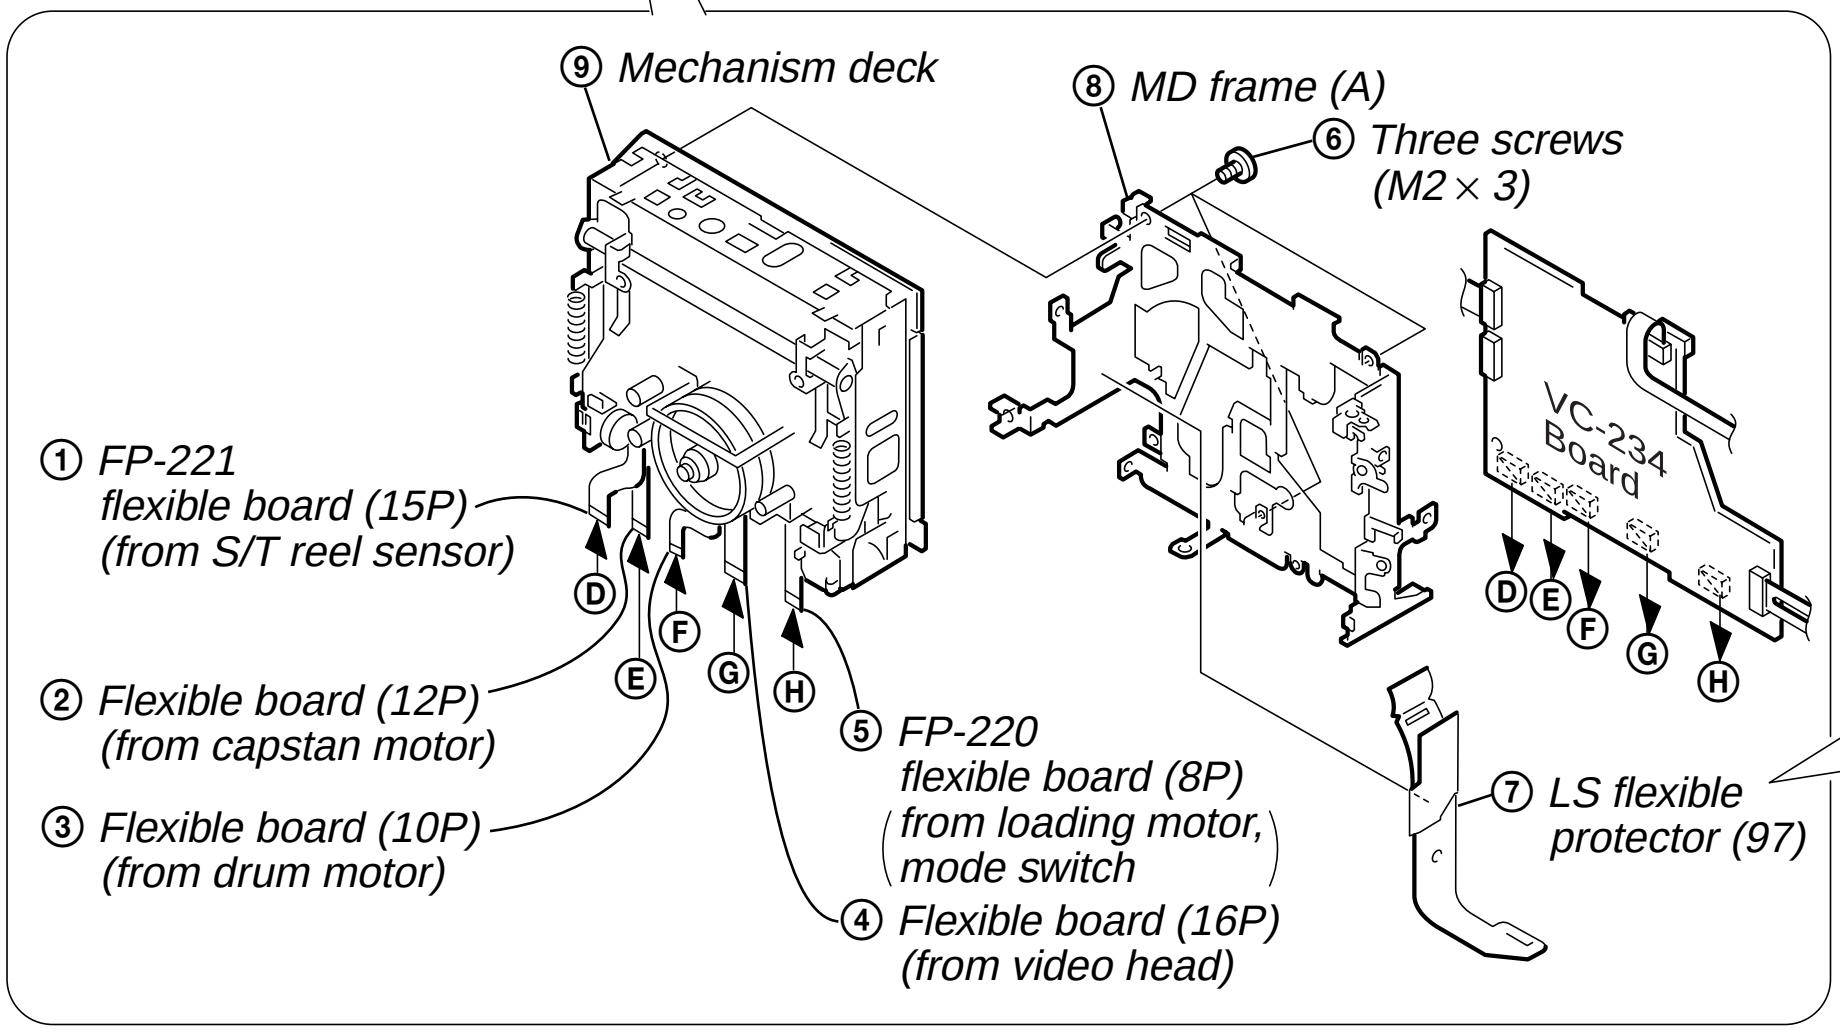
⑨ Mechanism deck
⑧ MD frame (A)
⑥ Three screws (M2 × 3)
VC-234 Board
① FP-221 flexible board (15P) (from S/T reel sensor)
Ⓓ
Ⓔ
Ⓕ
Ⓖ
Ⓗ
② Flexible board (12P) (from capstan motor)
③ Flexible board (10P) (from drum motor)
⑤ FP-220 flexible board (8P) (from loading motor, mode switch)
④ Flexible board (16P) (from video head)
⑦ LS flexible protector (97)

(PRECAUTION DURING INSTALLATION)

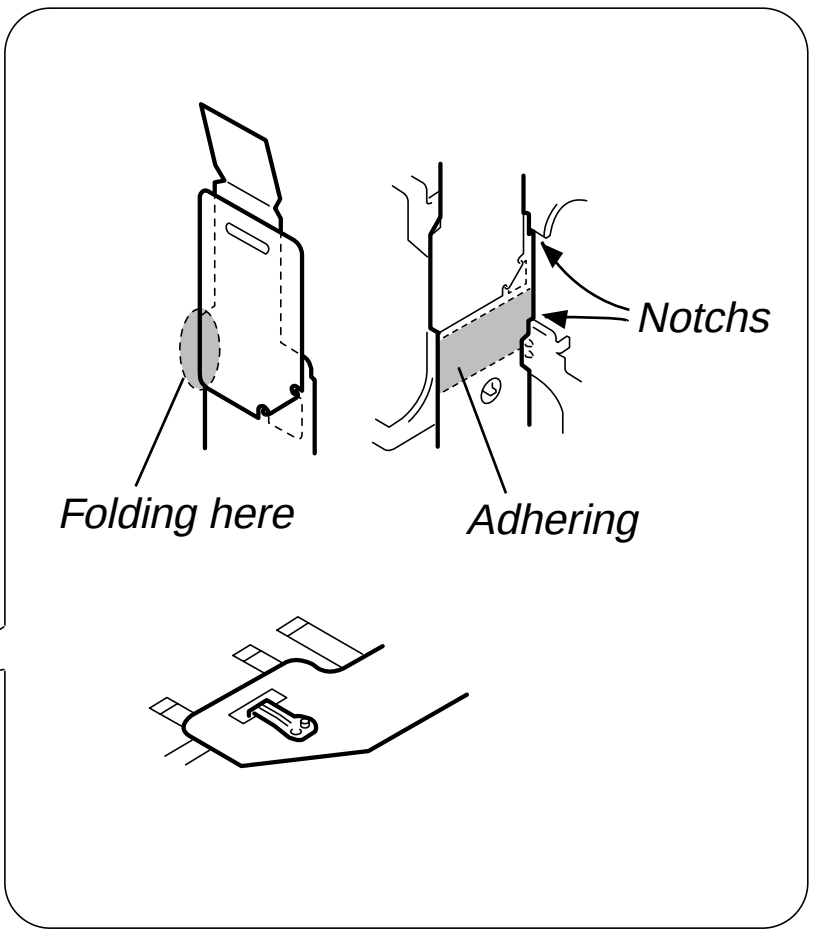
Notchs
Folding here
Adhering

[CONNECTION DIAGRAM FOR SERVICE POSITION (Mainly for voltage measurement and check)]

(MA-374/375, CF-66/67, CD-239/240, VL-28/29, PJ-99/100, SE-100/101, EJ-29/30, DD-134, VC-234 BOARDS, MECHANISM DECK-2)

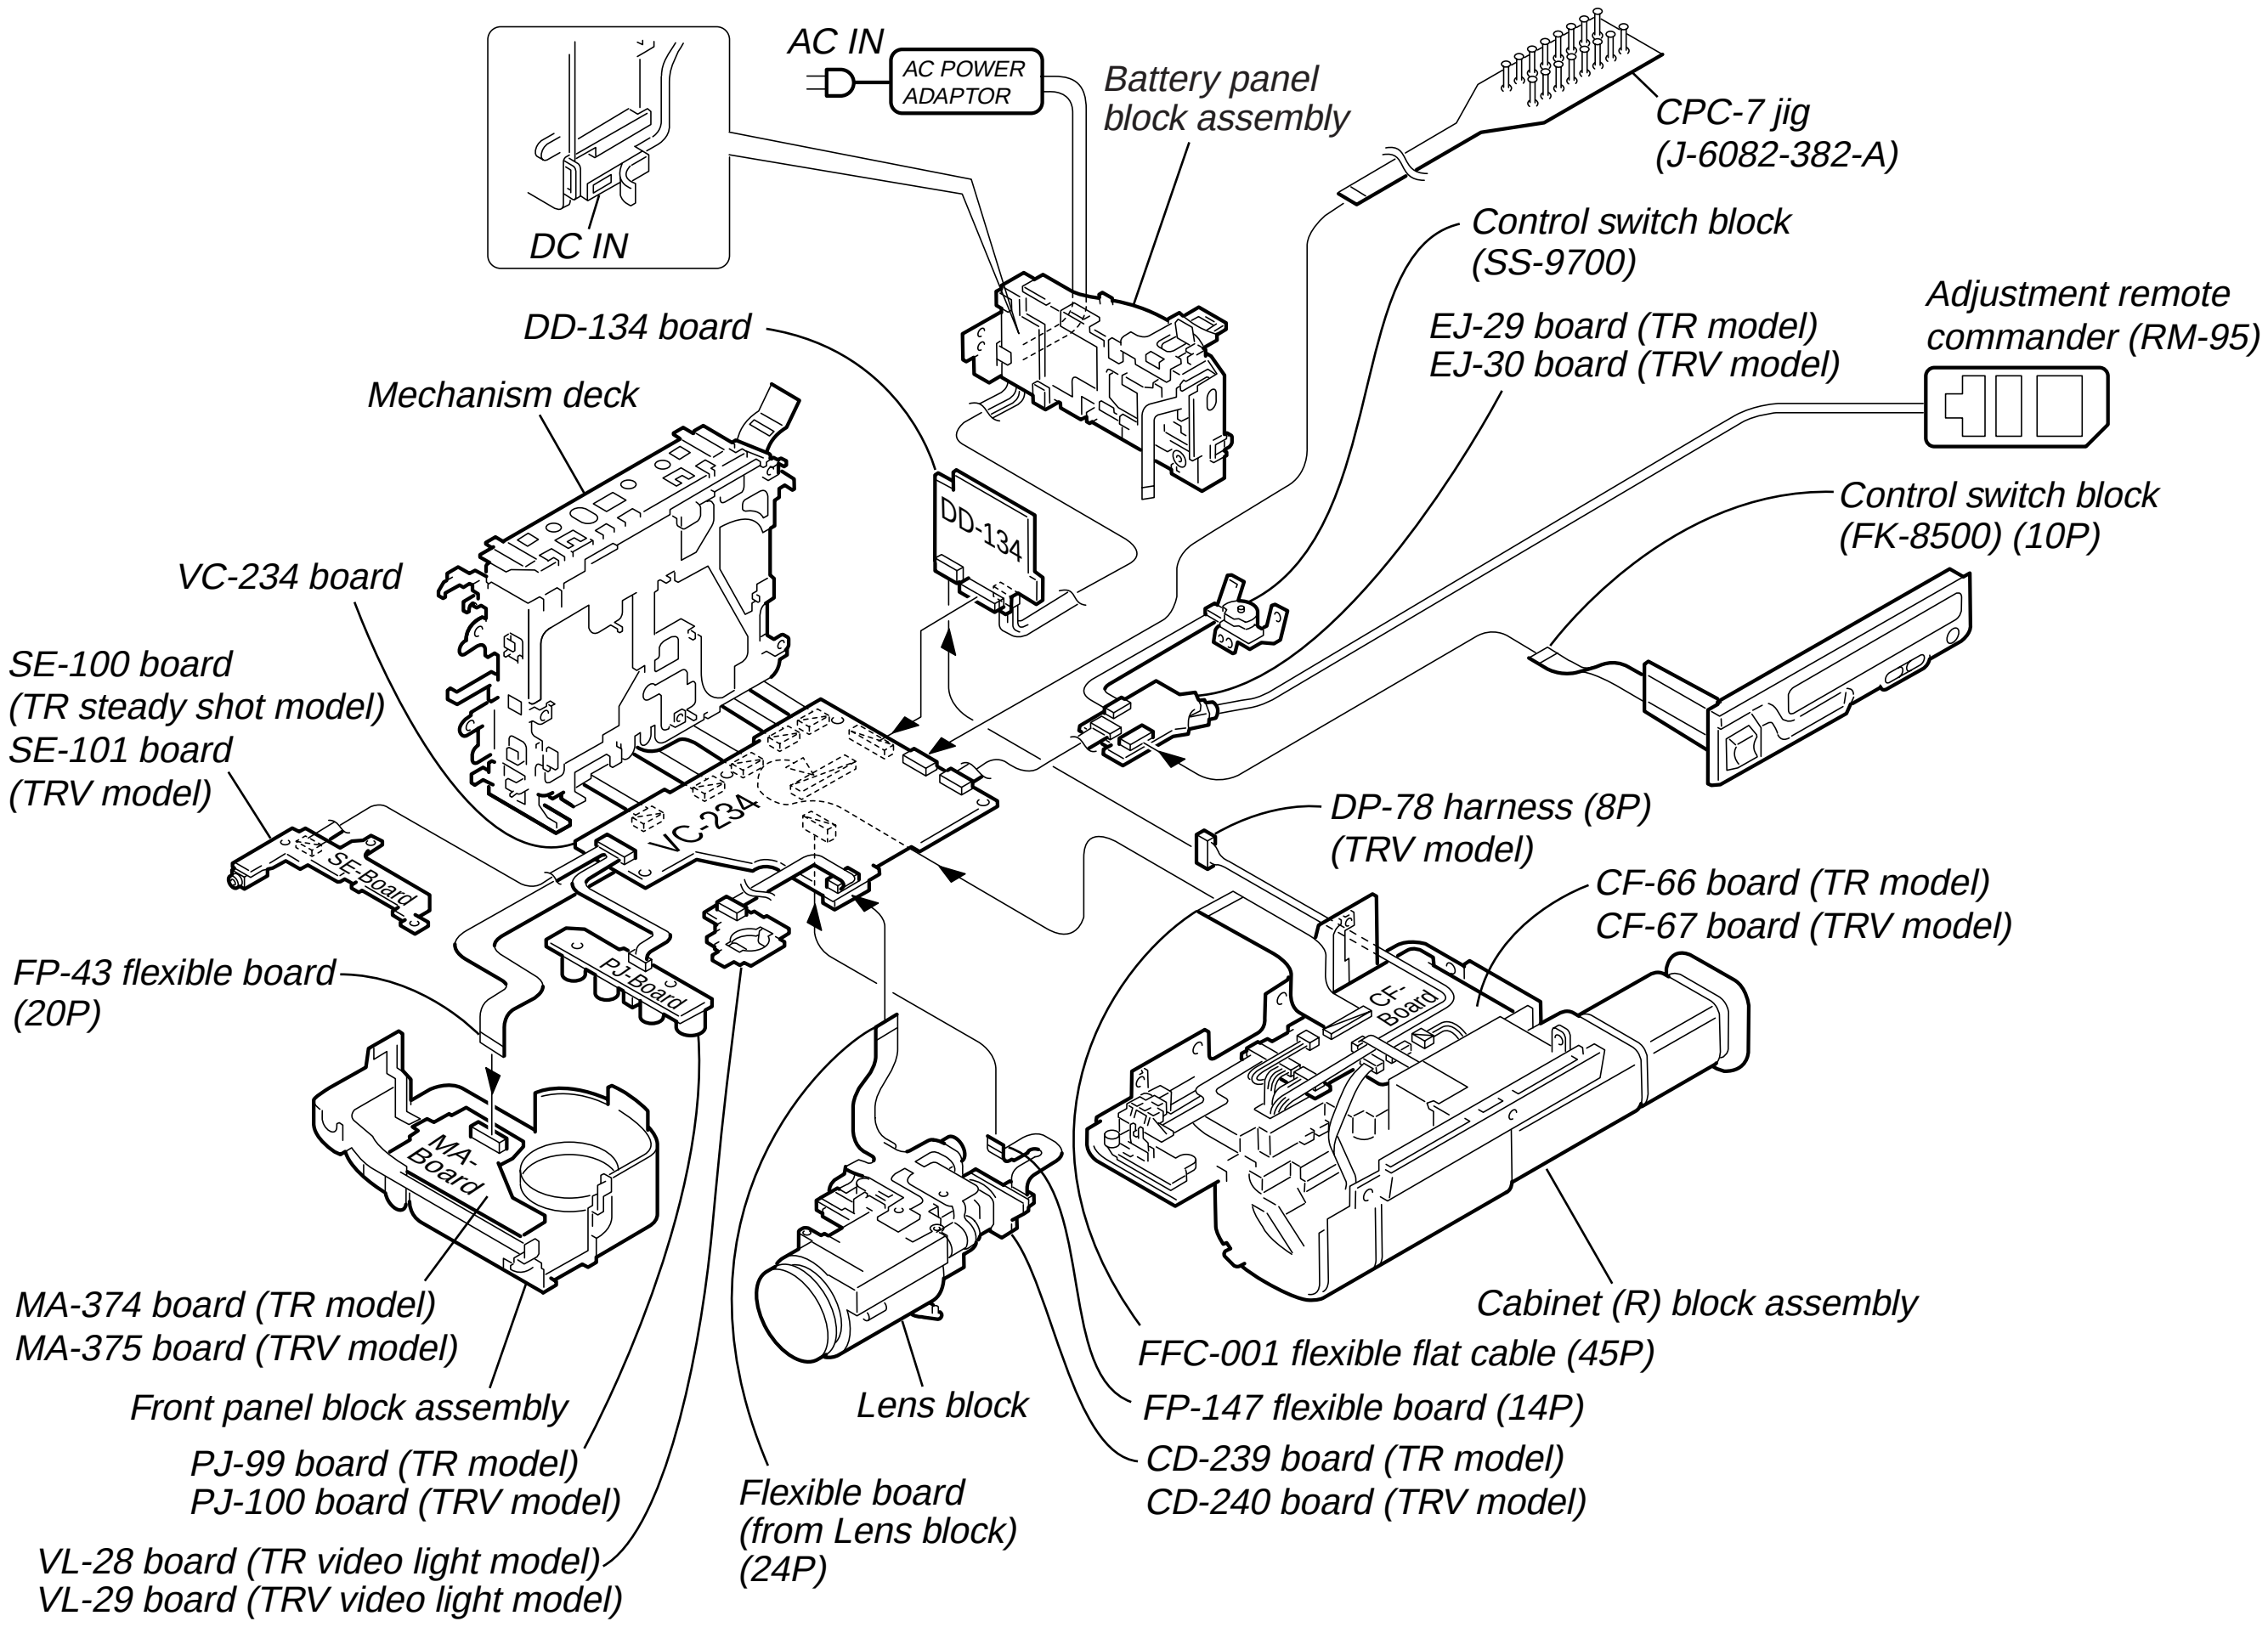
AC IN
AC POWER ADAPTOR
Battery panel block assembly
CPC-7 jig (J-6082-382-A)
DC IN
Control switch block (SS-9700)
DD-134 board
EJ-29 board (TR model)
EJ-30 board (TRV model)
Adjustment remote commander (RM-95)
Mechanism deck
DD-134
Control switch block (FK-8500) (10P)
VC-234 board
SE-100 board (TR steady shot model)
SE-101 board (TRV model)
VC-234
SE-Board
DP-78 harness (8P) (TRV model)
CF-66 board (TR model)
CF-67 board (TRV model)
PJ-Board
CF-Board
FP-43 flexible board (20P)
MA-Board
Cabinet (R) block assembly
MA-374 board (TR model)
MA-375 board (TRV model)
FFC-001 flexible flat cable (45P)
Front panel block assembly
Lens block
FP-147 flexible board (14P)
PJ-99 board (TR model)
PJ-100 board (TRV model)
CD-239 board (TR model)
CD-240 board (TRV model)
Flexible board (from Lens block) (24P)
VL-28 board (TR video light model)
VL-29 board (TRV video light model)

2-10. CF-66 BOARD, LIQUID CRYSTAL DISPLAY PANEL, BACK LIGHT (TR MODEL)

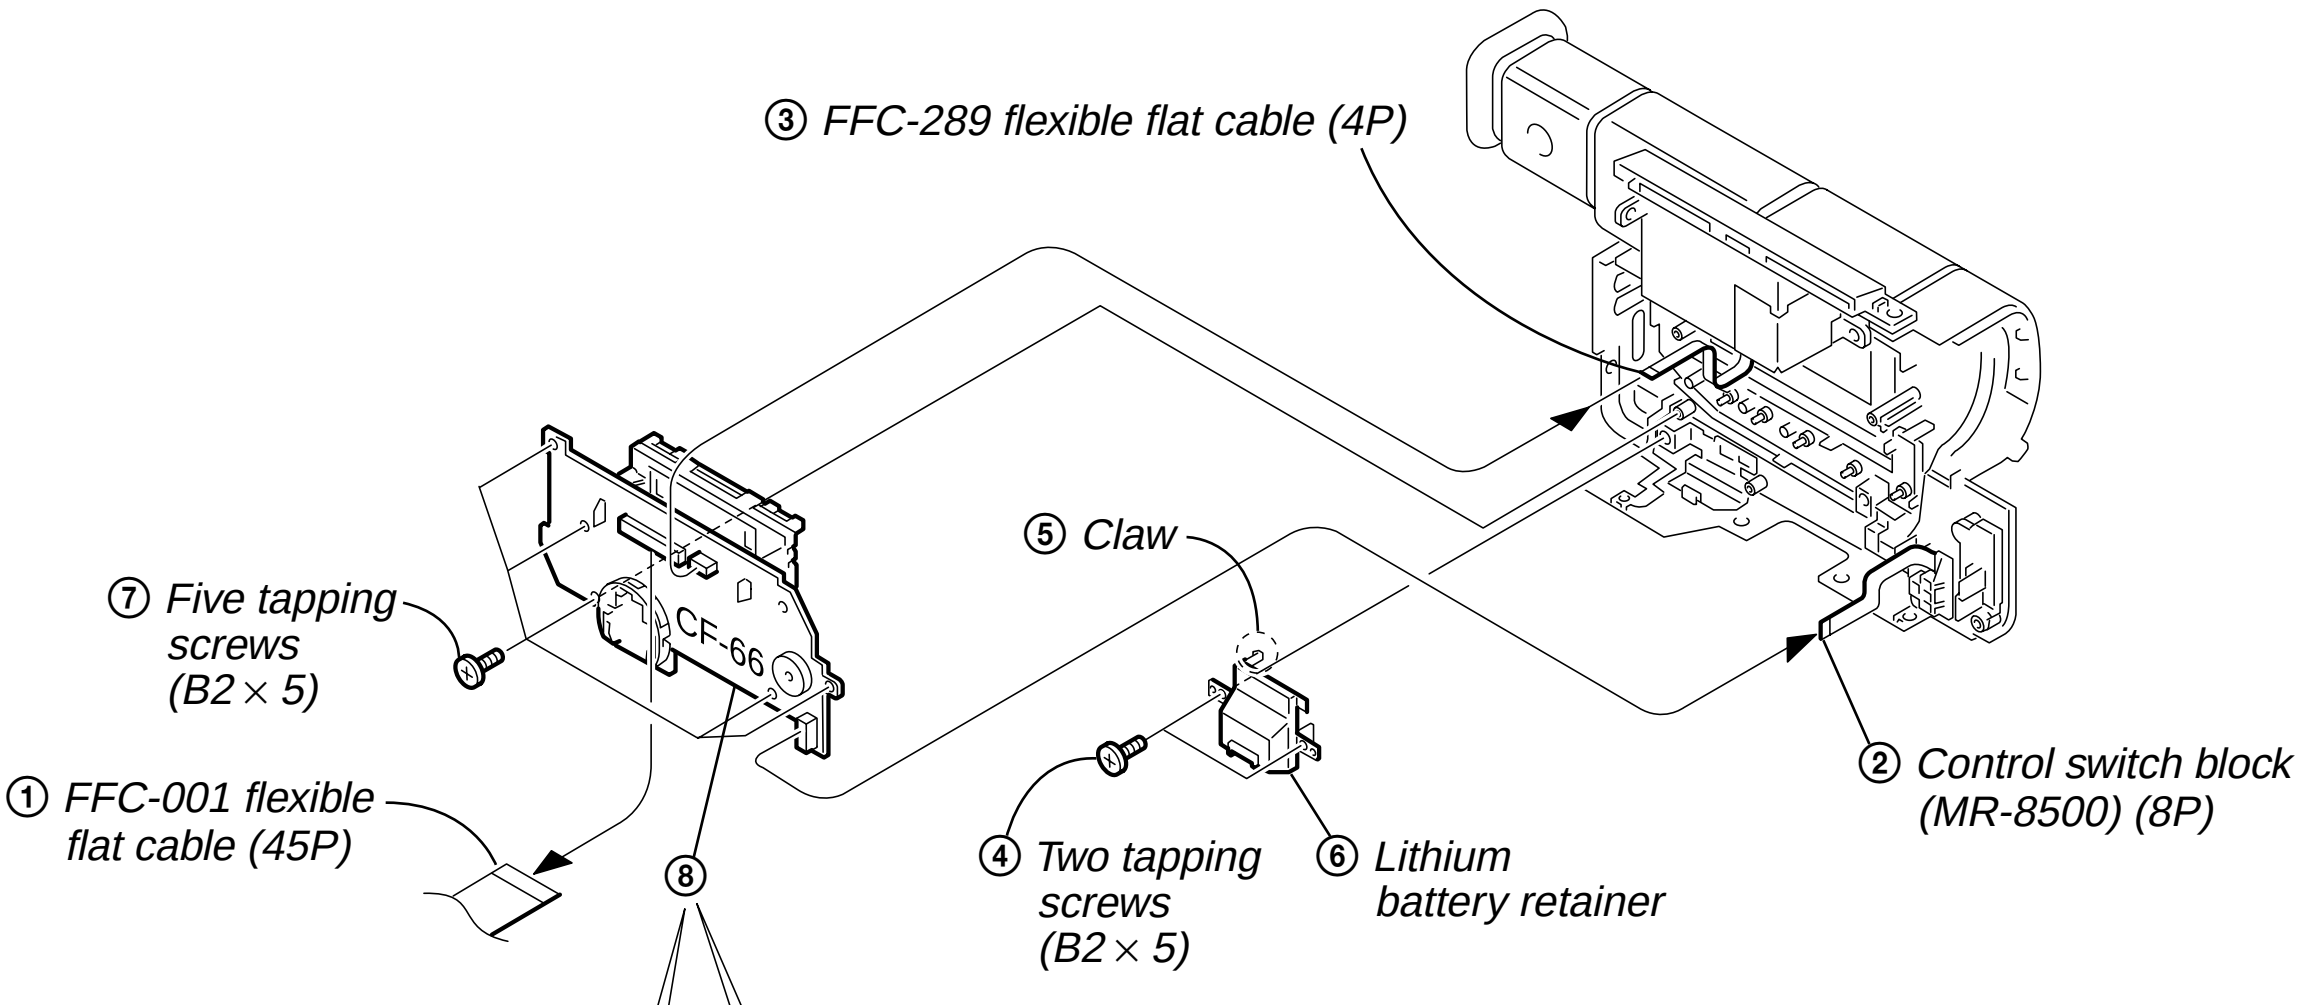
③ FFC-289 flexible flat cable (4P)
⑤ Claw
⑦ Five tapping screws (B2 × 5)
CF-66
① FFC-001 flexible flat cable (45P)
⑧
④ Two tapping screws (B2 × 5)
⑥ Lithium battery retainer
② Control switch block (MR-8500) (8P)

REMOVING THE LIQUID CRYSTAL DISPLAY PANEL

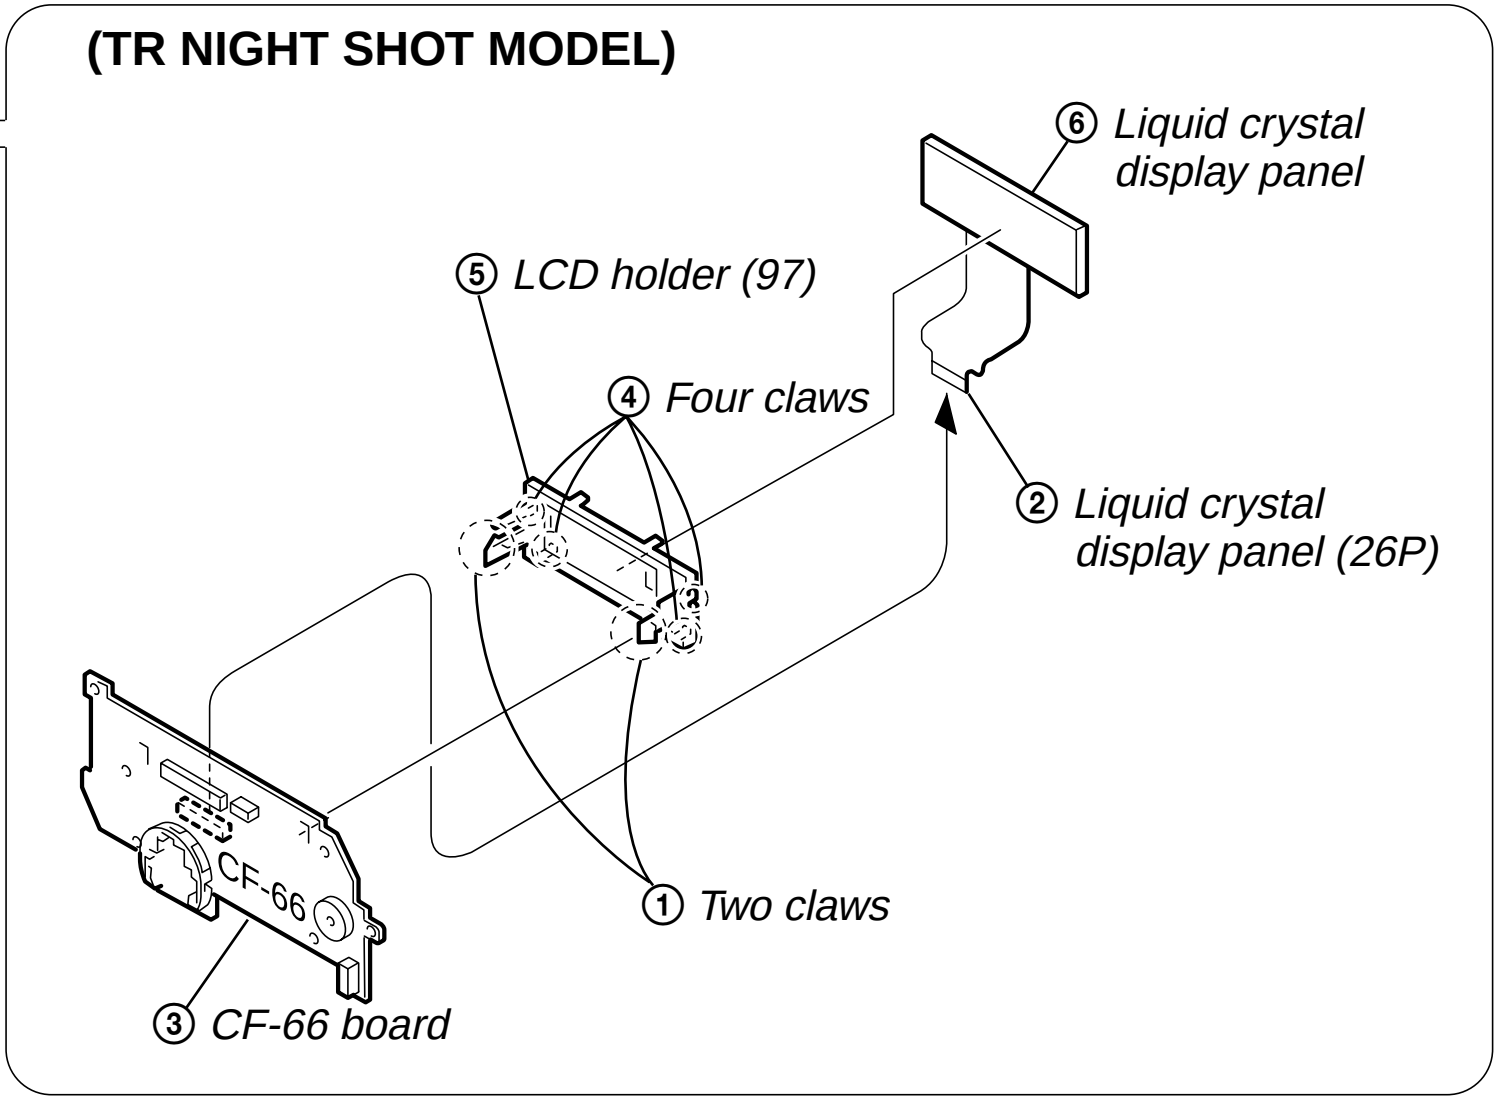
(TR NIGHT SHOT MODEL)
⑥ Liquid crystal display panel
⑤ LCD holder (97)
④ Four claws
② Liquid crystal display panel (26P)
CF-66
① Two claws
③ CF-66 board

REMOVING THE INDICATION LCD BLOCK ASSEMBLY

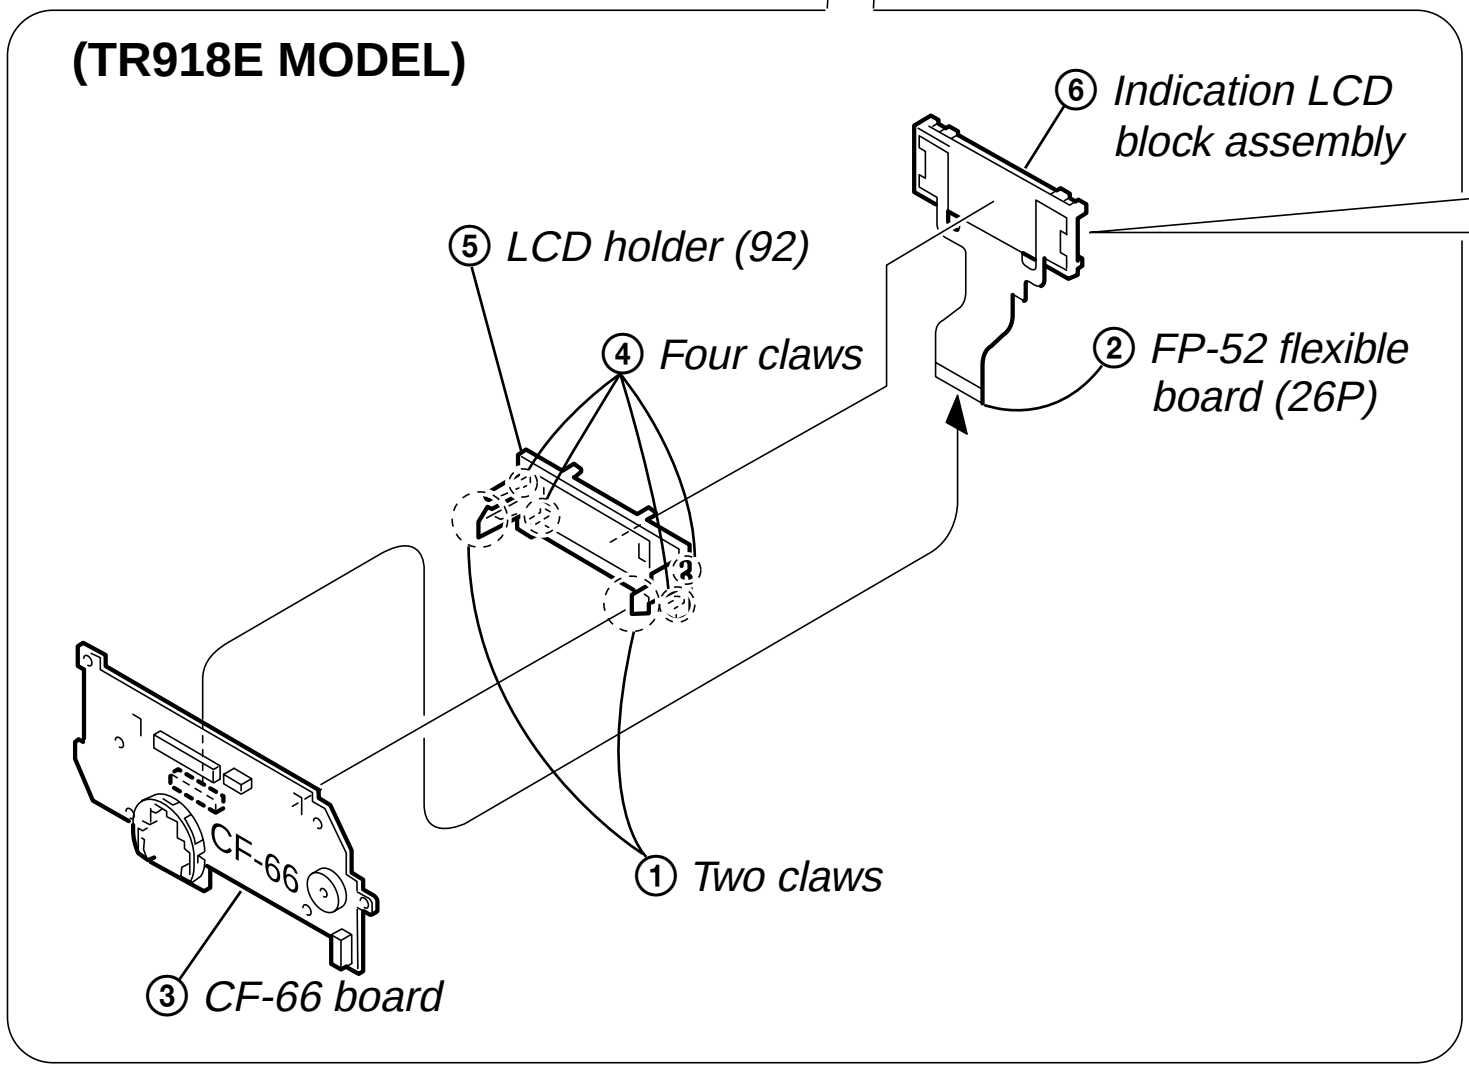
(TR918E MODEL)
⑥ Indication LCD block assembly
⑤ LCD holder (92)
④ Four claws
② FP-52 flexible board (26P)
CF-66
① Two claws
③ CF-66 board

REMOVING THE BACK LIGHT

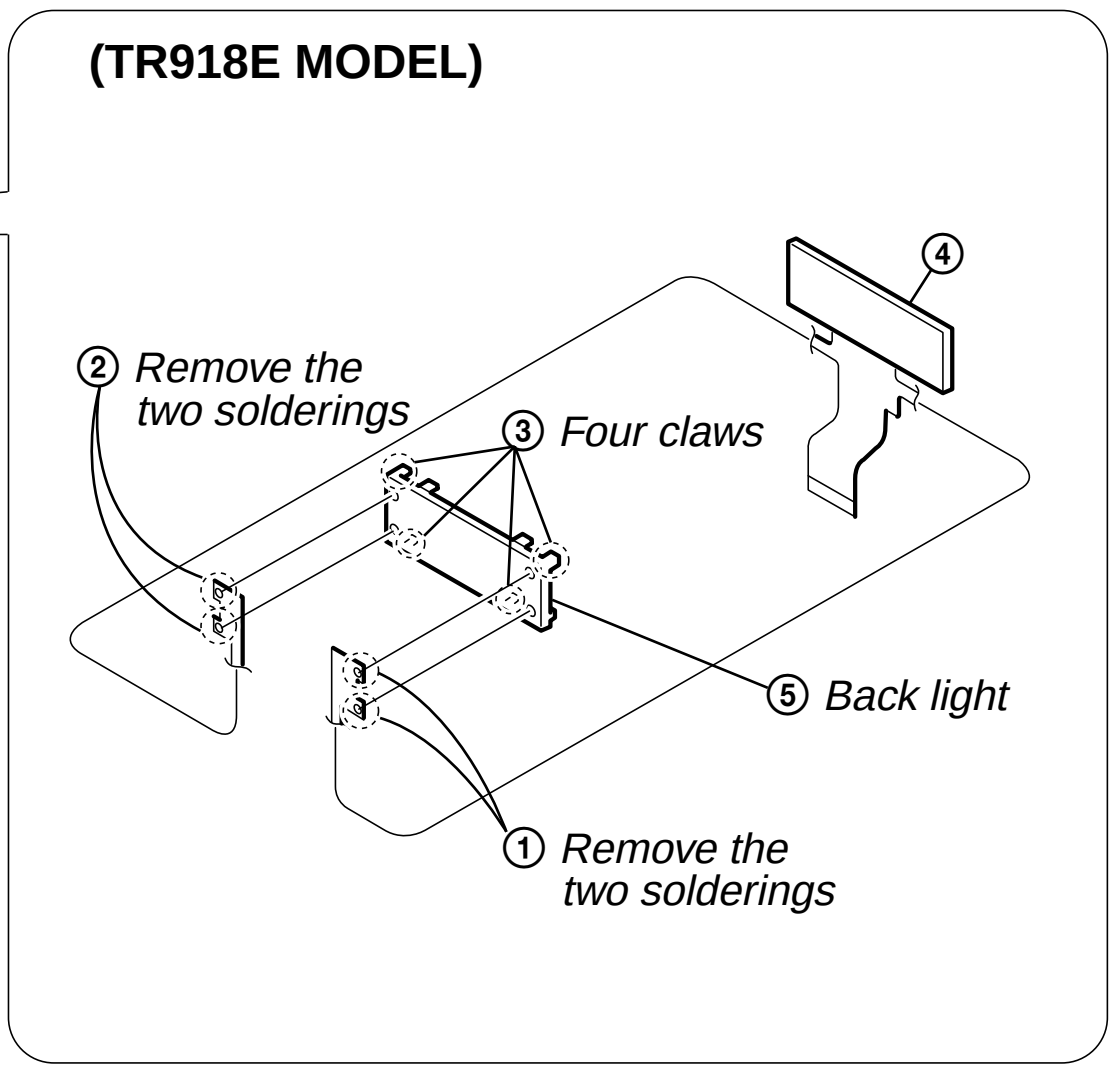
(TR918E MODEL)
④
② Remove the two solderings
③ Four claws
⑤ Back light
① Remove the two solderings

2-11. CF-67 BOARD, SPEAKER, PUSH SWITCH (TRV MODEL)

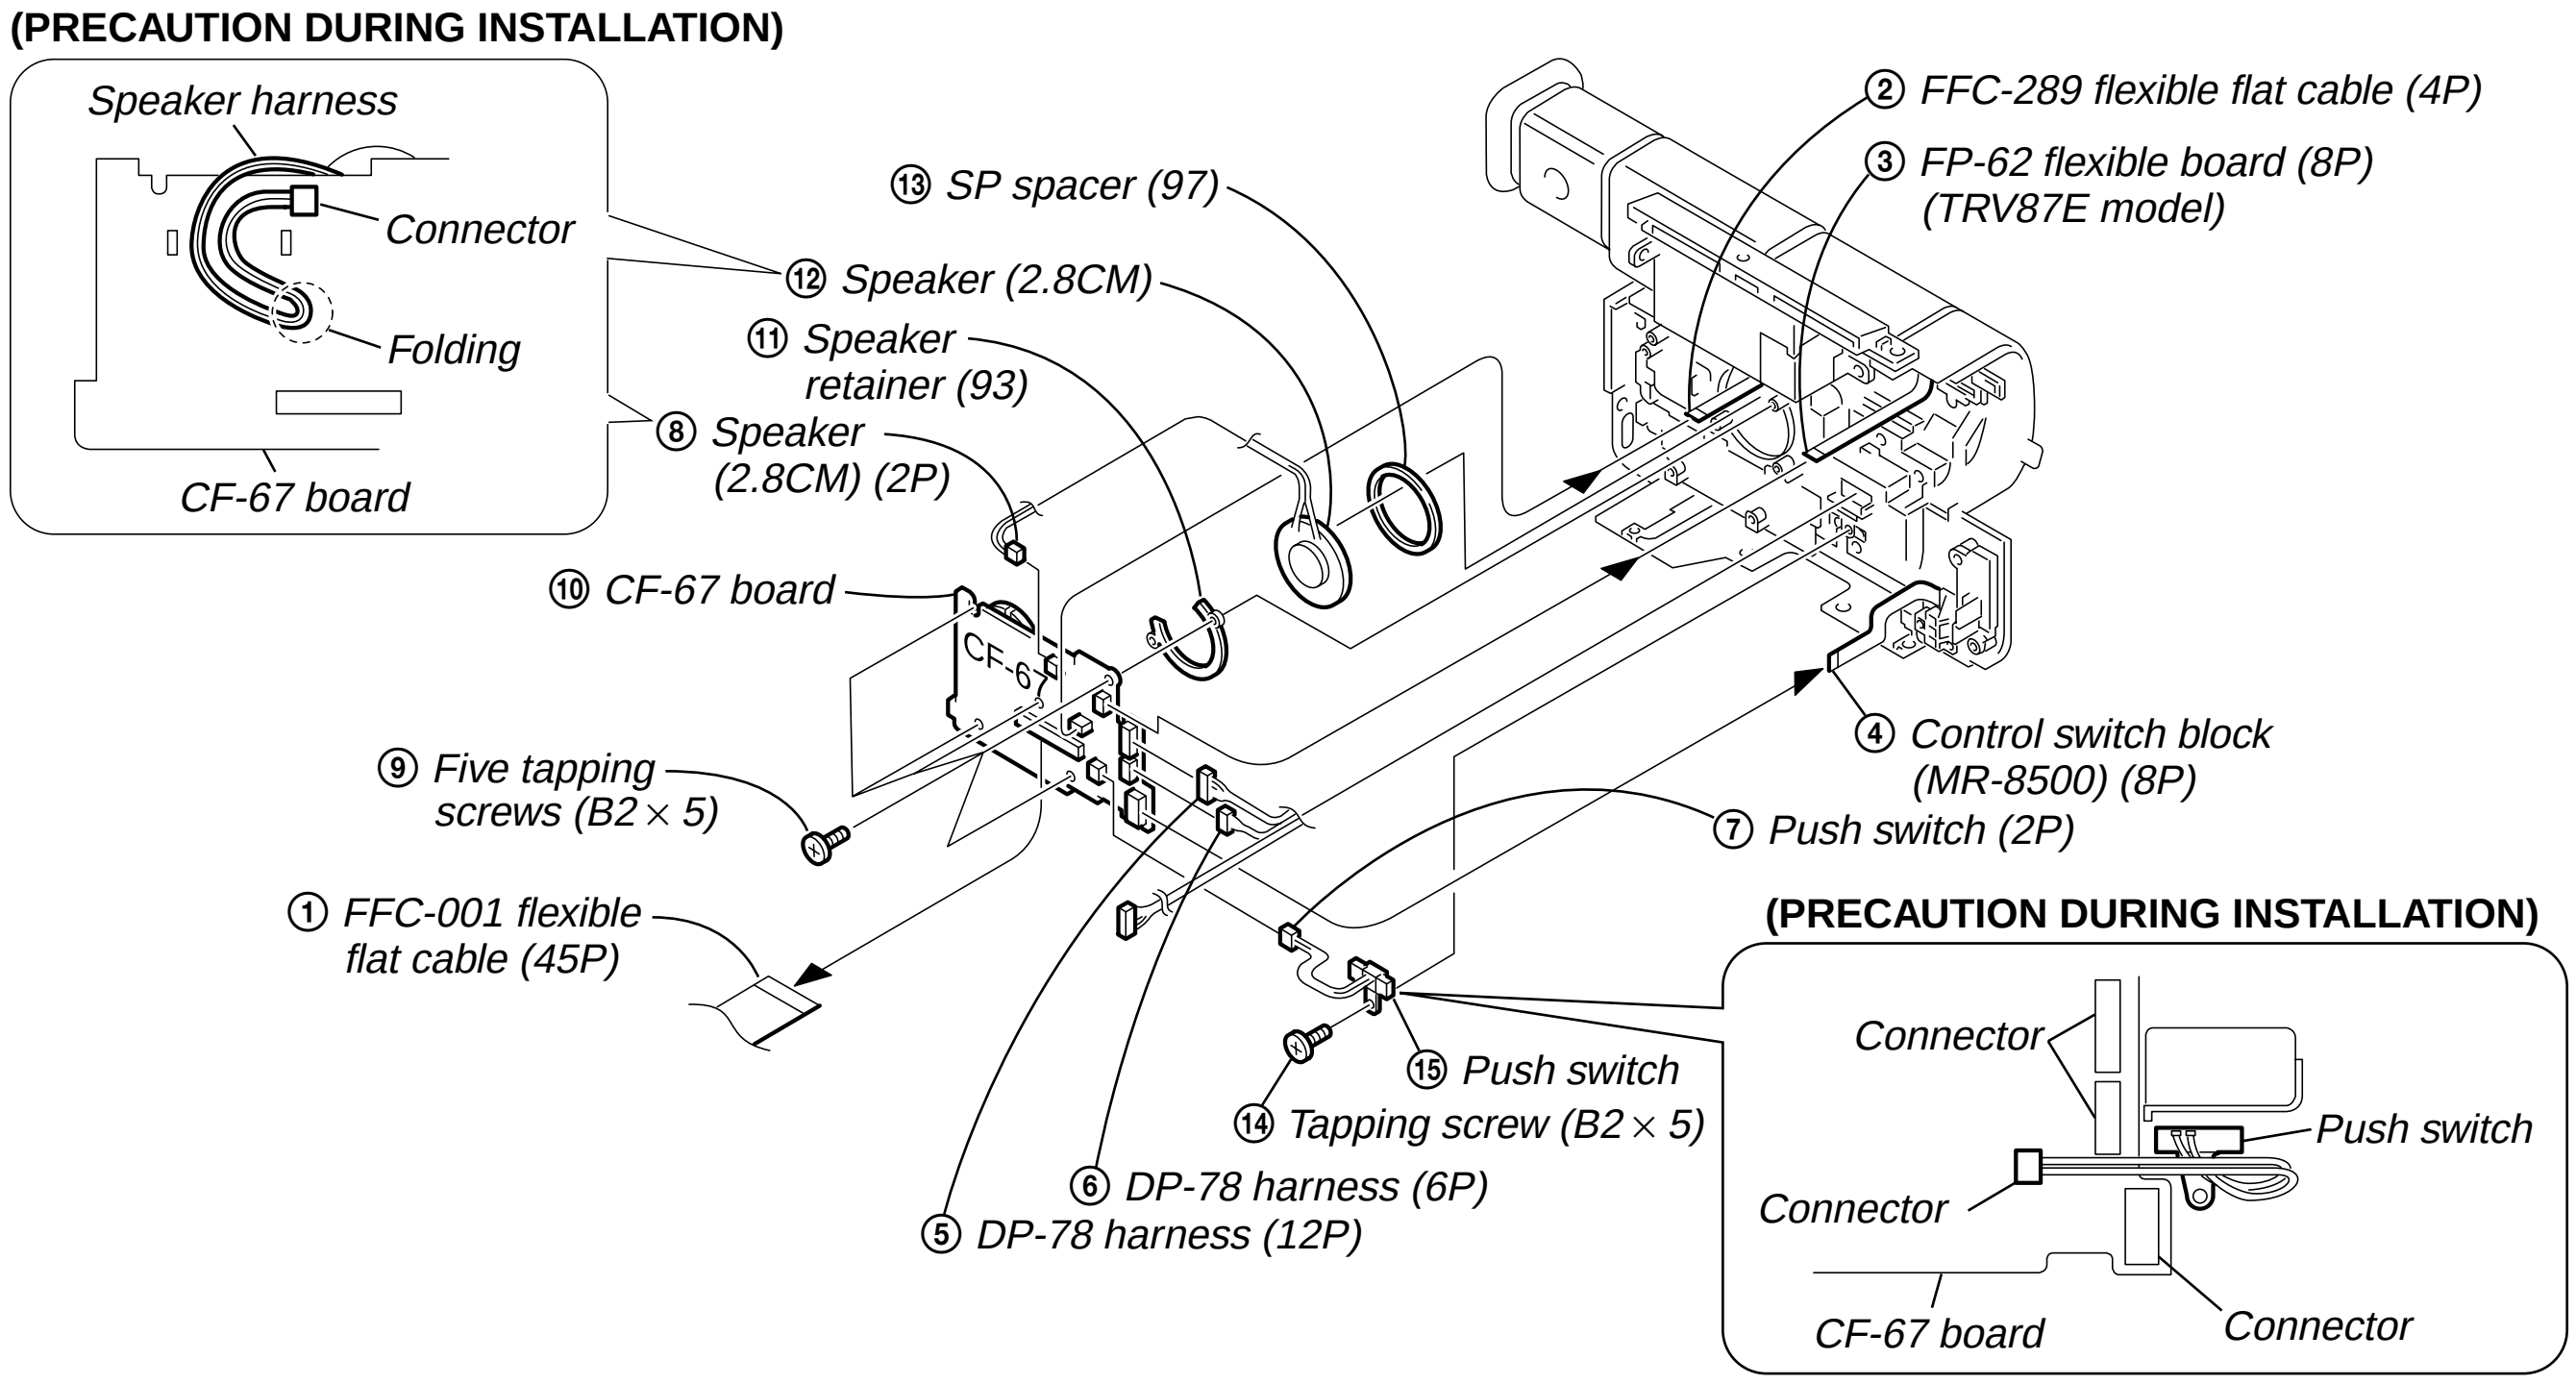
(PRECAUTION DURING INSTALLATION)
Speaker harness
Connector
Folding
CF-67 board
⑬ SP spacer (97)
⑫ Speaker (2.8CM)
⑪ Speaker retainer (93)
⑧ Speaker (2.8CM) (2P)
⑩ CF-67 board
CF-67
⑨ Five tapping screws (B2 × 5)
① FFC-001 flexible flat cable (45P)
② FFC-289 flexible flat cable (4P)
③ FP-62 flexible board (8P) (TRV87E model)
④ Control switch block (MR-8500) (8P)
⑦ Push switch (2P)
⑮ Push switch
⑭ Tapping screw (B2 × 5)
⑥ DP-78 harness (6P)
⑤ DP-78 harness (12P)
(PRECAUTION DURING INSTALLATION)
Connector
Push switch
Connector
CF-67 board
Connector

2-12. LCD BLOCK ASSEMBLY, HINGE ASSEMBLY (TRV MODEL)

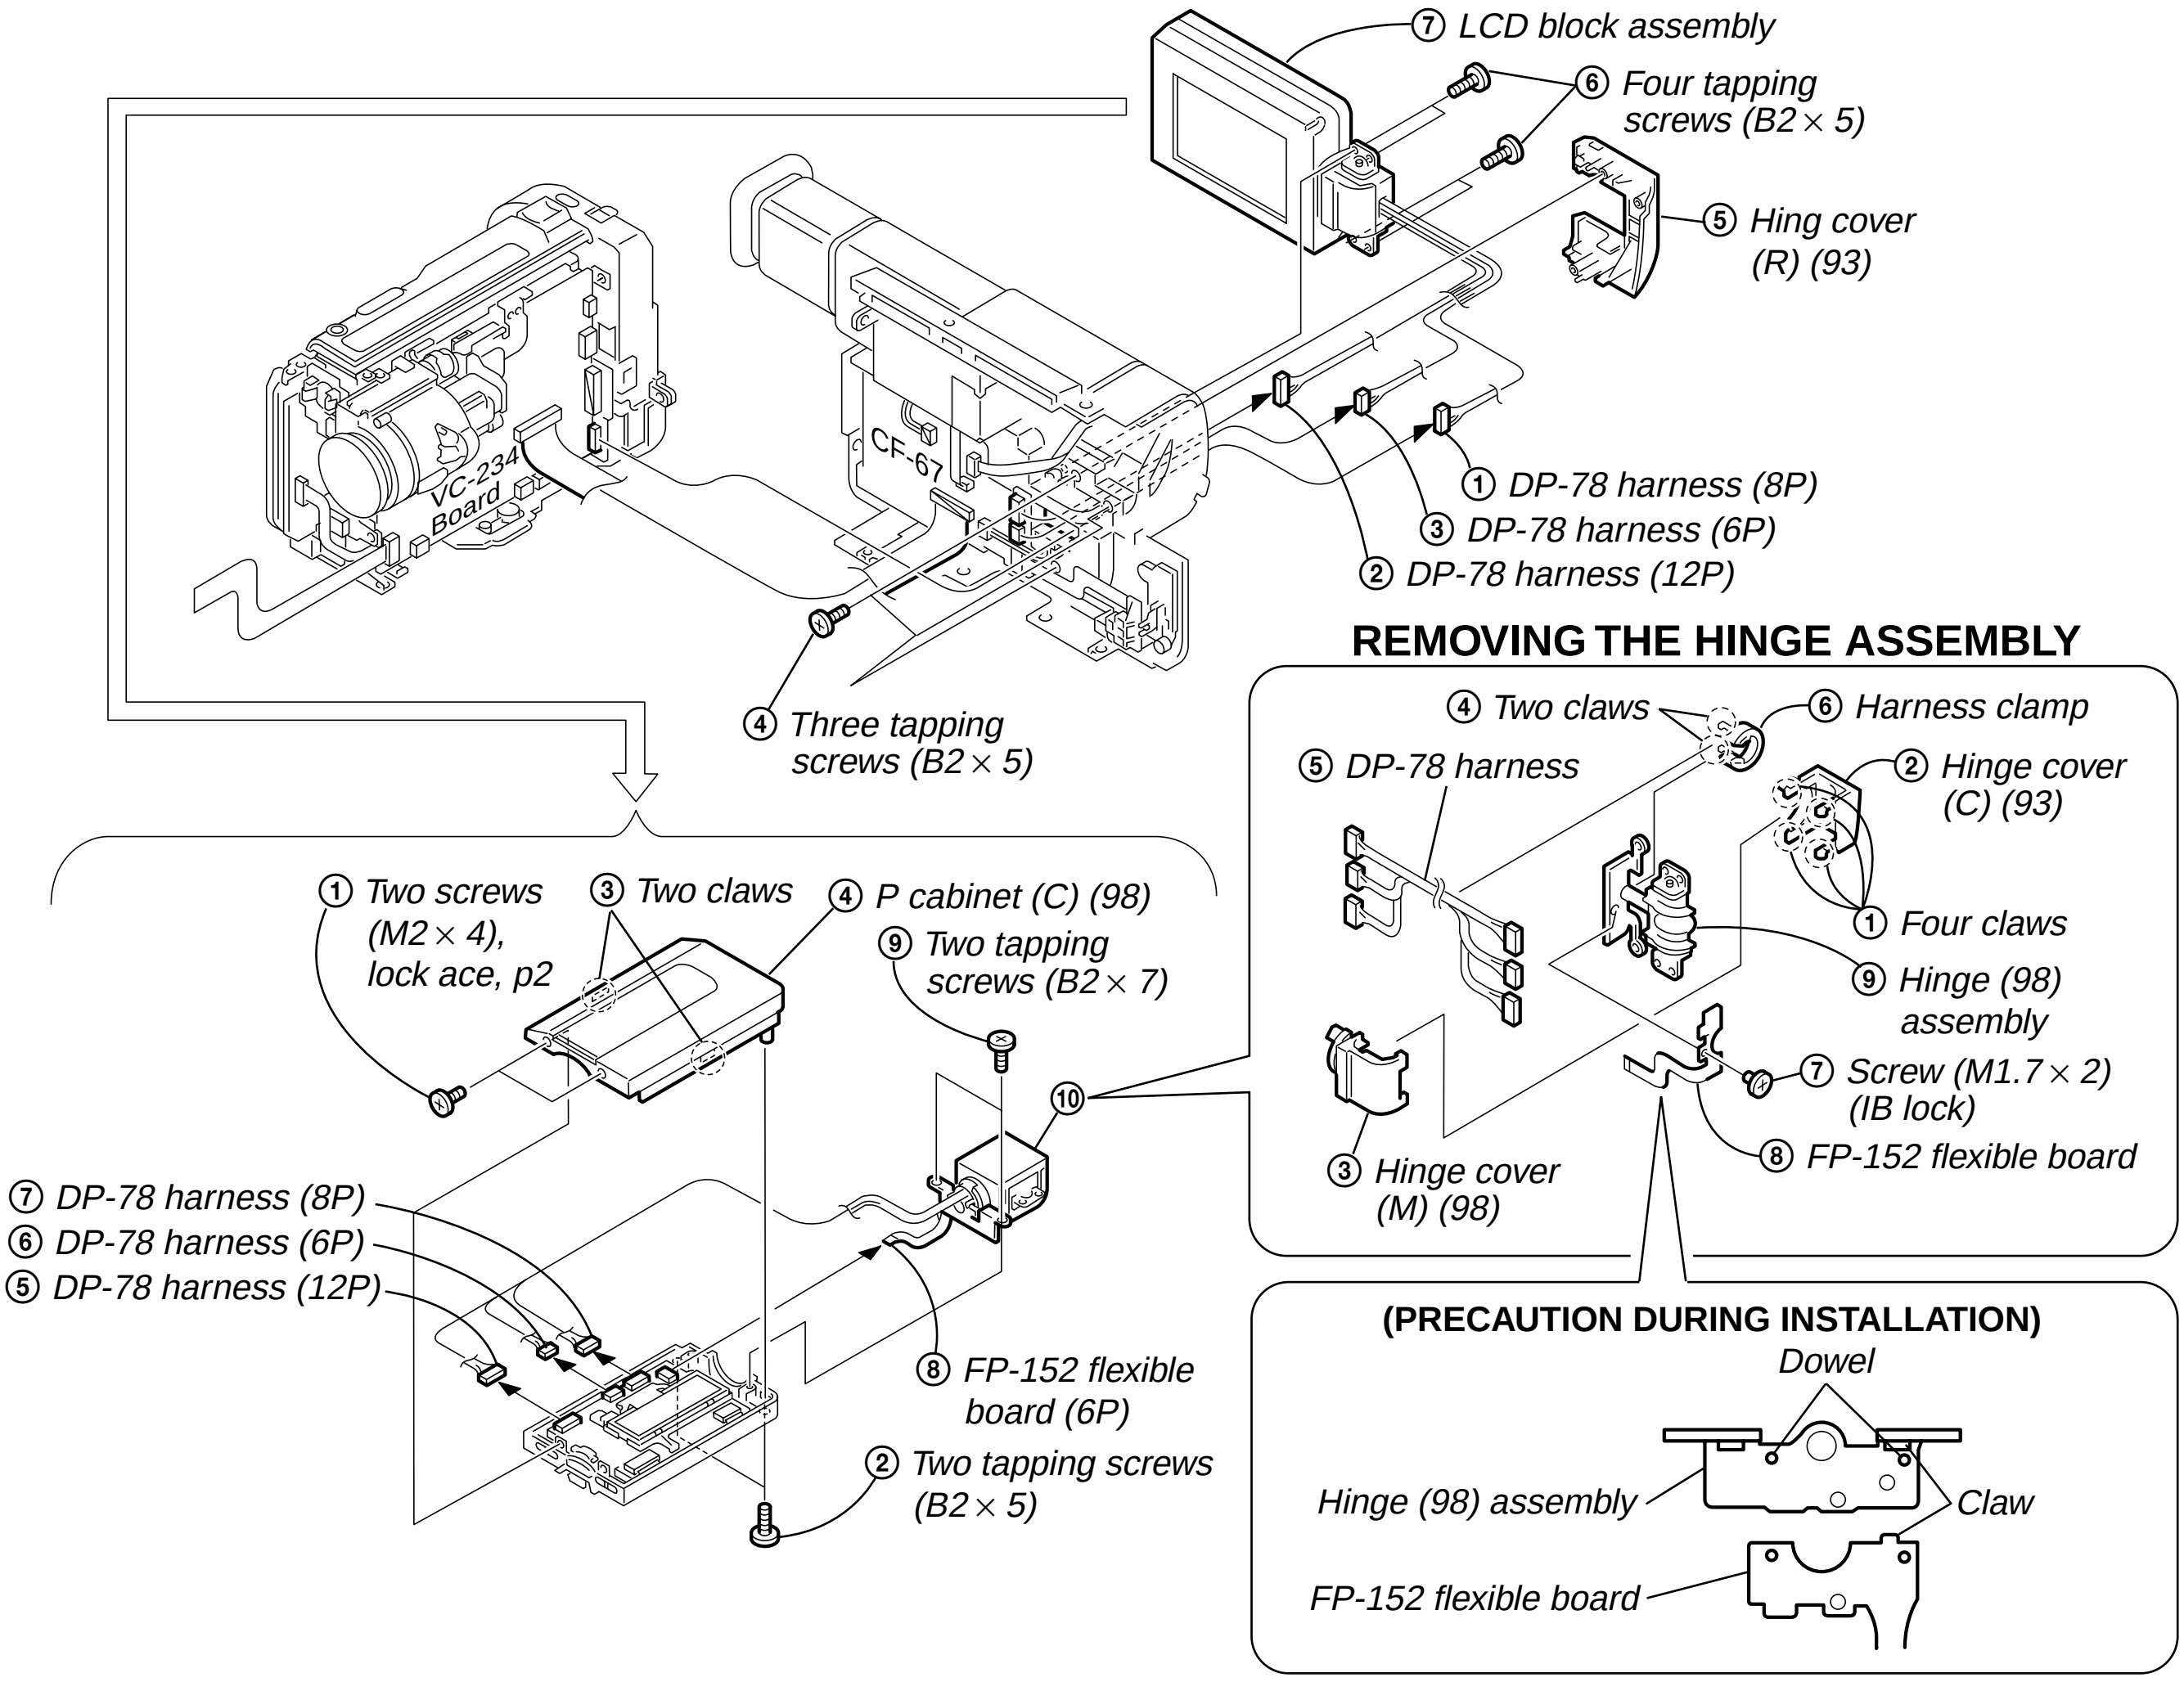
⑦ LCD block assembly
⑥ Four tapping screws (B2 × 5)
⑤ Hing cover (R) (93)
VC-234 Board
CF-67
① DP-78 harness (8P)
③ DP-78 harness (6P)
② DP-78 harness (12P)
④ Three tapping screws (B2 × 5)
REMOVING THE HINGE ASSEMBLY
④ Two claws
⑥ Harness clamp
⑤ DP-78 harness
② Hinge cover (C) (93)
① Four claws
⑨ Hinge (98) assembly
⑦ Screw (M1.7 × 2) (IB lock)
⑧ FP-152 flexible board
③ Hinge cover (M) (98)
① Two screws (M2 × 4), lock ace, p2
③ Two claws
④ P cabinet (C) (98)
⑨ Two tapping screws (B2 × 7)
⑩
⑦ DP-78 harness (8P)
⑥ DP-78 harness (6P)
⑤ DP-78 harness (12P)
⑧ FP-152 flexible board (6P)
② Two tapping screws (B2 × 5)
(PRECAUTION DURING INSTALLATION)
Dowel
Hinge (98) assembly
Claw
FP-152 flexible board

2-13. HARNESS PROCESSING OF THE HINGE ASSEMBLY (TRV MODEL)

[ASSEMBLING THE HARNESS CLAMP]

Attach the harness clamp to the DP-78 harness.

- *Place a longer harness to the left side.*
- *Place the shortest harness (8P) in the right side to the bottom.*
- *Place the hooking portion of the harness clamp to the right side.*
- *Place the harness clamp in the left of the tie band himeron that ties the three wires.*
- *Insert the DP-78 harness in the internal groove of the harness clamp.*

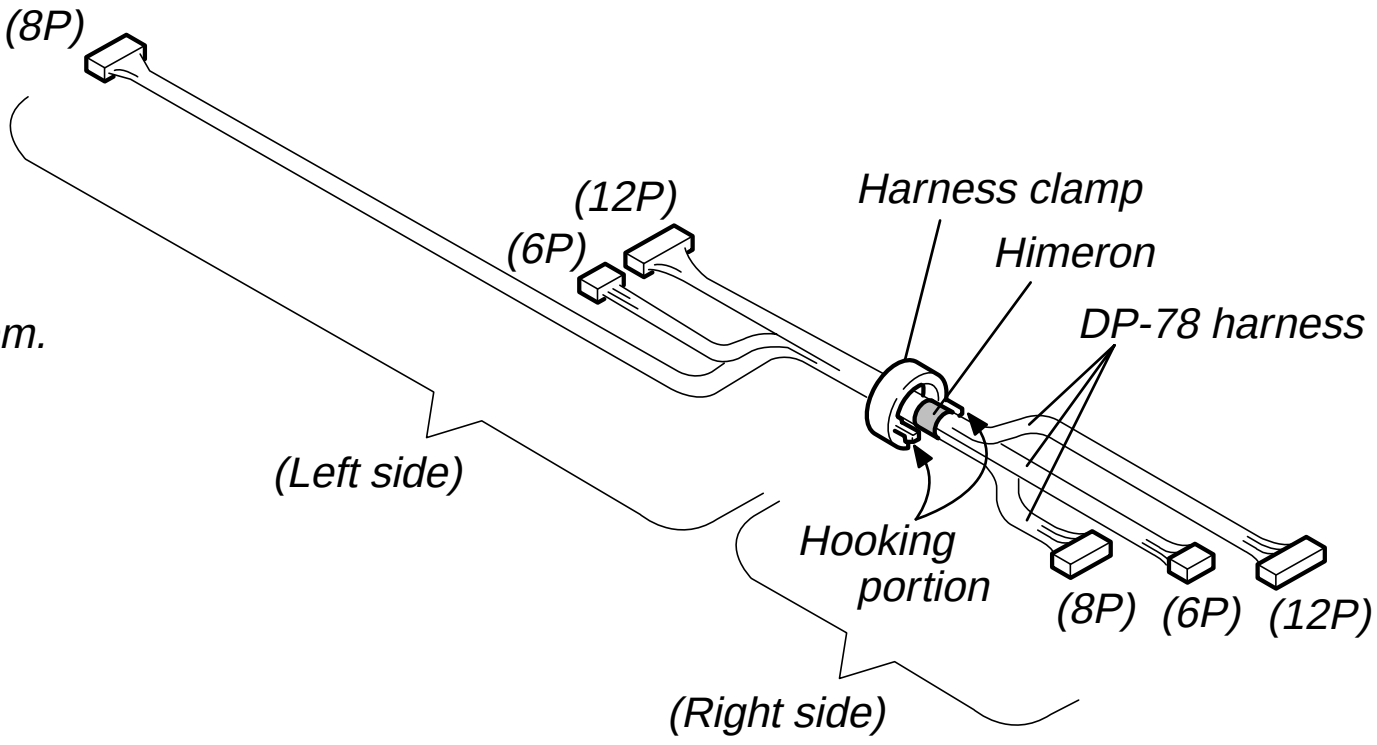
(8P)
(12P)
(6P)
Harness clamp
Himeron
DP-78 harness
(Left side)
Hooking portion
(8P)
(6P)
(12P)
(Right side)

[INSTALLING THE HARNESS CLAMP]

Hook the two claws of the harness clamp on the hinge bracket.
Then attach it to the shaft of the hinge assembly.

Note:
- *The harness must not be pinched.*
- *The sheet of the FP-152 flexible board must not be peeled over.*

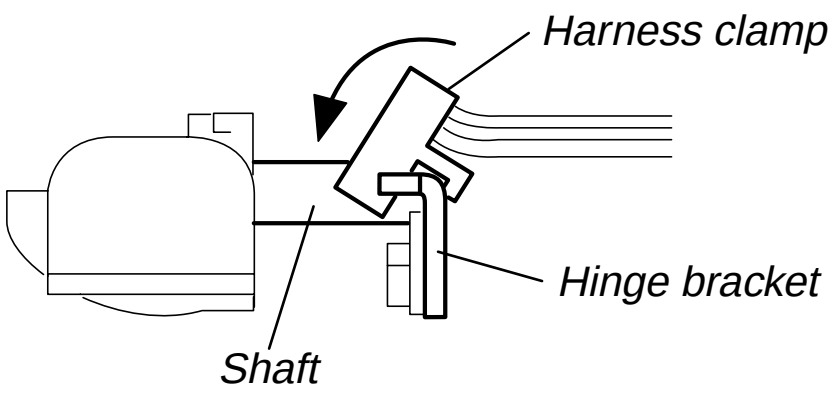
Harness clamp
Hinge bracket
Shaft

[HARNESS PROCESSING]

Fix the harness using the harness guide of the hinge assembly.

- *While holding the harness clamp, turn the hinge upside down.*
- *While being careful not to twist the harness, insert the longer harness (8P) into the shallow groove and insert the other harnesses (6P, 12P) to the deeper groove.*

Note:
- *Be sure that the harnesses do not climb over the three ribs of the guide.*
- *Be sure that the harnesses are not pinched between the harness clamp and the shaft.*

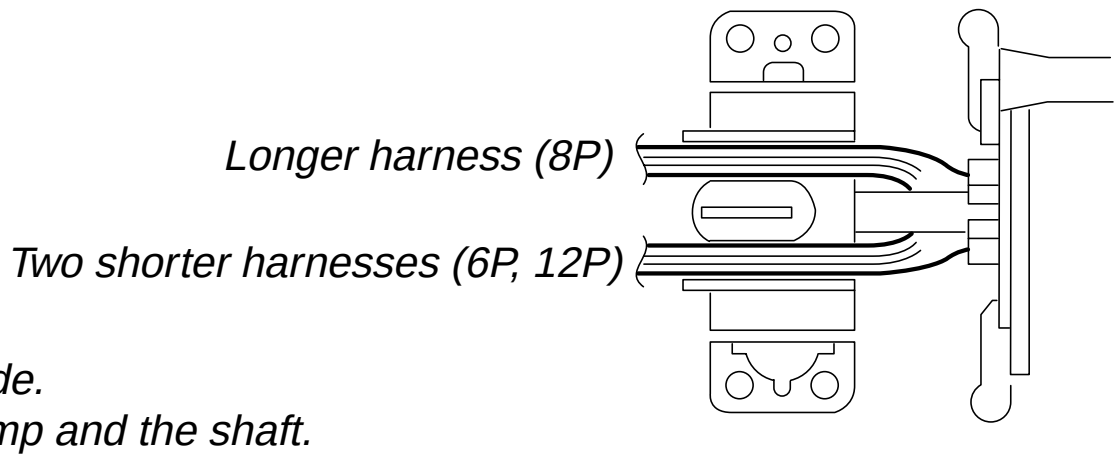
Longer harness (8P)
Two shorter harnesses (6P, 12P)

[ATTACHING THE HINGE COVER (M)]

Attach the hinge cover (M) to the hinge assembly.

- *Hold the harness so that the harness must not come out from the groove.*
- *Be careful so that the hinge cover (M) must not contact with the switch of the FP-152 flexible board.*

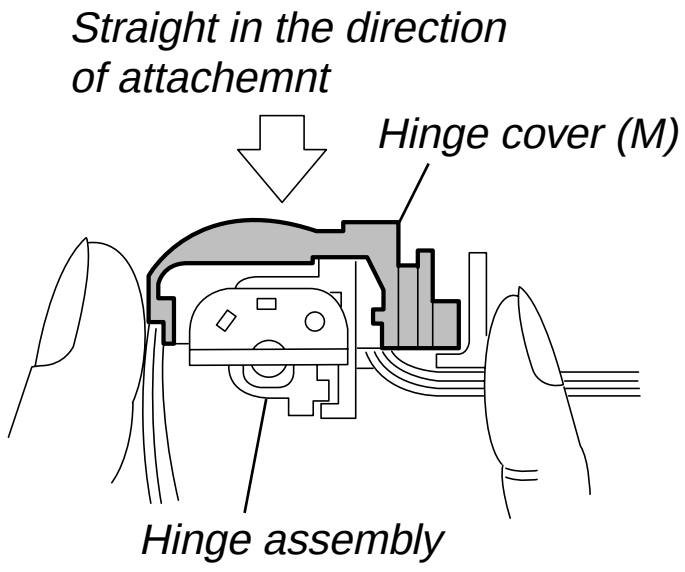
Straight in the direction of attachemnt
Hinge cover (M)
Hinge assembly

[ATTACHING THE HINGE COVER (C)]

Attach the hinge cover (C) to the hinge cover (M).

- *While holding the hinge cover (M) so as not to be dropped, turn the hinge cover (C) upside down.*
- *Route the harness inside the cutout of the hinge cover (M).*
- *Attach the hinge cover (C) straight. (Claw hooks at the four positions.)*
- *Make an attempt to move the harness gently at the entrance/exit of the hinge assembly to make sure that the harness can move.*

Note:
- *Be sure that the harness is not pinched by the hinge cover.*
- *Be sure that the harness can move at the entrance/exit of the hinge assembly.*

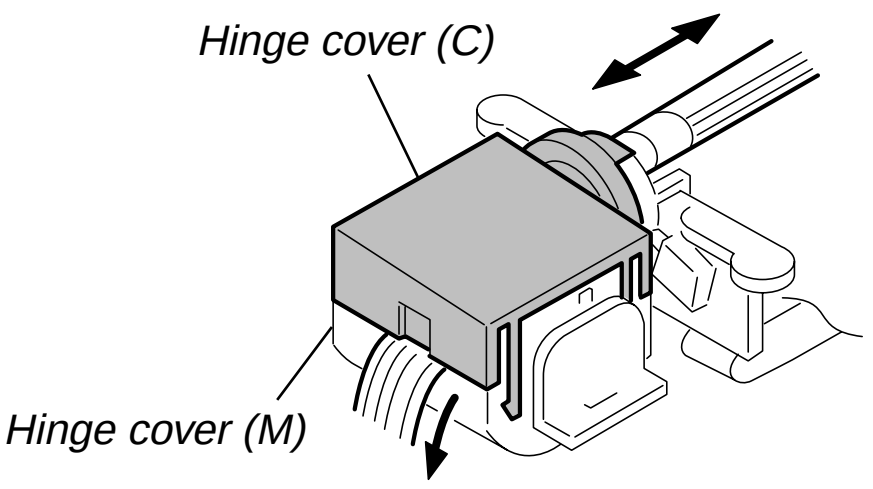
Hinge cover (C)
Hinge cover (M)

2-14. CIRCUIT BOARDS LOCATION

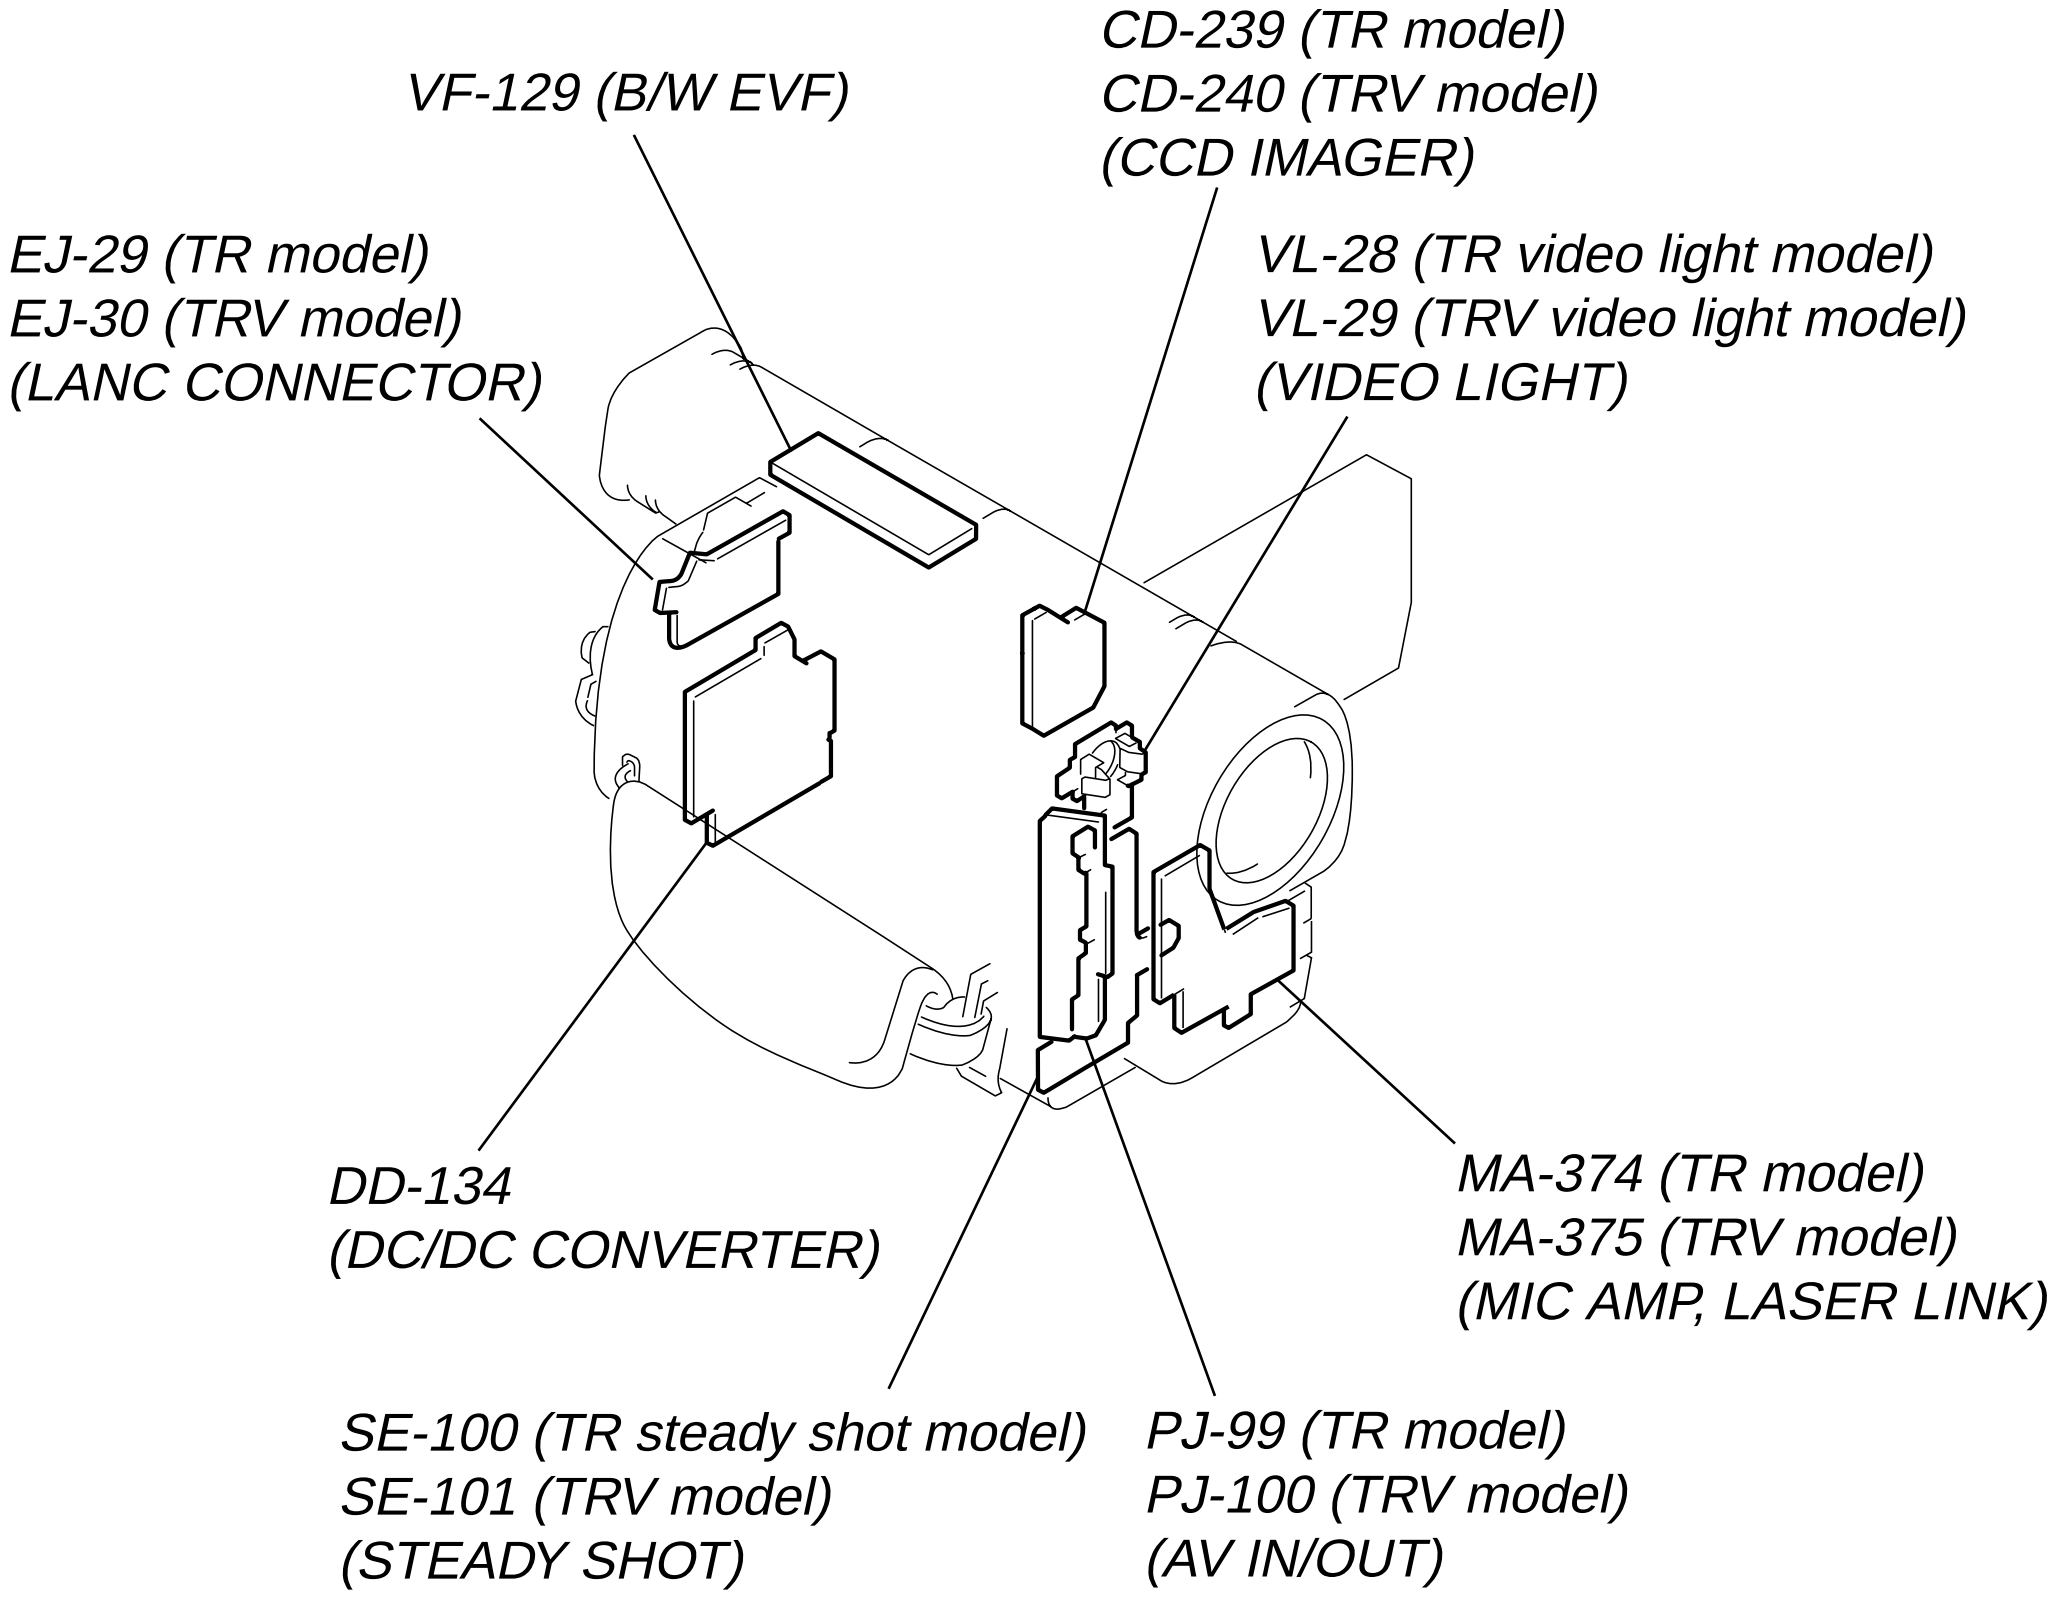
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

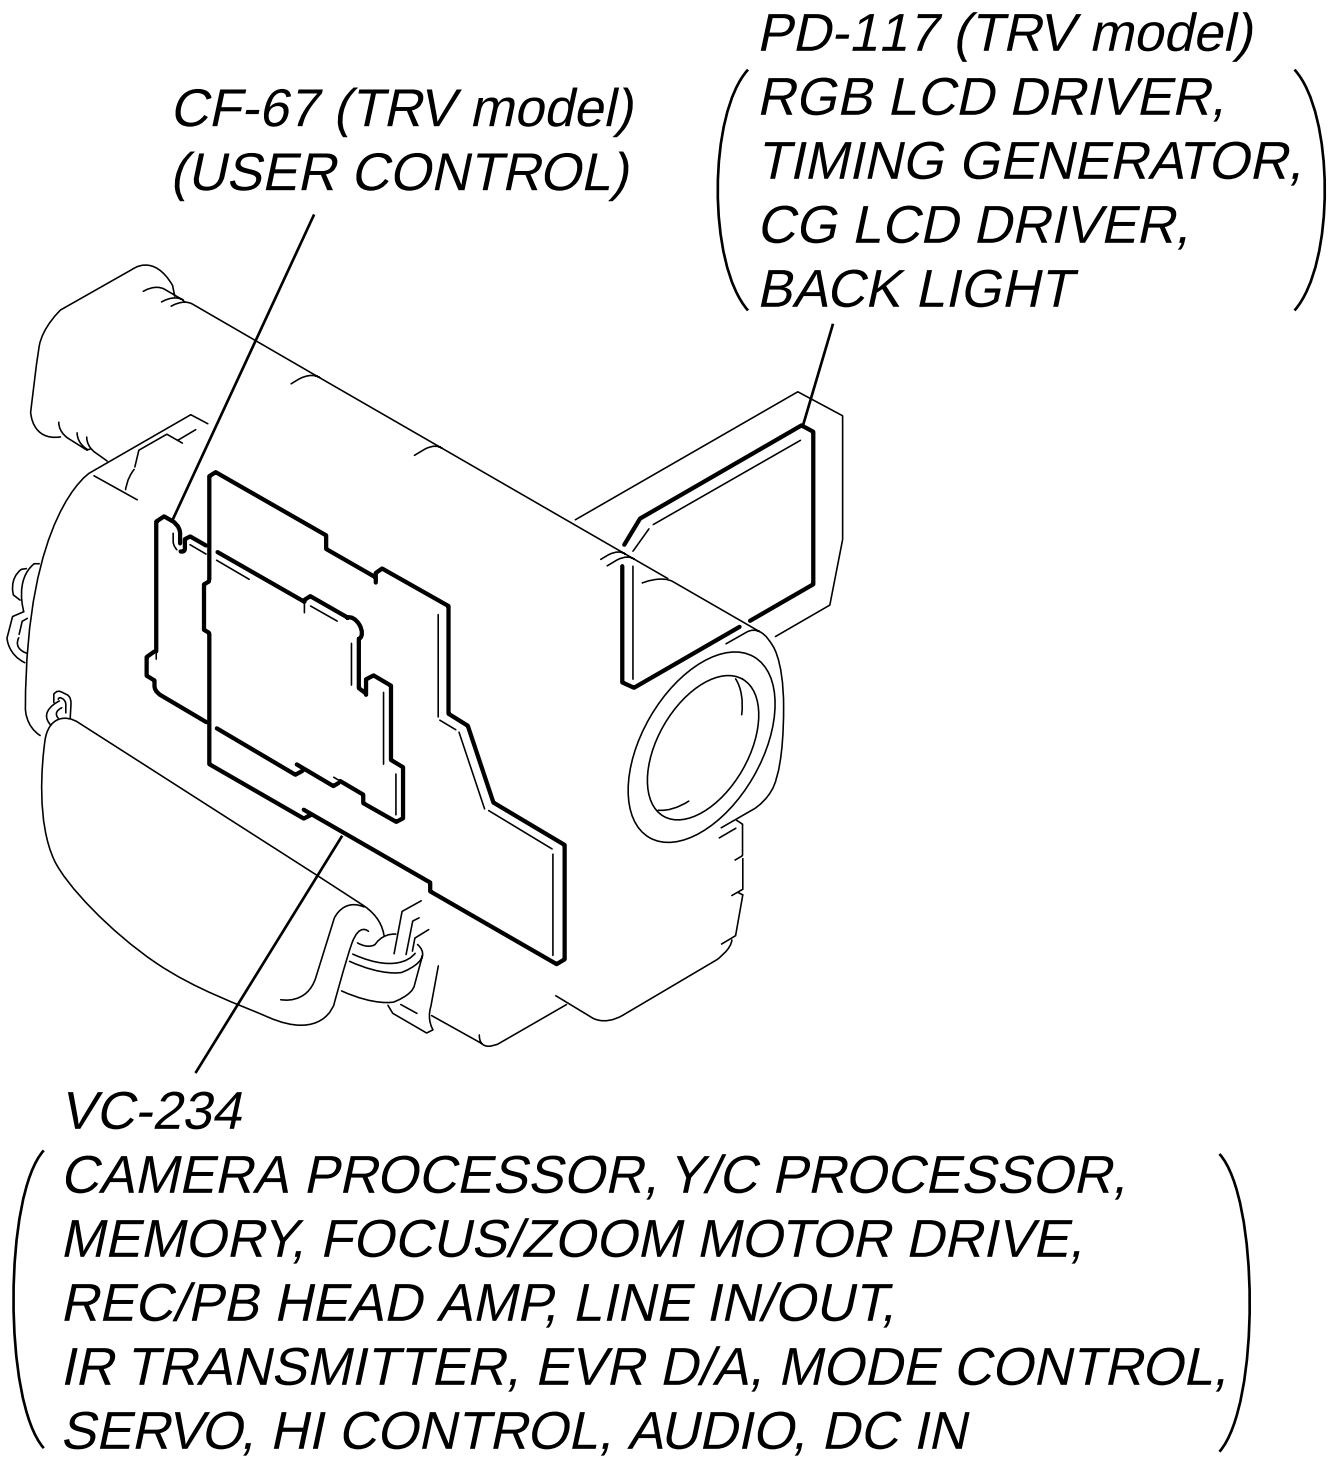
CF-67 (TRV model)
(USER CONTROL)
PD-117 (TRV model)
RGB LCD DRIVER,
TIMING GENERATOR,
CG LCD DRIVER,
BACK LIGHT
VC-234
CAMERA PROCESSOR, Y/C PROCESSOR,
MEMORY, FOCUS/ZOOM MOTOR DRIVE,
REC/PB HEAD AMP, LINE IN/OUT,
IR TRANSMITTER, EVR D/A, MODE CONTROL,
SERVO, HI CONTROL, AUDIO, DC IN

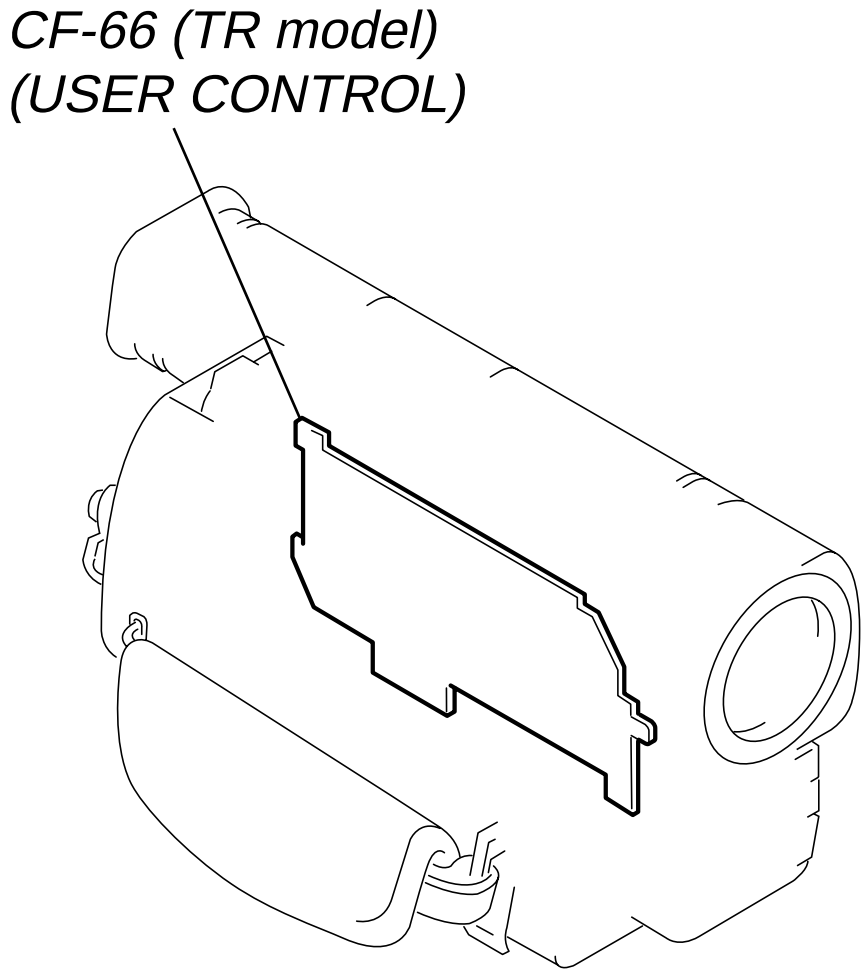
CF-66 (TR model)
(USER CONTROL)

2-15. FLEXIBLE BOARDS LOCATION

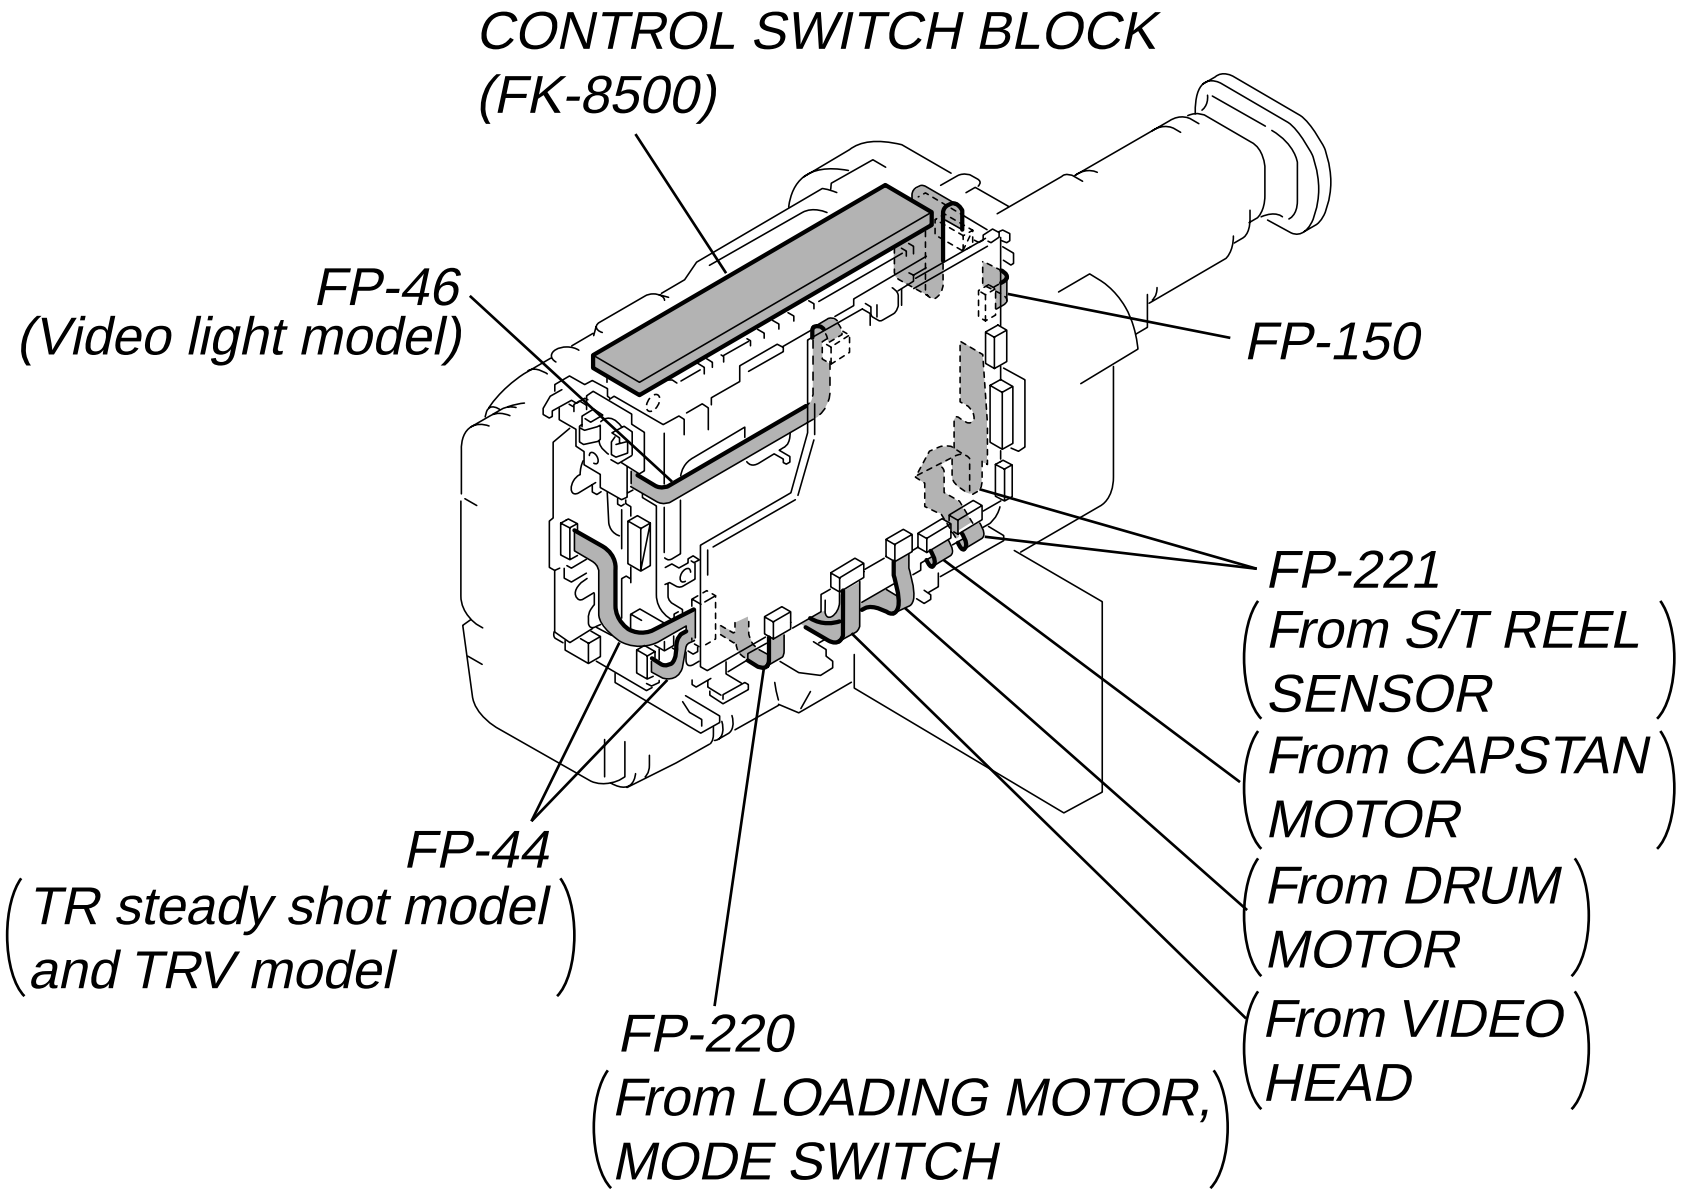
CONTROL SWITCH BLOCK
(FK-8500)
FP-46
(Video light model)
FP-150
FP-221
(From S/T REEL SENSOR)
(From CAPSTAN MOTOR)
(From DRUM MOTOR)
(From VIDEO HEAD)
FP-44
(TR steady shot model and TRV model)
FP-220
(From LOADING MOTOR, MODE SWITCH)

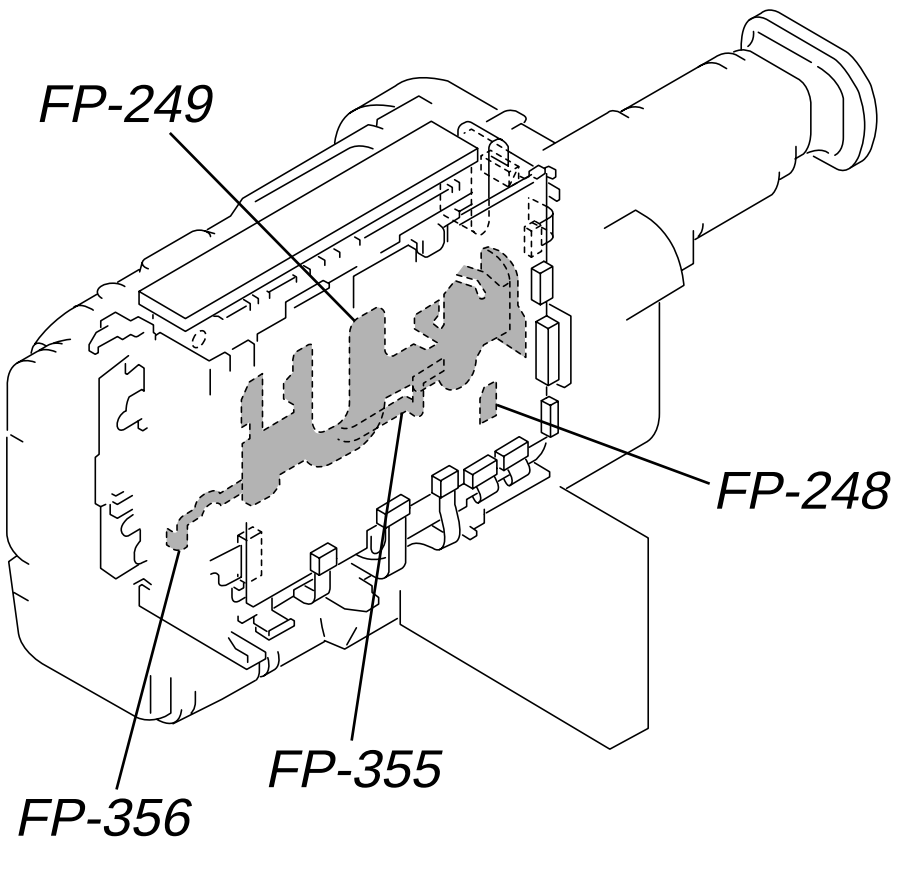
FP-249
FP-248
FP-355
FP-356

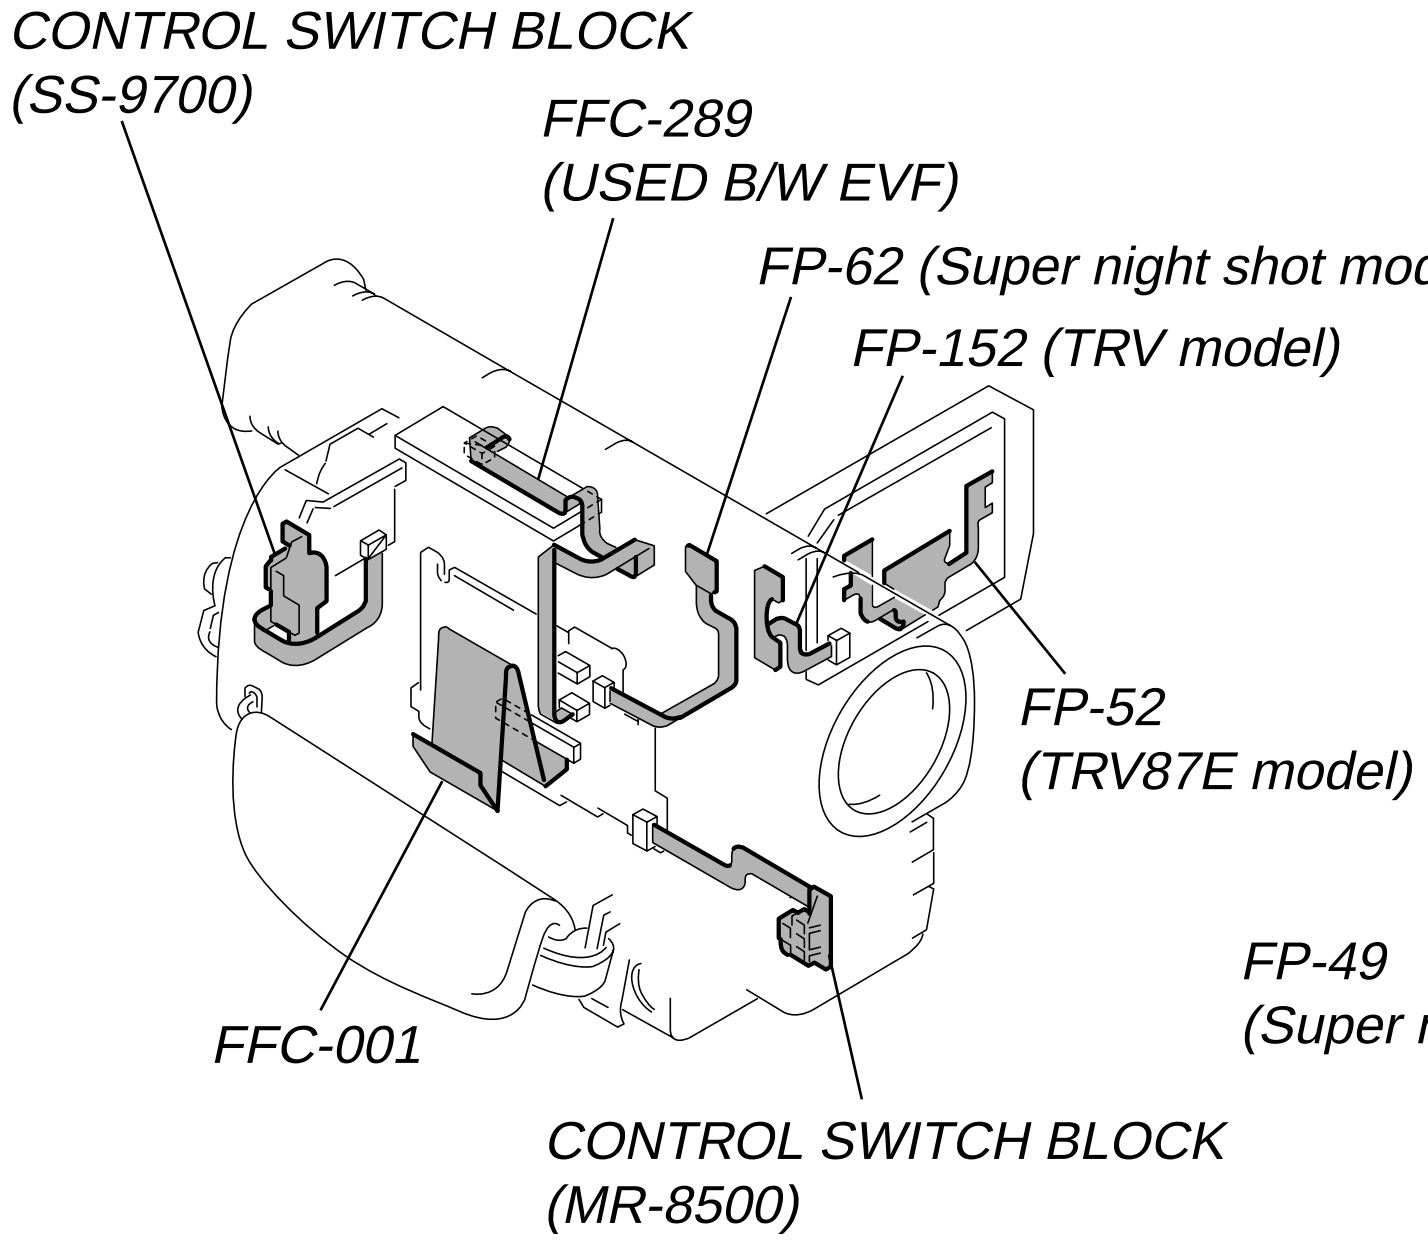
CONTROL SWITCH BLOCK
(SS-9700)
FFC-289
(USED B/W EVF)
FP-62 (Super night shot model)
FP-152 (TRV model)
FP-52
(TRV87E model)
FFC-001
CONTROL SWITCH BLOCK
(MR-8500)

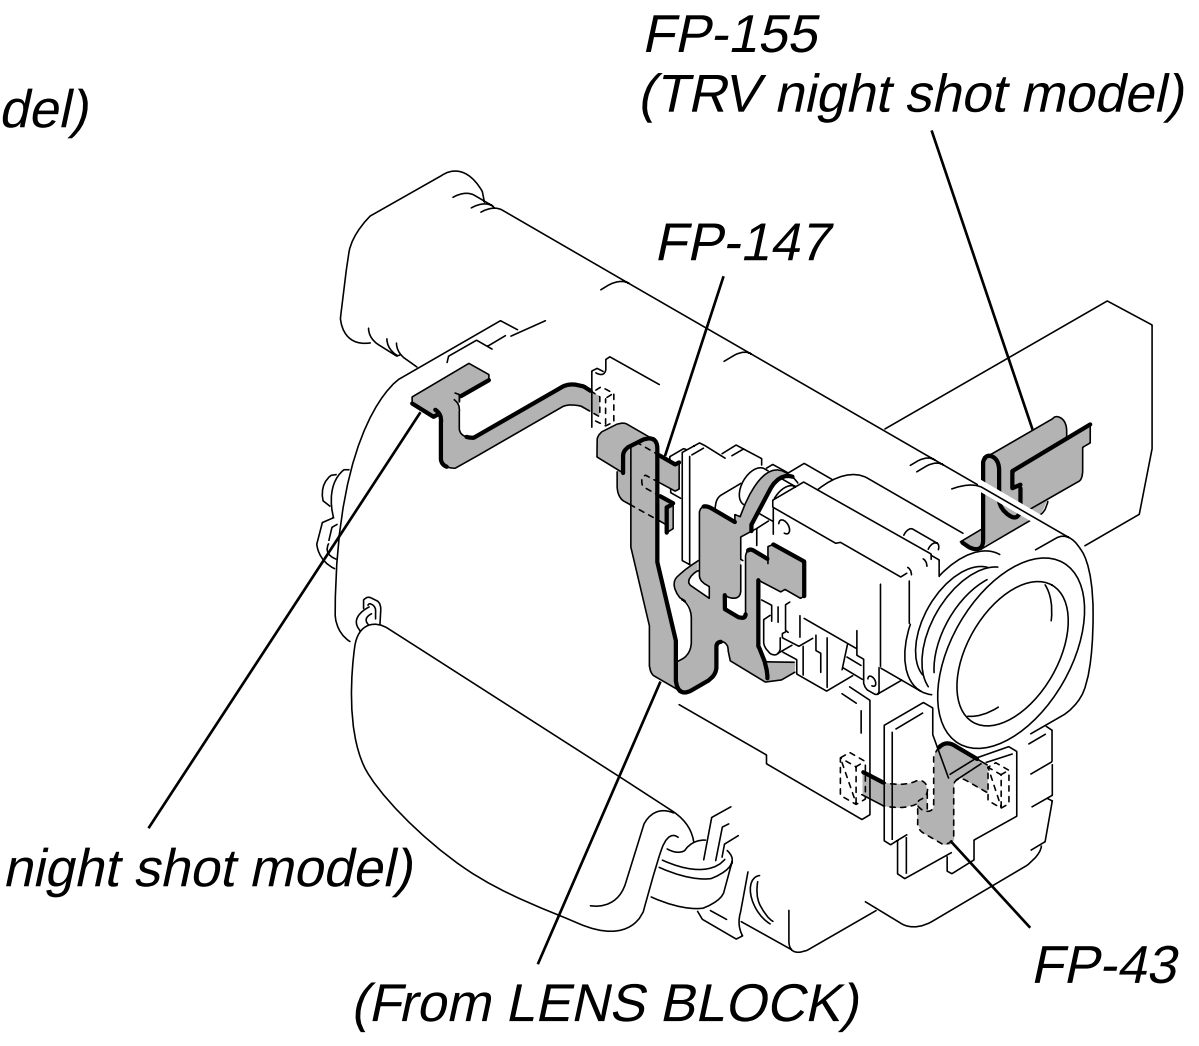
FP-155
(TRV night shot model)
FP-147
FP-49
(Super night shot model)
(From LENS BLOCK)
FP-43

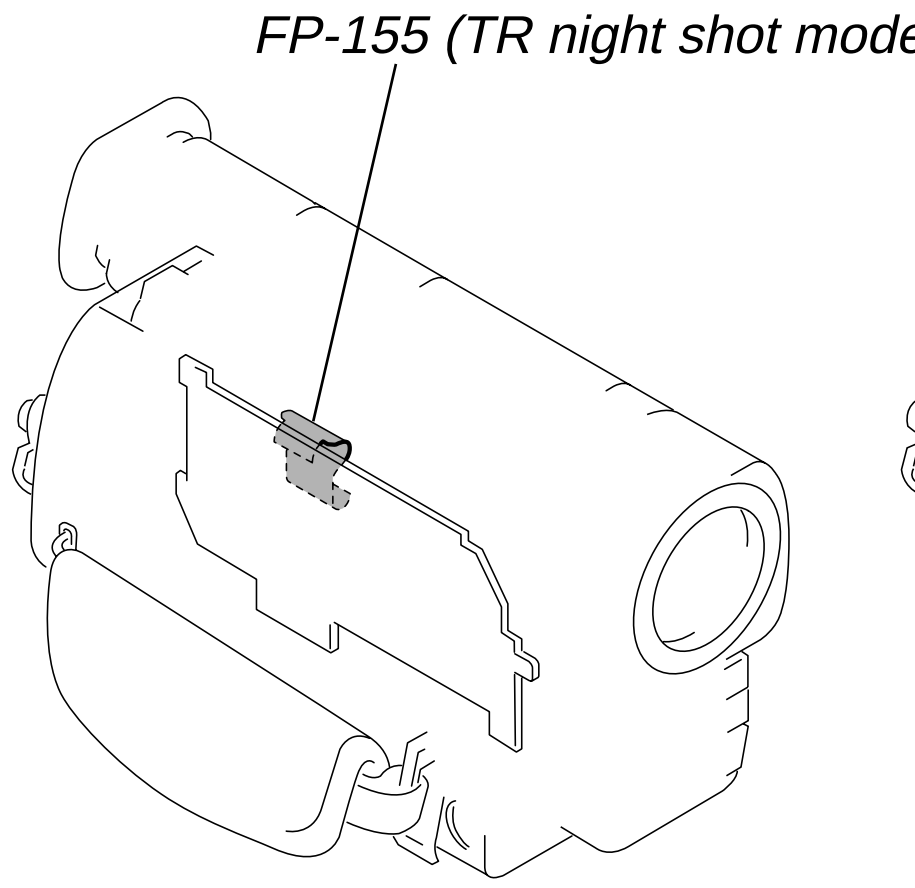
FP-155 (TR night shot model)

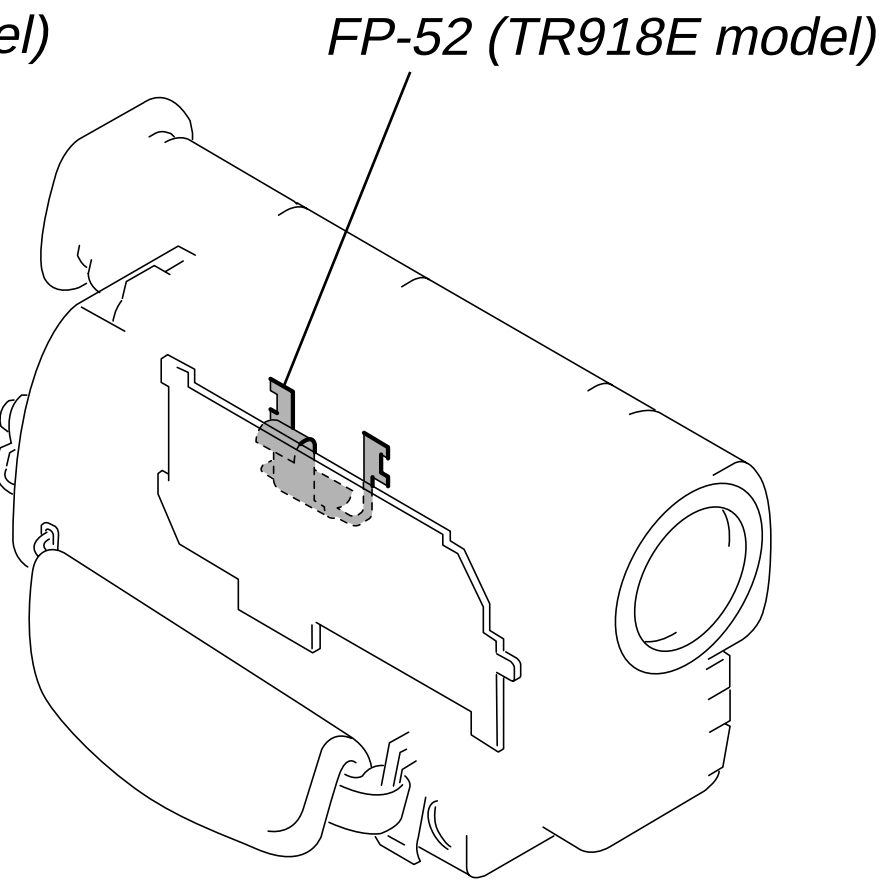
FP-52 (TR918E model)

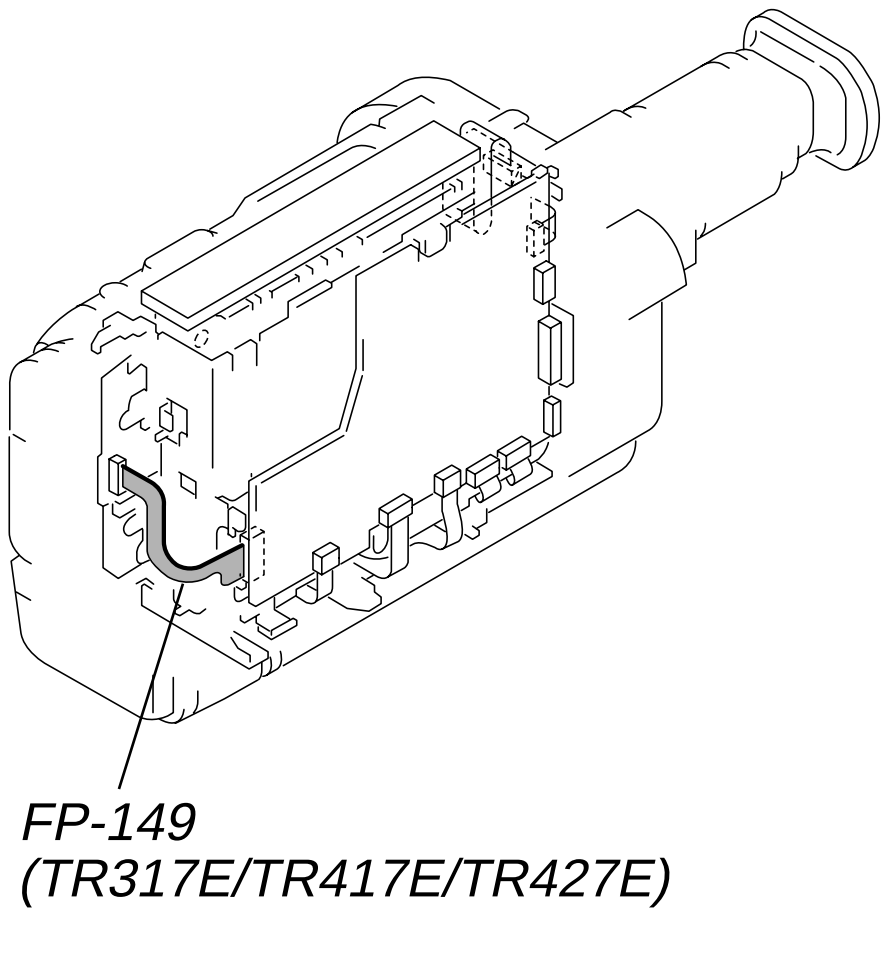
FP-149
(TR317E/TR417E/TR427E)

SECTION 3
BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM (1/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

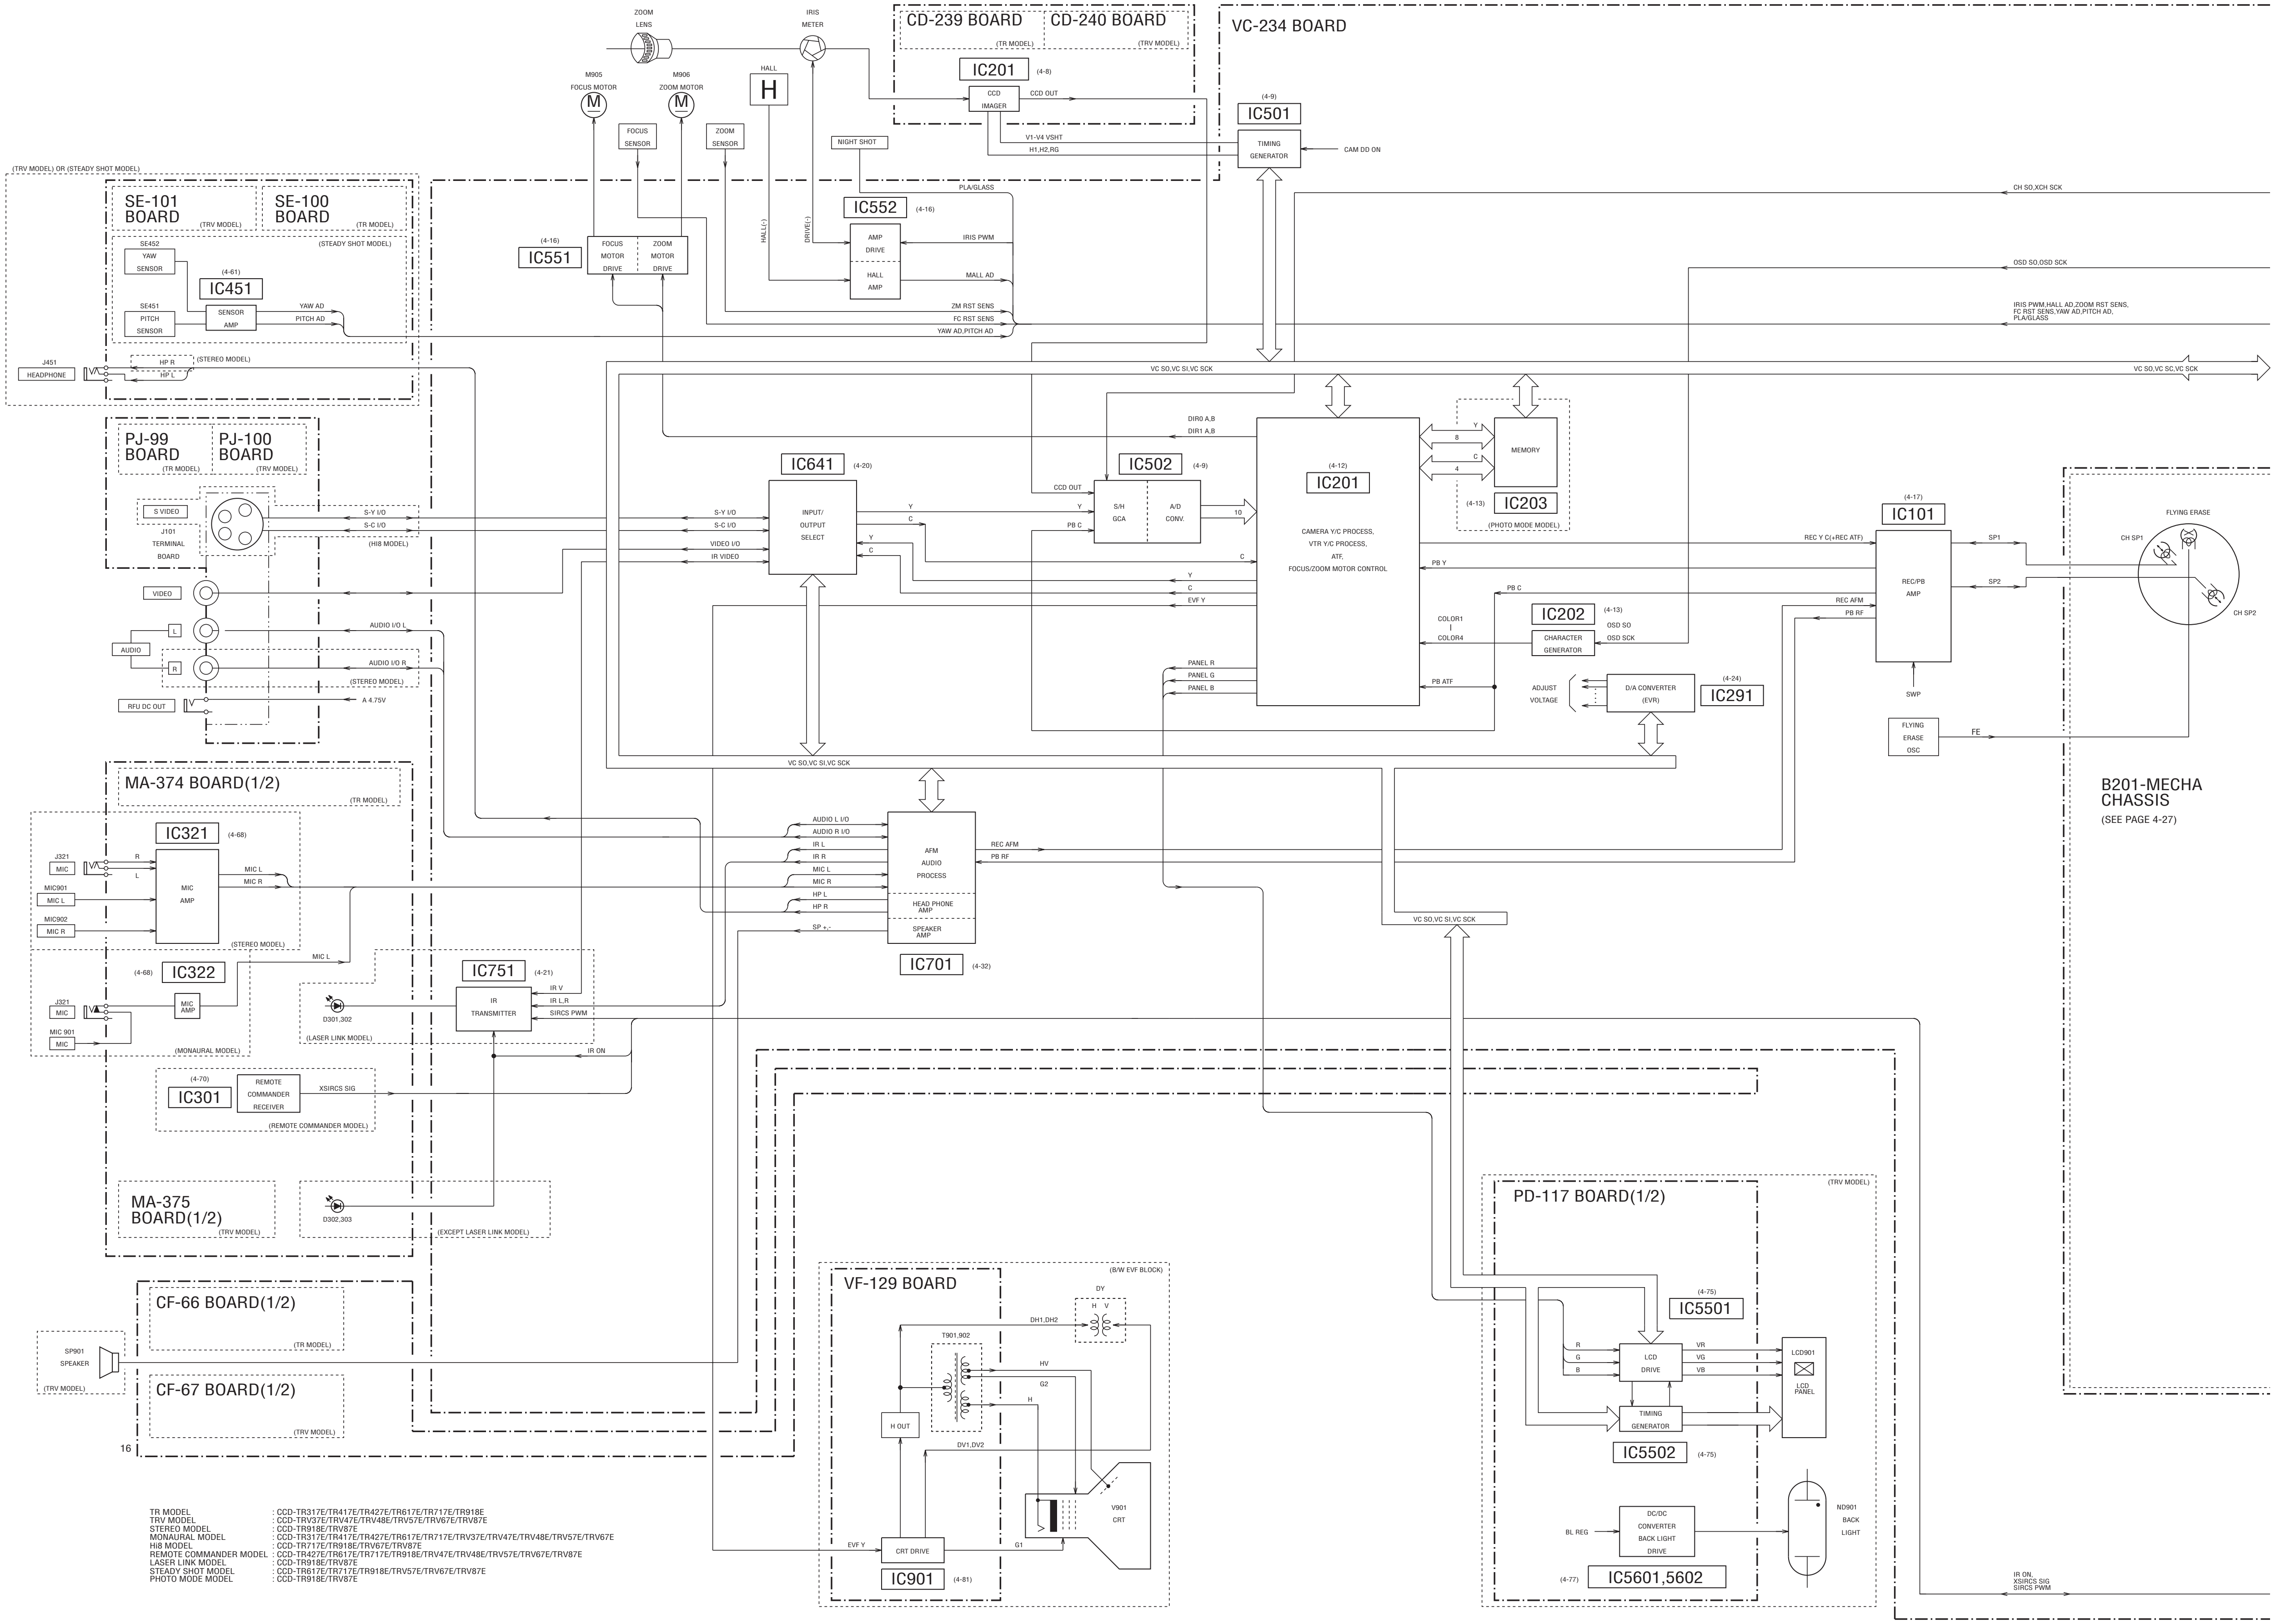
ZOOM LENS
IRIS METER
M905 FOCUS MOTOR
M906 ZOOM MOTOR
HALL
H
FOCUS SENSOR
ZOOM SENSOR
NIGHT SHOT
CD-239 BOARD (TR MODEL)
CD-240 BOARD (TRV MODEL)
IC201 (4-8)
CCD IMAGER
CCD OUT
V1-V4 VSHT
H1,H2,RG
VC-234 BOARD
(4-9) IC501
TIMING GENERATOR
CAM DD ON
(TRV MODEL) OR (STEADY SHOT MODEL)
SE-101 BOARD (TRV MODEL)
SE-100 BOARD (TR MODEL)
(STEADY SHOT MODEL)
SE452 YAW SENSOR
SE451 PITCH SENSOR
(4-61) IC451
SENSOR AMP
YAW AD
PITCH AD
J451 HEADPHONE
HP R
HP L
(STEREO MODEL)
(4-16) IC551
FOCUS MOTOR DRIVE
ZOOM MOTOR DRIVE
HALL(-)
DRIVE(-)
IC552 (4-16)
AMP DRIVE
HALL AMP
PLA/GLASS
IRIS PWM
MALL AD
ZM RST SENS
FC RST SENS
YAW AD,PITCH AD
CH SO,XCH SCK
OSD SO,OSD SCK
IRIS PWM,HALL AD,ZOOM RST SENS, FC RST SENS,YAW AD,PITCH AD, PLA/GLASS
VC SO,VC SI,VC SCK
VC SO,VC SC,VC SCK
PJ-99 BOARD (TR MODEL)
PJ-100 BOARD (TRV MODEL)
S VIDEO
J101 TERMINAL BOARD
S-Y I/O
S-C I/O
(HI8 MODEL)
VIDEO
AUDIO
L
R
AUDIO I/O L
AUDIO I/O R
(STEREO MODEL)
RFU DC OUT
A 4.75V
IC641 (4-20)
INPUT/ OUTPUT SELECT
VIDEO I/O
IR VIDEO
Y
C
IC502 (4-9)
S/H GCA
A/D CONV.
10
CCD OUT
PB C
DIR0 A,B
DIR1 A,B
(4-12) IC201
CAMERA Y/C PROCESS, VTR Y/C PROCESS, ATF, FOCUS/ZOOM MOTOR CONTROL
EVF Y
PANEL R
PANEL G
PANEL B
COLOR1 | COLOR4
PB Y
PB ATF
8
4
MEMORY
(4-13) IC203
(PHOTO MODE MODEL)
IC202 (4-13)
CHARACTER GENERATOR
OSD SO
OSD SCK
ADJUST VOLTAGE
D/A CONVERTER (EVR)
(4-24) IC291
(4-17) IC101
REC/PB AMP
REC Y C(+REC ATF)
REC AFM
PB RF
SP1
SP2
SWP
FLYING ERASE OSC
FE
FLYING ERASE
CH SP1
CH SP2
B201-MECHA CHASSIS
(SEE PAGE 4-27)
MA-374 BOARD(1/2) (TR MODEL)
IC321 (4-68)
J321 MIC
MIC901 MIC L
MIC902 MIC R
MIC AMP
MIC L
MIC R
(STEREO MODEL)
(4-68) IC322
MIC 901 MIC
(MONAURAL MODEL)
AUDIO L I/O
AUDIO R I/O
IR L
IR R
HP L
HP R
SP +,-
AFM AUDIO PROCESS
HEAD PHONE AMP
SPEAKER AMP
IC701 (4-32)
IC751 (4-21)
IR TRANSMITTER
IR V
IR L,R
SIRCS PWM
IR ON
D301,302
(LASER LINK MODEL)
(4-70) IC301
REMOTE COMMANDER RECEIVER
XSIRCS SIG
(REMOTE COMMANDER MODEL)
MA-375 BOARD(1/2) (TRV MODEL)
D302,303
(EXCEPT LASER LINK MODEL)
CF-66 BOARD(1/2) (TR MODEL)
CF-67 BOARD(1/2) (TRV MODEL)
SP901 SPEAKER (TRV MODEL)
16
VF-129 BOARD
(B/W EVF BLOCK)
DY
H V
DH1,DH2
T901,902
HV
G2
H
H OUT
DV1,DV2
V901 CRT
G1
CRT DRIVE
IC901 (4-81)
PD-117 BOARD(1/2) (TRV MODEL)
(4-75) IC5501
R
G
B
LCD DRIVE
VR
VG
VB
LCD901
LCD PANEL
TIMING GENERATOR
IC5502 (4-75)
BL REG
DC/DC CONVERTER BACK LIGHT DRIVE
(4-77) IC5601,5602
ND901 BACK LIGHT
IR ON, XSIRCS SIG SIRCS PWM

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
STEREO MODEL : CCD-TR918E/TRV87E
MONAURAL MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E
Hi8 MODEL : CCD-TR717E/TR918E/TRV67E/TRV87E
REMOTE COMMANDER MODEL : CCD-TR427E/TR617E/TR717E/TR918E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
LASER LINK MODEL : CCD-TR918E/TRV87E
STEADY SHOT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
PHOTO MODE MODEL : CCD-TR918E/TRV87E

3-2. OVERALL BLOCK DIAGRAM (2/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
VIDEO LIGHT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
SUPER NIGHT SHOT MODEL : CCD-TR918E/TRV87E
PHOTO MODE MODEL : CCD-TR918E/TRV87E

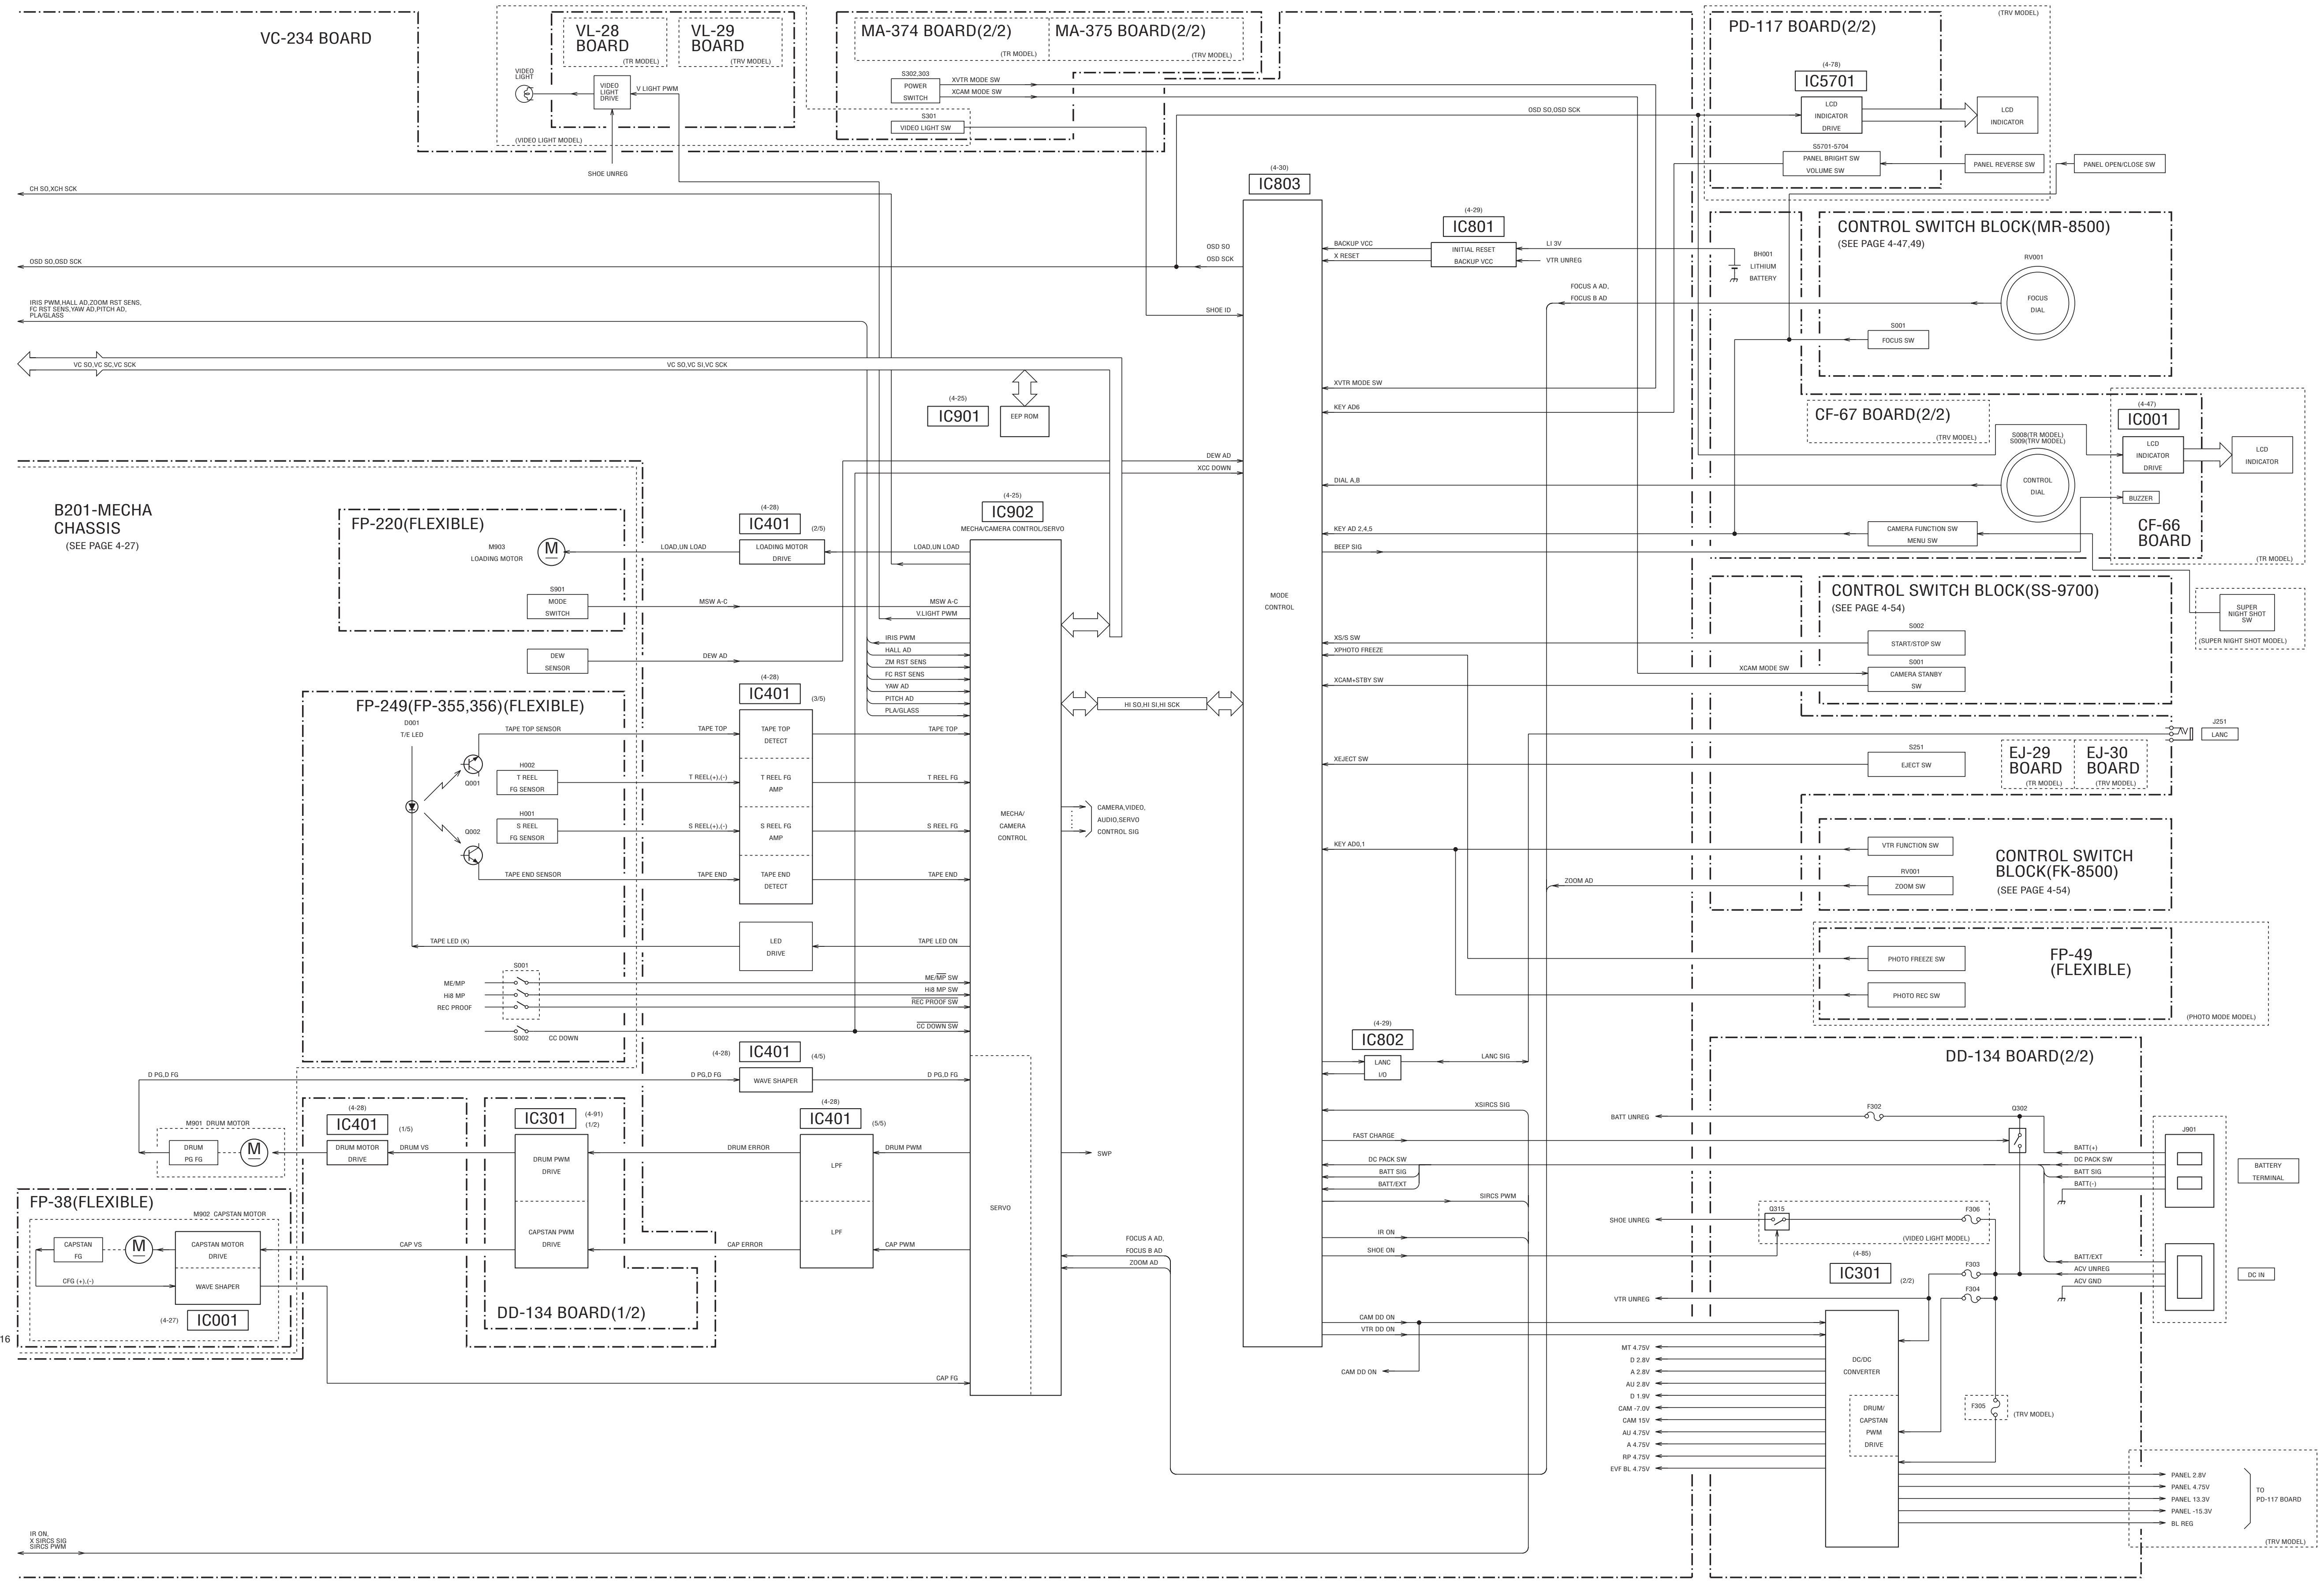
VC-234 BOARD
VL-28 BOARD
(TR MODEL)
VL-29 BOARD
(TRV MODEL)
VIDEO LIGHT
VIDEO LIGHT DRIVE
V LIGHT PWM
(VIDEO LIGHT MODEL)
SHOE UNREG
MA-374 BOARD(2/2)
(TR MODEL)
MA-375 BOARD(2/2)
(TRV MODEL)
S302,303
POWER SWITCH
XVTR MODE SW
XCAM MODE SW
S301
VIDEO LIGHT SW
CH SO,XCH SCK
OSD SO,OSD SCK
IRIS PWM,HALL AD,ZOOM RST SENS,
FC RST SENS,YAW AD,PITCH AD,
PLA/GLASS
VC SO,VC SC,VC SCK
VC SO,VC SI,VC SCK
(4-25)
IC901
EEP ROM
(4-30)
IC803
OSD SO
OSD SCK
SHOE ID
BACKUP VCC
X RESET
XVTR MODE SW
KEY AD6
DEW AD
XCC DOWN
DIAL A,B
KEY AD 2,4,5
BEEP SIG
MODE CONTROL
XS/S SW
XPHOTO FREEZE
XCAM+STBY SW
HI SO,HI SI,HI SCK
XEJECT SW
KEY AD0,1
(4-29)
IC801
INITIAL RESET
BACKUP VCC
LI 3V
VTR UNREG
FOCUS A AD,
FOCUS B AD
PD-117 BOARD(2/2)
(TRV MODEL)
(4-78)
IC5701
LCD INDICATOR DRIVE
LCD INDICATOR
OSD SO,OSD SCK
S5701-5704
PANEL BRIGHT SW
VOLUME SW
PANEL REVERSE SW
PANEL OPEN/CLOSE SW
BH001
LITHIUM BATTERY
CONTROL SWITCH BLOCK(MR-8500)
(SEE PAGE 4-47,49)
RV001
FOCUS DIAL
S001
FOCUS SW
CF-67 BOARD(2/2)
(TRV MODEL)
S008(TR MODEL)
S009(TRV MODEL)
CONTROL DIAL
(4-47)
IC001
LCD INDICATOR DRIVE
LCD INDICATOR
BUZZER
CAMERA FUNCTION SW
MENU SW
CF-66 BOARD
(TR MODEL)
SUPER NIGHT SHOT SW
(SUPER NIGHT SHOT MODEL)
CONTROL SWITCH BLOCK(SS-9700)
(SEE PAGE 4-54)
S002
START/STOP SW
S001
CAMERA STANBY SW
XCAM MODE SW
J251
LANC
S251
EJECT SW
EJ-29 BOARD
(TR MODEL)
EJ-30 BOARD
(TRV MODEL)
VTR FUNCTION SW
RV001
ZOOM SW
ZOOM AD
CONTROL SWITCH BLOCK(FK-8500)
(SEE PAGE 4-54)
PHOTO FREEZE SW
PHOTO REC SW
FP-49 (FLEXIBLE)
(PHOTO MODE MODEL)
B201-MECHA CHASSIS
(SEE PAGE 4-27)
FP-220(FLEXIBLE)
M903
LOADING MOTOR
S901
MODE SWITCH
DEW SENSOR
LOAD,UN LOAD
MSW A-C
DEW AD
(4-28)
IC401
(2/5)
LOADING MOTOR DRIVE
(4-25)
IC902
MECHA/CAMERA CONTROL/SERVO
LOAD,UN LOAD
MSW A-C
V LIGHT PWM
IRIS PWM
HALL AD
ZM RST SENS
FC RST SENS
YAW AD
PITCH AD
PLA/GLASS
FP-249(FP-355,356)(FLEXIBLE)
D001
T/E LED
TAPE TOP SENSOR
H002
T REEL FG SENSOR
Q001
H001
S REEL FG SENSOR
Q002
TAPE END SENSOR
TAPE LED (K)
(4-28)
IC401
(3/5)
TAPE TOP DETECT
T REEL FG AMP
S REEL FG AMP
TAPE END DETECT
LED DRIVE
TAPE TOP
T REEL(+),(-)
S REEL(+),(-)
TAPE END
TAPE LED ON
MECHA/ CAMERA CONTROL
CAMERA,VIDEO, AUDIO,SERVO CONTROL SIG
S001
ME/MP
Hi8 MP
REC PROOF
S002
CC DOWN
ME/MP SW
Hi8 MP SW
REC PROOF SW
CC DOWN SW
D PG,D FG
(4-28)
IC401
(4/5)
WAVE SHAPER
M901 DRUM MOTOR
DRUM PG FG
(4-28)
IC401
(1/5)
DRUM MOTOR DRIVE
DRUM VS
IC301
(4-91)
(1/2)
DRUM PWM DRIVE
CAPSTAN PWM DRIVE
DRUM ERROR
(4-28)
IC401
(5/5)
LPF
LPF
DRUM PWM
CAP ERROR
CAP PWM
SWP
SERVO
FP-38(FLEXIBLE)
M902 CAPSTAN MOTOR
CAPSTAN FG
CAPSTAN MOTOR DRIVE
CFG (+),(-)
WAVE SHAPER
(4-27)
IC001
CAP VS
DD-134 BOARD(1/2)
CAP FG
FOCUS A AD,
FOCUS B AD
ZOOM AD
(4-29)
IC802
LANC I/O
LANC SIG
XSIRCS SIG
FAST CHARGE
DC PACK SW
BATT SIG
BATT/EXT
SIRCS PWM
IR ON
SHOE ON
CAM DD ON
VTR DD ON
CAM DD ON
IR ON,
X SIRCS SIG
SIRCS PWM
DD-134 BOARD(2/2)
BATT UNREG
F302
Q302
J901
BATT(+)
DC PACK SW
BATT SIG
BATT(-)
BATTERY TERMINAL
SHOE UNREG
Q315
F306
(VIDEO LIGHT MODEL)
(4-85)
IC301
(2/2)
F303
F304
BATT/EXT
ACV UNREG
ACV GND
DC IN
VTR UNREG
MT 4.75V
D 2.8V
A 2.8V
AU 2.8V
D 1.9V
CAM -7.0V
CAM 15V
AU 4.75V
A 4.75V
RP 4.75V
EVF BL 4.75V
DC/DC CONVERTER
DRUM/ CAPSTAN PWM DRIVE
F305
(TRV MODEL)
PANEL 2.8V
PANEL 4.75V
PANEL 13.3V
PANEL -15.3V
BL REG
TO PD-117 BOARD
(TRV MODEL)
16

3-3. CAMERA/VIDEO BLOCK DIAGRAM (1/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

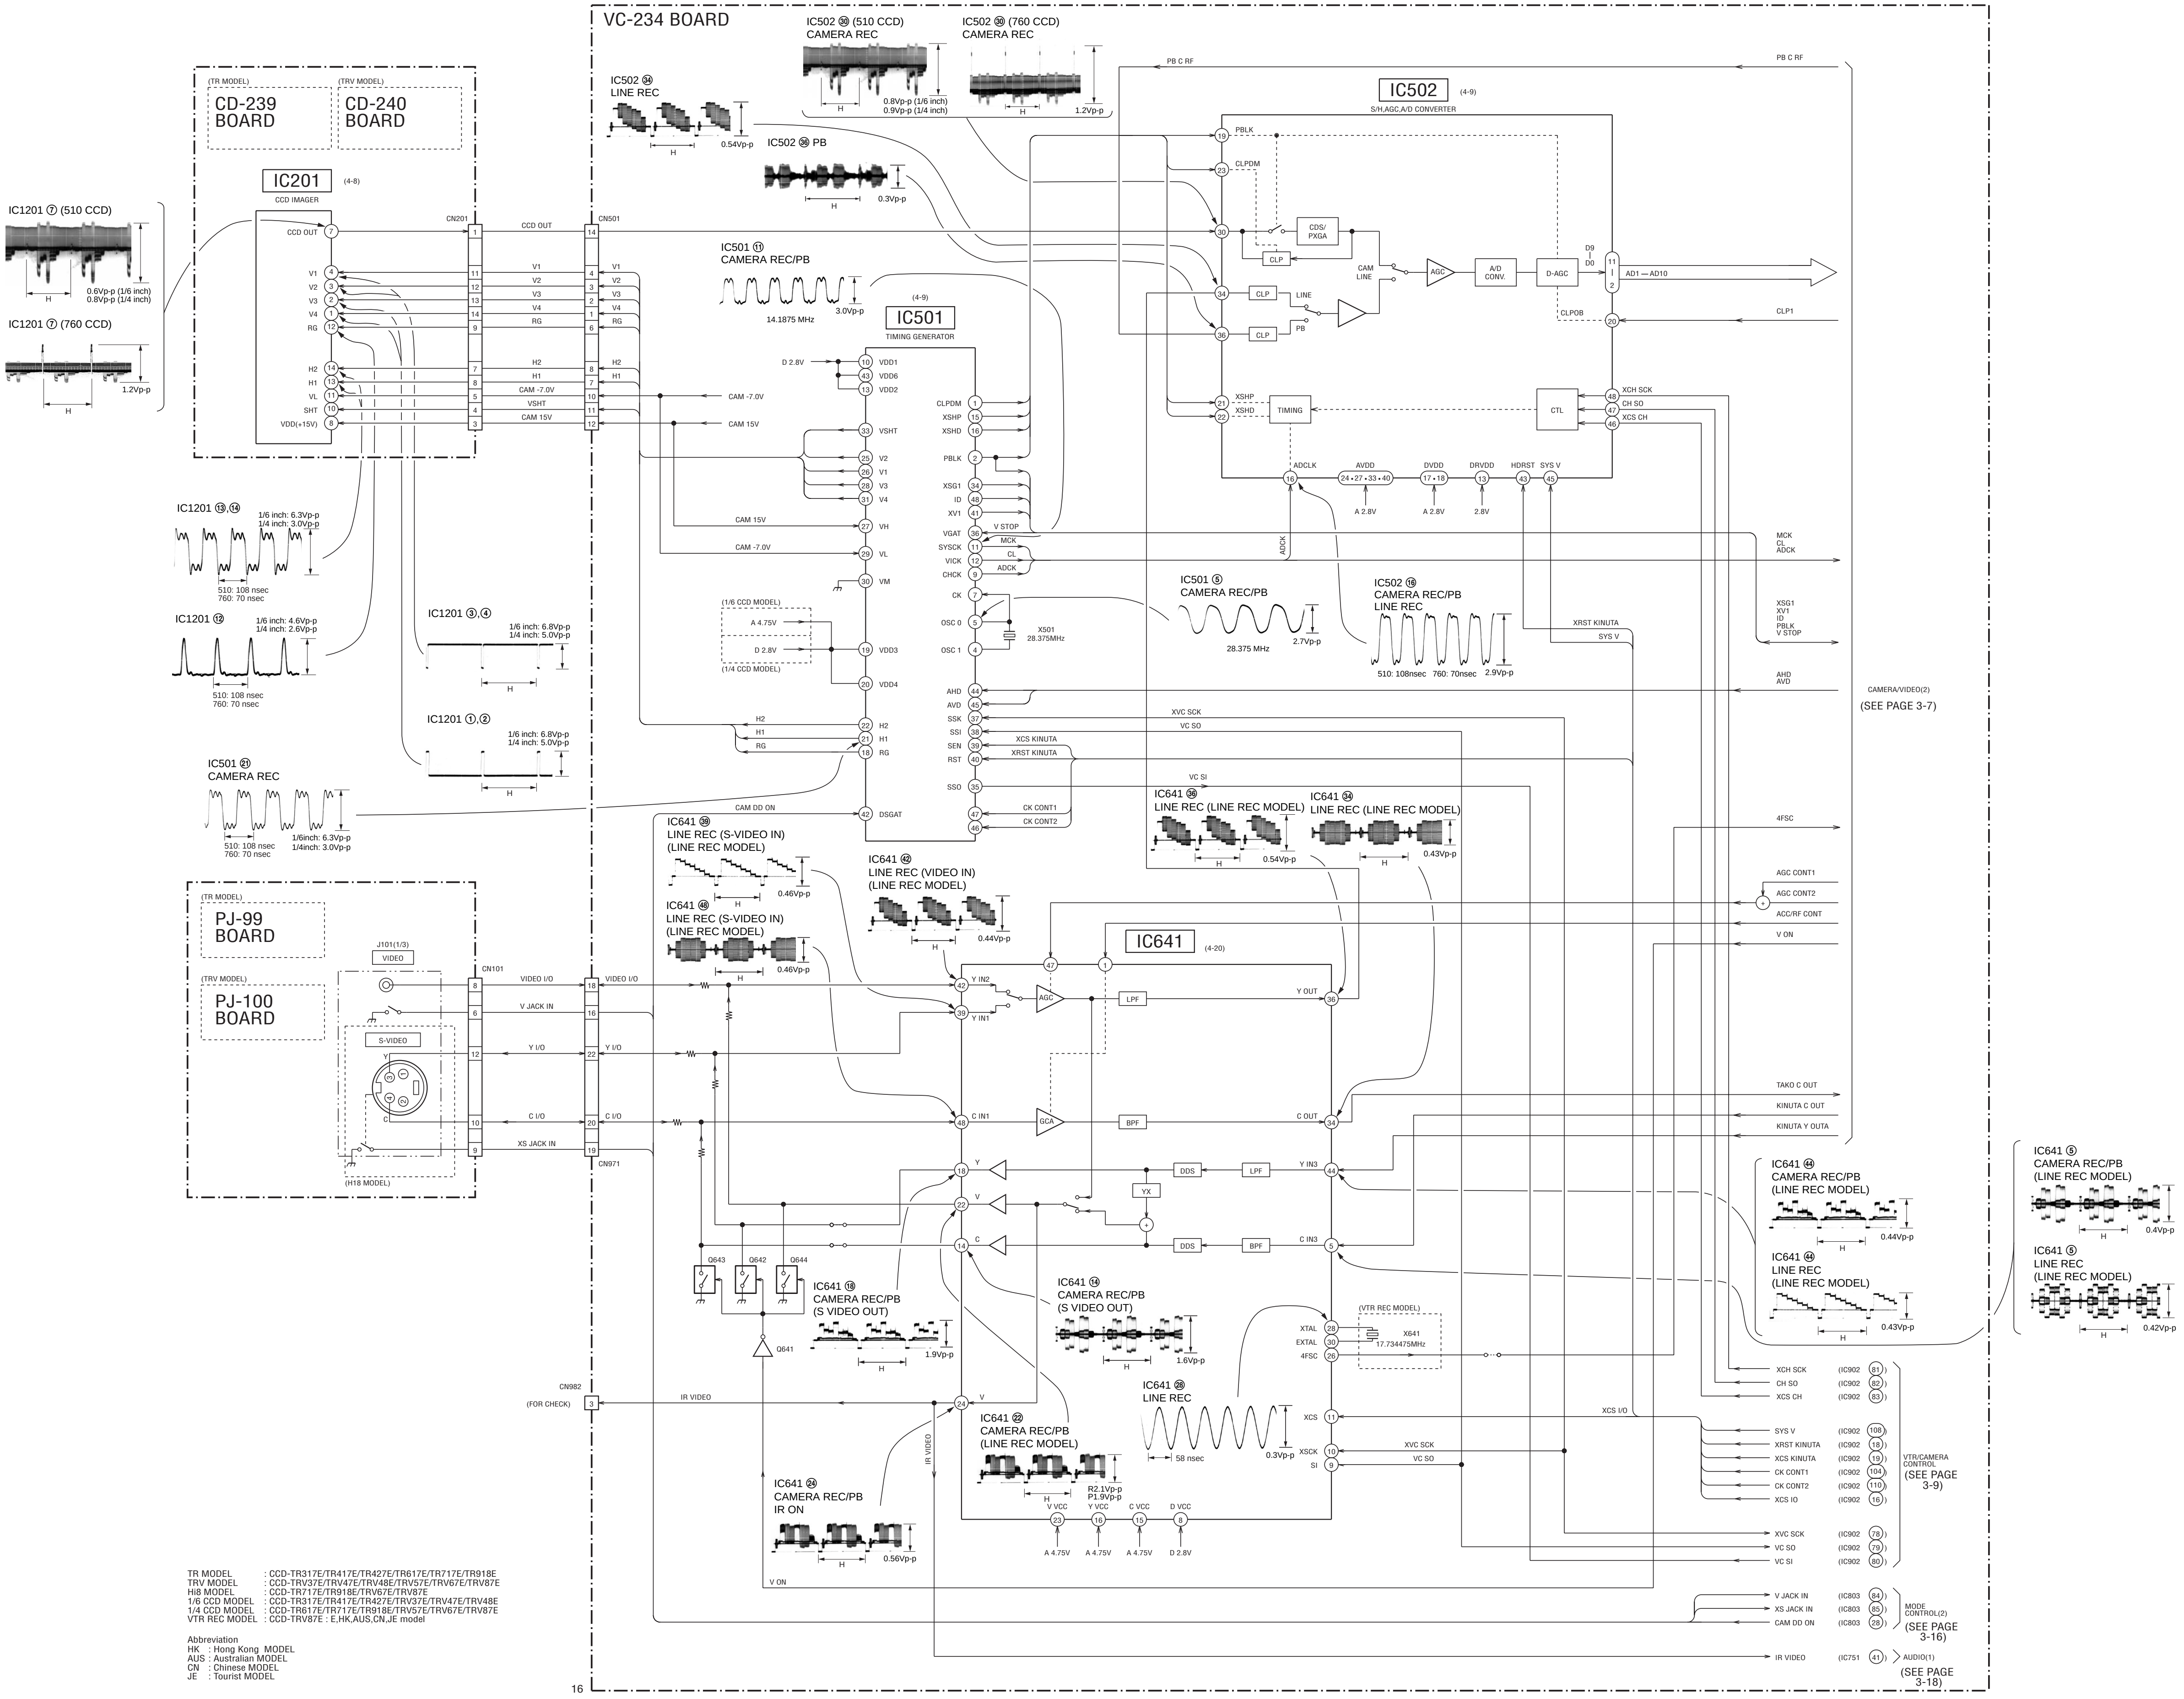
VC-234 BOARD
(TR MODEL)
CD-239 BOARD
(TRV MODEL)
CD-240 BOARD
IC201 (4-8)
CCD IMAGER
CCD OUT
V1
V2
V3
V4
RG
H2
H1
VL
SHT
VDD(+15V)
CN201
CN501
CAM -7.0V
VSHT
CAM 15V
IC1201 ⑦ (510 CCD)
0.6Vp-p (1/6 inch)
0.8Vp-p (1/4 inch)
IC1201 ⑦ (760 CCD)
1.2Vp-p
IC1201 ⑬,⑭
1/6 inch: 6.3Vp-p
1/4 inch: 3.0Vp-p
510: 108 nsec
760: 70 nsec
IC1201 ⑫
1/6 inch: 4.6Vp-p
1/4 inch: 2.6Vp-p
IC1201 ③,④
1/6 inch: 6.8Vp-p
1/4 inch: 5.0Vp-p
IC1201 ①,②
IC501 ㉑
CAMERA REC
1/6inch: 6.3Vp-p
1/4inch: 3.0Vp-p
IC502 ㉞
LINE REC
0.54Vp-p
IC502 ㉚ (510 CCD)
CAMERA REC
0.8Vp-p (1/6 inch)
0.9Vp-p (1/4 inch)
IC502 ㉚ (760 CCD)
CAMERA REC
1.2Vp-p
IC502 ㊱ PB
0.3Vp-p
IC501 ⑪
CAMERA REC/PB
3.0Vp-p
14.1875 MHz
IC501 (4-9)
TIMING GENERATOR
D 2.8V
VDD1
VDD6
VDD2
CLPDM
XSHP
XSHD
VSHT
PBLK
XSG1
ID
XV1
VH
VL
VM
VGAT
SYSCK
VICK
CHCK
V STOP
MCK
CL
ADCK
CK
OSC 0
OSC 1
X501
28.375MHz
(1/6 CCD MODEL)
A 4.75V
D 2.8V
(1/4 CCD MODEL)
VDD3
VDD4
AHD
AVD
SSK
SSI
SEN
RST
SSO
DSGAT
XCS KINUTA
XRST KINUTA
CK CONT1
CK CONT2
CAM DD ON
VC SI
XVC SCK
VC SO
PB C RF
IC502 (4-9)
S/H,AGC,A/D CONVERTER
PBLK
CLPDM
CDS/PXGA
CLP
CAM
LINE
AGC
A/D CONV.
D-AGC
D9
D0
AD1 — AD10
CLPOB
CLP1
LINE
PB
XSHP
XSHD
TIMING
CTL
XCH SCK
CH SO
XCS CH
ADCLK
AVDD
DVDD
DRVDD
HDRST
SYS V
A 2.8V
2.8V
ADCK
MCK
CL
ADCK
XSG1
XV1
ID
PBLK
V STOP
IC501 ⑤
CAMERA REC/PB
28.375 MHz
2.7Vp-p
IC502 ⑯
CAMERA REC/PB
LINE REC
510: 108nsec 760: 70nsec
2.9Vp-p
XRST KINUTA
SYS V
AHD
AVD
CAMERA/VIDEO(2)
(SEE PAGE 3-7)
4FSC
IC641 ㊴
LINE REC (LINE REC MODEL)
0.54Vp-p
IC641 ㉞
LINE REC (LINE REC MODEL)
0.43Vp-p
IC641 ㊴
LINE REC (S-VIDEO IN)
(LINE REC MODEL)
0.46Vp-p
IC641 ㊷
LINE REC (VIDEO IN)
(LINE REC MODEL)
0.44Vp-p
IC641 ㊽
LINE REC (S-VIDEO IN)
(LINE REC MODEL)
0.46Vp-p
IC641 (4-20)
AGC CONT1
AGC CONT2
ACC/RF CONT
V ON
Y IN2
Y IN1
AGC
LPF
Y OUT
C IN1
GCA
BPF
C OUT
TAKO C OUT
KINUTA C OUT
KINUTA Y OUTA
Y IN3
C IN3
DDS
YX
XTAL
EXTAL
4FSC
(VTR REC MODEL)
X641
17.734475MHz
XCS
XSCK
SI
XCS I/O
XVC SCK
VC SO
V VCC
Y VCC
C VCC
D VCC
A 4.75V
D 2.8V
(TR MODEL)
PJ-99 BOARD
(TRV MODEL)
PJ-100 BOARD
J101(1/3)
VIDEO
S-VIDEO
(Hi8 MODEL)
CN101
VIDEO I/O
V JACK IN
Y I/O
C I/O
XS JACK IN
CN971
Q643
Q642
Q644
Q641
CN982
(FOR CHECK)
IR VIDEO
V ON
IC641 ⑲
CAMERA REC/PB
(S VIDEO OUT)
1.9Vp-p
IC641 ⑭
CAMERA REC/PB
(S VIDEO OUT)
1.6Vp-p
IC641 ㉖
LINE REC
58 nsec
0.3Vp-p
IC641 ㉒
CAMERA REC/PB
(LINE REC MODEL)
R2.1Vp-p
P1.9Vp-p
IC641 ㉔
CAMERA REC/PB
IR ON
0.56Vp-p
IC641 ㊹
CAMERA REC/PB
(LINE REC MODEL)
0.44Vp-p
IC641 ㊹
LINE REC
(LINE REC MODEL)
0.43Vp-p
IC641 ⑤
CAMERA REC/PB
(LINE REC MODEL)
0.4Vp-p
IC641 ⑤
LINE REC
(LINE REC MODEL)
0.42Vp-p
H
XCH SCK (IC902 81)
CH SO (IC902 82)
XCS CH (IC902 83)
SYS V (IC902 108)
XRST KINUTA (IC902 18)
XCS KINUTA (IC902 19)
CK CONT1 (IC902 104)
CK CONT2 (IC902 110)
XCS IO (IC902 16)
XVC SCK (IC902 78)
VC SO (IC902 79)
VC SI (IC902 80)
VTR/CAMERA CONTROL
(SEE PAGE 3-9)
V JACK IN (IC803 84)
XS JACK IN (IC803 85)
CAM DD ON (IC803 28)
MODE CONTROL(2)
(SEE PAGE 3-16)
IR VIDEO (IC751 41)
AUDIO(1)
(SEE PAGE 3-18)
16

TR MODEL	: CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL	: CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
Hi8 MODEL	: CCD-TR717E/TR918E/TRV67E/TRV87E
1/6 CCD MODEL	: CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E
1/4 CCD MODEL	: CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
VTR REC MODEL	: CCD-TRV87E : E,HK,AUS,CN,JE model

Abbreviation

HK	: Hong Kong MODEL
AUS	: Australian MODEL
CN	: Chinese MODEL
JE	: Tourist MODEL

3-4. CAMERA/VIDEO BLOCK DIAGRAM (2/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

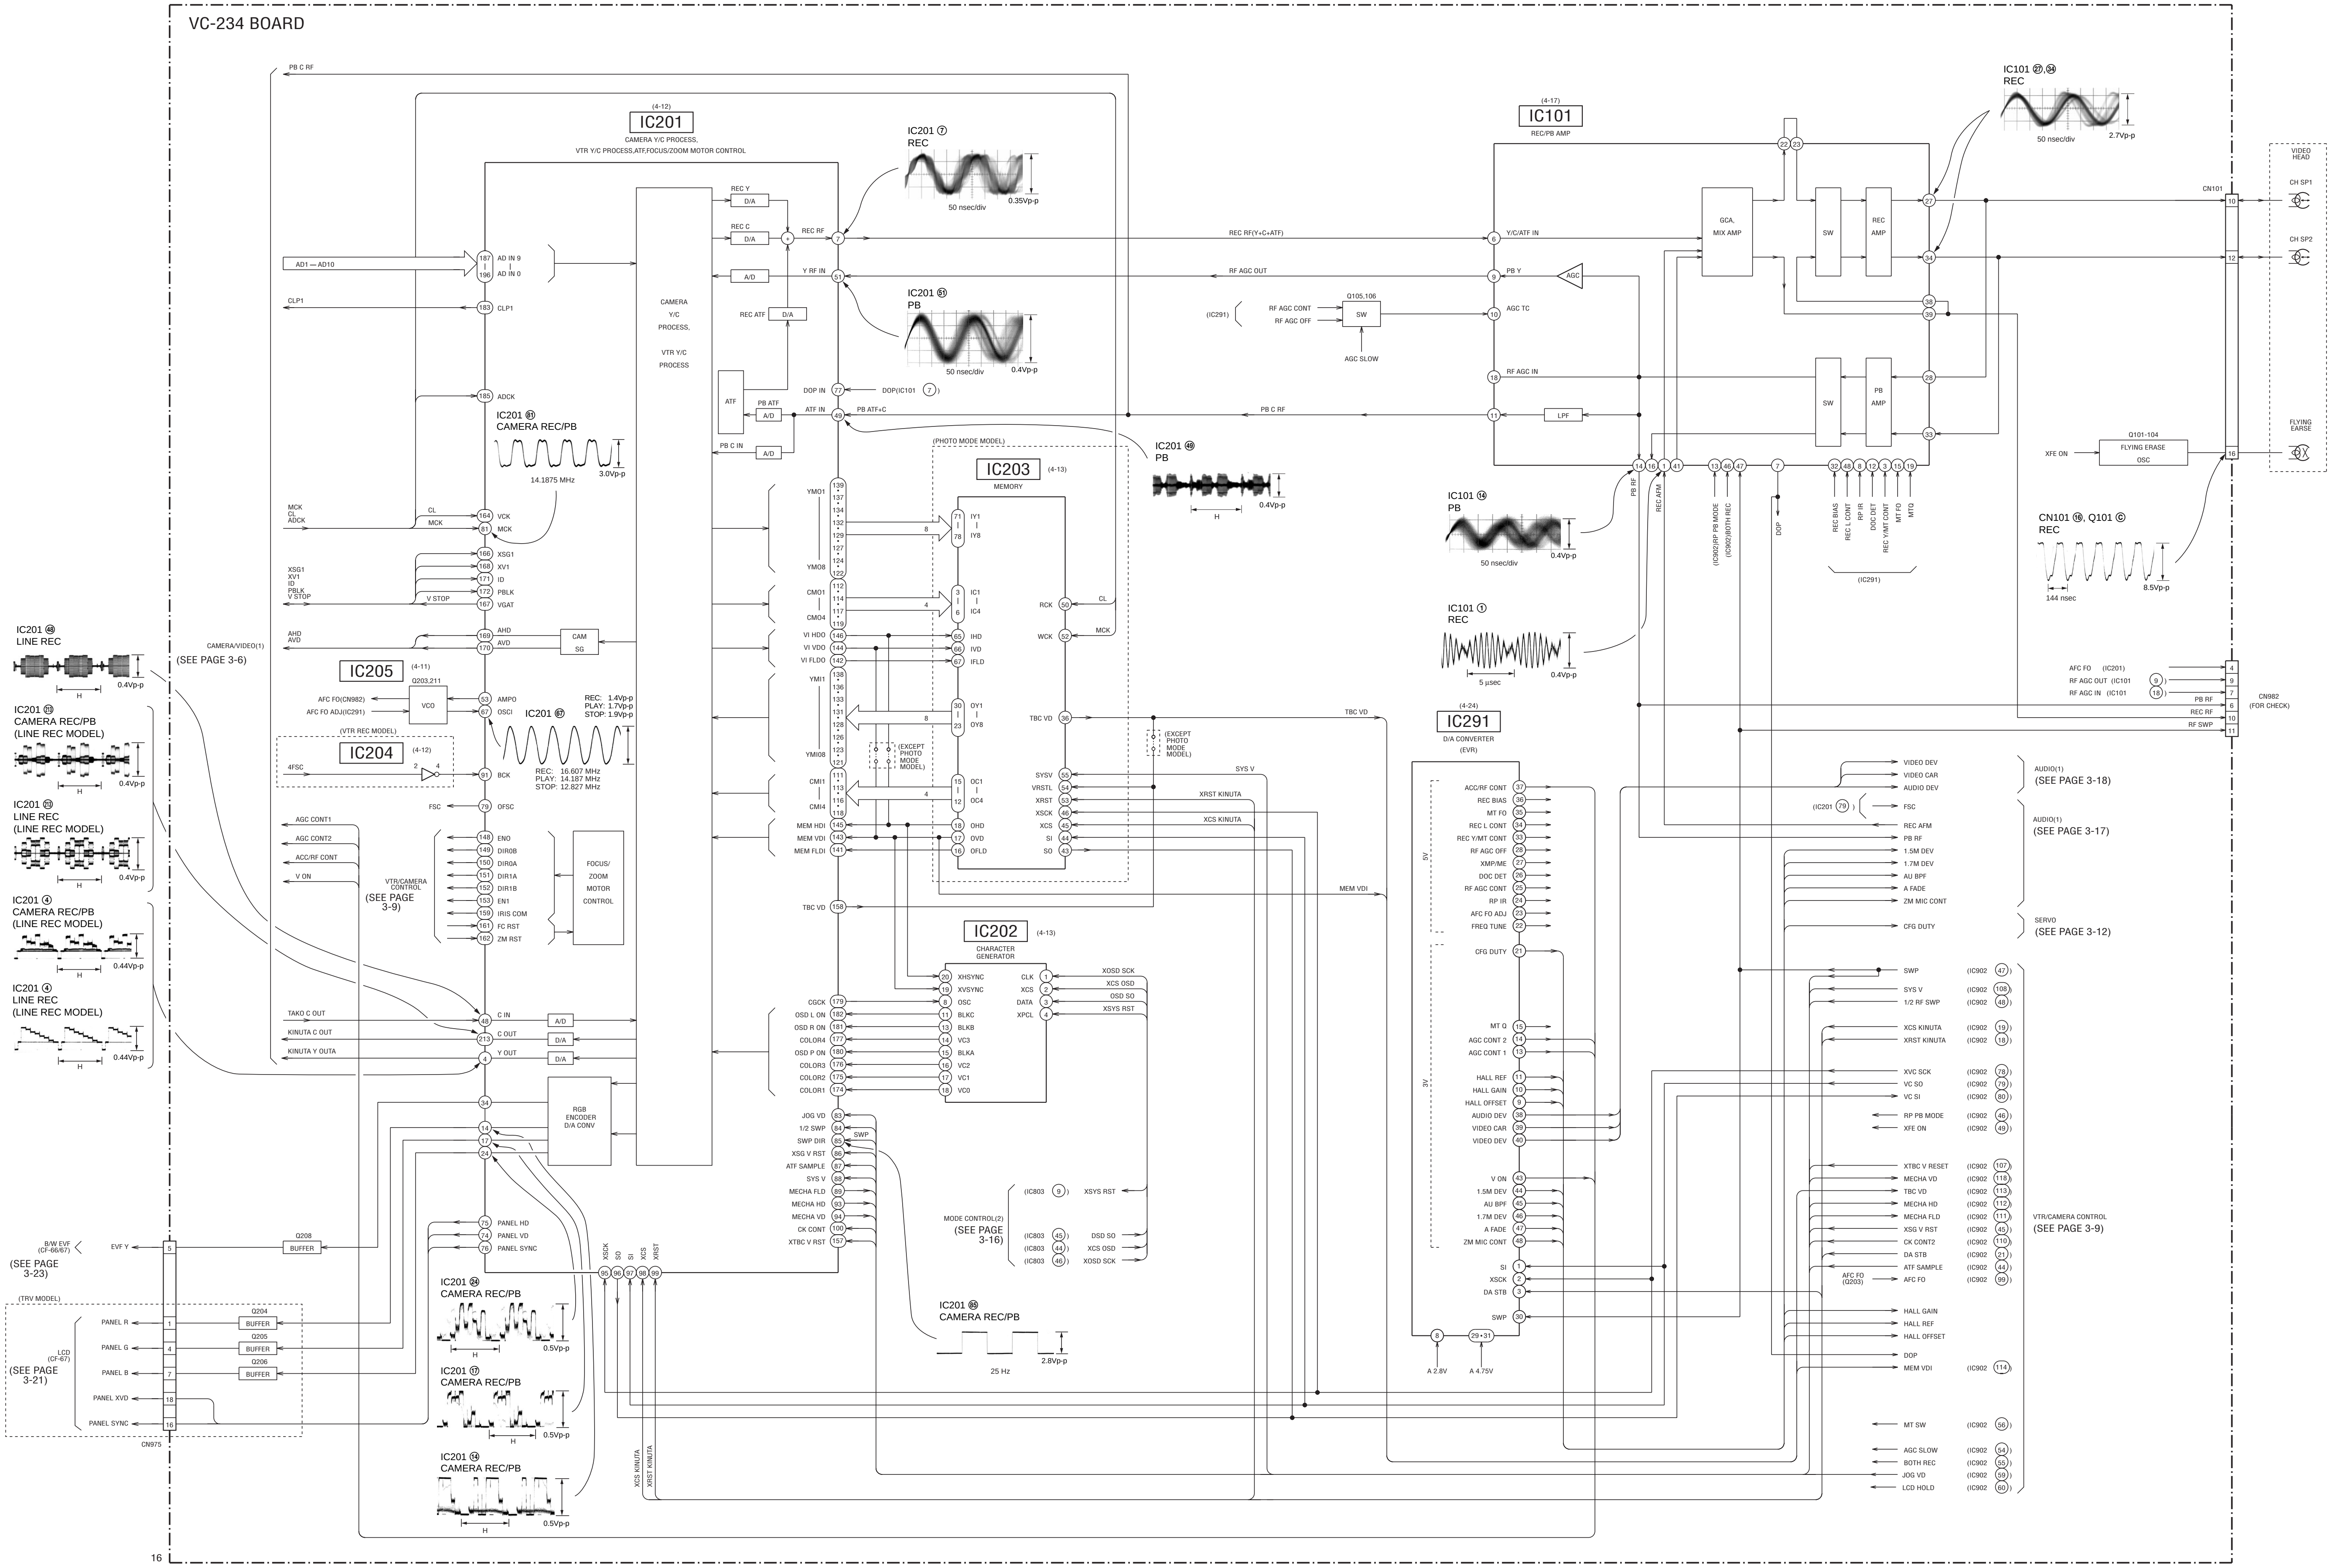
VC-234 BOARD
IC201
(4-12)
CAMERA Y/C PROCESS,
VTR Y/C PROCESS,ATF,FOCUS/ZOOM MOTOR CONTROL
CAMERA
Y/C
PROCESS,
VTR Y/C
PROCESS
IC201 ⑦
REC
50 nsec/div
0.35Vp-p
IC201 (51)
PB
50 nsec/div
0.4Vp-p
IC201 (185)
CAMERA REC/PB
14.1875 MHz
3.0Vp-p
IC201 (87)
REC: 1.4Vp-p
PLAY: 1.7Vp-p
STOP: 1.9Vp-p
REC: 16.607 MHz
PLAY: 14.187 MHz
STOP: 12.827 MHz
IC205
(4-11)
Q203,211
VCO
AFC FO(CN982)
AFC FO ADJ(IC291)
(VTR REC MODEL)
IC204
(4-12)
4FSC
CAM
SG
FOCUS/
ZOOM
MOTOR
CONTROL
VTR/CAMERA
CONTROL
(SEE PAGE
3-9)
CAMERA/VIDEO(1)
(SEE PAGE 3-6)
RGB
ENCODER
D/A CONV
IC203
(4-13)
MEMORY
(PHOTO MODE MODEL)
(EXCEPT
PHOTO
MODE
MODEL)
IC202
(4-13)
CHARACTER
GENERATOR
MODE CONTROL(2)
(SEE PAGE
3-16)
IC201 (49)
PB
0.4Vp-p
IC101
(4-17)
REC/PB AMP
GCA,
MIX AMP
SW
REC
AMP
PB
AMP
AGC
LPF
Q105,106
SW
AGC SLOW
IC101 (27),(34)
REC
50 nsec/div
2.7Vp-p
IC101 ⑭
PB
50 nsec/div
0.4Vp-p
IC101 ①
REC
5 μsec
0.4Vp-p
CN101 ⑲, Q101 ©
REC
144 nsec
8.5Vp-p
Q101-104
FLYING ERASE
OSC
VIDEO
HEAD
CH SP1
CH SP2
FLYING
EARSE
CN101
CN982
(FOR CHECK)
IC291
(4-24)
D/A CONVERTER
(EVR)
AUDIO(1)
(SEE PAGE 3-18)
AUDIO(1)
(SEE PAGE 3-17)
SERVO
(SEE PAGE 3-12)
VTR/CAMERA CONTROL
(SEE PAGE 3-9)
IC201 (48)
LINE REC
0.4Vp-p
IC201 (13)
CAMERA REC/PB
(LINE REC MODEL)
0.4Vp-p
IC201 (13)
LINE REC
(LINE REC MODEL)
0.4Vp-p
IC201 ④
CAMERA REC/PB
(LINE REC MODEL)
0.44Vp-p
IC201 ④
LINE REC
(LINE REC MODEL)
0.44Vp-p
IC201 (24)
CAMERA REC/PB
0.5Vp-p
IC201 ⑰
CAMERA REC/PB
0.5Vp-p
IC201 ⑭
CAMERA REC/PB
0.5Vp-p
IC201 (86)
CAMERA REC/PB
25 Hz
2.8Vp-p
B/W EVF
(CF-66/67)
(SEE PAGE
3-23)
Q208
BUFFER
(TRV MODEL)
LCD
(CF-67)
(SEE PAGE
3-21)
Q204
BUFFER
Q205
BUFFER
Q206
BUFFER
PANEL R
PANEL G
PANEL B
PANEL XVD
PANEL SYNC
CN975

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV57E/TRV67E/TRV87E
VTR REC MODEL : CCD-TRV87E : E,HK,AUS,CN,JE model
PHOTO MODE MODEL : CCD-TR918E/TRV87E

Abbreviation
HK : Hong Kong MODEL
AUS : Australian MODEL
CN : Chinese MODEL
JE : Tourist MODEL

3-5. VTR/CAMERA CONTROL BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

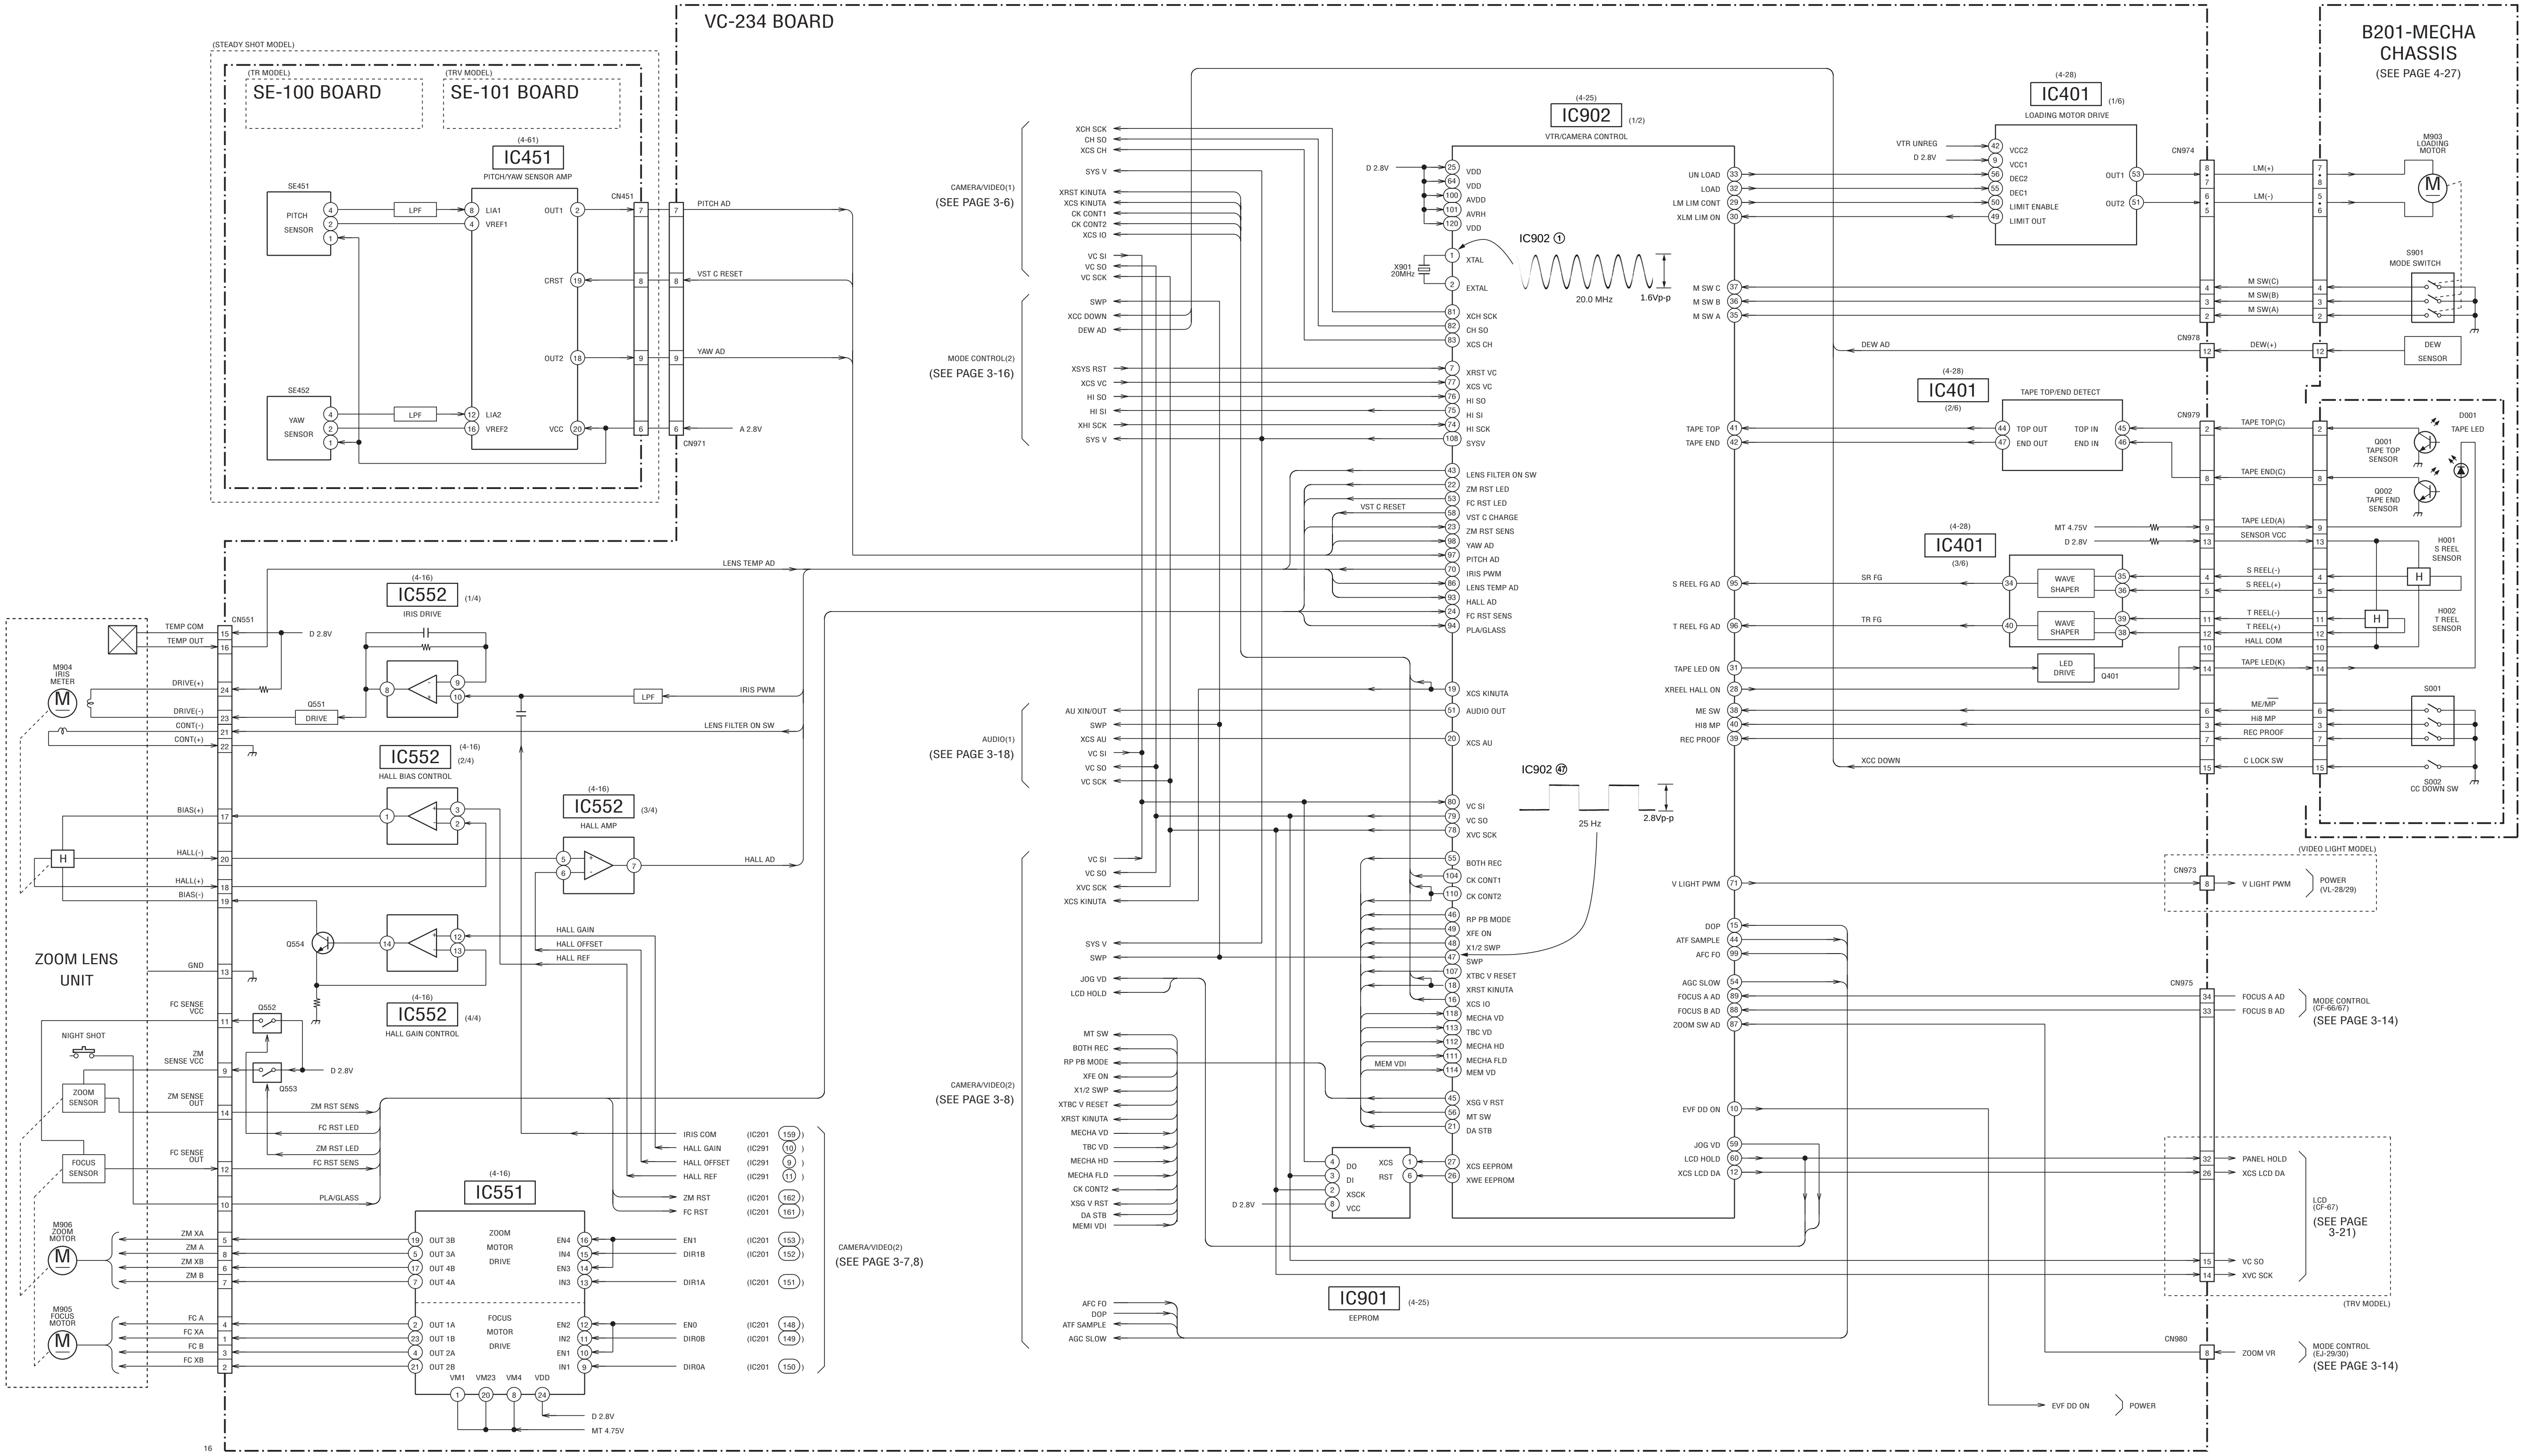
VC-234 BOARD
(STEADY SHOT MODEL)
(TR MODEL)
SE-100 BOARD
(TRV MODEL)
SE-101 BOARD
(4-61)
IC451
PITCH/YAW SENSOR AMP
SE451
PITCH SENSOR
SE452
YAW SENSOR
LPF
LIA1
VREF1
LIA2
VREF2
OUT1
CRST
OUT2
VCC
CN451
CN971
PITCH AD
VST C RESET
YAW AD
A 2.8V
B201-MECHA CHASSIS
(SEE PAGE 4-27)
(4-25)
IC902
(1/2)
VTR/CAMERA CONTROL
D 2.8V
VDD
AVDD
AVRH
X901 20MHz
XTAL
EXTAL
IC902 ①
20.0 MHz
1.6Vp-p
XCH SCK
CH SO
XCS CH
XRST VC
XCS VC
HI SO
HI SI
HI SCK
SYSV
CAMERA/VIDEO(1)
(SEE PAGE 3-6)
MODE CONTROL(2)
(SEE PAGE 3-16)
XSYS RST
XHI SCK
SWP
XCC DOWN
DEW AD
XRST KINUTA
XCS KINUTA
CK CONT1
CK CONT2
XCS IO
VC SI
VC SO
VC SCK
LENS FILTER ON SW
ZM RST LED
FC RST LED
VST C CHARGE
ZM RST SENS
YAW AD
PITCH AD
IRIS PWM
LENS TEMP AD
HALL AD
FC RST SENS
PLA/GLASS
VST C RESET
LENS TEMP AD
(4-28)
IC401
(1/6)
LOADING MOTOR DRIVE
VTR UNREG
VCC2
VCC1
DEC2
DEC1
LIMIT ENABLE
LIMIT OUT
OUT1
OUT2
UN LOAD
LOAD
LM LIM CONT
XLM LIM ON
CN974
LM(+)
LM(-)
M903 LOADING MOTOR
S901 MODE SWITCH
M SW C
M SW B
M SW A
M SW(C)
M SW(B)
M SW(A)
CN978
DEW AD
DEW(+)
DEW SENSOR
IC401
(2/6)
TAPE TOP/END DETECT
TOP OUT
END OUT
TOP IN
END IN
TAPE TOP
TAPE END
CN979
TAPE TOP(C)
TAPE END(C)
D001 TAPE LED
Q001 TAPE TOP SENSOR
Q002 TAPE END SENSOR
(4-28)
IC401
(3/6)
MT 4.75V
WAVE SHAPER
LED DRIVE
Q401
S REEL FG AD
SR FG
T REEL FG AD
TR FG
TAPE LED ON
XREEL HALL ON
TAPE LED(A)
SENSOR VCC
S REEL(-)
S REEL(+)
T REEL(-)
T REEL(+)
HALL COM
TAPE LED(K)
H001 S REEL SENSOR
H002 T REEL SENSOR
S001
ME SW
HI8 MP
REC PROOF
ME/MP
XCC DOWN
C LOCK SW
S002 CC DOWN SW
(VIDEO LIGHT MODEL)
CN973
V LIGHT PWM
POWER (VL-28/29)
DOP
ATF SAMPLE
AFC FO
AGC SLOW
FOCUS A AD
FOCUS B AD
ZOOM SW AD
CN975
MODE CONTROL (CF-66/67)
(SEE PAGE 3-14)
EVF DD ON
JOG VD
LCD HOLD
XCS LCD DA
PANEL HOLD
LCD (CF-67)
(SEE PAGE 3-21)
VC SO
XVC SCK
(TRV MODEL)
CN980
ZOOM VR
MODE CONTROL (EJ-29/30)
(SEE PAGE 3-14)
EVF DD ON
POWER
AU XIN/OUT
XCS AU
AUDIO(1)
(SEE PAGE 3-18)
XCS KINUTA
AUDIO OUT
IC902 ㊼
25 Hz
2.8Vp-p
XVC SCK
BOTH REC
RP PB MODE
XFE ON
X1/2 SWP
XTBC V RESET
XRST KINUTA
MECHA VD
TBC VD
MECHA HD
MECHA FLD
MEM VD
MEM VDI
XSG V RST
MT SW
DA STB
SYS V
JOG VD
LCD HOLD
CAMERA/VIDEO(2)
(SEE PAGE 3-8)
MEMI VDI
XCS EEPROM
XWE EEPROM
DO
DI
XSCK
VCC
XCS
RST
IC901
(4-25)
EEPROM
D 2.8V
AFC FO
DOP
ATF SAMPLE
AGC SLOW
ZOOM LENS UNIT
M904 IRIS METER
TEMP COM
TEMP OUT
DRIVE(+)
DRIVE(-)
CONT(-)
CONT(+)
CN551
Q551 DRIVE
(4-16)
IC552
(1/4)
IRIS DRIVE
LPF
IRIS PWM
LENS FILTER ON SW
(4-16)
IC552
(2/4)
HALL BIAS CONTROL
BIAS(+)
HALL(-)
HALL(+)
BIAS(-)
(4-16)
IC552
(3/4)
HALL AMP
HALL AD
Q554
(4-16)
IC552
(4/4)
HALL GAIN CONTROL
HALL GAIN
HALL OFFSET
HALL REF
GND
FC SENSE VCC
Q552
NIGHT SHOT
ZM SENSE VCC
Q553
ZOOM SENSOR
ZM SENSE OUT
FOCUS SENSOR
FC SENSE OUT
ZM RST SENS
FC RST LED
ZM RST LED
FC RST SENS
PLA/GLASS
(4-16)
IC551
ZOOM MOTOR DRIVE
FOCUS MOTOR DRIVE
OUT 3B
OUT 3A
OUT 4B
OUT 4A
OUT 1A
OUT 1B
OUT 2A
OUT 2B
EN4
IN4
EN3
IN3
EN2
IN2
EN1
IN1
VM1
VM23
VM4
VDD
D 2.8V
MT 4.75V
M906 ZOOM MOTOR
ZM XA
ZM A
ZM XB
ZM B
M905 FOCUS MOTOR
FC A
FC XA
FC B
FC XB
IRIS COM
HALL GAIN
HALL OFFSET
HALL REF
ZM RST
FC RST
EN1
DIR1B
DIR1A
EN0
DIR0B
DIR0A
(IC201 159)
(IC291 10)
(IC291 9)
(IC291 11)
(IC201 162)
(IC201 161)
(IC201 153)
(IC201 152)
(IC201 151)
(IC201 148)
(IC201 149)
(IC201 150)
CAMERA/VIDEO(2)
(SEE PAGE 3-7,8)
16

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
STEADY SHOT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
VIDEO LIGHT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E

3-6. SERVO BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

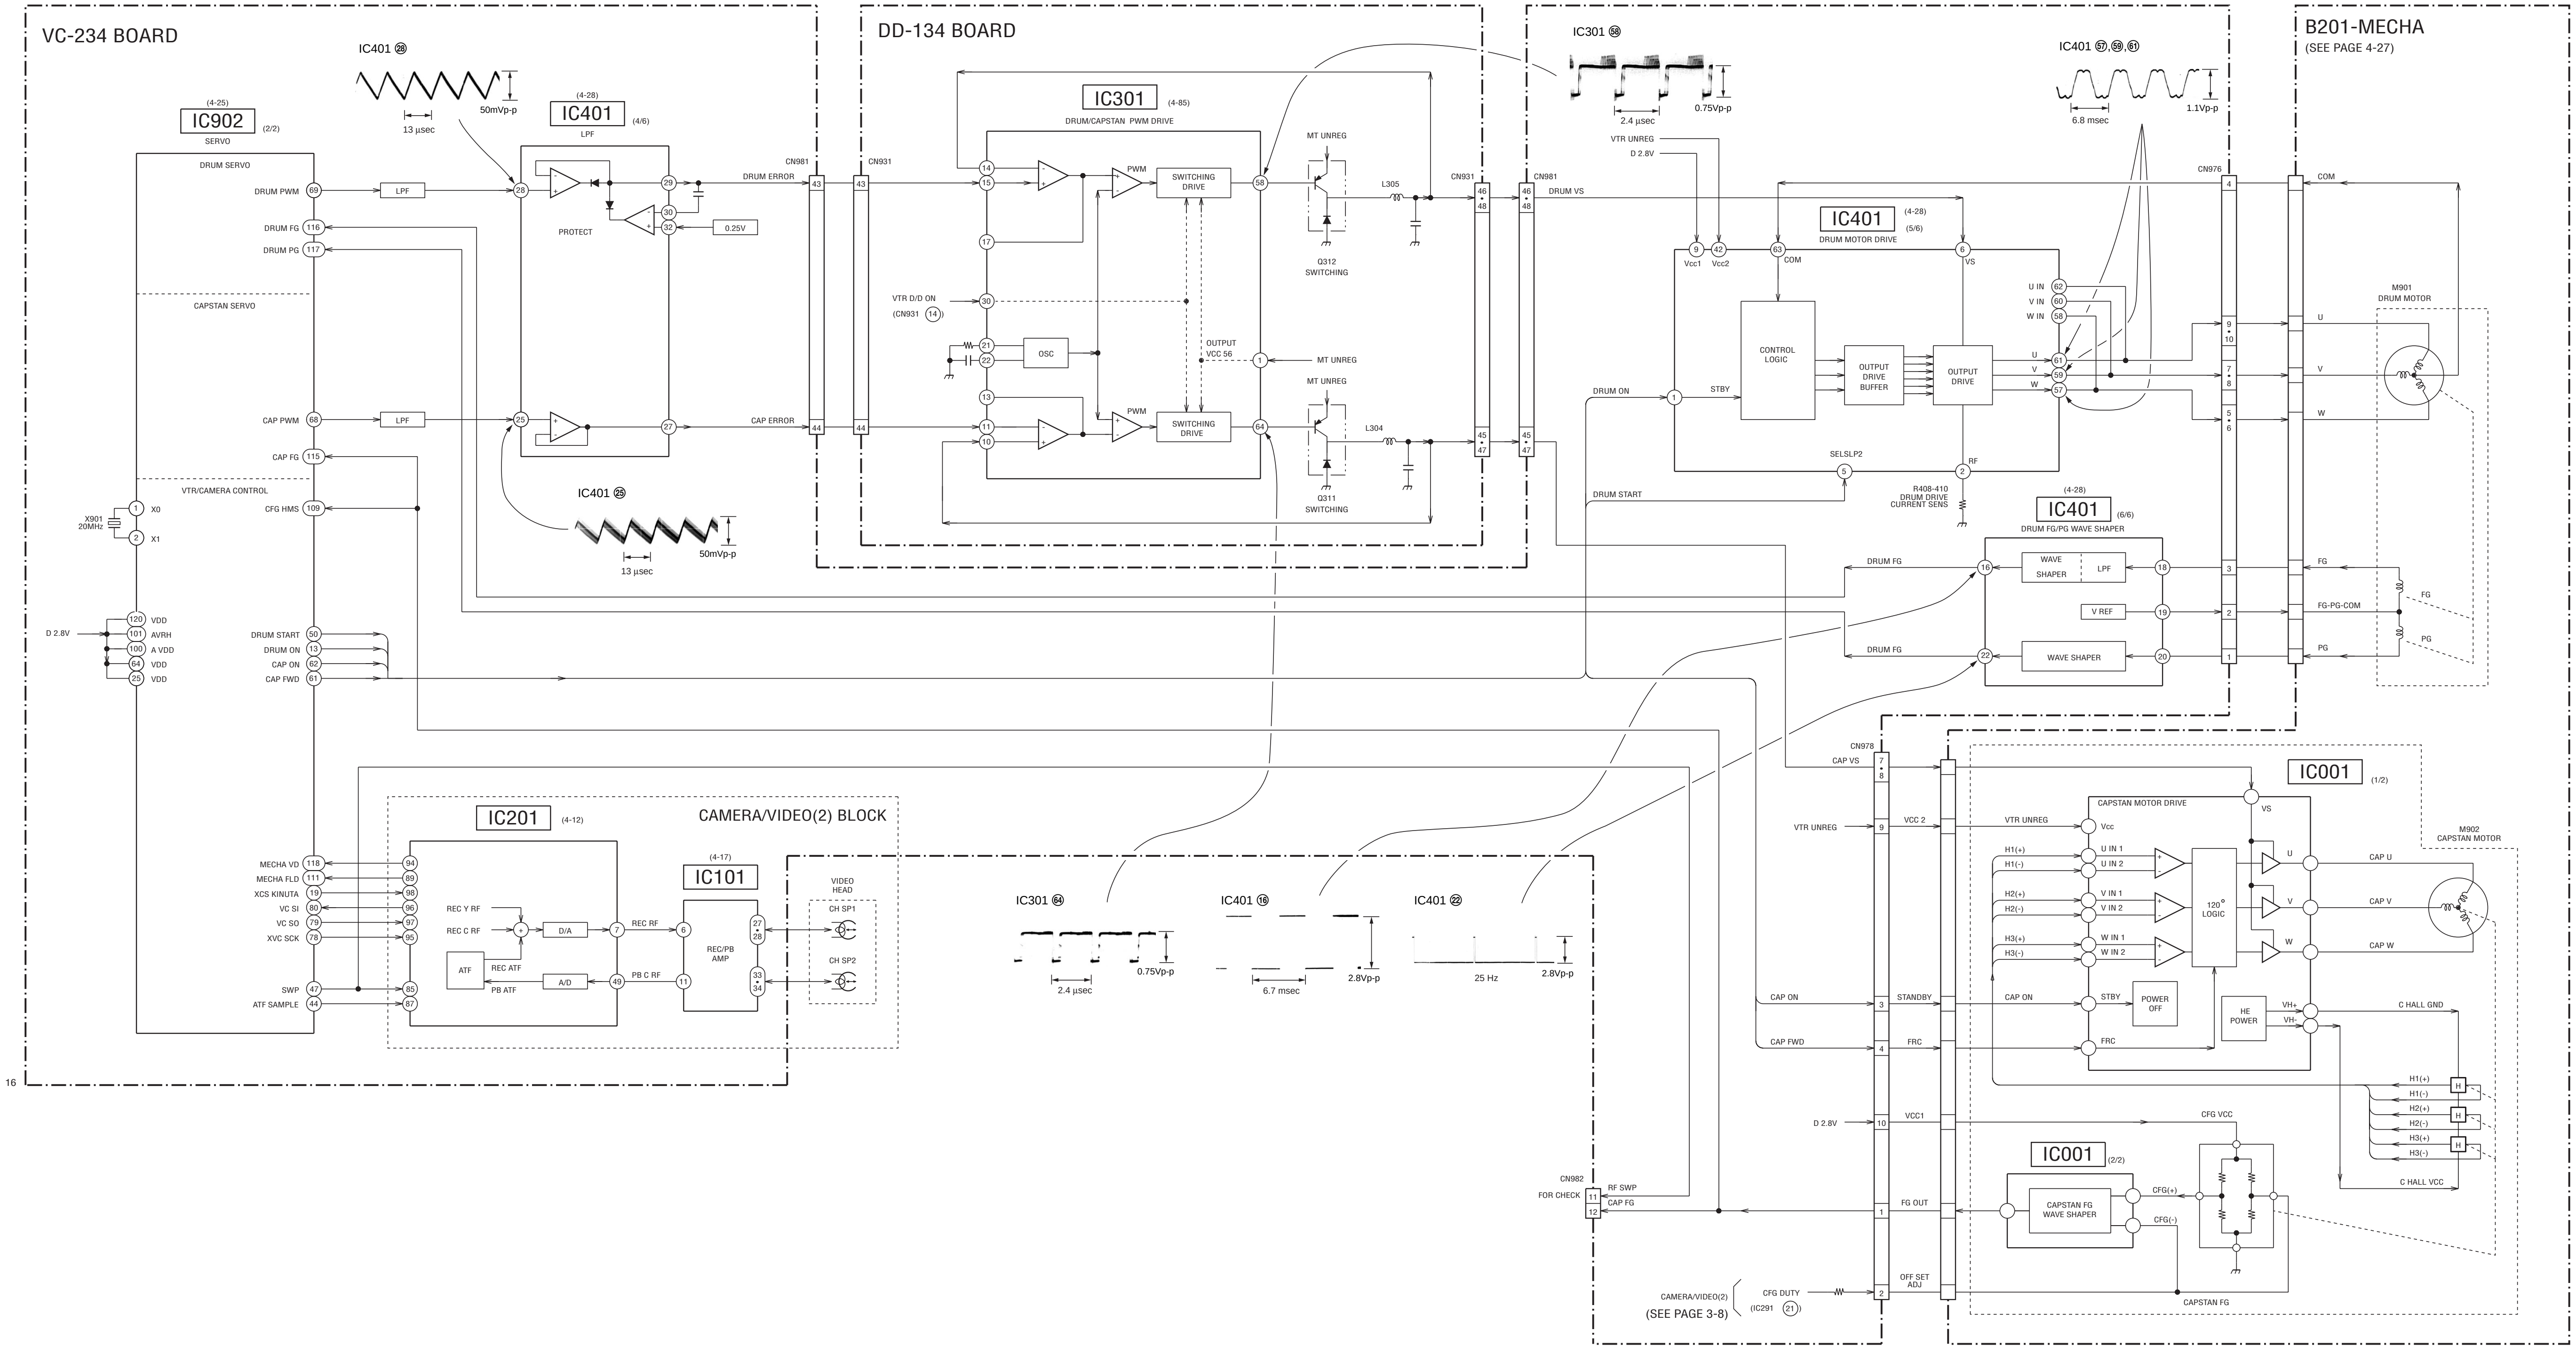
VC-234 BOARD
DD-134 BOARD
B201-MECHA
(SEE PAGE 4-27)
IC902
(4-25)
(2/2)
SERVO
DRUM SERVO
DRUM PWM
DRUM FG
DRUM PG
CAPSTAN SERVO
CAP PWM
CAP FG
VTR/CAMERA CONTROL
CFG HMS
X901 20MHz
X0
X1
D 2.8V
VDD
AVRH
A VDD
VDD
VDD
DRUM START
DRUM ON
CAP ON
CAP FWD
MECHA VD
MECHA FLD
XCS KINUTA
VC SI
VC SO
XVC SCK
SWP
ATF SAMPLE
IC401 ㉘
13 μsec
50mVp-p
IC401
(4-28)
(4/6)
LPF
PROTECT
0.25V
IC401 ㉕
13 μsec
50mVp-p
DRUM ERROR
CAP ERROR
CN981
CN931
IC301
(4-85)
DRUM/CAPSTAN PWM DRIVE
PWM
SWITCHING DRIVE
OSC
VTR D/D ON
(CN931 ⑭)
OUTPUT VCC 56
MT UNREG
Q312 SWITCHING
Q311 SWITCHING
L305
L304
DRUM VS
IC301 ㊺
2.4 μsec
0.75Vp-p
VTR UNREG
D 2.8V
IC401
(4-28)
(5/6)
DRUM MOTOR DRIVE
Vcc1
Vcc2
COM
VS
CONTROL LOGIC
OUTPUT DRIVE BUFFER
OUTPUT DRIVE
U IN
V IN
W IN
U
V
W
DRUM ON
STBY
SELSLP2
RF
R408-410 DRUM DRIVE CURRENT SENS
DRUM START
IC401 ㊼,㊾,㊽
6.8 msec
1.1Vp-p
CN976
COM
M901 DRUM MOTOR
IC401
(4-28)
(6/6)
DRUM FG/PG WAVE SHAPER
WAVE SHAPER
LPF
V REF
DRUM FG
FG
FG-PG-COM
PG
CN978
CAP VS
VTR UNREG
VCC 2
IC001
(1/2)
CAPSTAN MOTOR DRIVE
Vcc
H1(+)
H1(-)
H2(+)
H2(-)
H3(+)
H3(-)
U IN 1
U IN 2
V IN 1
V IN 2
W IN 1
W IN 2
120° LOGIC
M902 CAPSTAN MOTOR
CAP U
CAP V
CAP W
CAP ON
STANDBY
STBY
POWER OFF
HE POWER
VH+
VH-
C HALL GND
CAP FWD
FRC
H1(+)
H1(-)
H2(+)
H2(-)
H3(+)
H3(-)
C HALL VCC
D 2.8V
VCC1
CFG VCC
IC001
(2/2)
CAPSTAN FG WAVE SHAPER
CFG(+)
CFG(-)
FG OUT
CN982
FOR CHECK
RF SWP
CAP FG
OFF SET ADJ
CAMERA/VIDEO(2)
(SEE PAGE 3-8)
CFG DUTY
(IC291 ㉑)
CAPSTAN FG
IC201
(4-12)
CAMERA/VIDEO(2) BLOCK
REC Y RF
REC C RF
D/A
REC RF
ATF
REC ATF
A/D
PB ATF
PB C RF
IC101
(4-17)
REC/PB AMP
VIDEO HEAD
CH SP1
CH SP2
IC301 ㊹
2.4 μsec
0.75Vp-p
IC401 ⑯
6.7 msec
2.8Vp-p
IC401 ㉒
25 Hz
2.8Vp-p
16

3-7. MODE CONTROL BLOCK DIAGRAM (1/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

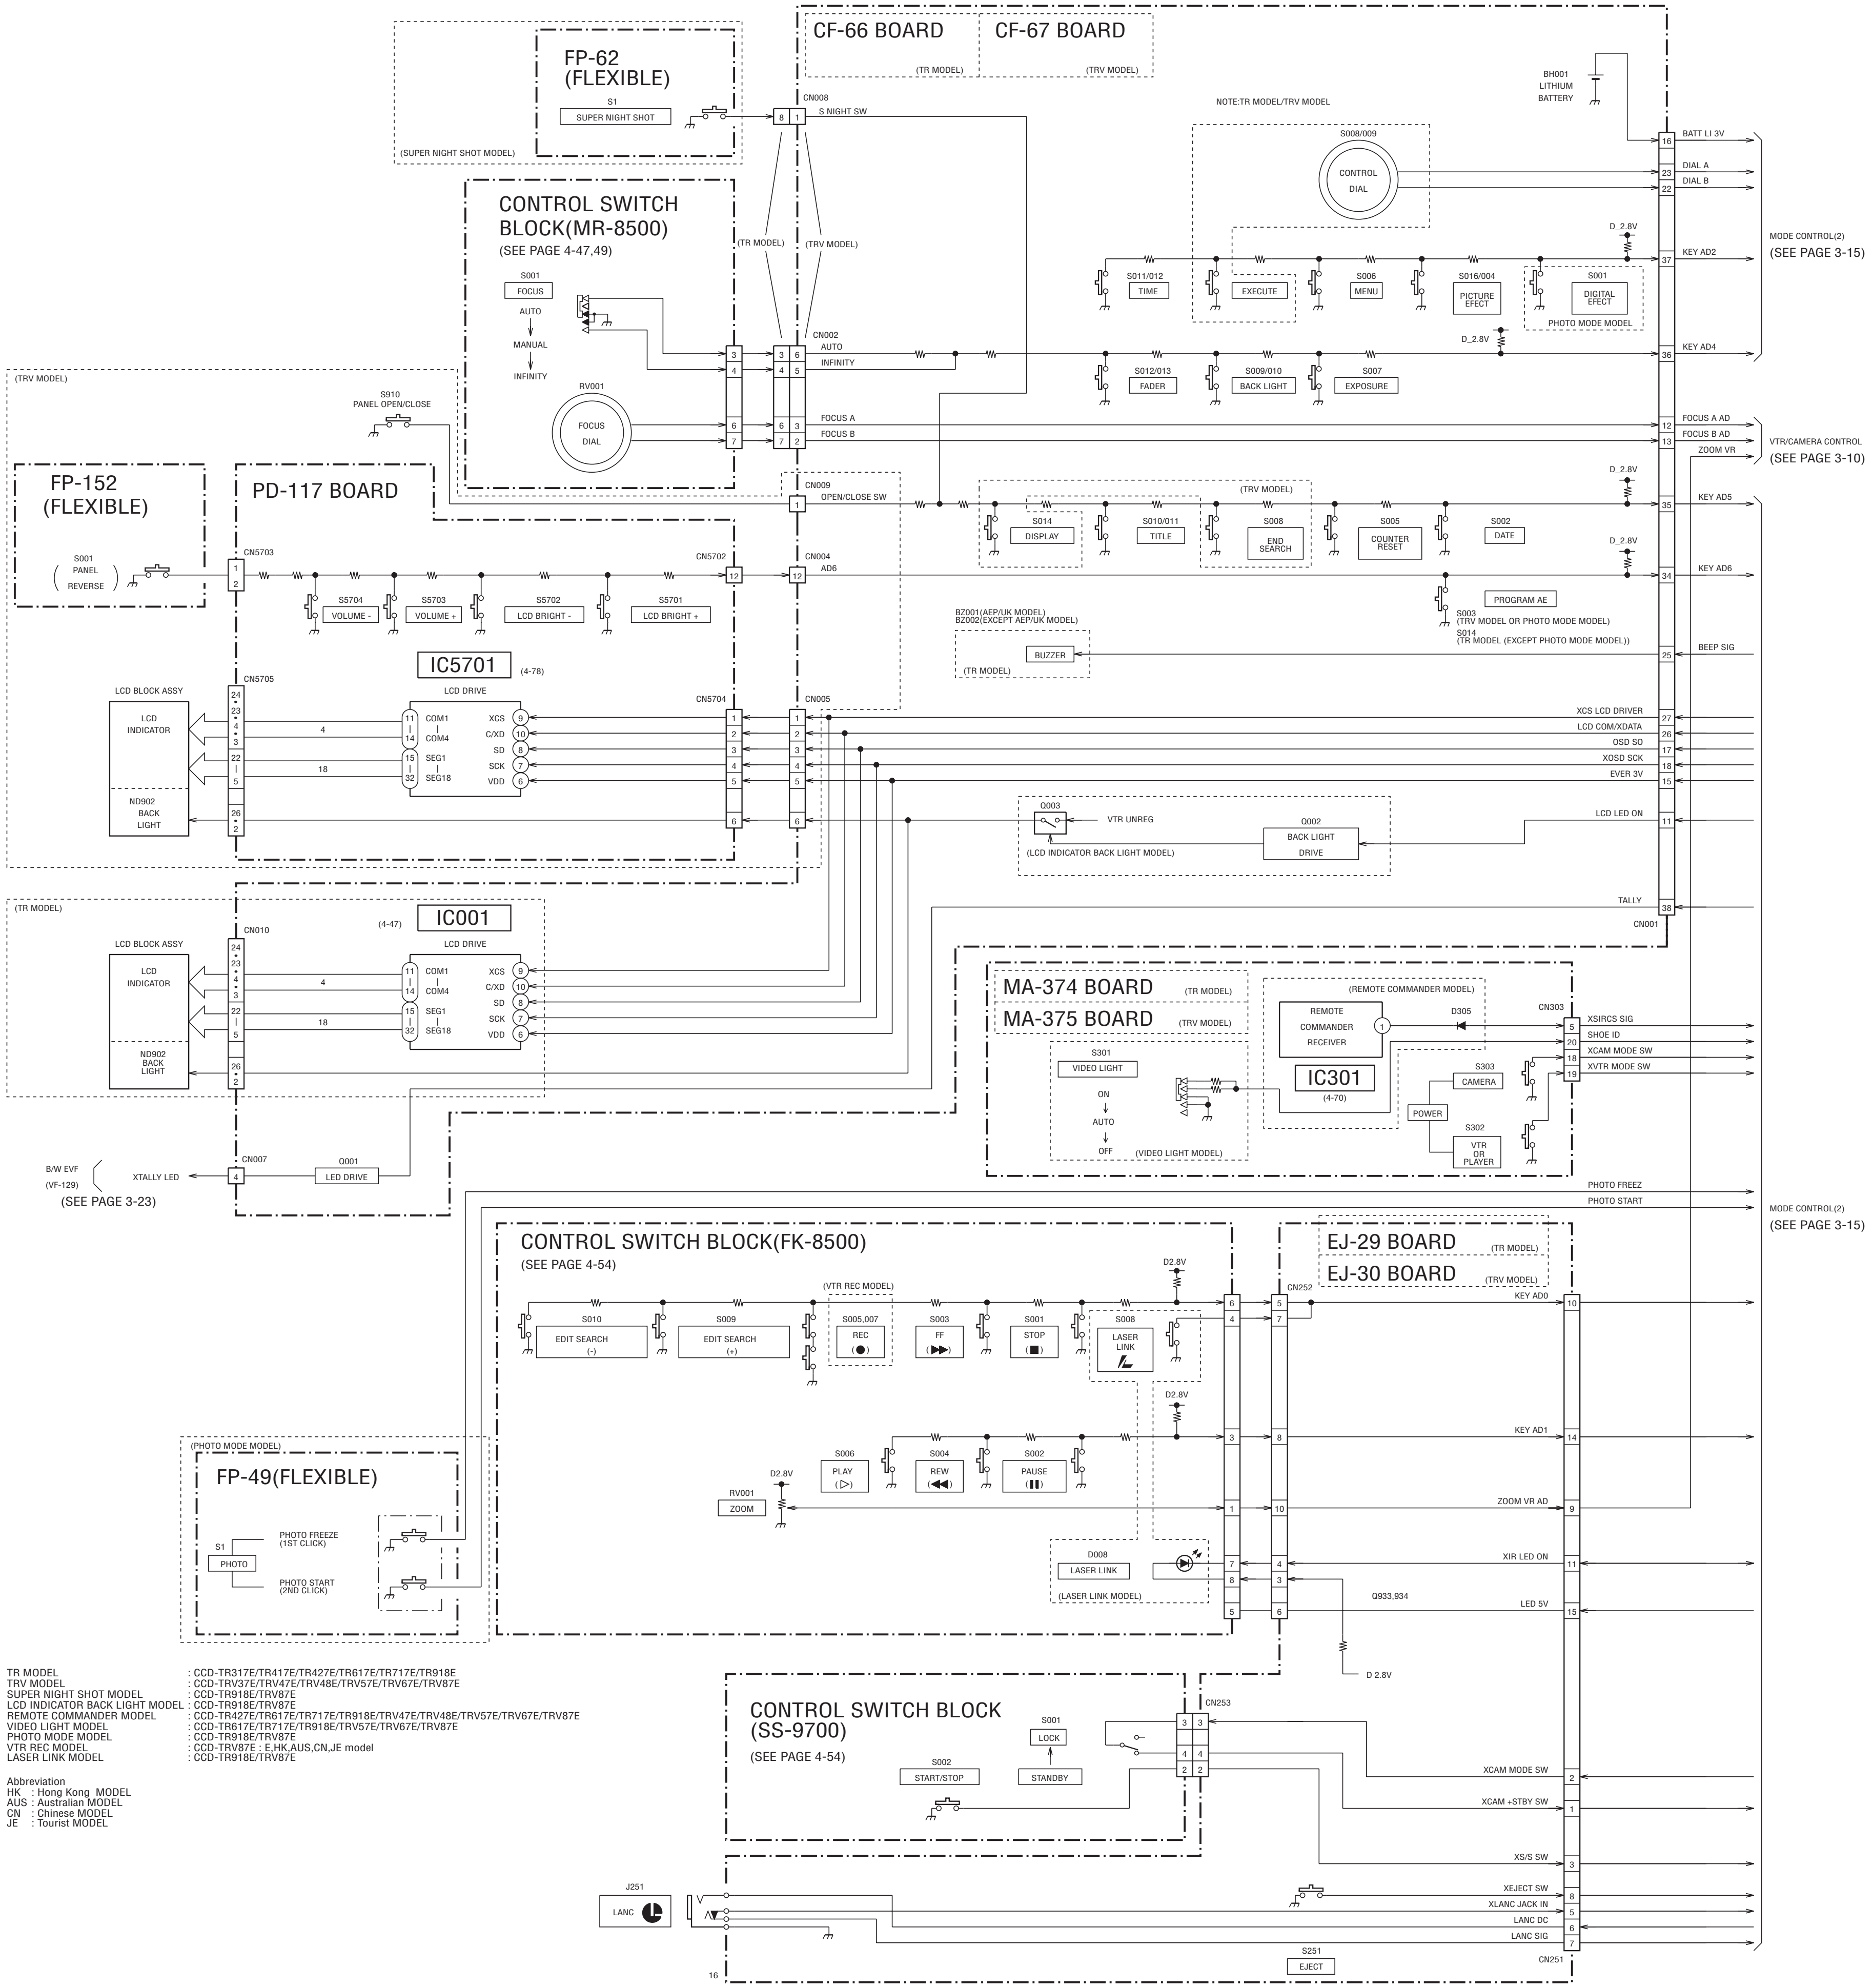
FP-62 (FLEXIBLE)
S1
SUPER NIGHT SHOT
(SUPER NIGHT SHOT MODEL)
CONTROL SWITCH BLOCK(MR-8500)
(SEE PAGE 4-47,49)
S001
FOCUS
AUTO
MANUAL
INFINITY
RV001
FOCUS DIAL
(TR MODEL)
(TRV MODEL)
CF-66 BOARD (TR MODEL)
CF-67 BOARD (TRV MODEL)
CN008
S NIGHT SW
CN002
AUTO
INFINITY
FOCUS A
FOCUS B
CN009
OPEN/CLOSE SW
CN004
AD6
CN005
NOTE:TR MODEL/TRV MODEL
BH001 LITHIUM BATTERY
S008/009
CONTROL DIAL
D_2.8V
S011/012 TIME
EXECUTE
S006 MENU
S016/004 PICTURE EFECT
S001 DIGITAL EFECT
PHOTO MODE MODEL
S012/013 FADER
S009/010 BACK LIGHT
S007 EXPOSURE
(TRV MODEL)
S014 DISPLAY
S010/011 TITLE
S008 END SEARCH
S005 COUNTER RESET
S002 DATE
PROGRAM AE
S003 (TRV MODEL OR PHOTO MODE MODEL)
S014 (TR MODEL (EXCEPT PHOTO MODE MODEL))
BZ001(AEP/UK MODEL)
BZ002(EXCEPT AEP/UK MODEL)
BUZZER
(TR MODEL)
BATT LI 3V
DIAL A
DIAL B
KEY AD2
KEY AD4
FOCUS A AD
FOCUS B AD
ZOOM VR
KEY AD5
KEY AD6
BEEP SIG
MODE CONTROL(2)
(SEE PAGE 3-15)
VTR/CAMERA CONTROL
(SEE PAGE 3-10)
XCS LCD DRIVER
LCD COM/XDATA
OSD SO
XOSD SCK
EVER 3V
LCD LED ON
TALLY
CN001
Q003
VTR UNREG
(LCD INDICATOR BACK LIGHT MODEL)
Q002 BACK LIGHT DRIVE
(TRV MODEL)
S910 PANEL OPEN/CLOSE
FP-152 (FLEXIBLE)
S001 PANEL REVERSE
PD-117 BOARD
CN5703
CN5702
S5704 VOLUME -
S5703 VOLUME +
S5702 LCD BRIGHT -
S5701 LCD BRIGHT +
IC5701 (4-78)
LCD DRIVE
CN5705
CN5704
LCD BLOCK ASSY
LCD INDICATOR
ND902 BACK LIGHT
COM1 COM4
SEG1 SEG18
XCS
C/XD
SD
SCK
VDD
(TR MODEL)
IC001 (4-47)
CN010
B/W EVF (VF-129)
XTALLY LED
CN007
Q001 LED DRIVE
(SEE PAGE 3-23)
MA-374 BOARD (TR MODEL)
MA-375 BOARD (TRV MODEL)
(REMOTE COMMANDER MODEL)
REMOTE COMMANDER RECEIVER
IC301 (4-70)
D305
CN303
S301 VIDEO LIGHT
ON
AUTO
OFF
(VIDEO LIGHT MODEL)
S303 CAMERA
POWER
S302 VTR OR PLAYER
XSIRCS SIG
SHOE ID
XCAM MODE SW
XVTR MODE SW
PHOTO FREEZ
PHOTO START
CONTROL SWITCH BLOCK(FK-8500)
(SEE PAGE 4-54)
(VTR REC MODEL)
S010 EDIT SEARCH (–)
S009 EDIT SEARCH (+)
S005,007 REC (●)
S003 FF (▶▶)
S001 STOP (■)
S008 LASER LINK
D2.8V
S006 PLAY (▷)
S004 REW (◀◀)
S002 PAUSE (❚❚)
RV001 ZOOM
D008 LASER LINK
(LASER LINK MODEL)
EJ-29 BOARD (TR MODEL)
EJ-30 BOARD (TRV MODEL)
CN252
KEY AD0
KEY AD1
ZOOM VR AD
XIR LED ON
LED 5V
Q933,934
D 2.8V
(PHOTO MODE MODEL)
FP-49(FLEXIBLE)
S1 PHOTO
PHOTO FREEZE (1ST CLICK)
PHOTO START (2ND CLICK)
CONTROL SWITCH BLOCK (SS-9700)
(SEE PAGE 4-54)
S001 LOCK
S002 START/STOP
STANDBY
CN253
XCAM MODE SW
XCAM +STBY SW
XS/S SW
XEJECT SW
XLANC JACK IN
LANC DC
LANC SIG
CN251
S251 EJECT
J251
LANC

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
SUPER NIGHT SHOT MODEL : CCD-TR918E/TRV87E
LCD INDICATOR BACK LIGHT MODEL : CCD-TR918E/TRV87E
REMOTE COMMANDER MODEL : CCD-TR427E/TR617E/TR717E/TR918E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
VIDEO LIGHT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
PHOTO MODE MODEL : CCD-TR918E/TRV87E
VTR REC MODEL : CCD-TRV87E : E,HK,AUS,CN,JE model
LASER LINK MODEL : CCD-TR918E/TRV87E

Abbreviation
HK : Hong Kong MODEL
AUS : Australian MODEL
CN : Chinese MODEL
JE : Tourist MODEL

3-8. MODE CONTROL BLOCK DIAGRAM (2/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

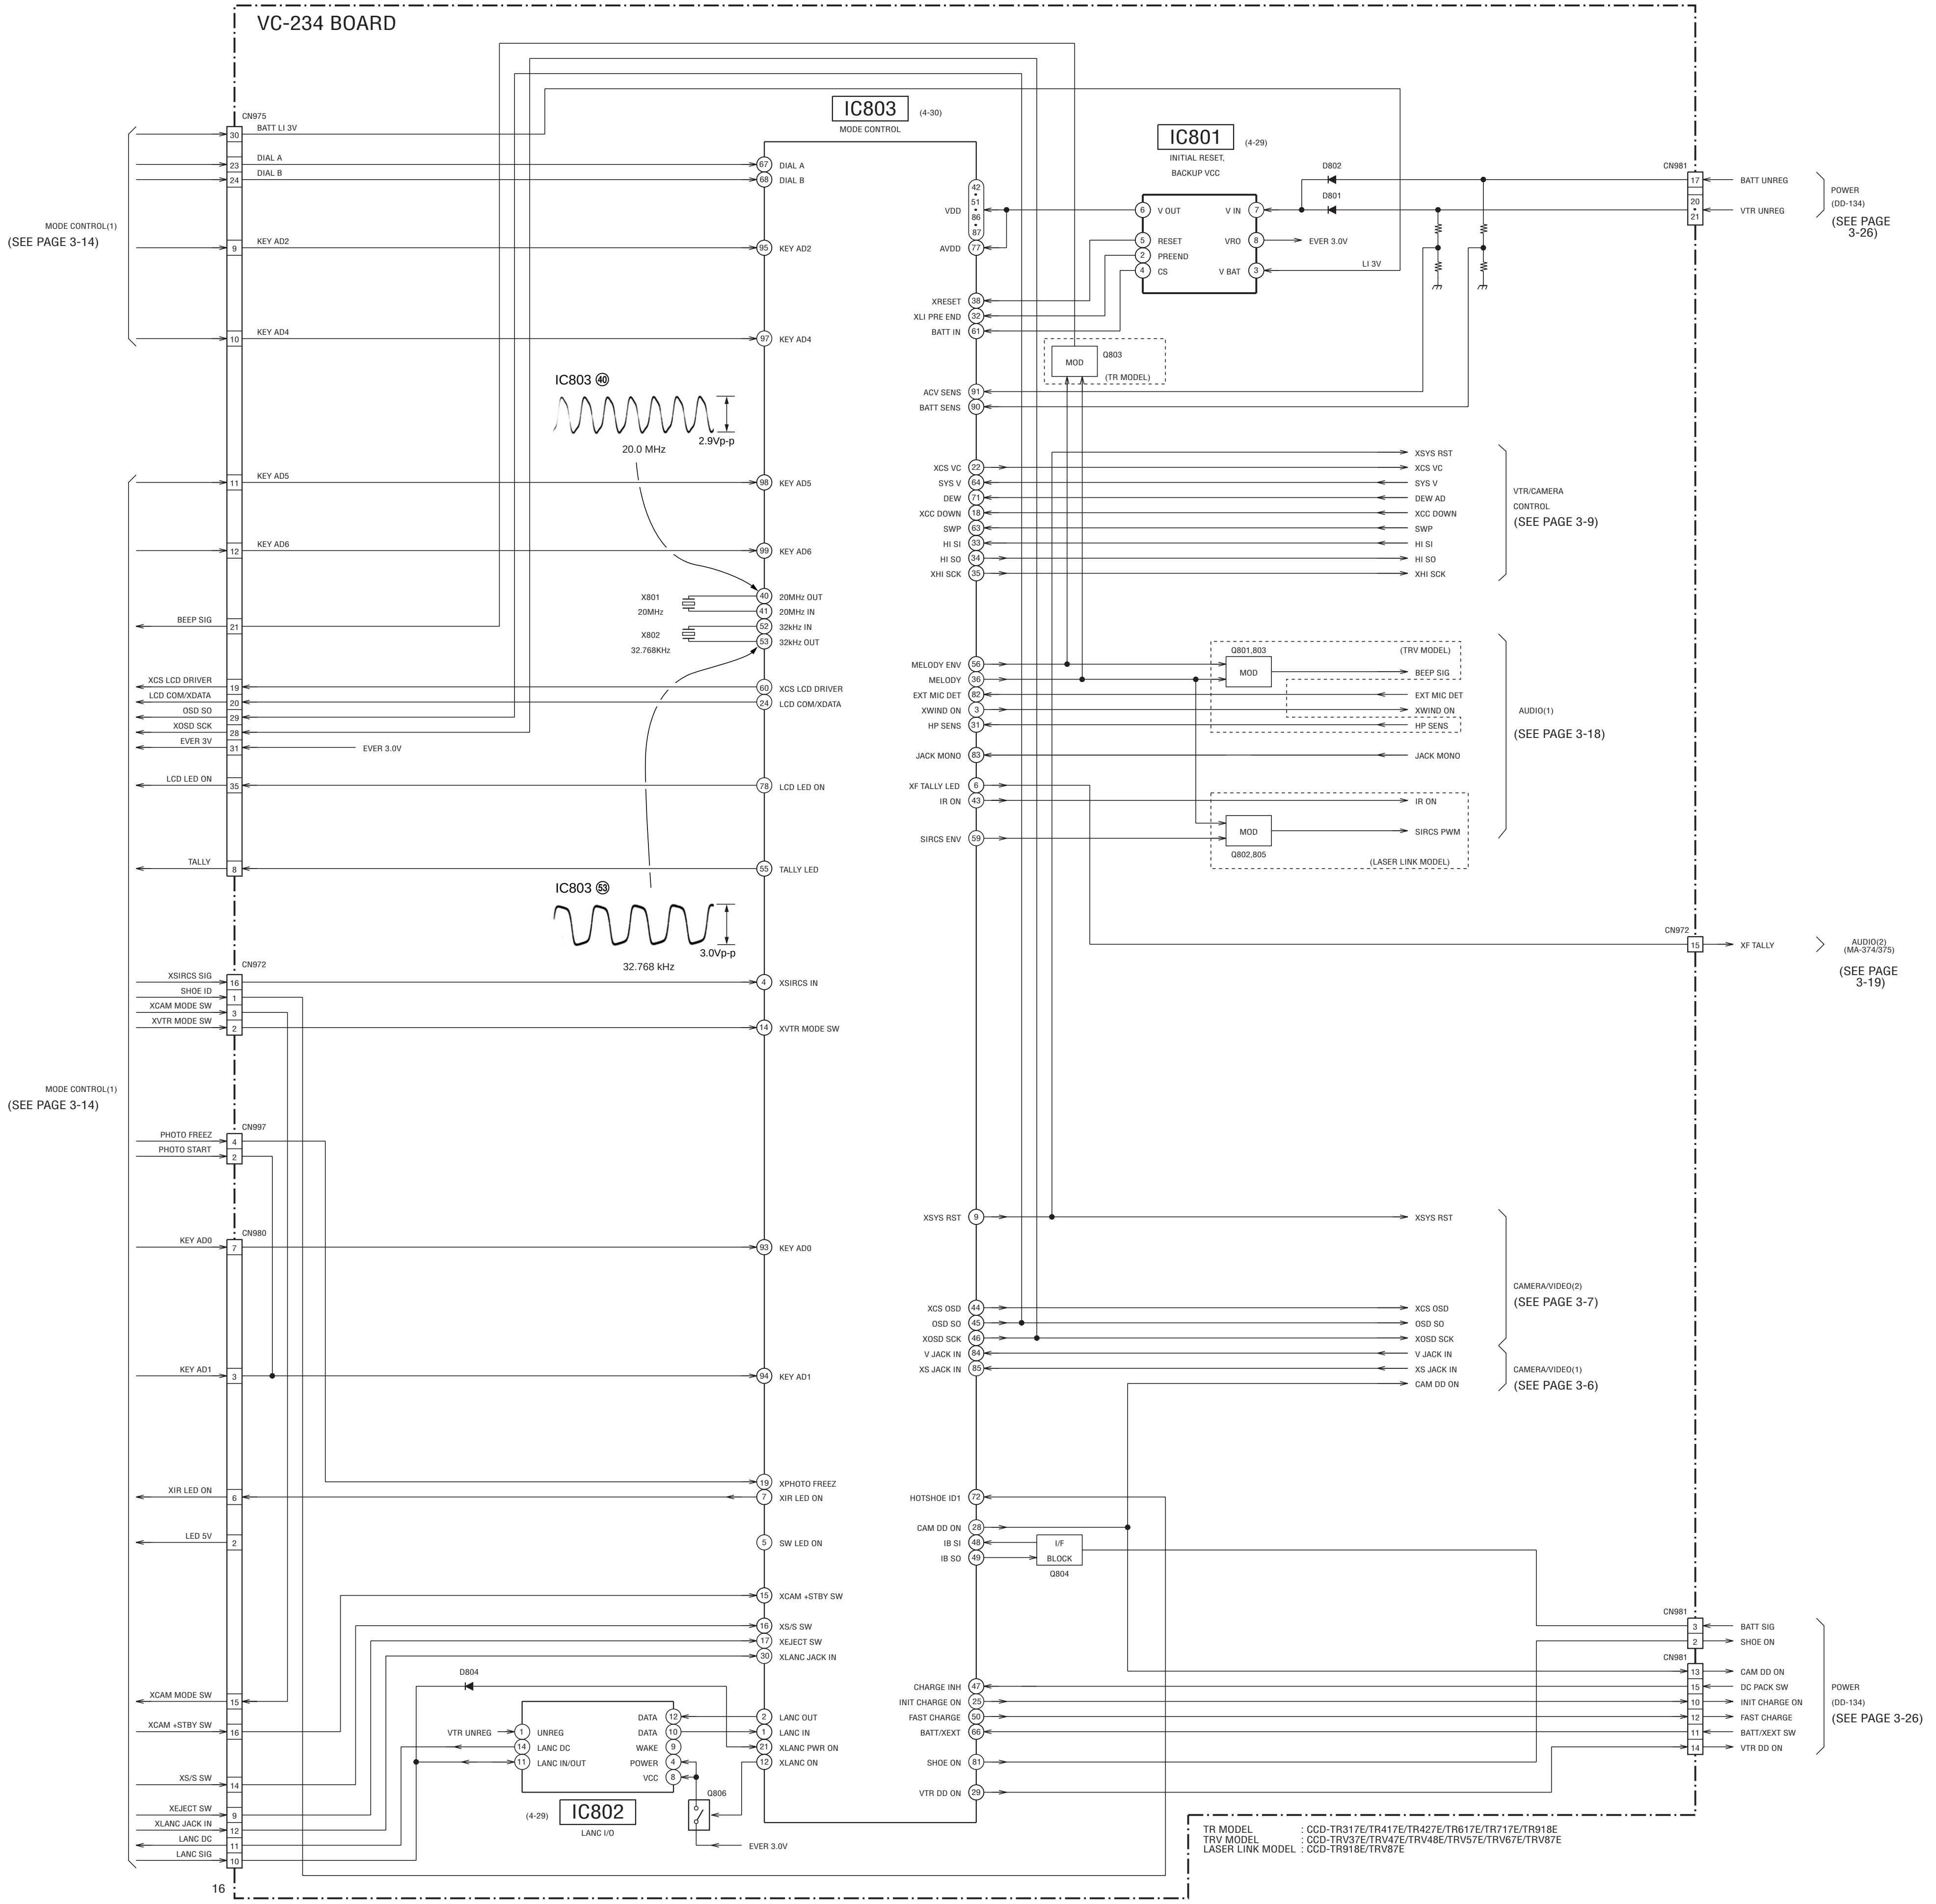
VC-234 BOARD
IC803 (4-30)
MODE CONTROL
IC801 (4-29)
INITIAL RESET, BACKUP VCC
IC802 (4-29)
LANC I/O
CN975
BATT LI 3V
DIAL A
DIAL B
KEY AD2
KEY AD4
KEY AD5
KEY AD6
BEEP SIG
XCS LCD DRIVER
LCD COM/XDATA
OSD SO
XOSD SCK
EVER 3V
EVER 3.0V
LCD LED ON
TALLY
MODE CONTROL(1)
(SEE PAGE 3-14)
IC803 ㊵
20.0 MHz
2.9Vp-p
IC803 ㊸
32.768 kHz
3.0Vp-p
X801
20MHz
X802
32.768KHz
20MHz OUT
20MHz IN
32kHz IN
32kHz OUT
XCS LCD DRIVER
LCD COM/XDATA
LCD LED ON
TALLY LED
CN972
XSIRCS SIG
SHOE ID
XCAM MODE SW
XVTR MODE SW
XSIRCS IN
XVTR MODE SW
CN997
PHOTO FREEZ
PHOTO START
CN980
KEY AD0
KEY AD1
XIR LED ON
LED 5V
XCAM MODE SW
XCAM +STBY SW
XS/S SW
XEJECT SW
XLANC JACK IN
LANC DC
LANC SIG
XPHOTO FREEZ
XIR LED ON
SW LED ON
XCAM +STBY SW
XS/S SW
XEJECT SW
XLANC JACK IN
LANC OUT
LANC IN
XLANC PWR ON
XLANC ON
D804
VTR UNREG
UNREG
LANC DC
LANC IN/OUT
DATA
DATA
WAKE
POWER
VCC
Q806
EVER 3.0V
VDD
AVDD
XRESET
XLI PRE END
BATT IN
MOD
Q803
(TR MODEL)
ACV SENS
BATT SENS
V OUT
V IN
RESET
PREEND
CS
VRO
V BAT
D802
D801
EVER 3.0V
LI 3V
CN981
BATT UNREG
VTR UNREG
POWER
(DD-134)
(SEE PAGE 3-26)
XCS VC
SYS V
DEW
XCC DOWN
SWP
HI SI
HI SO
XHI SCK
XSYS RST
XCS VC
SYS V
DEW AD
XCC DOWN
SWP
HI SI
HI SO
XHI SCK
VTR/CAMERA CONTROL
(SEE PAGE 3-9)
MELODY ENV
MELODY
EXT MIC DET
XWIND ON
HP SENS
JACK MONO
XF TALLY LED
IR ON
SIRCS ENV
Q801,803
(TRV MODEL)
MOD
BEEP SIG
EXT MIC DET
XWIND ON
HP SENS
JACK MONO
IR ON
SIRCS PWM
Q802,805
(LASER LINK MODEL)
AUDIO(1)
(SEE PAGE 3-18)
CN972
XF TALLY
AUDIO(2)
(MA-374/375)
(SEE PAGE 3-19)
XSYS RST
XSYS RST
XCS OSD
OSD SO
XOSD SCK
V JACK IN
XS JACK IN
XCS OSD
OSD SO
XOSD SCK
V JACK IN
XS JACK IN
CAM DD ON
CAMERA/VIDEO(2)
(SEE PAGE 3-7)
CAMERA/VIDEO(1)
(SEE PAGE 3-6)
HOTSHOE ID1
CAM DD ON
IB SI
IB SO
I/F BLOCK
Q804
CHARGE INH
INIT CHARGE ON
FAST CHARGE
BATT/XEXT
SHOE ON
VTR DD ON
CN981
BATT SIG
SHOE ON
CN981
CAM DD ON
DC PACK SW
INIT CHARGE ON
FAST CHARGE
BATT/XEXT SW
VTR DD ON
POWER
(DD-134)
(SEE PAGE 3-26)
16

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
LASER LINK MODEL : CCD-TR918E/TRV87E

3-9. AUDIO BLOCK DIAGRAM (1/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

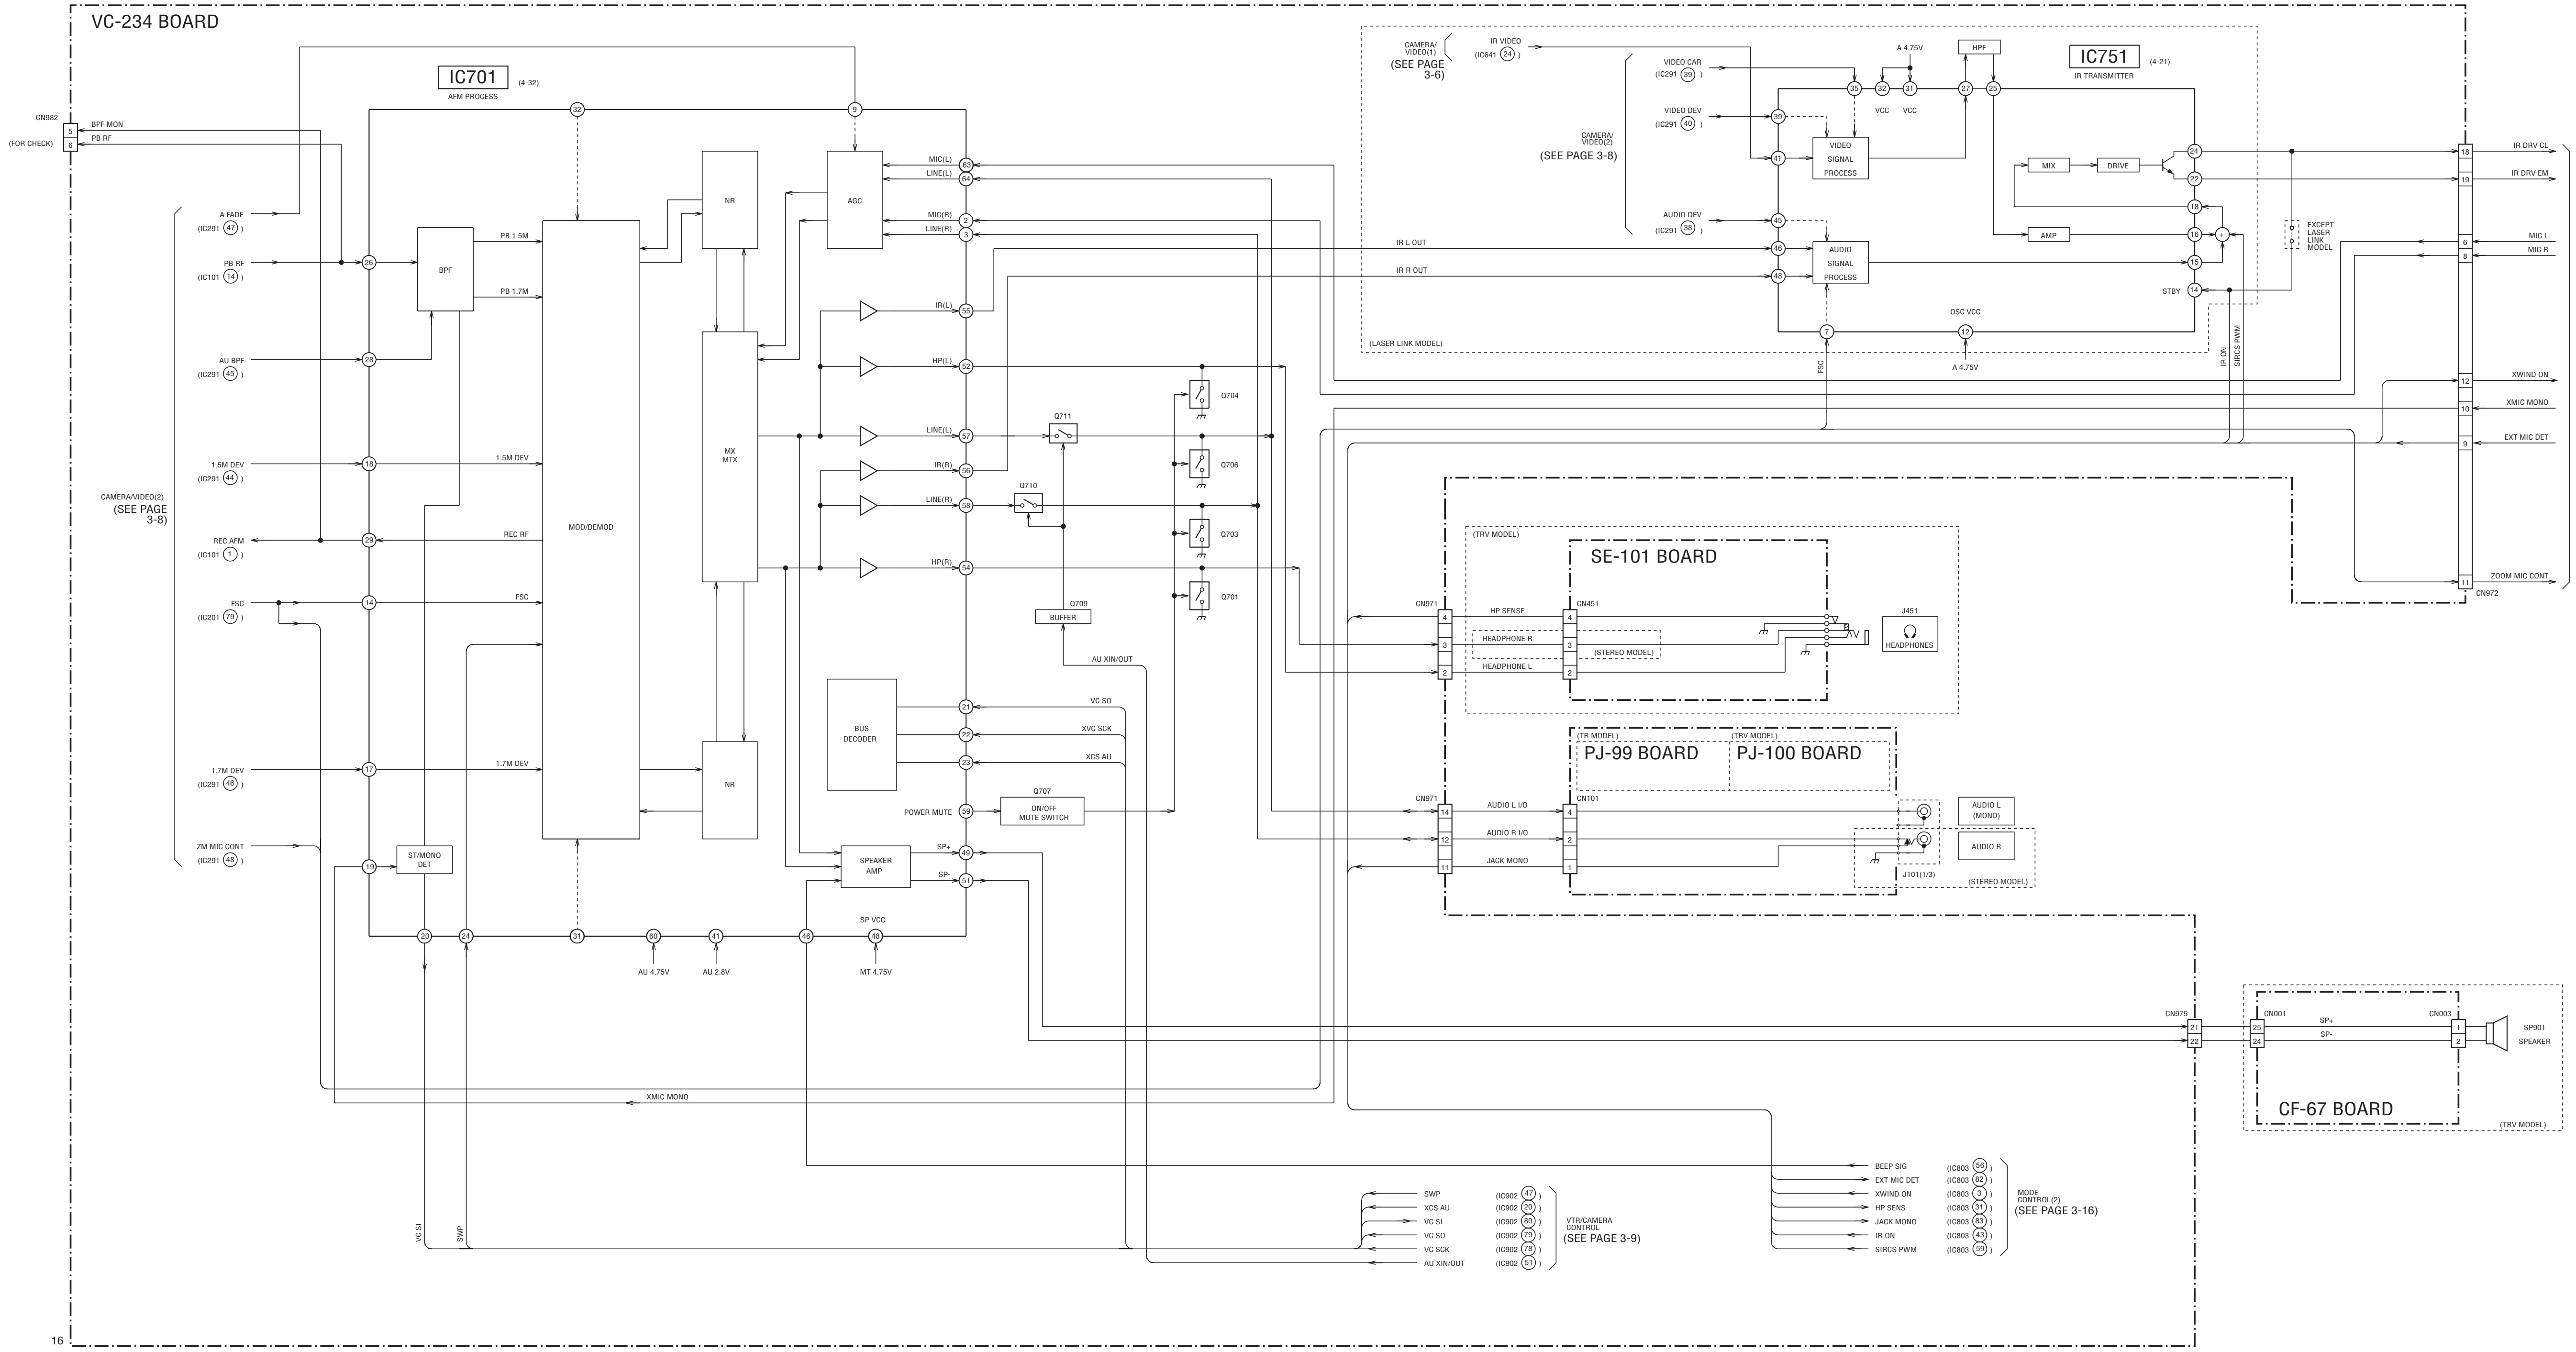
VC-234 BOARD
IC701 (4-32)
AFM PROCESS
CN982
BPF MON
PB RF
(FOR CHECK)
A FADE (IC291 47)
PB RF (IC101 14)
AU BPF (IC291 45)
1.5M DEV (IC291 44)
CAMERA/VIDEO(2) (SEE PAGE 3-8)
REC AFM (IC101 1)
FSC (IC201 79)
1.7M DEV (IC291 46)
ZM MIC CONT (IC291 48)
BPF
PB 1.5M
PB 1.7M
1.5M DEV
REC RF
FSC
1.7M DEV
MOD/DEMOD
ST/MONO DET
NR
AGC
MX MTX
NR
MIC(L)
LINE(L)
MIC(R)
LINE(R)
IR(L)
HP(L)
LINE(L)
IR(R)
LINE(R)
HP(R)
Q711
Q710
Q709
BUFFER
Q704
Q706
Q703
Q701
AU XIN/OUT
BUS DECODER
VC SO
XVC SCK
XCS AU
POWER MUTE
Q707
ON/OFF MUTE SWITCH
SPEAKER AMP
SP+
SP-
SP VCC
AU 4.75V
AU 2.8V
MT 4.75V
XMIC MONO
VC SI
SWP
16
CAMERA/VIDEO(1) (SEE PAGE 3-6)
IR VIDEO (IC641 24)
VIDEO CAR (IC291 39)
VIDEO DEV (IC291 40)
CAMERA/VIDEO(2) (SEE PAGE 3-8)
AUDIO DEV (IC291 38)
IR L OUT
IR R OUT
A 4.75V
HPF
IC751 (4-21)
IR TRANSMITTER
VCC
VCC
VIDEO SIGNAL PROCESS
AUDIO SIGNAL PROCESS
MIX
DRIVE
AMP
STBY
OSC VCC
A 4.75V
FSC
(LASER LINK MODEL)
IR ON
SIRCS PWM
EXCEPT LASER LINK MODEL
IR DRV CL
IR DRV EM
MIC L
MIC R
AUDIO(2) (MA-374/375) (SEE PAGE 3-19)
XWIND ON
XMIC MONO
EXT MIC DET
ZOOM MIC CONT
CN972
(TRV MODEL)
SE-101 BOARD
CN971
HP SENSE
HEADPHONE R
HEADPHONE L
CN451
(STEREO MODEL)
J451
HEADPHONES
(TR MODEL)
(TRV MODEL)
PJ-99 BOARD
PJ-100 BOARD
CN971
AUDIO L I/O
AUDIO R I/O
JACK MONO
CN101
AUDIO L (MONO)
AUDIO R
J101(1/3)
(STEREO MODEL)
CN975
CN001
CN003
SP+
SP-
SP901
SPEAKER
CF-67 BOARD
(TRV MODEL)
SWP (IC902 47)
XCS AU (IC902 20)
VC SI (IC902 80)
VC SO (IC902 79)
VC SCK (IC902 78)
AU XIN/OUT (IC902 51)
VTR/CAMERA CONTROL (SEE PAGE 3-9)
BEEP SIG (IC803 56)
EXT MIC DET (IC803 82)
XWIND ON (IC803 3)
HP SENS (IC803 31)
JACK MONO (IC803 83)
IR ON (IC803 43)
SIRCS PWM (IC803 59)
MODE CONTROL(2) (SEE PAGE 3-16)

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
STEREO MODEL : CCD-TR918E/TRV87E
MONAURAL MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E
LASER LINK MODEL : CCD-TR918E/TRV87E

3-10. AUDIO BLOCK DIAGRAM (2/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

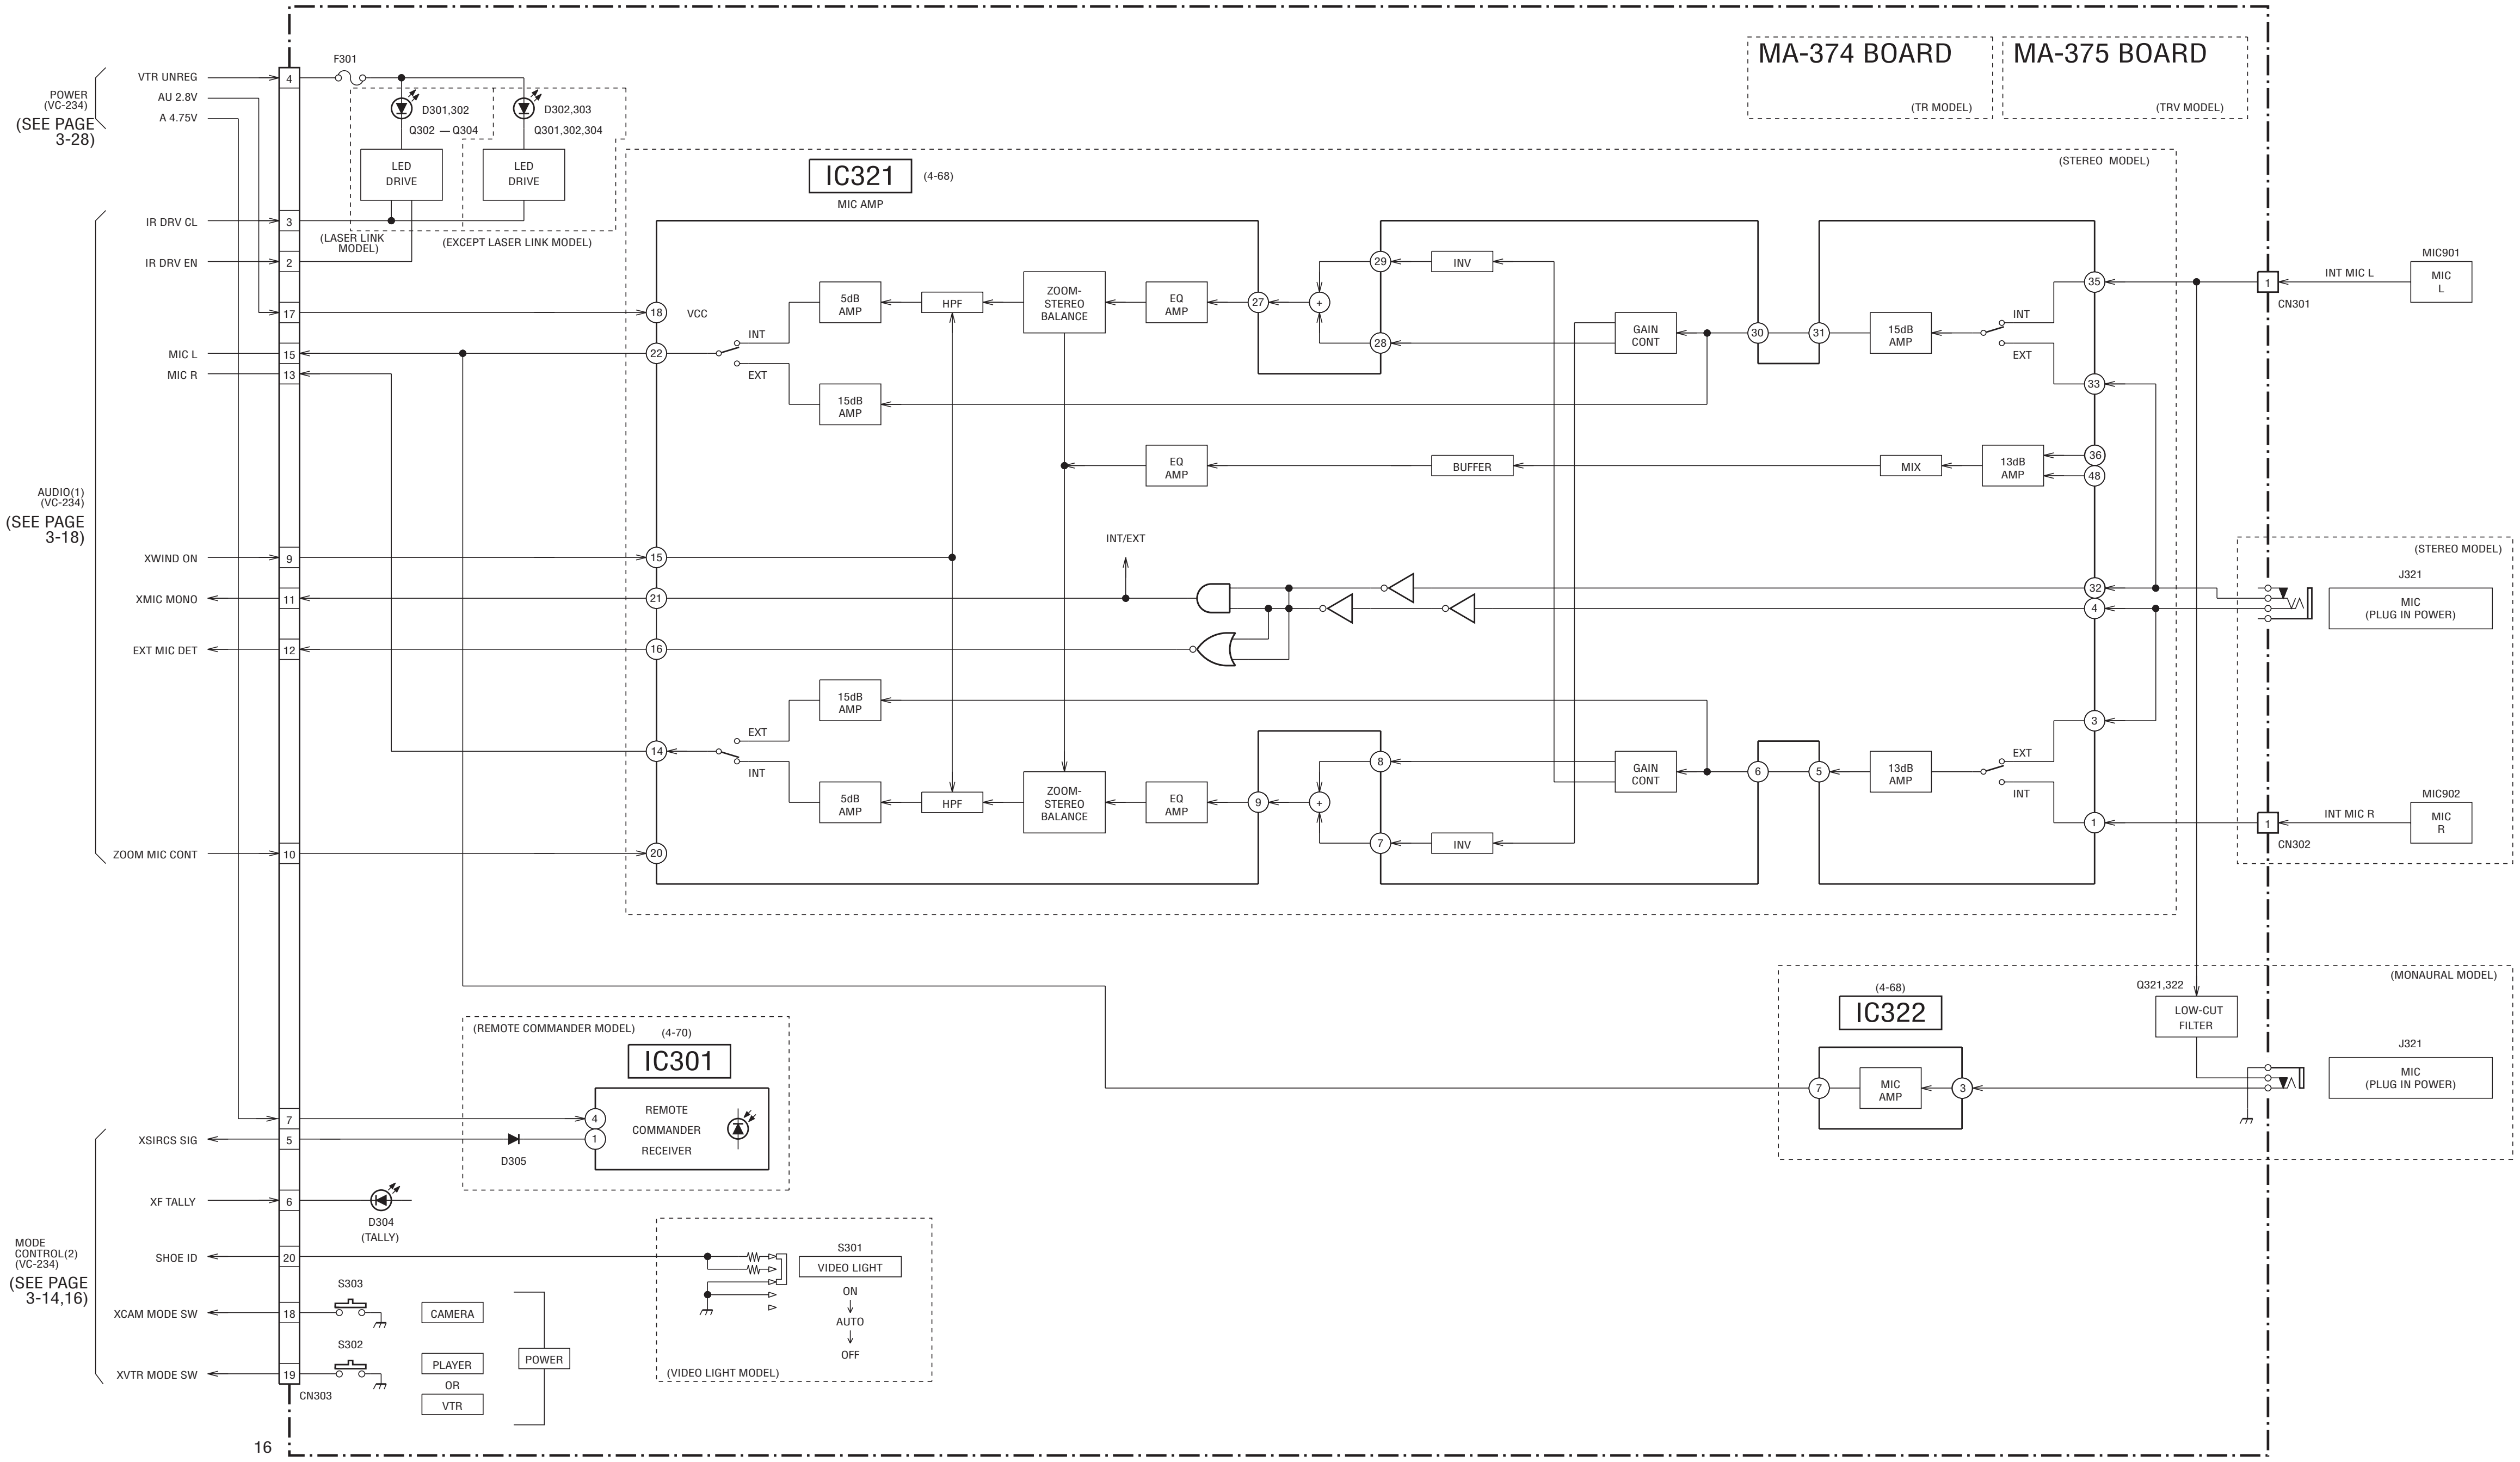
MA-374 BOARD
(TR MODEL)
MA-375 BOARD
(TRV MODEL)
POWER (VC-234)
(SEE PAGE 3-28)
VTR UNREG
AU 2.8V
A 4.75V
F301
D301,302
Q302 — Q304
D302,303
Q301,302,304
LED DRIVE
LED DRIVE
(LASER LINK MODEL)
(EXCEPT LASER LINK MODEL)
IR DRV CL
IR DRV EN
MIC L
MIC R
AUDIO(1) (VC-234)
(SEE PAGE 3-18)
XWIND ON
XMIC MONO
EXT MIC DET
ZOOM MIC CONT
IC321
(4-68)
MIC AMP
(STEREO MODEL)
VCC
INT
EXT
5dB AMP
HPF
ZOOM-STEREO BALANCE
EQ AMP
15dB AMP
INV
GAIN CONT
13dB AMP
BUFFER
MIX
INT/EXT
INT MIC L
MIC901
MIC L
CN301
J321
MIC (PLUG IN POWER)
INT MIC R
MIC902
MIC R
CN302
IC322
(4-68)
Q321,322
LOW-CUT FILTER
(MONAURAL MODEL)
MIC AMP
(REMOTE COMMANDER MODEL)
(4-70)
IC301
REMOTE COMMANDER RECEIVER
D305
XSIRCS SIG
XF TALLY
D304 (TALLY)
MODE CONTROL(2) (VC-234)
(SEE PAGE 3-14,16)
SHOE ID
XCAM MODE SW
XVTR MODE SW
S303
S302
CAMERA
PLAYER
OR
VTR
POWER
S301
VIDEO LIGHT
ON
AUTO
OFF
(VIDEO LIGHT MODEL)
CN303
16

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
STEREO MODEL : CCD-TR918E/TRV87E
MONAURAL MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E
LASER LINK MODEL : CCD-TR918E/TRV87E
REMOTE COMMANDER MODEL : CCD-TR427E/TR617E/TR717E/TR918E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
VIDEO LIGHT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E

3-11. LCD BLOCK DIAGRAM (TRV MODEL)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

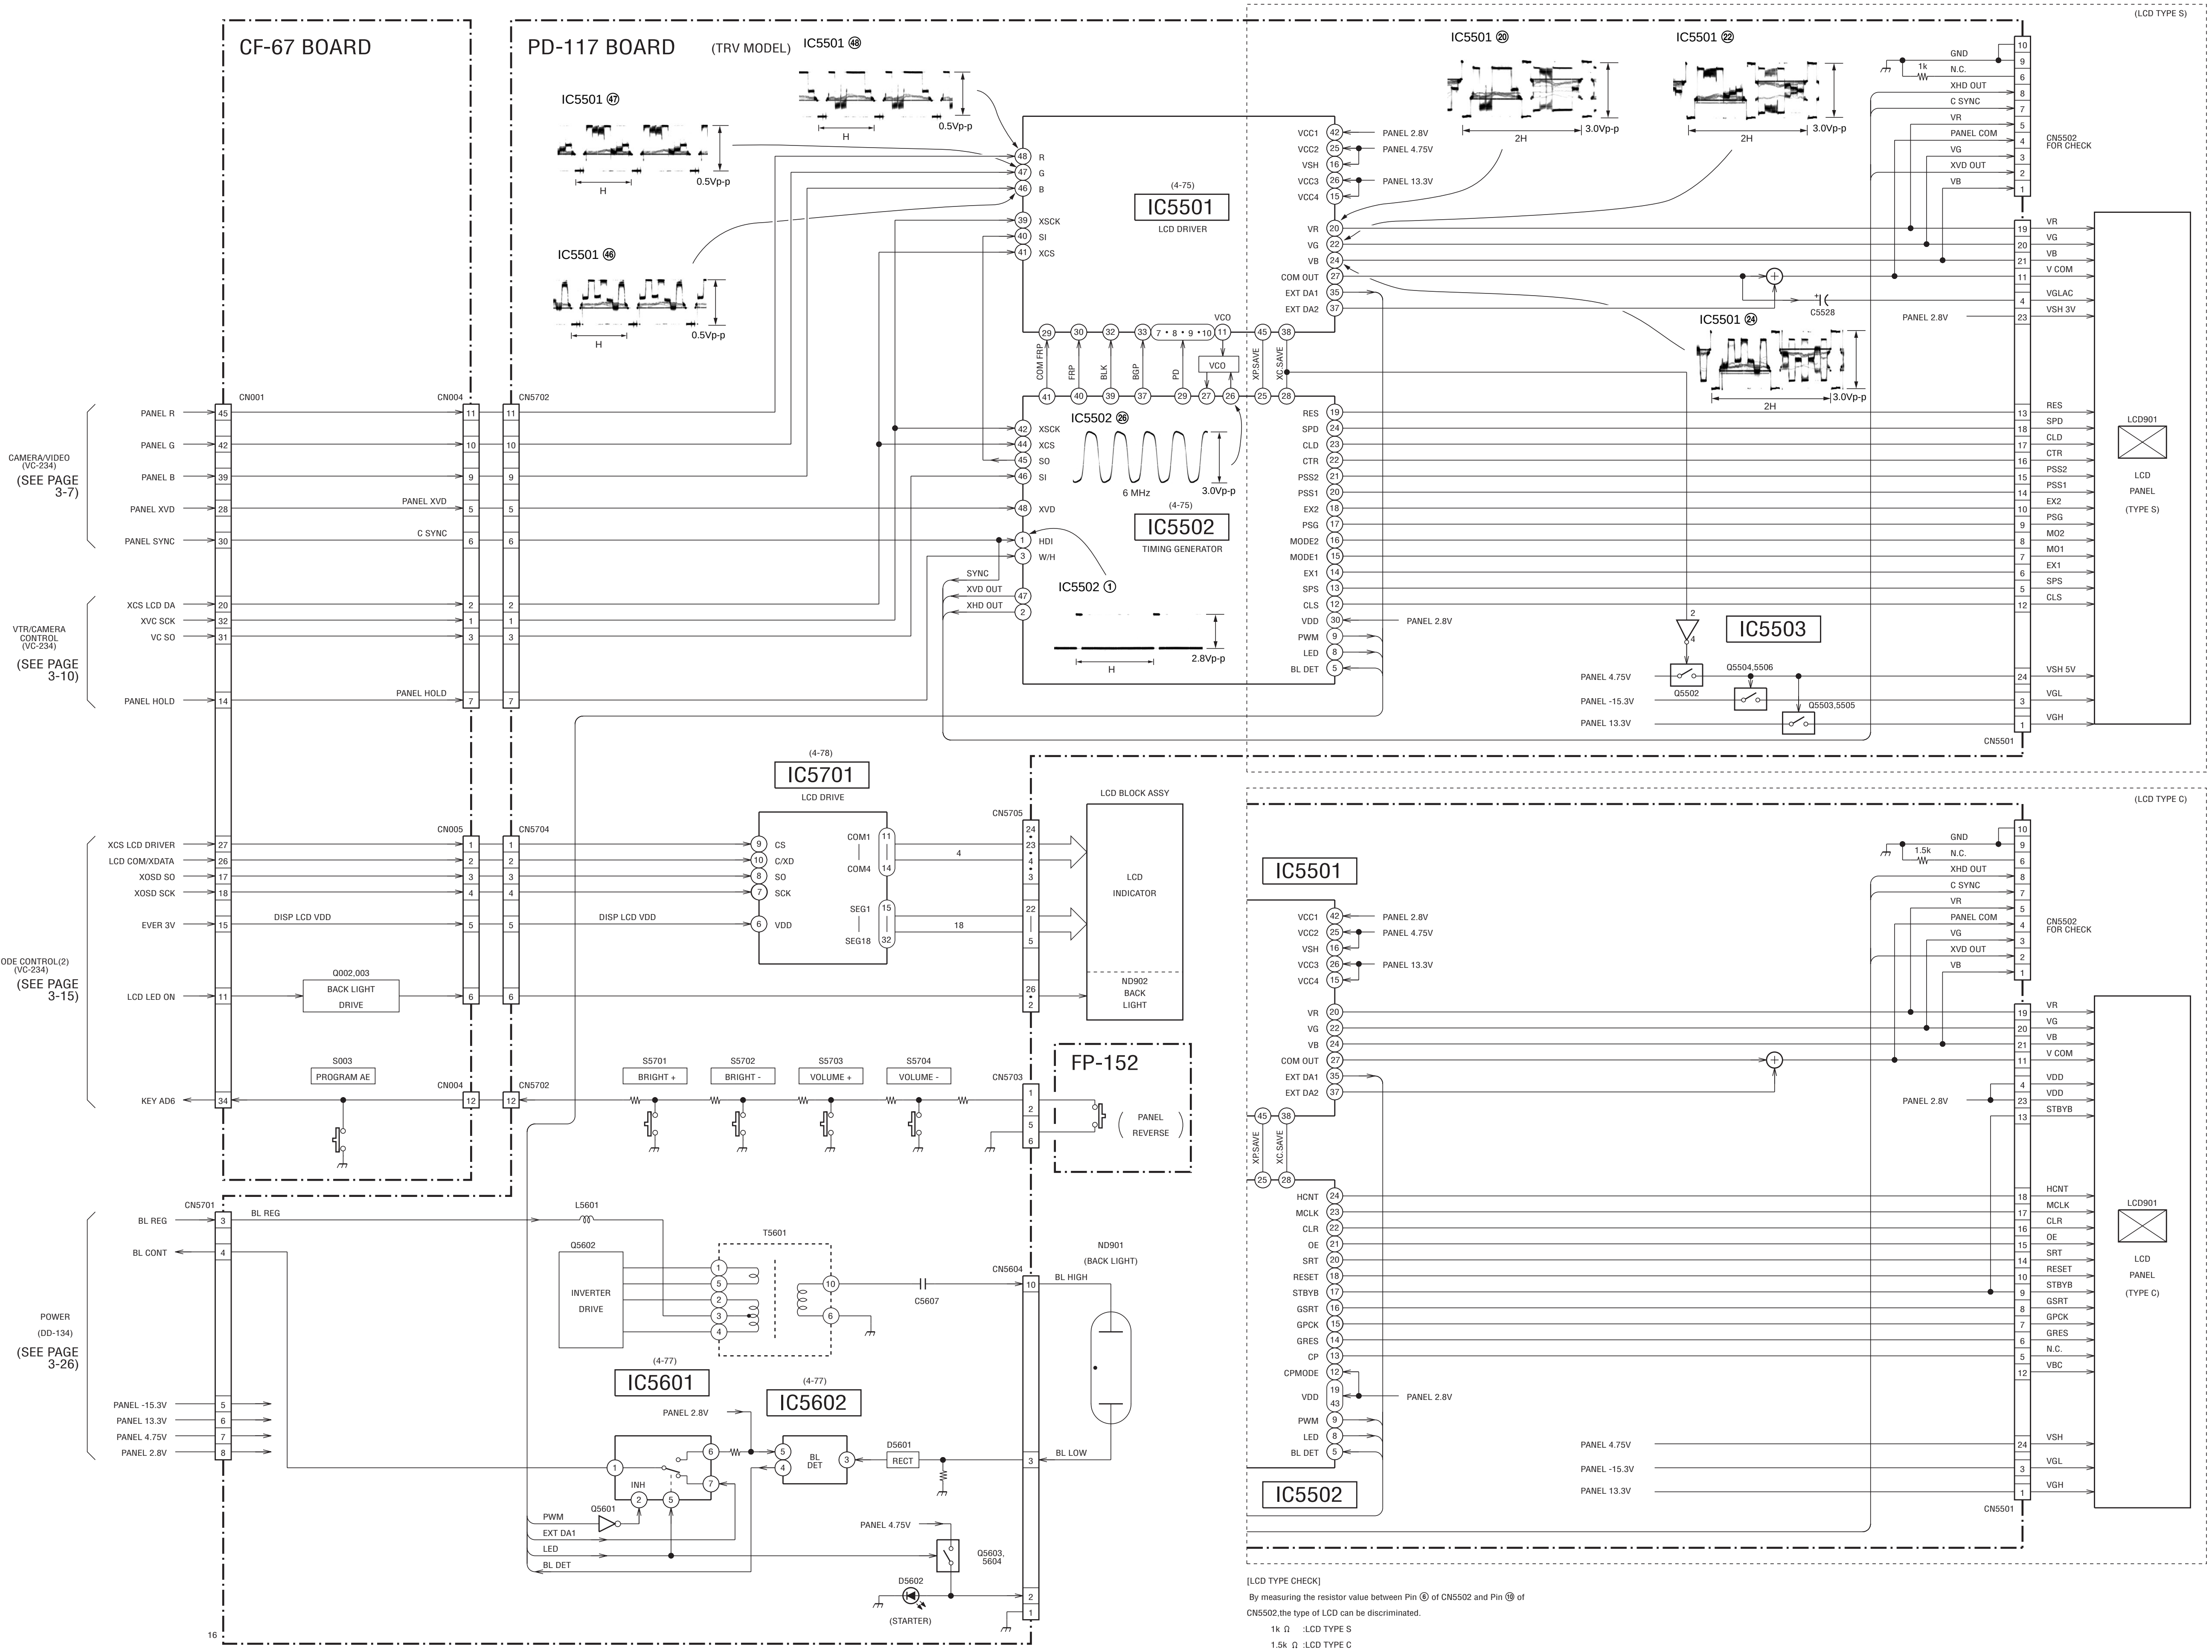
CF-67 BOARD
PD-117 BOARD
(TRV MODEL)
IC5501 ㊽
IC5501 ㊼
IC5501 ㊻
0.5Vp-p
H
IC5501 ⑳
IC5501 ㉒
IC5501 ㉔
3.0Vp-p
2H
(LCD TYPE S)
(LCD TYPE C)
(4-75)
IC5501
LCD DRIVER
IC5502 ㉖
6 MHz
3.0Vp-p
(4-75)
IC5502
TIMING GENERATOR
IC5502 ①
2.8Vp-p
IC5503
Q5502
Q5504,5506
Q5503,5505
C5528
VCO
R
G
B
XSCK
SI
XCS
VCC1
VCC2
VSH
VCC3
VCC4
VR
VG
VB
COM OUT
EXT DA1
EXT DA2
COM FRP
FRP
BLK
BGP
PD
XP.SAVE
XC.SAVE
SO
XVD
HDI
W/H
SYNC
XVD OUT
XHD OUT
RES
SPD
CLD
CTR
PSS2
PSS1
EX2
PSG
MODE2
MODE1
EX1
SPS
CLS
VDD
PWM
LED
BL DET
PANEL 2.8V
PANEL 4.75V
PANEL 13.3V
PANEL -15.3V
GND
N.C.
XHD OUT
C SYNC
PANEL COM
VB
1k
1.5k
CN5502
FOR CHECK
V COM
VGLAC
VSH 3V
VSH 5V
VGL
VGH
CN5501
LCD901
LCD
PANEL
(TYPE S)
(TYPE C)
MO2
MO1
CN001
CN004
CN5702
PANEL R
PANEL G
PANEL B
PANEL XVD
PANEL SYNC
C SYNC
CAMERA/VIDEO
(VC-234)
(SEE PAGE 3-7)
XCS LCD DA
XVC SCK
VC SO
VTR/CAMERA
CONTROL
(VC-234)
(SEE PAGE 3-10)
PANEL HOLD
(4-78)
IC5701
LCD DRIVE
CS
C/XD
SO
SCK
VDD
COM1
COM4
SEG1
SEG18
CN005
CN5704
CN5705
XCS LCD DRIVER
LCD COM/XDATA
XOSD SO
XOSD SCK
EVER 3V
DISP LCD VDD
MODE CONTROL(2)
(VC-234)
(SEE PAGE 3-15)
LCD LED ON
Q002,003
BACK LIGHT
DRIVE
LCD BLOCK ASSY
LCD
INDICATOR
ND902
BACK
LIGHT
S003
PROGRAM AE
KEY AD6
S5701
BRIGHT +
S5702
BRIGHT -
S5703
VOLUME +
S5704
VOLUME -
CN5703
FP-152
PANEL
REVERSE
CN5701
BL REG
BL CONT
POWER
(DD-134)
(SEE PAGE 3-26)
L5601
Q5602
INVERTER
DRIVE
T5601
C5607
CN5604
ND901
(BACK LIGHT)
BL HIGH
BL LOW
(4-77)
IC5601
(4-77)
IC5602
BL
DET
D5601
RECT
INH
Q5601
PWM
EXT DA1
LED
BL DET
Q5603,
5604
D5602
(STARTER)
HCNT
MCLK
CLR
OE
SRT
RESET
STBYB
GSRT
GPCK
GRES
CP
CPMODE
VBC
16

[LCD TYPE CHECK]

By measuring the resistor value between Pin ⑥ of CN5502 and Pin ⑩ of CN5502,the type of LCD can be discriminated.

1k Ω :LCD TYPE S

1.5k Ω :LCD TYPE C

TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

3-12. EVF BLOCK DIAGRAM

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

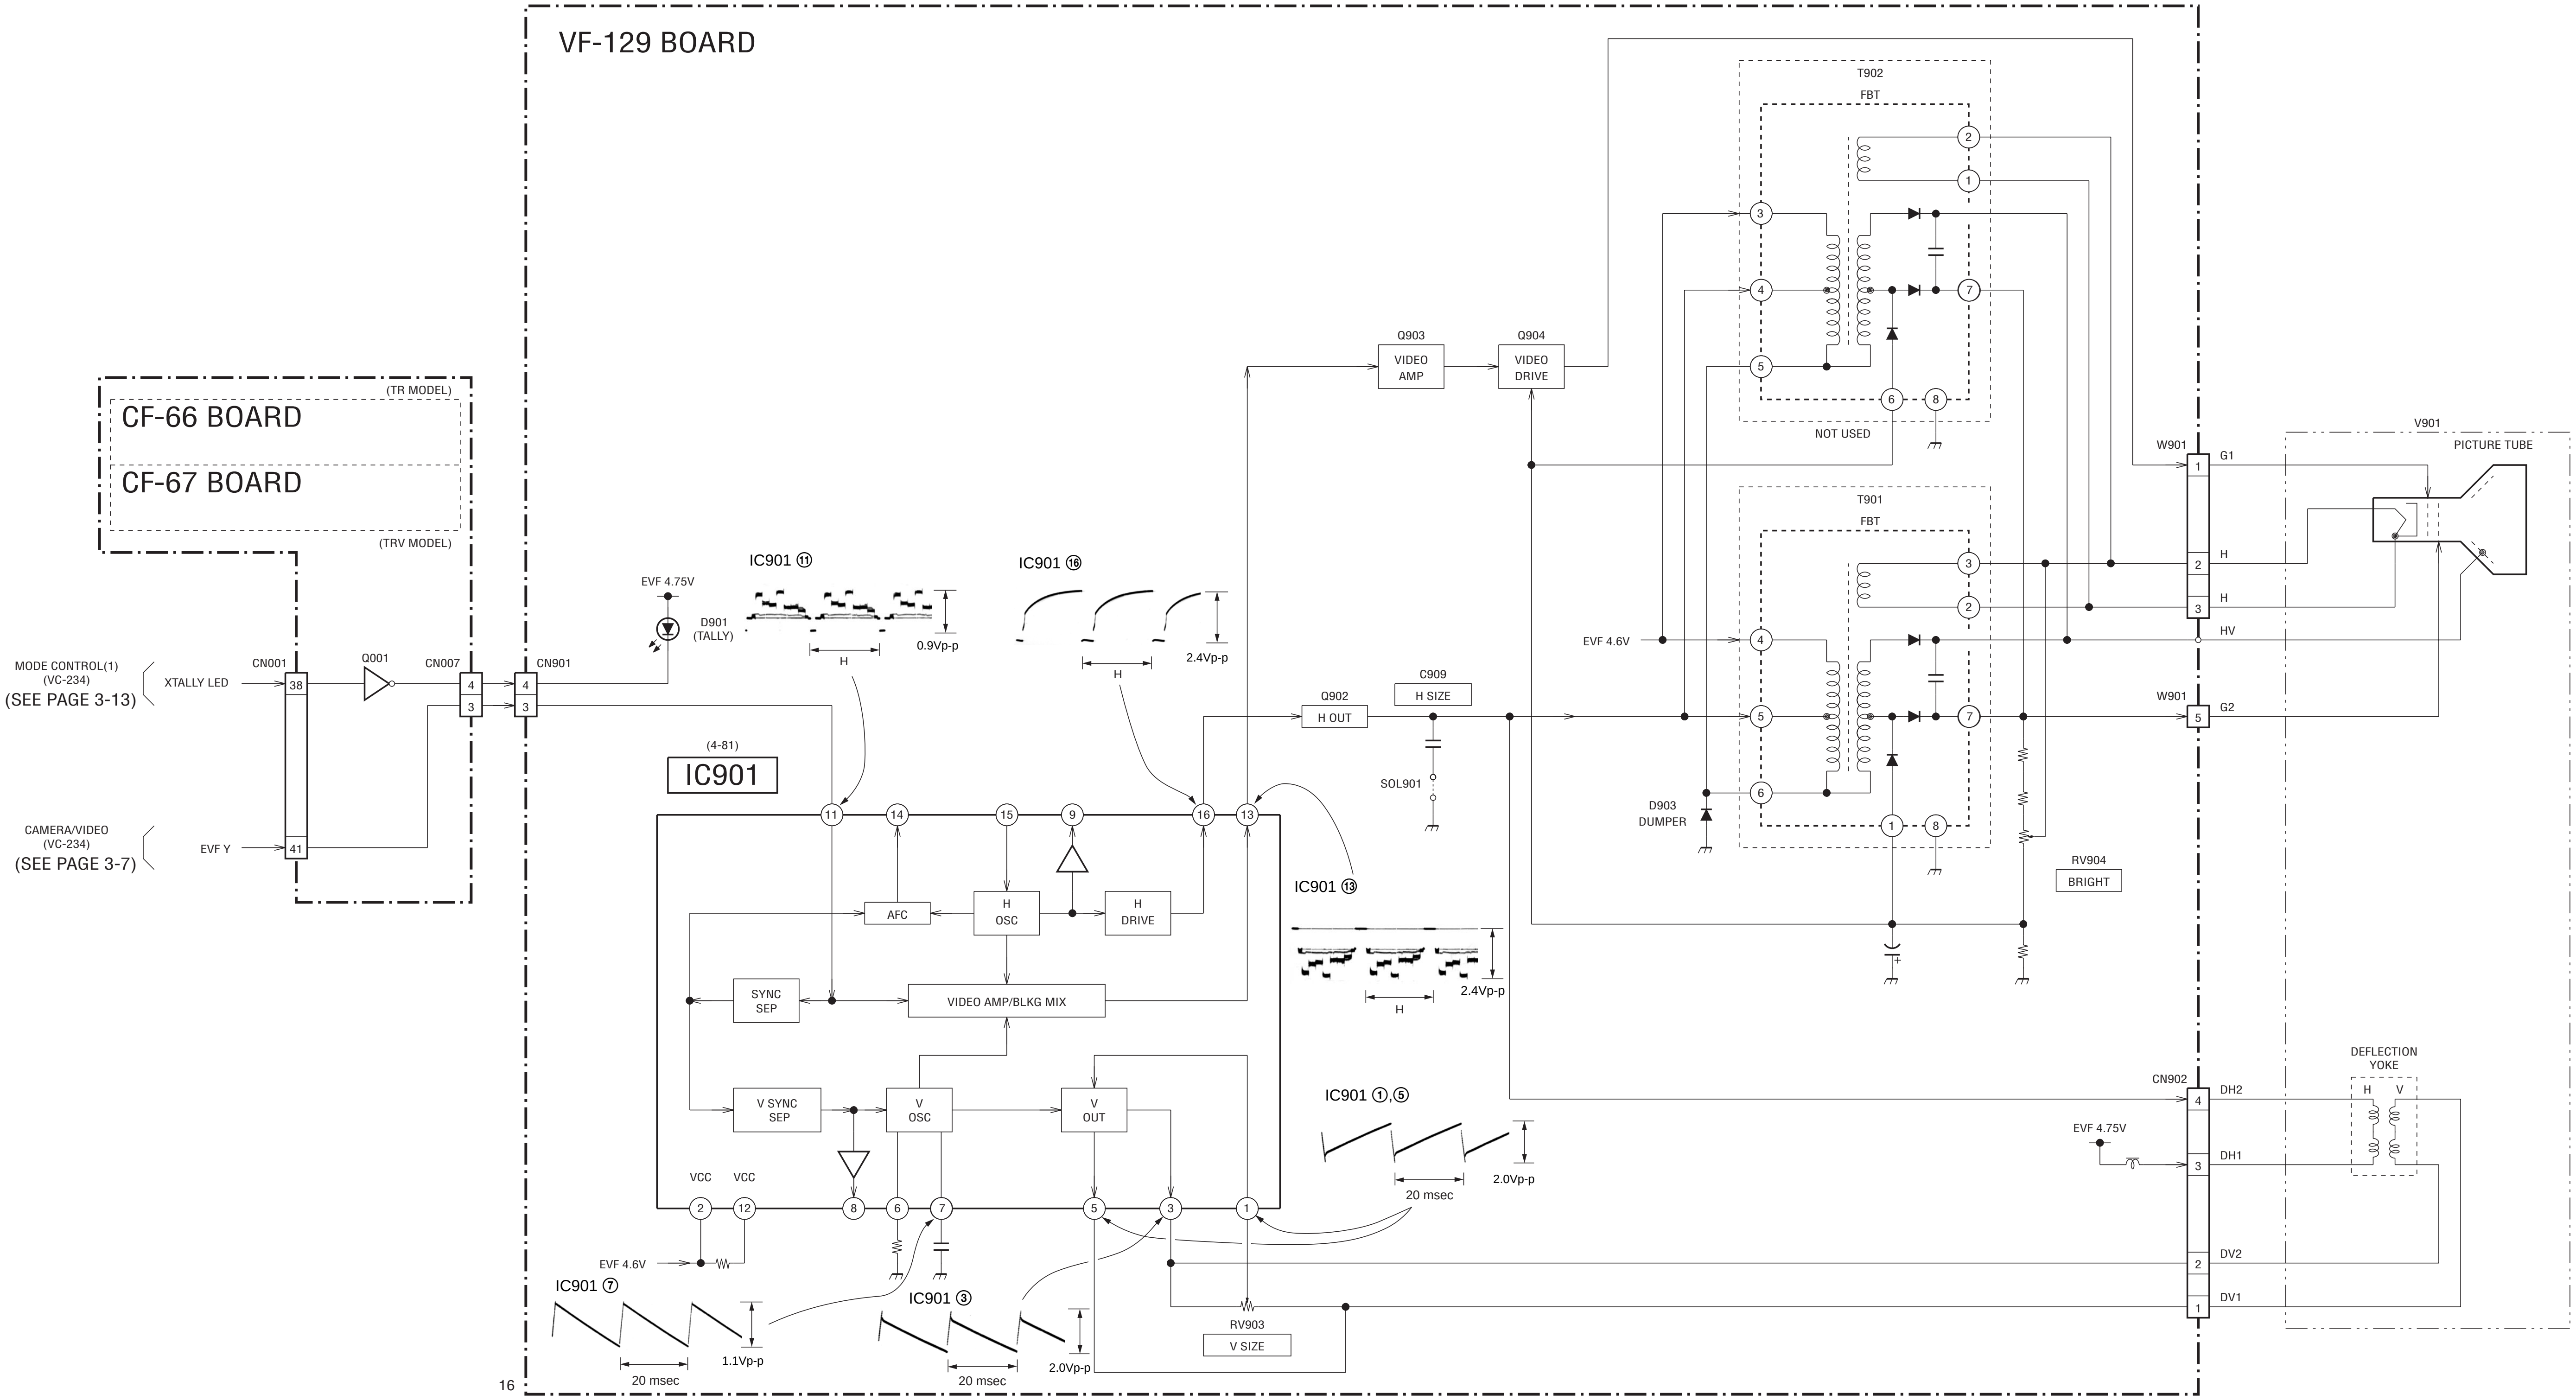
VF-129 BOARD
CF-66 BOARD
(TR MODEL)
CF-67 BOARD
(TRV MODEL)
MODE CONTROL(1)
(VC-234)
(SEE PAGE 3-13)
XTALLY LED
CAMERA/VIDEO
(VC-234)
(SEE PAGE 3-7)
EVF Y
CN001
Q001
CN007
CN901
EVF 4.75V
D901
(TALLY)
IC901 ⑪
0.9Vp-p
H
IC901 ⑯
2.4Vp-p
H
(4-81)
IC901
AFC
H OSC
H DRIVE
SYNC SEP
VIDEO AMP/BLKG MIX
V SYNC SEP
V OSC
V OUT
VCC
VCC
EVF 4.6V
IC901 ⑦
1.1Vp-p
20 msec
IC901 ③
2.0Vp-p
20 msec
RV903
V SIZE
IC901 ⑬
2.4Vp-p
H
IC901 ①,⑤
2.0Vp-p
20 msec
Q902
H OUT
C909
H SIZE
SOL901
D903
DUMPER
EVF 4.6V
Q903
VIDEO AMP
Q904
VIDEO DRIVE
T902
FBT
NOT USED
T901
FBT
RV904
BRIGHT
W901
G1
H
H
HV
W901
G2
V901
PICTURE TUBE
CN902
DH2
DH1
DV2
DV1
EVF 4.75V
DEFLECTION YOKE
H
V
16

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

3-13. POWER BLOCK DIAGRAM (1/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

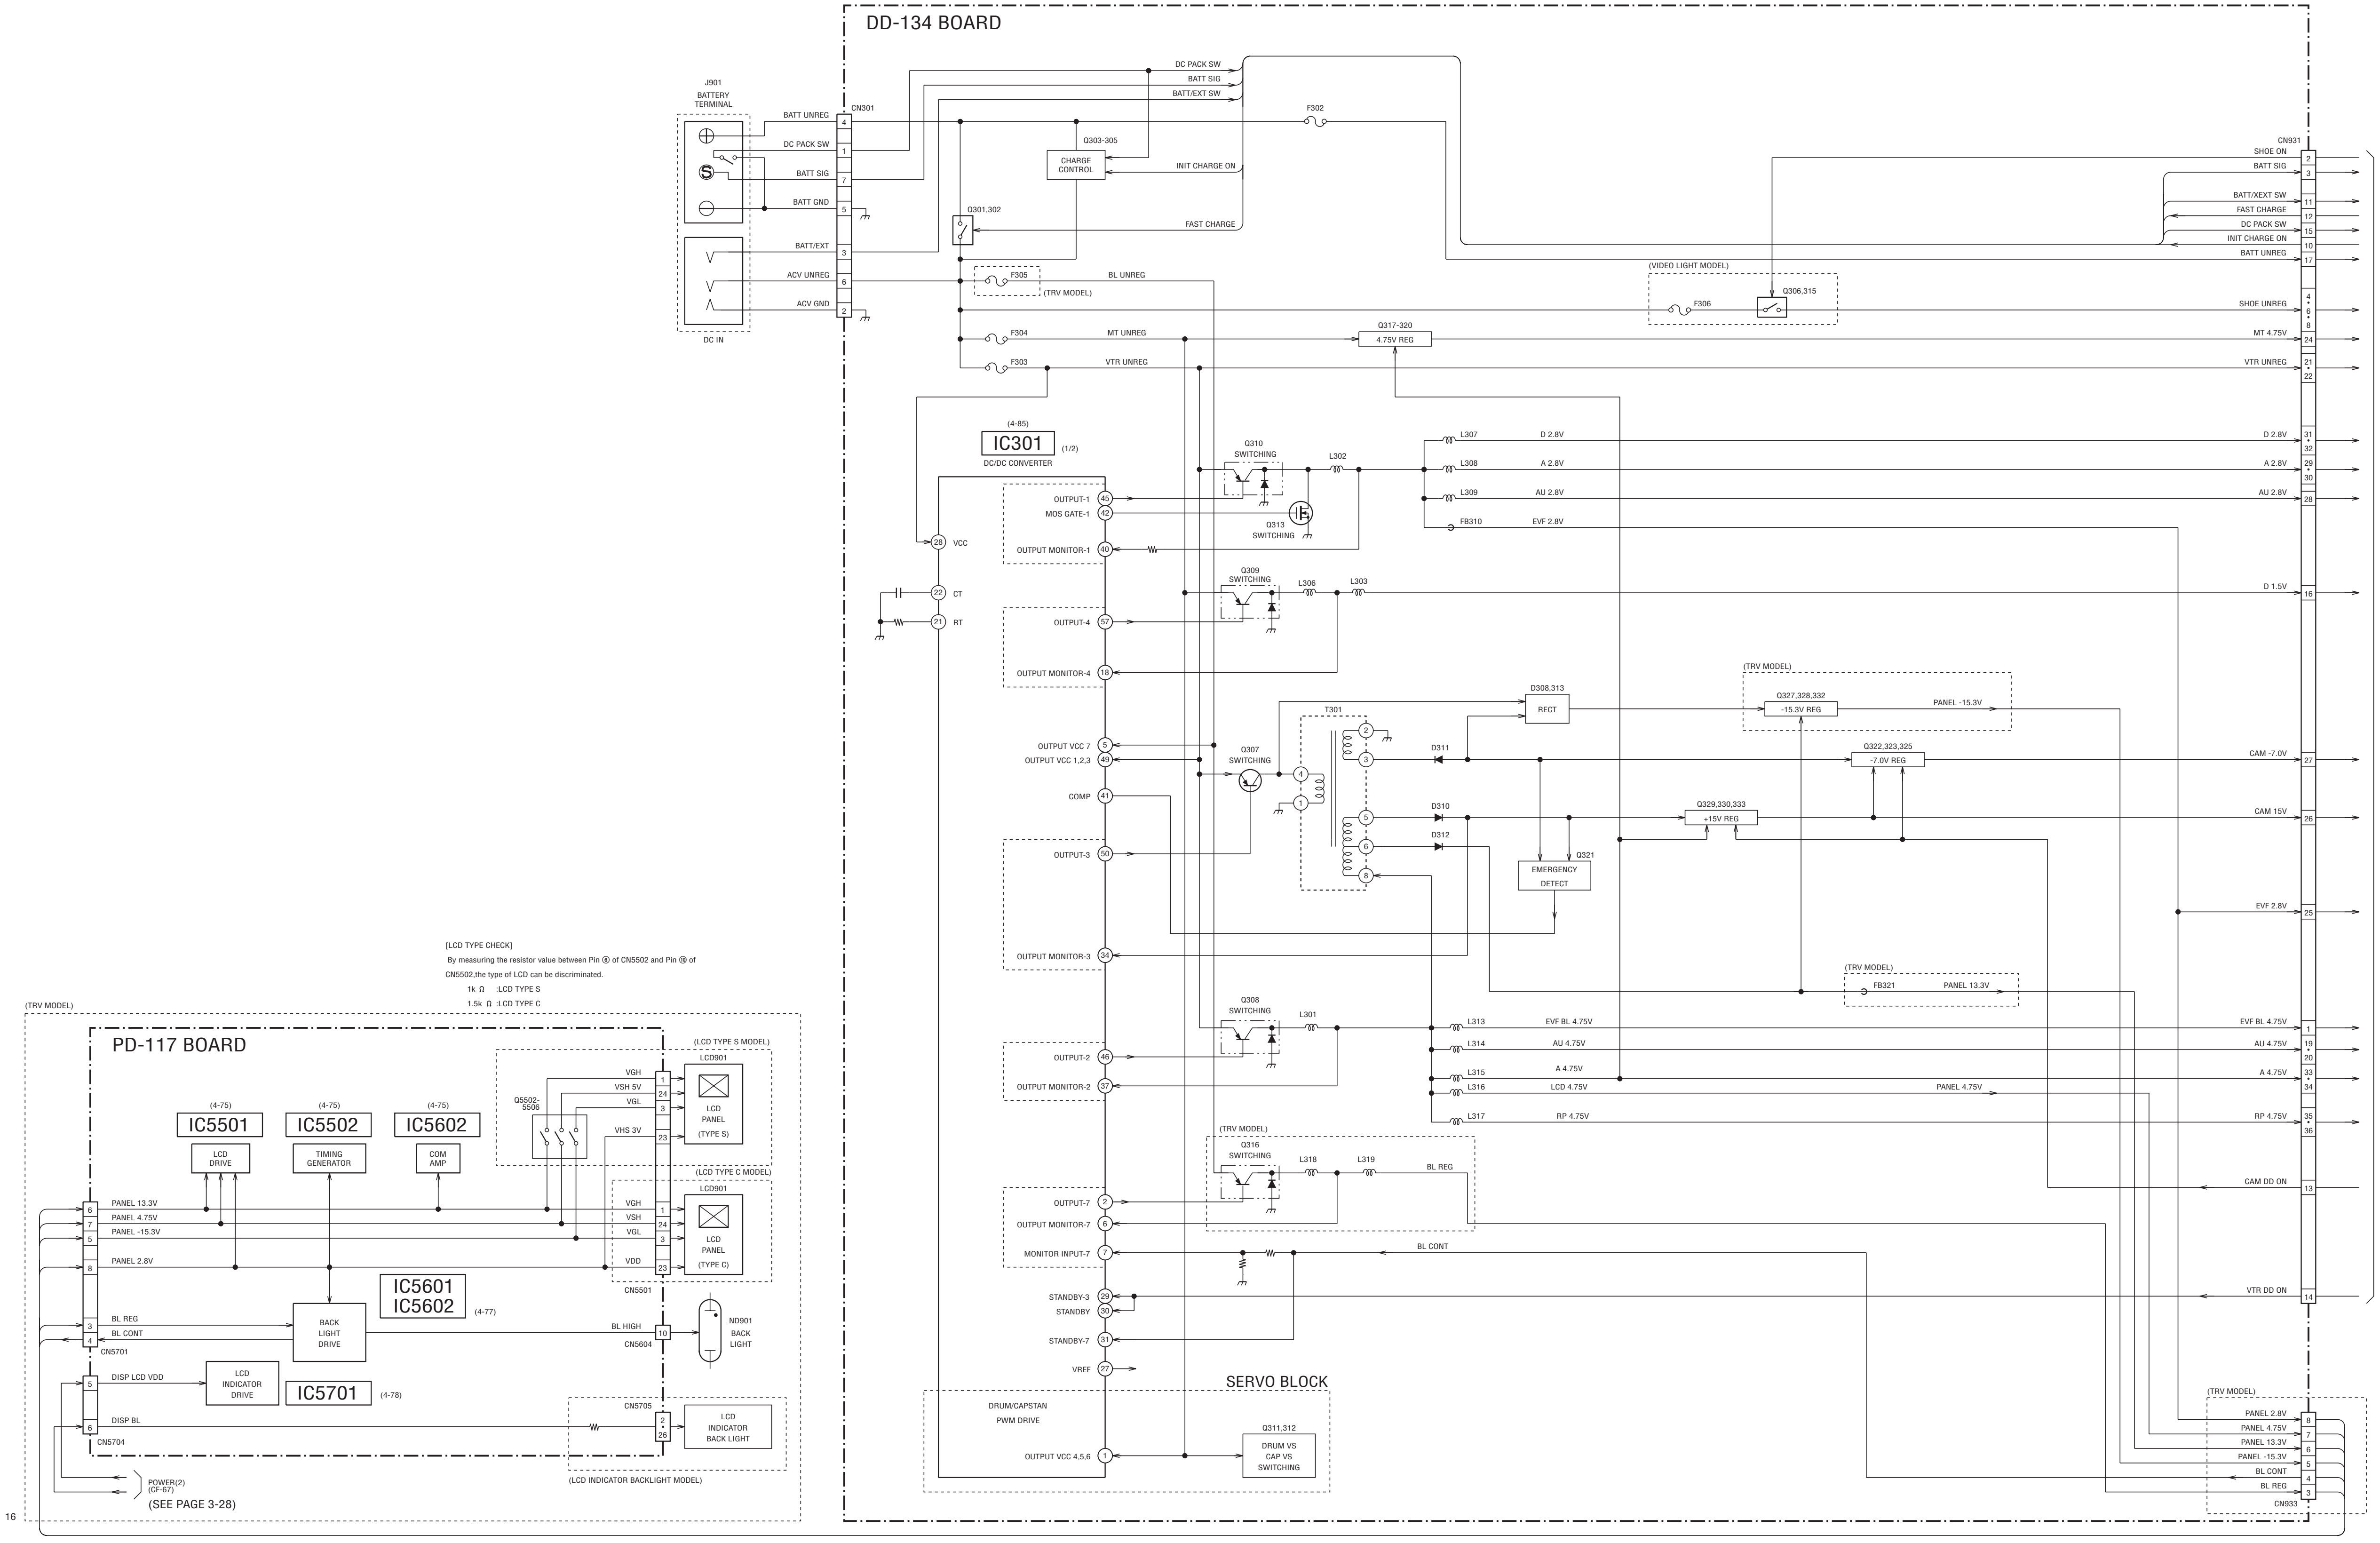
DD-134 BOARD
J901
BATTERY TERMINAL
DC IN
CN301
BATT UNREG
DC PACK SW
BATT SIG
BATT GND
BATT/EXT
ACV UNREG
ACV GND
BATT/EXT SW
Q303-305
CHARGE CONTROL
INIT CHARGE ON
FAST CHARGE
Q301,302
F302
F305
(TRV MODEL)
BL UNREG
F304
MT UNREG
F303
VTR UNREG
Q317-320
4.75V REG
(VIDEO LIGHT MODEL)
F306
Q306,315
CN931
SHOE ON
BATT SIG
BATT/XEXT SW
FAST CHARGE
DC PACK SW
INIT CHARGE ON
BATT UNREG
SHOE UNREG
MT 4.75V
VTR UNREG
(4-85)
IC301
(1/2)
DC/DC CONVERTER
OUTPUT-1
MOS GATE-1
OUTPUT MONITOR-1
VCC
CT
RT
OUTPUT-4
OUTPUT MONITOR-4
OUTPUT VCC 7
OUTPUT VCC 1,2,3
COMP
OUTPUT-3
OUTPUT MONITOR-3
OUTPUT-2
OUTPUT MONITOR-2
OUTPUT-7
OUTPUT MONITOR-7
MONITOR INPUT-7
STANDBY-3
STANDBY
STANDBY-7
VREF
Q310
SWITCHING
Q313
SWITCHING
L302
L307
D 2.8V
L308
A 2.8V
L309
AU 2.8V
FB310
EVF 2.8V
Q309
SWITCHING
L306
L303
D 1.5V
T301
Q307
SWITCHING
D308,313
RECT
D311
D310
D312
Q321
EMERGENCY DETECT
(TRV MODEL)
Q327,328,332
-15.3V REG
PANEL -15.3V
Q322,323,325
-7.0V REG
CAM -7.0V
Q329,330,333
+15V REG
CAM 15V
EVF 2.8V
FB321
PANEL 13.3V
Q308
SWITCHING
L301
L313
EVF BL 4.75V
L314
AU 4.75V
L315
A 4.75V
L316
LCD 4.75V
PANEL 4.75V
L317
RP 4.75V
Q316
SWITCHING
L318
L319
BL REG
BL CONT
CAM DD ON
VTR DD ON
POWER(2) (VC-234)
(SEE PAGE 3-27)
SERVO BLOCK
DRUM/CAPSTAN PWM DRIVE
OUTPUT VCC 4,5,6
Q311,312
DRUM VS CAP VS SWITCHING
CN933
PANEL 2.8V
PANEL 4.75V
PANEL 13.3V
PANEL -15.3V
BL CONT
BL REG
PD-117 BOARD
(4-75)
IC5501
LCD DRIVE
IC5502
TIMING GENERATOR
IC5602
COM AMP
Q5502-5506
(LCD TYPE S MODEL)
LCD901
VGH
VSH 5V
VGL
VHS 3V
LCD PANEL (TYPE S)
(LCD TYPE C MODEL)
VSH
VDD
LCD PANEL (TYPE C)
CN5501
IC5601
IC5602
(4-77)
BACK LIGHT DRIVE
BL HIGH
CN5604
ND901
BACK LIGHT
CN5701
PANEL 13.3V
PANEL 4.75V
PANEL -15.3V
PANEL 2.8V
BL REG
BL CONT
DISP LCD VDD
LCD INDICATOR DRIVE
IC5701
(4-78)
DISP BL
CN5704
CN5705
LCD INDICATOR BACK LIGHT
(LCD INDICATOR BACKLIGHT MODEL)
POWER(2) (CF-67)
(SEE PAGE 3-28)
16

[LCD TYPE CHECK]

By measuring the resistor value between Pin ⑥ of CN5502 and Pin ⑩ of CN5502,the type of LCD can be discriminated.

1k Ω :LCD TYPE S
1.5k Ω :LCD TYPE C

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
LCD TYPE S MODEL : Refer to "LCD TYPE CHECK".
LCD TYPE C MODEL : Refer to "LCD TYPE CHECK".
LCD INDICATOR BACK LIGHT MODEL : CCD-TR918E/TRV87E
VIDEO LIGHT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E

3-14. POWER BLOCK DIAGRAM (2/2)

( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

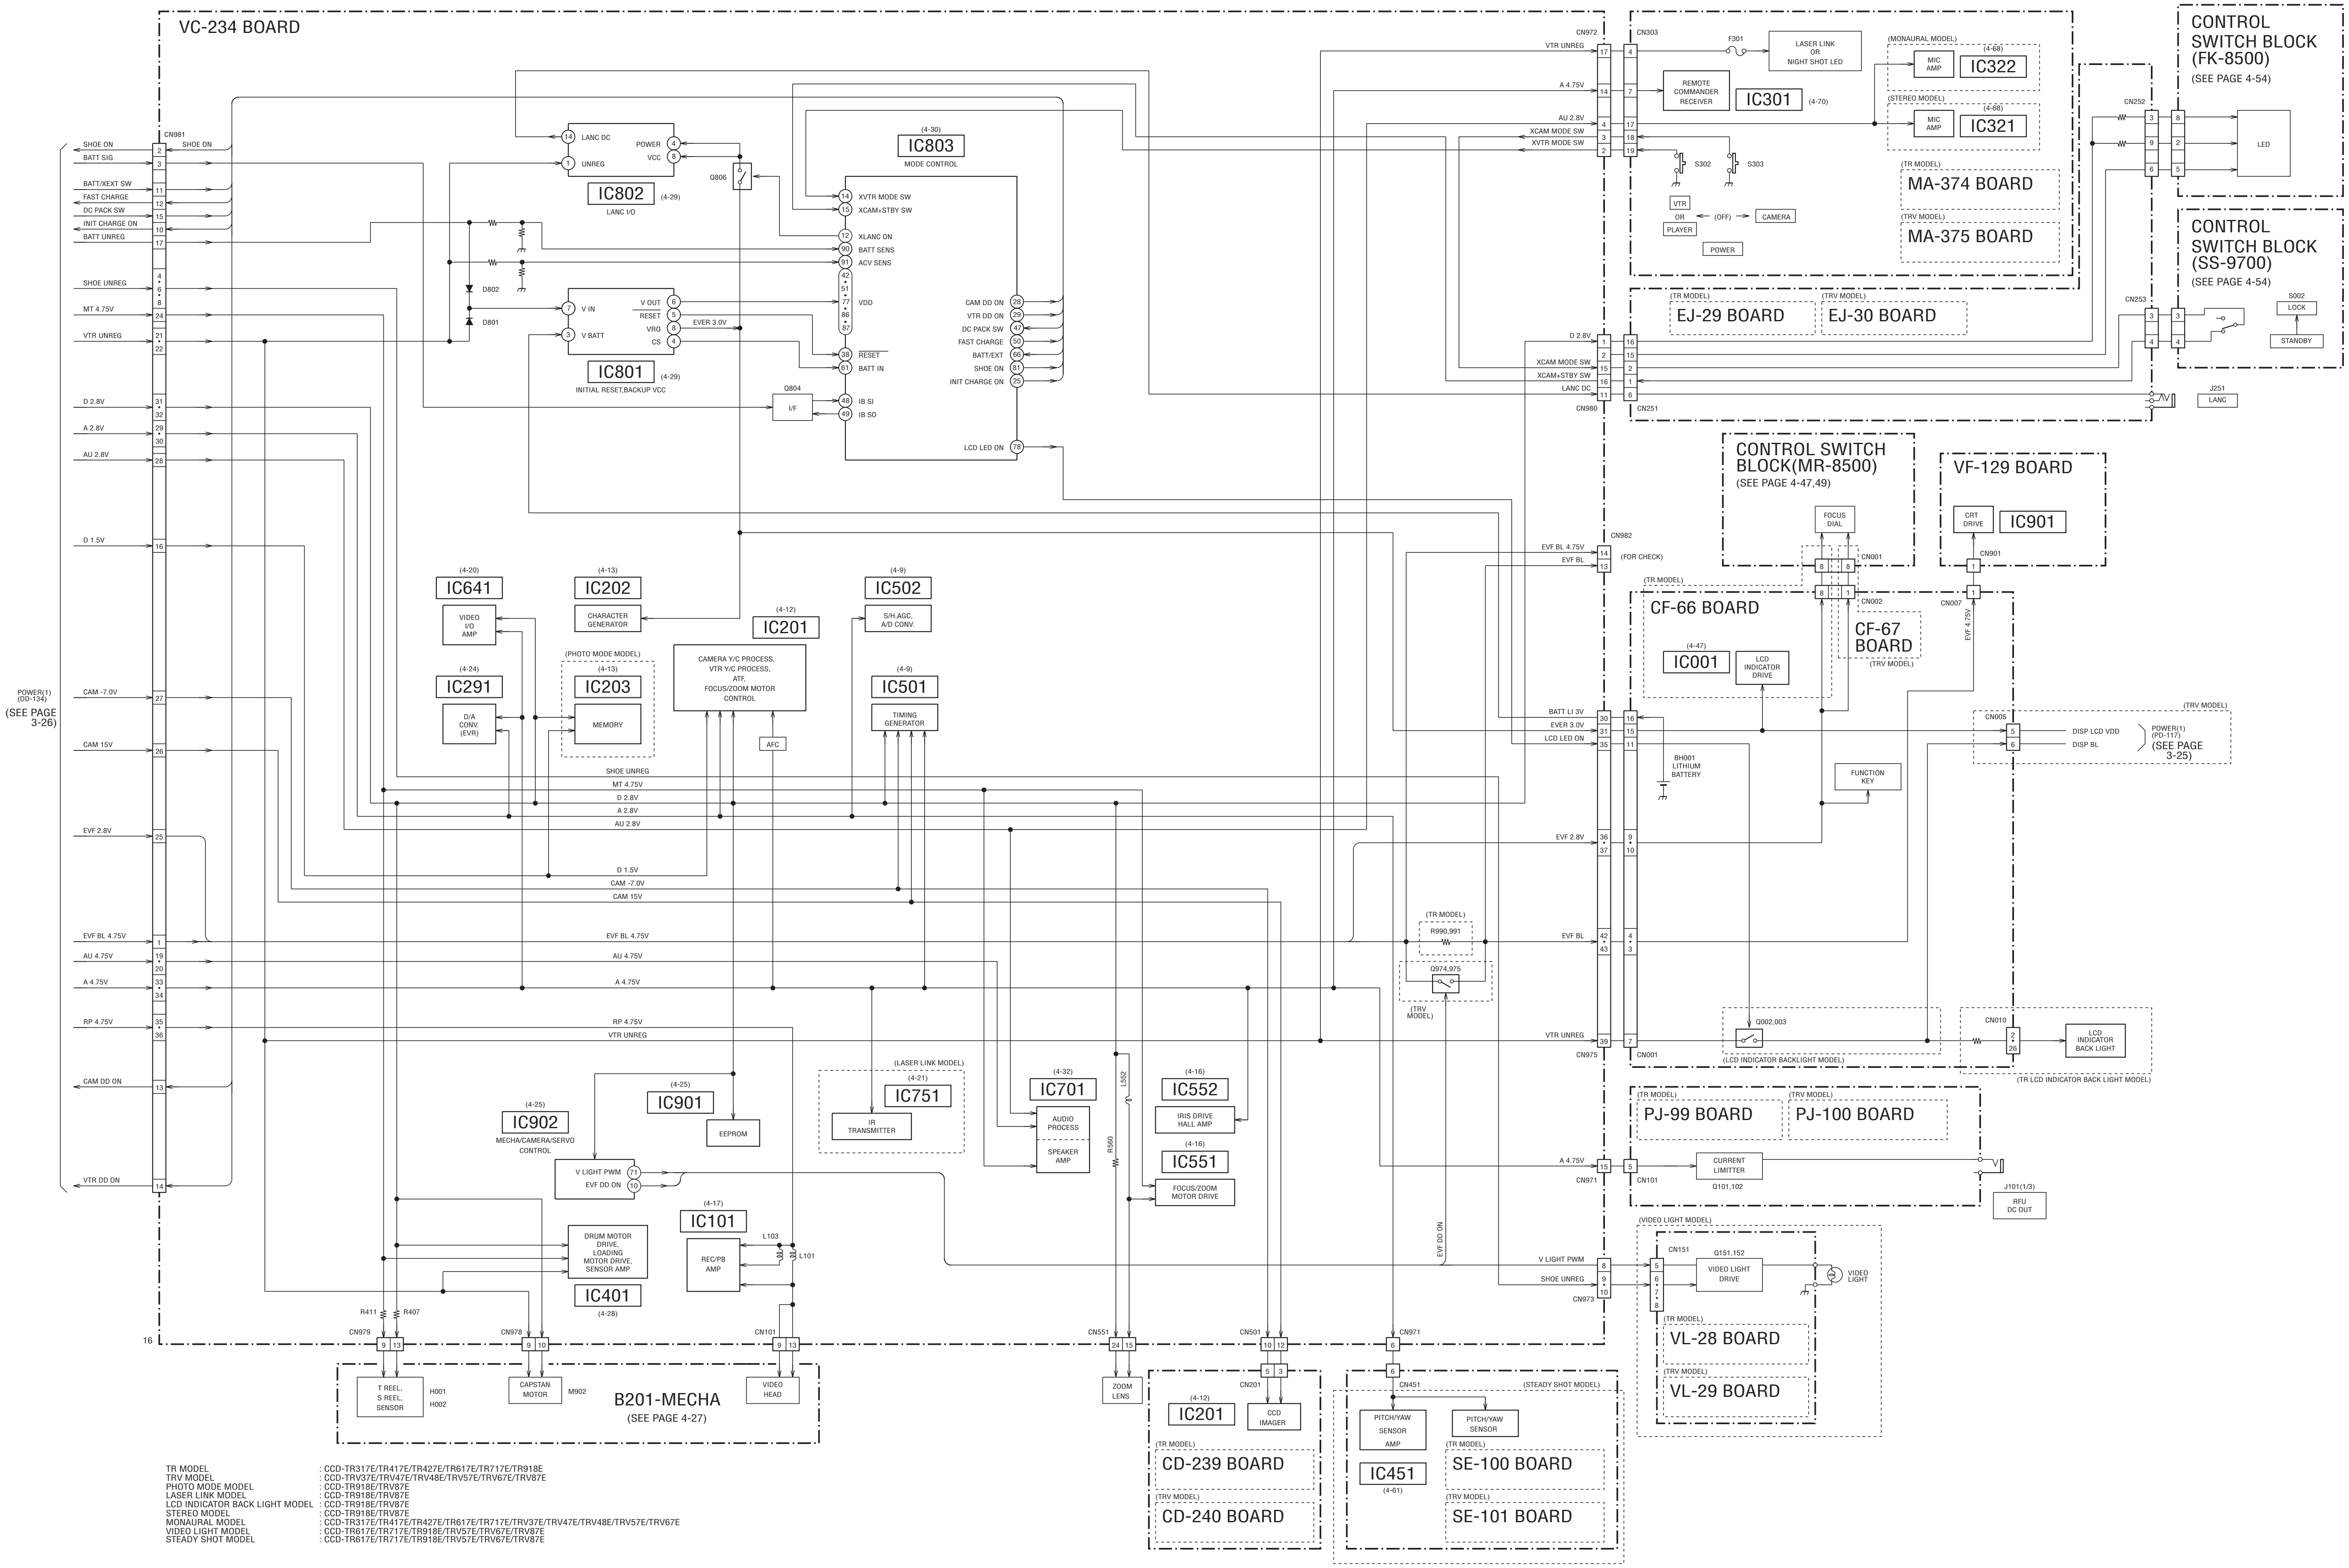
VC-234 BOARD
CN981
SHOE ON
BATT SIG
BATT/XEXT SW
FAST CHARGE
DC PACK SW
INIT CHARGE ON
BATT UNREG
SHOE UNREG
MT 4.75V
VTR UNREG
D 2.8V
A 2.8V
AU 2.8V
D 1.5V
POWER(1)
(DD-134)
(SEE PAGE 3-26)
CAM -7.0V
CAM 15V
EVF 2.8V
EVF BL 4.75V
AU 4.75V
A 4.75V
RP 4.75V
CAM DD ON
VTR DD ON
IC802
LANC I/O
(4-29)
LANC DC
UNREG
POWER
VCC
Q806
IC801
INITIAL RESET,BACKUP VCC
V IN
V BATT
V OUT
RESET
VRO
CS
EVER 3.0V
D802
D801
IC803
MODE CONTROL
(4-30)
XVTR MODE SW
XCAM+STBY SW
XLANC ON
BATT SENS
ACV SENS
VDD
RESET
BATT IN
IB SI
IB SO
Q804
I/F
CAM DD ON
VTR DD ON
DC PACK SW
FAST CHARGE
BATT/EXT
SHOE ON
INIT CHARGE ON
LCD LED ON
IC641
VIDEO I/O AMP
(4-20)
IC202
CHARACTER GENERATOR
(4-13)
IC502
S/H,AGC, A/D CONV.
(4-9)
IC201
(4-12)
CAMERA Y/C PROCESS, VTR Y/C PROCESS, ATF, FOCUS/ZOOM MOTOR CONTROL
AFC
IC291
D/A CONV. (EVR)
(4-24)
(PHOTO MODE MODEL)
IC203
MEMORY
IC501
TIMING GENERATOR
SHOE UNREG
MT 4.75V
D 2.8V
A 2.8V
AU 2.8V
D 1.5V
CAM -7.0V
CAM 15V
EVF BL 4.75V
AU 4.75V
A 4.75V
RP 4.75V
VTR UNREG
(LASER LINK MODEL)
IC751
(4-21)
IR TRANSMITTER
IC701
(4-32)
AUDIO PROCESS
SPEAKER AMP
IC552
(4-16)
IRIS DRIVE HALL AMP
IC551
FOCUS/ZOOM MOTOR DRIVE
L552
R560
IC902
(4-25)
MECHA/CAMERA/SERVO CONTROL
V LIGHT PWM
EVF DD ON
IC901
EEPROM
IC101
(4-17)
REC/PB AMP
L103
L101
DRUM MOTOR DRIVE, LOADING MOTOR DRIVE, SENSOR AMP
IC401
(4-28)
R411
R407
CN979
CN978
CN101
CN551
CN501
CN971
T REEL, S REEL, SENSOR
H001
H002
CAPSTAN MOTOR
M902
VIDEO HEAD
B201-MECHA
(SEE PAGE 4-27)
ZOOM LENS
CN201
IC201
(4-12)
CCD IMAGER
(TR MODEL)
CD-239 BOARD
(TRV MODEL)
CD-240 BOARD
CN451
(STEADY SHOT MODEL)
PITCH/YAW SENSOR AMP
PITCH/YAW SENSOR
IC451
(4-61)
(TR MODEL)
SE-100 BOARD
(TRV MODEL)
SE-101 BOARD
CN972
VTR UNREG
A 4.75V
AU 2.8V
XCAM MODE SW
XVTR MODE SW
CN303
F301
LASER LINK OR NIGHT SHOT LED
REMOTE COMMANDER RECEIVER
IC301
(4-70)
(MONAURAL MODEL)
MIC AMP
IC322
(4-68)
(STEREO MODEL)
IC321
S302
S303
VTR OR PLAYER
(OFF)
CAMERA
POWER
(TR MODEL)
MA-374 BOARD
(TRV MODEL)
MA-375 BOARD
CONTROL SWITCH BLOCK (FK-8500)
(SEE PAGE 4-54)
CN252
LED
CONTROL SWITCH BLOCK (SS-9700)
(SEE PAGE 4-54)
CN253
S002
LOCK
STANDBY
(TR MODEL)
EJ-29 BOARD
(TRV MODEL)
EJ-30 BOARD
D 2.8V
XCAM MODE SW
XCAM+STBY SW
LANC DC
CN980
CN251
J251
LANC
CONTROL SWITCH BLOCK(MR-8500)
(SEE PAGE 4-47,49)
FOCUS DIAL
CN001
VF-129 BOARD
CRT DRIVE
IC901
CN901
CN982
EVF BL 4.75V
EVF BL
(FOR CHECK)
(TR MODEL)
CF-66 BOARD
IC001
(4-47)
LCD INDICATOR DRIVE
CN002
CF-67 BOARD
(TRV MODEL)
CN007
EVF 4.75V
BATT LI 3V
EVER 3.0V
LCD LED ON
BH001 LITHIUM BATTERY
FUNCTION KEY
(TRV MODEL)
CN005
DISP LCD VDD
DISP BL
POWER(1)
(PD-117)
(SEE PAGE 3-25)
EVF 2.8V
(TR MODEL)
R990,991
Q974,975
(TRV MODEL)
EVF BL
VTR UNREG
CN975
CN001
Q002,003
(LCD INDICATOR BACKLIGHT MODEL)
CN010
LCD INDICATOR BACK LIGHT
(TR LCD INDICATOR BACK LIGHT MODEL)
(TR MODEL)
PJ-99 BOARD
(TRV MODEL)
PJ-100 BOARD
A 4.75V
CN971
CN101
CURRENT LIMITTER
Q101,102
J101(1/3)
RFU DC OUT
(VIDEO LIGHT MODEL)
CN151
Q151,152
VIDEO LIGHT DRIVE
VIDEO LIGHT
V LIGHT PWM
SHOE UNREG
CN973
EVF DD ON
(TR MODEL)
VL-28 BOARD
(TRV MODEL)
VL-29 BOARD

TR MODEL	: CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL	: CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
PHOTO MODE MODEL	: CCD-TR918E/TRV87E
LASER LINK MODEL	: CCD-TR918E/TRV87E
LCD INDICATOR BACK LIGHT MODEL	: CCD-TR918E/TRV87E
STEREO MODEL	: CCD-TR918E/TRV87E
MONAURAL MODEL	: CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E
VIDEO LIGHT MODEL	: CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
STEADY SHOT MODEL	: CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E

SECTION 4
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM (1/2)

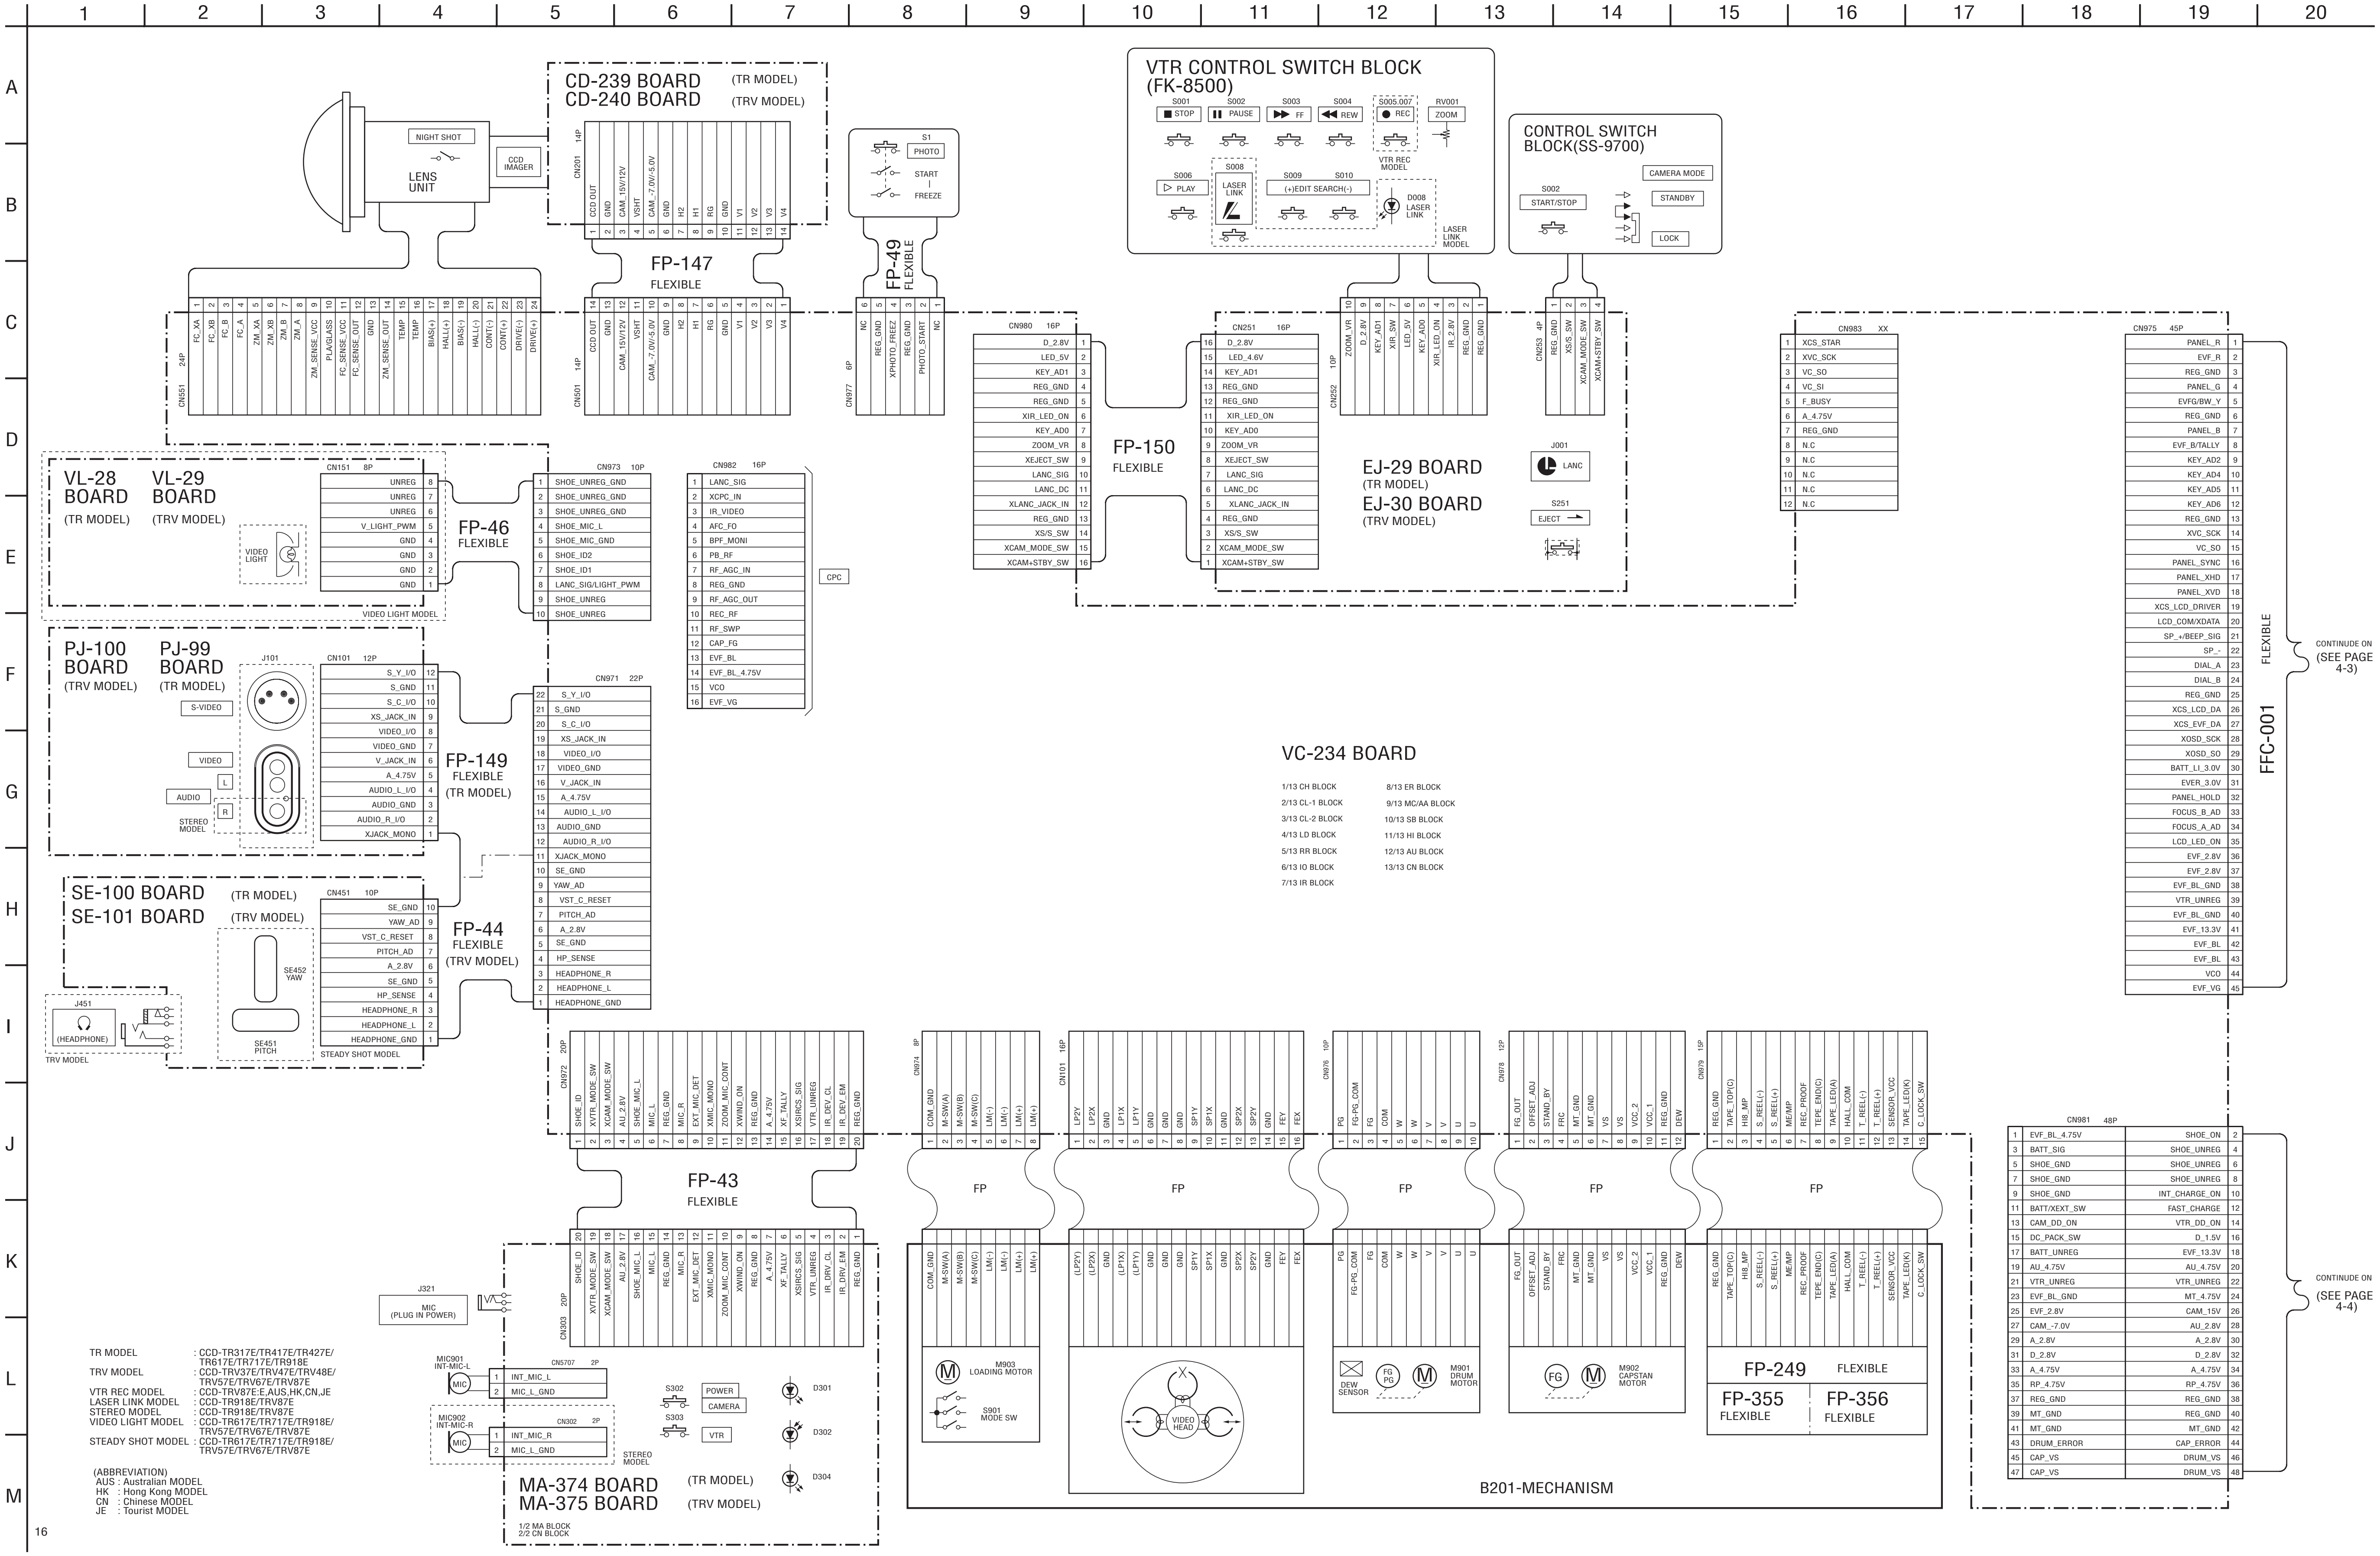
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
A
B
C
D
E
F
G
H
I
J
K
L
M
NIGHT SHOT
LENS UNIT
CCD IMAGER
CD-239 BOARD (TR MODEL)
CD-240 BOARD (TRV MODEL)
CN201 14P
CCD OUT
GND
CAM_15V/12V
VSHT
CAM_-7.0V/-5.0V
H2
H1
RG
V1
V2
V3
V4
FP-147 FLEXIBLE
S1 PHOTO
START | FREEZE
FP-49 FLEXIBLE
VTR CONTROL SWITCH BLOCK (FK-8500)
S001 STOP
S002 PAUSE
S003 FF
S004 REW
S005,007 REC
RV001 ZOOM
VTR REC MODEL
S006 PLAY
S008 LASER LINK
S009 S010 (+)EDIT SEARCH(-)
D008 LASER LINK
LASER LINK MODEL
CONTROL SWITCH BLOCK(SS-9700)
S002 START/STOP
CAMERA MODE
STANDBY
LOCK
CN551 24P
FC_XA
FC_XB
FC_B
FC_A
ZM_XA
ZM_XB
ZM_B
ZM_A
ZM_SENSE_VCC
PLA/GLASS
FC_SENSE_VCC
FC_SENSE_OUT
GND
ZM_SENSE_OUT
TEMP
BIAS(+)
HALL(+)
BIAS(-)
HALL(-)
CONT(+)
CONT(-)
DRIVE(+)
DRIVE(-)
CN501 14P
CN977 6P
NC
REG_GND
XPHOTO_FREEZ
PHOTO_START
CN980 16P
D_2.8V
LED_5V
KEY_AD1
REG_GND
XIR_LED_ON
KEY_AD0
ZOOM_VR
XEJECT_SW
LANC_SIG
LANC_DC
XLANC_JACK_IN
XS/S_SW
XCAM_MODE_SW
XCAM+STBY_SW
FP-150 FLEXIBLE
CN251 16P
D_4.6V
LED_4.6V
CN252 10P
CN253 4P
EJ-29 BOARD (TR MODEL)
EJ-30 BOARD (TRV MODEL)
J001 LANC
S251 EJECT
CN983 XX
XCS_STAR
XVC_SCK
VC_SO
VC_SI
F_BUSY
A_4.75V
REG_GND
N.C
CN975 45P
PANEL_R
EVF_R
PANEL_G
EVFG/BW_Y
PANEL_B
EVF_B/TALLY
KEY_AD2
KEY_AD4
KEY_AD5
KEY_AD6
XVC_SCK
PANEL_SYNC
PANEL_XHD
PANEL_XVD
XCS_LCD_DRIVER
LCD_COM/XDATA
SP_+/BEEP_SIG
SP_-
DIAL_A
DIAL_B
XCS_LCD_DA
XCS_EVF_DA
XOSD_SCK
XOSD_SO
BATT_LI_3.0V
EVER_3.0V
PANEL_HOLD
FOCUS_B_AD
FOCUS_A_AD
LCD_LED_ON
EVF_2.8V
EVF_BL_GND
VTR_UNREG
EVF_13.3V
EVF_BL
VCO
EVF_VG
FLEXIBLE
FFC-001
CONTINUE ON (SEE PAGE 4-3)
VL-28 BOARD (TR MODEL)
VL-29 BOARD (TRV MODEL)
CN151 8P
UNREG
V_LIGHT_PWM
GND
VIDEO LIGHT
VIDEO LIGHT MODEL
FP-46 FLEXIBLE
CN973 10P
SHOE_UNREG_GND
SHOE_MIC_L
SHOE_MIC_GND
SHOE_ID2
SHOE_ID1
LANC_SIG/LIGHT_PWM
SHOE_UNREG
CN982 16P
LANC_SIG
XCPC_IN
IR_VIDEO
AFC_FO
BPF_MONI
PB_RF
RF_AGC_IN
REG_GND
RF_AGC_OUT
REC_RF
RF_SWP
CAP_FG
EVF_BL
EVF_BL_4.75V
VCO
EVF_VG
CPC
PJ-100 BOARD (TRV MODEL)
PJ-99 BOARD (TR MODEL)
J101
CN101 12P
S-VIDEO
VIDEO
AUDIO
L
R
STEREO MODEL
S_Y_I/O
S_GND
S_C_I/O
XS_JACK_IN
VIDEO_I/O
VIDEO_GND
V_JACK_IN
A_4.75V
AUDIO_L_I/O
AUDIO_GND
AUDIO_R_I/O
XJACK_MONO
FP-149 FLEXIBLE (TR MODEL)
CN971 22P
SE-100 BOARD (TR MODEL)
SE-101 BOARD (TRV MODEL)
CN451 10P
SE_GND
YAW_AD
VST_C_RESET
PITCH_AD
A_2.8V
HP_SENSE
HEADPHONE_R
HEADPHONE_L
HEADPHONE_GND
SE452 YAW
SE451 PITCH
STEADY SHOT MODEL
FP-44 FLEXIBLE (TRV MODEL)
J451 (HEADPHONE)
TRV MODEL
VC-234 BOARD
CN972 20P
SHOE_ID
XVTR_MODE_SW
XCAM_MODE_SW
AU_2.8V
SHOE_MIC_L
MIC_L
REG_GND
MIC_R
EXT_MIC_DET
XMIC_MONO
ZOOM_MIC_CONT
XWIND_ON
A_4.75V
XF_TALLY
XSIRCS_SIG
VTR_UNREG
IR_DRV_CL
IR_DRV_EM
FP-43 FLEXIBLE
CN303 20P
J321 MIC (PLUG IN POWER)
MIC901 INT-MIC-L
CN5707 2P
INT_MIC_L
MIC_L_GND
MIC902 INT-MIC-R
CN302 2P
INT_MIC_R
MIC_L_GND
STEREO MODEL
S302 POWER
CAMERA
S303 VTR
D301
D302
D304
MA-374 BOARD (TR MODEL)
MA-375 BOARD (TRV MODEL)
1/2 MA BLOCK
2/2 CN BLOCK
CN974 8P
COM_GND
M-SW(A)
M-SW(B)
M-SW(C)
LM(-)
LM(+)
CN101 16P
LP2Y
LP2X
LP1X
LP1Y
SP1Y
SP1X
SP2X
SP2Y
FEY
FEX
CN976 10P
FG
FG-PG_COM
COM
W
V
U
CN978 12P
FG_OUT
OFFSET_ADJ
STAND_BY
FRC
MT_GND
VS
VCC_2
VCC_1
DEW
CN979 15P
TAPE_TOP(C)
HB_MP
S_REEL(-)
S_REEL(+)
ME/MP
REC_PROOF
TAPE_END(C)
TAPE_LED(A)
HALL_COM
T_REEL(-)
T_REEL(+)
SENSOR_VCC
TAPE_LED(K)
C_LOCK_SW
FP
M903 LOADING MOTOR
S901 MODE SW
VIDEO HEAD
DEW SENSOR
M901 DRUM MOTOR
M902 CAPSTAN MOTOR
FP-249 FLEXIBLE
FP-355 FLEXIBLE
FP-356 FLEXIBLE
B201-MECHANISM
CN981 48P
EVF_BL_4.75V
BATT_SIG
SHOE_GND
BATT/XEXT_SW
CAM_DD_ON
DC_PACK_SW
BATT_UNREG
AU_4.75V
VTR_UNREG
EVF_BL_GND
EVF_2.8V
CAM_-7.0V
A_2.8V
D_2.8V
RP_4.75V
MT_GND
DRUM_ERROR
CAP_VS
SHOE_ON
SHOE_UNREG
INT_CHARGE_ON
FAST_CHARGE
VTR_DD_ON
D_1.5V
EVF_13.3V
MT_4.75V
CAM_15V
AU_2.8V
CAP_ERROR
DRUM_VS
CONTINUE ON (SEE PAGE 4-4)
16

VC-234 BOARD

1/13 CH BLOCK
2/13 CL-1 BLOCK
3/13 CL-2 BLOCK
4/13 LD BLOCK
5/13 RR BLOCK
6/13 IO BLOCK
7/13 IR BLOCK
8/13 ER BLOCK
9/13 MC/AA BLOCK
10/13 SB BLOCK
11/13 HI BLOCK
12/13 AU BLOCK
13/13 CN BLOCK

TR MODEL	: CCD-TR317E/TR417E/TR427E/ TR617E/TR717E/TR918E
TRV MODEL	: CCD-TRV37E/TRV47E/TRV48E/ TRV57E/TRV67E/TRV87E
VTR REC MODEL	: CCD-TRV87E:E,AUS,HK,CN,JE
LASER LINK MODEL	: CCD-TR918E/TRV87E
STEREO MODEL	: CCD-TR918E/TRV87E
VIDEO LIGHT MODEL	: CCD-TR617E/TR717E/TR918E/ TRV57E/TRV67E/TRV87E
STEADY SHOT MODEL	: CCD-TR617E/TR717E/TR918E/ TRV57E/TRV67E/TRV87E

(ABBREVIATION)
AUS : Australian MODEL
HK : Hong Kong MODEL
CN : Chinese MODEL
JE : Tourist MODEL

FRAME SCHEMATIC DIAGRAM (2/2)

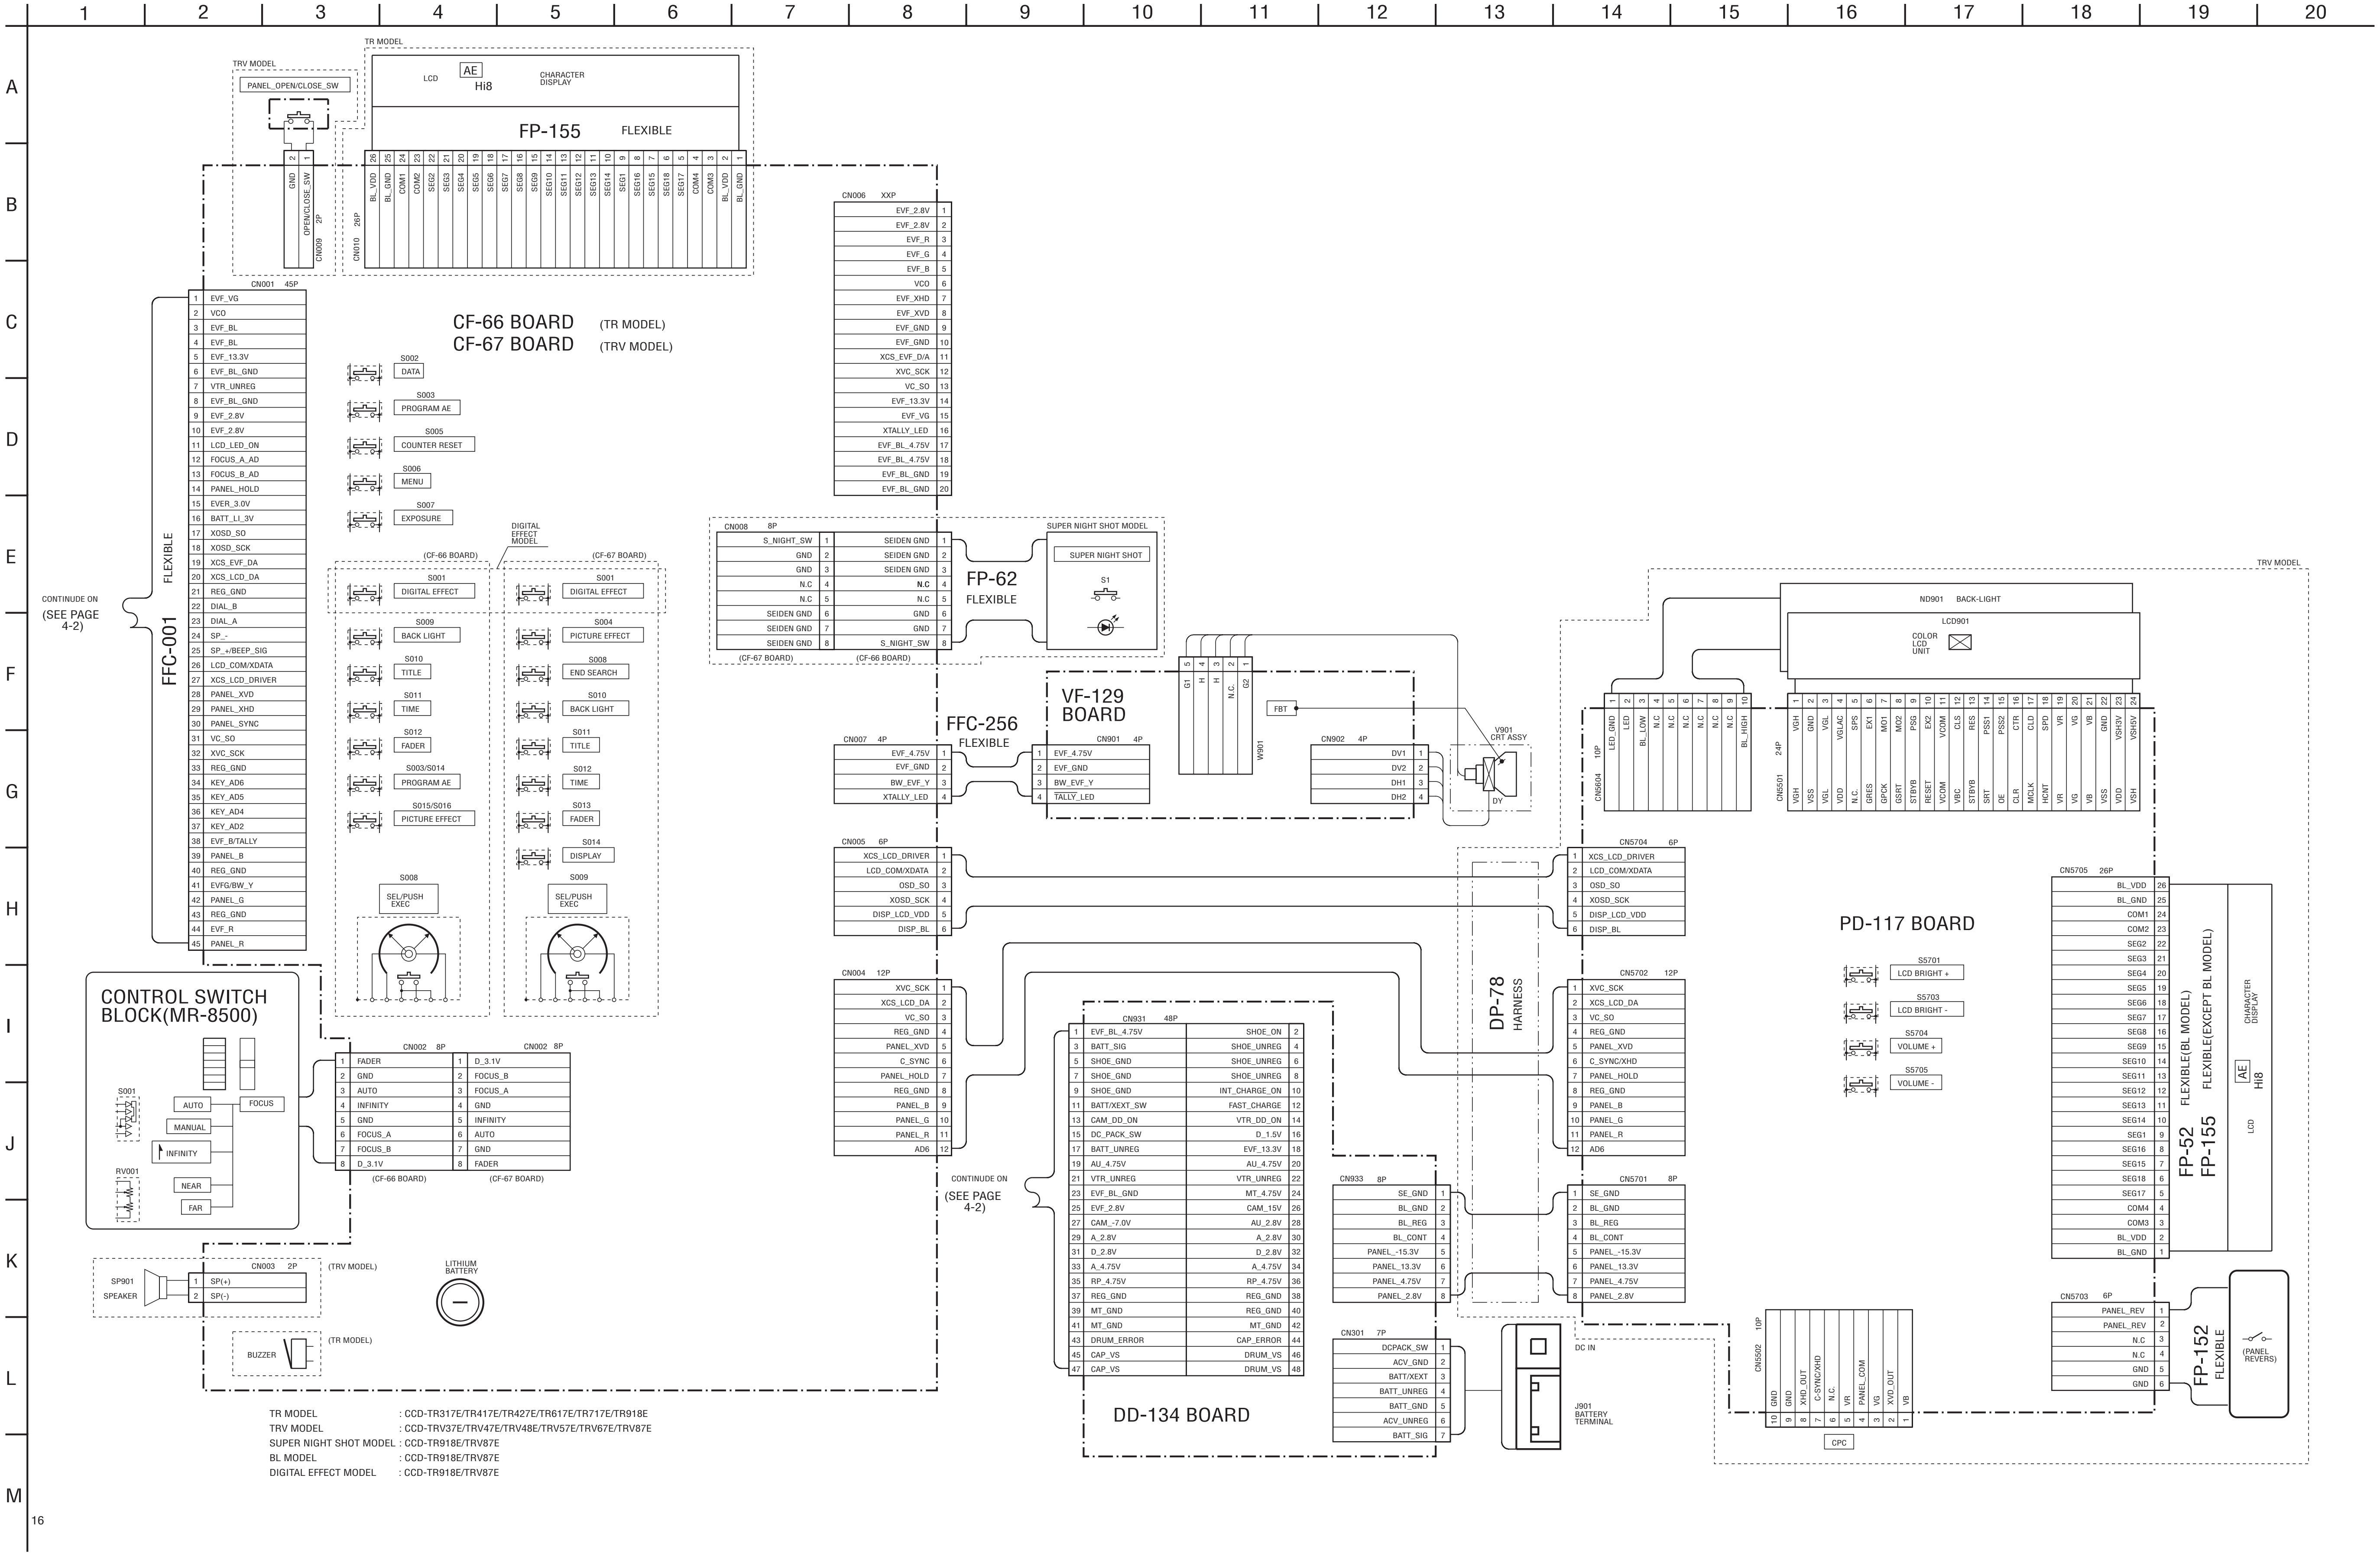

FP-155 FLEXIBLE
CF-66 BOARD (TR MODEL)
CF-67 BOARD (TRV MODEL)
FFC-001 FLEXIBLE
CONTINUDE ON (SEE PAGE 4-2)
CONTROL SWITCH BLOCK(MR-8500)
FP-62 FLEXIBLE
SUPER NIGHT SHOT MODEL
FFC-256 FLEXIBLE
VF-129 BOARD
V901 CRT ASSY
DP-78 HARNESS
DD-134 BOARD
CONTINUDE ON (SEE PAGE 4-2)
PD-117 BOARD
ND901 BACK-LIGHT
LCD901 COLOR LCD UNIT
FP-52 FLEXIBLE(BL MODEL)
FP-155 FLEXIBLE(EXCEPT BL MODEL)
FP-152 FLEXIBLE
J901 BATTERY TERMINAL
DC IN
LITHIUM BATTERY
SP901 SPEAKER
BUZZER
TRV MODEL
TR MODEL
DIGITAL EFFECT MODEL

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
SUPER NIGHT SHOT MODEL : CCD-TR918E/TRV87E
BL MODEL : CCD-TR918E/TRV87E
DIGITAL EFFECT MODEL : CCD-TR918E/TRV87E

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR WIRING BOARDS AND SCHEMATIC DIAGRAMS
(In addition to this, the necessary note is printed in each block)

(For printed wiring boards)

- ░░░░: Pattern from the side which enables seeing.
  (The other layers' patterns are not indicated.)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are few cases that the part printed on diagram isn't mounted in this model.
- Chip parts.

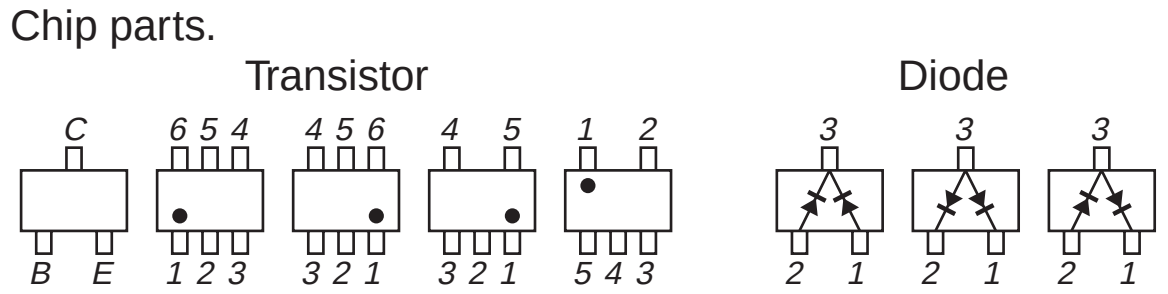

- Model
  TR model:CCD-TR317E/TR417E/TR427E/TR617E/TR717E/
  TR918E
  TRV model: CCD-TRV37E/TRV47E/TRV48E/TRV57E/
  TRV67E/TRV87E

(For schematic diagrams)

- All capacitors are in mF unless otherwise noted. pF : m mF. 50V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10W unless otherwise noted.
  kW=1000W, MW=1000kW.
- Caution when replacing chip parts.
  New parts must be attached after removal of chip.
  Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

Example	C541	L452
	22U	10UH
	TA A	2520

Kinds of capacitor
Temperature characteristics
External dimensions (mm)

- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
  In such cases, the unused circuits may be indicated.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
  XEDIT → $\overline{\text{EDIT}}$ PB/XREC → PB/$\overline{\text{REC}}$
- ▭ : non flammable resistor
- ▭ : fusible resistor
- ▭ : panel designation
- ━━ : B+ Line *
- ╍╍╍ : B– Line *
- ⇨ : IN/OUT direction of (+,–) B LINE. *
- ▭ : adjustment for repair. *
- Circled numbers refer to waveforms. *

* Indicated by the color red.

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

(Measuring conditions voltage and waveform)

- Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms. *
  (VOM of DC 10 MΩ input impedance is used.).
- Voltage values change depending upon input impedance of VOM used.) *

1. Connection

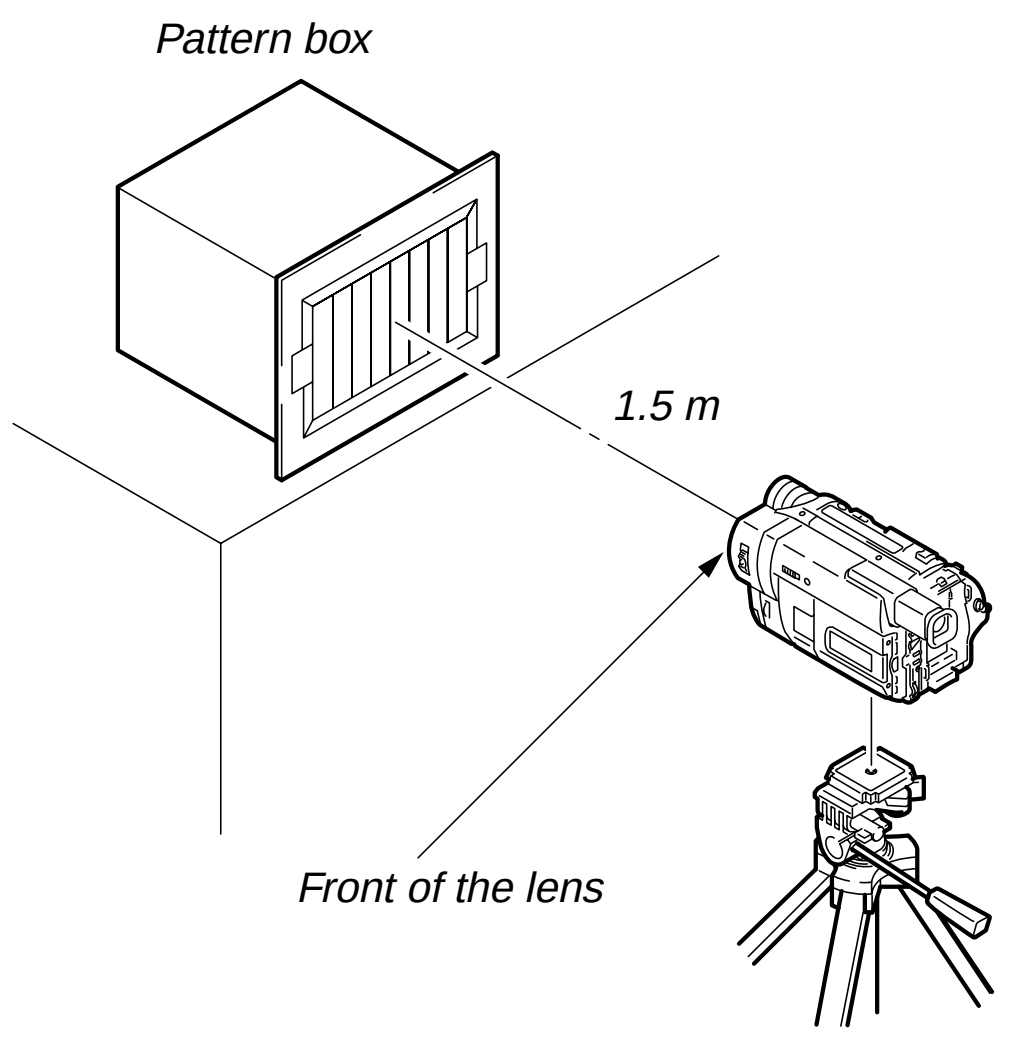

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

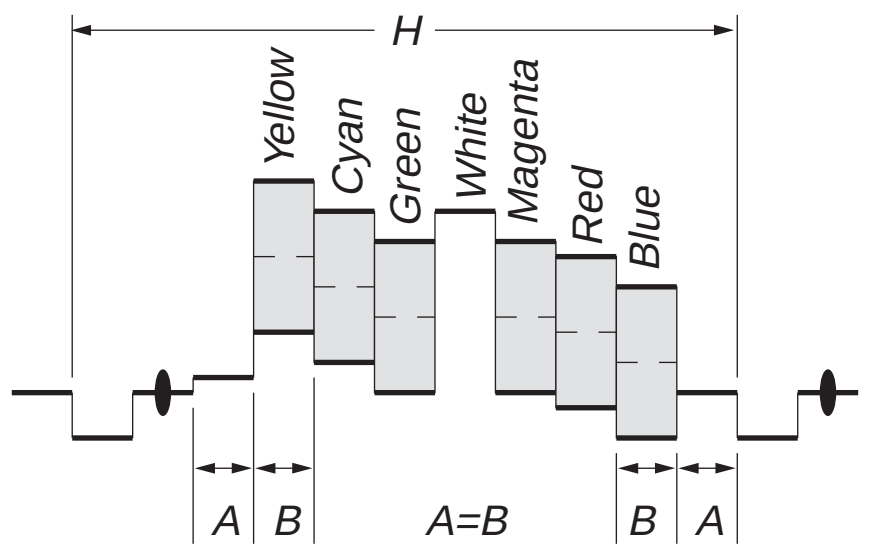

Fig. a (Video output terminal output waveform)

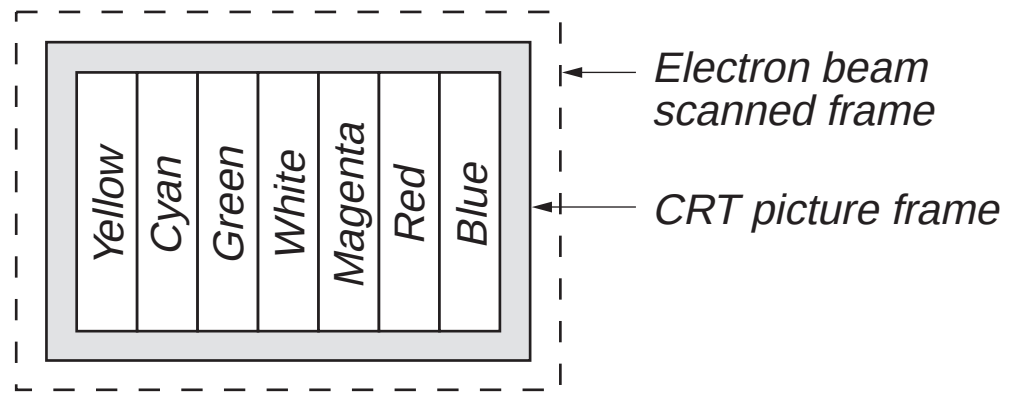

Fig.b (Picture on monitor TV)

When indicating parts by reference number, pleas include the board name.

CD-239/240 (CCD IMAGER) PRINTED WIRING BOARD

— Ref. No. CD-239/240 Board; 2,000 Series —

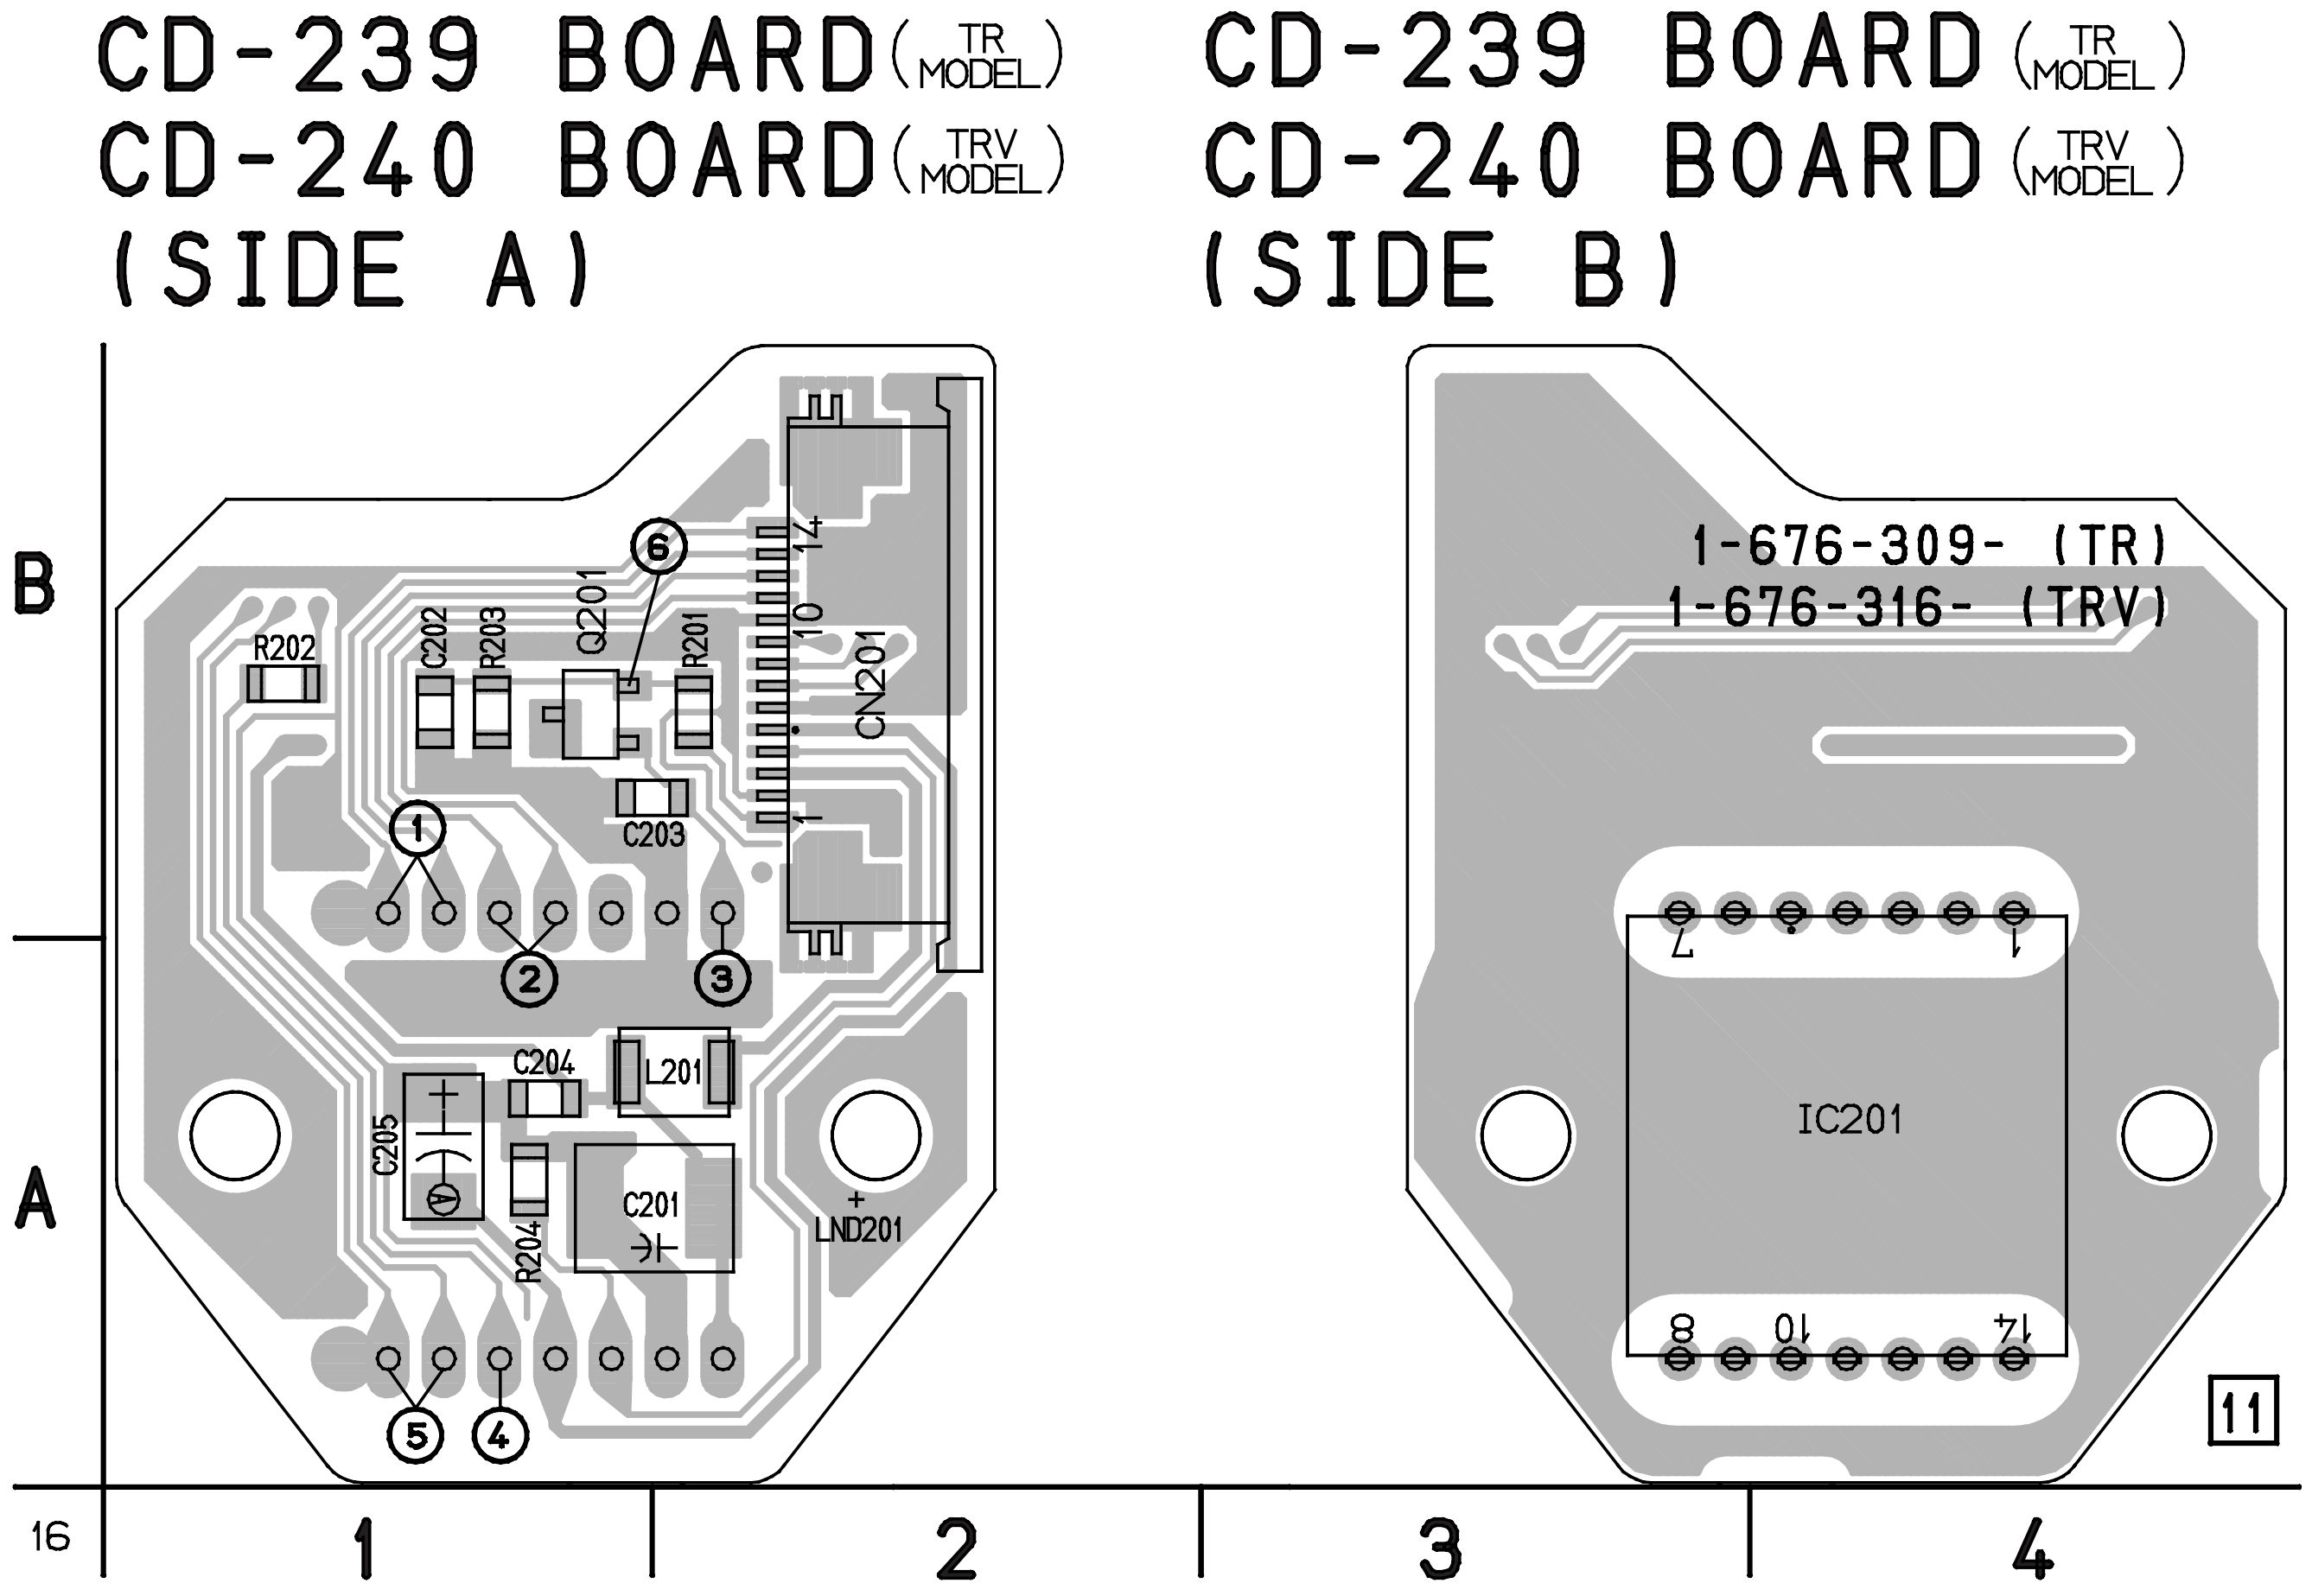
CD-239 BOARD (TR MODEL)
CD-240 BOARD (TRV MODEL)
(SIDE A)
CD-239 BOARD (TR MODEL)
CD-240 BOARD (TRV MODEL)
(SIDE B)
B
A
R202
C202
R203
Q201
R201
CN201
14
10
1
C203
C204
L201
C205
R204
C201
LND201
1
2
3
4
5
6
1-676-309- (TR)
1-676-316- (TRV)
IC201
7
1
8
10
14
11
16
1
2
3
4

For printed wiring board
- Refer to page 4-91 for location.
- Chip parts

Transistor



There are few cases that the part printed on this diagram isn't mounted in this model.

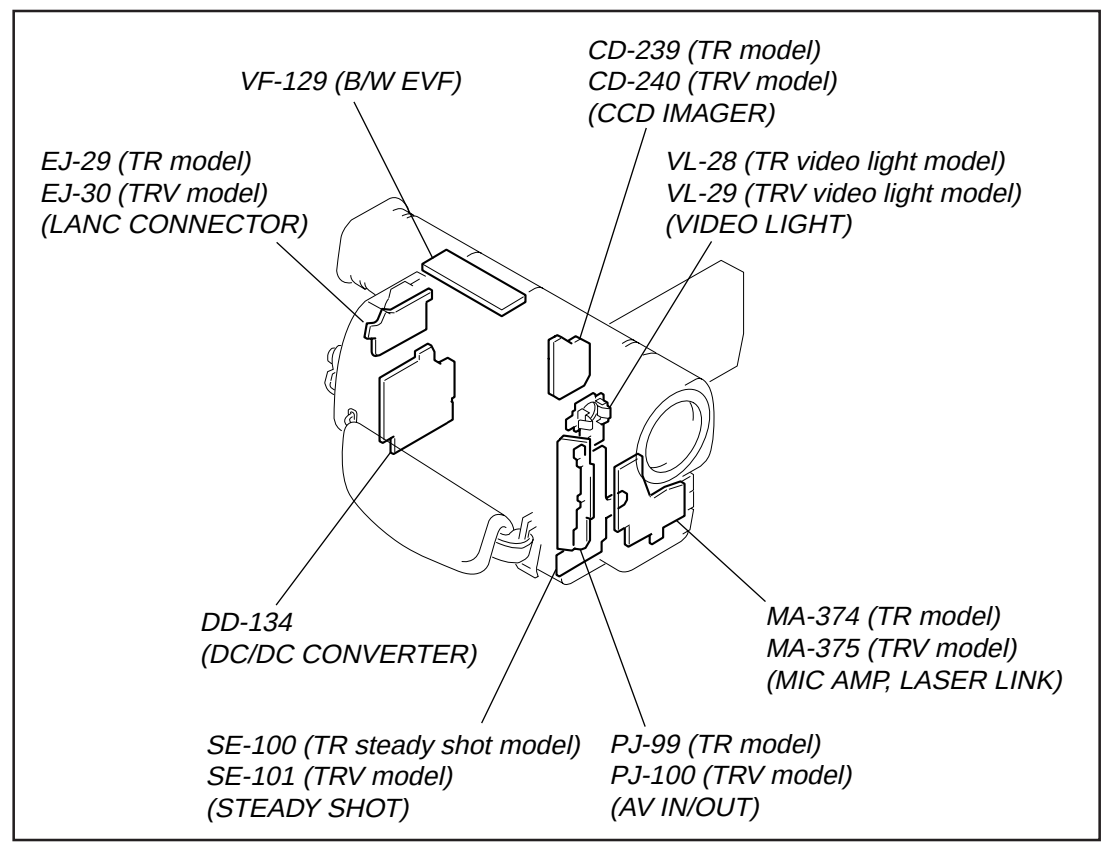
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

For Schematic Diagram
- Refer to page 4-87 for waveforms.

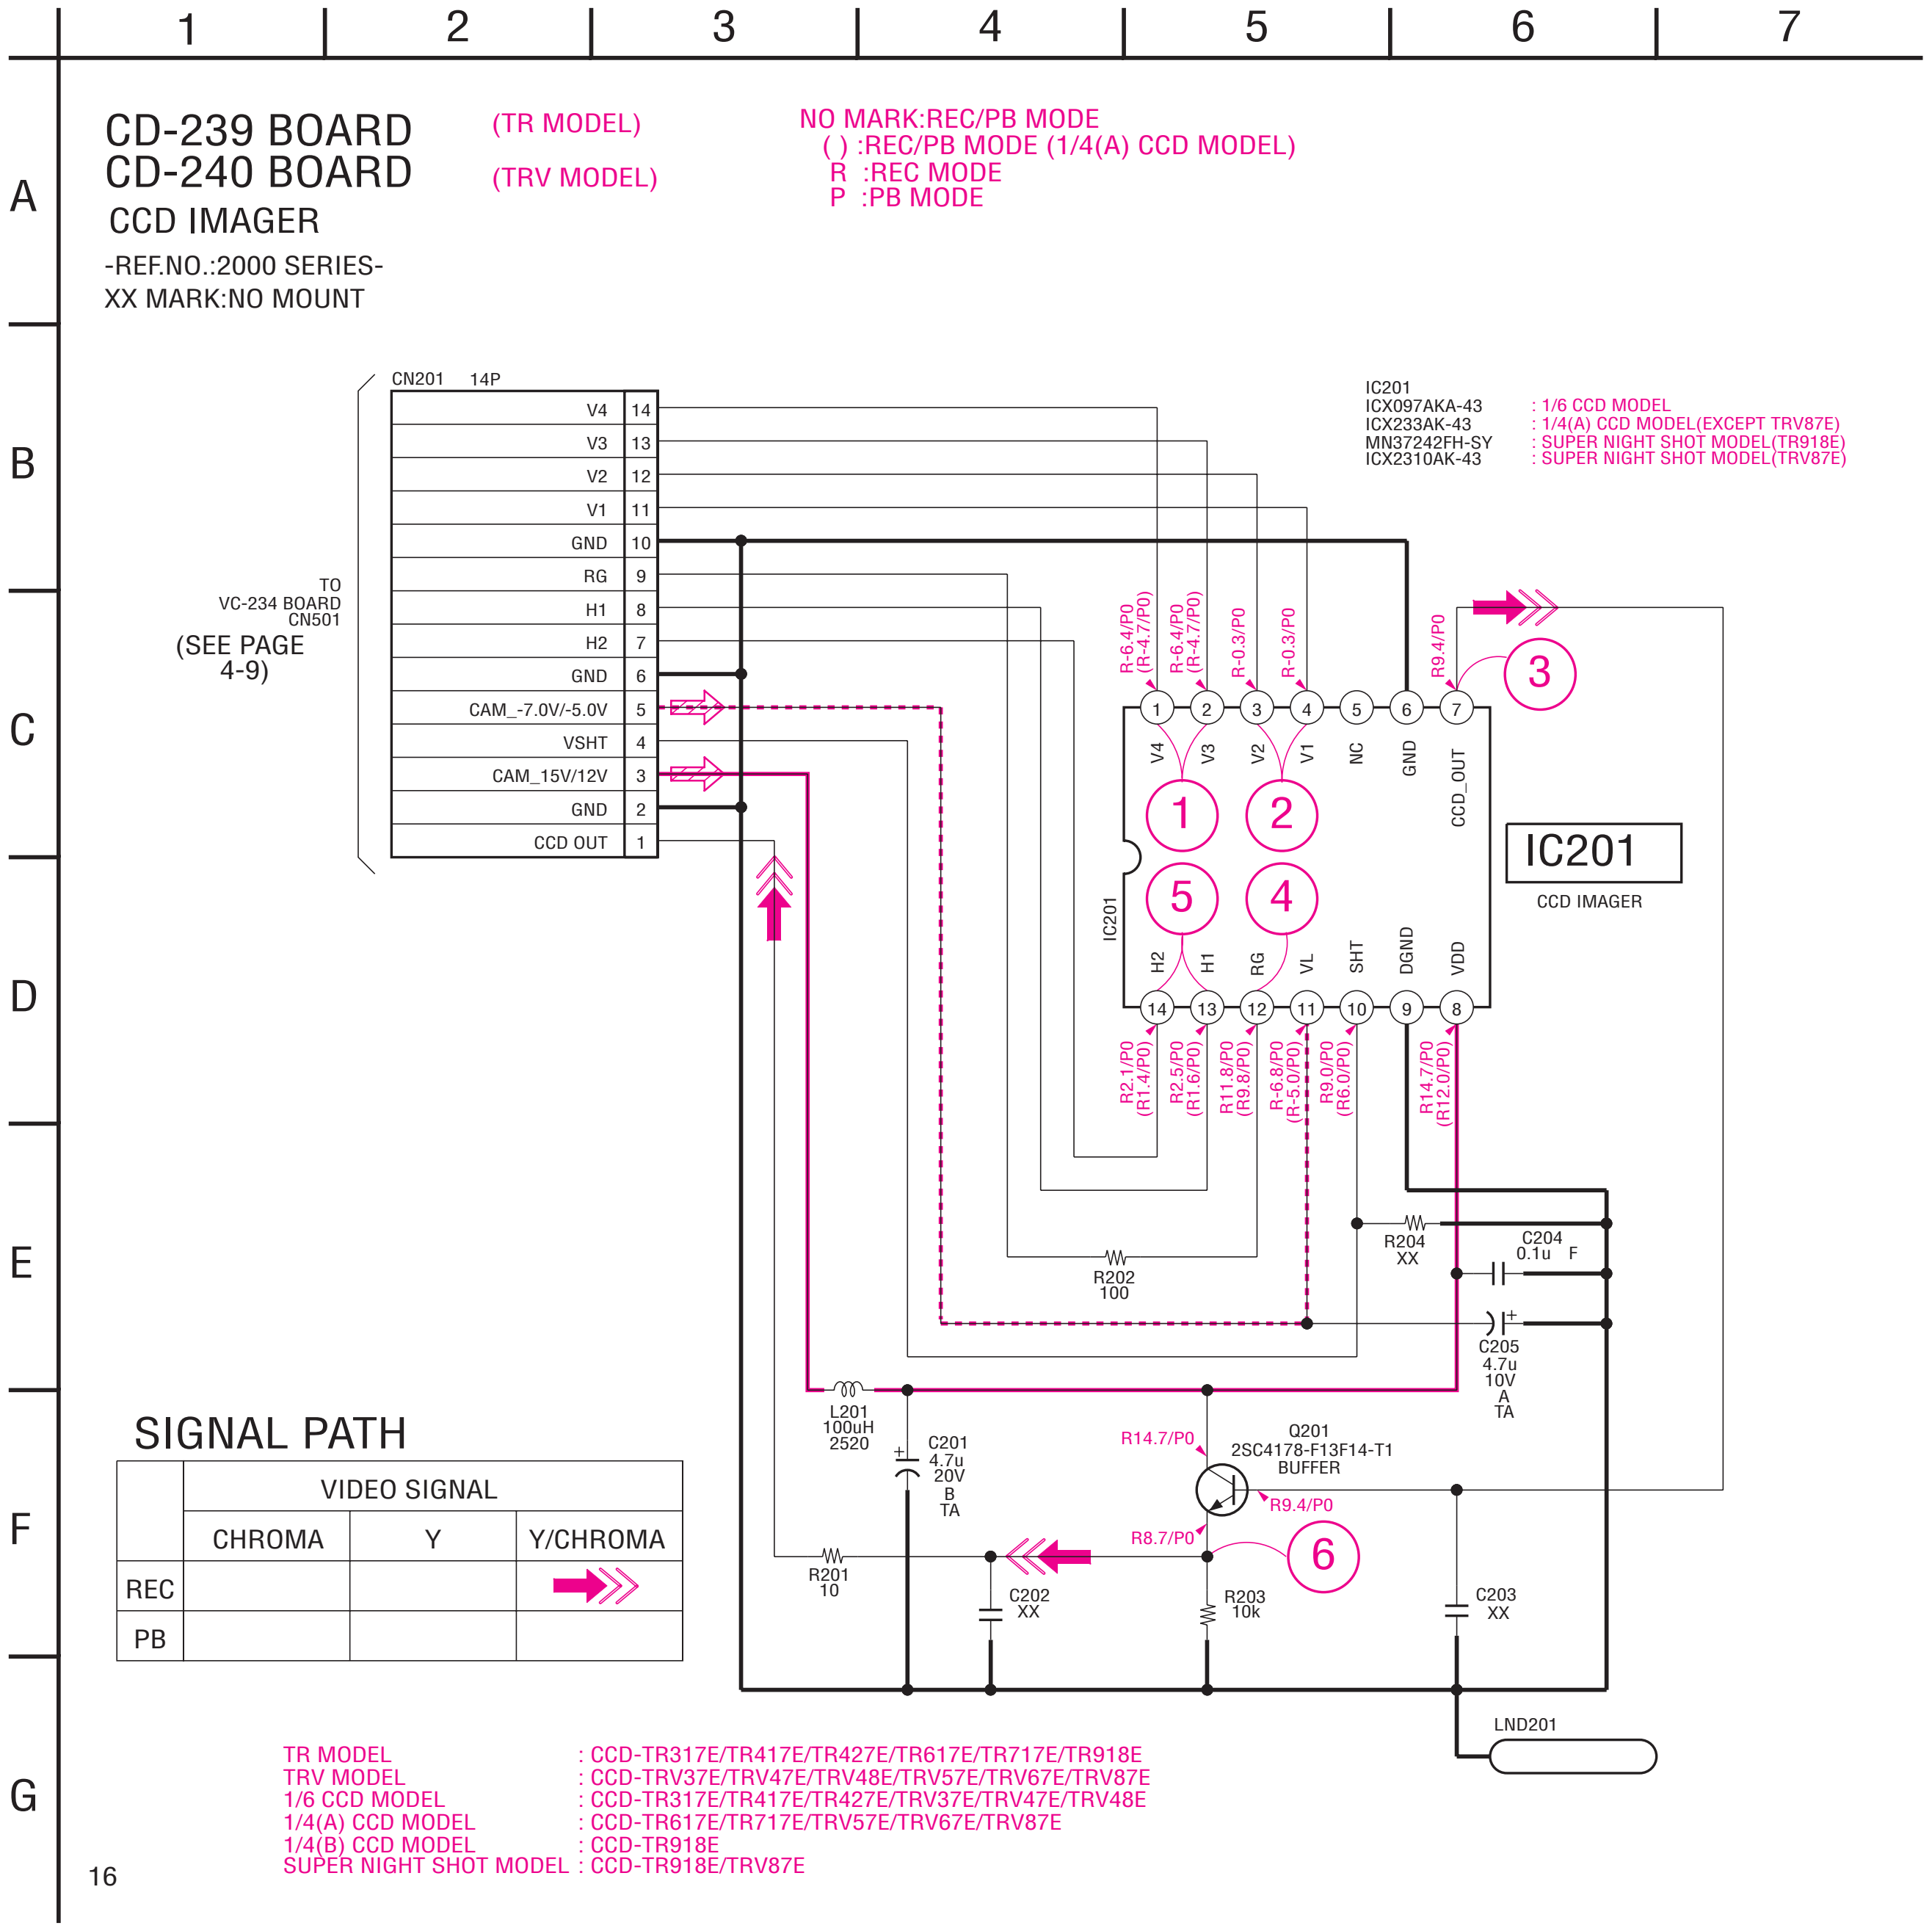
1
2
3
4
5
6
7
A
B
C
D
E
F
G
CD-239 BOARD
CD-240 BOARD
(TR MODEL)
(TRV MODEL)
CCD IMAGER
-REF.NO.:2000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
( ) :REC/PB MODE (1/4(A) CCD MODEL)
R :REC MODE
P :PB MODE
CN201 14P
V4 14
V3 13
V2 12
V1 11
GND 10
RG 9
H1 8
H2 7
GND 6
CAM_-7.0V/-5.0V 5
VSHT 4
CAM_15V/12V 3
GND 2
CCD OUT 1
TO VC-234 BOARD CN501
(SEE PAGE 4-9)
IC201
ICX097AKA-43 : 1/6 CCD MODEL
ICX233AK-43 : 1/4(A) CCD MODEL(EXCEPT TRV87E)
MN37242FH-SY : SUPER NIGHT SHOT MODEL(TR918E)
ICX2310AK-43 : SUPER NIGHT SHOT MODEL(TRV87E)
R-6.4/P0 (R-4.7/P0)
R-6.4/P0 (R-4.7/P0)
R-0.3/P0
R-0.3/P0
R9.4/P0
V4
V3
V2
V1
NC
GND
CCD_OUT
IC201
CCD IMAGER
H2
H1
RG
VL
SHT
DGND
VDD
R2.1/P0 (R1.4/P0)
R2.5/P0 (R1.6/P0)
R11.8/P0 (R9.8/P0)
R-6.8/P0 (R-5.0/P0)
R9.0/P0 (R6.0/P0)
R14.7/P0 (R12.0/P0)
R202 100
R204 XX
C204 0.1u F
C205 4.7u 10V A TA
L201 100uH 2520
C201 4.7u 20V B TA
R14.7/P0
Q201 2SC4178-F13F14-T1 BUFFER
R9.4/P0
R8.7/P0
R201 10
C202 XX
R203 10k
C203 XX
LND201
16

SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC			➡
PB			

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
1/6 CCD MODEL : CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E
1/4(A) CCD MODEL : CCD-TR617E/TR717E/TRV57E/TRV67E/TRV87E
1/4(B) CCD MODEL : CCD-TR918E
SUPER NIGHT SHOT MODEL : CCD-TR918E/TRV87E

Precautions Upon Replacing CCD imager
- The CD-239/240 board mounted as a repair part is not equipped with a CCD imager.
  When replacing this board, remove the CCD imager from the old one and mount it onto the new one.
- If the CCD imager has been replaced, carry out all the adjustments for the camera section.
- As the CCD imager may be damaged by static electricity from its structure, handle it carefully like for the MOS IC.
  In addition, ensure that the receiver is not covered with dusts nor exposed to strong light.

For Schematic Diagram
- Refer to page 4-35 for printed wiring board.
- Refer to page 4-87 for waveforms.

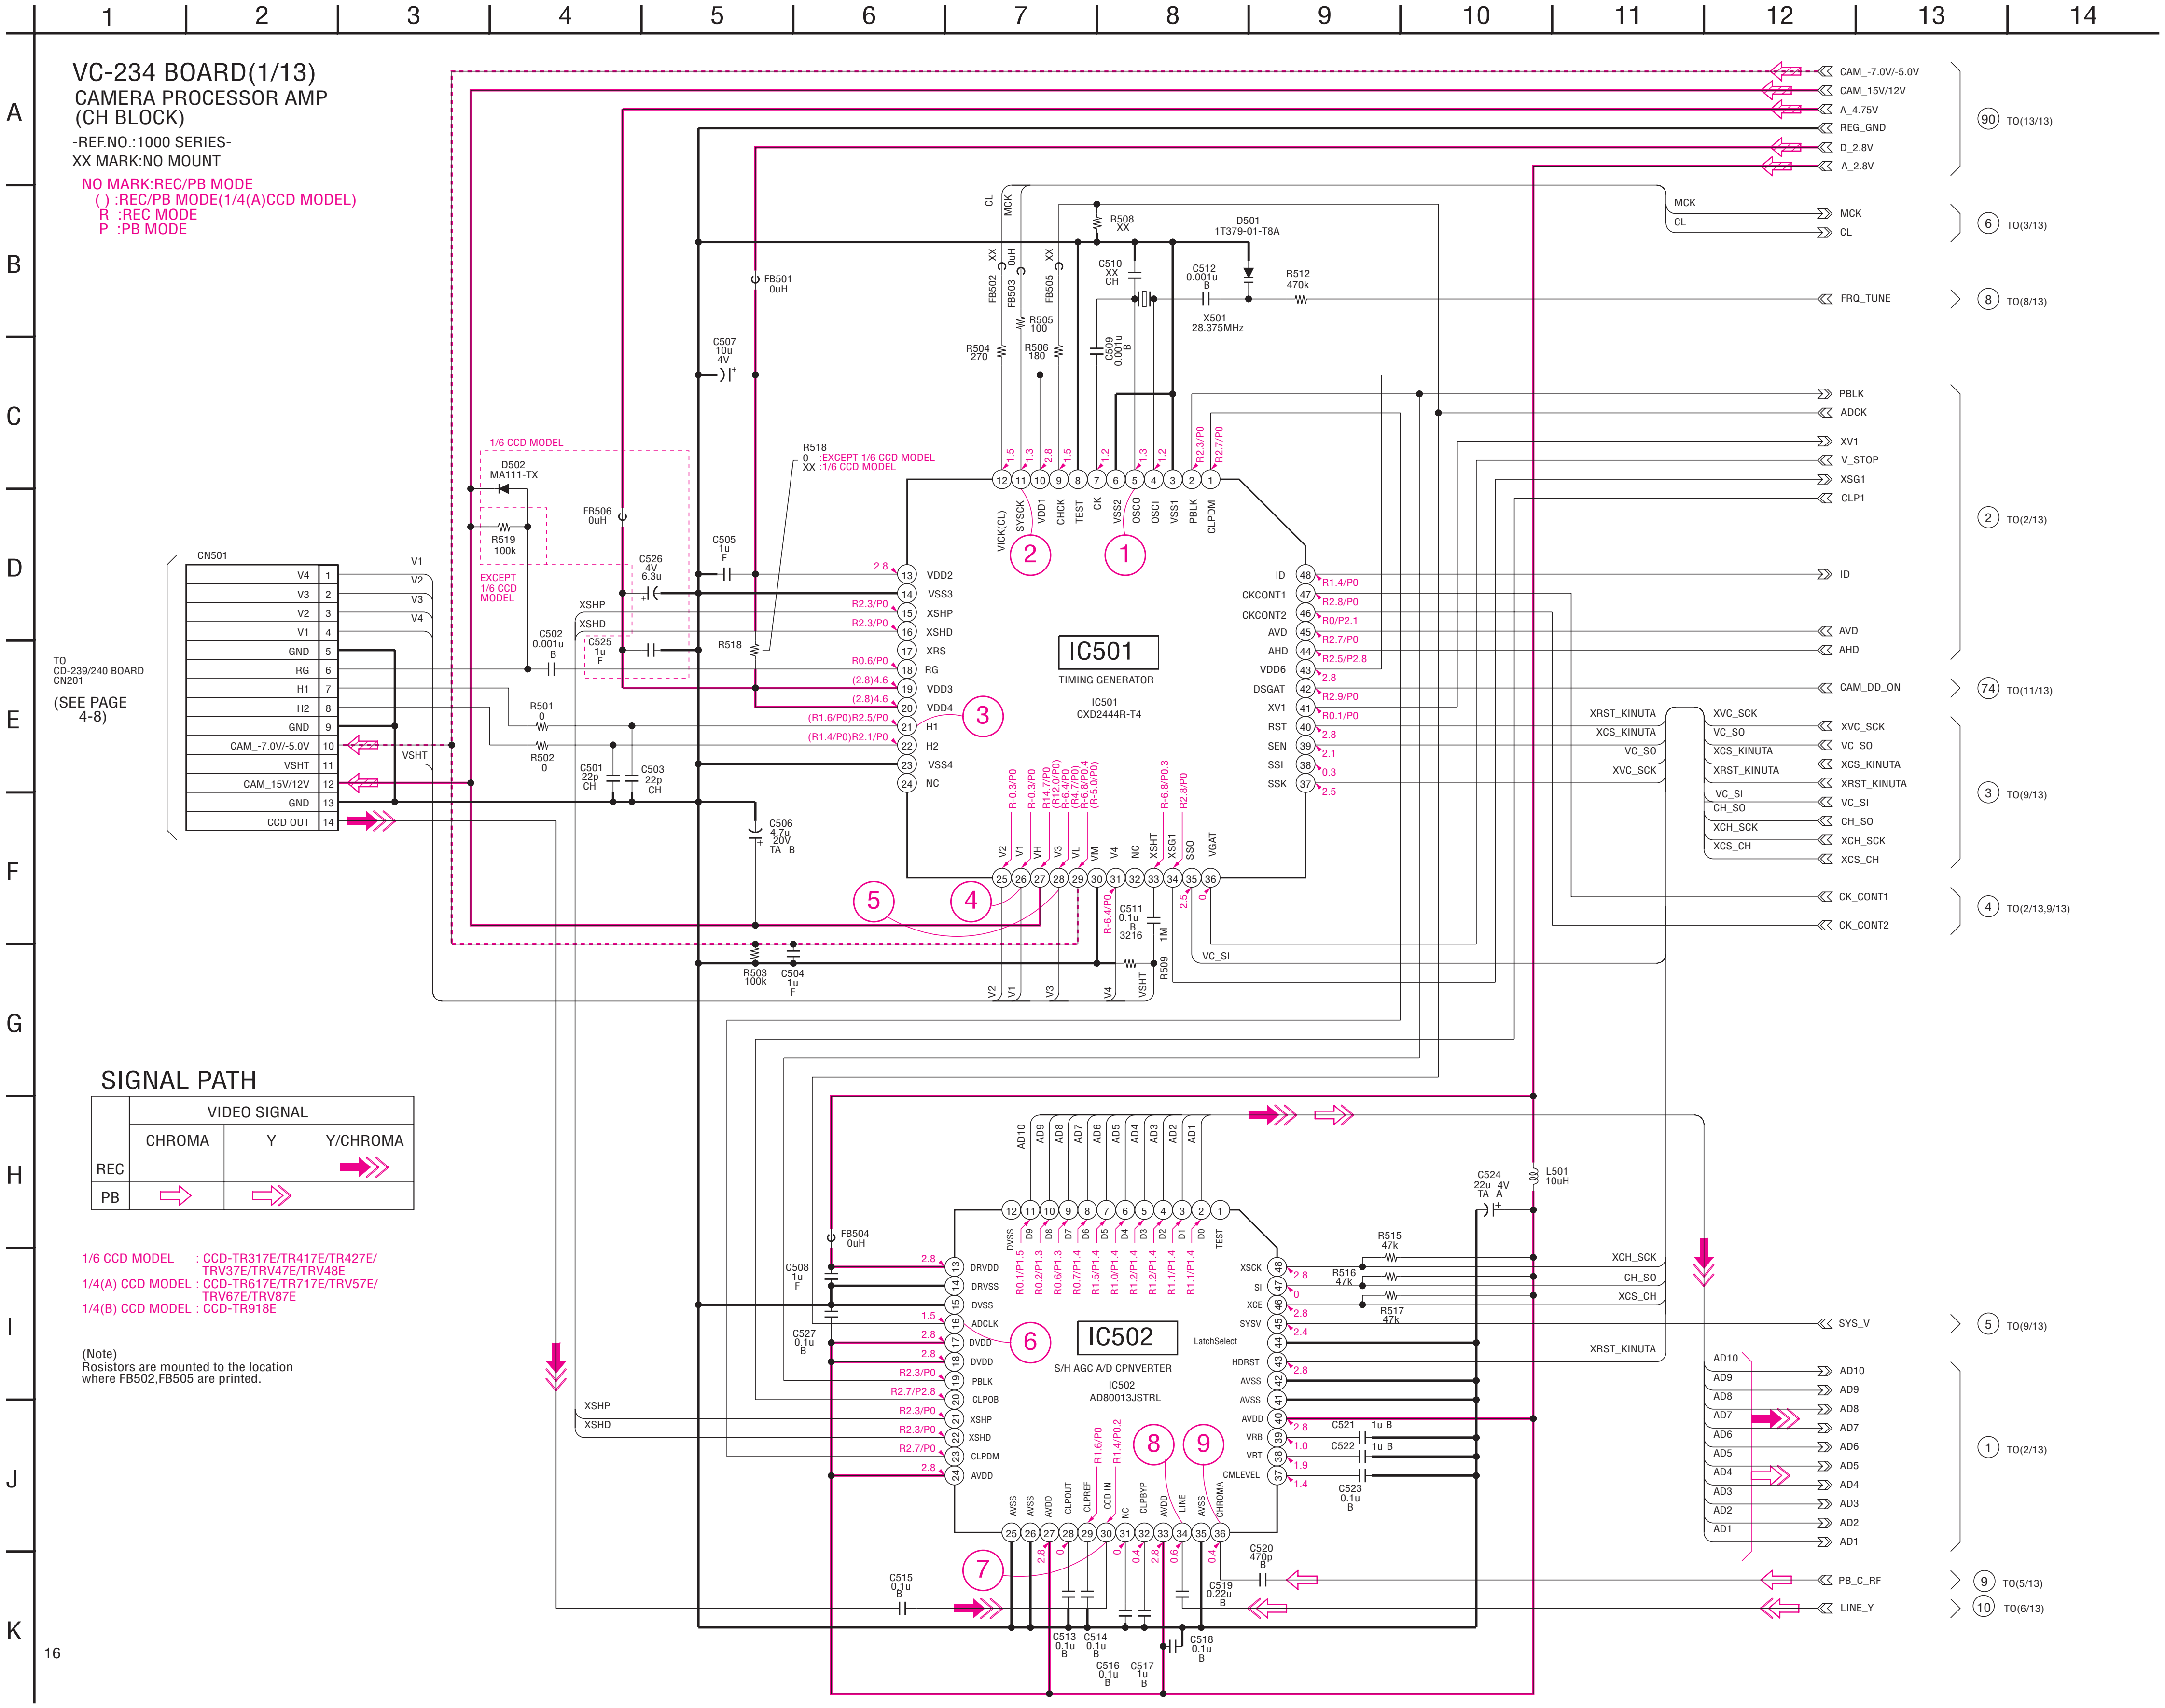
VC-234 BOARD(1/13)
CAMERA PROCESSOR AMP
(CH BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
( ) :REC/PB MODE(1/4(A)CCD MODEL)
R :REC MODE
P :PB MODE
IC501
TIMING GENERATOR
IC501
CXD2444R-T4
IC502
S/H AGC A/D CPNVERTER
IC502
AD80013JSTRL
CN501
TO
CD-239/240 BOARD
CN201
(SEE PAGE
4-8)
V4
V3
V2
V1
GND
RG
H1
H2
CAM_-7.0V/-5.0V
VSHT
CAM_15V/12V
CCD OUT
D501
1T379-01-T8A
X501
28.375MHz
D502
MA111-TX
1/6 CCD MODEL
EXCEPT
1/6 CCD
MODEL
R518
0 :EXCEPT 1/6 CCD MODEL
XX :1/6 CCD MODEL
L501
10uH
CAM_-7.0V/-5.0V
CAM_15V/12V
A_4.75V
REG_GND
D_2.8V
A_2.8V
TO(13/13)
MCK
CL
TO(3/13)
FRQ_TUNE
TO(8/13)
PBLK
ADCK
XV1
V_STOP
XSG1
CLP1
ID
AVD
AHD
TO(2/13)
CAM_DD_ON
TO(11/13)
XVC_SCK
VC_SO
XCS_KINUTA
XRST_KINUTA
VC_SI
CH_SO
XCH_SCK
XCS_CH
TO(9/13)
CK_CONT1
CK_CONT2
TO(2/13,9/13)
SYS_V
TO(9/13)
AD10
AD9
AD8
AD7
AD6
AD5
AD4
AD3
AD2
AD1
TO(2/13)
PB_C_RF
TO(5/13)
LINE_Y
TO(6/13)
1/6 CCD MODEL : CCD-TR317E/TR417E/TR427E/
TRV37E/TRV47E/TRV48E
1/4(A) CCD MODEL : CCD-TR617E/TR717E/TRV57E/
TRV67E/TRV87E
1/4(B) CCD MODEL : CCD-TR918E
(Note)
Resistors are mounted to the location
where FB502,FB505 are printed.
16

SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC			➡
PB	⇨	⇨	

CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/
TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

For Schematic Diagram
- Refer to page 4-35 for printed wiring board.
- Refer to page 4-88 for waveforms.

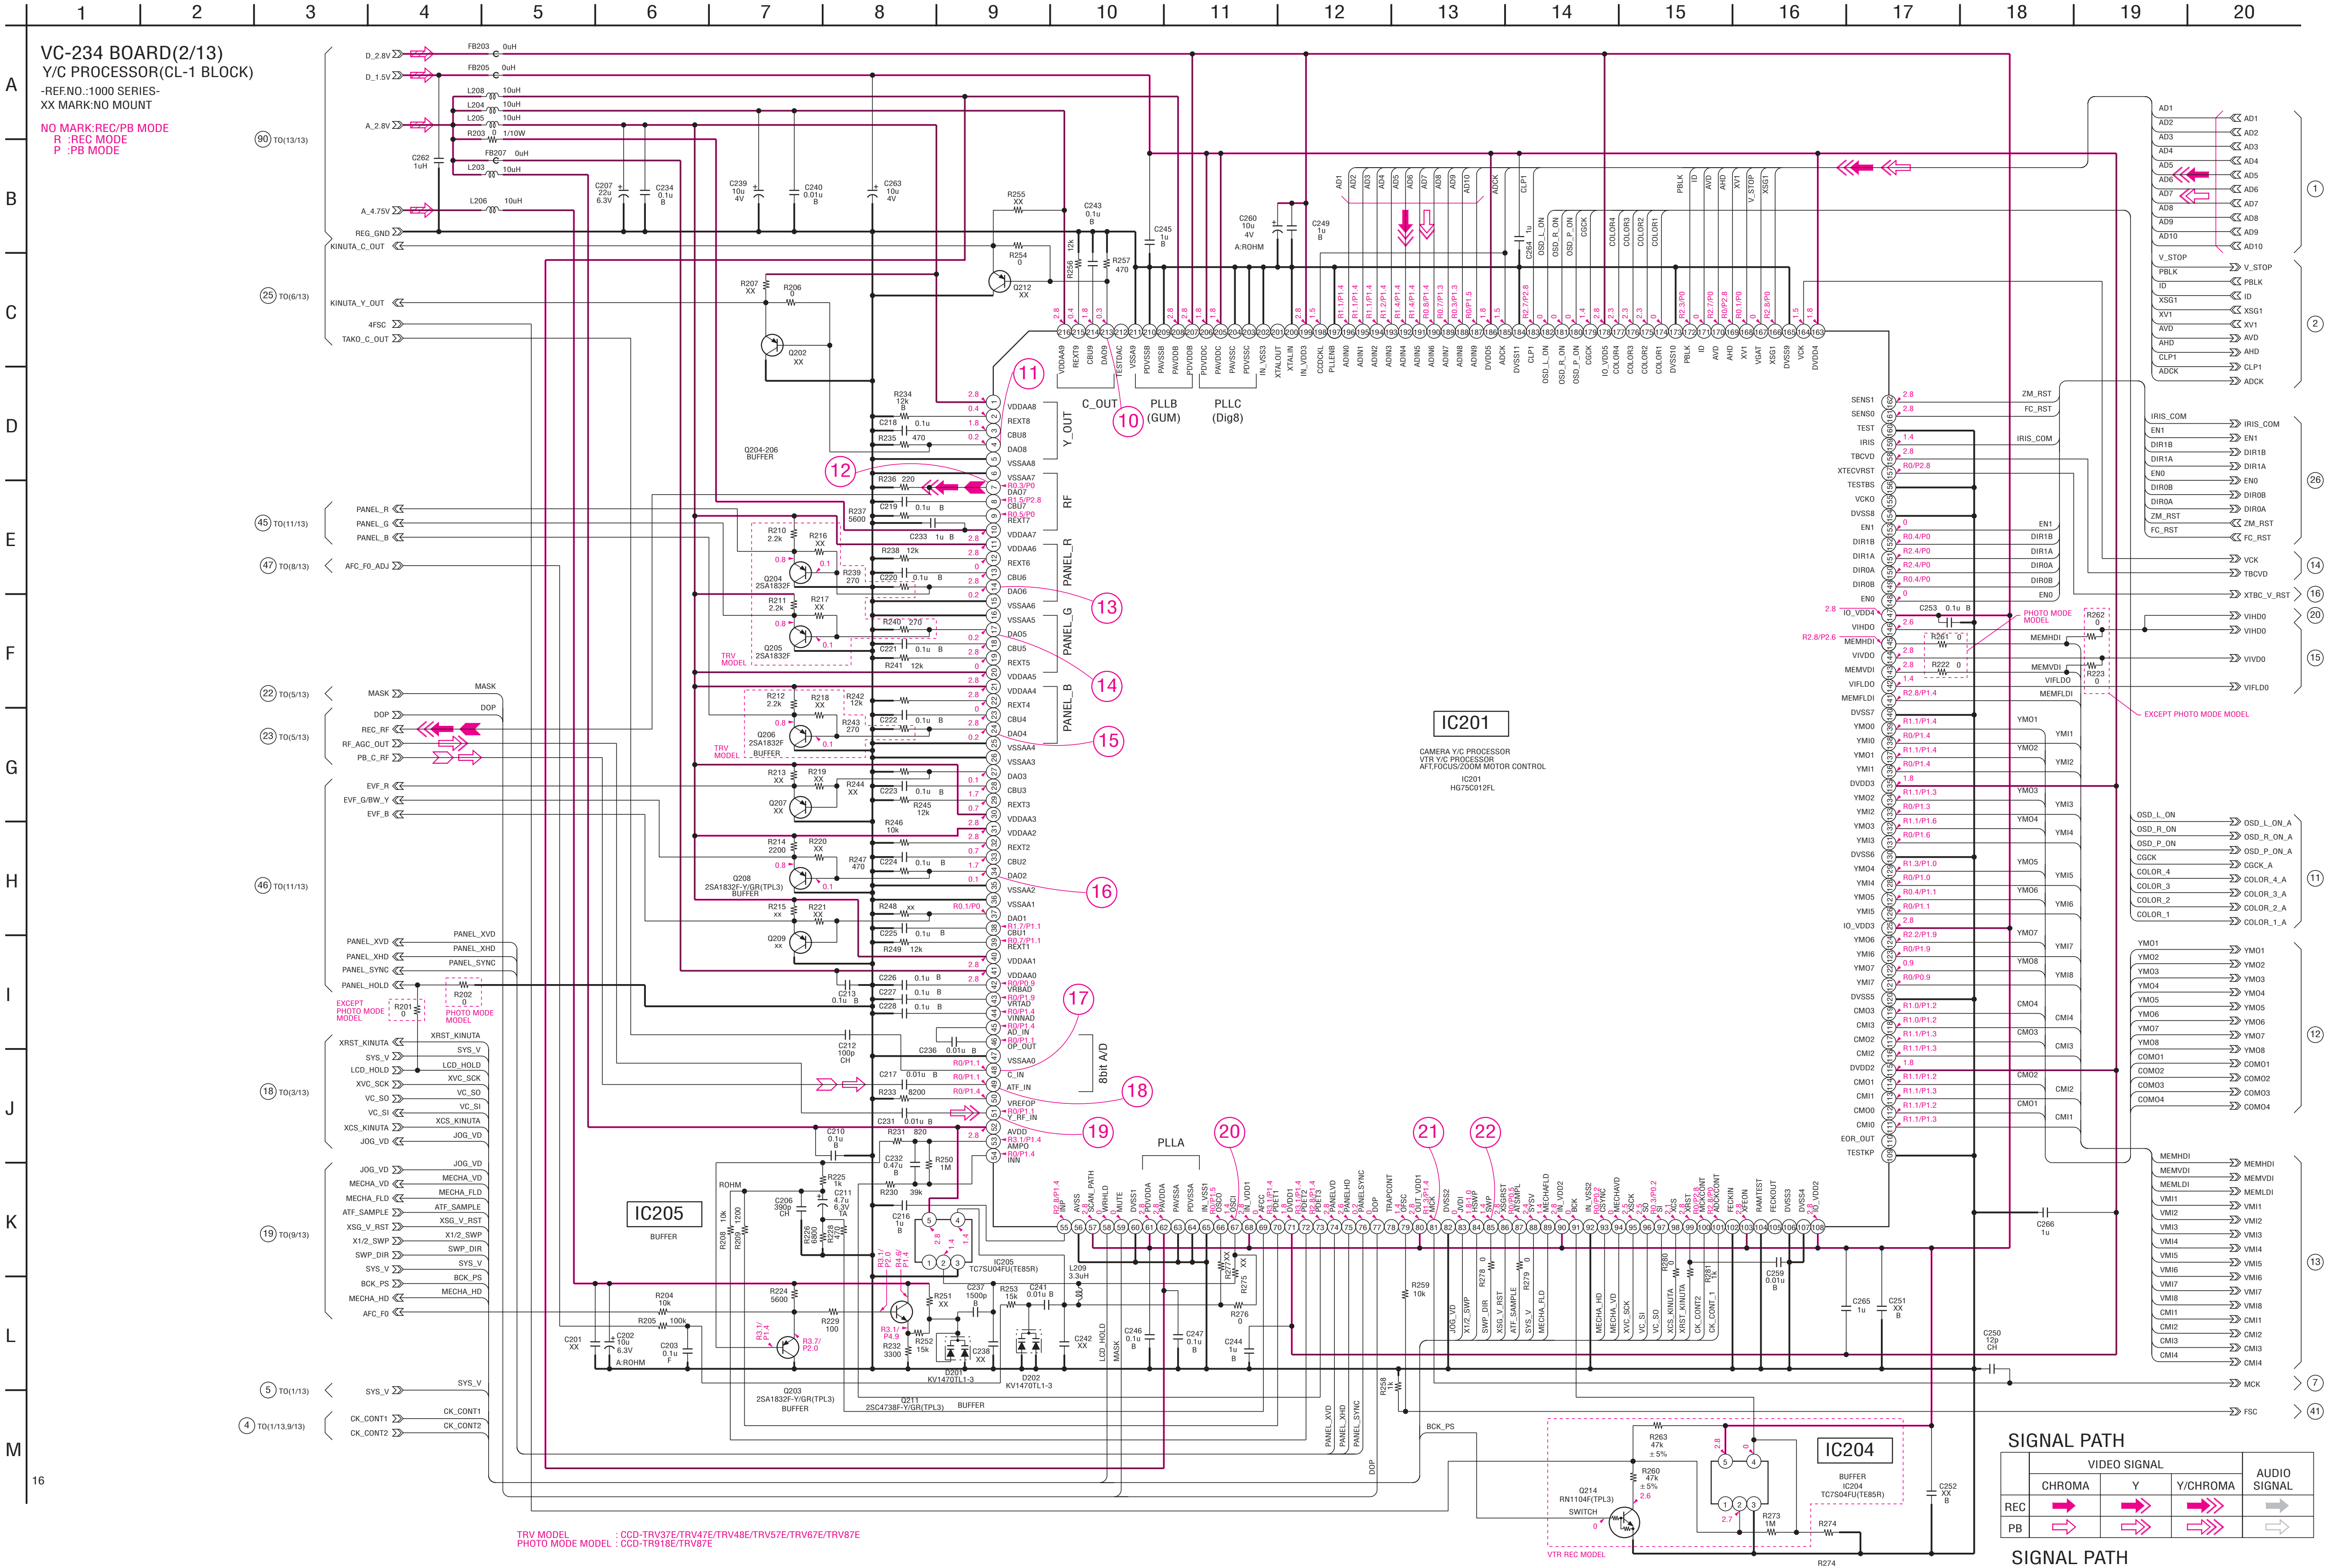
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
A
B
C
D
E
F
G
H
I
J
K
L
M
16
IC201
CAMERA Y/C PROCESSOR
VTR Y/C PROCESSOR
AFT,FOCUS/ZOOM MOTOR CONTROL
IC201
HG75C012FL
IC205
BUFFER
IC205
TC7SU04FU(TE85R)
IC204
BUFFER
IC204
TC7SU04FU(TE85R)
Q204-206
BUFFER
Q214
RN1104F(TPL3)
SWITCH
VTR REC MODEL
C_OUT
Y_OUT
PLLB
(GUM)
PLLC
(Dig8)
PLLA
RF
PANEL_R
PANEL_G
PANEL_B
8bit A/D
TRV MODEL
PHOTO MODE MODEL
EXCEPT PHOTO MODE MODEL
R274
XX :VTR REC MODEL
0 :EXCEPT VTR REC MODEL
TO(1/13)
TO(2/13)
TO(3/13)
TO(4/13)
TO(5/13)
TO(6/13)
TO(8/13)
TO(9/13)
TO(11/13)
TO(13/13)
TO(7/13,12/13)
TO(1/13,9/13)

VC-234 BOARD(2/13)
Y/C PROCESSOR(CL-1 BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
PHOTO MODE MODEL : CCD-TR918E/TRV87E

SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➡»	➡»»	➡
PB	⇨	⇨»	⇨»»	⇨

SIGNAL PATH

	REC	REC/PB	PB
Capstan speed servo	➤		⇨

Y/C PROCESSOR
VC-234 (2/13)

For Schematic Diagram

- Refer to page 4-35 for printed wiring board.

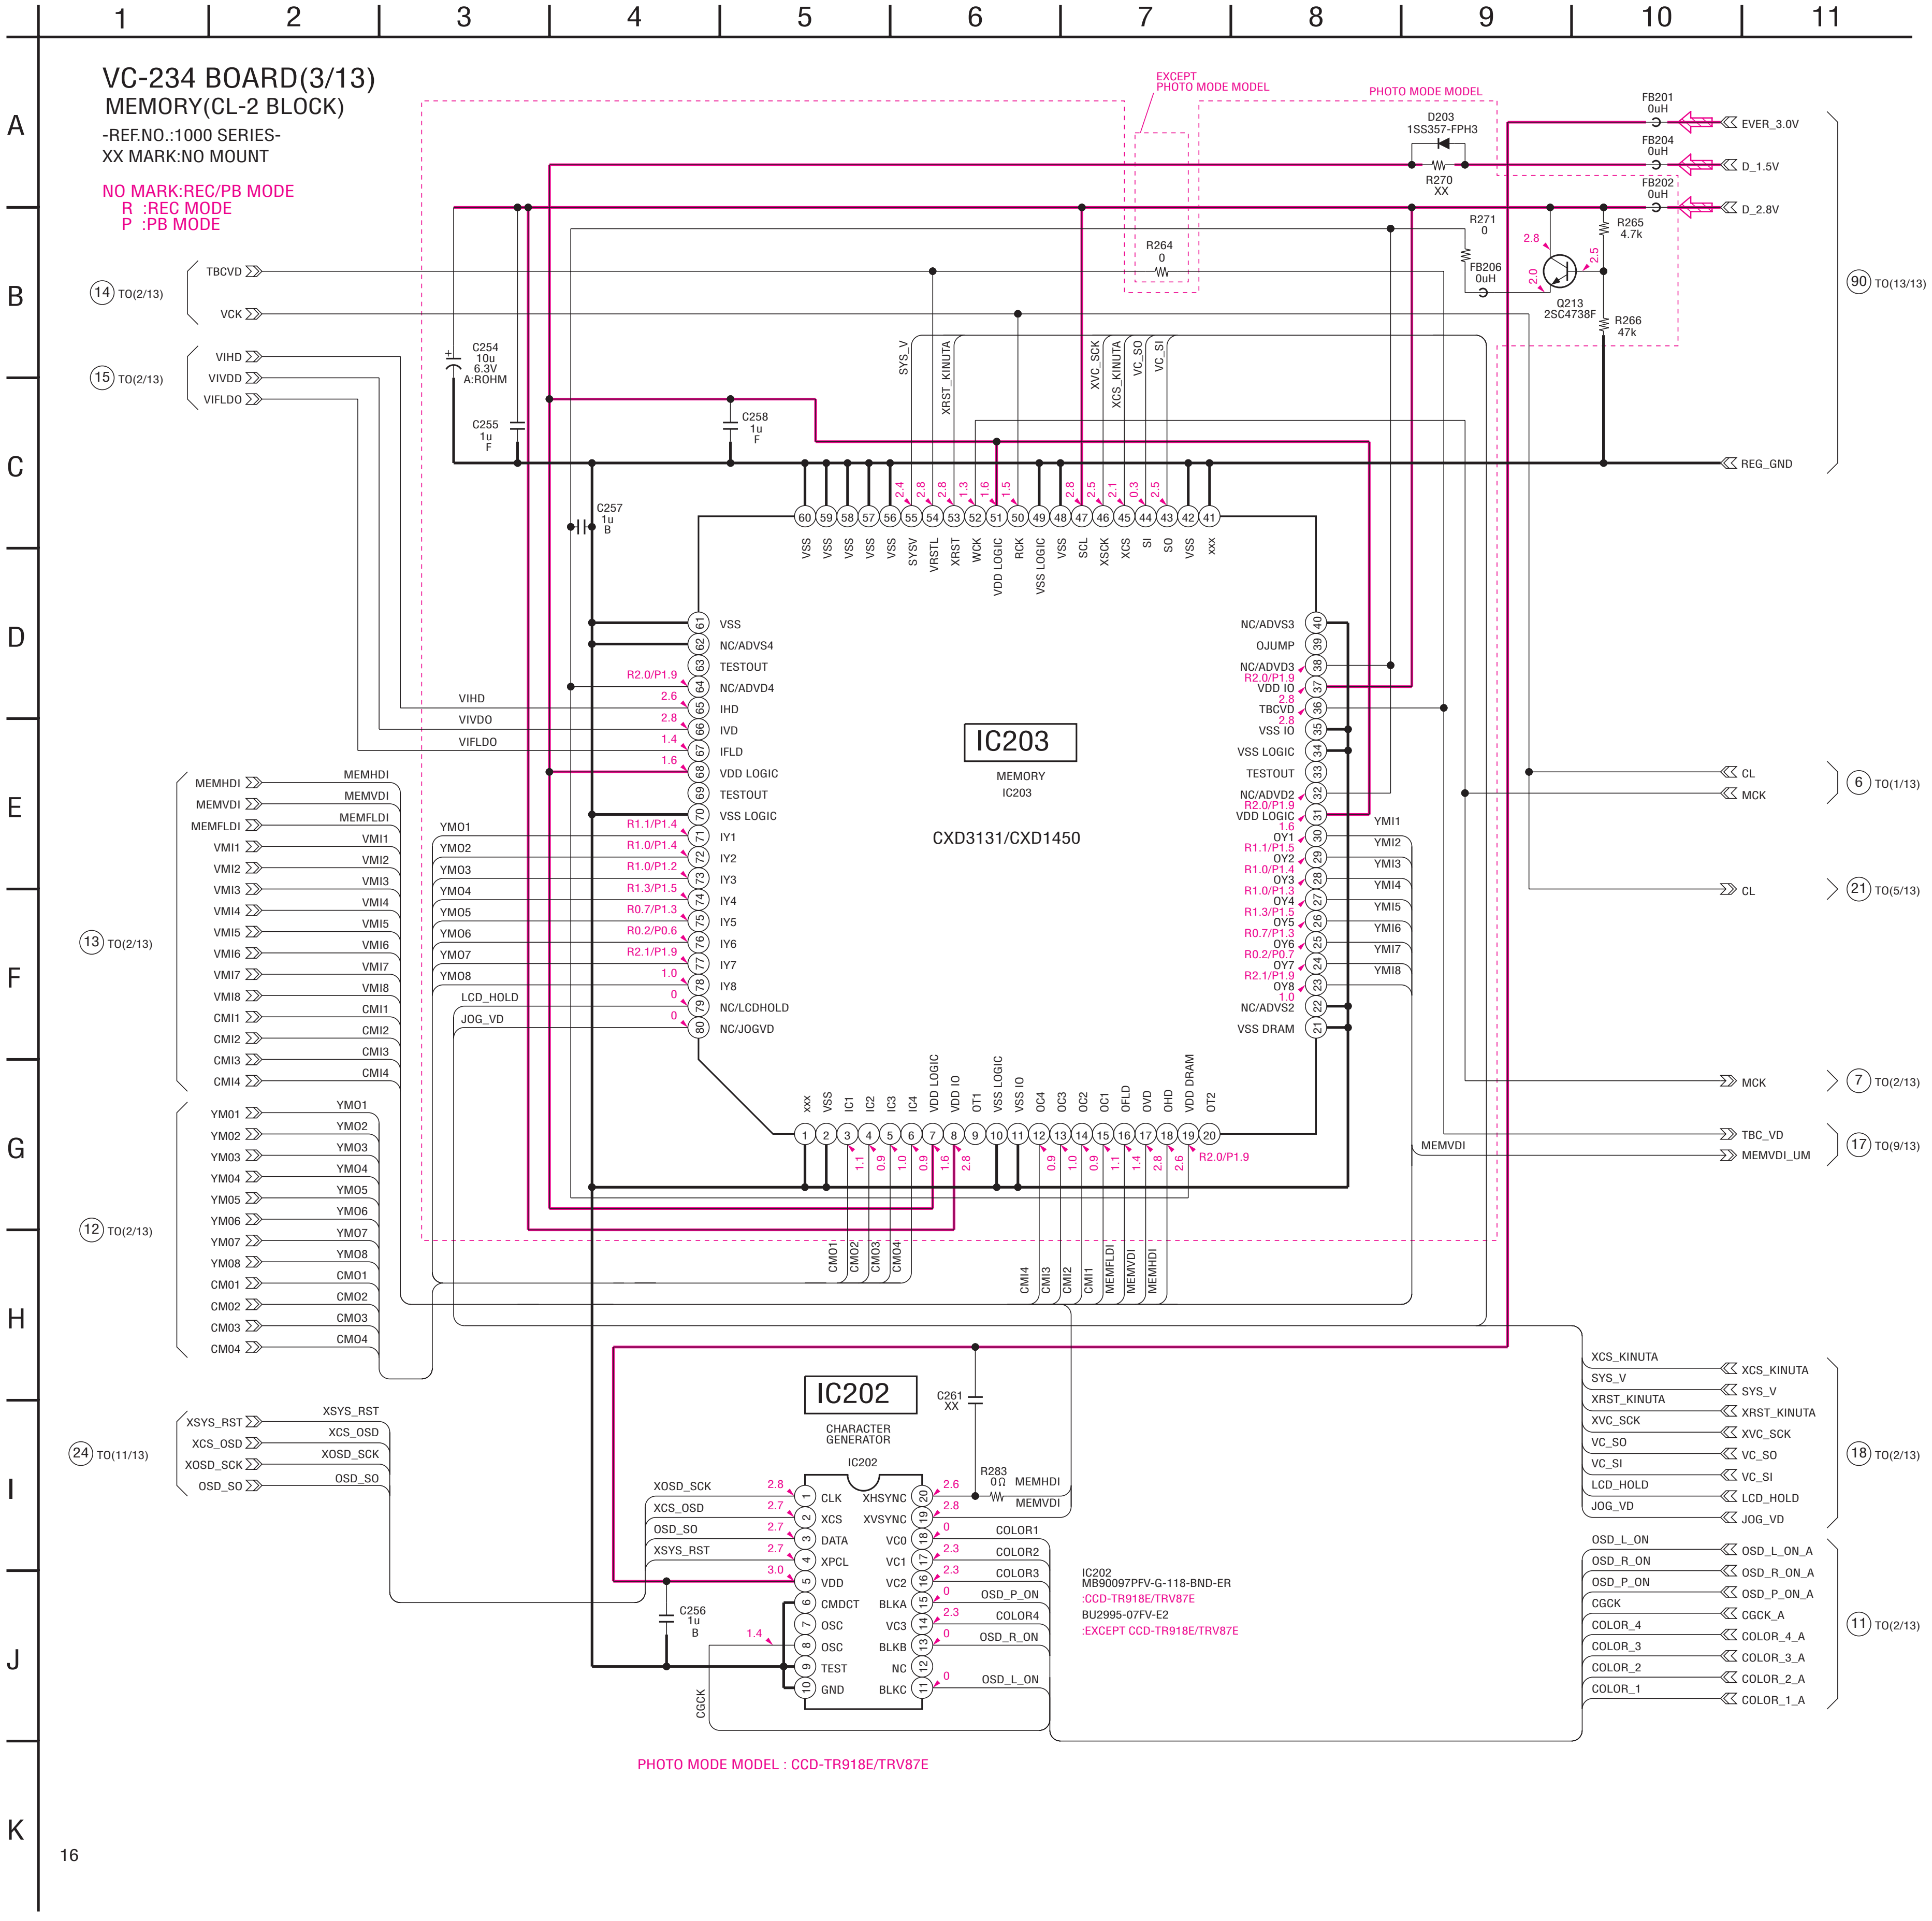
1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
G
H
I
J
K
VC-234 BOARD(3/13)
MEMORY(CL-2 BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
EXCEPT PHOTO MODE MODEL
PHOTO MODE MODEL
IC203
MEMORY
IC203
CXD3131/CXD1450
IC202
CHARACTER GENERATOR
IC202
IC202
MB90097PFV-G-118-BND-ER
:CCD-TR918E/TRV87E
BU2995-07FV-E2
:EXCEPT CCD-TR918E/TRV87E
PHOTO MODE MODEL : CCD-TR918E/TRV87E
D203
1SS357-FPH3
R270
XX
R271
0
R264
0
FB201
0uH
FB204
0uH
FB202
0uH
FB206
0uH
R265
4.7k
R266
47k
Q213
2SC4738F
C254
10u
6.3V
A:ROHM
C255
1u
F
C258
1u
F
C257
1u
B
C256
1u
B
C261
XX
R283
0Ω
EVER_3.0V
D_1.5V
D_2.8V
REG_GND
TO(13/13)
TBCVD
VCK
TO(2/13)
VIHD
VIVDD
VIFLDO
TO(2/13)
CL
MCK
TO(1/13)
CL
TO(5/13)
MCK
TO(2/13)
TBC_VD
MEMVDI_UM
TO(9/13)
MEMHDI
MEMVDI
MEMFLDI
VMI1
VMI2
VMI3
VMI4
VMI5
VMI6
VMI7
VMI8
CMI1
CMI2
CMI3
CMI4
TO(2/13)
YMO1
YMO2
YMO3
YMO4
YMO5
YMO6
YMO7
YMO8
CMO1
CMO2
CMO3
CMO4
TO(2/13)
XSYS_RST
XCS_OSD
XOSD_SCK
OSD_SO
TO(11/13)
XCS_KINUTA
SYS_V
XRST_KINUTA
XVC_SCK
VC_SO
VC_SI
LCD_HOLD
JOG_VD
TO(2/13)
OSD_L_ON_A
OSD_R_ON_A
OSD_P_ON_A
CGCK_A
COLOR_4_A
COLOR_3_A
COLOR_2_A
COLOR_1_A
TO(2/13)
VSS
VSS
VSS
VSS
VSS
SYSV
VRSTL
XRST
WCK
VDD LOGIC
RCK
VSS LOGIC
VSS
SCL
XSCK
XCS
SI
SO
VSS
xxx
VSS
NC/ADVS4
TESTOUT
NC/ADVD4
IHD
IVD
IFLD
VDD LOGIC
TESTOUT
VSS LOGIC
IY1
IY2
IY3
IY4
IY5
IY6
IY7
IY8
NC/LCDHOLD
NC/JOGVD
NC/ADVS3
OJUMP
NC/ADVD3
VDD IO
TBCVD
VSS IO
VSS LOGIC
TESTOUT
NC/ADVD2
VDD LOGIC
OY1
OY2
OY3
OY4
OY5
OY6
OY7
OY8
NC/ADVS2
VSS DRAM
xxx
VSS
IC1
IC2
IC3
IC4
VDD LOGIC
VDD IO
OT1
VSS LOGIC
VSS IO
OC4
OC3
OC2
OC1
OFLD
OVD
OHD
VDD DRAM
OT2
CLK
XCS
DATA
XPCL
VDD
CMDCT
OSC
OSC
TEST
GND
XHSYNC
XVSYNC
VC0
VC1
VC2
BLKA
VC3
BLKB
NC
BLKC
CGCK
COLOR1
COLOR2
COLOR3
COLOR4
OSD_P_ON
OSD_R_ON
OSD_L_ON
MEMHDI
MEMVDI
16

For Schematic Diagram
- Refer to page 4-35 for printed wiring board.

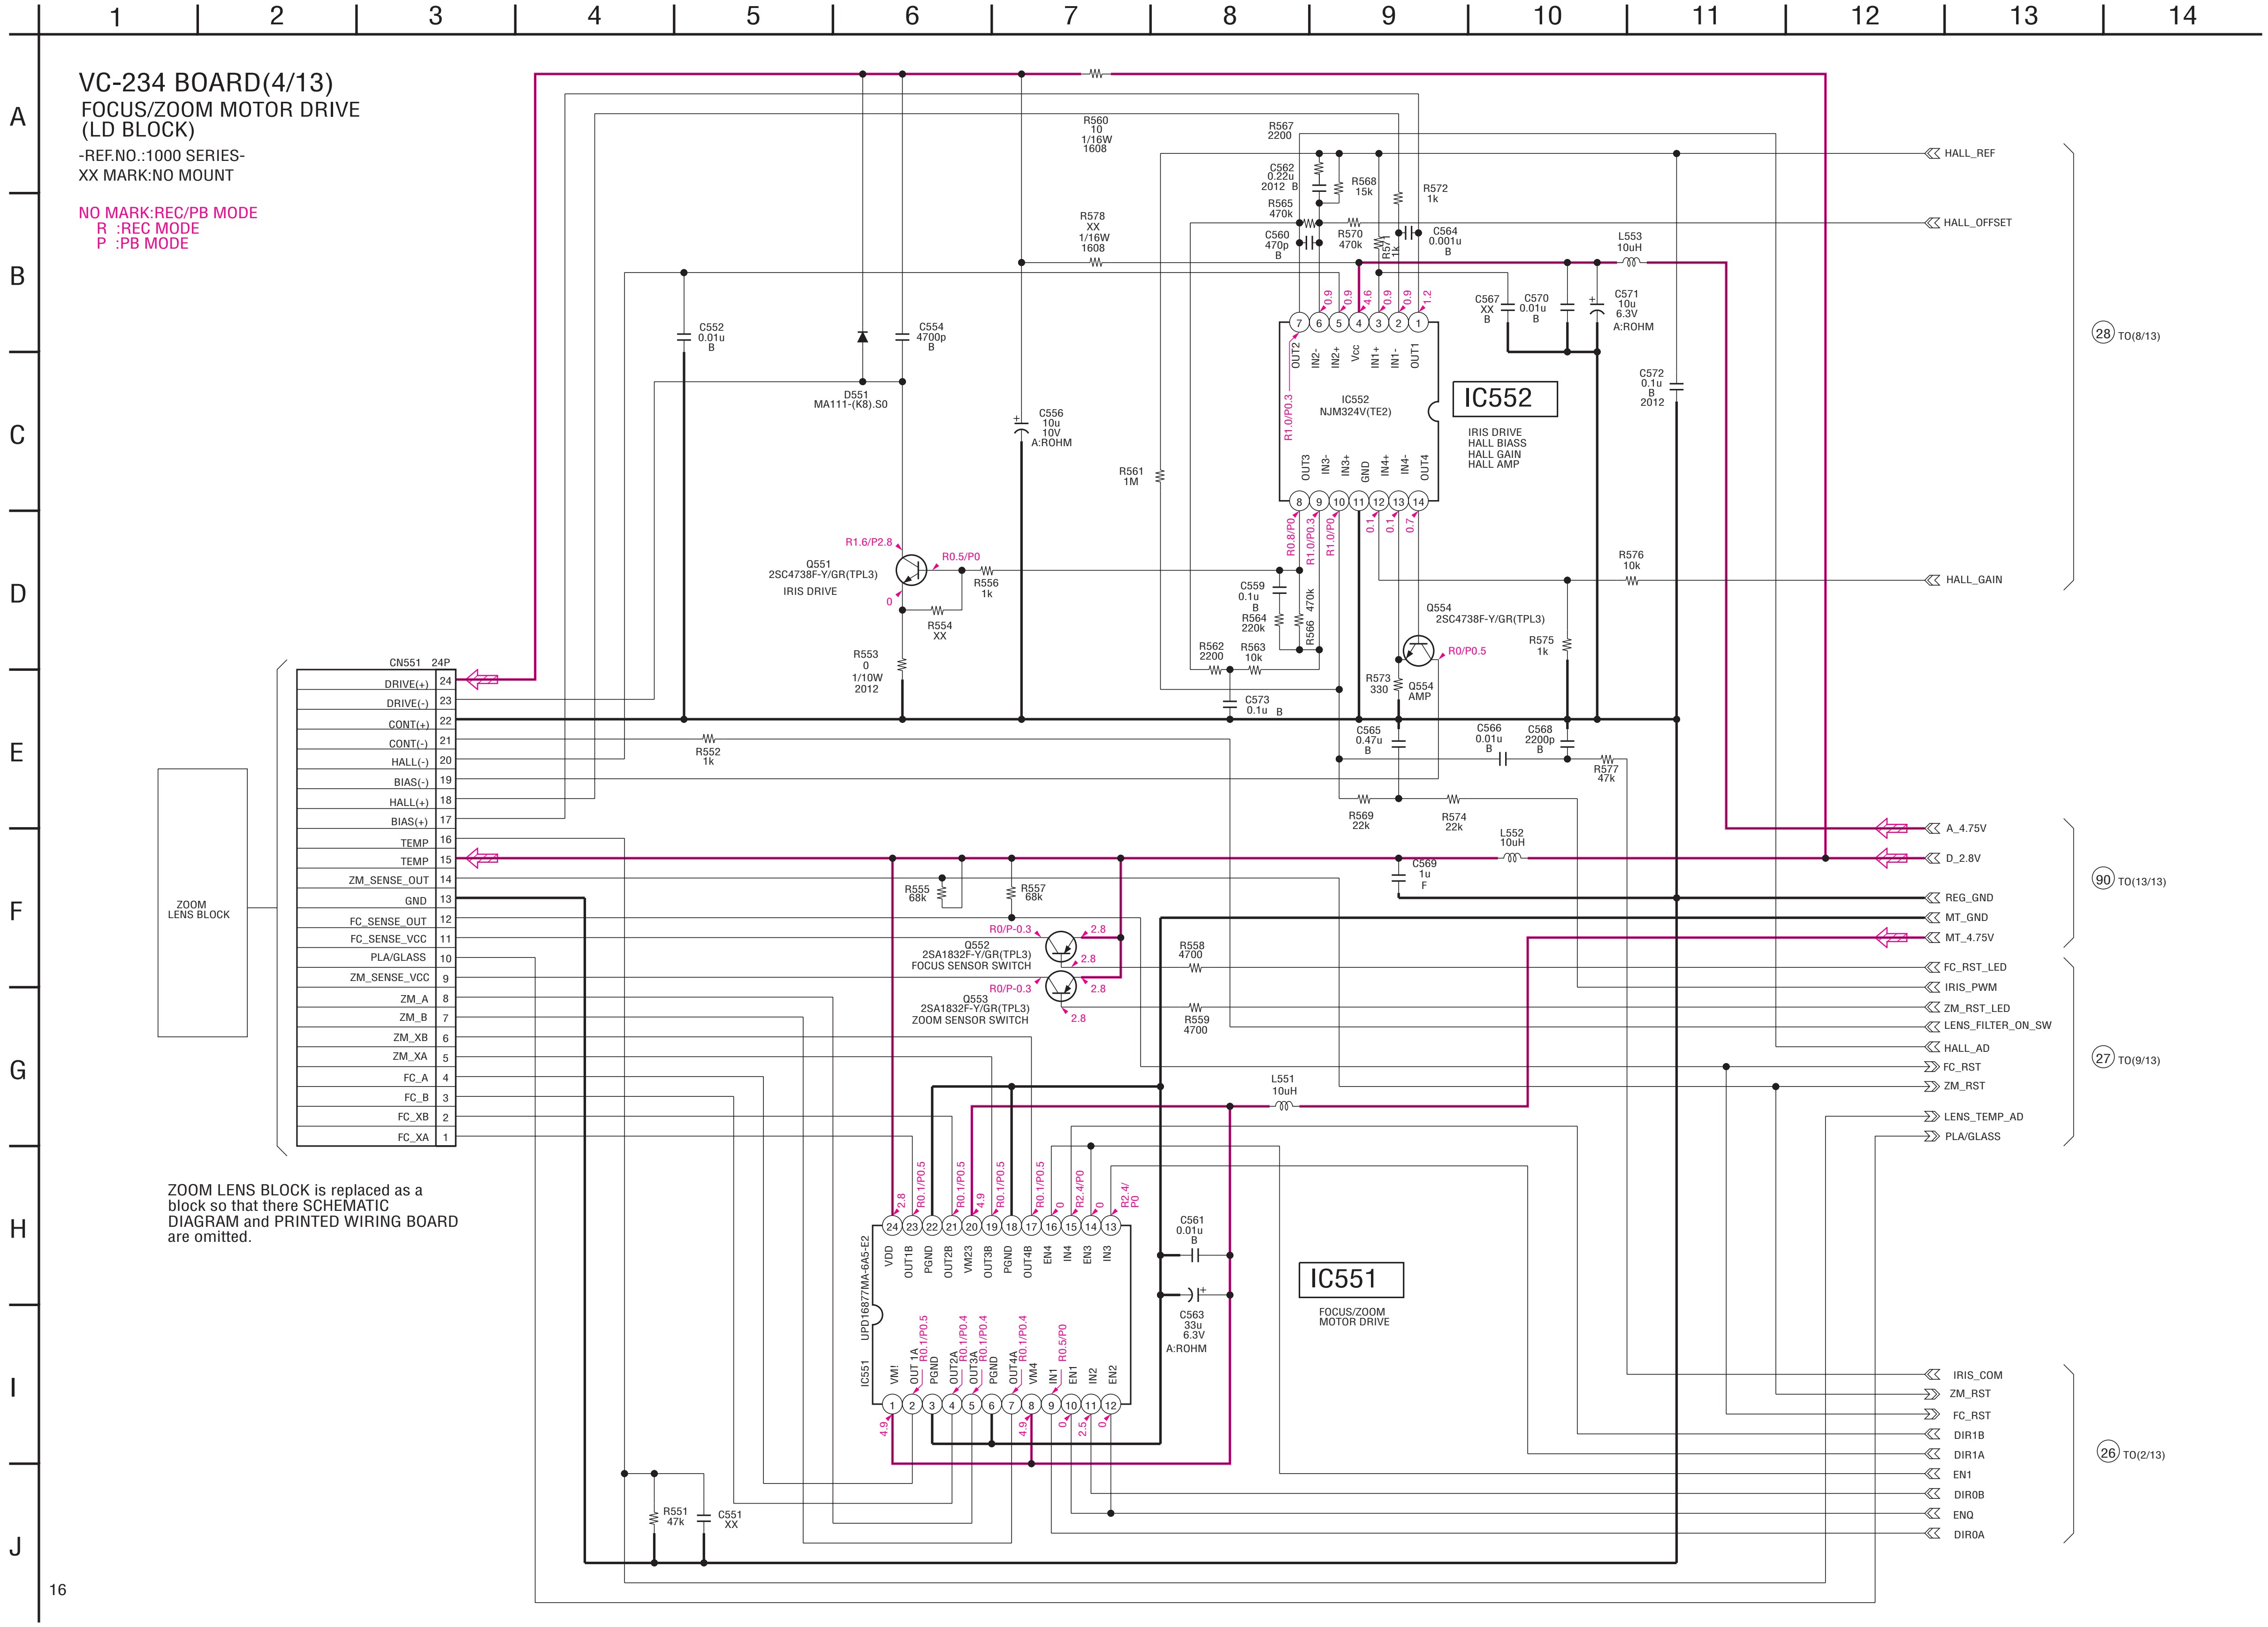
1
2
3
4
5
6
7
8
9
10
11
12
13
14
A
B
C
D
E
F
G
H
I
J
VC-234 BOARD(4/13)
FOCUS/ZOOM MOTOR DRIVE
(LD BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
IC552
NJM324V(TE2)
IRIS DRIVE
HALL BIAS
HALL GAIN
HALL AMP
IC551
UPD16877MA-6A5-E2
FOCUS/ZOOM MOTOR DRIVE
Q551
2SC4738F-Y/GR(TPL3)
IRIS DRIVE
Q552
2SA1832F-Y/GR(TPL3)
FOCUS SENSOR SWITCH
Q553
2SA1832F-Y/GR(TPL3)
ZOOM SENSOR SWITCH
Q554
2SC4738F-Y/GR(TPL3)
Q554
AMP
D551
MA111-(K8).S0
CN551 24P
DRIVE(+)
DRIVE(-)
CONT(+)
CONT(-)
HALL(-)
BIAS(-)
HALL(+)
BIAS(+)
TEMP
TEMP
ZM_SENSE_OUT
GND
FC_SENSE_OUT
FC_SENSE_VCC
PLA/GLASS
ZM_SENSE_VCC
ZM_A
ZM_B
ZM_XB
ZM_XA
FC_A
FC_B
FC_XB
FC_XA
ZOOM
LENS BLOCK
HALL_REF
HALL_OFFSET
HALL_GAIN
28 TO(8/13)
A_4.75V
D_2.8V
REG_GND
MT_GND
MT_4.75V
90 TO(13/13)
FC_RST_LED
IRIS_PWM
ZM_RST_LED
LENS_FILTER_ON_SW
HALL_AD
FC_RST
ZM_RST
LENS_TEMP_AD
PLA/GLASS
27 TO(9/13)
IRIS_COM
ZM_RST
FC_RST
DIR1B
DIR1A
EN1
DIR0B
ENQ
DIR0A
26 TO(2/13)
ZOOM LENS BLOCK is replaced as a block so that there SCHEMATIC DIAGRAM and PRINTED WIRING BOARD are omitted.
16

For Schematic Diagram
- Refer to page 4-35 for printed wiring board.
- Refer to page 4-88 for waveforms.

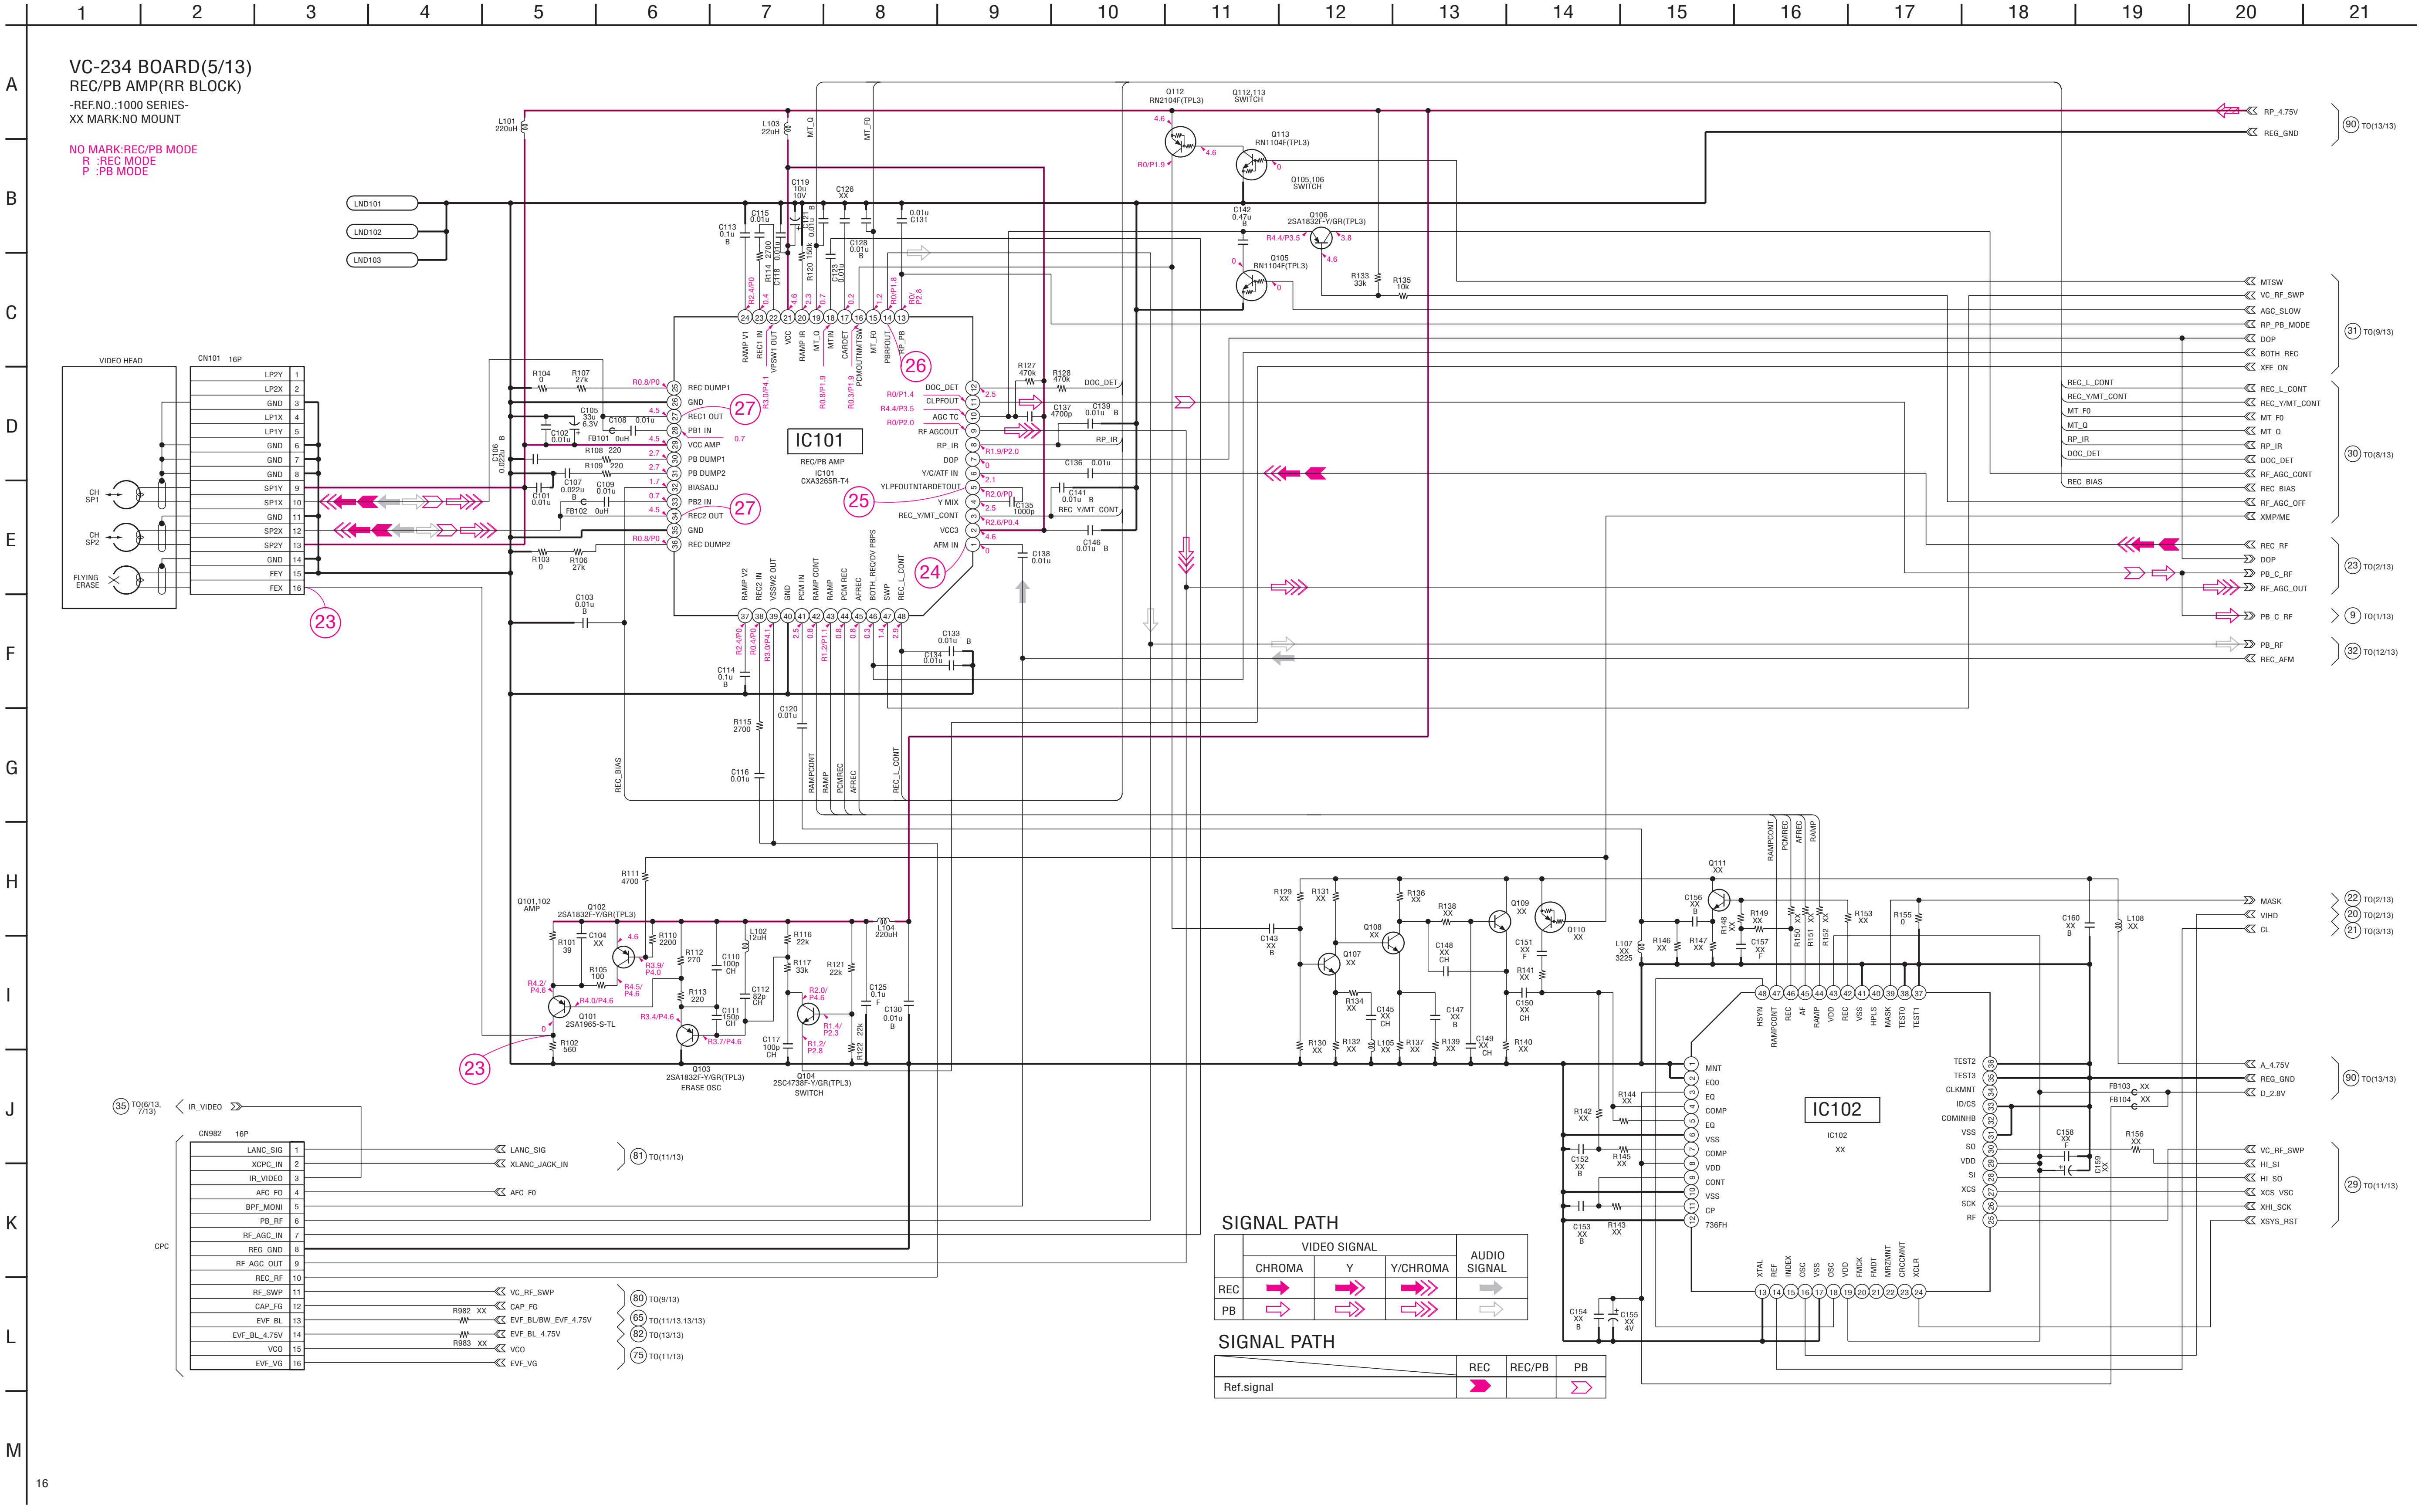
VC-234 BOARD(5/13)
REC/PB AMP(RR BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
VIDEO HEAD
CN101 16P
CH SP1
CH SP2
FLYING ERASE
LND101
LND102
LND103
IC101
REC/PB AMP
IC101 CXA3265R-T4
IC102
Q101,102 AMP
Q101 2SA1965-S-TL
Q102 2SA1832F-Y/GR(TPL3)
Q103 2SA1832F-Y/GR(TPL3) ERASE OSC
Q104 2SC4738F-Y/GR(TPL3) SWITCH
Q105 RN1104F(TPL3)
Q105,106 SWITCH
Q106 2SA1832F-Y/GR(TPL3)
Q112 RN2104F(TPL3)
Q112,113 SWITCH
Q113 RN1104F(TPL3)
CN982 16P
CPC
RP_4.75V
REG_GND
TO(13/13)
TO(9/13)
TO(8/13)
TO(2/13)
TO(1/13)
TO(12/13)
TO(11/13)
TO(3/13)
TO(6/13, 7/13)
SIGNAL PATH
VIDEO SIGNAL
CHROMA
Y
Y/CHROMA
AUDIO SIGNAL
REC
PB
SIGNAL PATH
REC
REC/PB
PB
Ref.signal
16

For Schematic Diagram
- Refer to page 4-35 for printed wiring board.
- Refer to page 4-89 for waveforms.

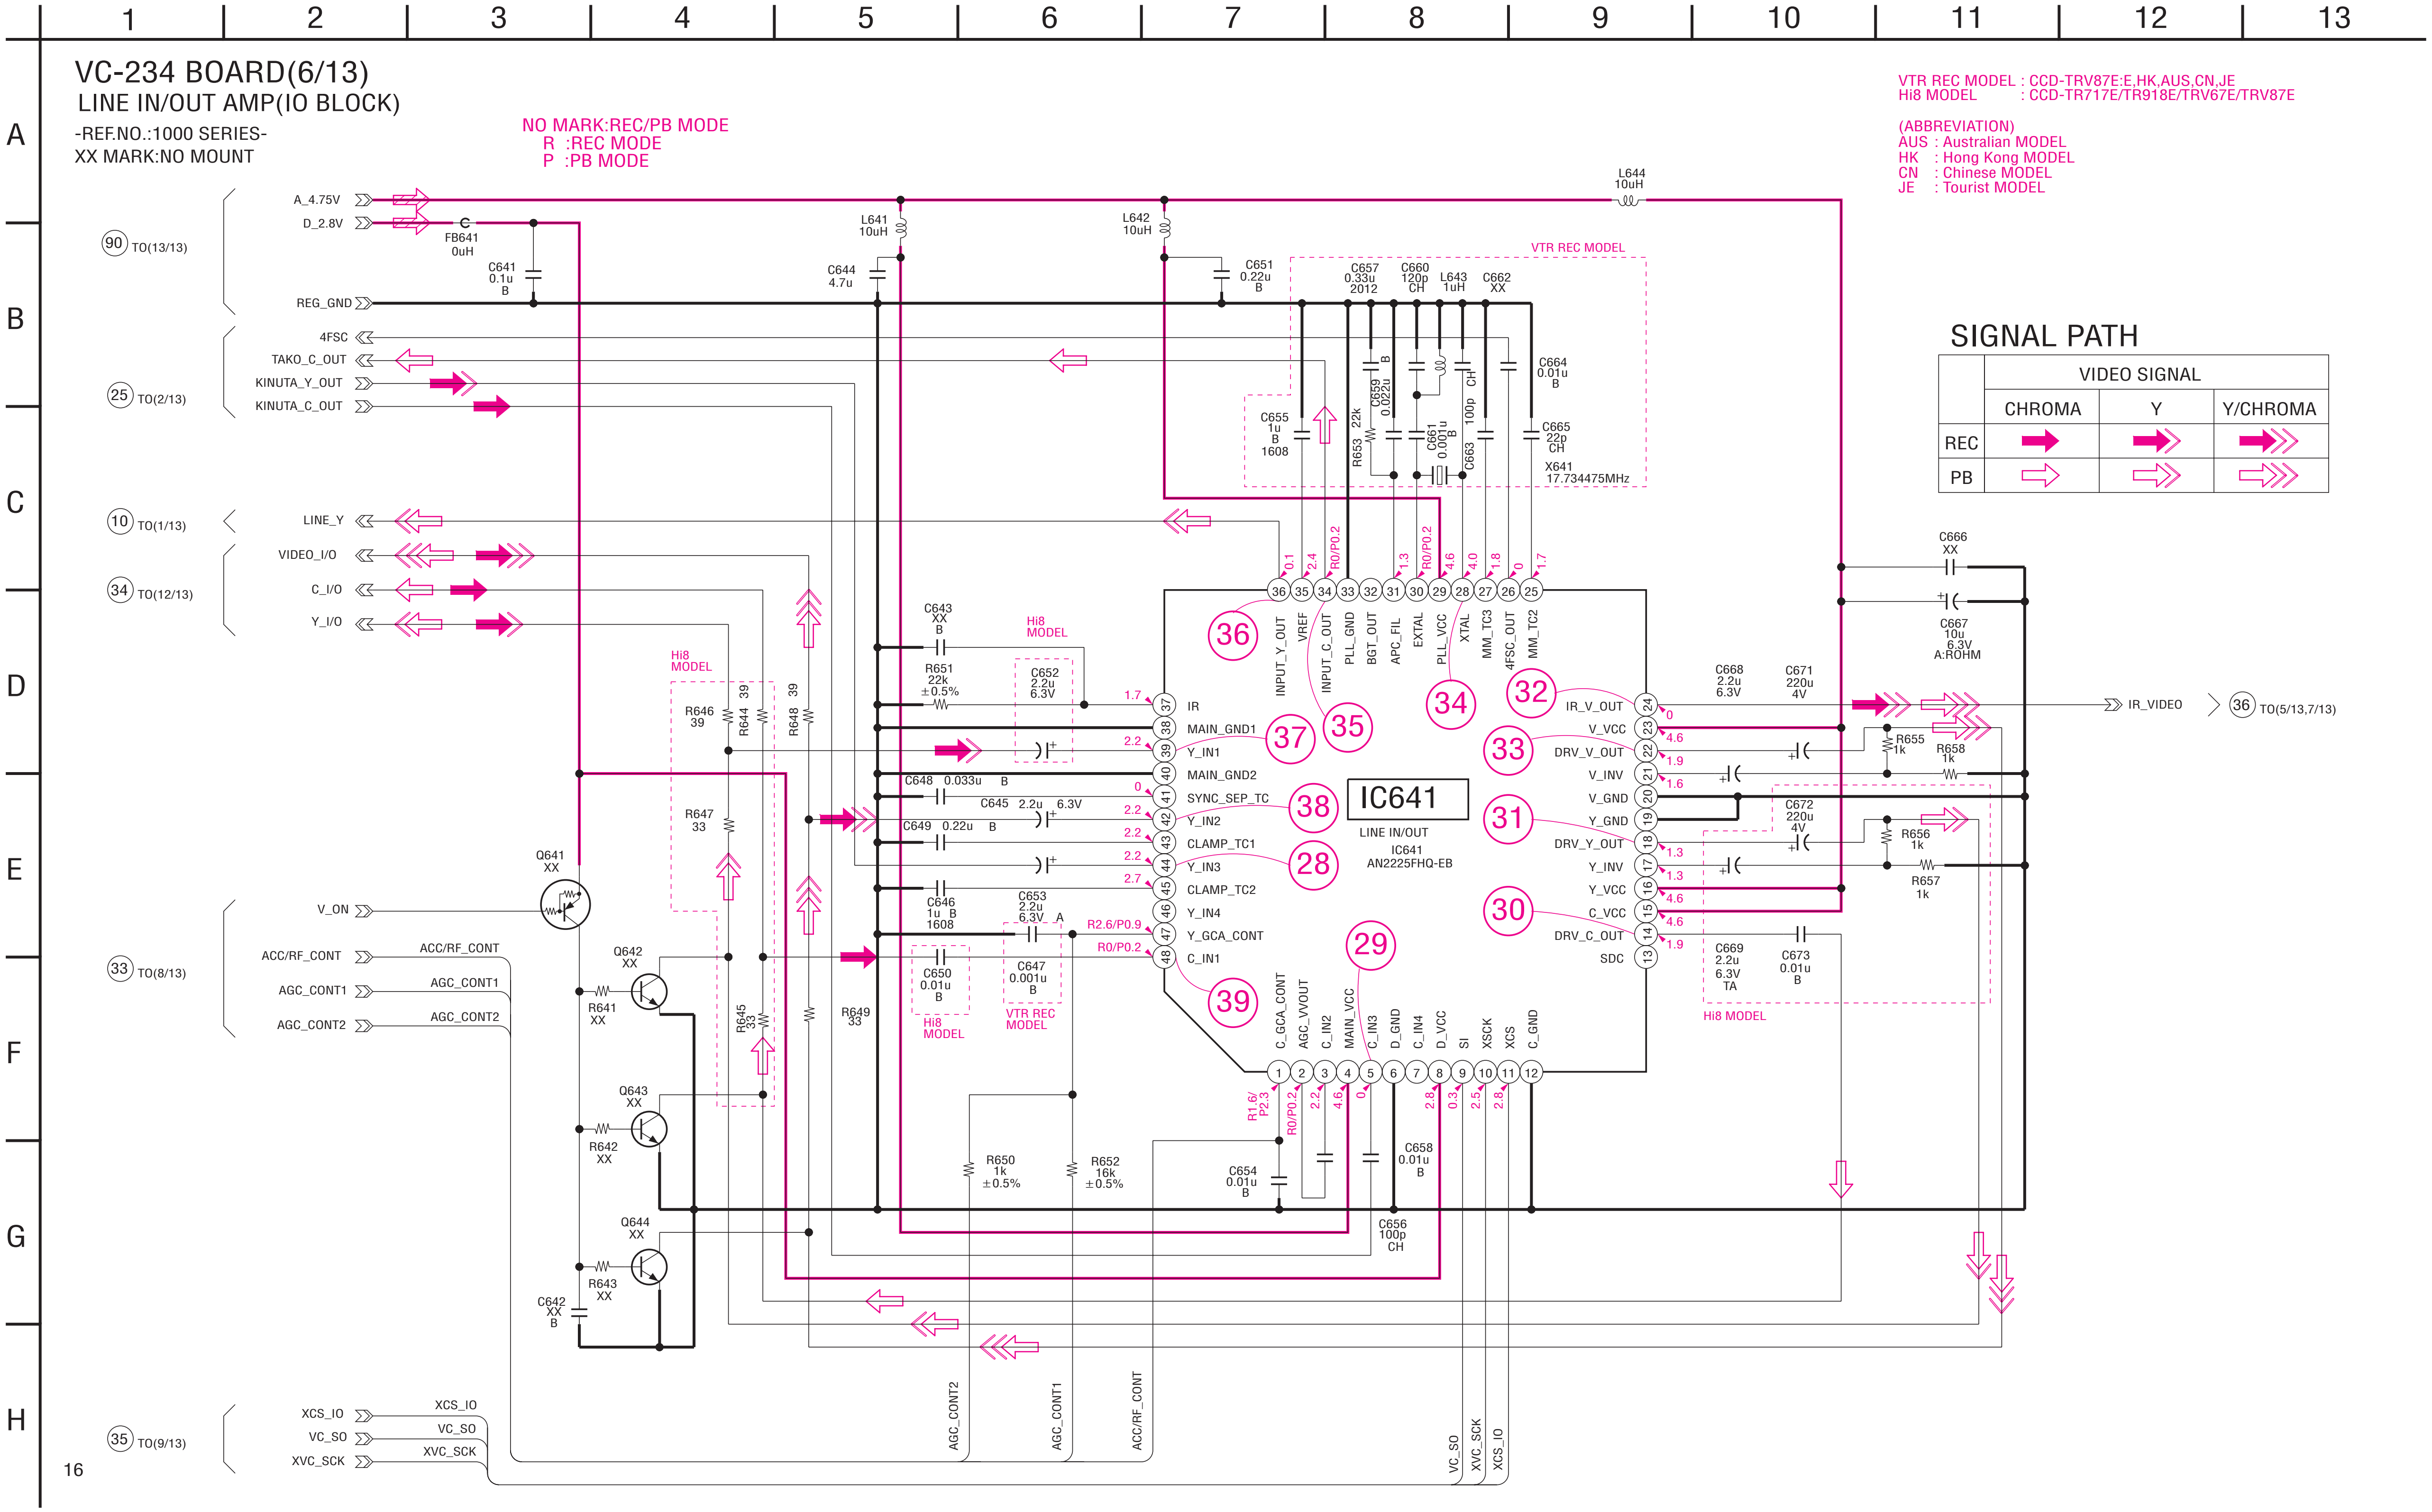
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
VC-234 BOARD(6/13)
LINE IN/OUT AMP(IO BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
VTR REC MODEL : CCD-TRV87E:E,HK,AUS,CN,JE
Hi8 MODEL : CCD-TR717E/TR918E/TRV67E/TRV87E
(ABBREVIATION)
AUS : Australian MODEL
HK : Hong Kong MODEL
CN : Chinese MODEL
JE : Tourist MODEL
SIGNAL PATH
VIDEO SIGNAL
CHROMA
Y
Y/CHROMA
REC
PB
90 TO(13/13)
A_4.75V
D_2.8V
REG_GND
FB641 0uH
C641 0.1u B
25 TO(2/13)
4FSC
TAKO_C_OUT
KINUTA_Y_OUT
KINUTA_C_OUT
10 TO(1/13)
LINE_Y
34 TO(12/13)
VIDEO_I/O
C_I/O
Y_I/O
V_ON
33 TO(8/13)
ACC/RF_CONT
AGC_CONT1
AGC_CONT2
35 TO(9/13)
XCS_IO
VC_SO
XVC_SCK
16
L641 10uH
C644 4.7u
L642 10uH
C651 0.22u B
L644 10uH
VTR REC MODEL
C657 0.33u 2012
C660 120p CH
L643 1uH
C662 XX
C664 0.01u B
C655 1u B 1608
R653 22k
C659 0.022u B
C661 0.001u B
C663 100p CH
C665 22p CH
X641 17.734475MHz
C643 XX B
Hi8 MODEL
R651 22k ±0.5%
C652 2.2u 6.3V
C648 0.033u B
C645 2.2u 6.3V
C649 0.22u B
C646 1u B 1608
C653 2.2u 6.3V A
C650 0.01u B
C647 0.001u B
R646 39
R644 39
R648 39
R647 33
R645 33
R649 33
Q641 XX
Q642 XX
R641 XX
Q643 XX
R642 XX
Q644 XX
R643 XX
C642 XX B
R650 1k ±0.5%
R652 16k ±0.5%
C654 0.01u B
C658 0.01u B
C656 100p CH
IC641
LINE IN/OUT
IC641
AN2225FHQ-EB
INPUT_Y_OUT
VREF
INPUT_C_OUT
PLL_GND
BGT_OUT
APC_FIL
EXTAL
PLL_VCC
XTAL
MM_TC3
4FSC_OUT
MM_TC2
IR
MAIN_GND1
Y_IN1
MAIN_GND2
SYNC_SEP_TC
Y_IN2
CLAMP_TC1
Y_IN3
CLAMP_TC2
Y_IN4
Y_GCA_CONT
C_IN1
IR_V_OUT
V_VCC
DRV_V_OUT
V_INV
V_GND
Y_GND
DRV_Y_OUT
Y_INV
Y_VCC
C_VCC
DRV_C_OUT
SDC
C_GCA_CONT
AGC_V/OUT
C_IN2
MAIN_VCC
C_IN3
D_GND
C_IN4
D_VCC
SI
XSCK
XCS
C_GND
C666 XX
C667 10u 6.3V A:ROHM
C668 2.2u 6.3V
C671 220u 4V
R655 1k
R658 1k
C672 220u 4V
R656 1k
R657 1k
C669 2.2u 6.3V TA
C673 0.01u B
Hi8 MODEL
IR_VIDEO
36 TO(5/13,7/13)
AGC_CONT2
AGC_CONT1
ACC/RF_CONT
VC_SO
XVC_SCK
XCS_IO
R1.6/P2.3
R0/P0.2
R2.6/P0.9
36
37
35
34
32
33
38
31
28
30
29
39

For Schematic Diagram
- Refer to page 4-35 for printed wiring board.
- Refer to page 4-89 for waveforms.

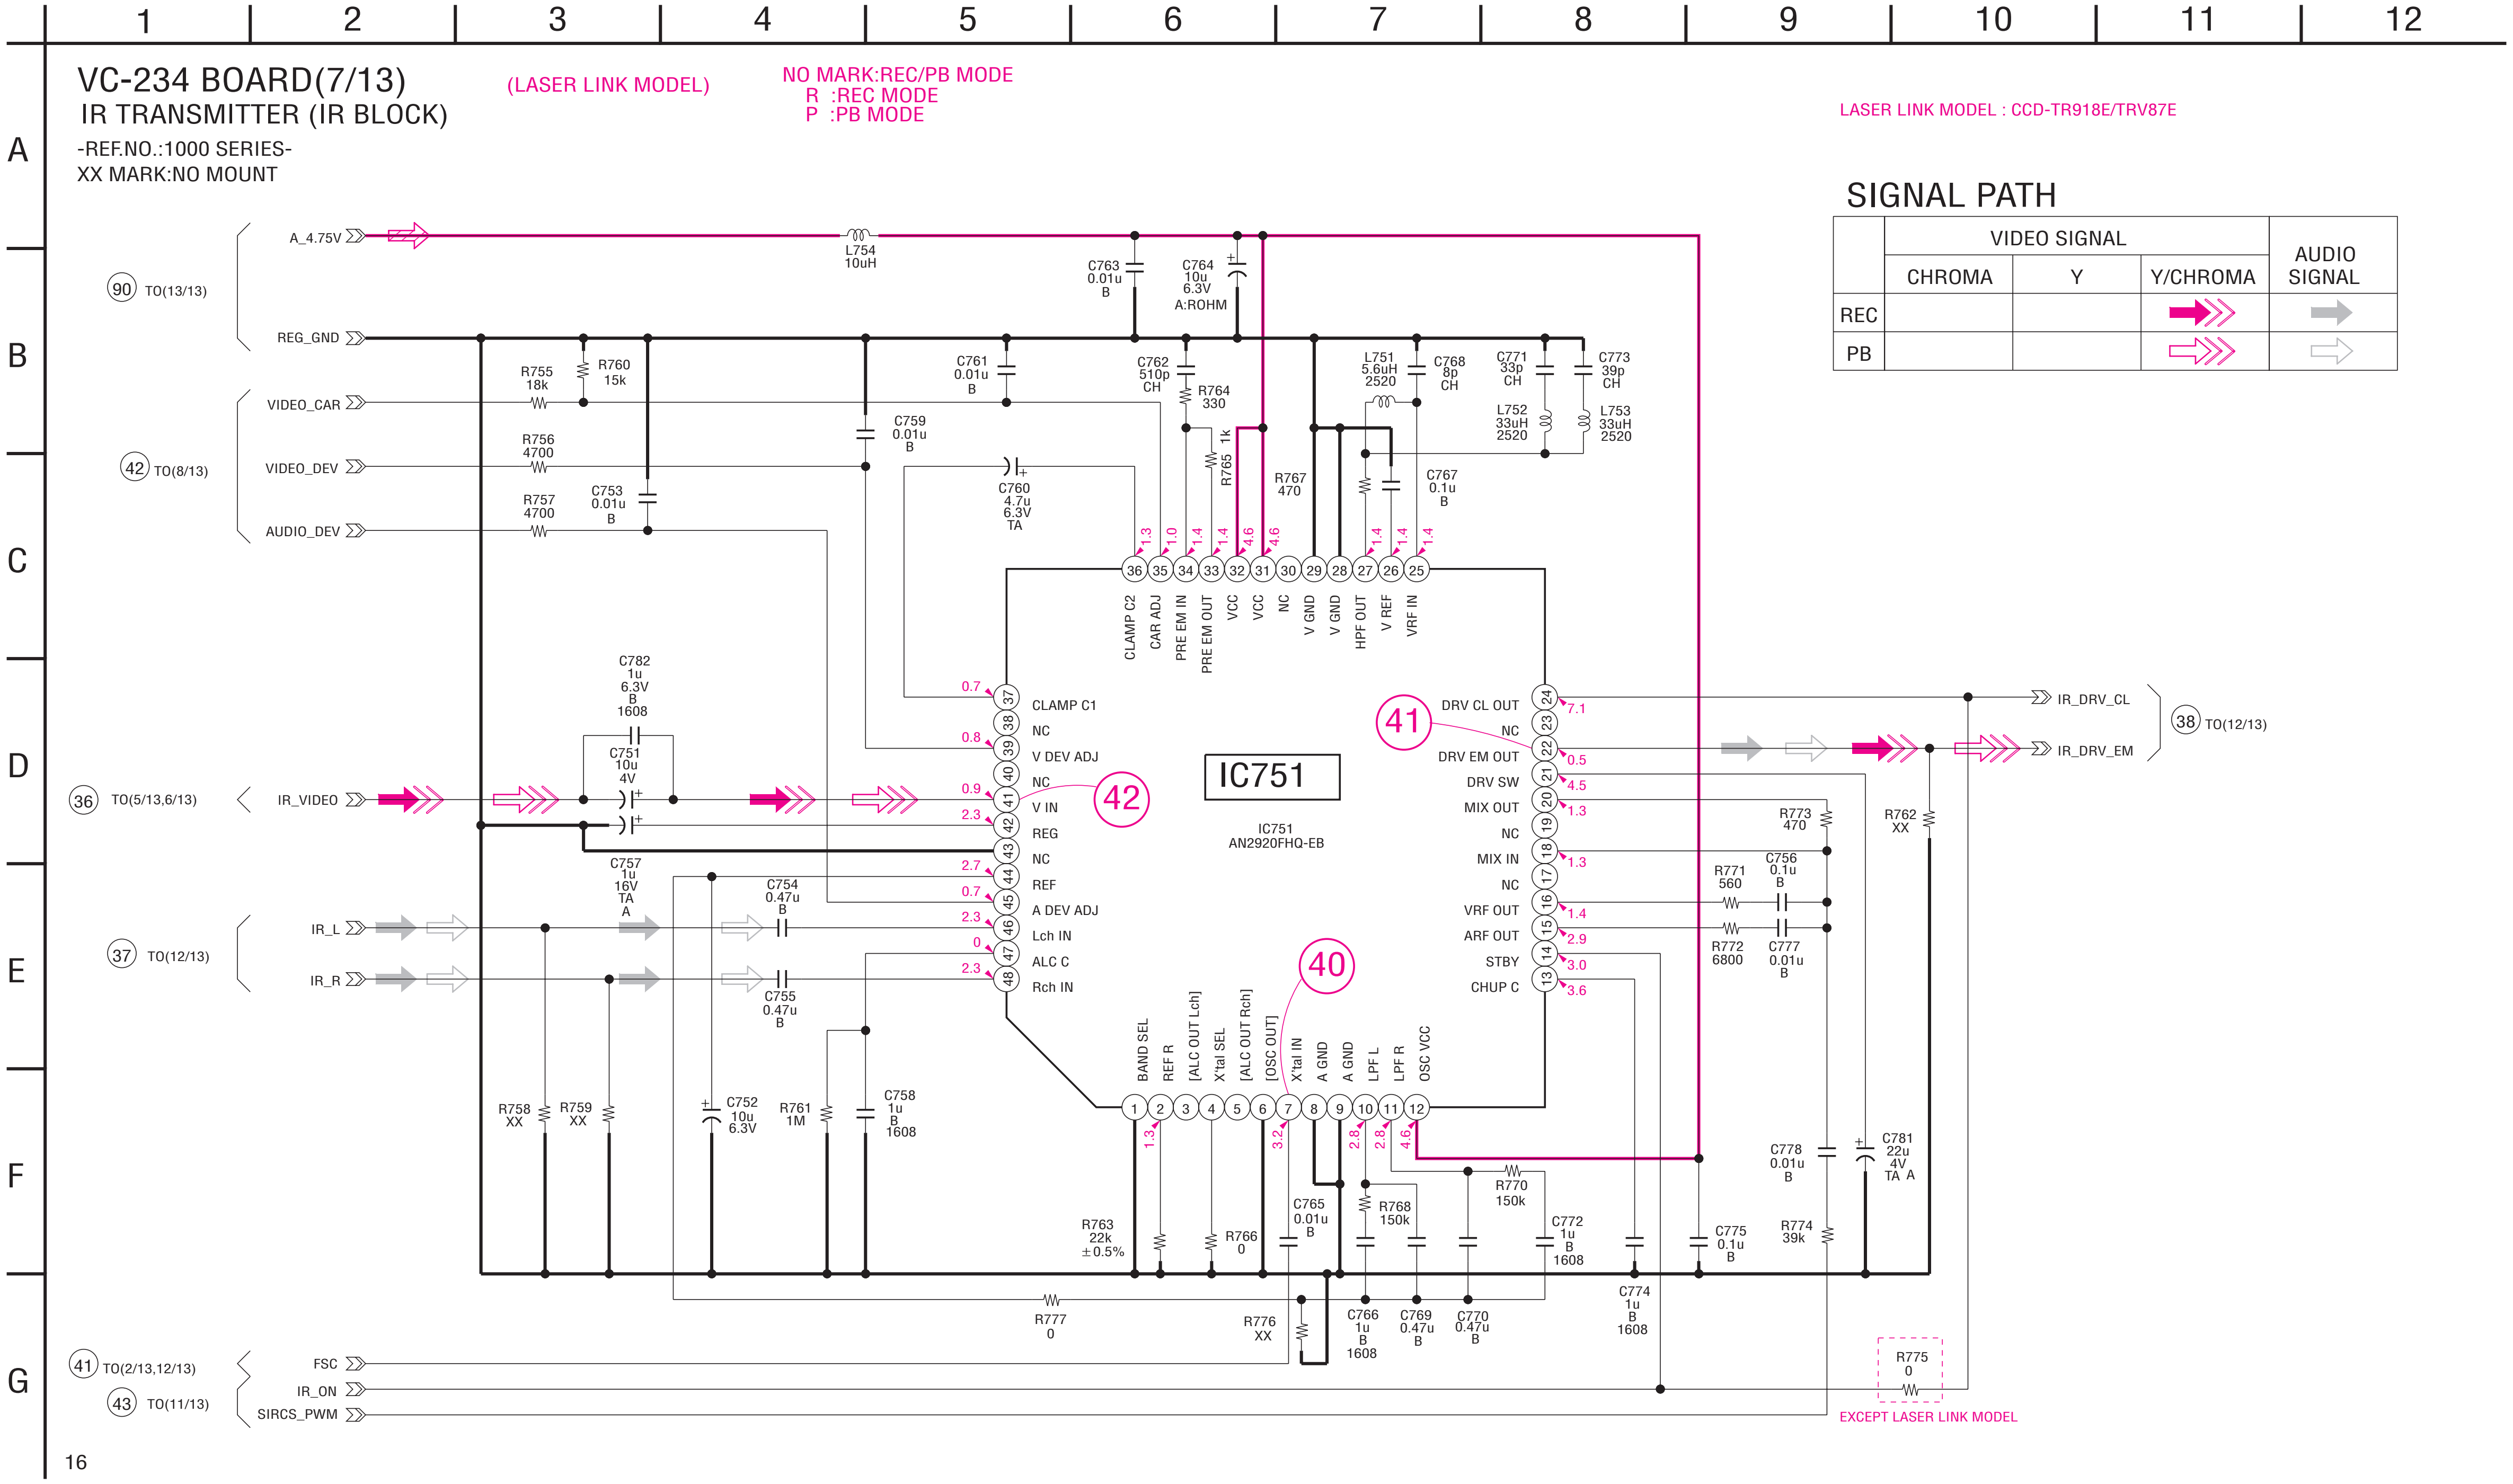

VC-234 BOARD(7/13)
IR TRANSMITTER (IR BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT

(LASER LINK MODEL)

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

LASER LINK MODEL : CCD-TR918E/TRV87E

EXCEPT LASER LINK MODEL

SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡	➡
PB			⇨	⇨

1
2
3
4
5
6
7
8
9
10
11
12
A
B
C
D
E
F
G
A_4.75V
REG_GND
VIDEO_CAR
VIDEO_DEV
AUDIO_DEV
IR_VIDEO
IR_L
IR_R
FSC
IR_ON
SIRCS_PWM
IR_DRV_CL
IR_DRV_EM
90 TO(13/13)
42 TO(8/13)
36 TO(5/13,6/13)
37 TO(12/13)
41 TO(2/13,12/13)
43 TO(11/13)
38 TO(12/13)
IC751
IC751
AN2920FHQ-EB
CLAMP C2
CAR ADJ
PRE EM IN
PRE EM OUT
VCC
VCC
NC
V GND
V GND
HPF OUT
V REF
VRF IN
CLAMP C1
NC
V DEV ADJ
NC
V IN
REG
NC
REF
A DEV ADJ
Lch IN
ALC C
Rch IN
DRV CL OUT
NC
DRV EM OUT
DRV SW
MIX OUT
NC
MIX IN
NC
VRF OUT
ARF OUT
STBY
CHUP C
BAND SEL
REF R
[ALC OUT Lch]
X'tal SEL
[ALC OUT Rch]
[OSC OUT]
X'tal IN
A GND
A GND
LPF L
LPF R
OSC VCC
40
41
42
L754 10uH
C763 0.01u B
C764 10u 6.3V A:ROHM
R755 18k
R760 15k
C761 0.01u B
C762 510p CH
R764 330
R765 1k
L751 5.6uH 2520
C768 8p CH
C771 33p CH
C773 39p CH
L752 33uH 2520
L753 33uH 2520
R756 4700
R757 4700
C753 0.01u B
C759 0.01u B
C760 4.7u 6.3V TA
R767 470
C767 0.1u B
C782 1u 6.3V B 1608
C751 10u 4V
C757 1u 16V TA A
C754 0.47u B
C755 0.47u B
R758 XX
R759 XX
C752 10u 6.3V
R761 1M
C758 1u B 1608
R763 22k ±0.5%
R766 0
C765 0.01u B
R768 150k
R770 150k
C772 1u B 1608
C775 0.1u B
R773 470
R762 XX
R771 560
C756 0.1u B
R772 6800
C777 0.01u B
C778 0.01u B
C781 22u 4V TA A
R774 39k
R777 0
R776 XX
C766 1u B 1608
C769 0.47u B
C770 0.47u B
C774 1u B 1608
R775 0
16
1.3
1.0
1.4
1.4
4.6
4.6
1.4
1.4
1.4
0.7
0.8
0.9
2.3
2.7
0.7
2.3
0
2.3
7.1
0.5
4.5
1.3
1.3
1.4
2.9
3.0
3.6
1.3
3.2
2.8
2.8
4.6

FP-249 (S/T REEL SENSOR, TAPE TOP), FP-356 (TAPE END), FP-355 (TAPE LED) FLEXIBLE BOARD

— Ref. No. FP-249, 356, 355 FLEXIBLE board; 1,000 series —

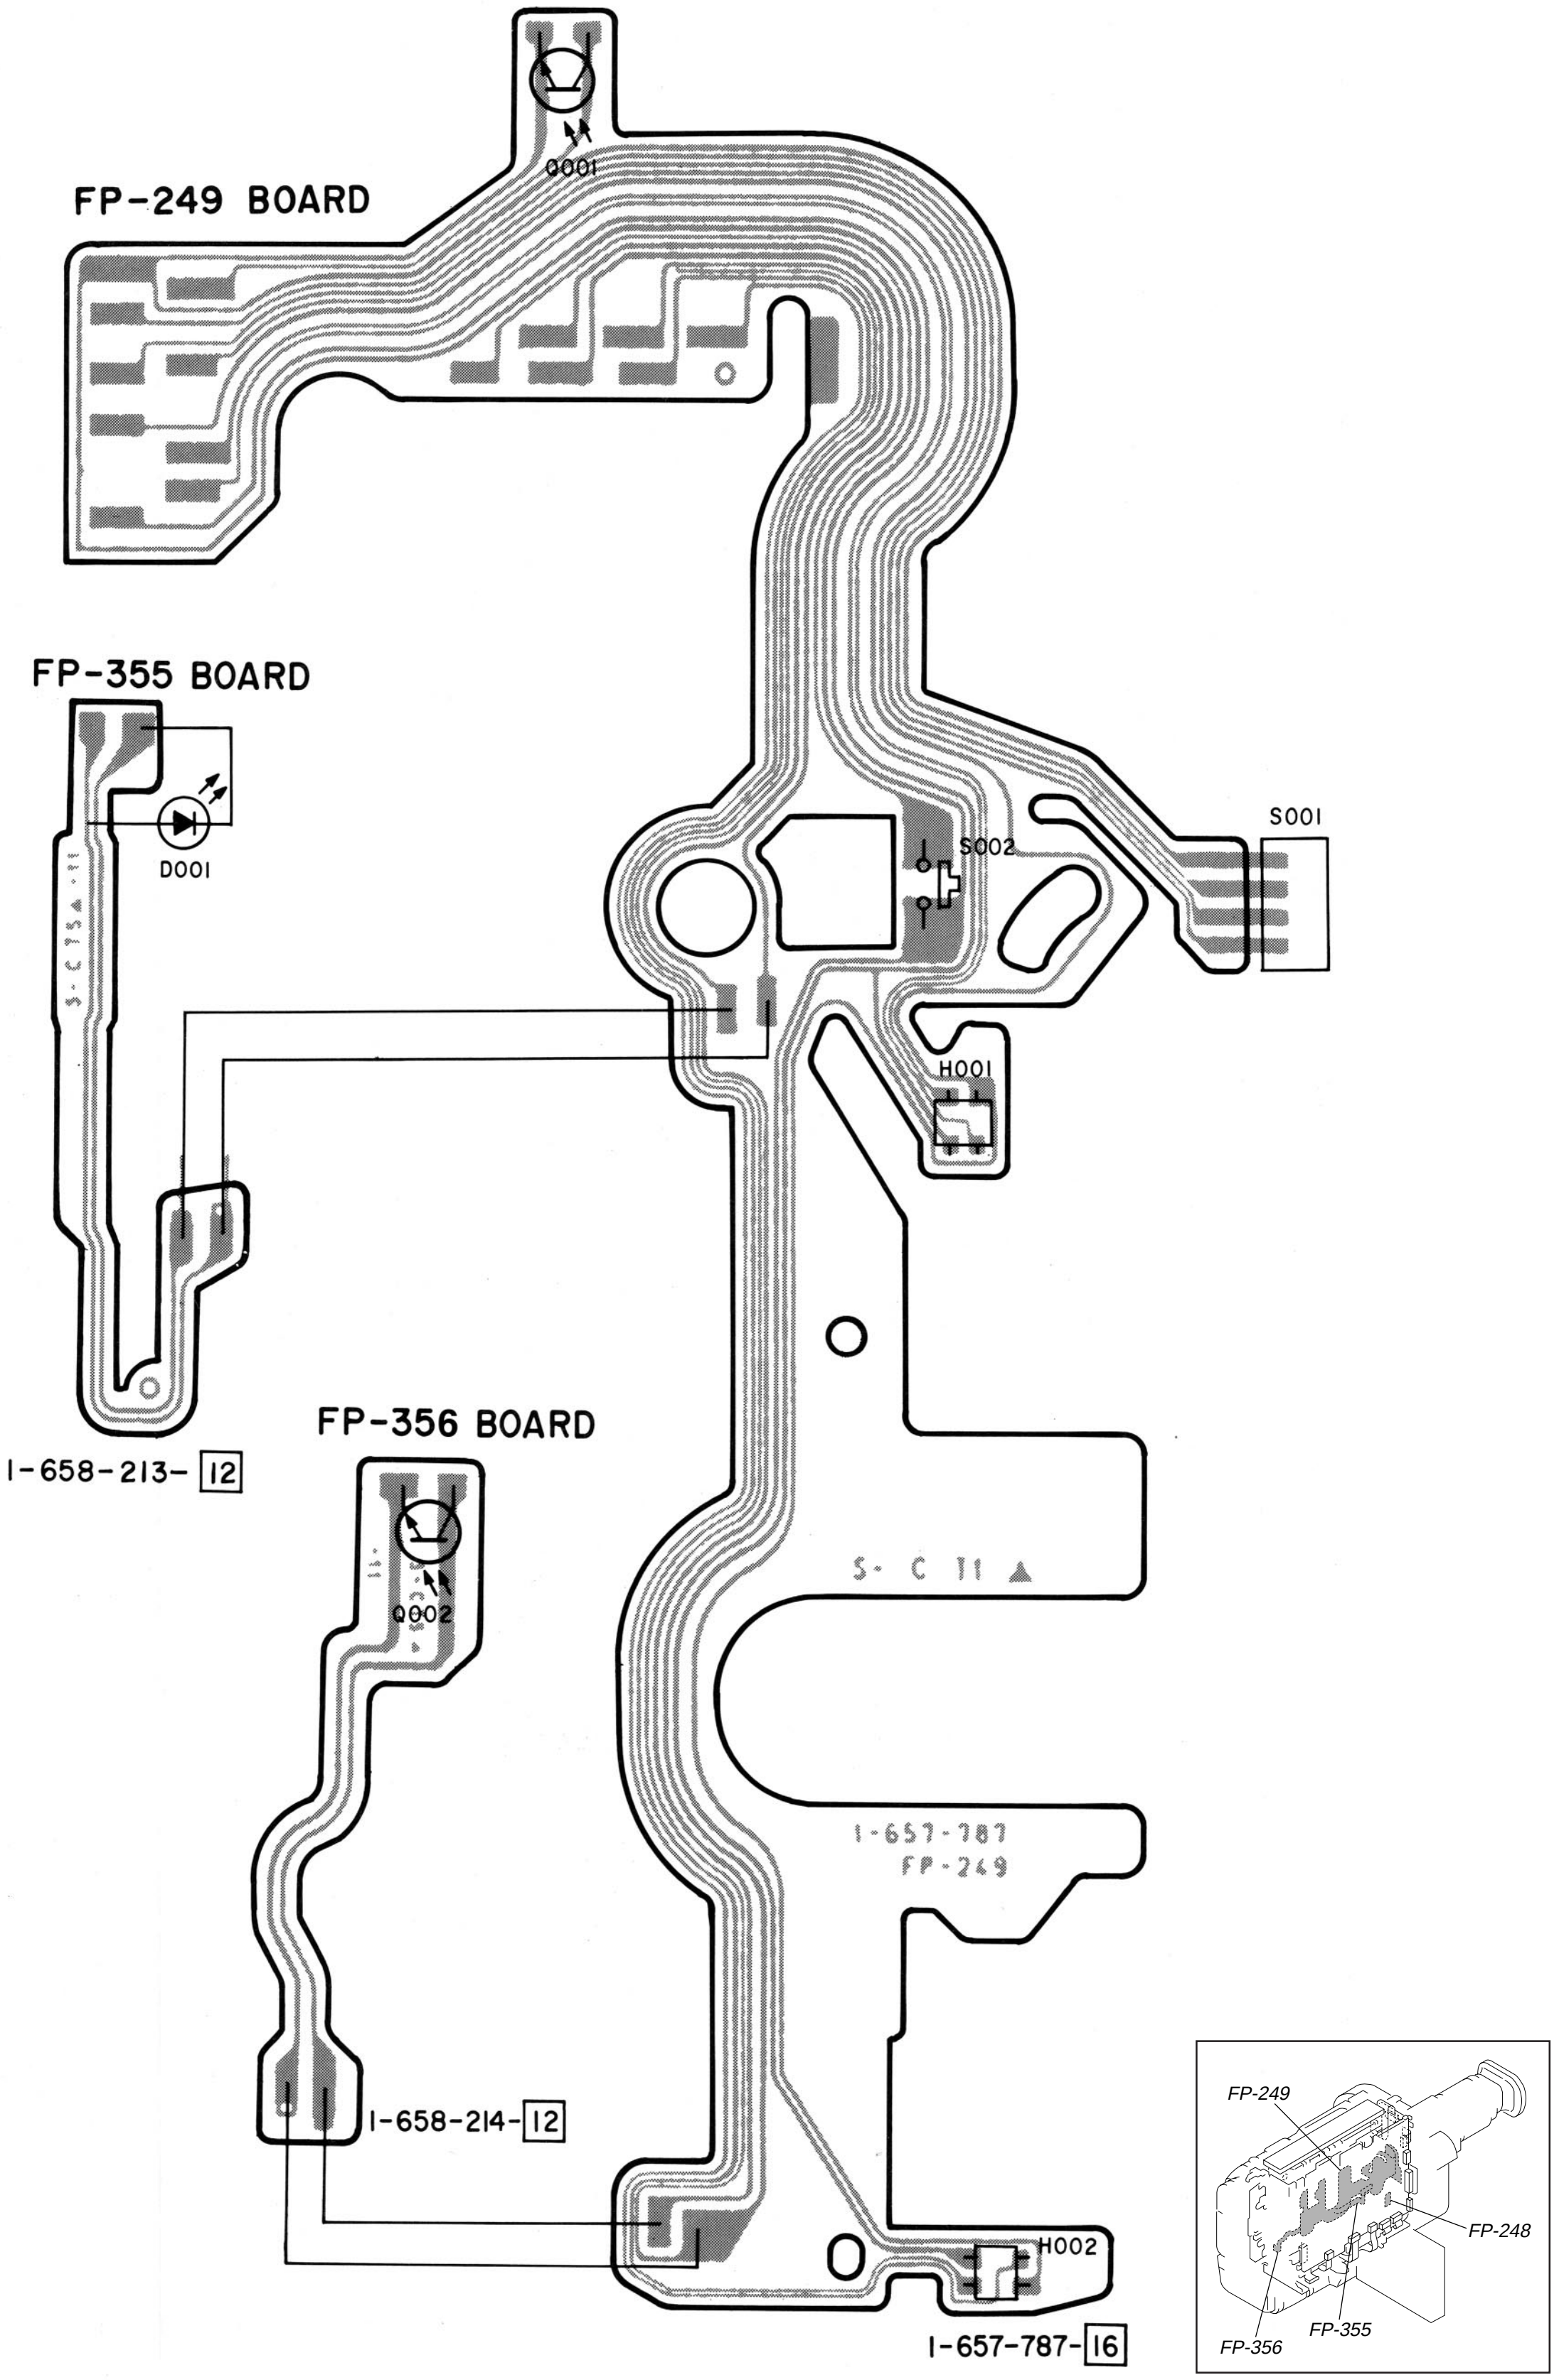
FP-249 BOARD
Q001
FP-355 BOARD
D001
S001
S002
H001
1-658-213-12
FP-356 BOARD
Q002
S- C TI ▲
1-657-787
FP-249
1-658-214-12
H002
1-657-787-16
FP-249
FP-248
FP-356
FP-355

For Schematic Diagram

- Refer to page 4-35 for printed wiring board.

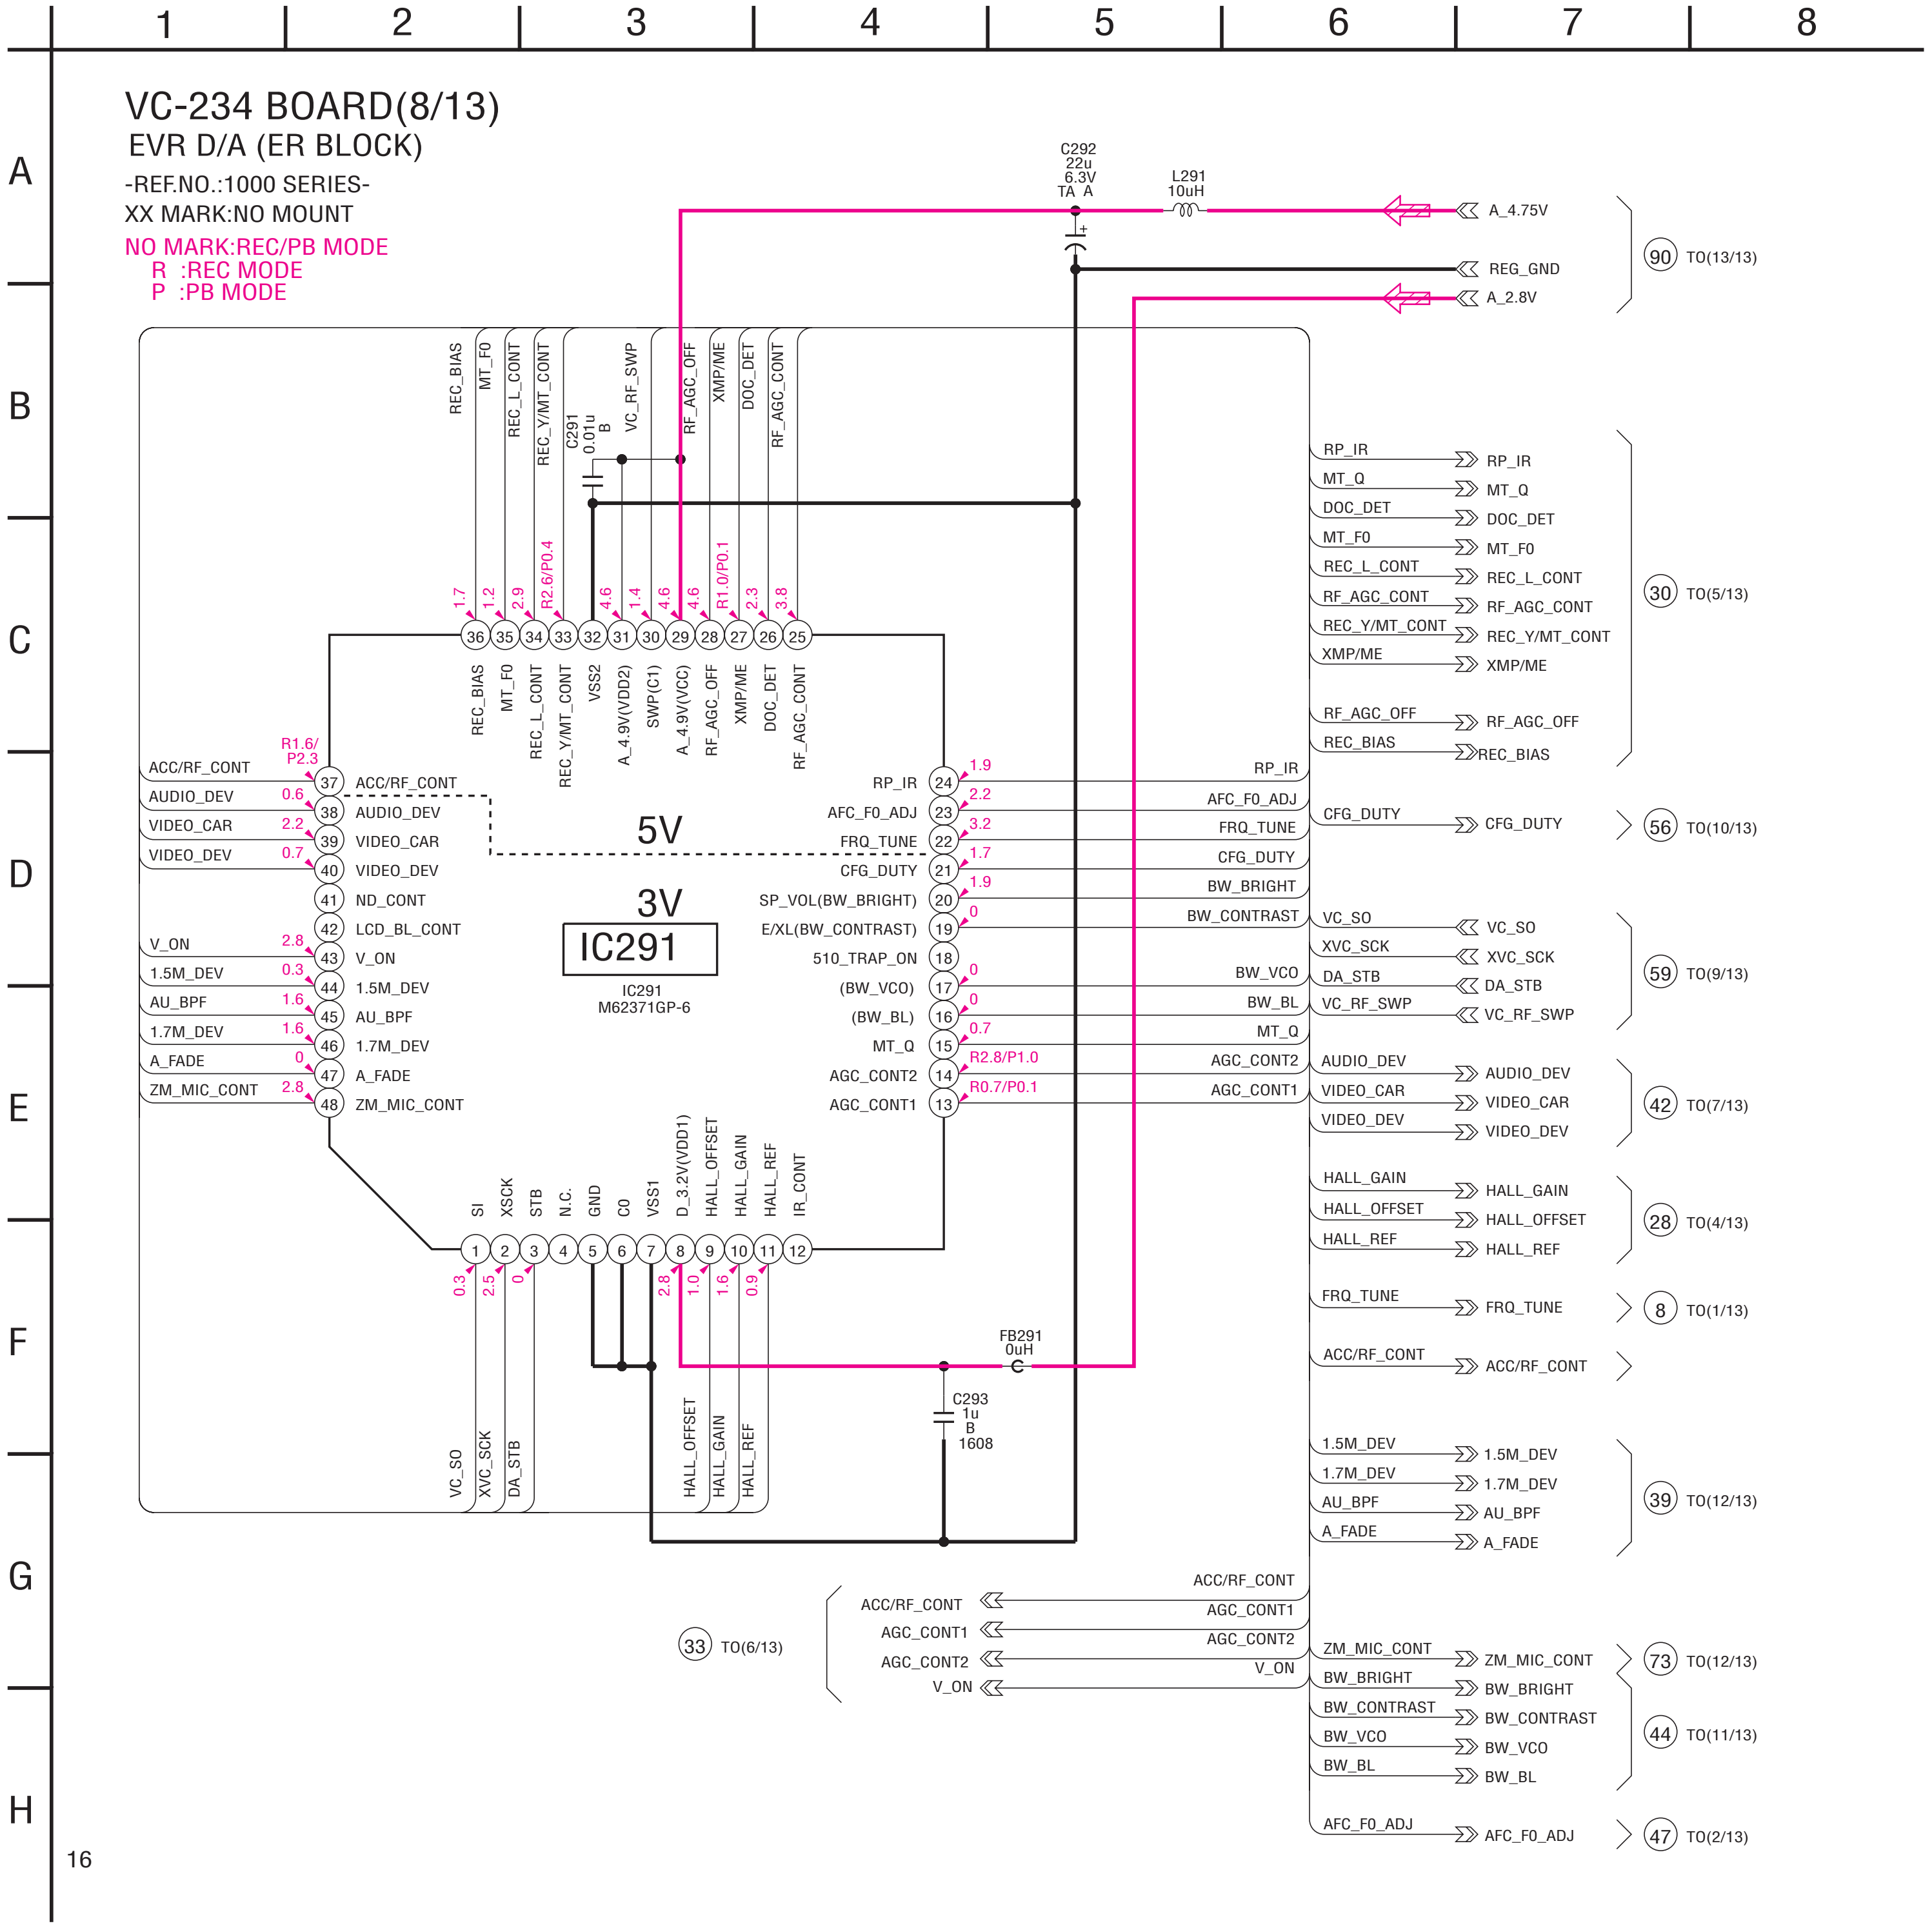
1
2
3
4
5
6
7
8
A
B
C
D
E
F
G
H
VC-234 BOARD(8/13)
EVR D/A (ER BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
C292
22u
6.3V
TA A
L291
10uH
A_4.75V
REG_GND
A_2.8V
90 TO(13/13)
REC_BIAS
MT_F0
REC_L_CONT
REC_Y/MT_CONT
C291
0.01u
B
VC_RF_SWP
RF_AGC_OFF
XMP/ME
DOC_DET
RF_AGC_CONT
1.7
1.2
2.9
R2.6/P0.4
4.6
1.4
4.6
4.6
R1.0/P0.1
2.3
3.8
36 35 34 33 32 31 30 29 28 27 26 25
REC_BIAS
MT_F0
REC_L_CONT
REC_Y/MT_CONT
VSS2
A_4.9V(VDD2)
SWP(C1)
A_4.9V(VCC)
RF_AGC_OFF
XMP/ME
DOC_DET
RF_AGC_CONT
ACC/RF_CONT
AUDIO_DEV
VIDEO_CAR
VIDEO_DEV
V_ON
1.5M_DEV
AU_BPF
1.7M_DEV
A_FADE
ZM_MIC_CONT
R1.6/
P2.3
0.6
2.2
0.7
2.8
0.3
1.6
1.6
0
2.8
37 ACC/RF_CONT
38 AUDIO_DEV
39 VIDEO_CAR
40 VIDEO_DEV
41 ND_CONT
42 LCD_BL_CONT
43 V_ON
44 1.5M_DEV
45 AU_BPF
46 1.7M_DEV
47 A_FADE
48 ZM_MIC_CONT
5V
3V
IC291
IC291
M62371GP-6
RP_IR 24
AFC_F0_ADJ 23
FRQ_TUNE 22
CFG_DUTY 21
SP_VOL(BW_BRIGHT) 20
E/XL(BW_CONTRAST) 19
510_TRAP_ON 18
(BW_VCO) 17
(BW_BL) 16
MT_Q 15
AGC_CONT2 14
AGC_CONT1 13
1.9
2.2
3.2
1.7
1.9
0
0
0
0.7
R2.8/P1.0
R0.7/P0.1
RP_IR
AFC_F0_ADJ
FRQ_TUNE
CFG_DUTY
BW_BRIGHT
BW_CONTRAST
BW_VCO
BW_BL
MT_Q
AGC_CONT2
AGC_CONT1
SI
XSCK
STB
N.C.
GND
C0
VSS1
D_3.2V(VDD1)
HALL_OFFSET
HALL_GAIN
HALL_REF
IR_CONT
1 2 3 4 5 6 7 8 9 10 11 12
0.3
2.5
0
2.8
1.0
1.6
0.9
VC_SO
XVC_SCK
DA_STB
HALL_OFFSET
HALL_GAIN
HALL_REF
FB291
0uH
C293
1u
B
1608
RP_IR
MT_Q
DOC_DET
MT_F0
REC_L_CONT
RF_AGC_CONT
REC_Y/MT_CONT
XMP/ME
RF_AGC_OFF
REC_BIAS
30 TO(5/13)
CFG_DUTY
56 TO(10/13)
VC_SO
XVC_SCK
DA_STB
VC_RF_SWP
59 TO(9/13)
AUDIO_DEV
VIDEO_CAR
VIDEO_DEV
42 TO(7/13)
HALL_GAIN
HALL_OFFSET
HALL_REF
28 TO(4/13)
FRQ_TUNE
8 TO(1/13)
ACC/RF_CONT
1.5M_DEV
1.7M_DEV
AU_BPF
A_FADE
39 TO(12/13)
ACC/RF_CONT
AGC_CONT1
AGC_CONT2
V_ON
33 TO(6/13)
ZM_MIC_CONT
73 TO(12/13)
BW_BRIGHT
BW_CONTRAST
BW_VCO
BW_BL
44 TO(11/13)
AFC_F0_ADJ
47 TO(2/13)
16

For Schematic Diagram

- Refer to page 4-35 for printed wiring board.
- Refer to page 4-89 for waveforms.

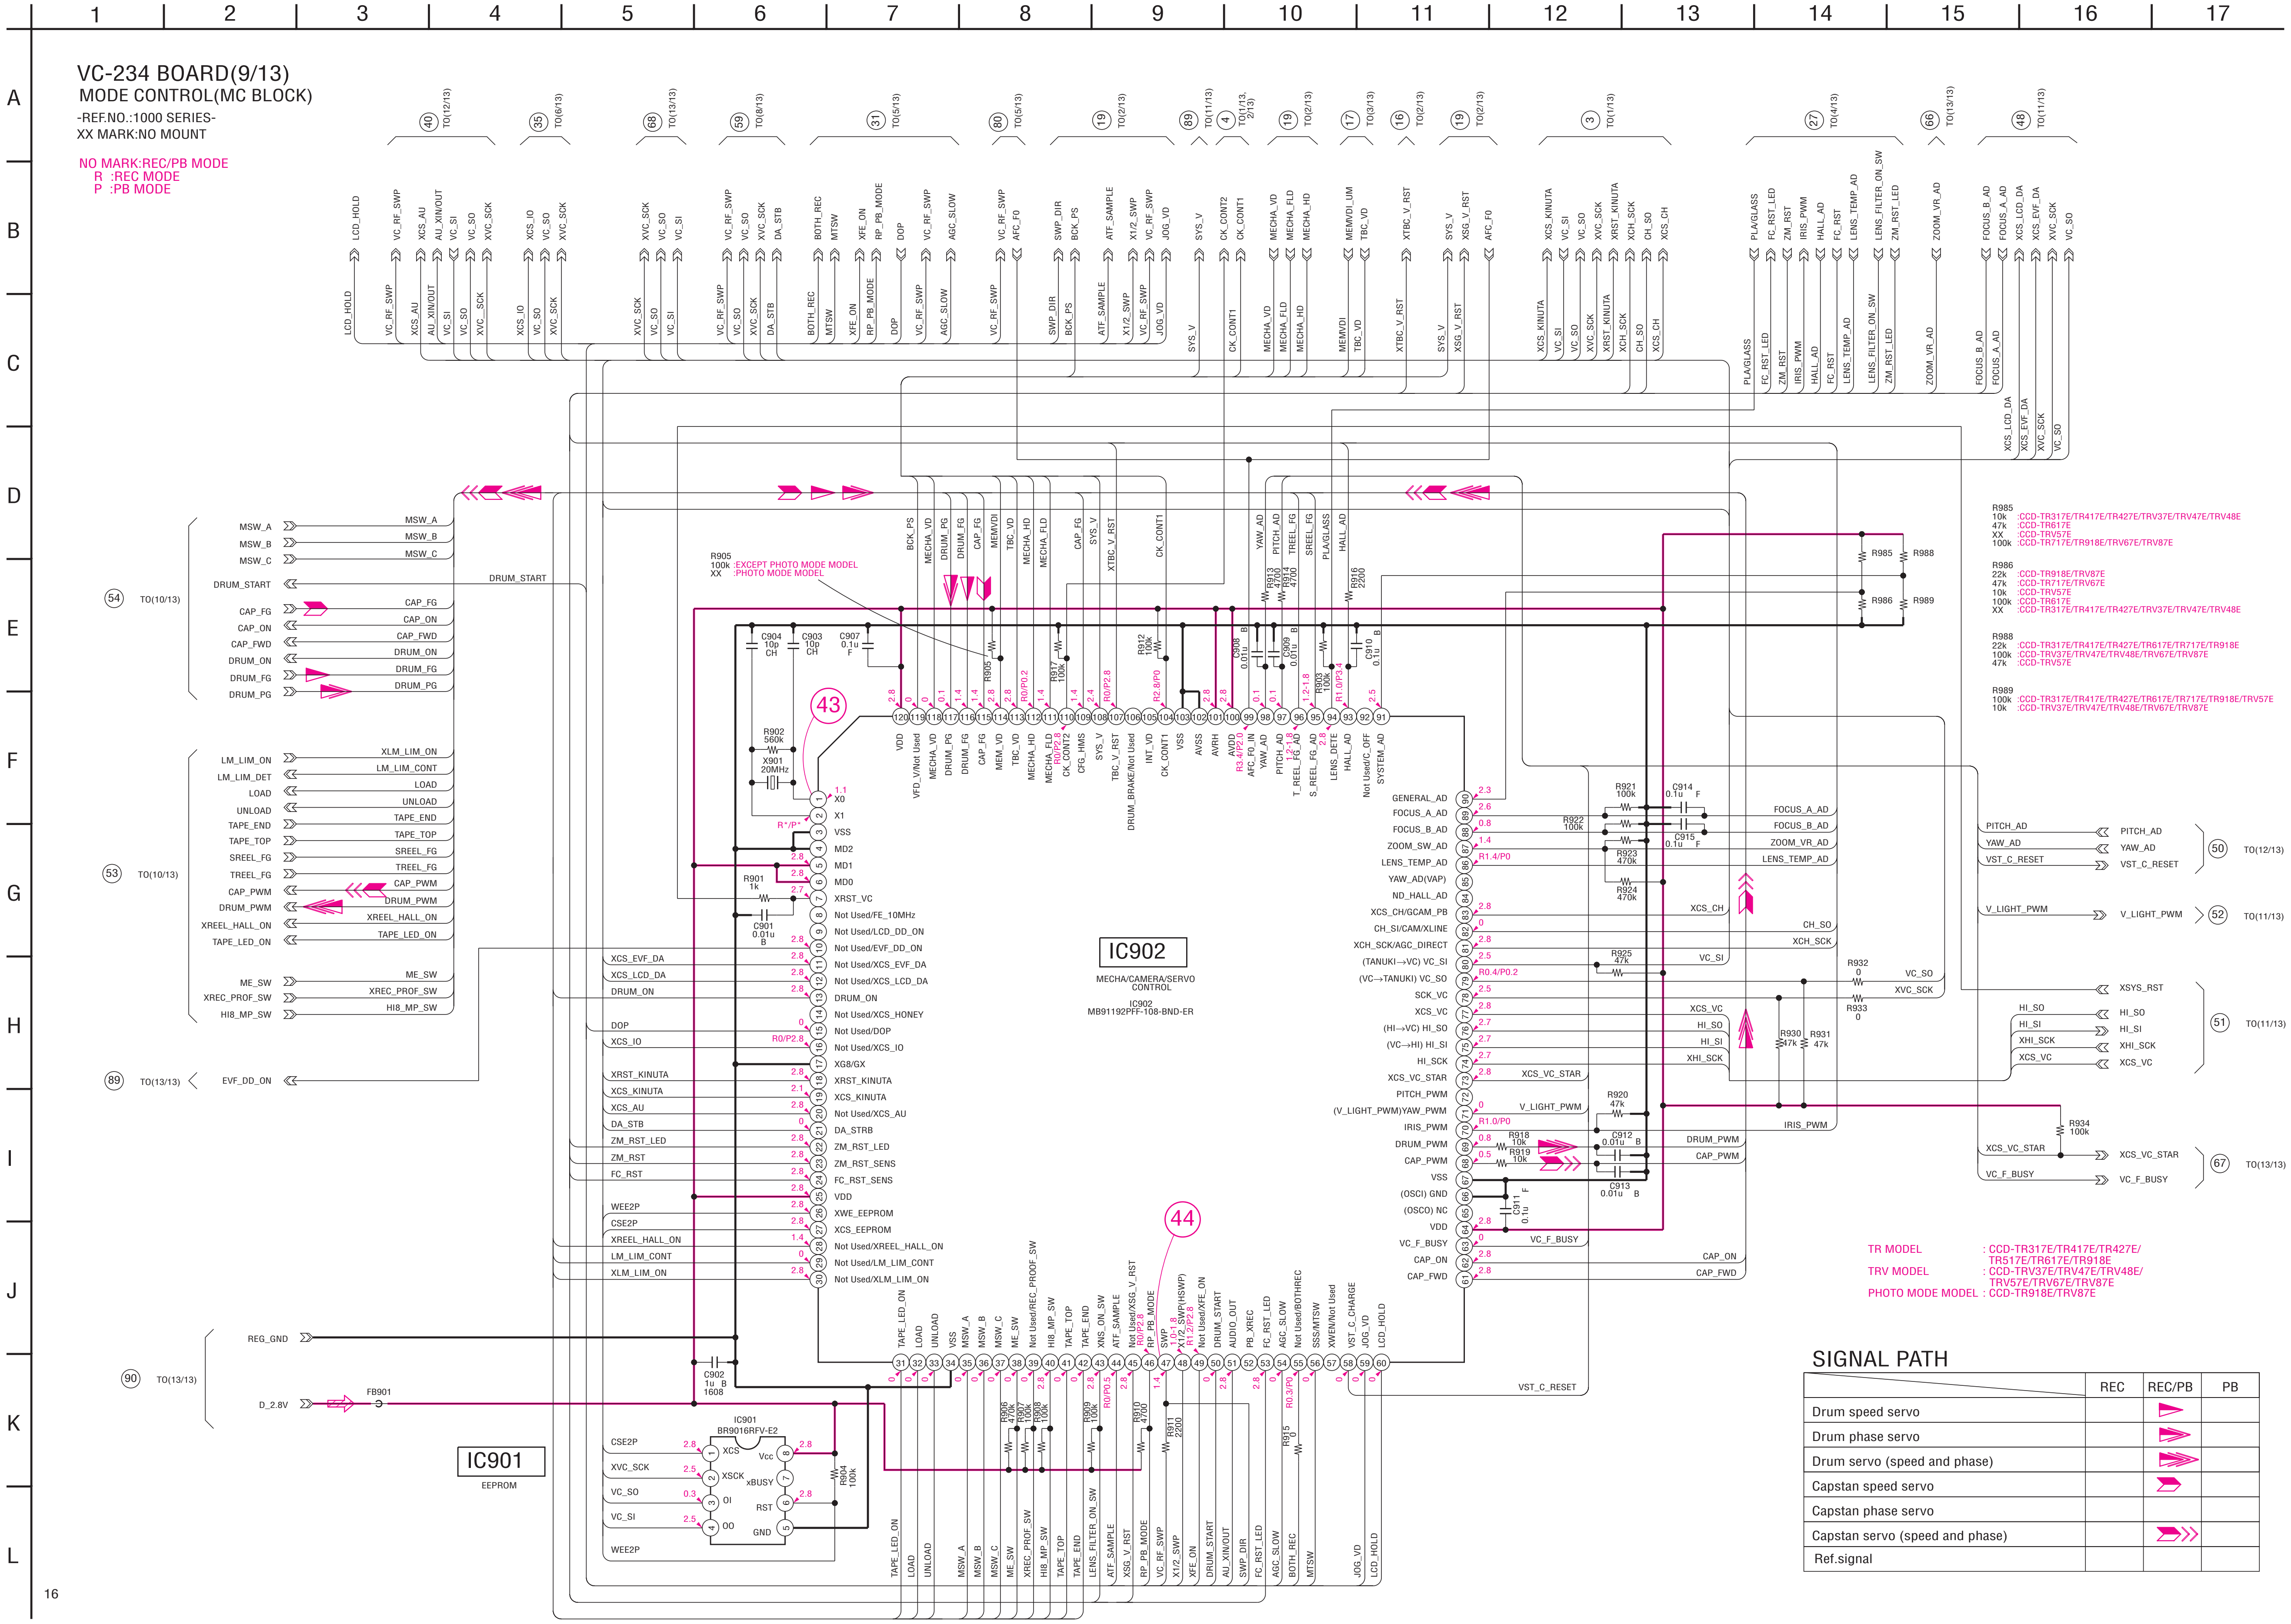
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
A
B
C
D
E
F
G
H
I
J
K
L
IC902
MECHA/CAMERA/SERVO CONTROL
IC902
MB91192PFF-108-BND-ER
IC901
EEPROM
IC901
BR9016RFV-E2
XCS
XSCK
OI
OO
Vcc
xBUSY
RST
GND
CSE2P
XVC_SCK
VC_SO
VC_SI
WEE2P
C902
1u B
1608
R904
100k
X901
20MHz
R902
560k
R901
1k
C901
0.01u B
C904
10p CH
C903
10p CH
C907
0.1u F
R905
100k :EXCEPT PHOTO MODE MODEL
XX :PHOTO MODE MODEL
43
44
FB901
D_2.8V
REG_GND
EVF_DD_ON
TO(10/13)
TO(13/13)
TO(12/13)
TO(11/13)
54
53
89
90
50
52
51
67
R985
R986
R988
R989
R930
47k
R931
47k
R932
0
R933
0
R934
100k
R920
47k
R921
100k
R922
100k
R923
470k
R924
470k
R925
47k
R918
10k
R919
10k
C912
0.01u B
C913
0.01u B
C914
0.1u F
C915
0.1u F
C911
0.1u F
16

VC-234 BOARD(9/13)
MODE CONTROL(MC BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

R985
10k :CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E
47k :CCD-TR617E
XX :CCD-TRV57E
100k :CCD-TR717E/TR918E/TRV67E/TRV87E

R986
22k :CCD-TR918E/TRV87E
47k :CCD-TR717E/TRV67E
10k :CCD-TRV57E
100k :CCD-TR617E
XX :CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E

R988
22k :CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
100k :CCD-TRV37E/TRV47E/TRV48E/TRV67E/TRV87E
47k :CCD-TRV57E

R989
100k :CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/TRV57E
10k :CCD-TRV37E/TRV47E/TRV48E/TRV67E/TRV87E

TR MODEL : CCD-TR317E/TR417E/TR427E/TR517E/TR617E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
PHOTO MODE MODEL : CCD-TR918E/TRV87E

SIGNAL PATH

	REC	REC/PB	PB
Drum speed servo		▷	
Drum phase servo		▷>	
Drum servo (speed and phase)		▷>>	
Capstan speed servo		➧	
Capstan phase servo			
Capstan servo (speed and phase)		➧»	
Ref.signal			

For Schematic Diagram

- Refer to page 4-35 for printed wiring board.
- Refer to page 4-89 for waveforms.
- Refer to page 4-23 for FP-249, FP-356, FP-355 flexible board.

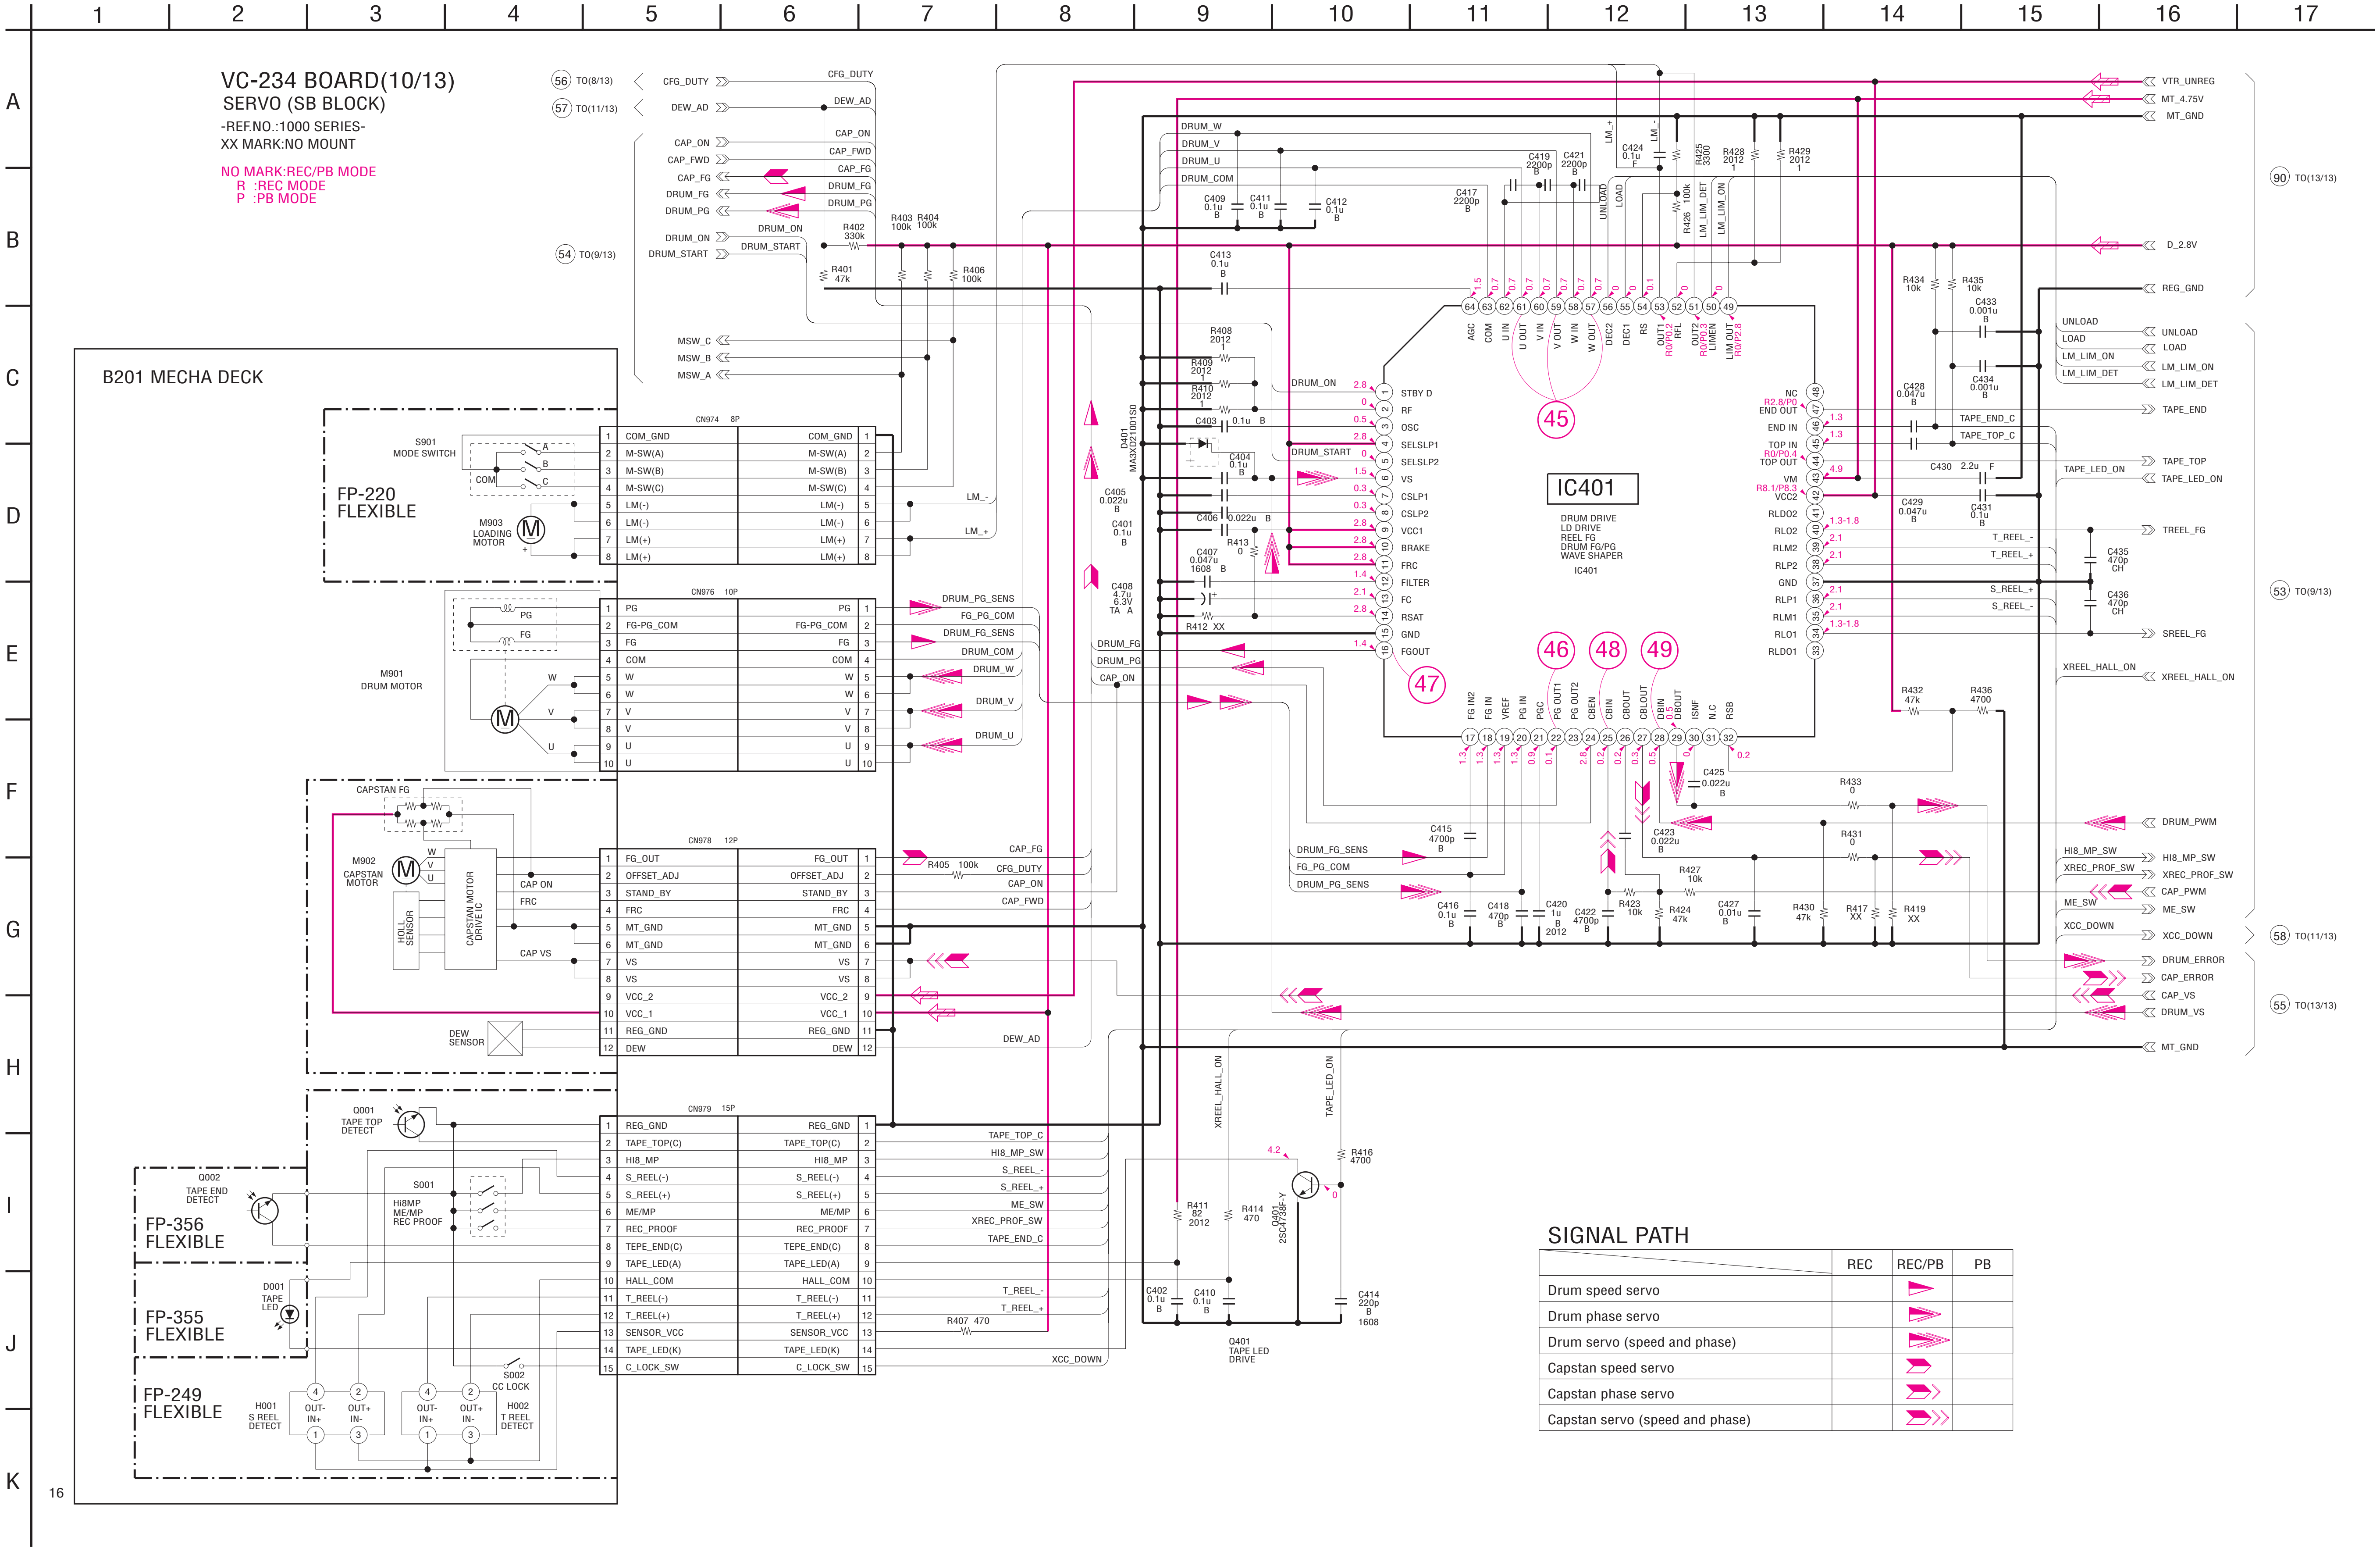
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17
A B C D E F G H I J K
VC-234 BOARD(10/13)
SERVO (SB BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
B201 MECHA DECK
FP-220 FLEXIBLE
S901 MODE SWITCH
M903 LOADING MOTOR
M901 DRUM MOTOR
CAPSTAN FG
M902 CAPSTAN MOTOR
HALL SENSOR
CAPSTAN MOTOR DRIVE IC
DEW SENSOR
Q001 TAPE TOP DETECT
Q002 TAPE END DETECT
S001 Hi8MP ME/MP REC PROOF
FP-356 FLEXIBLE
D001 TAPE LED
FP-355 FLEXIBLE
FP-249 FLEXIBLE
H001 S REEL DETECT
H002 T REEL DETECT
S002 CC LOCK
CN974 8P
CN976 10P
CN978 12P
CN979 15P
IC401
DRUM DRIVE
LD DRIVE
REEL FG
DRUM FG/PG
WAVE SHAPER
Q401 TAPE LED DRIVE
Q401 2SC4738F-Y
D401 MA3X021001S0
45
46
47
48
49
TO(8/13)
TO(11/13)
TO(9/13)
TO(13/13)
CFG_DUTY
DEW_AD
CAP_ON
CAP_FWD
CAP_FG
DRUM_FG
DRUM_PG
DRUM_ON
DRUM_START
MSW_C
MSW_B
MSW_A
VTR_UNREG
MT_4.75V
MT_GND
D_2.8V
REG_GND
UNLOAD
LOAD
LM_LIM_ON
LM_LIM_DET
TAPE_END
TAPE_TOP
TAPE_LED_ON
TREEL_FG
SREEL_FG
XREEL_HALL_ON
DRUM_PWM
HI8_MP_SW
XREC_PROF_SW
CAP_PWM
ME_SW
XCC_DOWN
DRUM_ERROR
CAP_ERROR
CAP_VS
DRUM_VS
16

SIGNAL PATH

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶	
Drum servo (speed and phase)		▶	
Capstan speed servo		▶	
Capstan phase servo		▶	
Capstan servo (speed and phase)		▶	

For Schematic Diagram

- Refer to page 4-35 for printed wiring board.
- Refer to page 4-89 for waveforms.

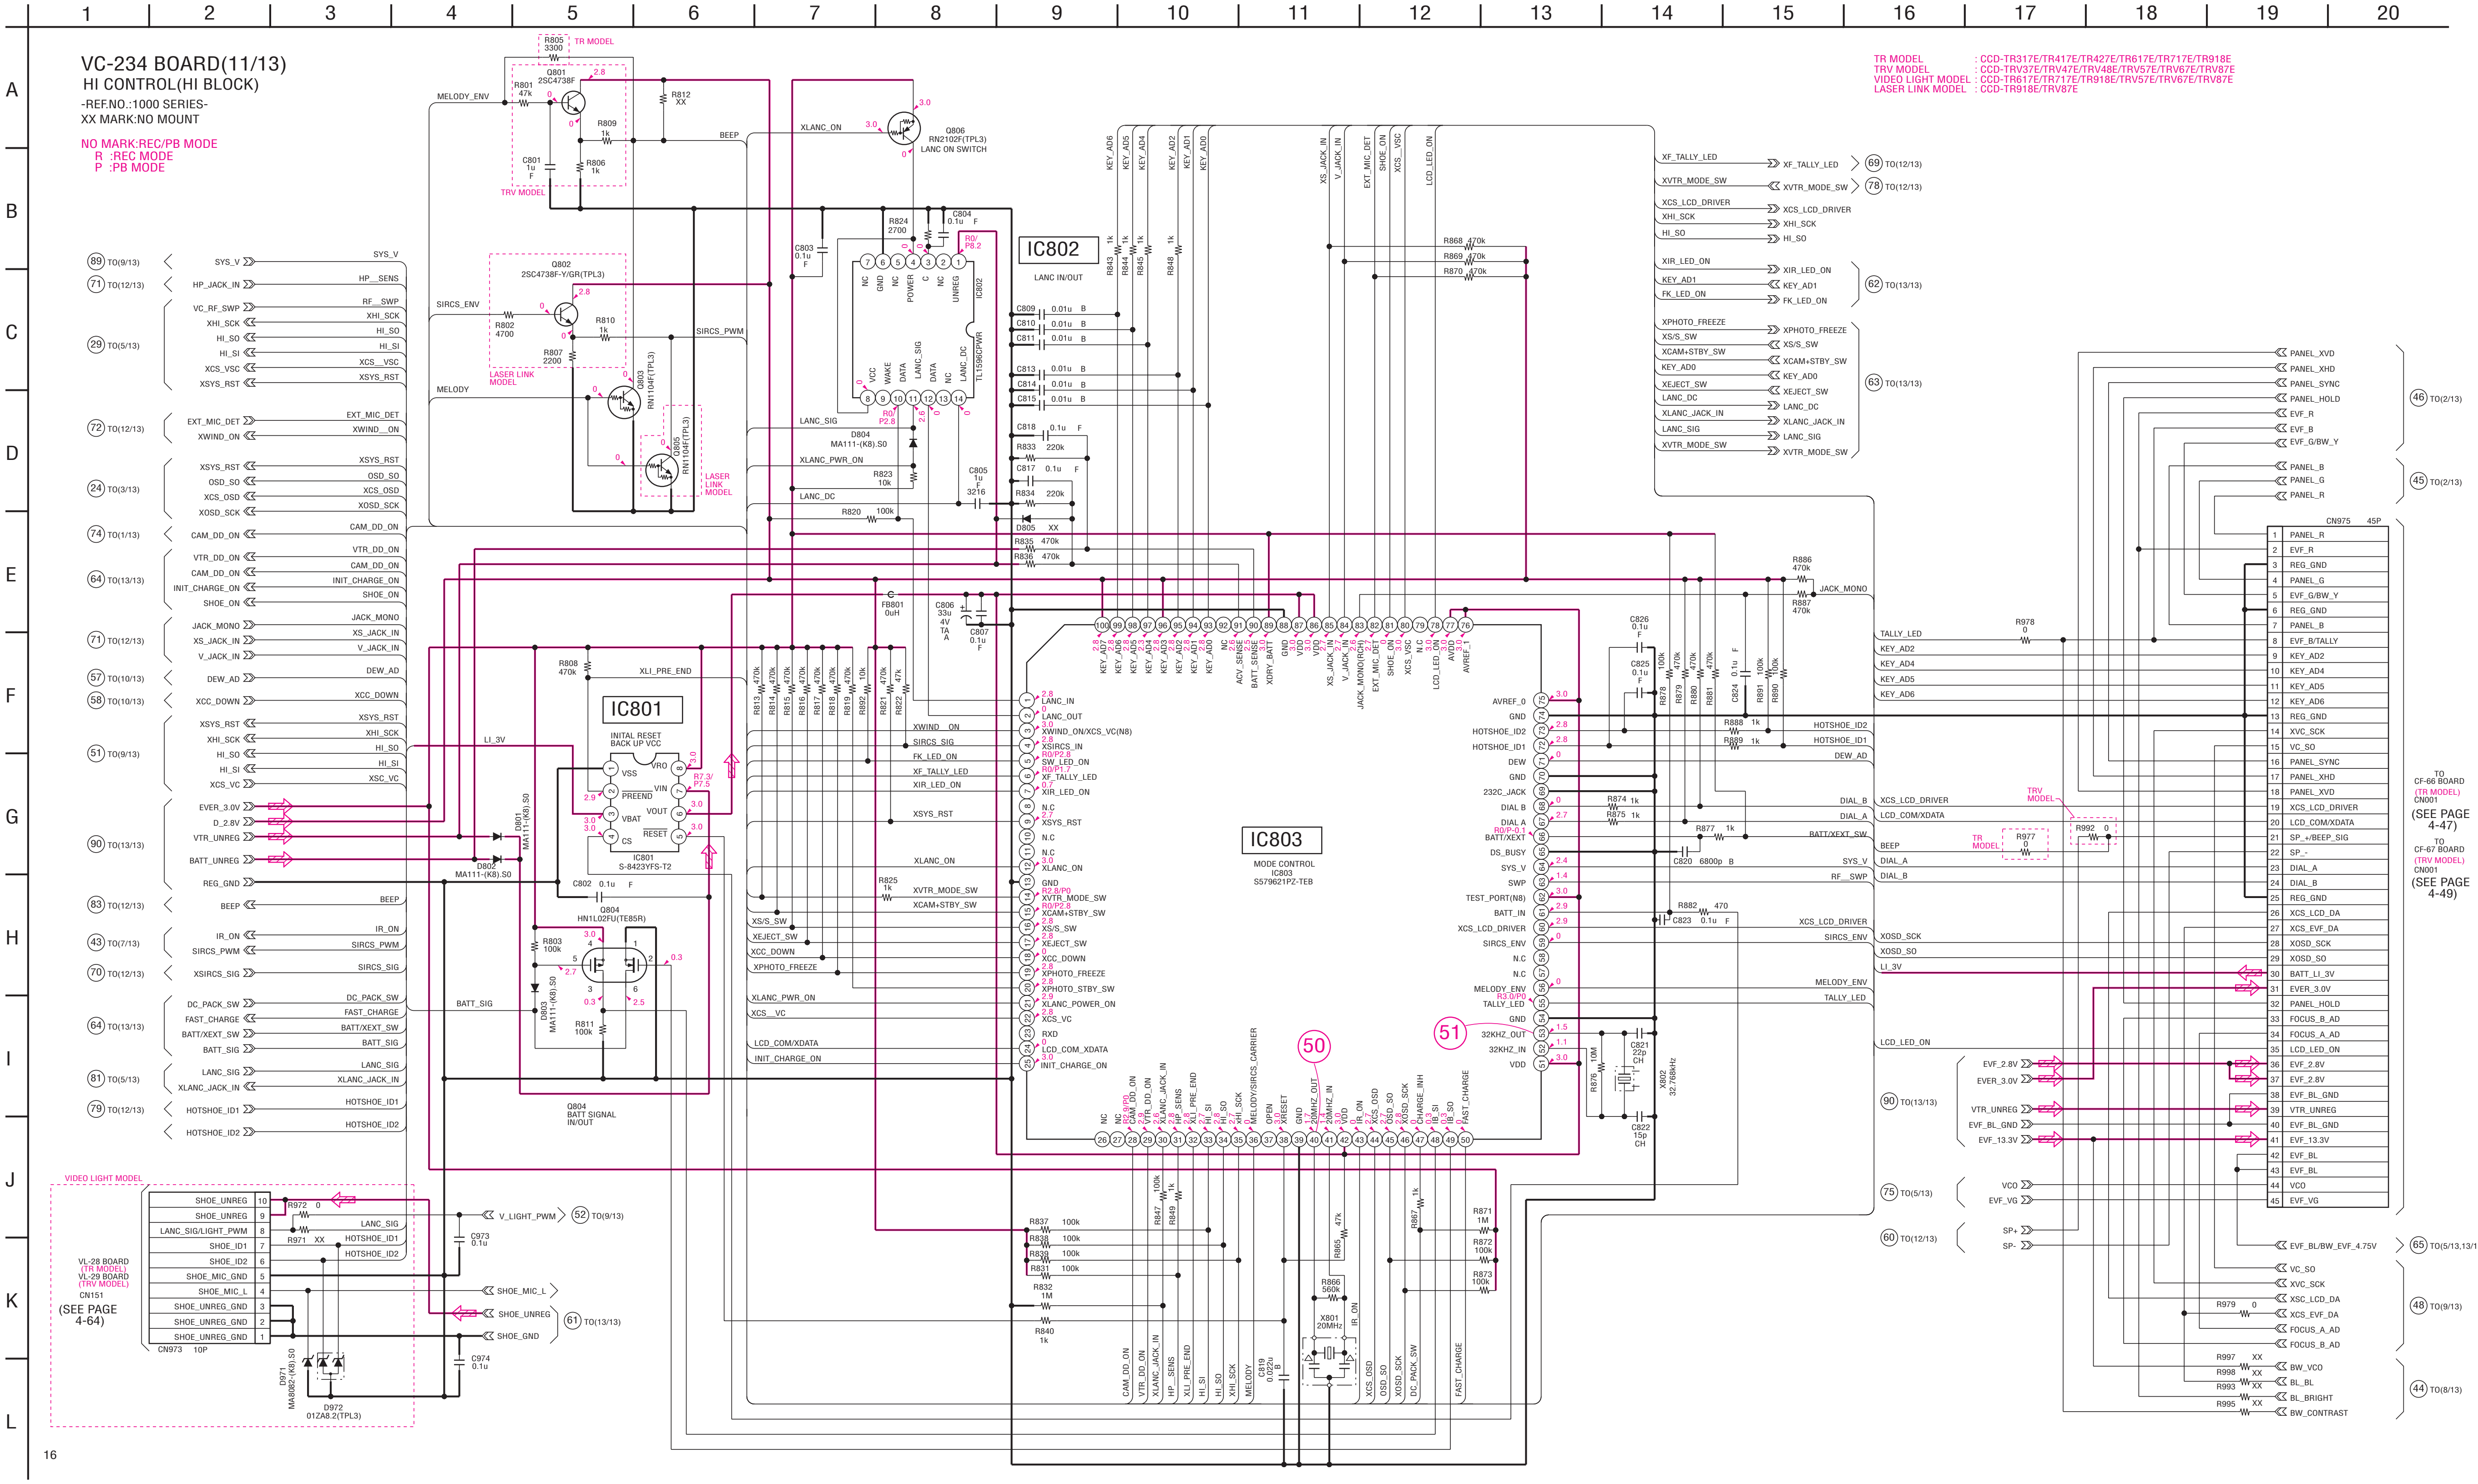
VC-234 BOARD(11/13)
HI CONTROL(HI BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
VIDEO LIGHT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
LASER LINK MODEL : CCD-TR918E/TRV87E
IC801
INITAL RESET BACK UP VCC
IC801 S-8423YFS-T2
IC802
LANC IN/OUT
IC802 TL1596CPWR
IC803
MODE CONTROL
IC803 S579621PZ-TEB
Q801 2SC4738F
Q802 2SC4738F-Y/GR(TPL3)
Q803 RN1104F(TPL3)
Q804 HN1L02FU(TE85R)
Q804 BATT SIGNAL IN/OUT
Q805 RN1104F(TPL3)
Q806 RN2102F(TPL3) LANC ON SWITCH
D801 MA111-(K8).S0
D802 MA111-(K8).S0
D803 MA111-(K8).S0
D804 MA111-(K8).S0
D971 MA8082-(K8).S0
D972 01ZA8.2(TPL3)
X801 20MHz
X802 32.768kHz
CN975 45P
CN973 10P
CN151
VL-28 BOARD (TR MODEL) VL-29 BOARD (TRV MODEL) CN151 (SEE PAGE 4-64)
TO CF-66 BOARD (TR MODEL) CN001 (SEE PAGE 4-47)
TO CF-67 BOARD (TRV MODEL) CN001 (SEE PAGE 4-49)
VIDEO LIGHT MODEL
LASER LINK MODEL
TRV MODEL
TR MODEL
50
51

HI CONTROL
VC-234 (11/13)

For Schematic Diagram
- Refer to page 4-35 for printed wiring board.

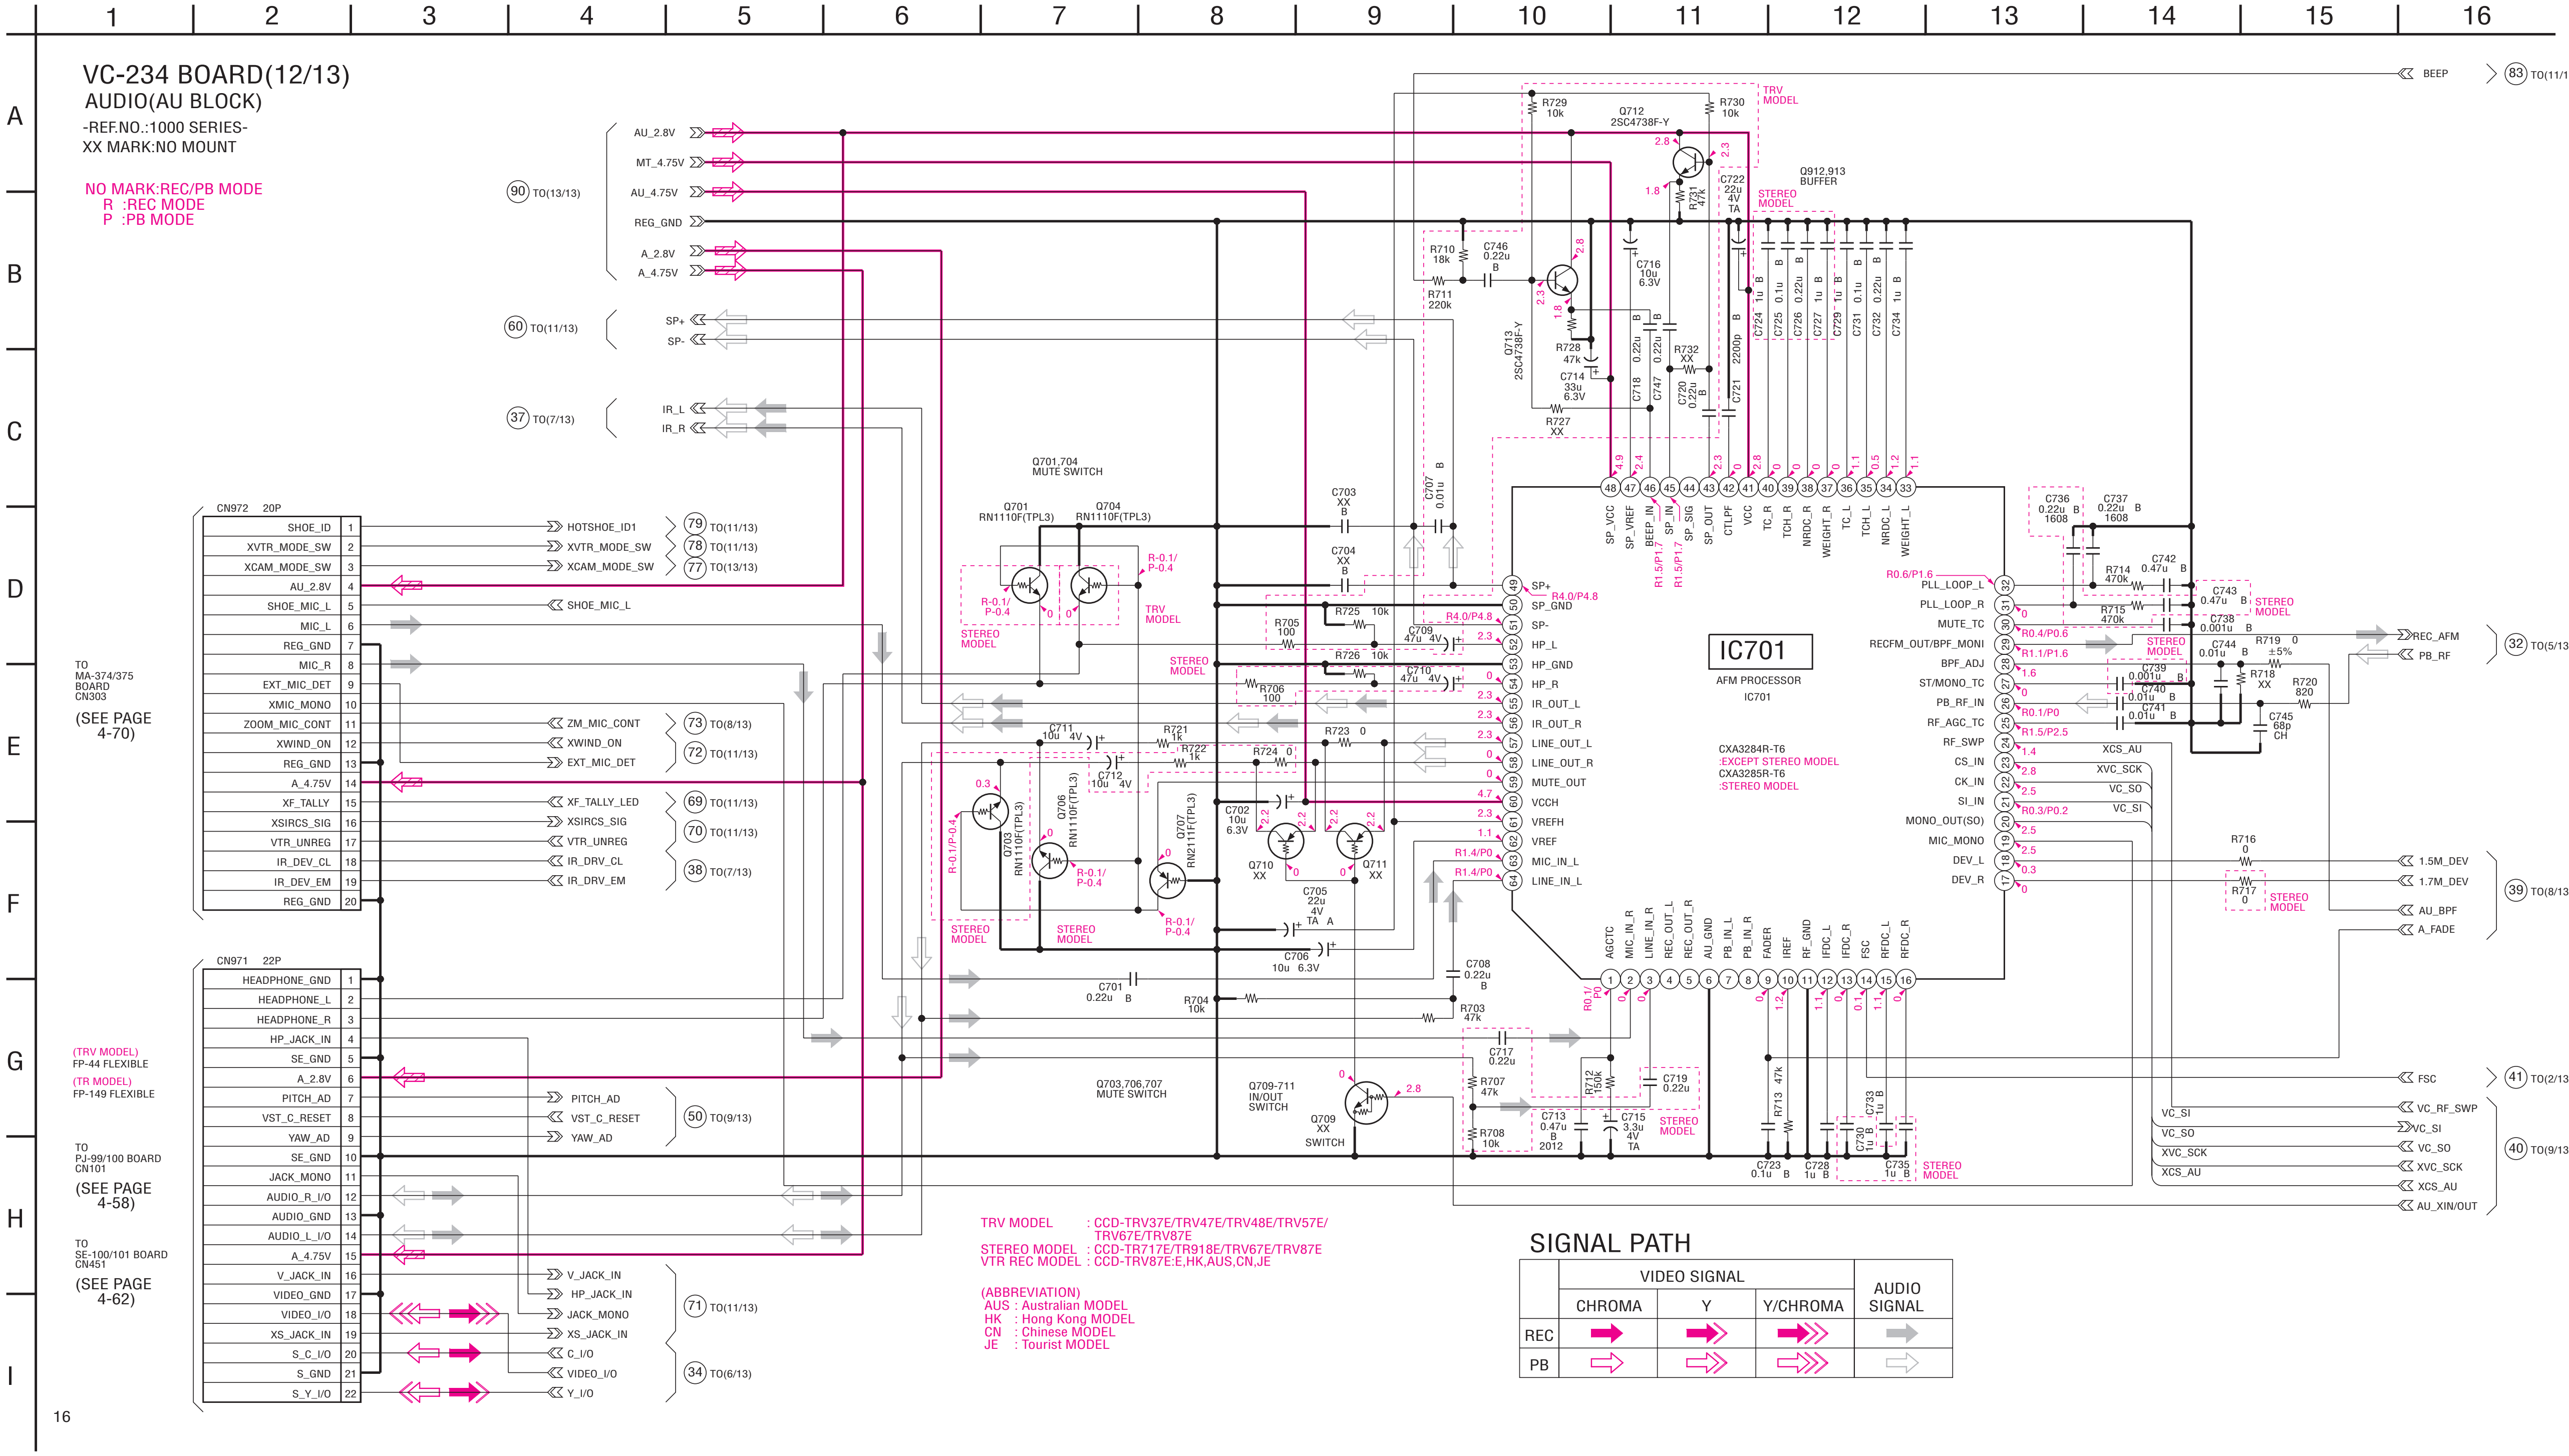
VC-234 BOARD(12/13)
AUDIO(AU BLOCK)
-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
A B C D E F G H I
AU_2.8V
MT_4.75V
AU_4.75V
REG_GND
A_2.8V
A_4.75V
TO(13/13)
SP+
SP-
TO(11/13)
IR_L
IR_R
TO(7/13)
CN972 20P
SHOE_ID
XVTR_MODE_SW
XCAM_MODE_SW
AU_2.8V
SHOE_MIC_L
MIC_L
REG_GND
MIC_R
EXT_MIC_DET
XMIC_MONO
ZOOM_MIC_CONT
XWIND_ON
REG_GND
A_4.75V
XF_TALLY
XSIRCS_SIG
VTR_UNREG
IR_DEV_CL
IR_DEV_EM
REG_GND
TO MA-374/375 BOARD CN303
(SEE PAGE 4-70)
HOTSHOE_ID1
XVTR_MODE_SW
XCAM_MODE_SW
SHOE_MIC_L
ZM_MIC_CONT
XWIND_ON
EXT_MIC_DET
XF_TALLY_LED
XSIRCS_SIG
VTR_UNREG
IR_DRV_CL
IR_DRV_EM
TO(11/13)
TO(8/13)
TO(7/13)
CN971 22P
HEADPHONE_GND
HEADPHONE_L
HEADPHONE_R
HP_JACK_IN
SE_GND
A_2.8V
PITCH_AD
VST_C_RESET
YAW_AD
SE_GND
JACK_MONO
AUDIO_R_I/O
AUDIO_GND
AUDIO_L_I/O
A_4.75V
V_JACK_IN
VIDEO_GND
VIDEO_I/O
XS_JACK_IN
S_C_I/O
S_GND
S_Y_I/O
(TRV MODEL) FP-44 FLEXIBLE
(TR MODEL) FP-149 FLEXIBLE
TO PJ-99/100 BOARD CN101
(SEE PAGE 4-58)
TO SE-100/101 BOARD CN451
(SEE PAGE 4-62)
PITCH_AD
VST_C_RESET
YAW_AD
TO(9/13)
V_JACK_IN
HP_JACK_IN
JACK_MONO
XS_JACK_IN
C_I/O
VIDEO_I/O
Y_I/O
TO(6/13)
Q701,704 MUTE SWITCH
Q701 RN1110F(TPL3)
Q704 RN1110F(TPL3)
Q703,706,707 MUTE SWITCH
Q709-711 IN/OUT SWITCH
Q709 XX SWITCH
Q712 2SC4738F-Y
Q713 2SC4738F-Y
Q912,913 BUFFER
TRV MODEL
STEREO MODEL
IC701
AFM PROCESSOR
IC701
CXA3284R-T6 :EXCEPT STEREO MODEL
CXA3285R-T6 :STEREO MODEL
SP_VCC SP_VREF BEEP_IN SP_IN SP_SIG SP_OUT CTLPF VCC TC_R TCH_R NRDC_R WEIGHT_R TC_L TCH_L NRDC_L WEIGHT_L
SP+ SP_GND SP- HP_L HP_GND HP_R IR_OUT_L IR_OUT_R LINE_OUT_L LINE_OUT_R MUTE_OUT VCCH VREFH VREF MIC_IN_L LINE_IN_L
PLL_LOOP_L PLL_LOOP_R MUTE_TC RECFM_OUT/BPF_MONI BPF_ADJ ST/MONO_TC PB_RF_IN RF_AGC_TC RF_SWP CS_IN CK_IN SI_IN MONO_OUT(SO) MIC_MONO DEV_L DEV_R
AGCTC MIC_IN_R LINE_IN_R REC_OUT_L REC_OUT_R AU_GND PB_IN_L PB_IN_R FADER IREF RF_GND IFDC_L IFDC_R FSC RFDC_L RFDC_R
BEEP
TO(11/13)
REC_AFM
PB_RF
TO(5/13)
1.5M_DEV
1.7M_DEV
AU_BPF
A_FADE
TO(8/13)
FSC
TO(2/13,7/13)
VC_RF_SWP
VC_SI
VC_SO
XVC_SCK
XCS_AU
AU_XIN/OUT
TO(9/13)
16

TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/
TRV67E/TRV87E
STEREO MODEL : CCD-TR717E/TR918E/TRV67E/TRV87E
VTR REC MODEL : CCD-TRV87E:E,HK,AUS,CN,JE

(ABBREVIATION)
AUS : Australian MODEL
HK : Hong Kong MODEL
CN : Chinese MODEL
JE : Tourist MODEL

SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	⇛	⇛	➡
PB	⇨	⇛	⇛	⇨

For Schematic Diagram

- Refer to page 4-35 for printed wiring board.

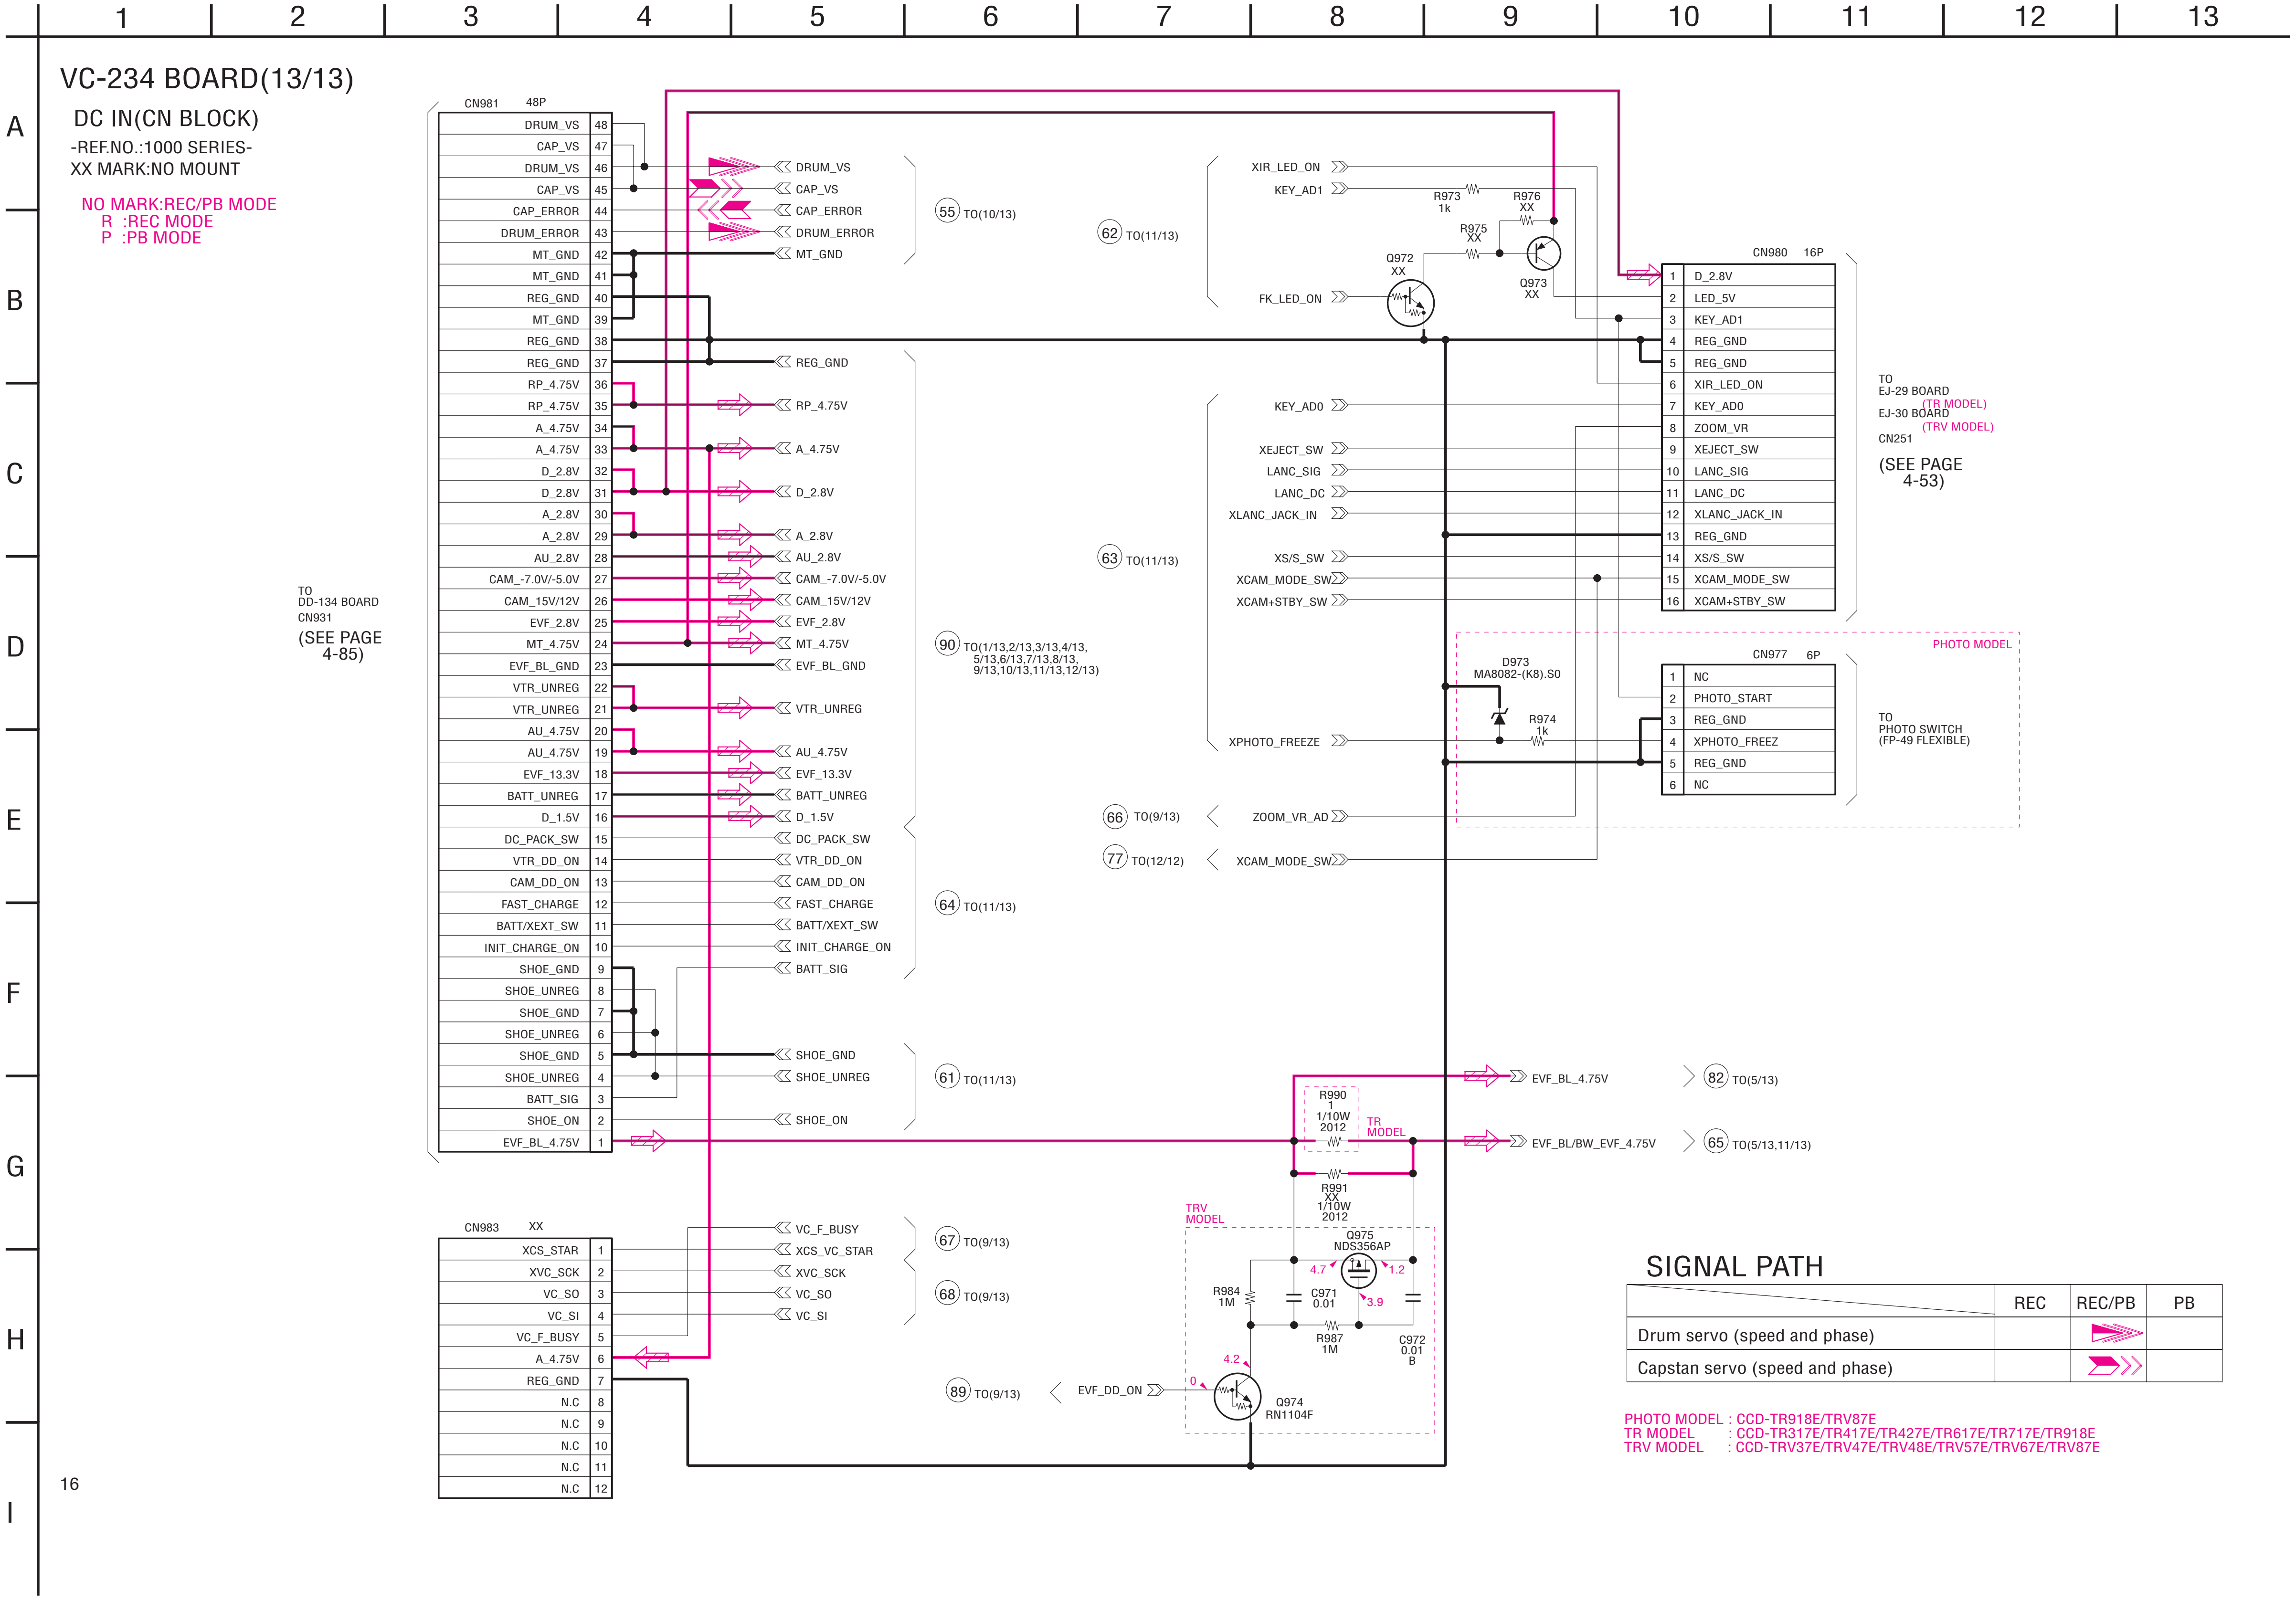

VC-234 BOARD(13/13)

DC IN(CN BLOCK)

-REF.NO.:1000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
I
CN981 48P
DRUM_VS 48
CAP_VS 47
DRUM_VS 46
CAP_VS 45
CAP_ERROR 44
DRUM_ERROR 43
MT_GND 42
MT_GND 41
REG_GND 40
MT_GND 39
REG_GND 38
REG_GND 37
RP_4.75V 36
RP_4.75V 35
A_4.75V 34
A_4.75V 33
D_2.8V 32
D_2.8V 31
A_2.8V 30
A_2.8V 29
AU_2.8V 28
CAM_-7.0V/-5.0V 27
CAM_15V/12V 26
EVF_2.8V 25
MT_4.75V 24
EVF_BL_GND 23
VTR_UNREG 22
VTR_UNREG 21
AU_4.75V 20
AU_4.75V 19
EVF_13.3V 18
BATT_UNREG 17
D_1.5V 16
DC_PACK_SW 15
VTR_DD_ON 14
CAM_DD_ON 13
FAST_CHARGE 12
BATT/XEXT_SW 11
INIT_CHARGE_ON 10
SHOE_GND 9
SHOE_UNREG 8
SHOE_GND 7
SHOE_UNREG 6
SHOE_GND 5
SHOE_UNREG 4
BATT_SIG 3
SHOE_ON 2
EVF_BL_4.75V 1
TO DD-134 BOARD CN931
(SEE PAGE 4-85)
DRUM_VS
CAP_VS
CAP_ERROR
DRUM_ERROR
MT_GND
55 TO(10/13)
REG_GND
RP_4.75V
A_4.75V
D_2.8V
A_2.8V
AU_2.8V
CAM_-7.0V/-5.0V
CAM_15V/12V
EVF_2.8V
MT_4.75V
EVF_BL_GND
VTR_UNREG
AU_4.75V
EVF_13.3V
BATT_UNREG
D_1.5V
90 TO(1/13,2/13,3/13,4/13, 5/13,6/13,7/13,8/13, 9/13,10/13,11/13,12/13)
DC_PACK_SW
VTR_DD_ON
CAM_DD_ON
FAST_CHARGE
BATT/XEXT_SW
INIT_CHARGE_ON
BATT_SIG
64 TO(11/13)
SHOE_GND
SHOE_UNREG
SHOE_ON
61 TO(11/13)
CN983 XX
XCS_STAR 1
XVC_SCK 2
VC_SO 3
VC_SI 4
VC_F_BUSY 5
A_4.75V 6
REG_GND 7
N.C 8
N.C 9
N.C 10
N.C 11
N.C 12
VC_F_BUSY
XCS_VC_STAR
XVC_SCK
VC_SO
VC_SI
67 TO(9/13)
68 TO(9/13)
89 TO(9/13)
EVF_DD_ON
XIR_LED_ON
KEY_AD1
62 TO(11/13)
FK_LED_ON
R973 1k
R976 XX
R975 XX
Q972 XX
Q973 XX
KEY_AD0
XEJECT_SW
LANC_SIG
LANC_DC
XLANC_JACK_IN
XS/S_SW
XCAM_MODE_SW
XCAM+STBY_SW
63 TO(11/13)
XPHOTO_FREEZE
66 TO(9/13)
ZOOM_VR_AD
77 TO(12/12)
XCAM_MODE_SW
CN980 16P
1 D_2.8V
2 LED_5V
3 KEY_AD1
4 REG_GND
5 REG_GND
6 XIR_LED_ON
7 KEY_AD0
8 ZOOM_VR
9 XEJECT_SW
10 LANC_SIG
11 LANC_DC
12 XLANC_JACK_IN
13 REG_GND
14 XS/S_SW
15 XCAM_MODE_SW
16 XCAM+STBY_SW
TO EJ-29 BOARD (TR MODEL)
EJ-30 BOARD (TRV MODEL)
CN251
(SEE PAGE 4-53)
PHOTO MODEL
D973 MA8082-(K8).S0
R974 1k
CN977 6P
1 NC
2 PHOTO_START
3 REG_GND
4 XPHOTO_FREEZ
5 REG_GND
6 NC
TO PHOTO SWITCH (FP-49 FLEXIBLE)
EVF_BL_4.75V
82 TO(5/13)
EVF_BL/BW_EVF_4.75V
65 TO(5/13,11/13)
R990 1 1/10W 2012
TR MODEL
R991 XX 1/10W 2012
TRV MODEL
Q975 NDS356AP
4.7
1.2
3.9
R984 1M
C971 0.01
R987 1M
C972 0.01 B
4.2
0
Q974 RN1104F
16

SIGNAL PATH

	REC	REC/PB	PB
Drum servo (speed and phase)		⇛	
Capstan servo (speed and phase)		⇛	

PHOTO MODEL : CCD-TR918E/TRV87E
TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

VC-234 (CAMERA, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC/PB AMP, LINE IN/OUT, MODE CONTROL, SERVO, HI CONTROL, AUDIO) PRINTED WIRING BOARD

— Ref. No. VC-234 Board; 1,000 Series —

VC-234 BOARD(SIDE A)

For printed wiring board

- Refer to page 4-91, 92 for location.
- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

Transistor



There are few cases that the part printed on this diagram isn't mounted in this model.

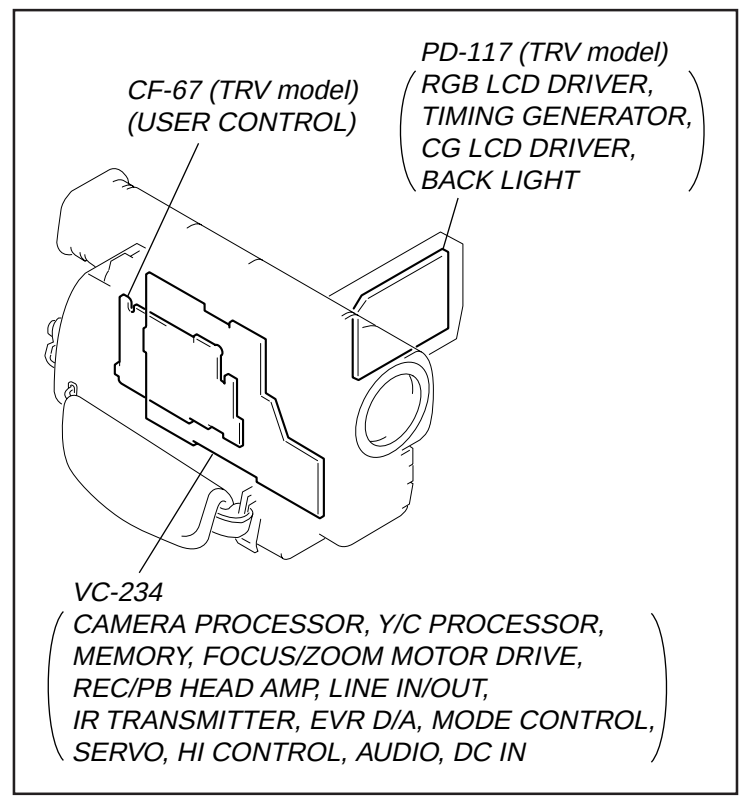
CF-67 (TRV model)
(USER CONTROL)
PD-117 (TRV model)
RGB LCD DRIVER,
TIMING GENERATOR,
CG LCD DRIVER,
BACK LIGHT
VC-234
CAMERA PROCESSOR, Y/C PROCESSOR,
MEMORY, FOCUS/ZOOM MOTOR DRIVE,
REC/PB HEAD AMP, LINE IN/OUT,
IR TRANSMITTER, EVR D/A, MODE CONTROL,
SERVO, HI CONTROL, AUDIO, DC IN

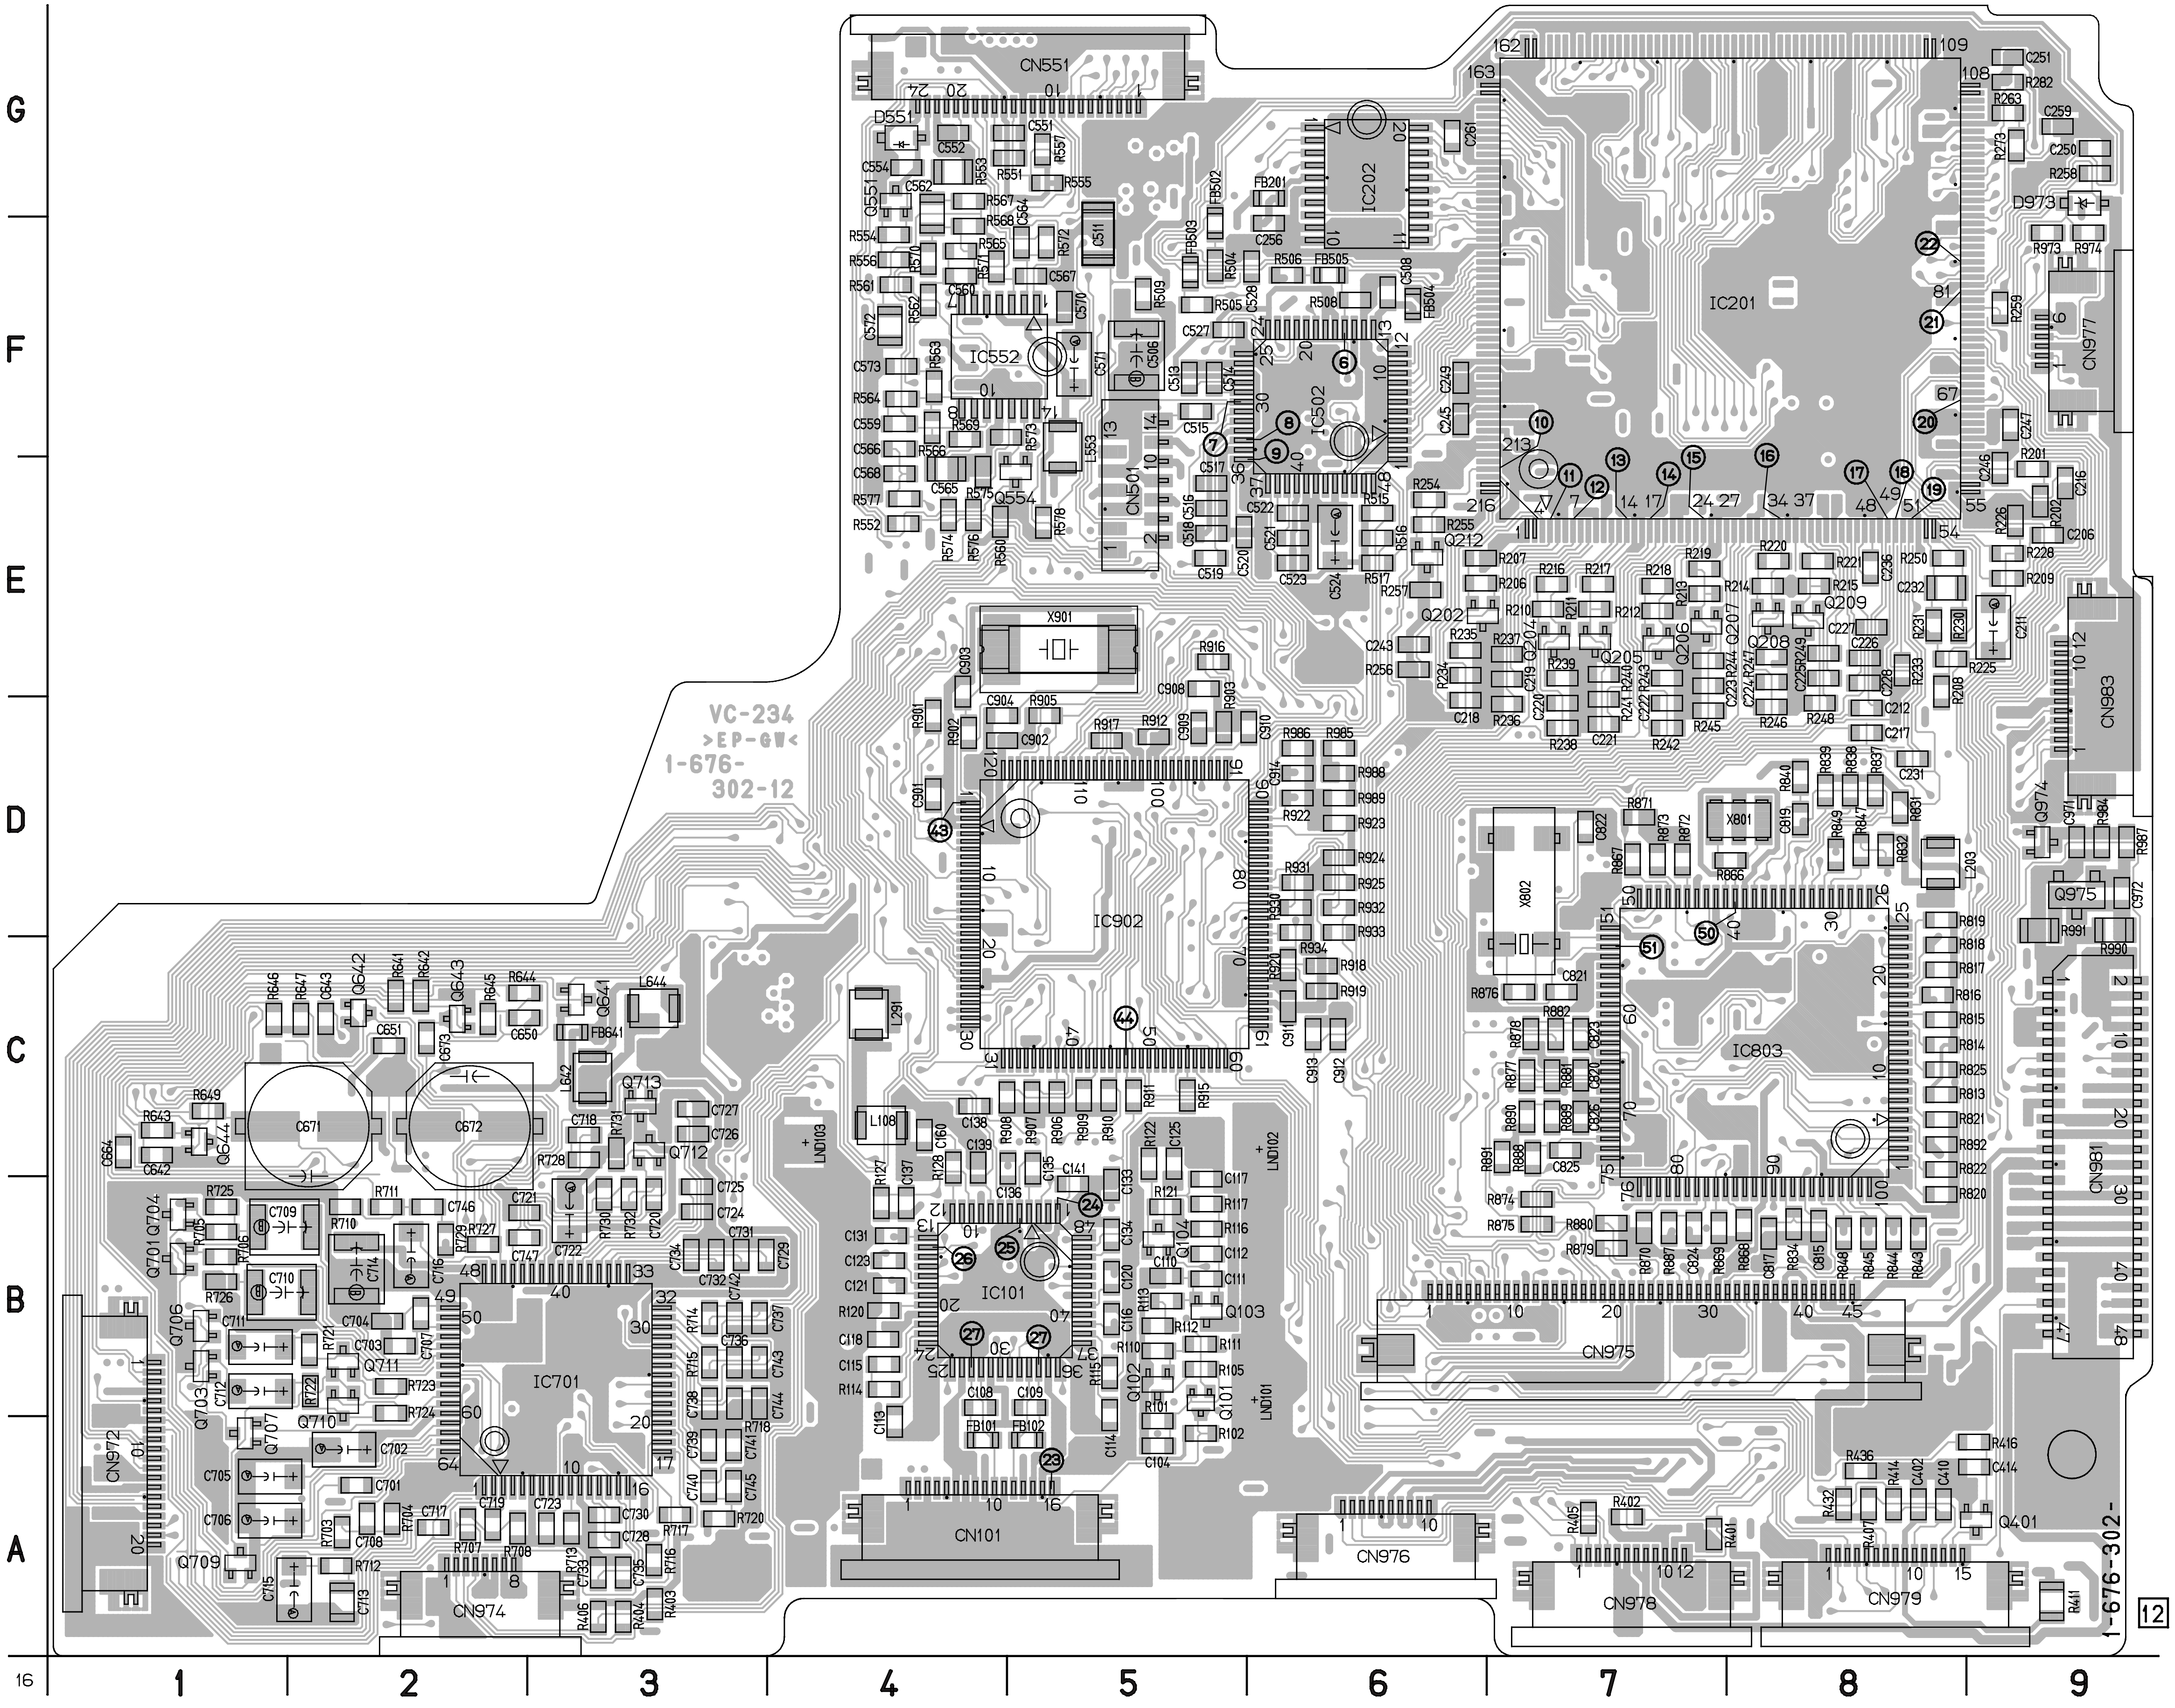
G
F
E
D
C
B
A
1
2
3
4
5
6
7
8
9
16
VC-234
>EP-GW<
1-676-302-12
CN551
IC552
IC202
IC502
IC201
CN501
CN977
CN983
X901
IC902
X801
X802
IC803
CN981
CN975
IC701
IC101
CN972
CN974
CN101
CN976
CN978
CN979
Q401
1-676-302-
12

CAMERA, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC/PB AMP, LINE IN/OUT, MODE CONTROL, SERVO, HI CONTROL, AUDIO

VC-234

VC-234 BOARD(SIDE B)

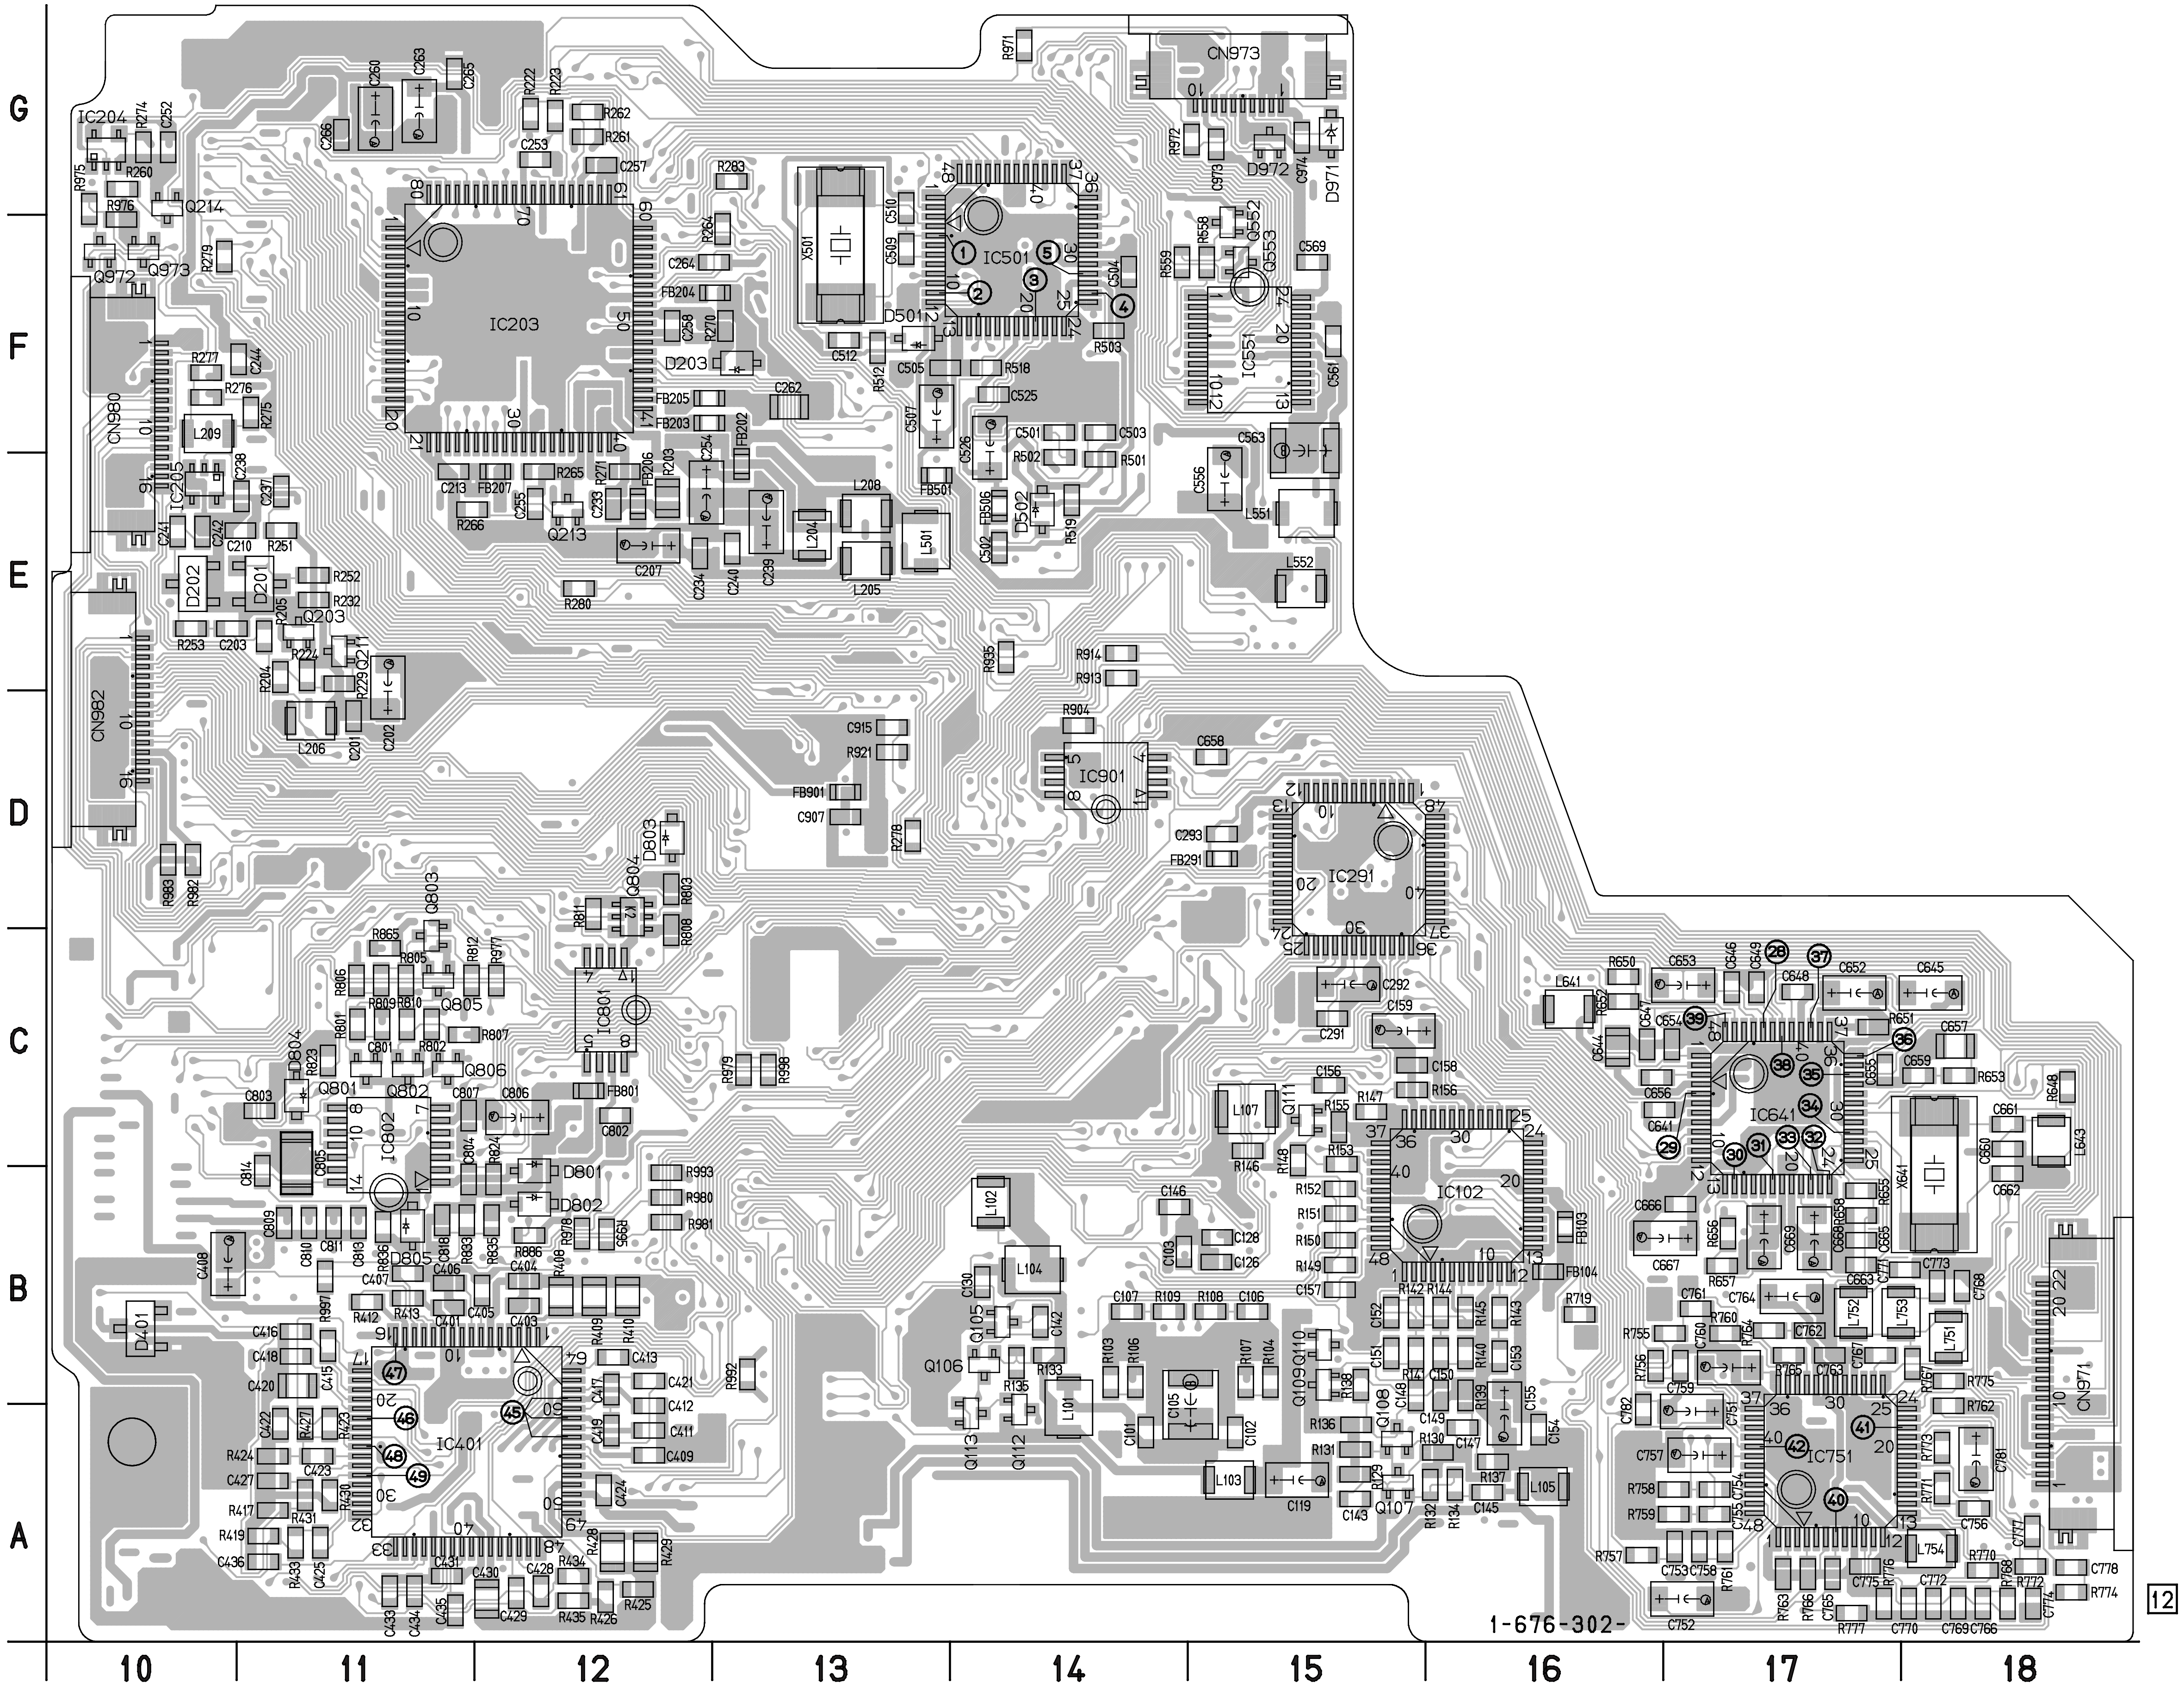
G
F
E
D
C
B
A
10
11
12
13
14
15
16
17
18
IC204
IC203
IC501
IC551
CN973
CN980
IC205
CN982
IC901
IC291
IC801
IC802
IC401
IC102
IC641
IC751
CN971
X501
X641
D401
1-676-302-
12

CAMERA, Y/C PROCESSOR, FOCUS/ZOOM MOTOR DRIVE, REC/PB AMP, LINE IN/OUT, MODE CONTROL, SERVO, HI CONTROL, AUDIO
VC-234

CF-66 (USER CONTROL) PRINTED WIRING BOARD

— Ref. No. CF-66 Board; 3,000 Series —

CF-66 BOARD(SIDE A) (TR MODEL)

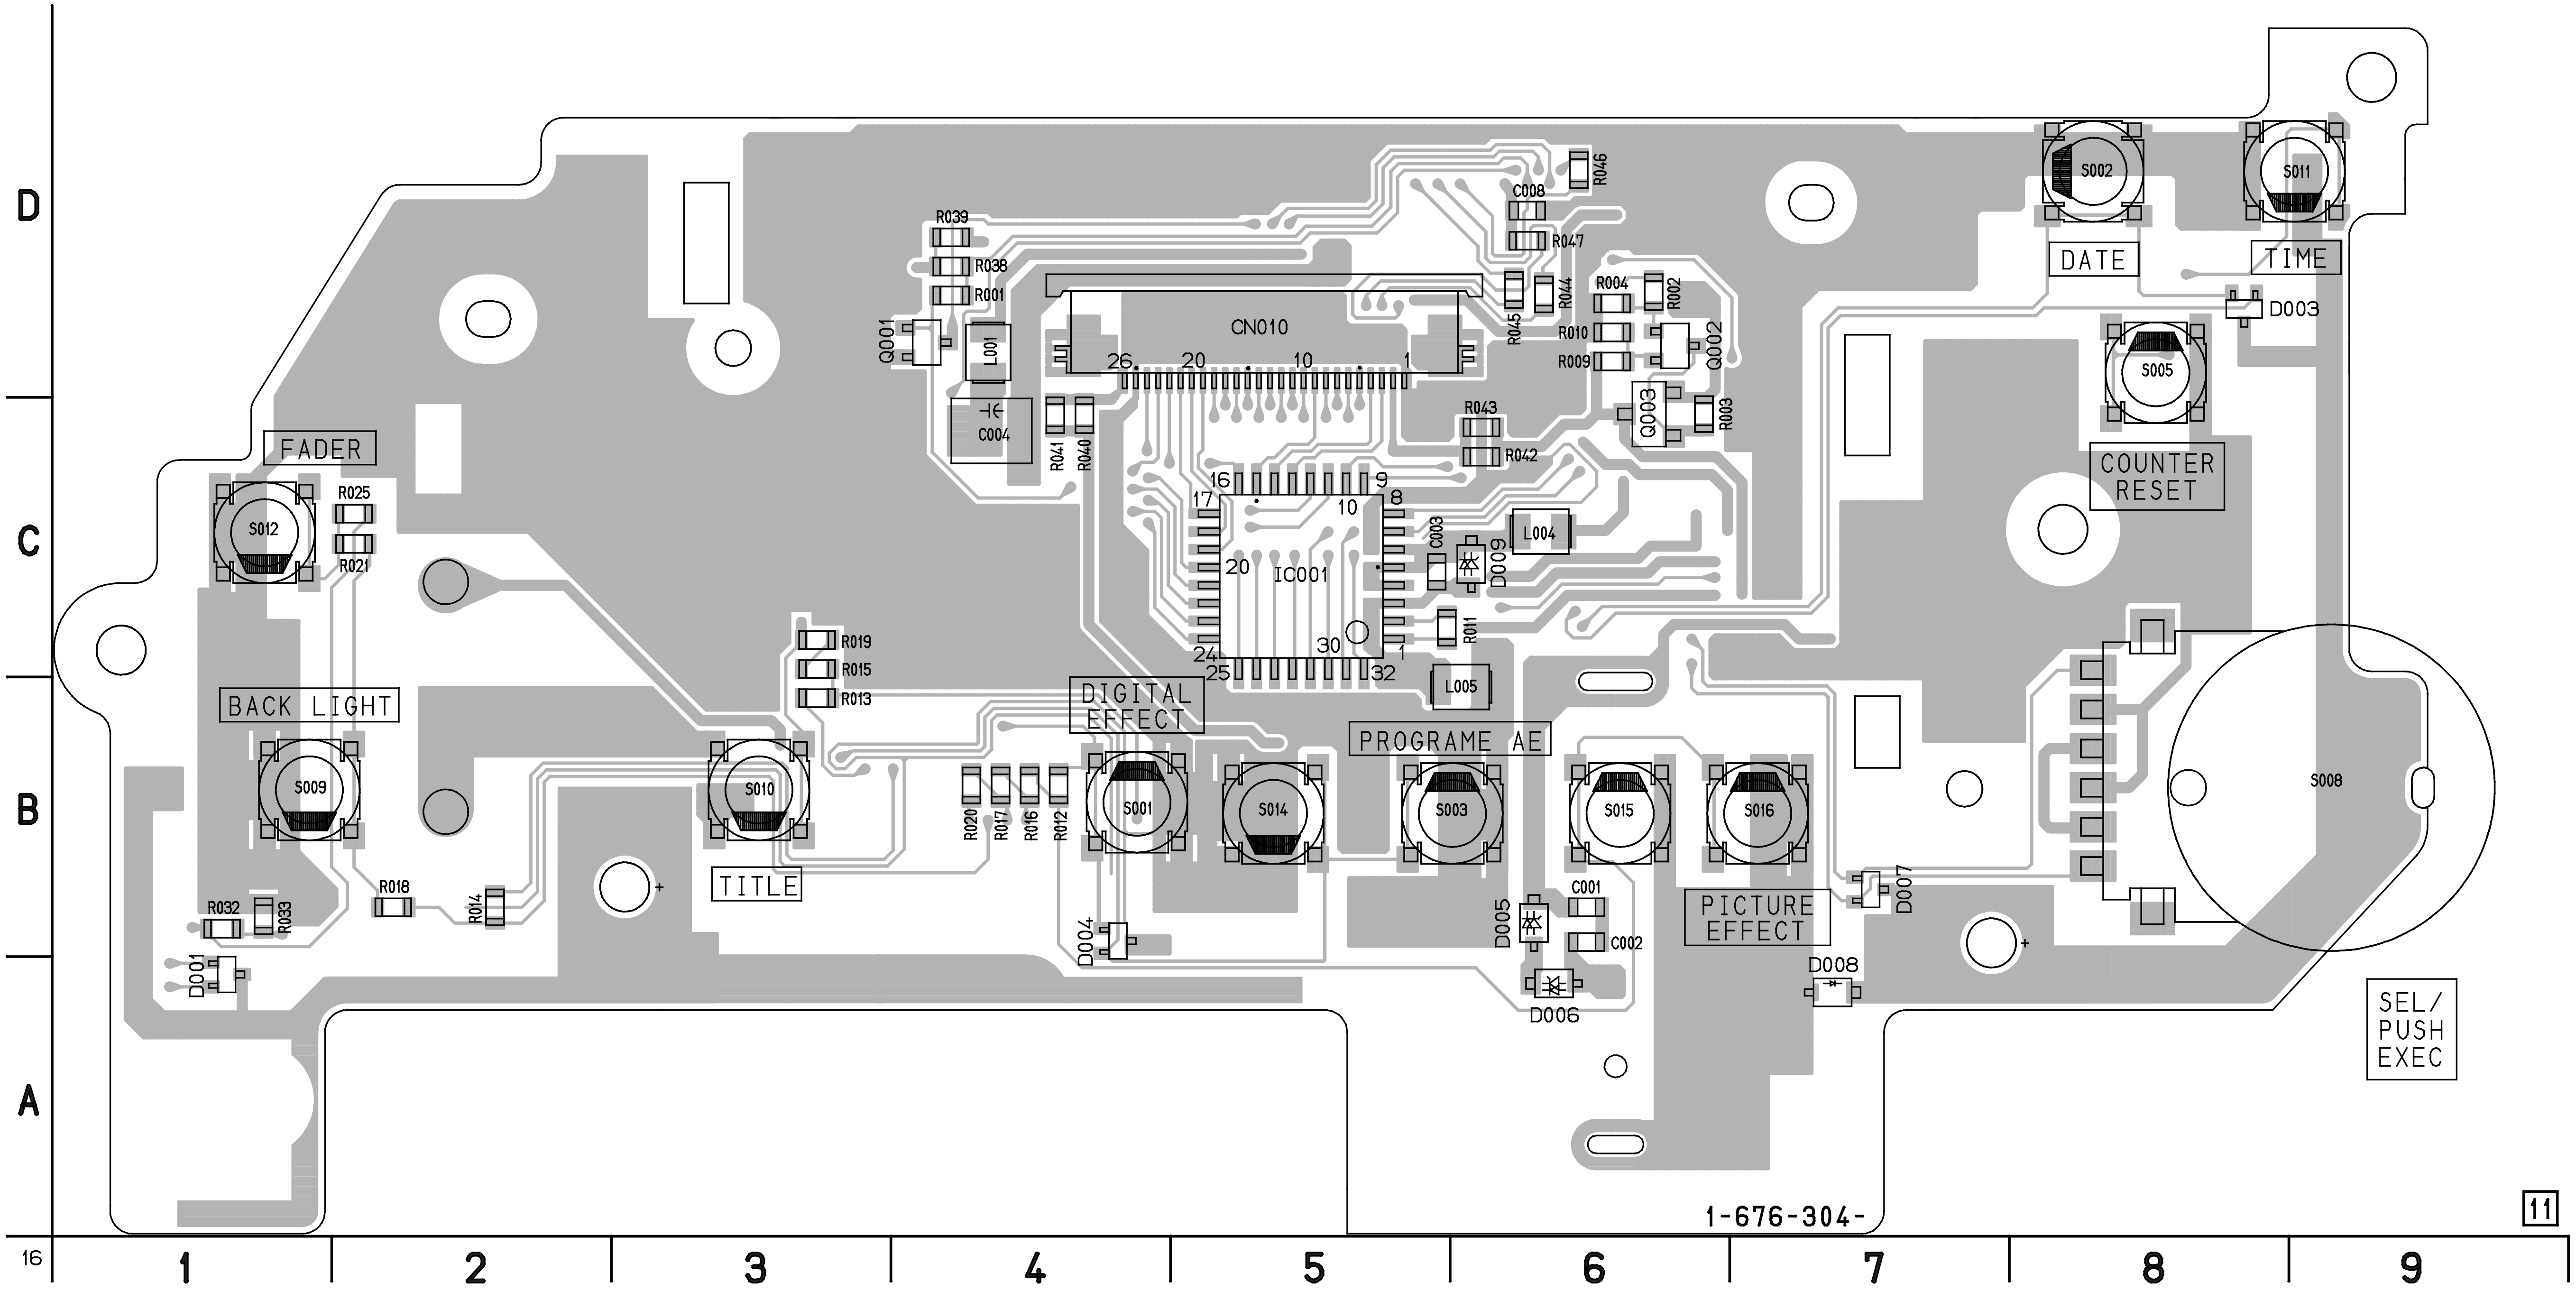
D
C
B
A
FADER
S012
R025
R021
BACK LIGHT
S009
R032
R033
R018
R014
D001
TITLE
S010
R019
R015
R013
R039
R038
R001
Q001
L001
C004
R041
R040
CN010
26
20
10
1
16
17
9
8
10
20
IC001
24
25
30
32
1
DIGITAL EFFECT
R020
R017
R016
R012
S001
S014
D004
PROGRAME AE
S003
S015
S016
C008
R046
R047
R045
R044
R004
R002
R010
R009
Q002
R043
R042
Q003
R003
C003
D009
L004
R011
L005
D005
C001
C002
D006
PICTURE EFFECT
D007
D008
S002
DATE
S011
TIME
D003
S005
COUNTER RESET
S008
SEL/ PUSH EXEC
1-676-304-
11
16
1
2
3
4
5
6
7
8
9

For printed wiring board
- Refer to page 4-92 for location.
- Chip parts

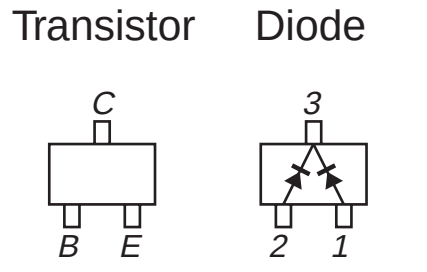
Transistor
C
B
E
Diode
3
2
1

There are few cases that the part printed on this diagram isn't mounted in this model.

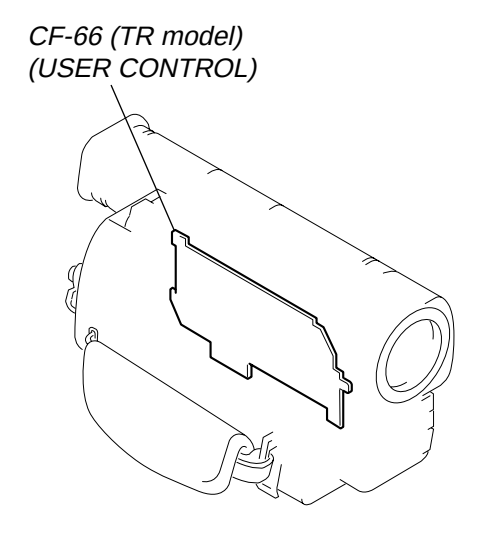
CF-66 (TR model)
(USER CONTROL)

CF-66 BOARD(SIDE B) (TR MODEL)

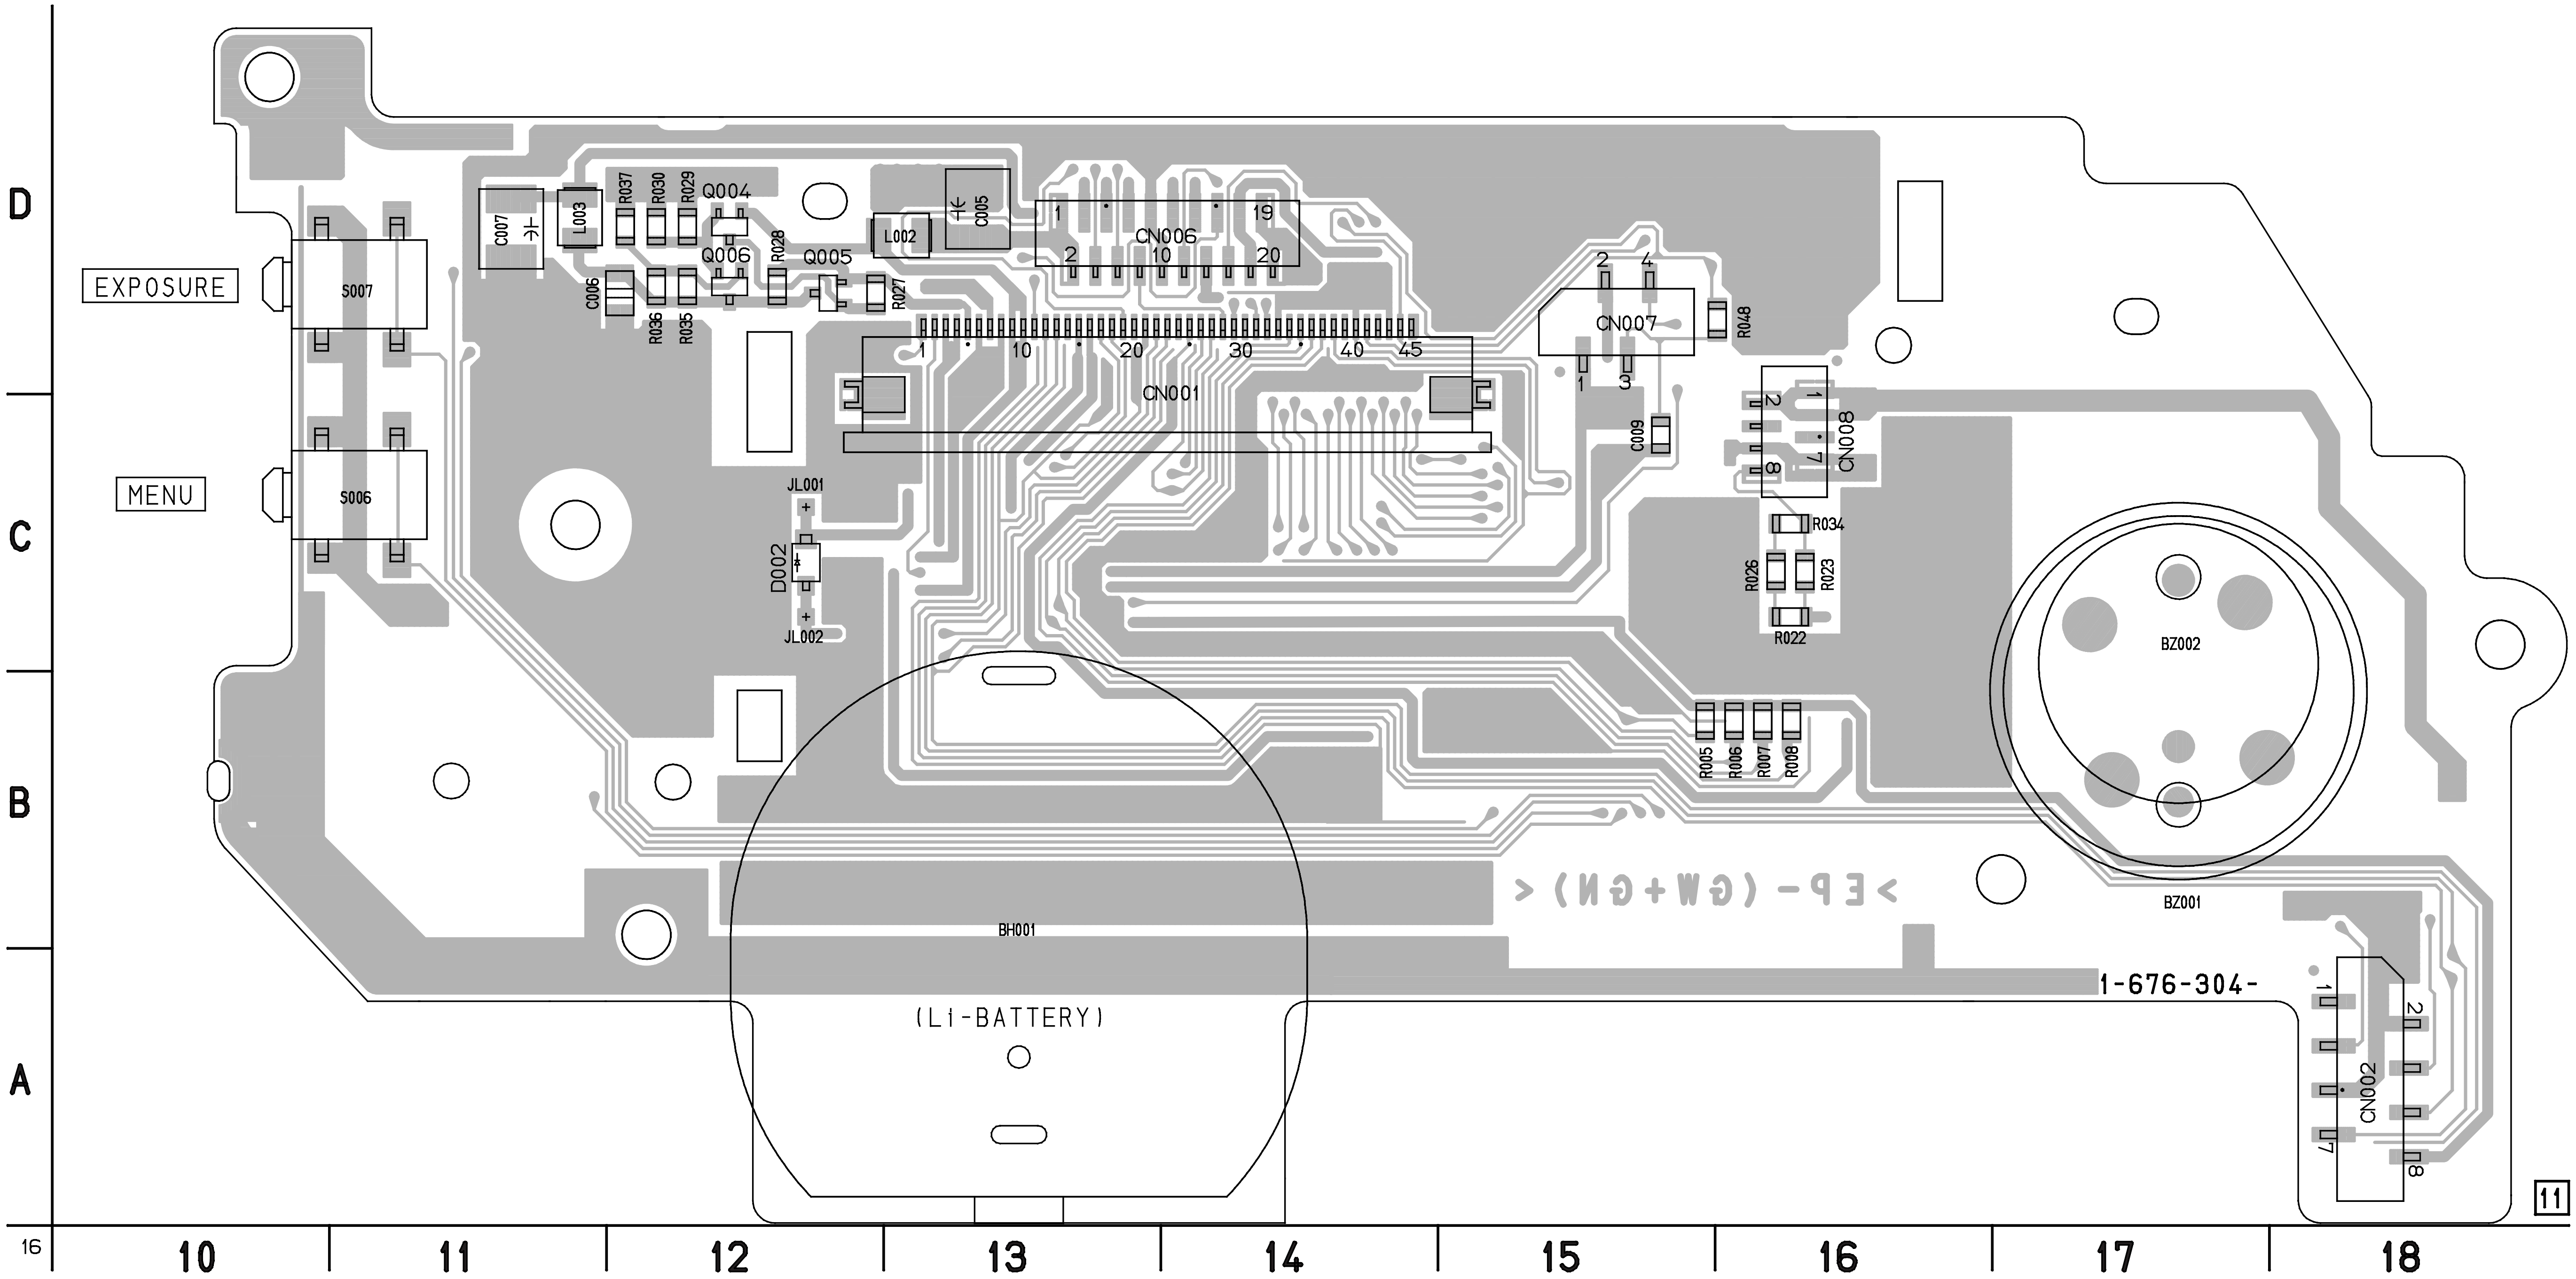
D
C
B
A
EXPOSURE
MENU
S007
S006
C007
L003
R037
R030
R029
Q004
Q006
R028
Q005
L002
C005
CN006
1
19
2
10
20
C006
R036
R035
R027
CN001
1
10
20
30
40
45
CN007
2
4
1
3
R048
C009
CN008
1
2
7
8
R034
R026
R023
R022
JL001
D002
JL002
BZ002
BZ001
R005
R006
R007
R008
BH001
(Li-BATTERY)
>EP-(GW+GN)<
1-676-304-
CN002
1
2
7
8
11
16
10
11
12
13
14
15
16
17
18

CF-67 (USER CONTROL) PRINTED WIRING BOARD

— Ref. No. CF-67 Board; 4,000 Series —

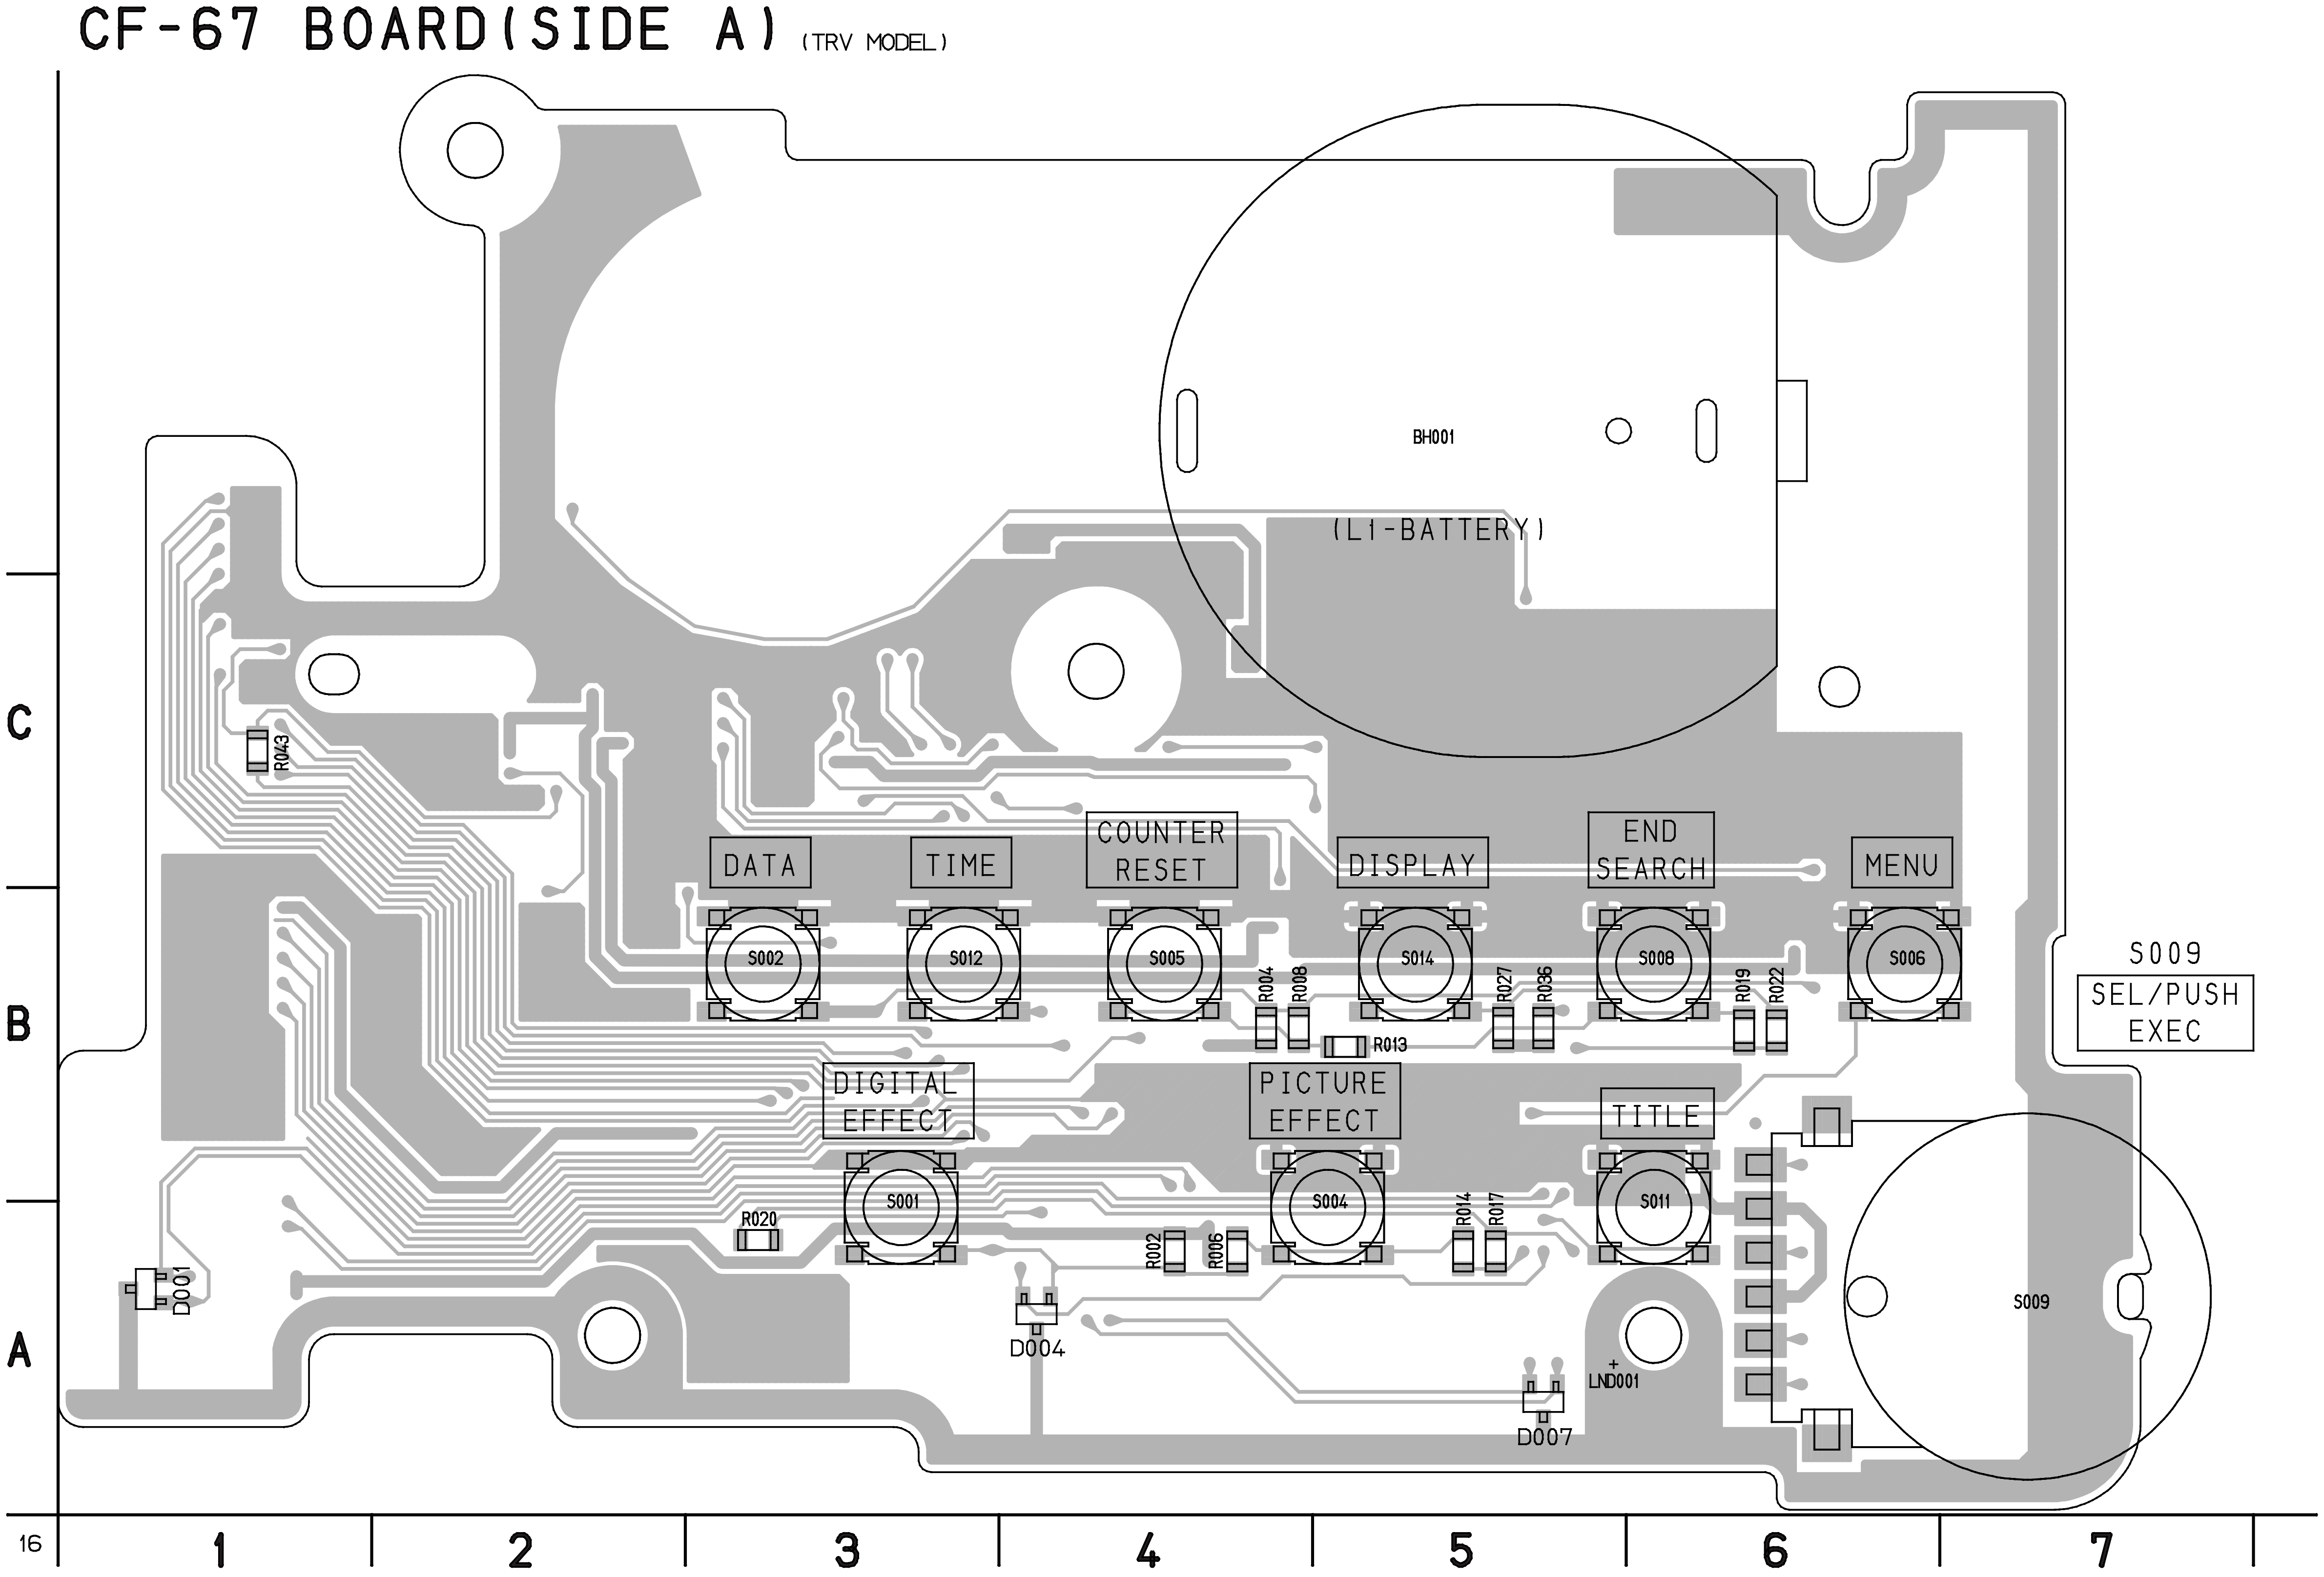
CF-67 BOARD(SIDE A) (TRV MODEL)
BH001
(Li-BATTERY)
C
B
A
R043
DATA
TIME
COUNTER RESET
DISPLAY
END SEARCH
MENU
S002
S012
S005
S014
S008
S006
R004
R008
R027
R036
R019
R022
R013
S009
SEL/PUSH EXEC
DIGITAL EFFECT
PICTURE EFFECT
TITLE
S001
S004
S011
R020
R002
R006
R014
R017
D001
D004
+
LND001
D007
S009
16
1
2
3
4
5
6
7

For printed wiring board

- Refer to page 4-93 for location.
- Chip parts

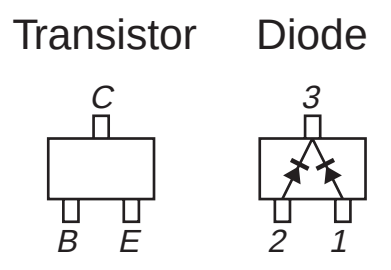
Transistor
Diode
C
B
E
3
2
1

There are few cases that the part printed on this diagram isn't mounted in this model.

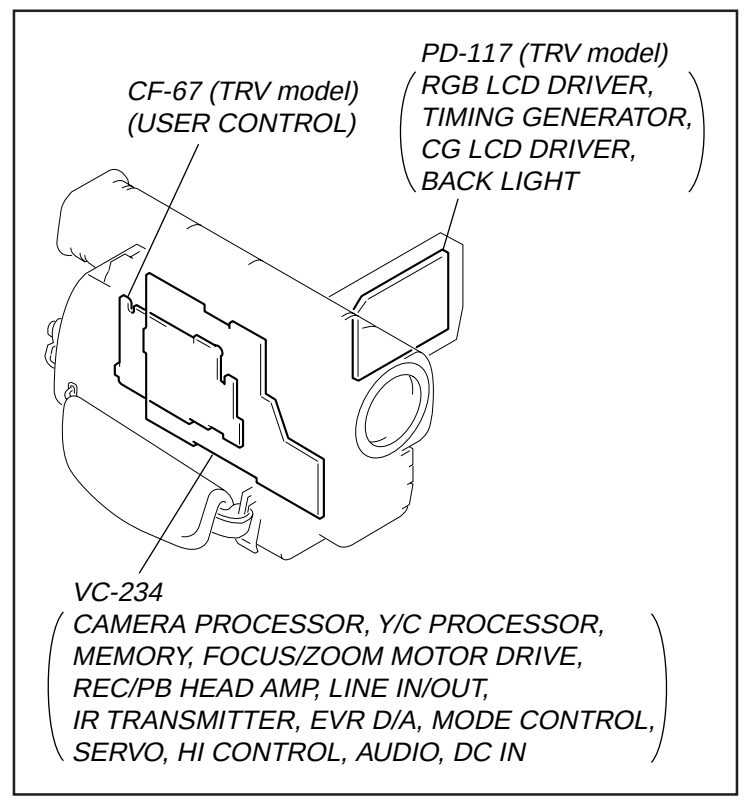
CF-67 (TRV model)
(USER CONTROL)
PD-117 (TRV model)
RGB LCD DRIVER,
TIMING GENERATOR,
CG LCD DRIVER,
BACK LIGHT
VC-234
CAMERA PROCESSOR, Y/C PROCESSOR,
MEMORY, FOCUS/ZOOM MOTOR DRIVE,
REC/PB HEAD AMP, LINE IN/OUT,
IR TRANSMITTER, EVR D/A, MODE CONTROL,
SERVO, HI CONTROL, AUDIO, DC IN

CF-67 BOARD(SIDE B) (TRV MODEL)

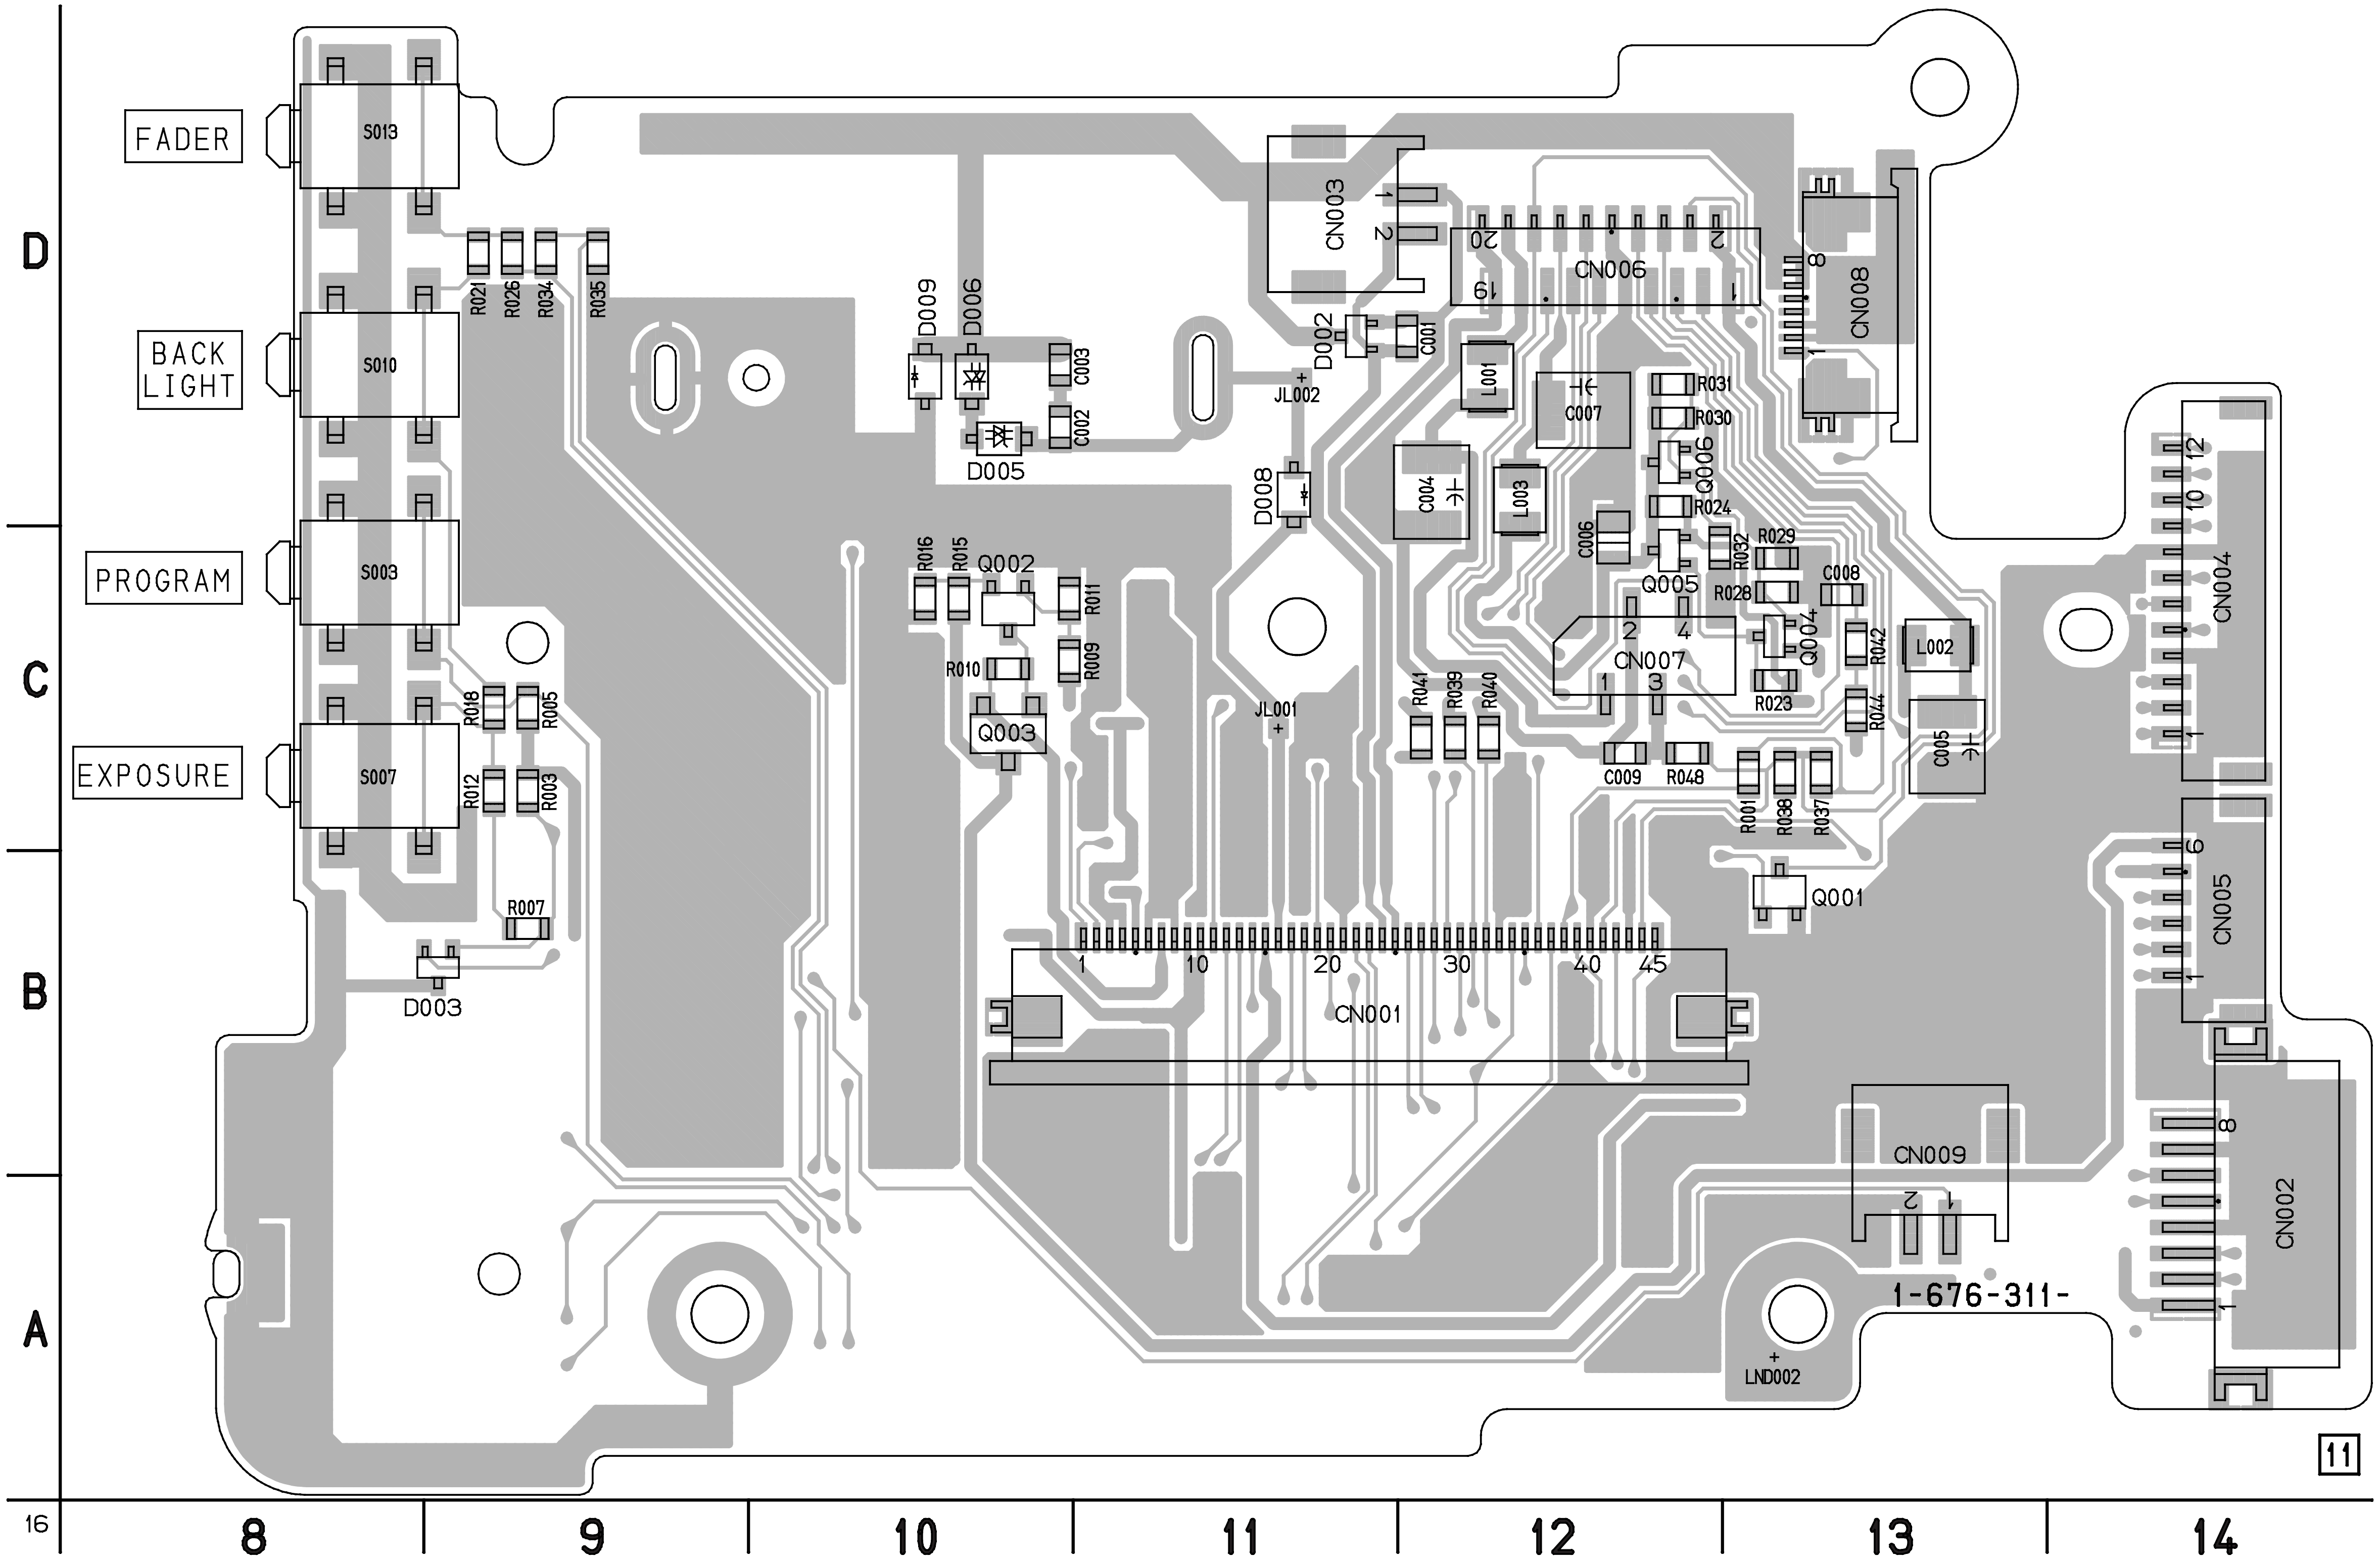
FADER
BACK LIGHT
PROGRAM
EXPOSURE
S013
S010
S003
S007
R021
R026
R034
R035
R018
R005
R012
R003
R007
D003
D009
D006
D005
C003
C002
R016
R015
Q002
R011
R010
R009
Q003
D002
C001
JL002
D008
JL001
CN003
CN006
CN008
L001
C007
R031
R030
Q006
C004
L003
R024
C006
R029
R032
Q005
R028
C008
Q004
R042
L002
CN007
R041
R039
R040
R023
R044
C005
C009
R048
R001
R038
R037
Q001
CN004
CN005
CN001
CN009
CN002
LND002
1-676-311-
11
D
C
B
A
16
8
9
10
11
12
13
14

CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/
TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

For Schematic Diagram
- Refer to page 4-39 for printed wiring board.

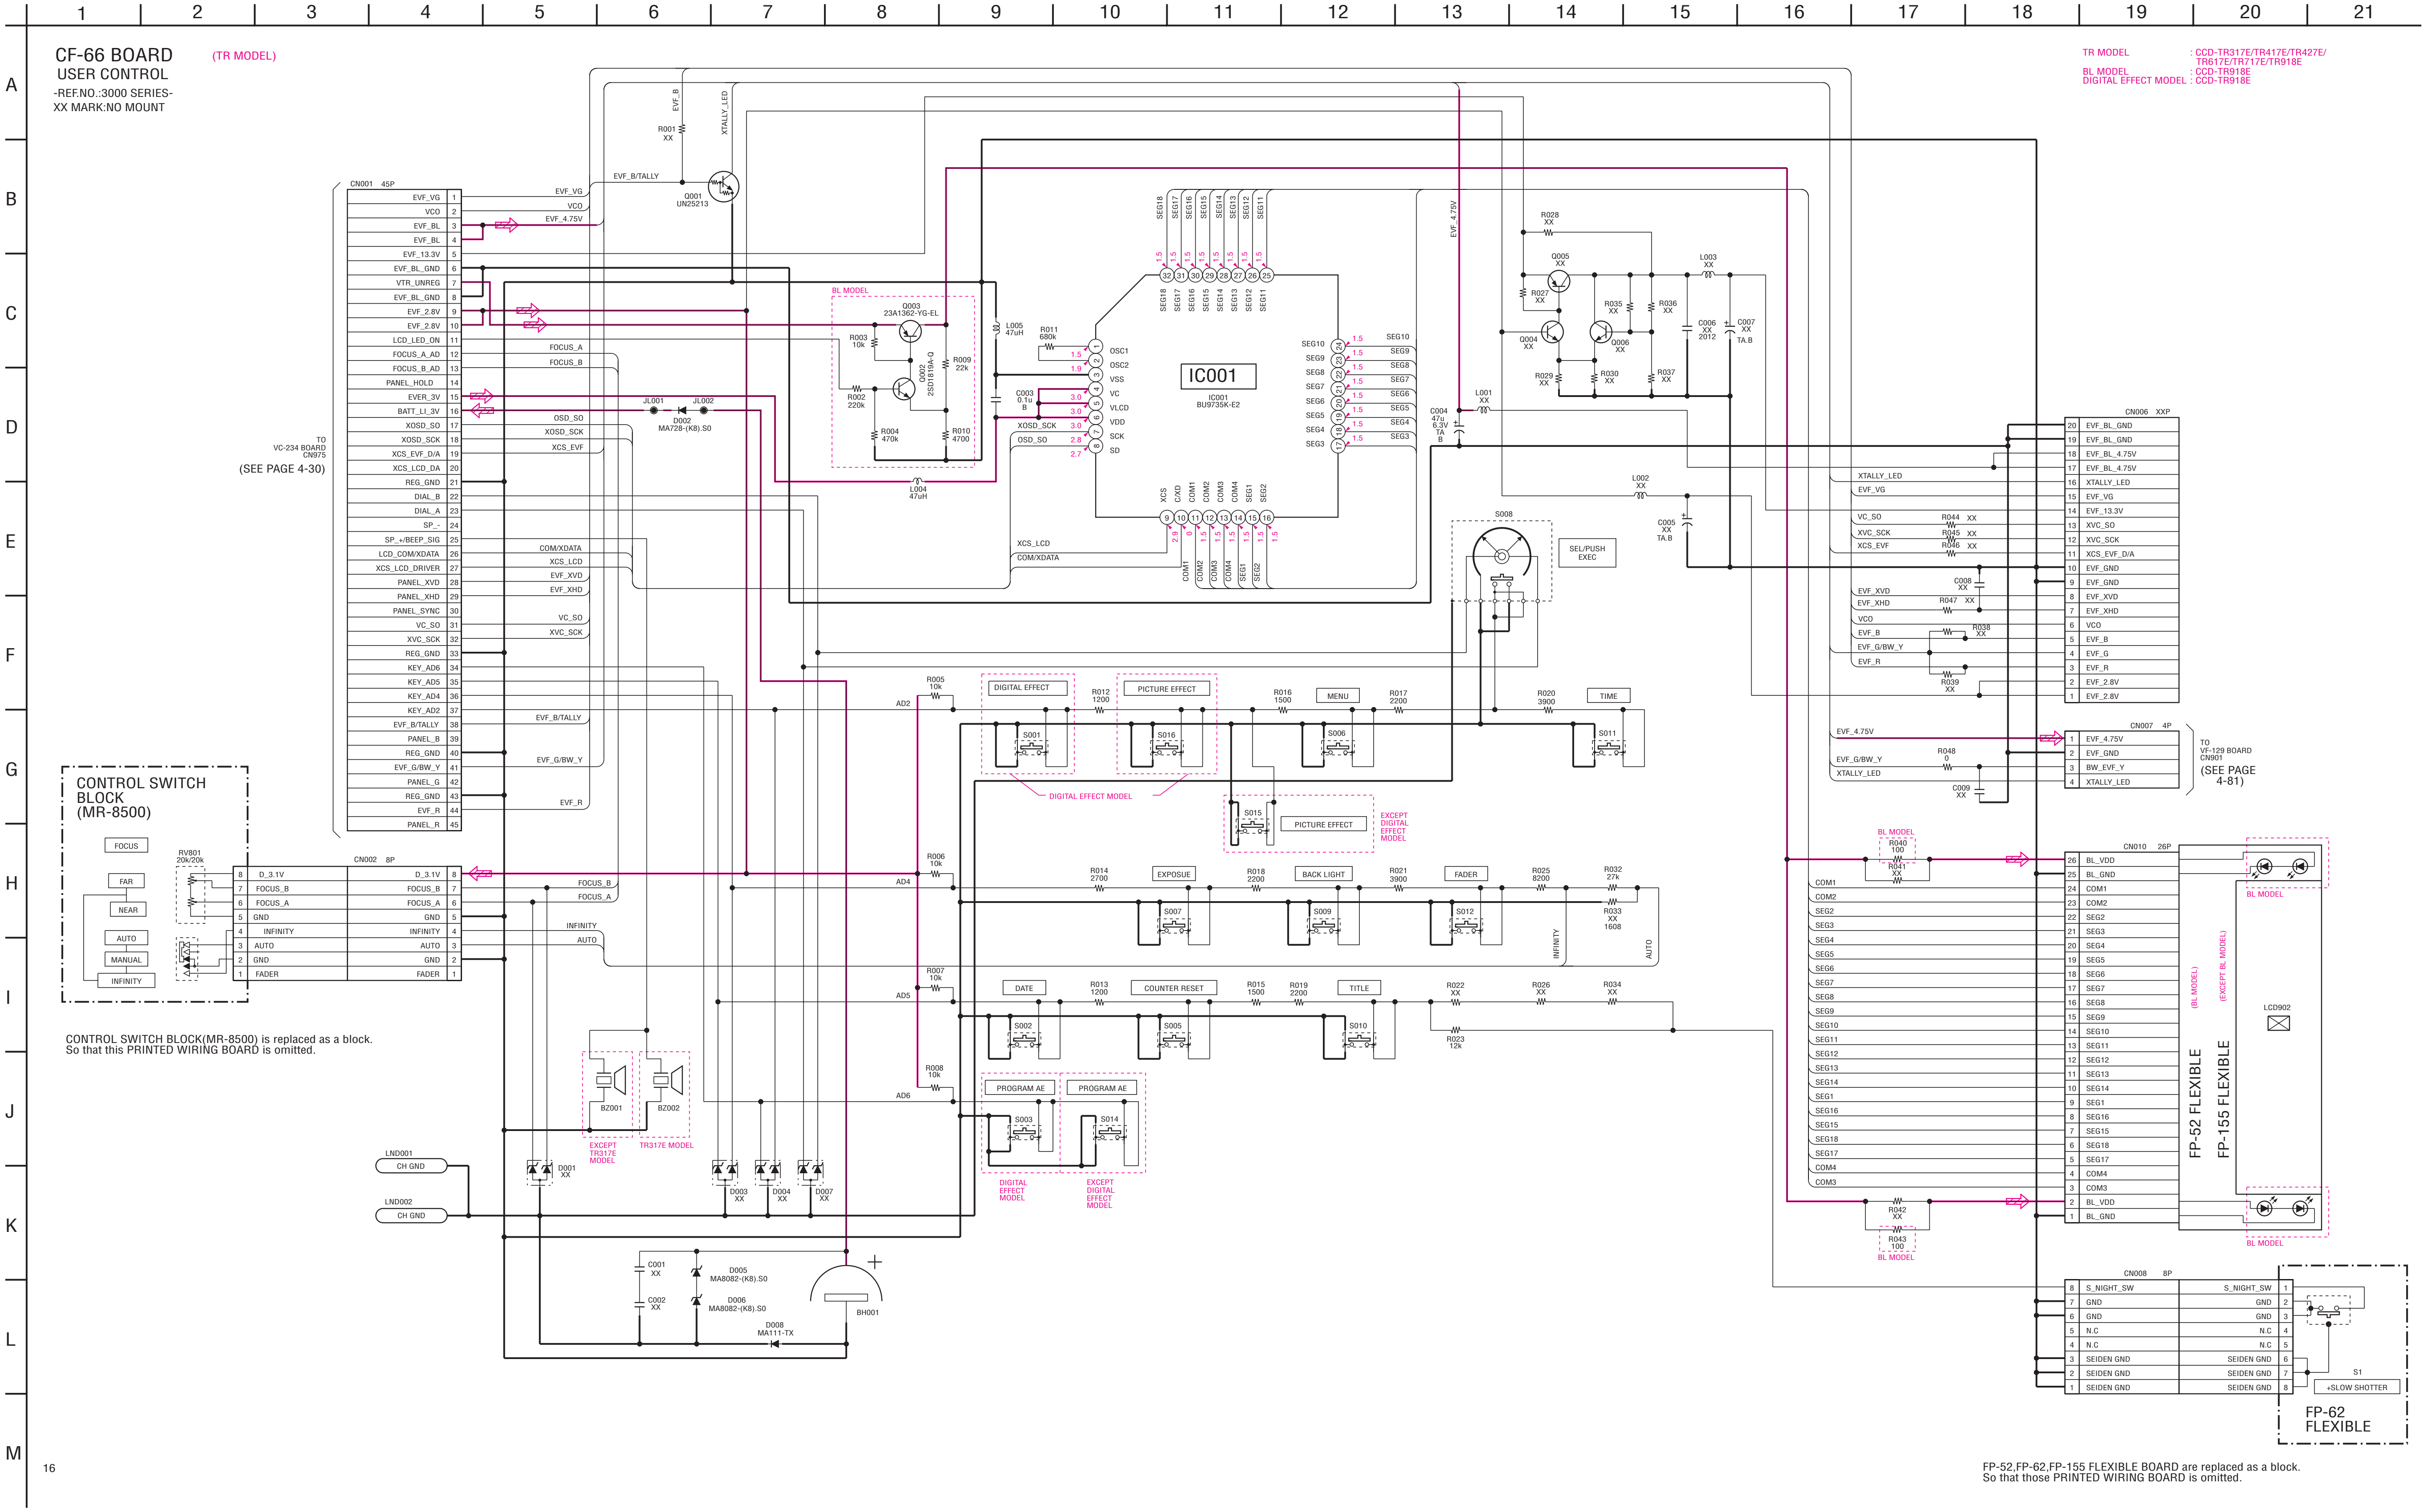
CF-66 BOARD
USER CONTROL
-REF.NO.:3000 SERIES-
XX MARK:NO MOUNT
(TR MODEL)
TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
BL MODEL : CCD-TR918E
DIGITAL EFFECT MODEL : CCD-TR918E
CN001 45P
TO VC-234 BOARD CN975
(SEE PAGE 4-30)
CN002 8P
CONTROL SWITCH BLOCK (MR-8500)
FOCUS
FAR
NEAR
AUTO
MANUAL
INFINITY
RV801 20k/20k
IC001
IC001 BU9735K-E2
Q001 UN25213
Q002 2SD1819A-Q
Q003 23A1362-YG-EL
Q004 XX
Q005 XX
Q006 XX
BL MODEL
DIGITAL EFFECT
PICTURE EFFECT
DIGITAL EFFECT MODEL
EXCEPT DIGITAL EFFECT MODEL
MENU
TIME
EXPOSURE
BACK LIGHT
FADER
DATE
COUNTER RESET
TITLE
PROGRAM AE
SEL/PUSH EXEC
S008
BZ001
BZ002
EXCEPT TR317E MODEL
TR317E MODEL
BH001
LND001 CH GND
LND002 CH GND
D005 MA8082-(K8).S0
D006 MA8082-(K8).S0
D008 MA111-TX
D002 MA728-(K8).S0
CN006 XXP
CN007 4P
TO VF-129 BOARD CN901
(SEE PAGE 4-81)
CN010 26P
FP-52 FLEXIBLE
FP-155 FLEXIBLE
(BL MODEL)
(EXCEPT BL MODEL)
LCD902
CN008 8P
S1
+SLOW SHUTTER
FP-62 FLEXIBLE

CONTROL SWITCH BLOCK(MR-8500) is replaced as a block.
So that this PRINTED WIRING BOARD is omitted.

FP-52,FP-62,FP-155 FLEXIBLE BOARD are replaced as a block.
So that those PRINTED WIRING BOARD is omitted.

16

For Schematic Diagram
- Refer to page 4-43 for printed wiring board.

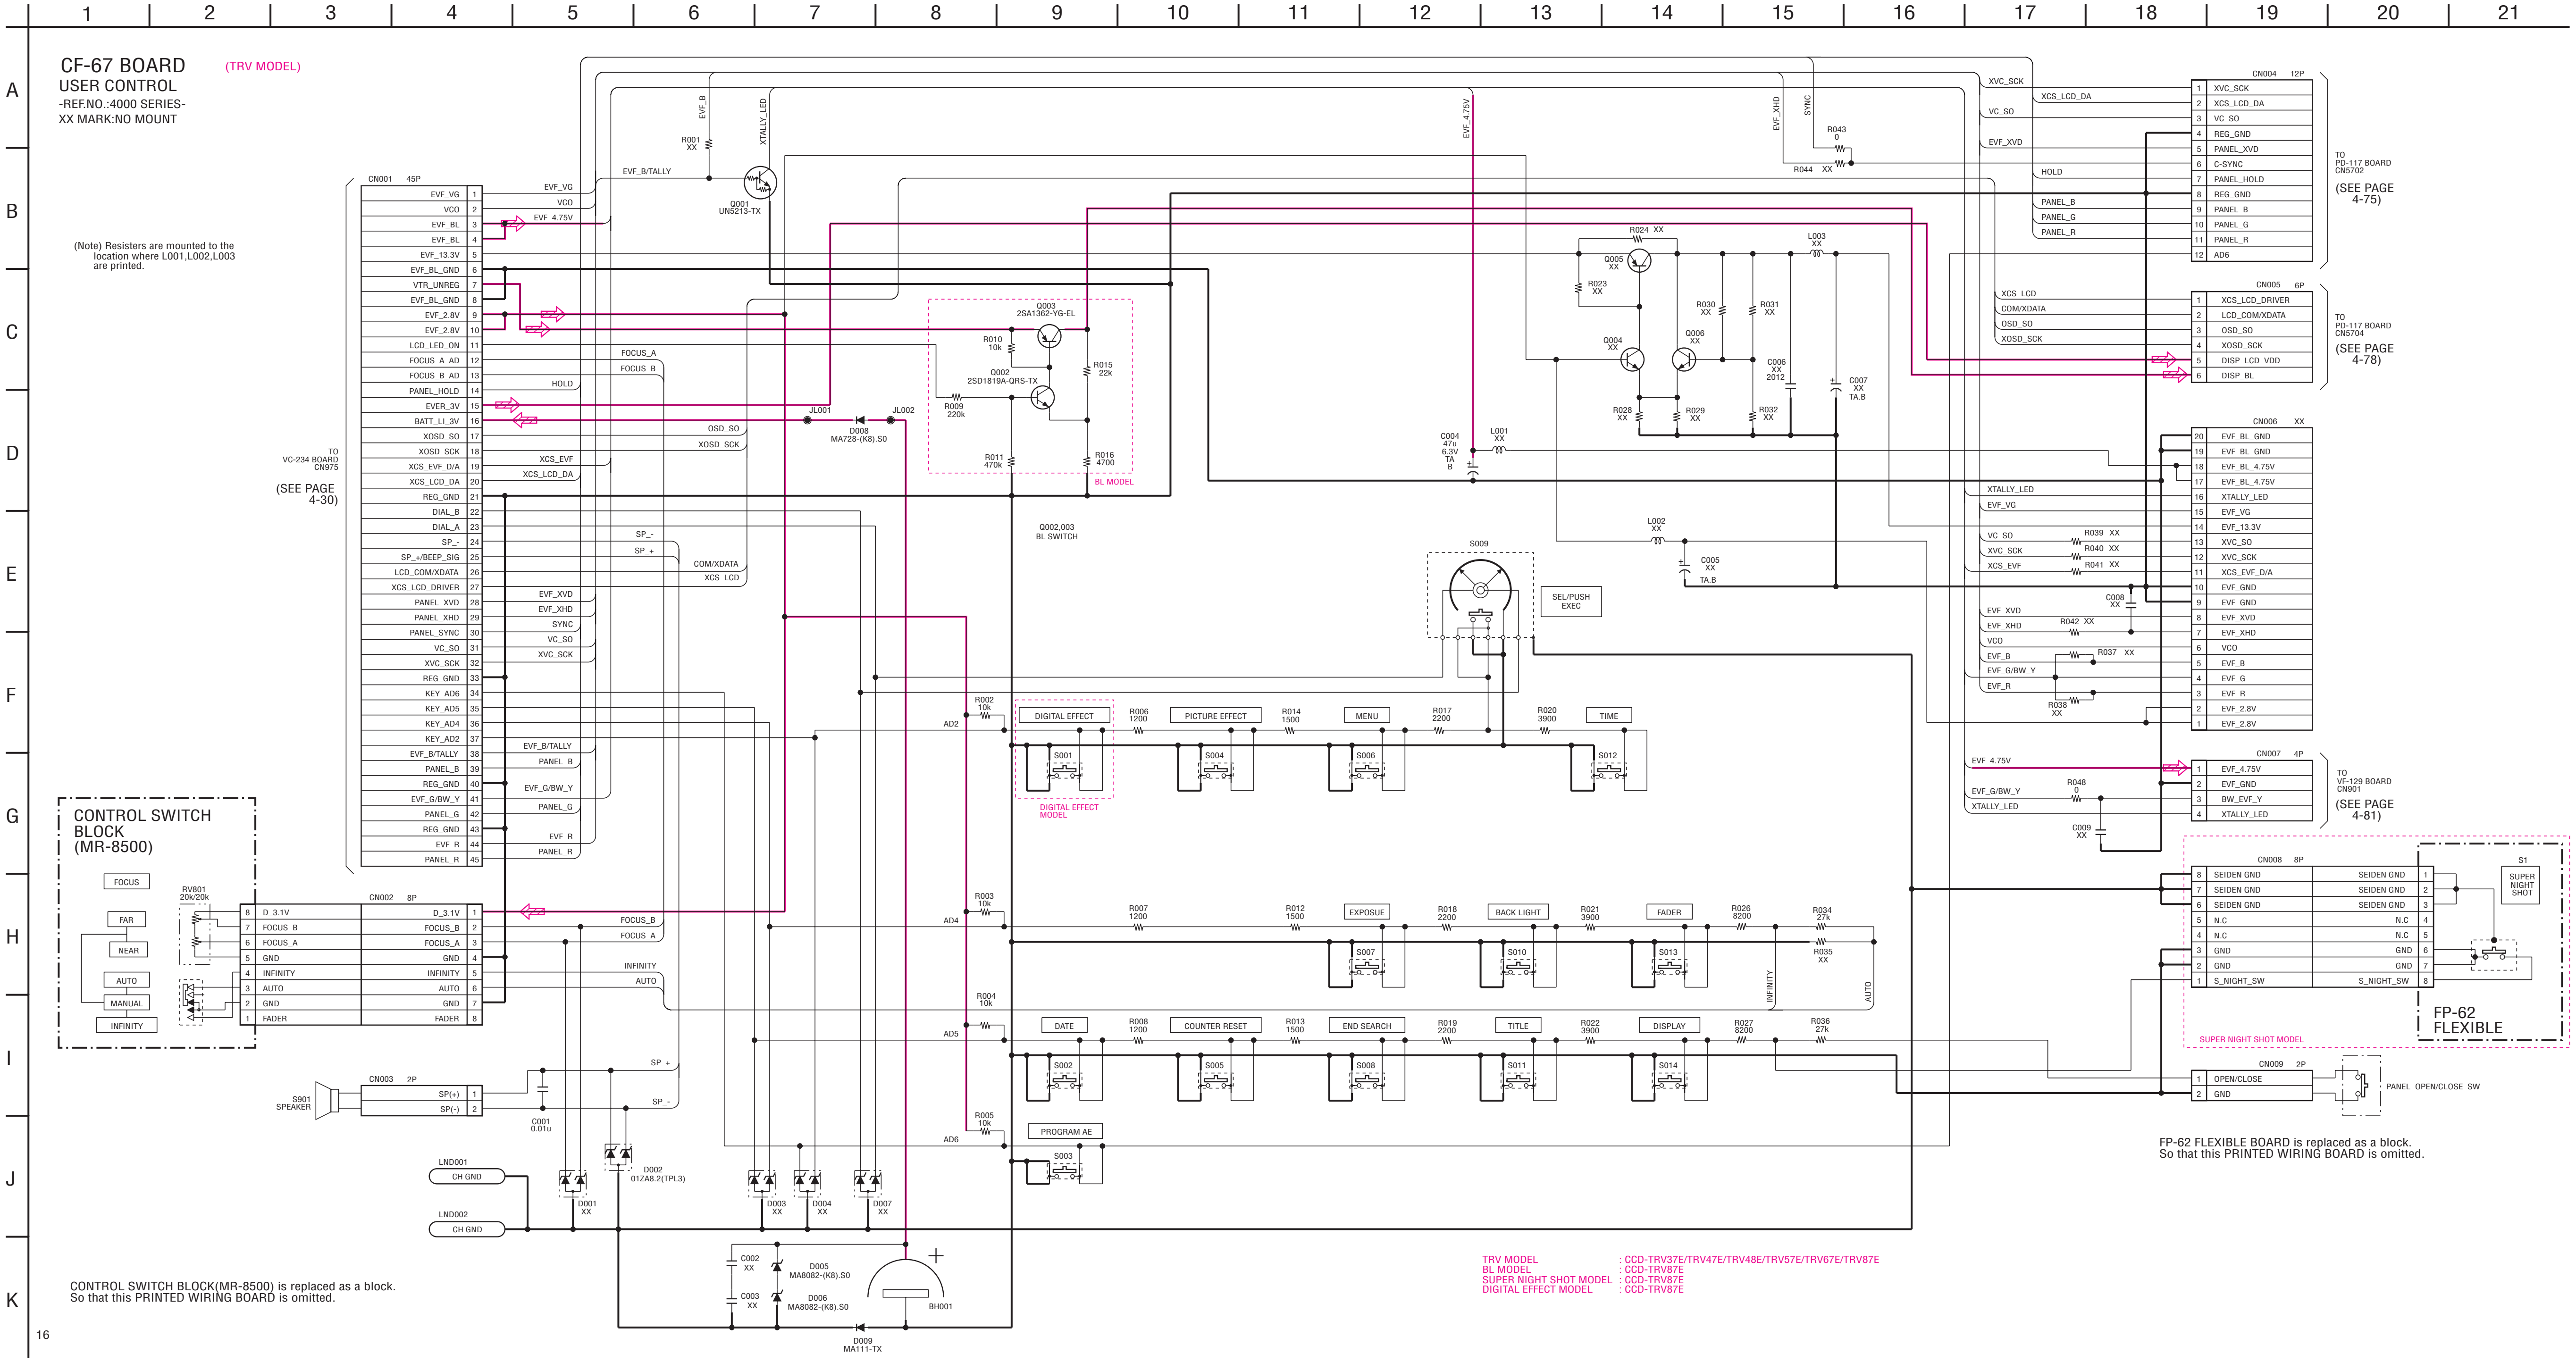
CF-67 BOARD
USER CONTROL
(TRV MODEL)
-REF.NO.:4000 SERIES-
XX MARK:NO MOUNT
(Note) Resisters are mounted to the location where L001,L002,L003 are printed.
CN001 45P
TO VC-234 BOARD CN975 (SEE PAGE 4-30)
CN002 8P
CN003 2P
S901 SPEAKER
CONTROL SWITCH BLOCK (MR-8500)
FOCUS
FAR
NEAR
AUTO
MANUAL
INFINITY
RV801 20k/20k
Q001 UN5213-TX
Q002 2SD1819A-QRS-TX
Q003 2SA1362-YG-EL
Q002,003 BL SWITCH
BL MODEL
D008 MA728-(K8).SO
D002 01ZA8.2(TPL3)
D005 MA8082-(K8).SO
D006 MA8082-(K8).SO
D009 MA111-TX
BH001
LND001 CH GND
LND002 CH GND
S009 SEL/PUSH EXEC
DIGITAL EFFECT
PICTURE EFFECT
MENU
TIME
DIGITAL EFFECT MODEL
EXPOSUE
BACK LIGHT
FADER
DATE
COUNTER RESET
END SEARCH
TITLE
DISPLAY
PROGRAM AE
CN004 12P
TO PD-117 BOARD CN5702 (SEE PAGE 4-75)
CN005 6P
TO PD-117 BOARD CN5704 (SEE PAGE 4-78)
CN006 XX
CN007 4P
TO VF-129 BOARD CN901 (SEE PAGE 4-81)
CN008 8P
S1 SUPER NIGHT SHOT
FP-62 FLEXIBLE
SUPER NIGHT SHOT MODEL
CN009 2P
PANEL_OPEN/CLOSE_SW

CONTROL SWITCH BLOCK(MR-8500) is replaced as a block.
So that this PRINTED WIRING BOARD is omitted.

FP-62 FLEXIBLE BOARD is replaced as a block.
So that this PRINTED WIRING BOARD is omitted.

TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
BL MODEL : CCD-TRV87E
SUPER NIGHT SHOT MODEL : CCD-TRV87E
DIGITAL EFFECT MODEL : CCD-TRV87E

EJ-29/30 (LANC CONNECTOR), SS-9700 (START/STOP SWITCH) PRINTED WIRING BOARDS

— Ref. No. EJ-29/30 Board; 2,000 Series —

EJ-29 BOARD(SIDE A) (TR MODEL)
EJ-30 BOARD(SIDE A) (TRV MODEL)

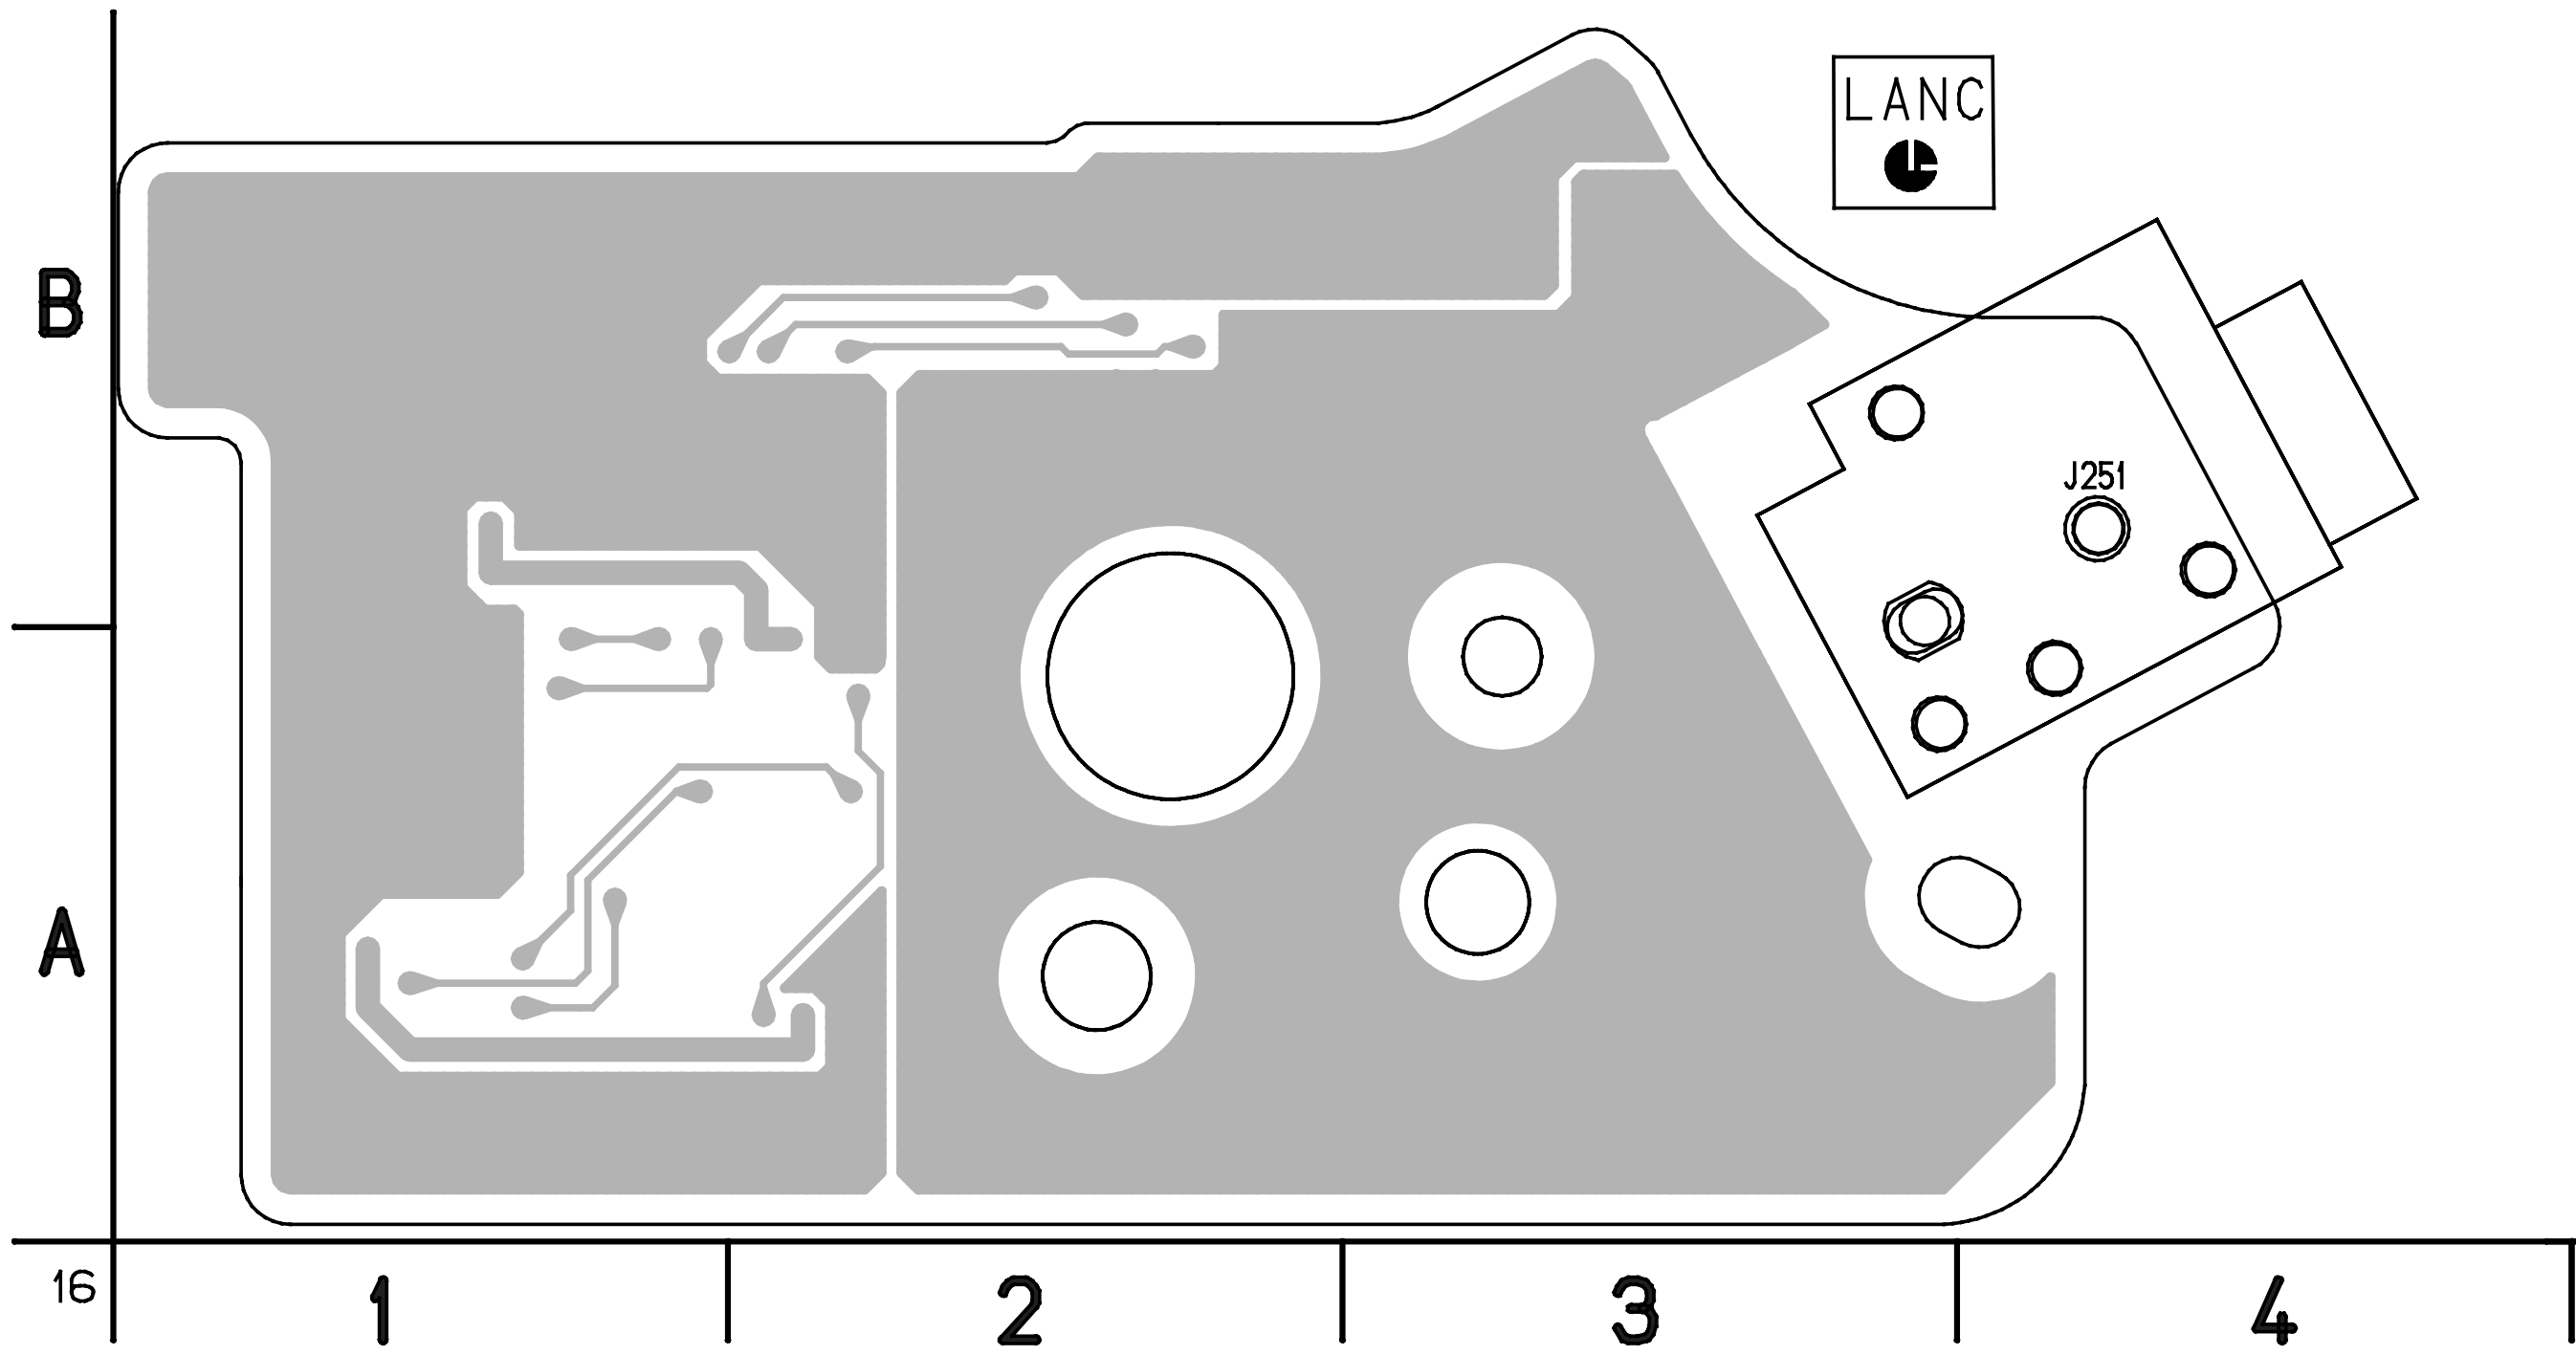
LANC
J251
B
A
16
1
2
3
4

EJ-29 BOARD(SIDE B) (TR MODEL)
EJ-30 BOARD(SIDE B) (TRV MODEL)

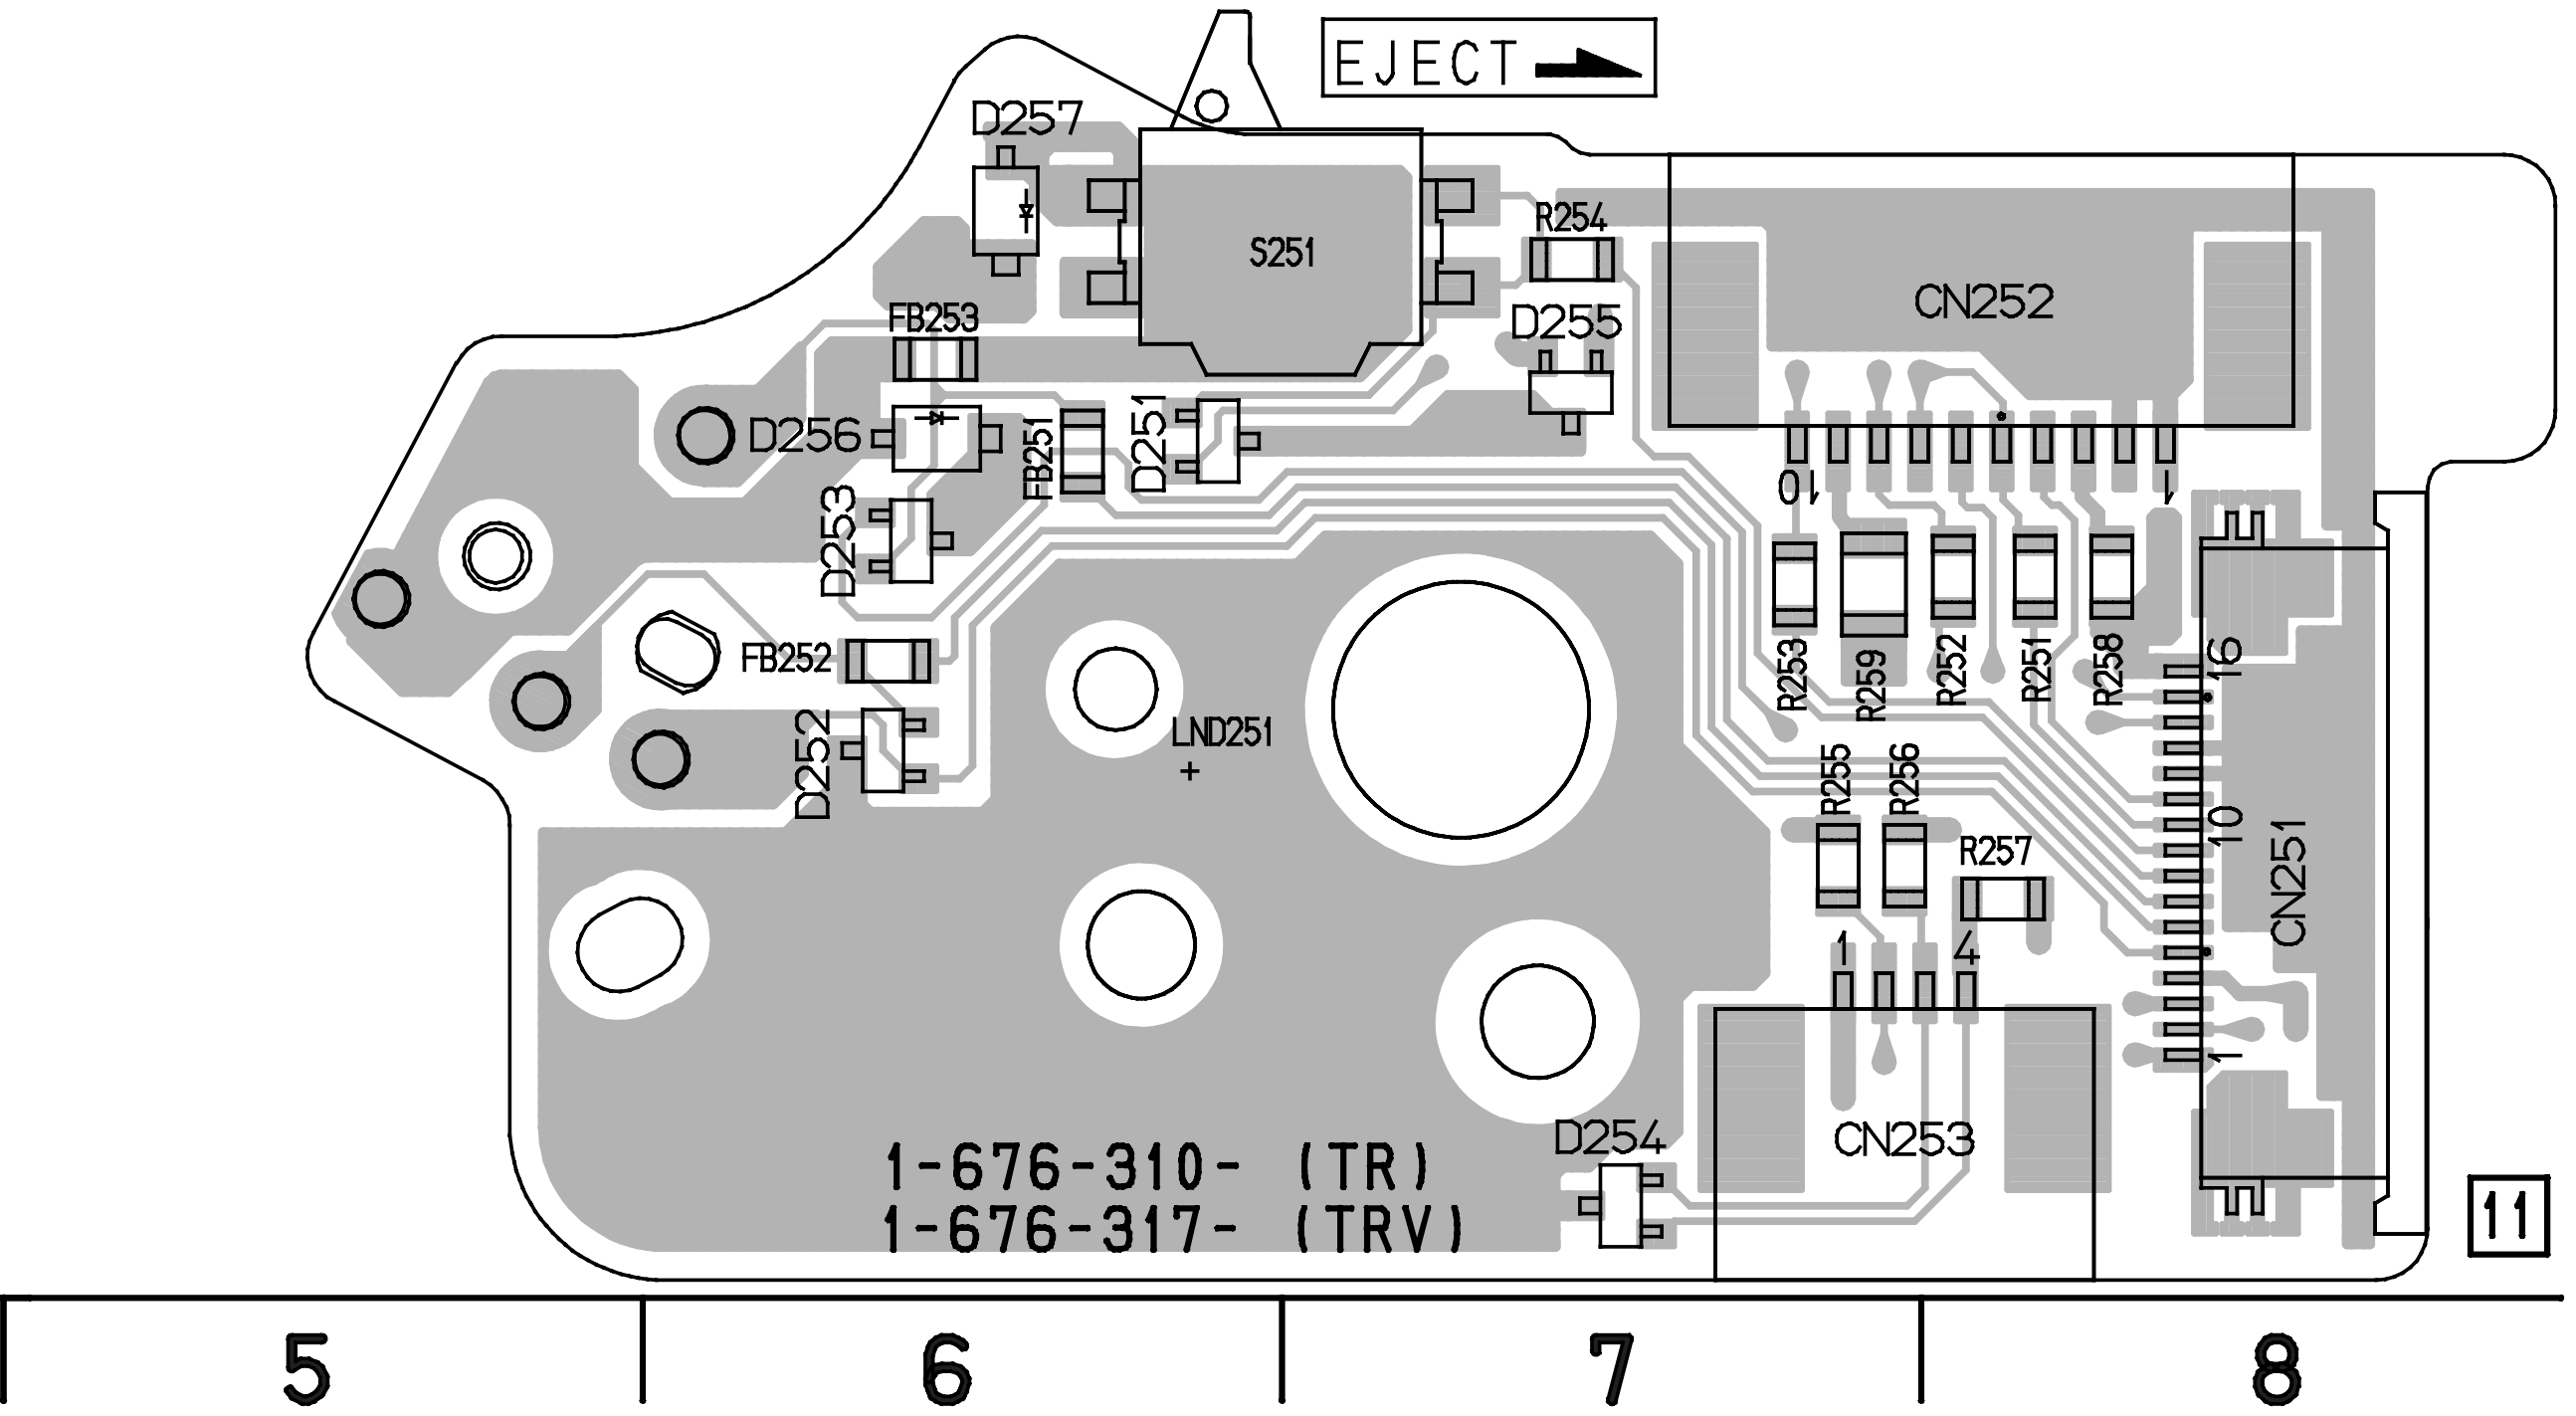
EJECT
D257
S251
R254
D255
CN252
FB253
D256
FB251
D251
D253
10
1
R253
R259
R252
R251
R258
16
FB252
LND251
D252
R255
R256
R257
10
CN251
1
4
1
D254
CN253
1-676-310- (TR)
1-676-317- (TRV)
11
5
6
7
8

CONTROL SWITCH BLOCK
(SS-9700)

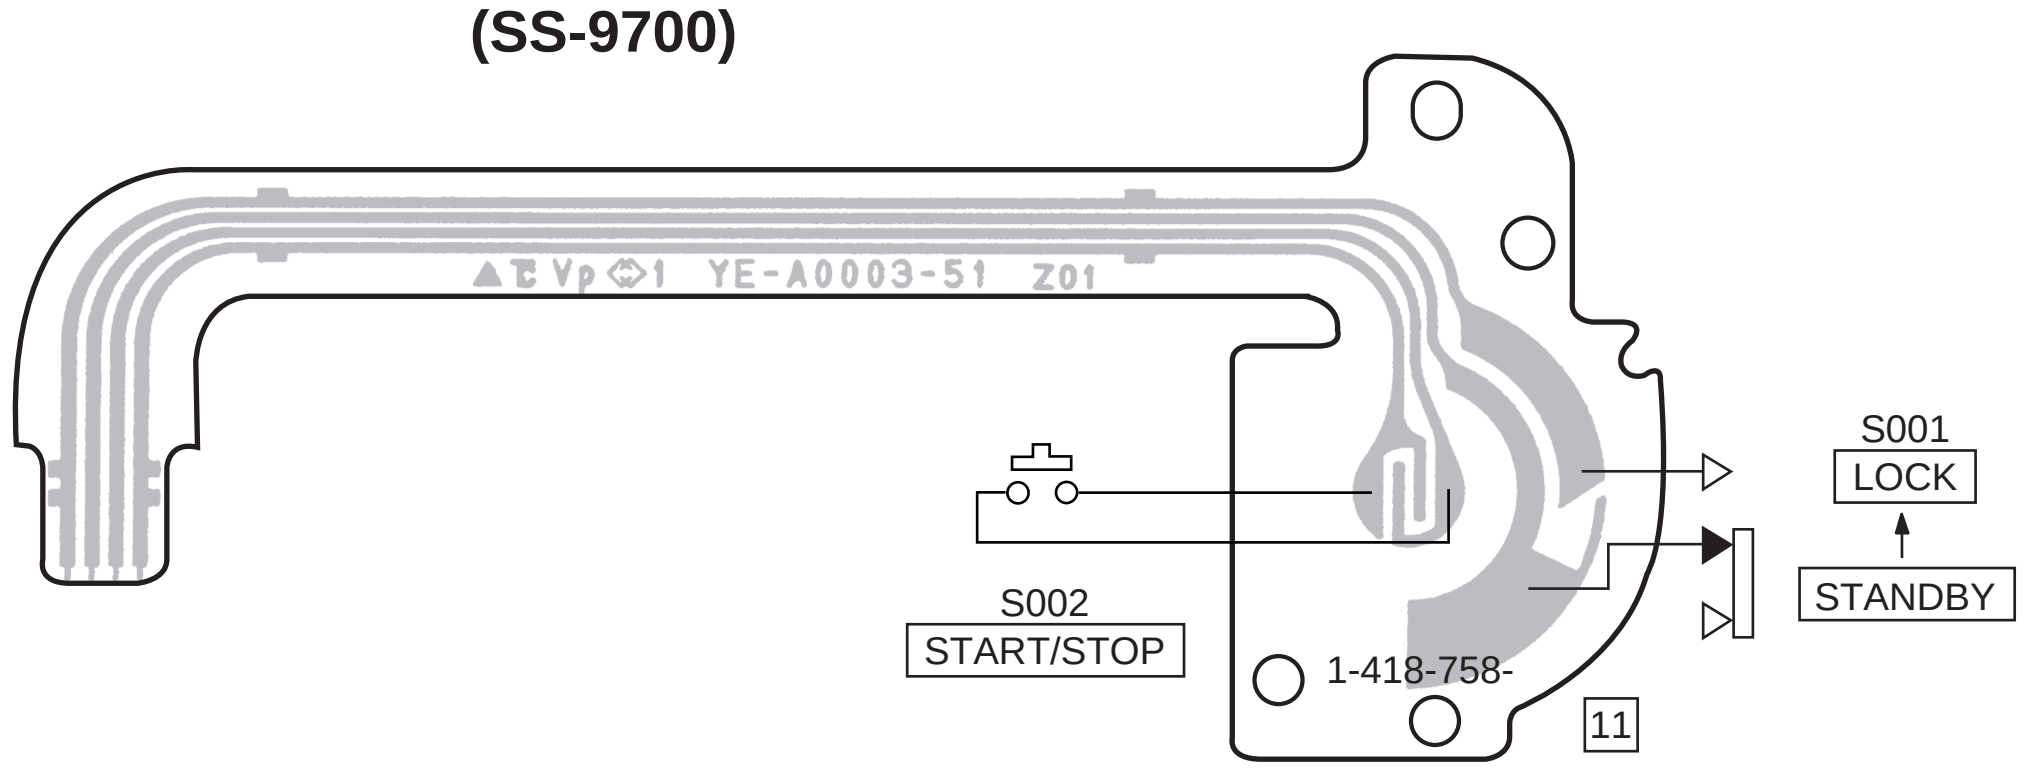
YE-A0003-51 Z01
S001
LOCK
STANDBY
S002
START/STOP
1-418-758-
11

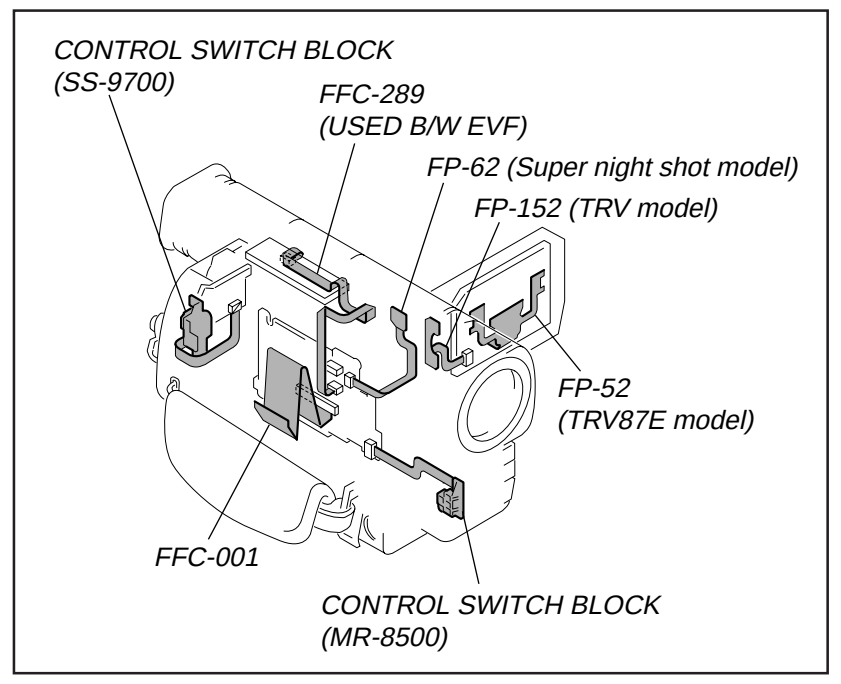
CONTROL SWITCH BLOCK
(SS-9700)
FFC-289
(USED B/W EVF)
FP-62 (Super night shot model)
FP-152 (TRV model)
FP-52
(TRV87E model)
FFC-001
CONTROL SWITCH BLOCK
(MR-8500)

For printed wiring board
- Refer to page 4-93 for location.
- Chip parts

Diode



There are few cases that the part printed on this diagram isn't mounted in this model.

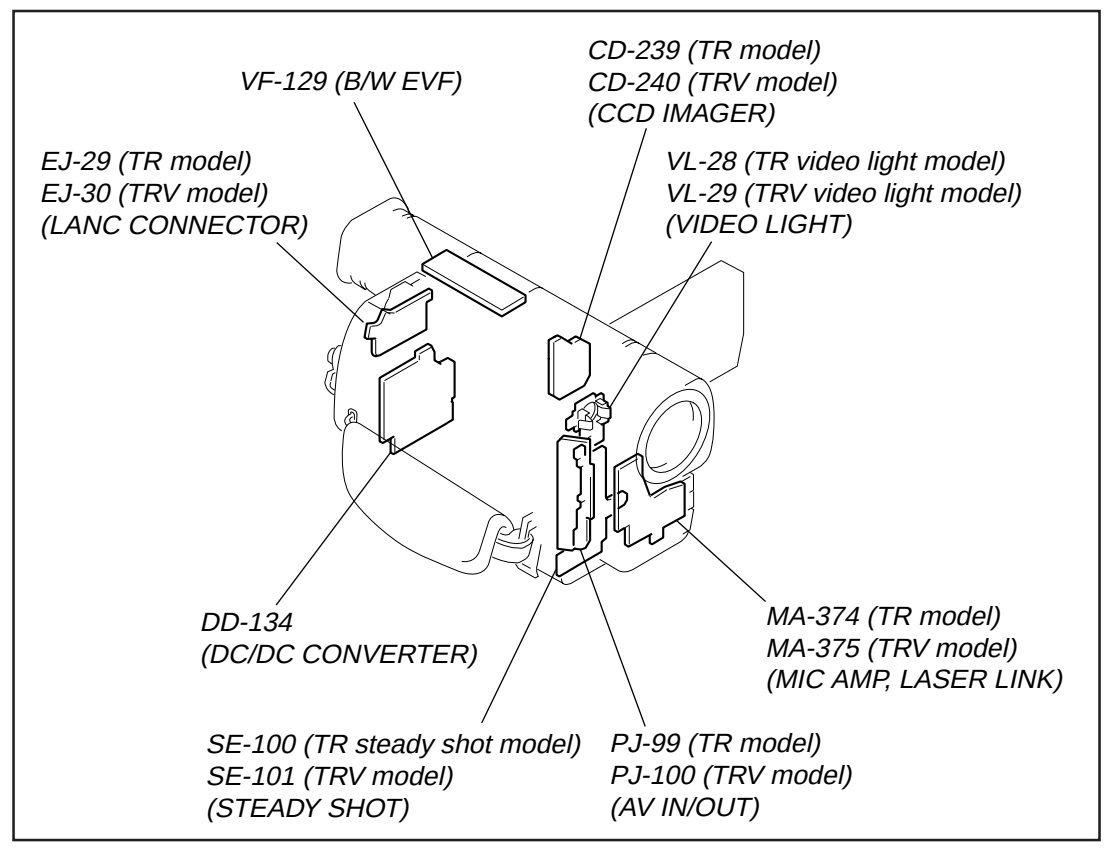
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

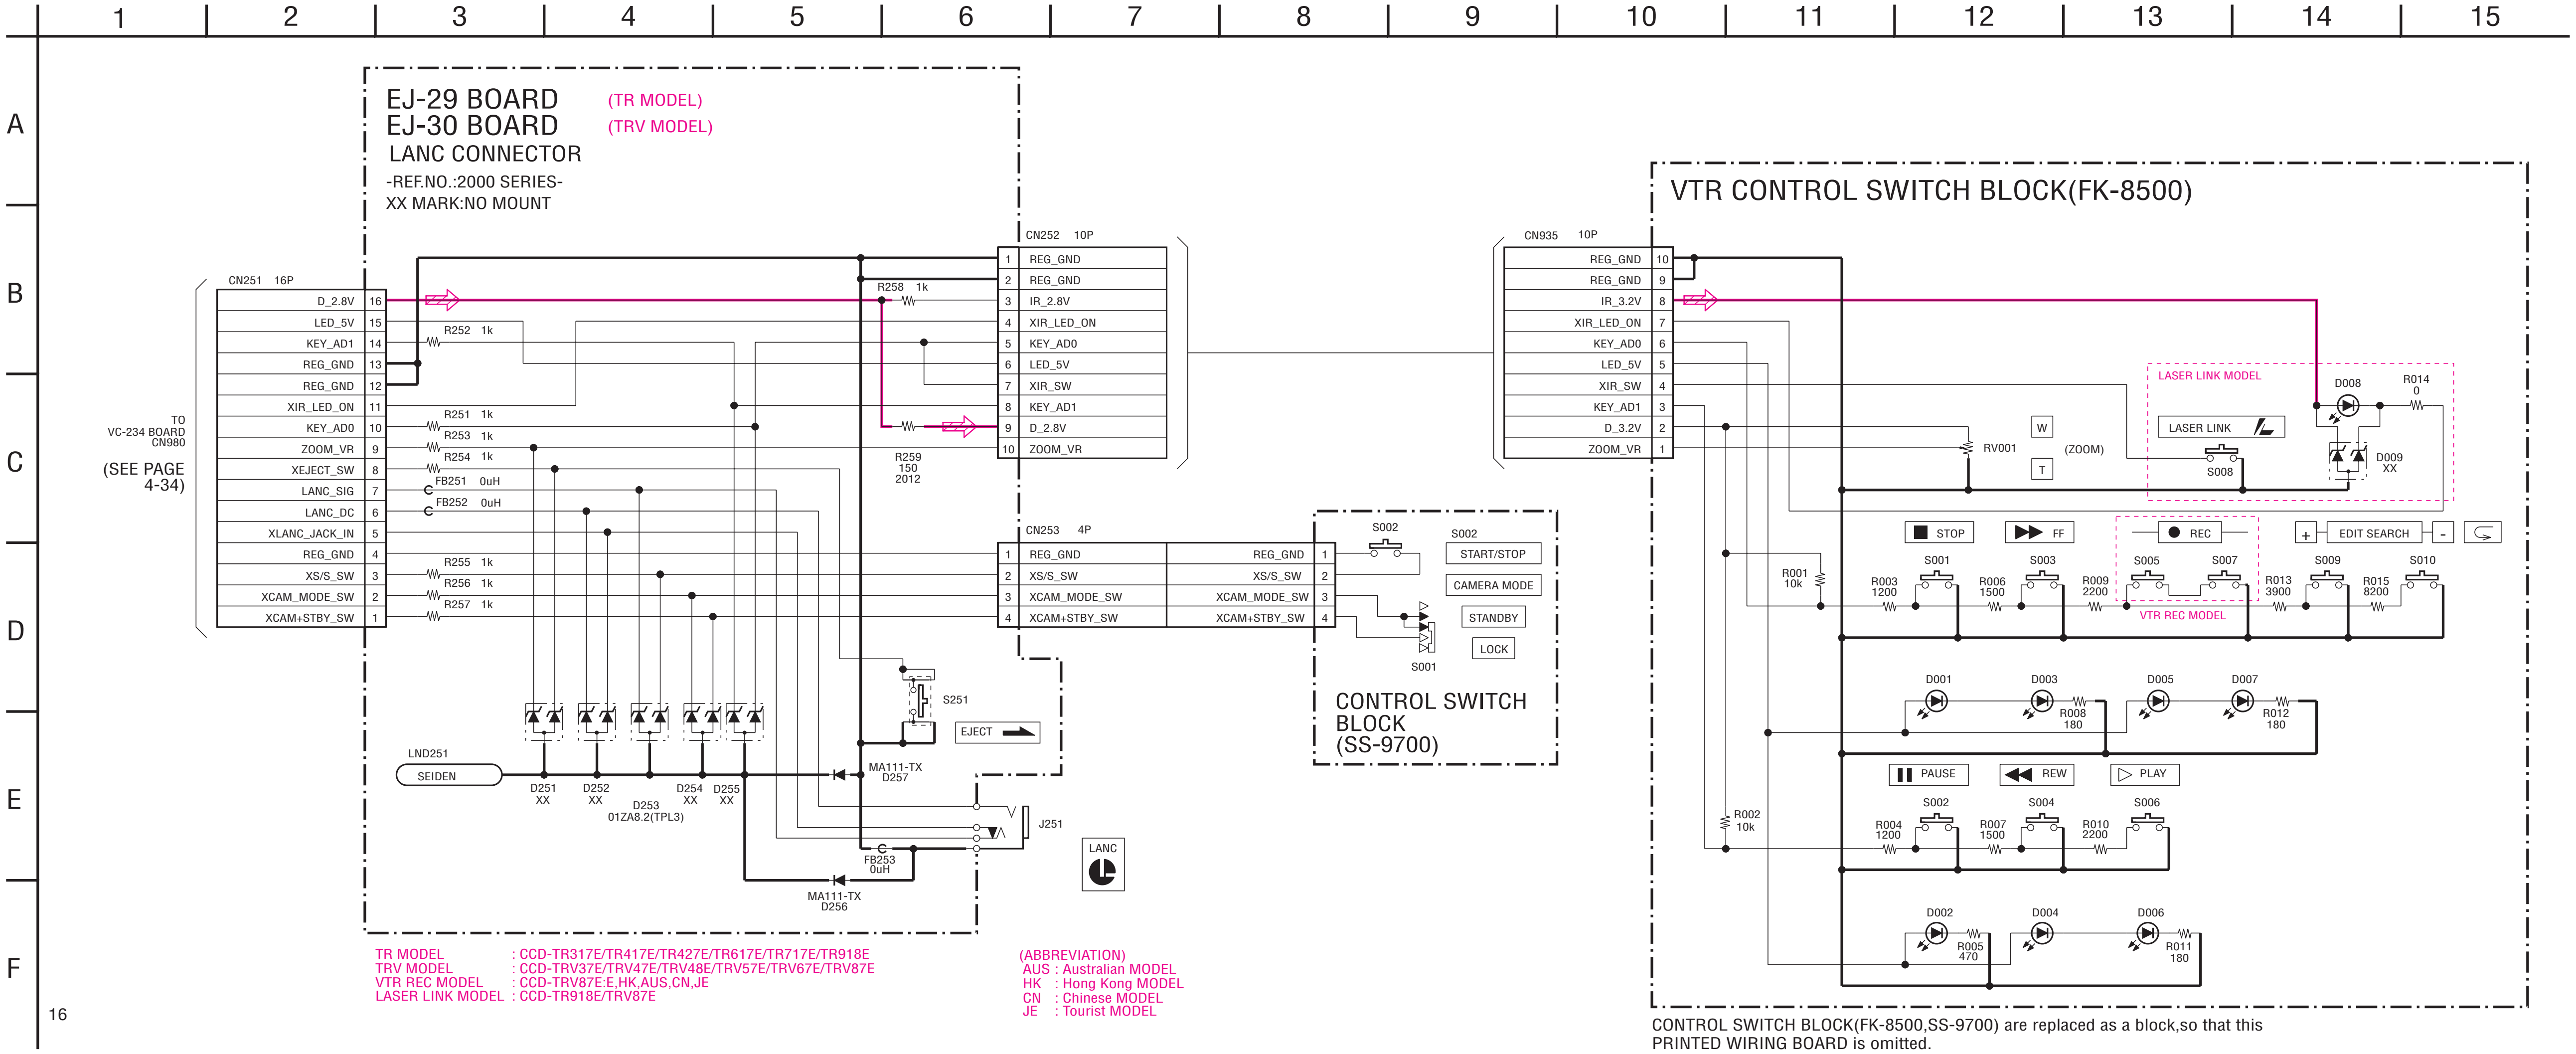
EJ-29 BOARD (TR MODEL)
EJ-30 BOARD (TRV MODEL)
LANC CONNECTOR
-REF.NO.:2000 SERIES-
XX MARK:NO MOUNT
VTR CONTROL SWITCH BLOCK(FK-8500)
CONTROL SWITCH BLOCK (SS-9700)
CN251 16P
CN252 10P
CN253 4P
CN935 10P
TO VC-234 BOARD CN980 (SEE PAGE 4-34)
D_2.8V
LED_5V
KEY_AD1
REG_GND
XIR_LED_ON
KEY_AD0
ZOOM_VR
XEJECT_SW
LANC_SIG
LANC_DC
XLANC_JACK_IN
XS/S_SW
XCAM_MODE_SW
XCAM+STBY_SW
IR_2.8V
XIR_SW
IR_3.2V
D_3.2V
LND251 SEIDEN
S251 EJECT
J251 LANC
MA111-TX D257
MA111-TX D256
FB253 0uH
D253 01ZA8.2(TPL3)
S002 START/STOP
CAMERA MODE
STANDBY
LOCK
S001
RV001 (ZOOM) W T
LASER LINK MODEL
LASER LINK S008
D008 R014 0 D009 XX
STOP FF REC EDIT SEARCH
PAUSE REW PLAY
VTR REC MODEL
16

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
VTR REC MODEL : CCD-TRV87E:E,HK,AUS,CN,JE
LASER LINK MODEL : CCD-TR918E/TRV87E

(ABBREVIATION)
AUS : Australian MODEL
HK : Hong Kong MODEL
CN : Chinese MODEL
JE : Tourist MODEL

CONTROL SWITCH BLOCK(FK-8500,SS-9700) are replaced as a block,so that this PRINTED WIRING BOARD is omitted.

For printed wiring board
- Refer to page 4-93 for location.
- Chip parts

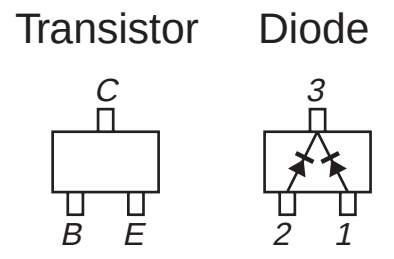
Transistor
Diode
C
B
E
3
2
1

There are few cases that the part printed on this diagram isn’t mounted in this model.

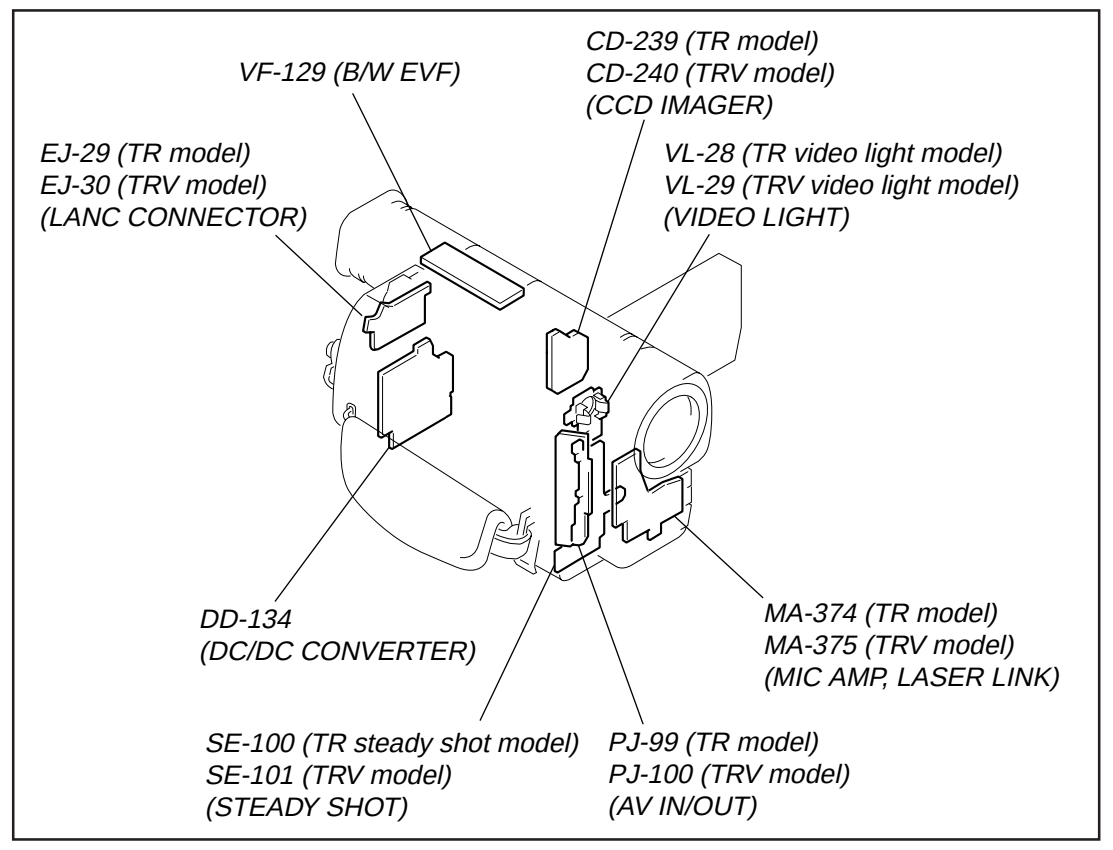
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

PJ-99/100 (AV IN/OUT) PRINTED WIRING BOARD

— Ref. No. PJ-99/100 Board; 4,000 Series —

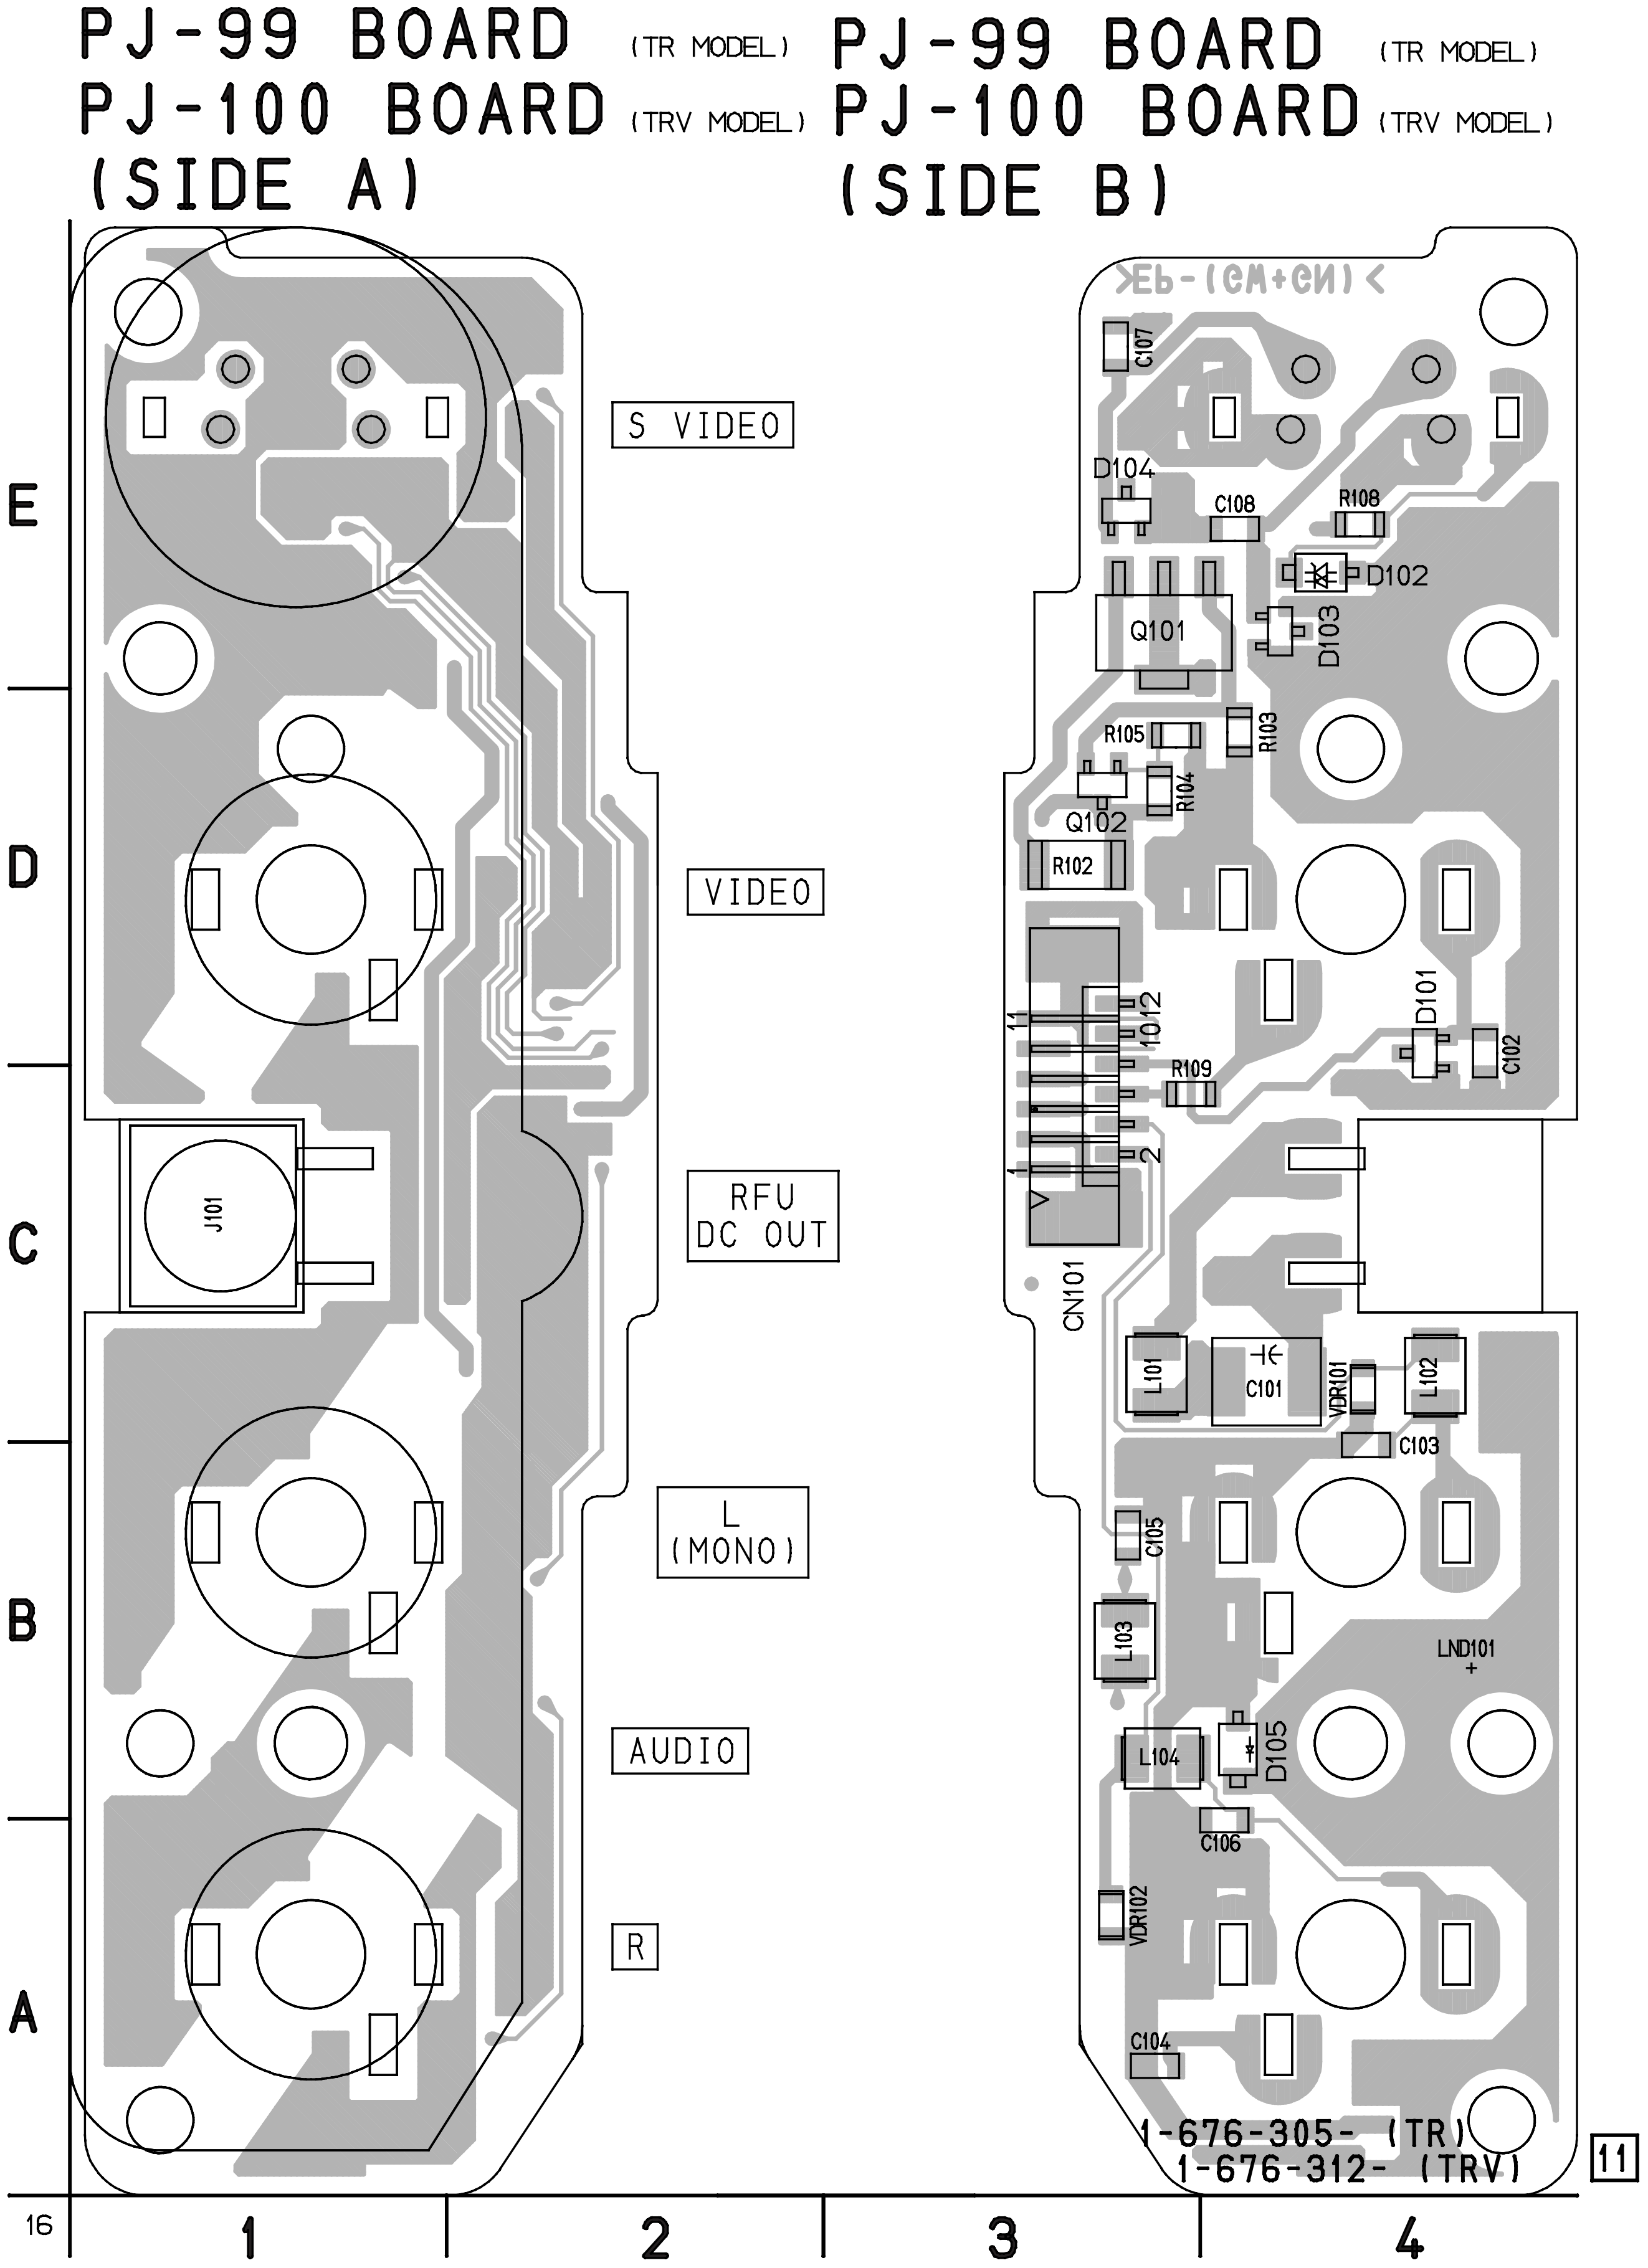
PJ-99 BOARD (TR MODEL)
PJ-100 BOARD (TRV MODEL)
(SIDE A)
PJ-99 BOARD (TR MODEL)
PJ-100 BOARD (TRV MODEL)
(SIDE B)
E
D
C
B
A
1
2
3
4
16
S VIDEO
VIDEO
RFU
DC OUT
L
(MONO)
AUDIO
R
J101
C107
D104
C108
R108
D102
Q101
D103
R105
R103
R104
Q102
R102
11
10
12
R109
2
1
D101
C102
CN101
L101
C101
VDR101
L102
C103
C105
L103
LND101
L104
D105
C106
VDR102
C104
1-676-305- (TR)
1-676-312- (TRV)
11

PJ-99 BOARD (TR MODEL)
PJ-100 BOARD (TRV MODEL)
AV IN/OUT
-REF.NO.:4000 SERIES-
XX MARK:NO MOUNT

SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➡»	➡»»	➡
PB	⇨	⇨»	⇨»»	⇨

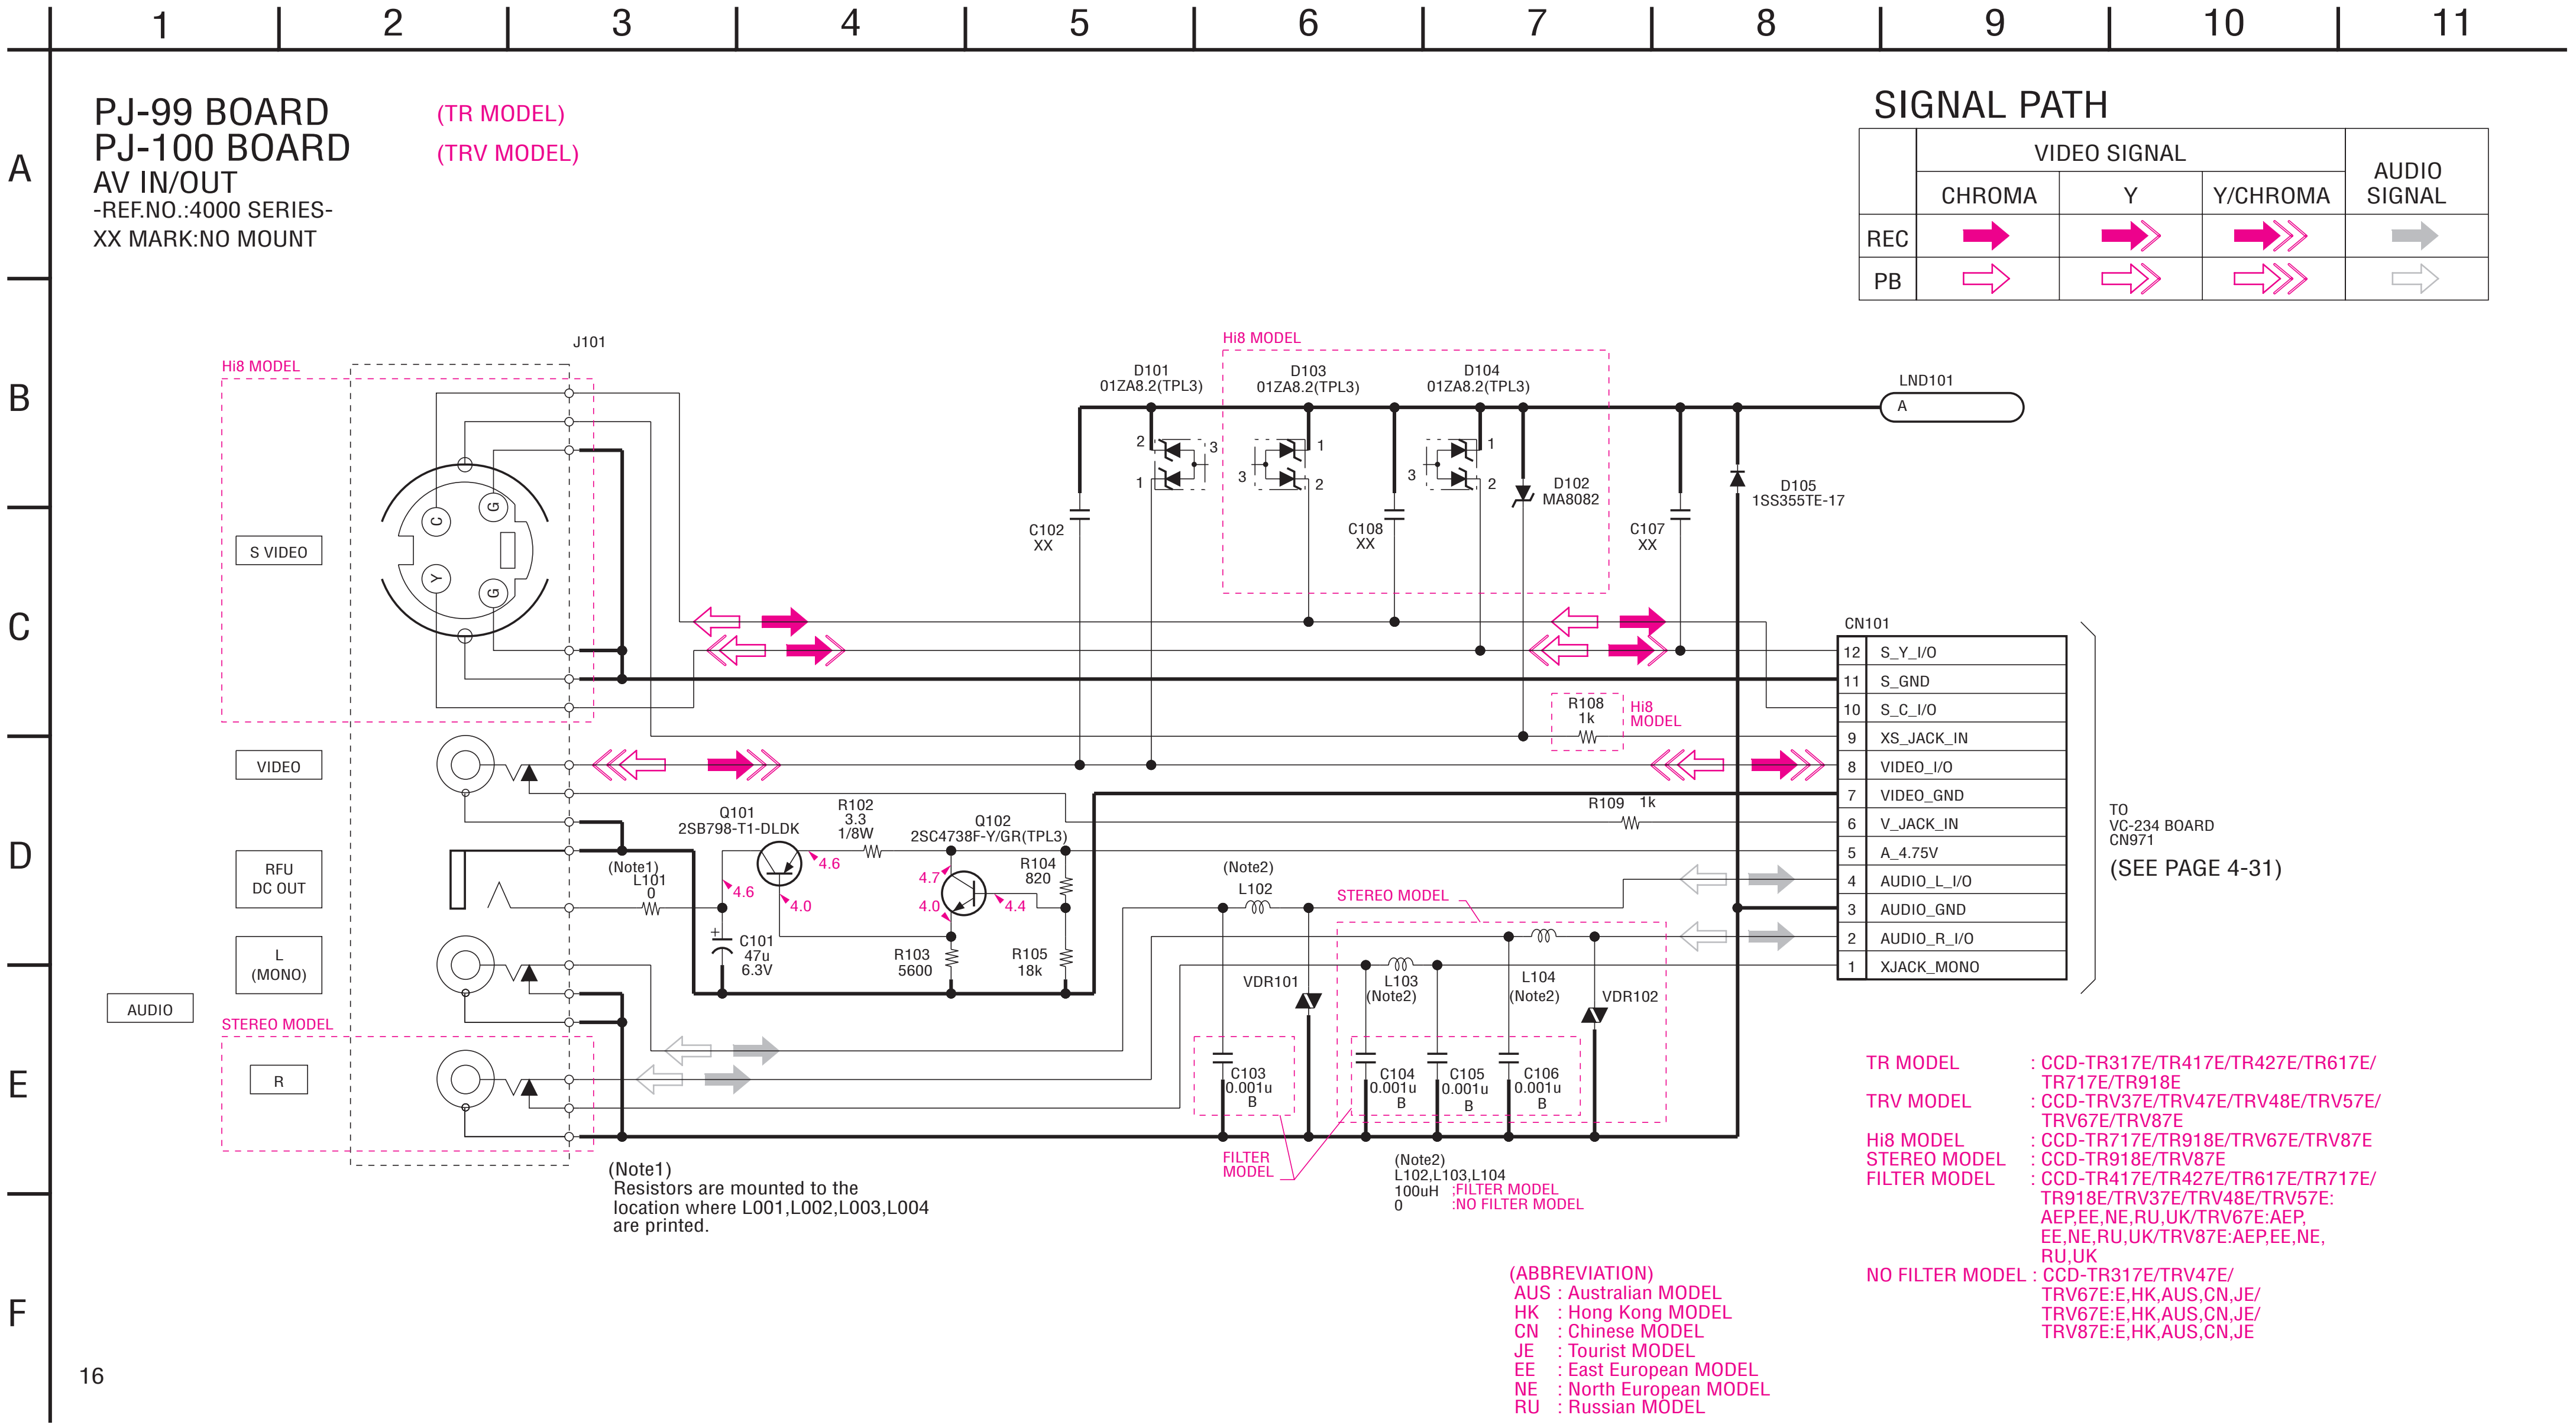
1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
Hi8 MODEL
J101
S VIDEO
C
Y
G
G
VIDEO
RFU
DC OUT
L
(MONO)
AUDIO
STEREO MODEL
R
Hi8 MODEL
D101
01ZA8.2(TPL3)
D103
01ZA8.2(TPL3)
D104
01ZA8.2(TPL3)
D102
MA8082
C102
XX
C108
XX
C107
XX
LND101
A
D105
1SS355TE-17
CN101
R108
1k
Hi8
MODEL
R109 1k
Q101
2SB798-T1-DLDK
R102
3.3
1/8W
Q102
2SC4738F-Y/GR(TPL3)
R104
820
(Note1)
L101
0
4.6
4.6
4.0
4.7
4.0
4.4
C101
47u
6.3V
R103
5600
R105
18k
(Note2)
L102
STEREO MODEL
VDR101
L103
(Note2)
L104
(Note2)
VDR102
C103
0.001u
B
C104
0.001u
B
C105
0.001u
B
C106
0.001u
B
FILTER
MODEL
12 S_Y_I/O
11 S_GND
10 S_C_I/O
9 XS_JACK_IN
8 VIDEO_I/O
7 VIDEO_GND
6 V_JACK_IN
5 A_4.75V
4 AUDIO_L_I/O
3 AUDIO_GND
2 AUDIO_R_I/O
1 XJACK_MONO
TO
VC-234 BOARD
CN971
(SEE PAGE 4-31)
16

(Note1)
Resistors are mounted to the location where L001,L002,L003,L004 are printed.

(Note2)
L102,L103,L104
100uH :FILTER MODEL
0 :NO FILTER MODEL

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
Hi8 MODEL : CCD-TR717E/TR918E/TRV67E/TRV87E
STEREO MODEL : CCD-TR918E/TRV87E
FILTER MODEL : CCD-TR417E/TR427E/TR617E/TR717E/TR918E/TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/TRV67E:AEP,EE,NE,RU,UK/TRV87E:AEP,EE,NE,RU,UK
NO FILTER MODEL : CCD-TR317E/TRV47E/TRV67E:E,HK,AUS,CN,JE/TRV67E:E,HK,AUS,CN,JE/TRV87E:E,HK,AUS,CN,JE

(ABBREVIATION)
AUS : Australian MODEL
HK : Hong Kong MODEL
CN : Chinese MODEL
JE : Tourist MODEL
EE : East European MODEL
NE : North European MODEL
RU : Russian MODEL

SE-100/101 (STEADY SHOT) PRINTED WIRING BOARD

— Ref. No. SE-100/101 Board; 6,000 Series —

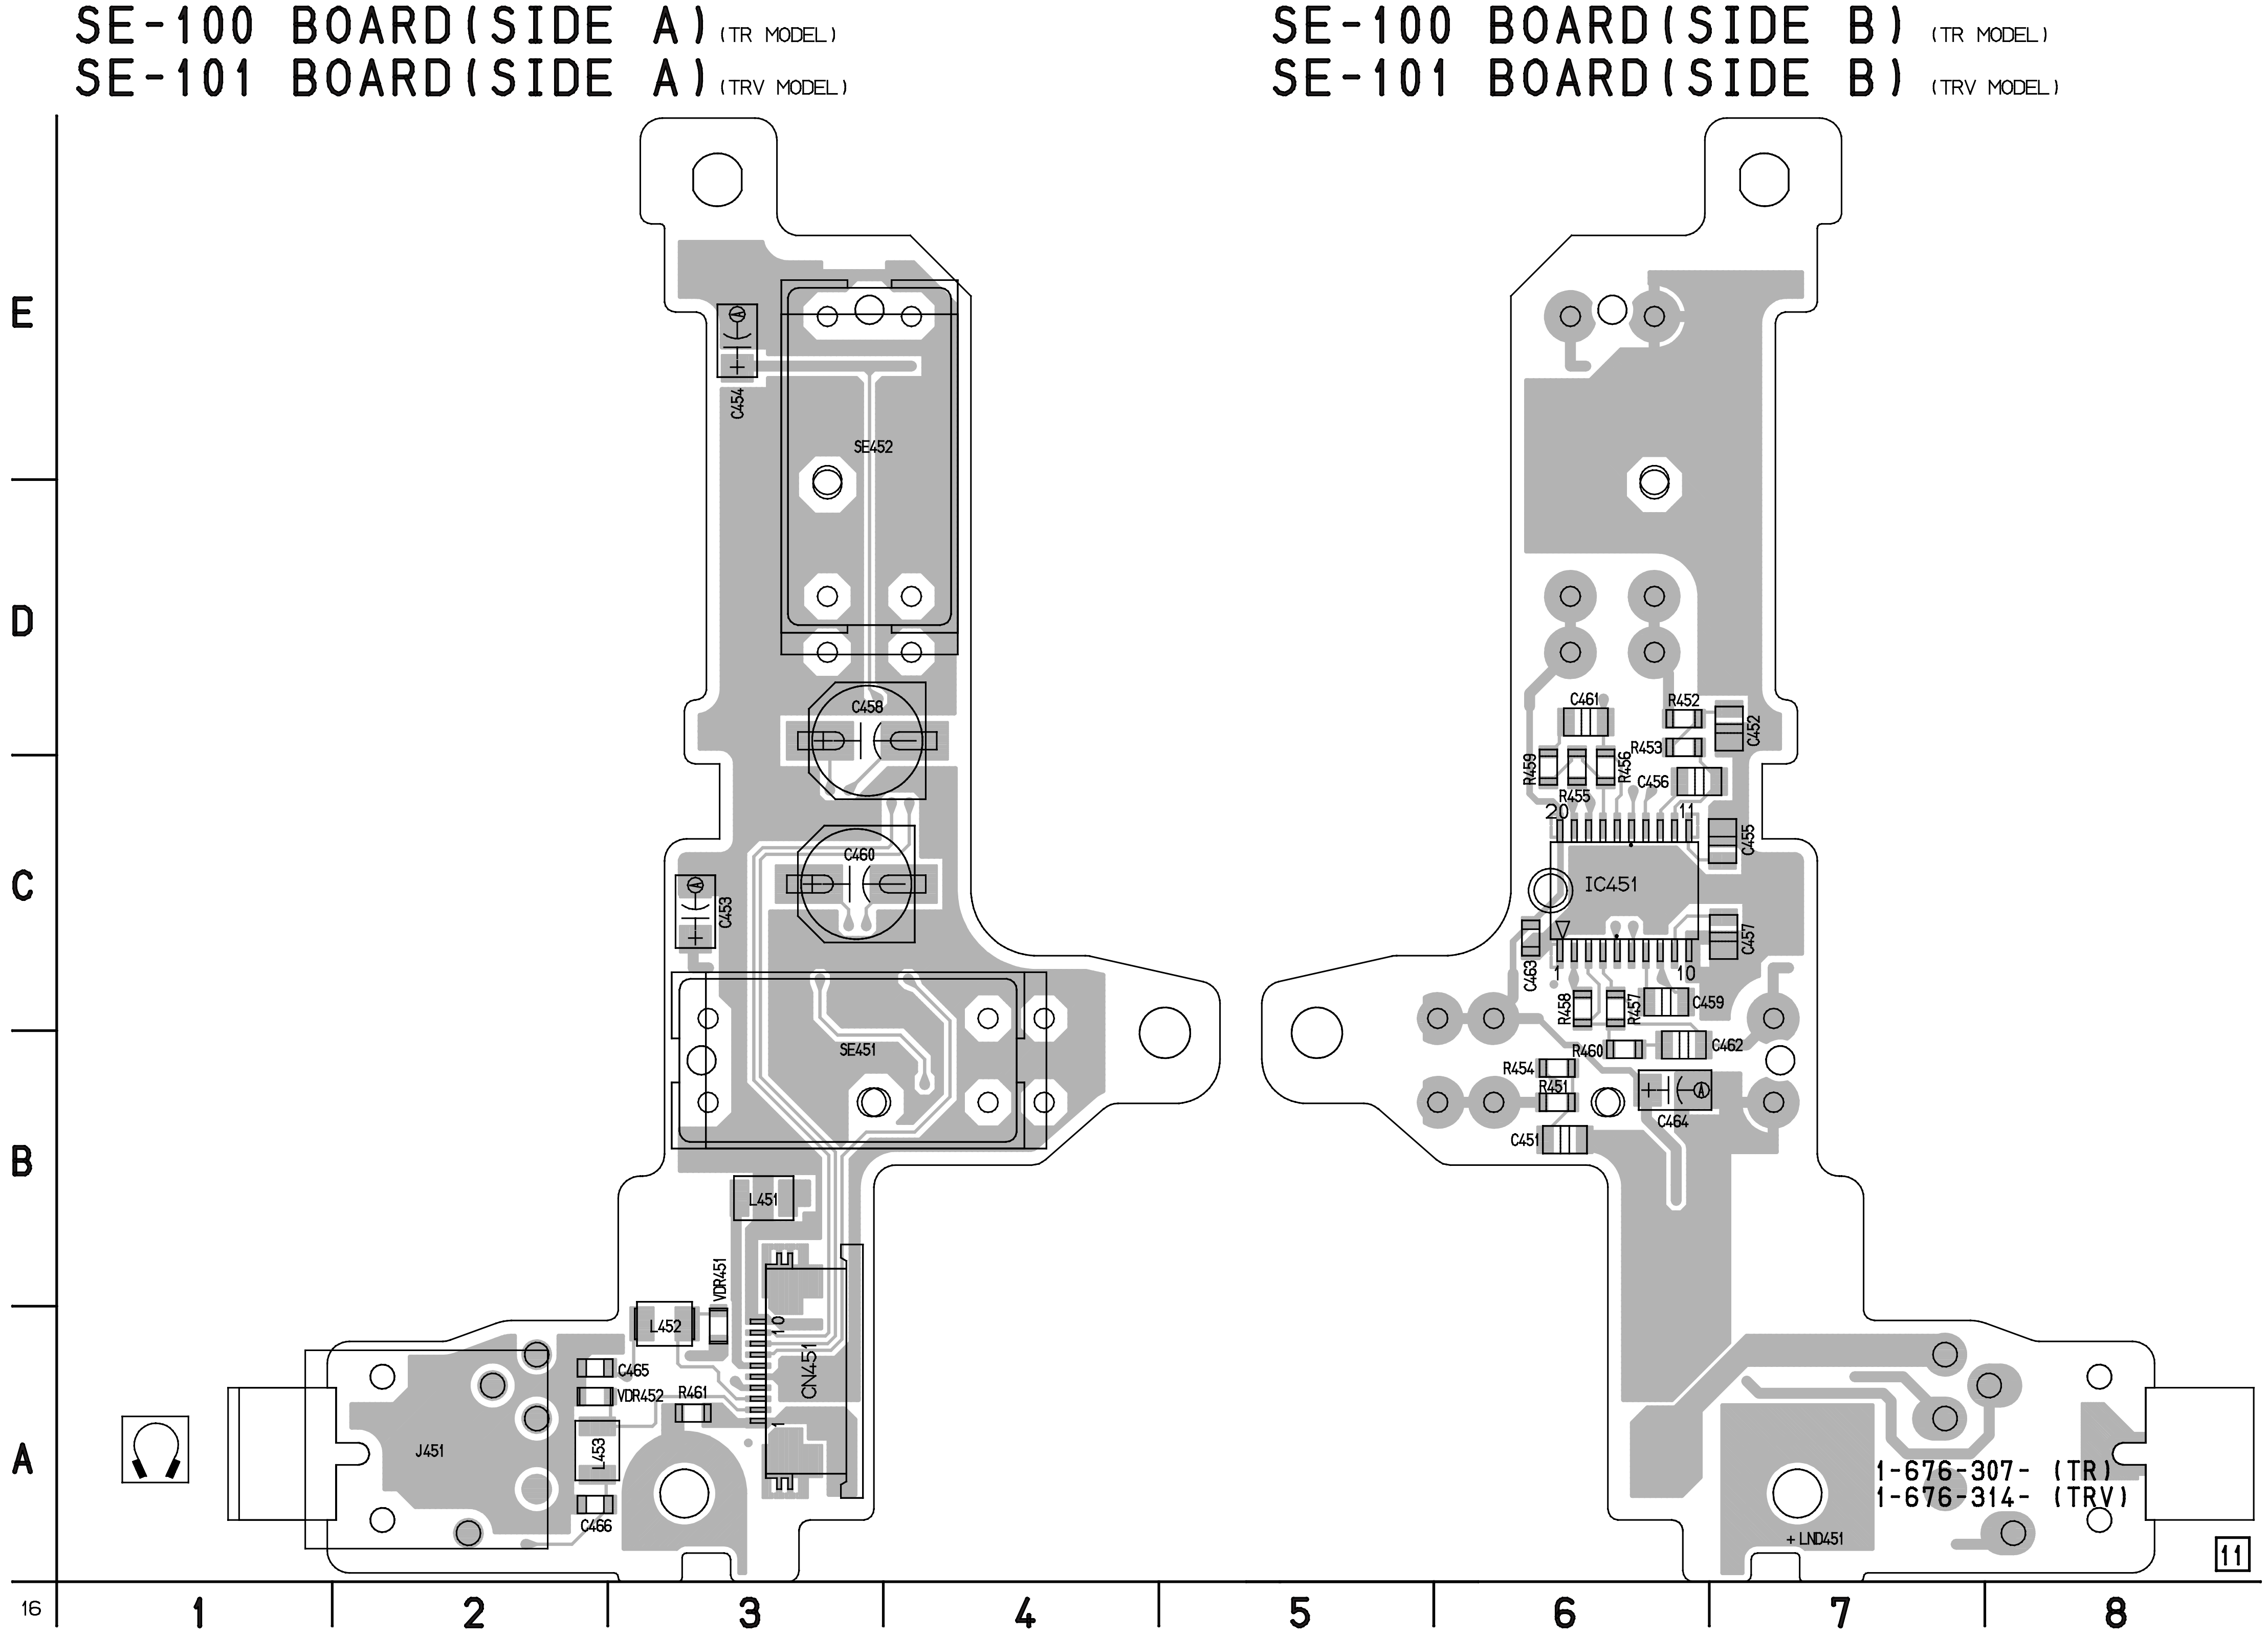
SE-100 BOARD(SIDE A) (TR MODEL)
SE-101 BOARD(SIDE A) (TRV MODEL)
SE-100 BOARD(SIDE B) (TR MODEL)
SE-101 BOARD(SIDE B) (TRV MODEL)
E
D
C
B
A
16
1
2
3
4
5
6
7
8
C454
SE452
C458
C460
C453
SE451
L451
VDR451
L452
C465
VDR452
R461
CN451
1.0
J451
L453
C466
C461
R452
C452
R453
R459
R455
R456
C456
20
11
C455
IC451
C457
C463
10
R458
R457
C459
R460
C462
R454
R451
C464
C451
1-676-307- (TR)
1-676-314- (TRV)
LND451
11

For printed wiring board

- Refer to page 4-93 for location.

There are few cases that the part printed on this diagram isn’t mounted in this model.

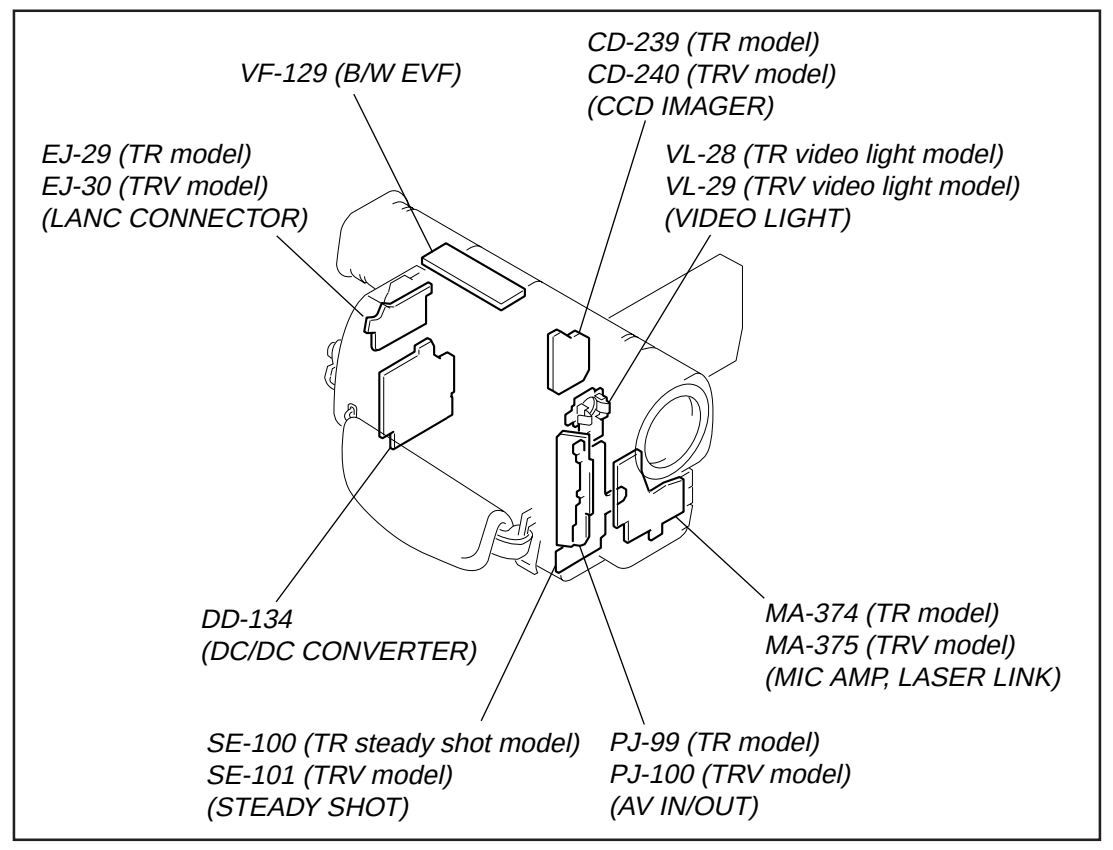
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

SE-100 BOARD (TR MODEL)
SE-101 BOARD (TRV MODEL)
STEADY SHOT

-REF.NO.:6000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

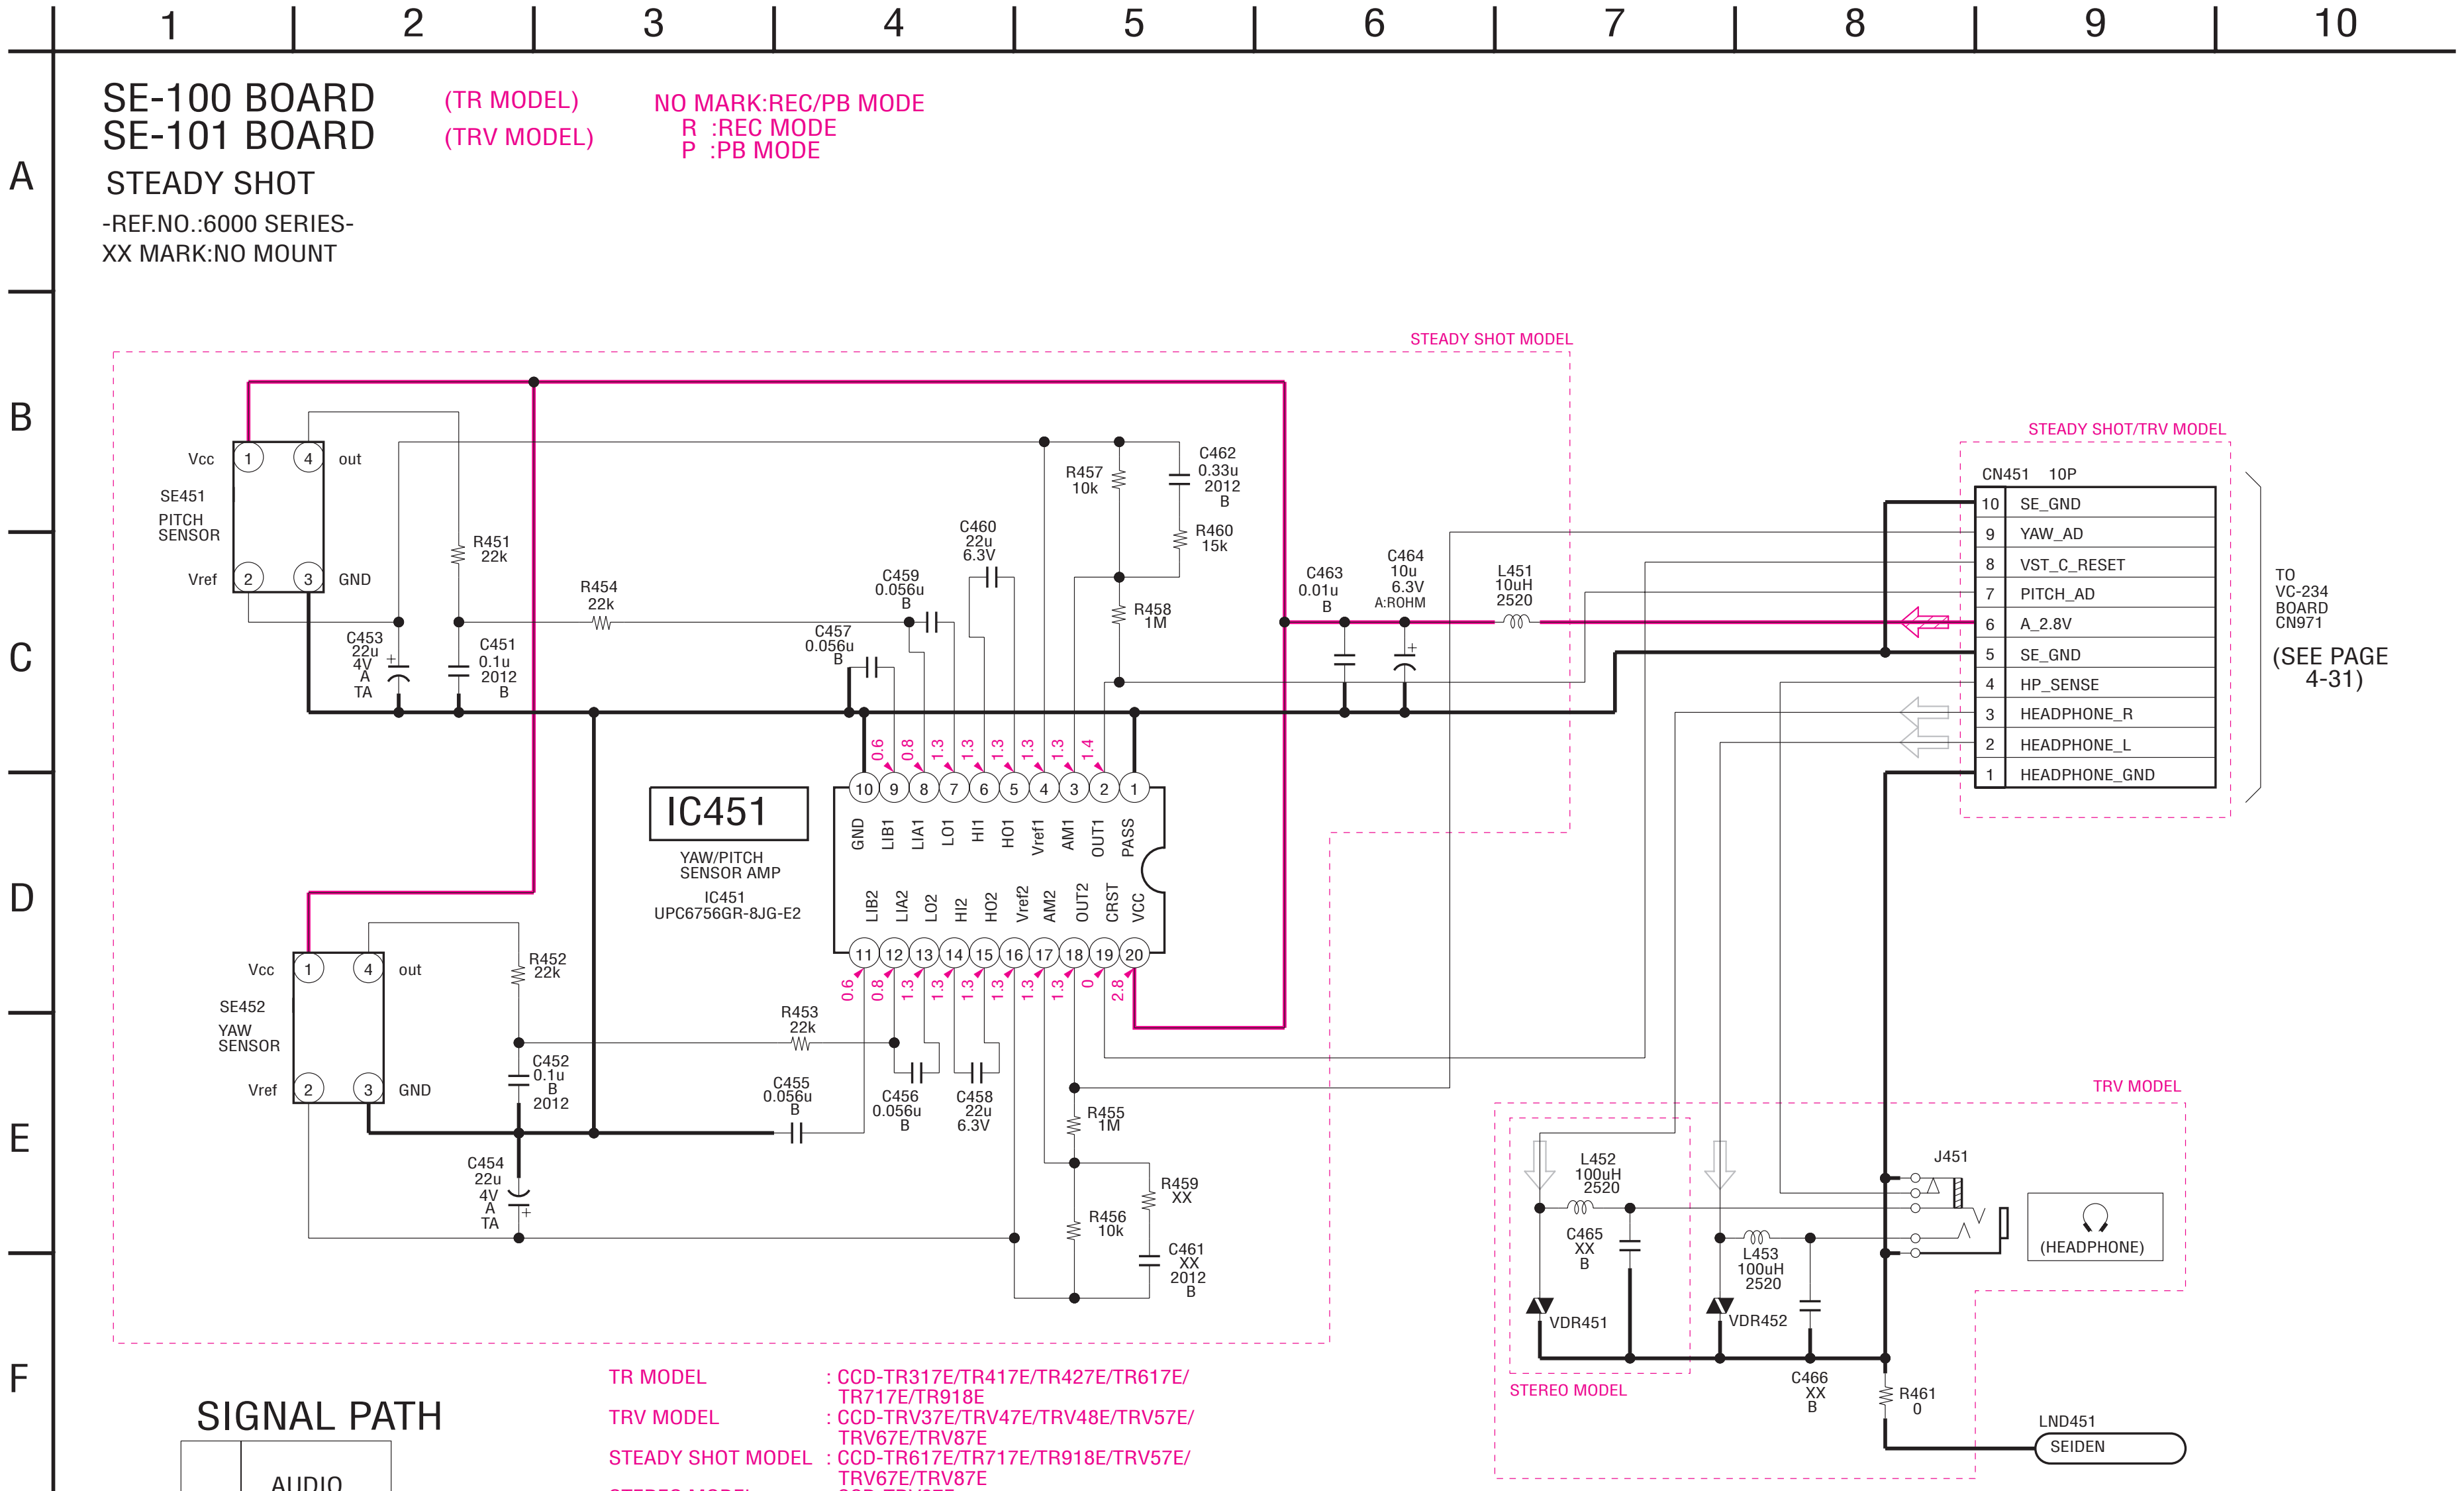
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
G
STEADY SHOT MODEL
SE451
PITCH SENSOR
Vcc
out
Vref
GND
SE452
YAW SENSOR
R451 22k
R452 22k
R453 22k
R454 22k
R455 1M
R456 10k
R457 10k
R458 1M
R459 XX
R460 15k
C451 0.1u 2012 B
C452 0.1u B 2012
C453 22u 4V A TA
C454 22u 4V A TA
C455 0.056u B
C456 0.056u B
C457 0.056u B
C458 22u 6.3V
C459 0.056u B
C460 22u 6.3V
C461 XX 2012 B
C462 0.33u 2012 B
C463 0.01u B
C464 10u 6.3V A:ROHM
L451 10uH 2520
IC451
YAW/PITCH SENSOR AMP
IC451 UPC6756GR-8JG-E2
GND
LIB1
LIA1
LO1
HI1
HO1
Vref1
AM1
OUT1
PASS
LIB2
LIA2
LO2
HI2
HO2
Vref2
AM2
OUT2
CRST
VCC
0.6
0.8
1.3
1.4
0
2.8
STEADY SHOT/TRV MODEL
CN451 10P
10 SE_GND
9 YAW_AD
8 VST_C_RESET
7 PITCH_AD
6 A_2.8V
5 SE_GND
4 HP_SENSE
3 HEADPHONE_R
2 HEADPHONE_L
1 HEADPHONE_GND
TO VC-234 BOARD CN971
(SEE PAGE 4-31)
TRV MODEL
L452 100uH 2520
L453 100uH 2520
C465 XX B
C466 XX B
VDR451
VDR452
STEREO MODEL
J451
(HEADPHONE)
R461 0
LND451
SEIDEN

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
STEADY SHOT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
STEREO MODEL : CCD-TRV87E

SIGNAL PATH

	AUDIO SIGNAL
REC	➡
PB	⇨

VL-28/29 (VIDEO LIGHT) PRINTED WIRING BOARD

— Ref. No. VL-28/29 Board; 7,000 Series —

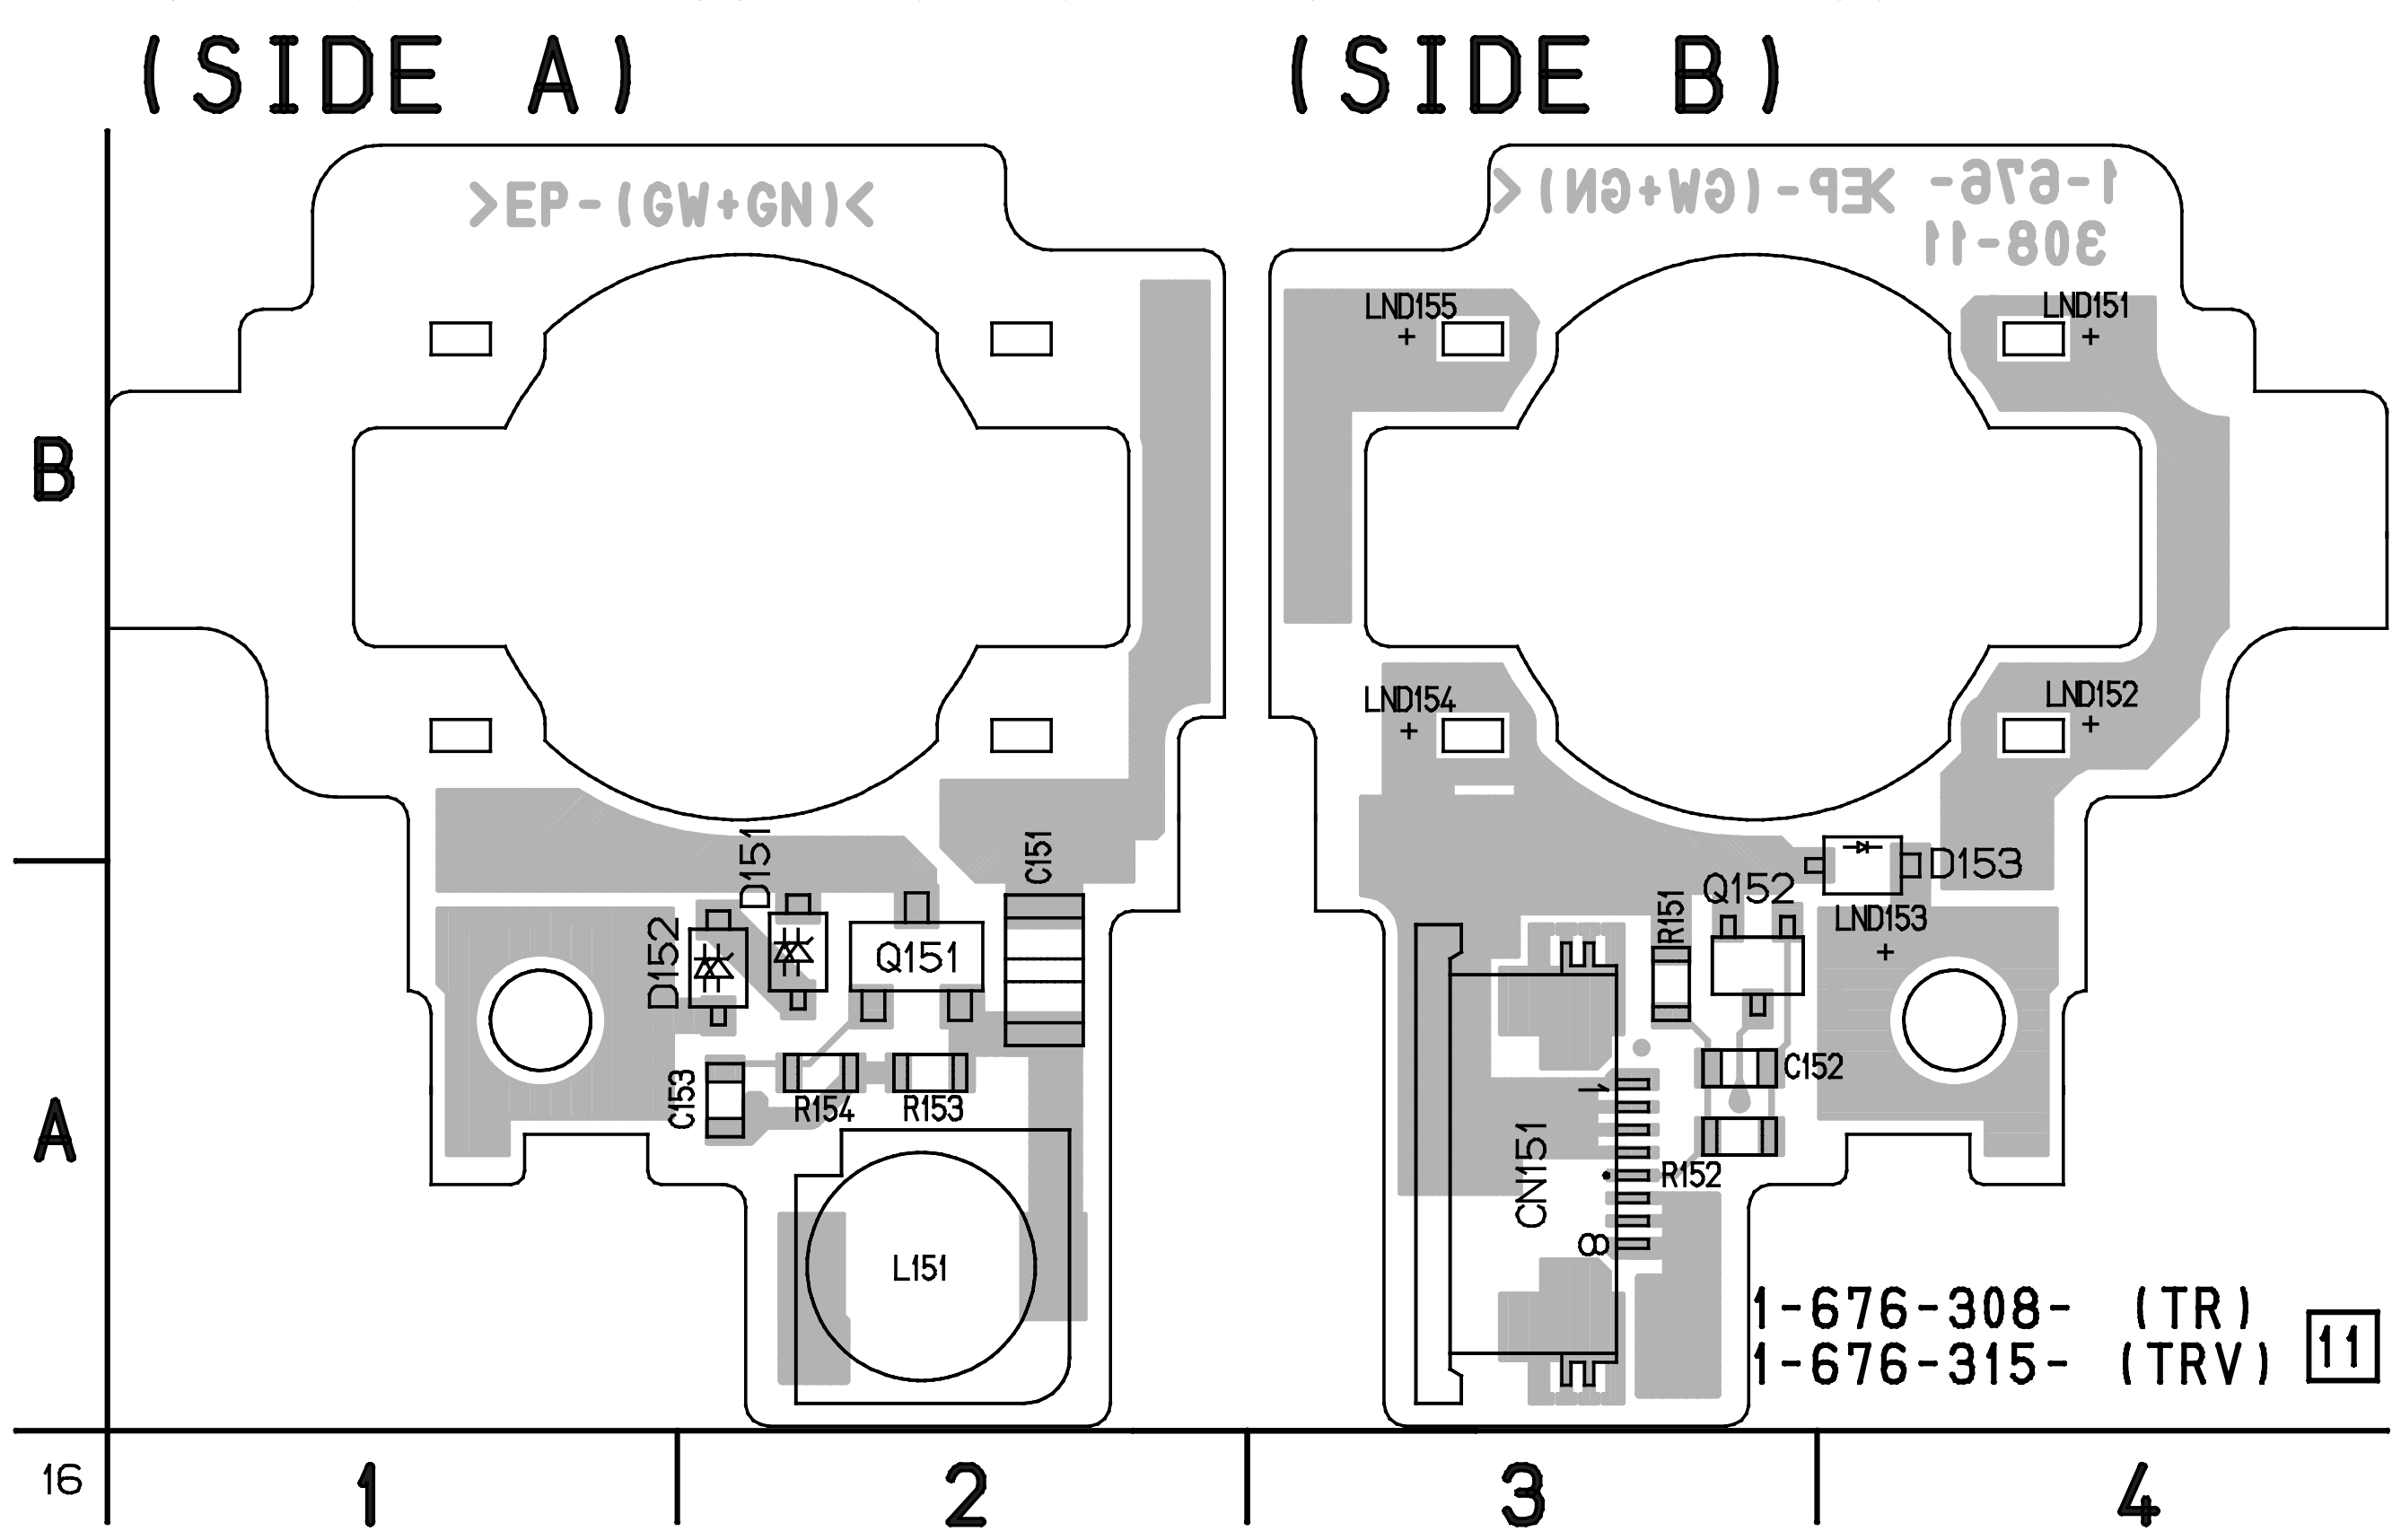
VL-28 BOARD (TR MODEL)
VL-29 BOARD (TRV MODEL)
(SIDE A)
VL-28 BOARD (TR MODEL)
VL-29 BOARD (TRV MODEL)
(SIDE B)
>EP-(GW+GN)<
B
A
D152
D151
Q151
C151
C153
R154
R153
L151
LND155
LND151
LND154
LND152
Q152
D153
R151
LND153
C152
CN151
R152
1
8
1-676-308- (TR)
1-676-315- (TRV)
11
16
1
2
3
4

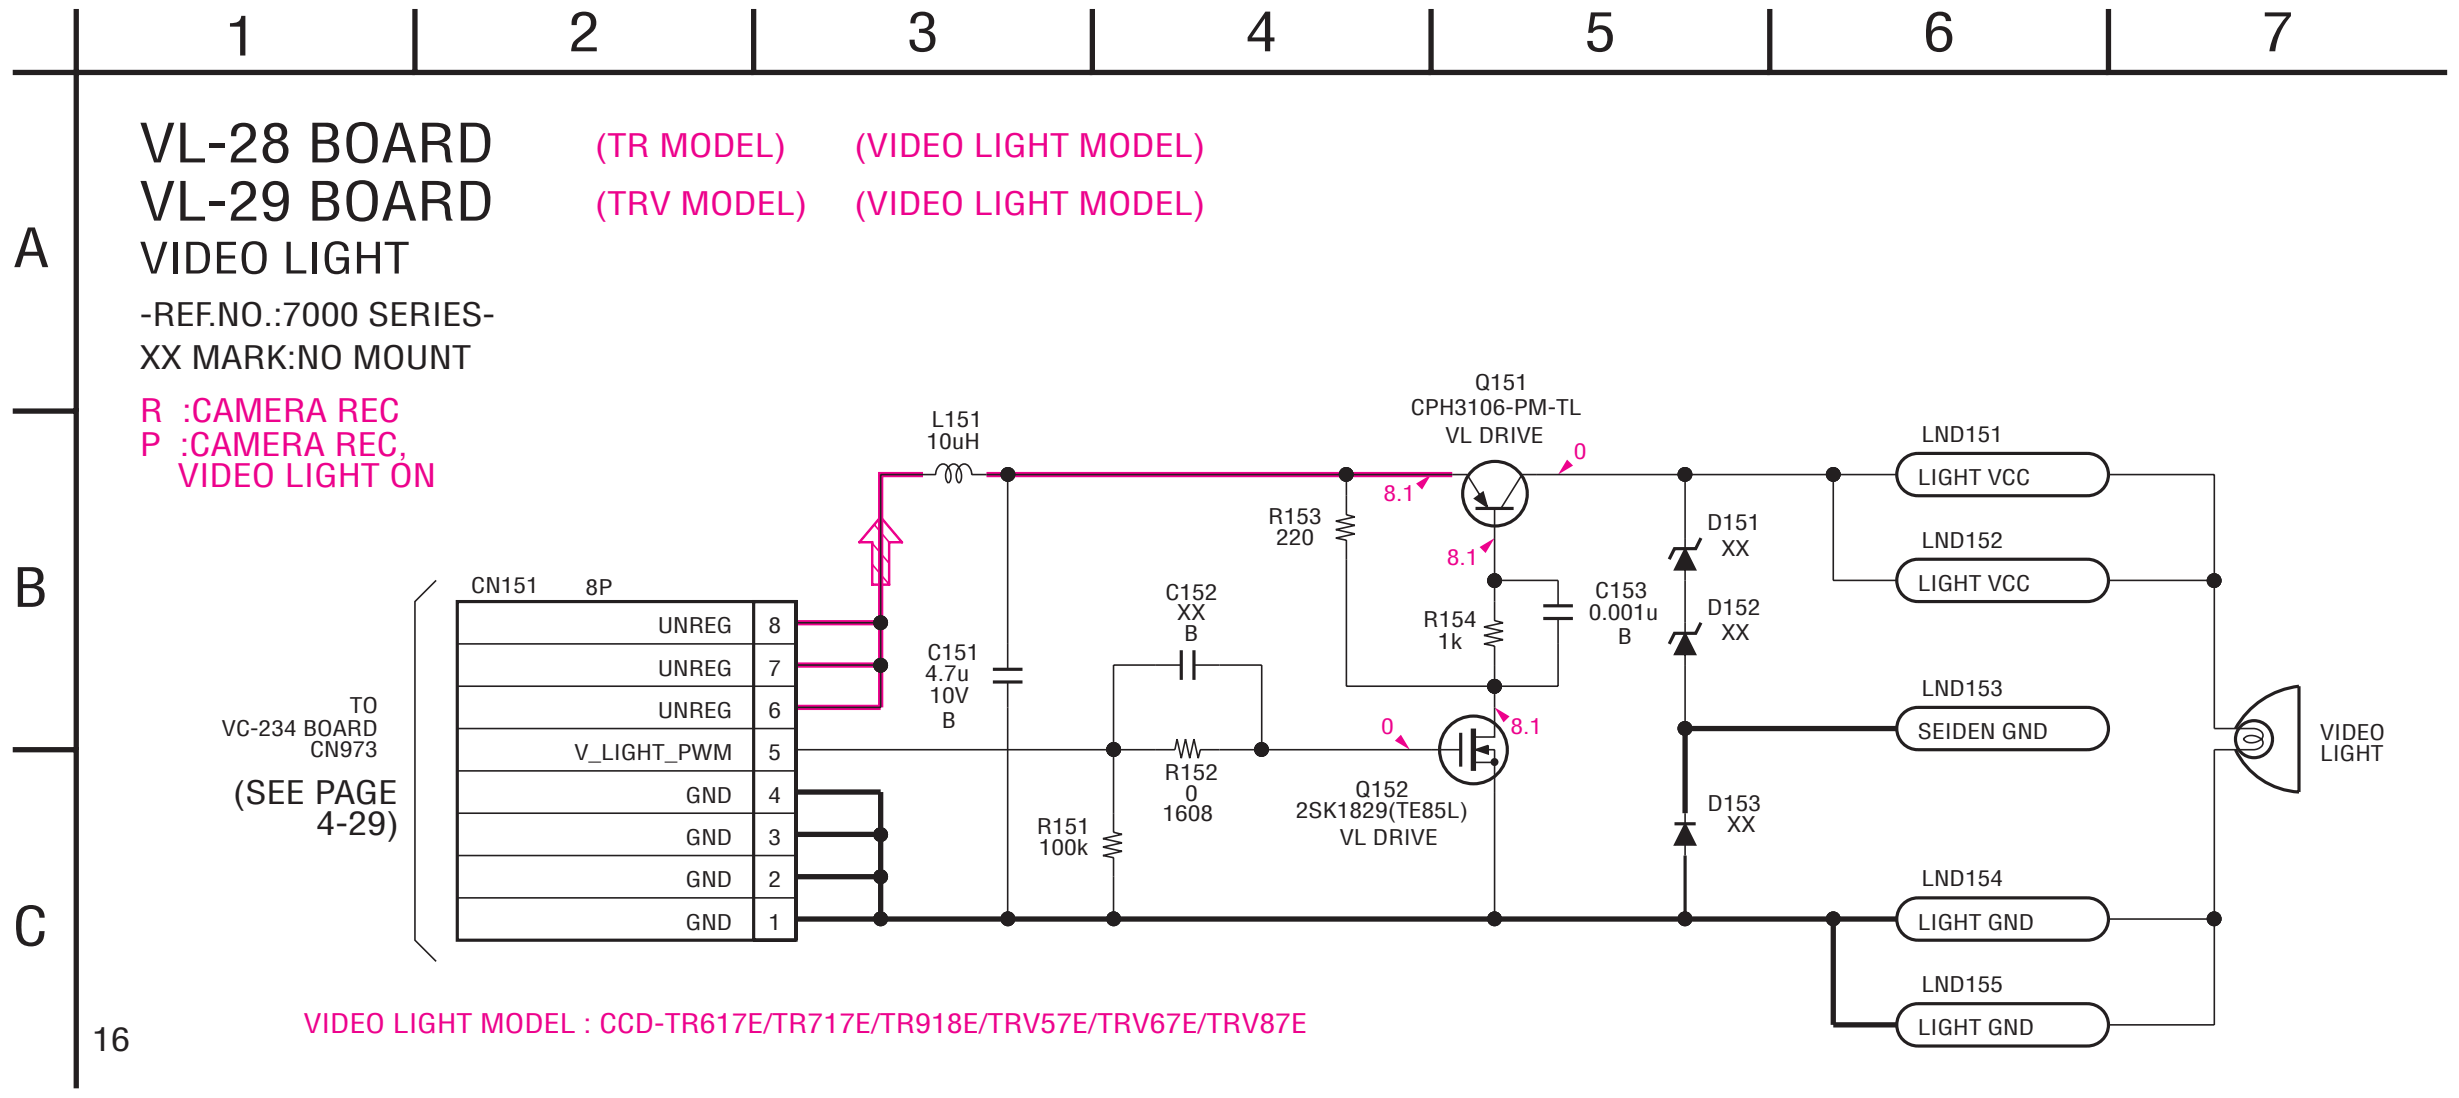
1
2
3
4
5
6
7
A
B
C
16
VL-28 BOARD (TR MODEL) (VIDEO LIGHT MODEL)
VL-29 BOARD (TRV MODEL) (VIDEO LIGHT MODEL)
VIDEO LIGHT
-REF.NO.:7000 SERIES-
XX MARK:NO MOUNT
R :CAMERA REC
P :CAMERA REC, VIDEO LIGHT ON
TO VC-234 BOARD CN973
(SEE PAGE 4-29)
CN151 8P
UNREG 8
UNREG 7
UNREG 6
V_LIGHT_PWM 5
GND 4
GND 3
GND 2
GND 1
L151 10uH
C151 4.7u 10V B
R151 100k
C152 XX B
R152 0 1608
R153 220
Q151 CPH3106-PM-TL VL DRIVE
Q152 2SK1829(TE85L) VL DRIVE
R154 1k
C153 0.001u B
8.1
8.1
0
0
8.1
D151 XX
D152 XX
D153 XX
LND151 LIGHT VCC
LND152 LIGHT VCC
LND153 SEIDEN GND
LND154 LIGHT GND
LND155 LIGHT GND
VIDEO LIGHT
VIDEO LIGHT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E

For printed wiring board

- Refer to page 4-94 for location.
- Chip parts

Transistor



There are few cases that the part printed on this diagram isn't mounted in this model.

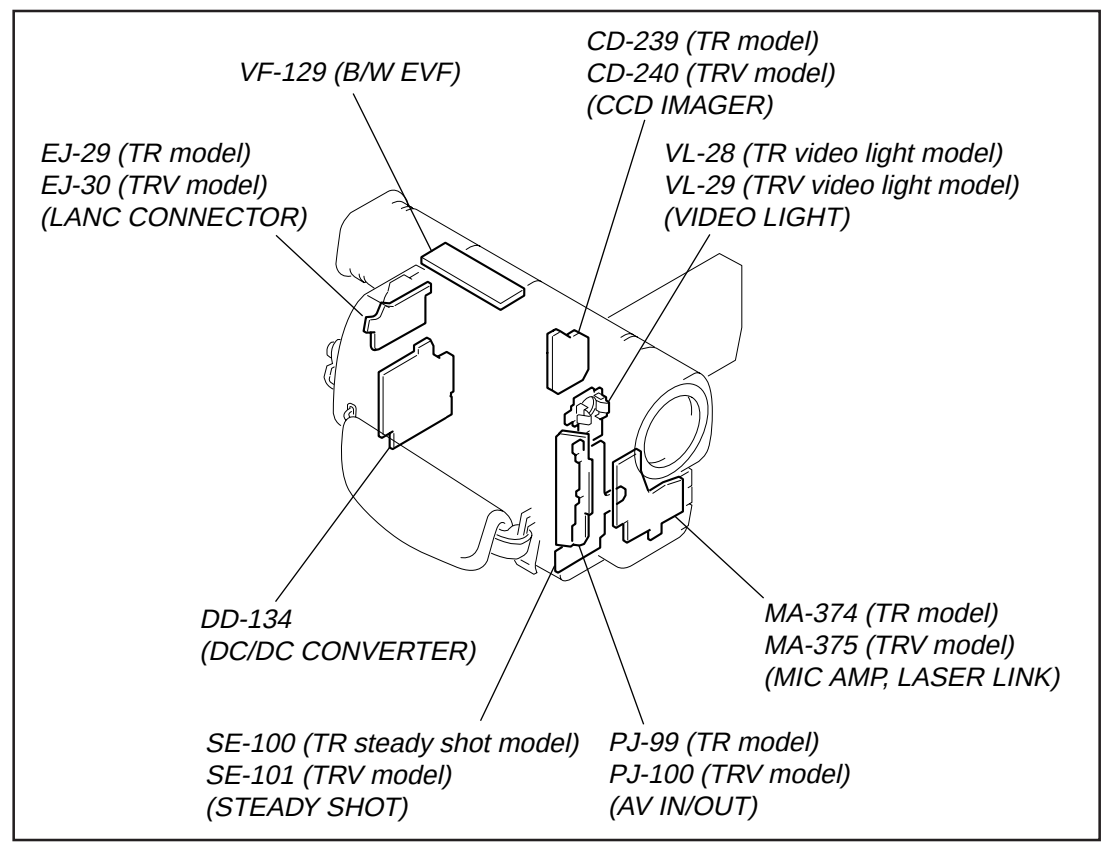
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

MA-374/375 (MIC AMP) PRINTED WIRING BOARD

— Ref. No. MA-374/375 Board; 3,000 Series —

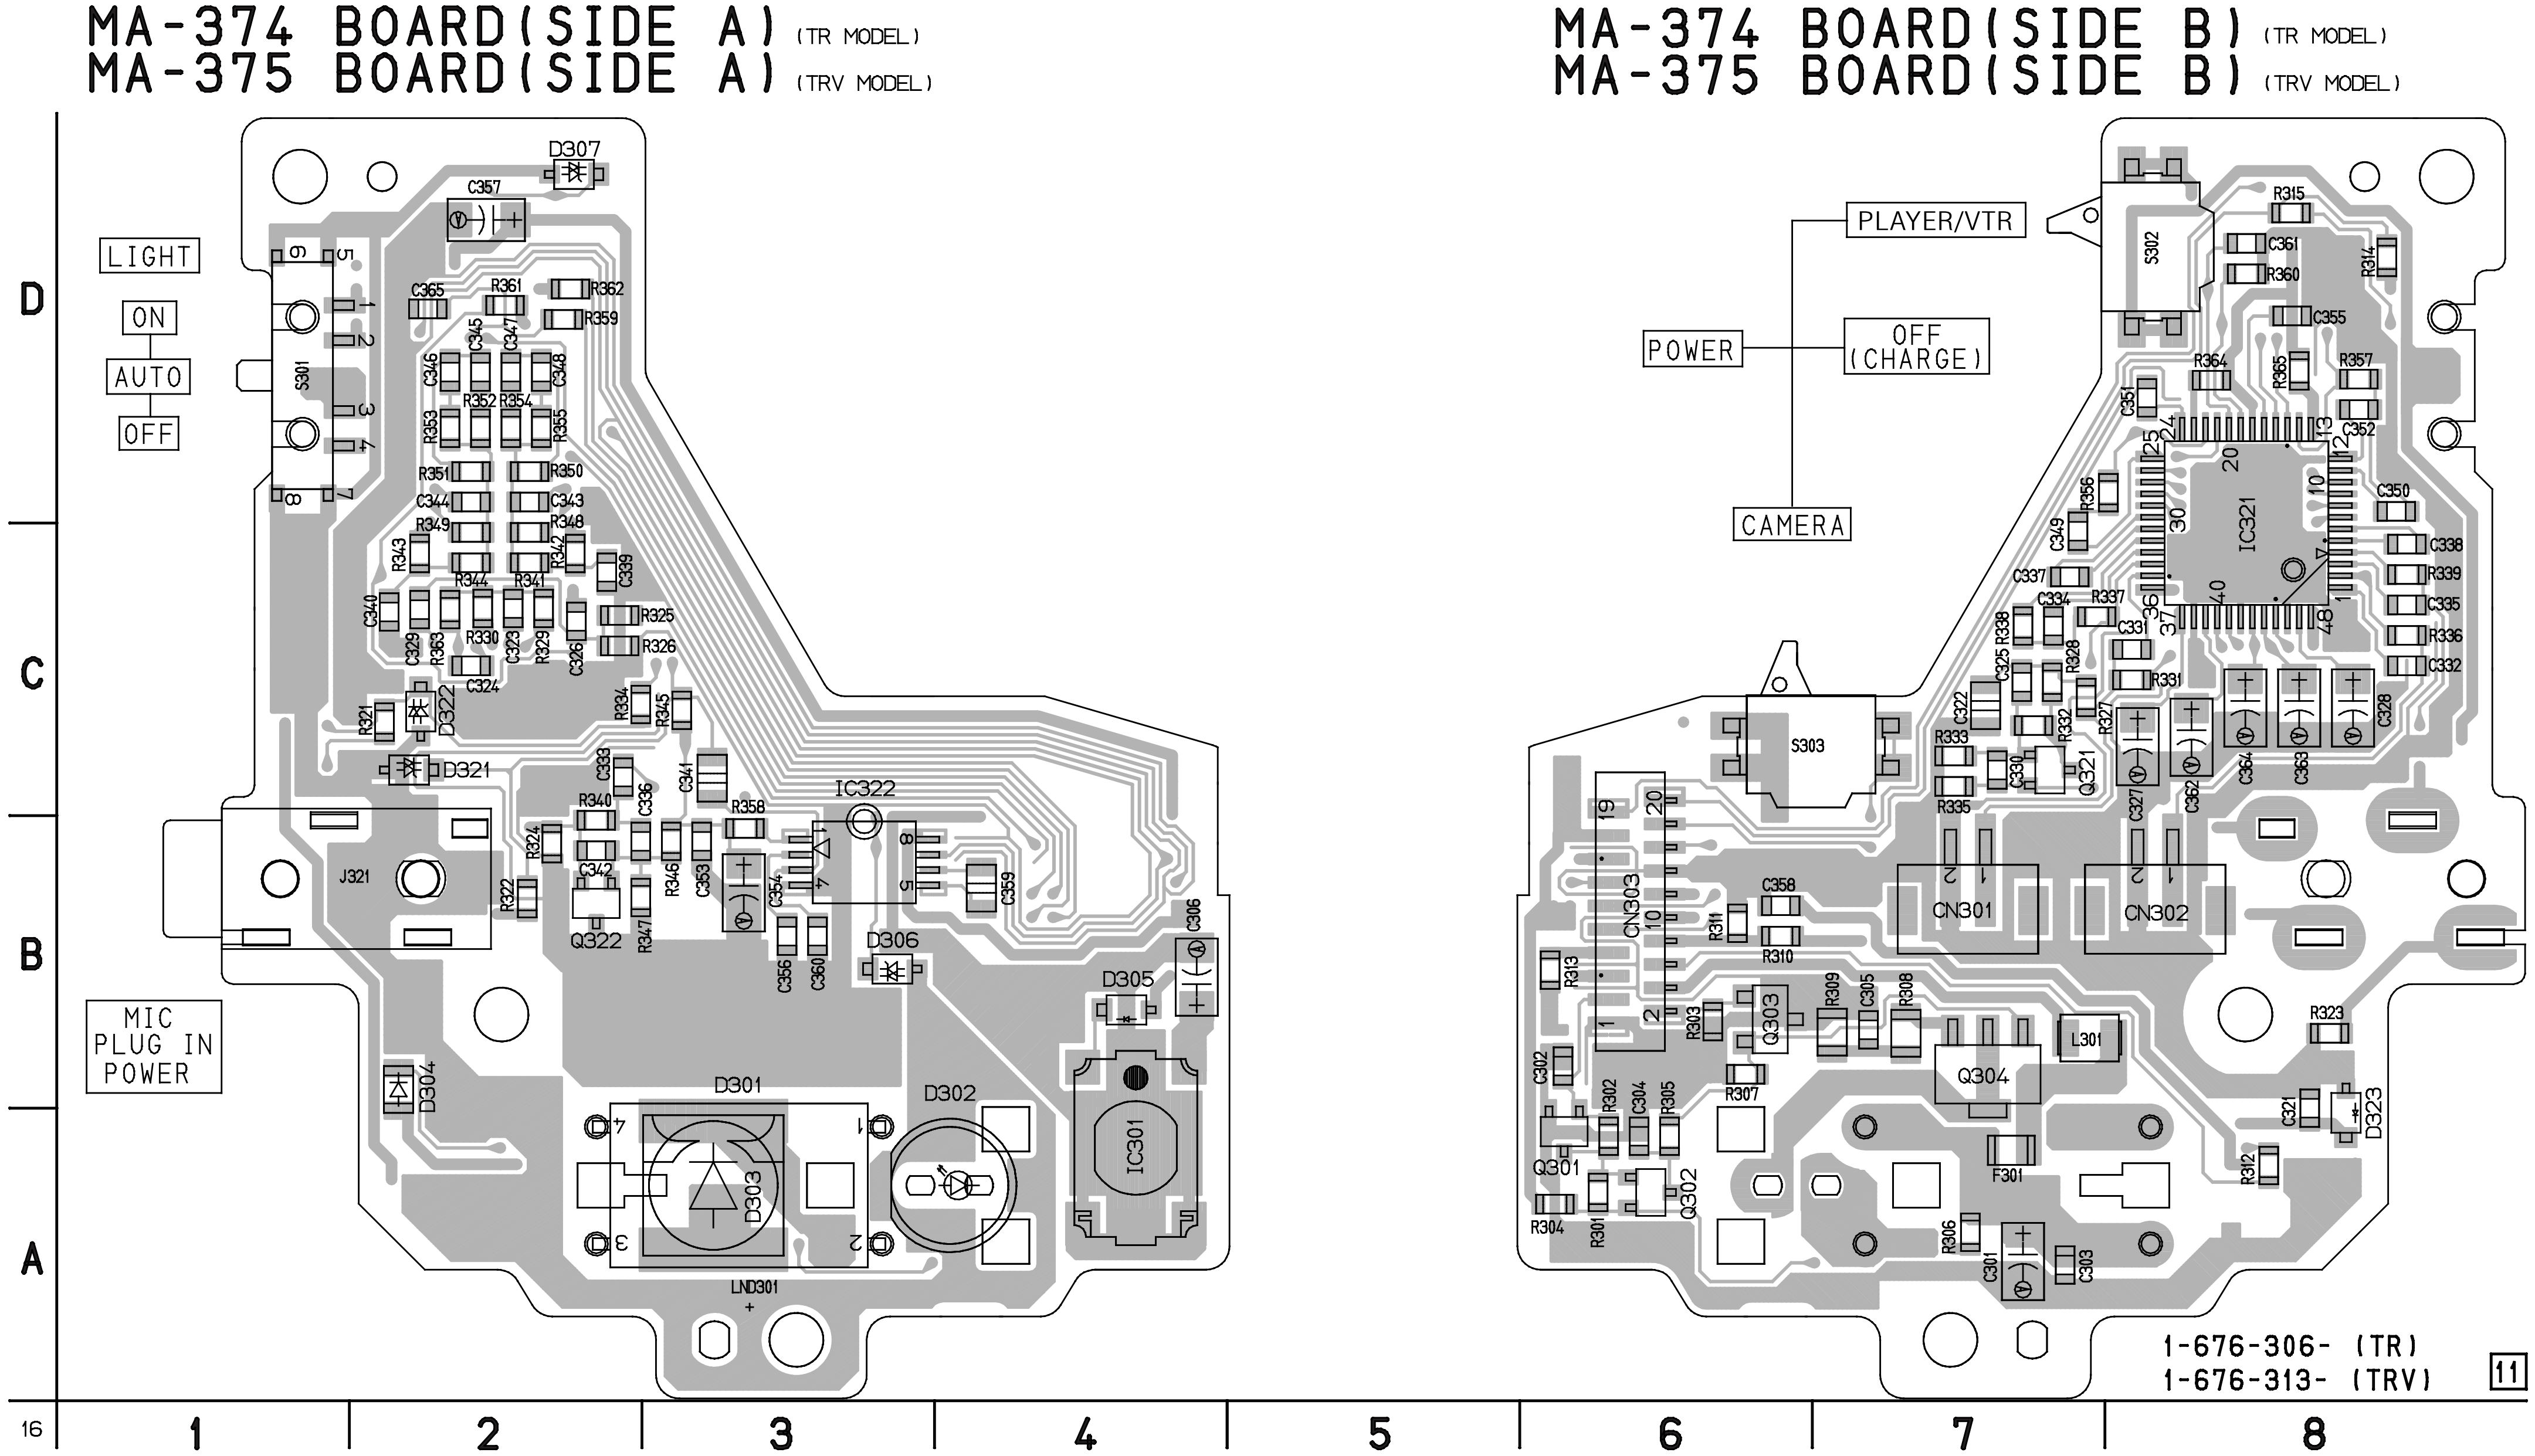
MA-374 BOARD(SIDE A) (TR MODEL)
MA-375 BOARD(SIDE A) (TRV MODEL)
MA-374 BOARD(SIDE B) (TR MODEL)
MA-375 BOARD(SIDE B) (TRV MODEL)
LIGHT
ON
AUTO
OFF
MIC PLUG IN POWER
PLAYER/VTR
POWER
OFF (CHARGE)
CAMERA
S301
S302
S303
J321
IC301
IC321
IC322
CN301
CN302
CN303
D301
D302
D303
D304
D305
D306
D307
D321
D322
D323
Q301
Q302
Q303
Q304
Q321
Q322
L301
F301
LND301
1-676-306- (TR)
1-676-313- (TRV)
11
D
C
B
A
16
1
2
3
4
5
6
7
8

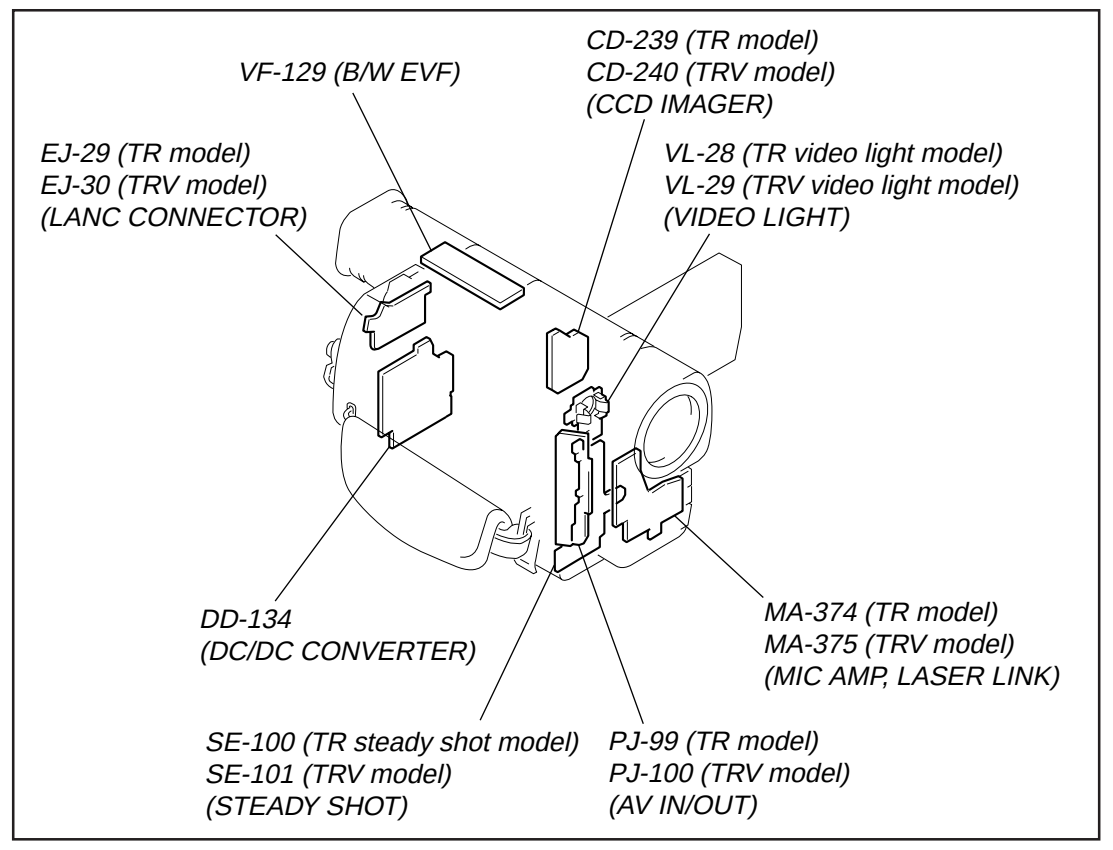
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

For printed wiring board

- Refer to page 4-94 for location.
- Chip parts

Transistor



There are few cases that the part printed on this diagram isn't mounted in this model.

For Schematic Diagram

- Refer to page 4-65 for printed wiring board.

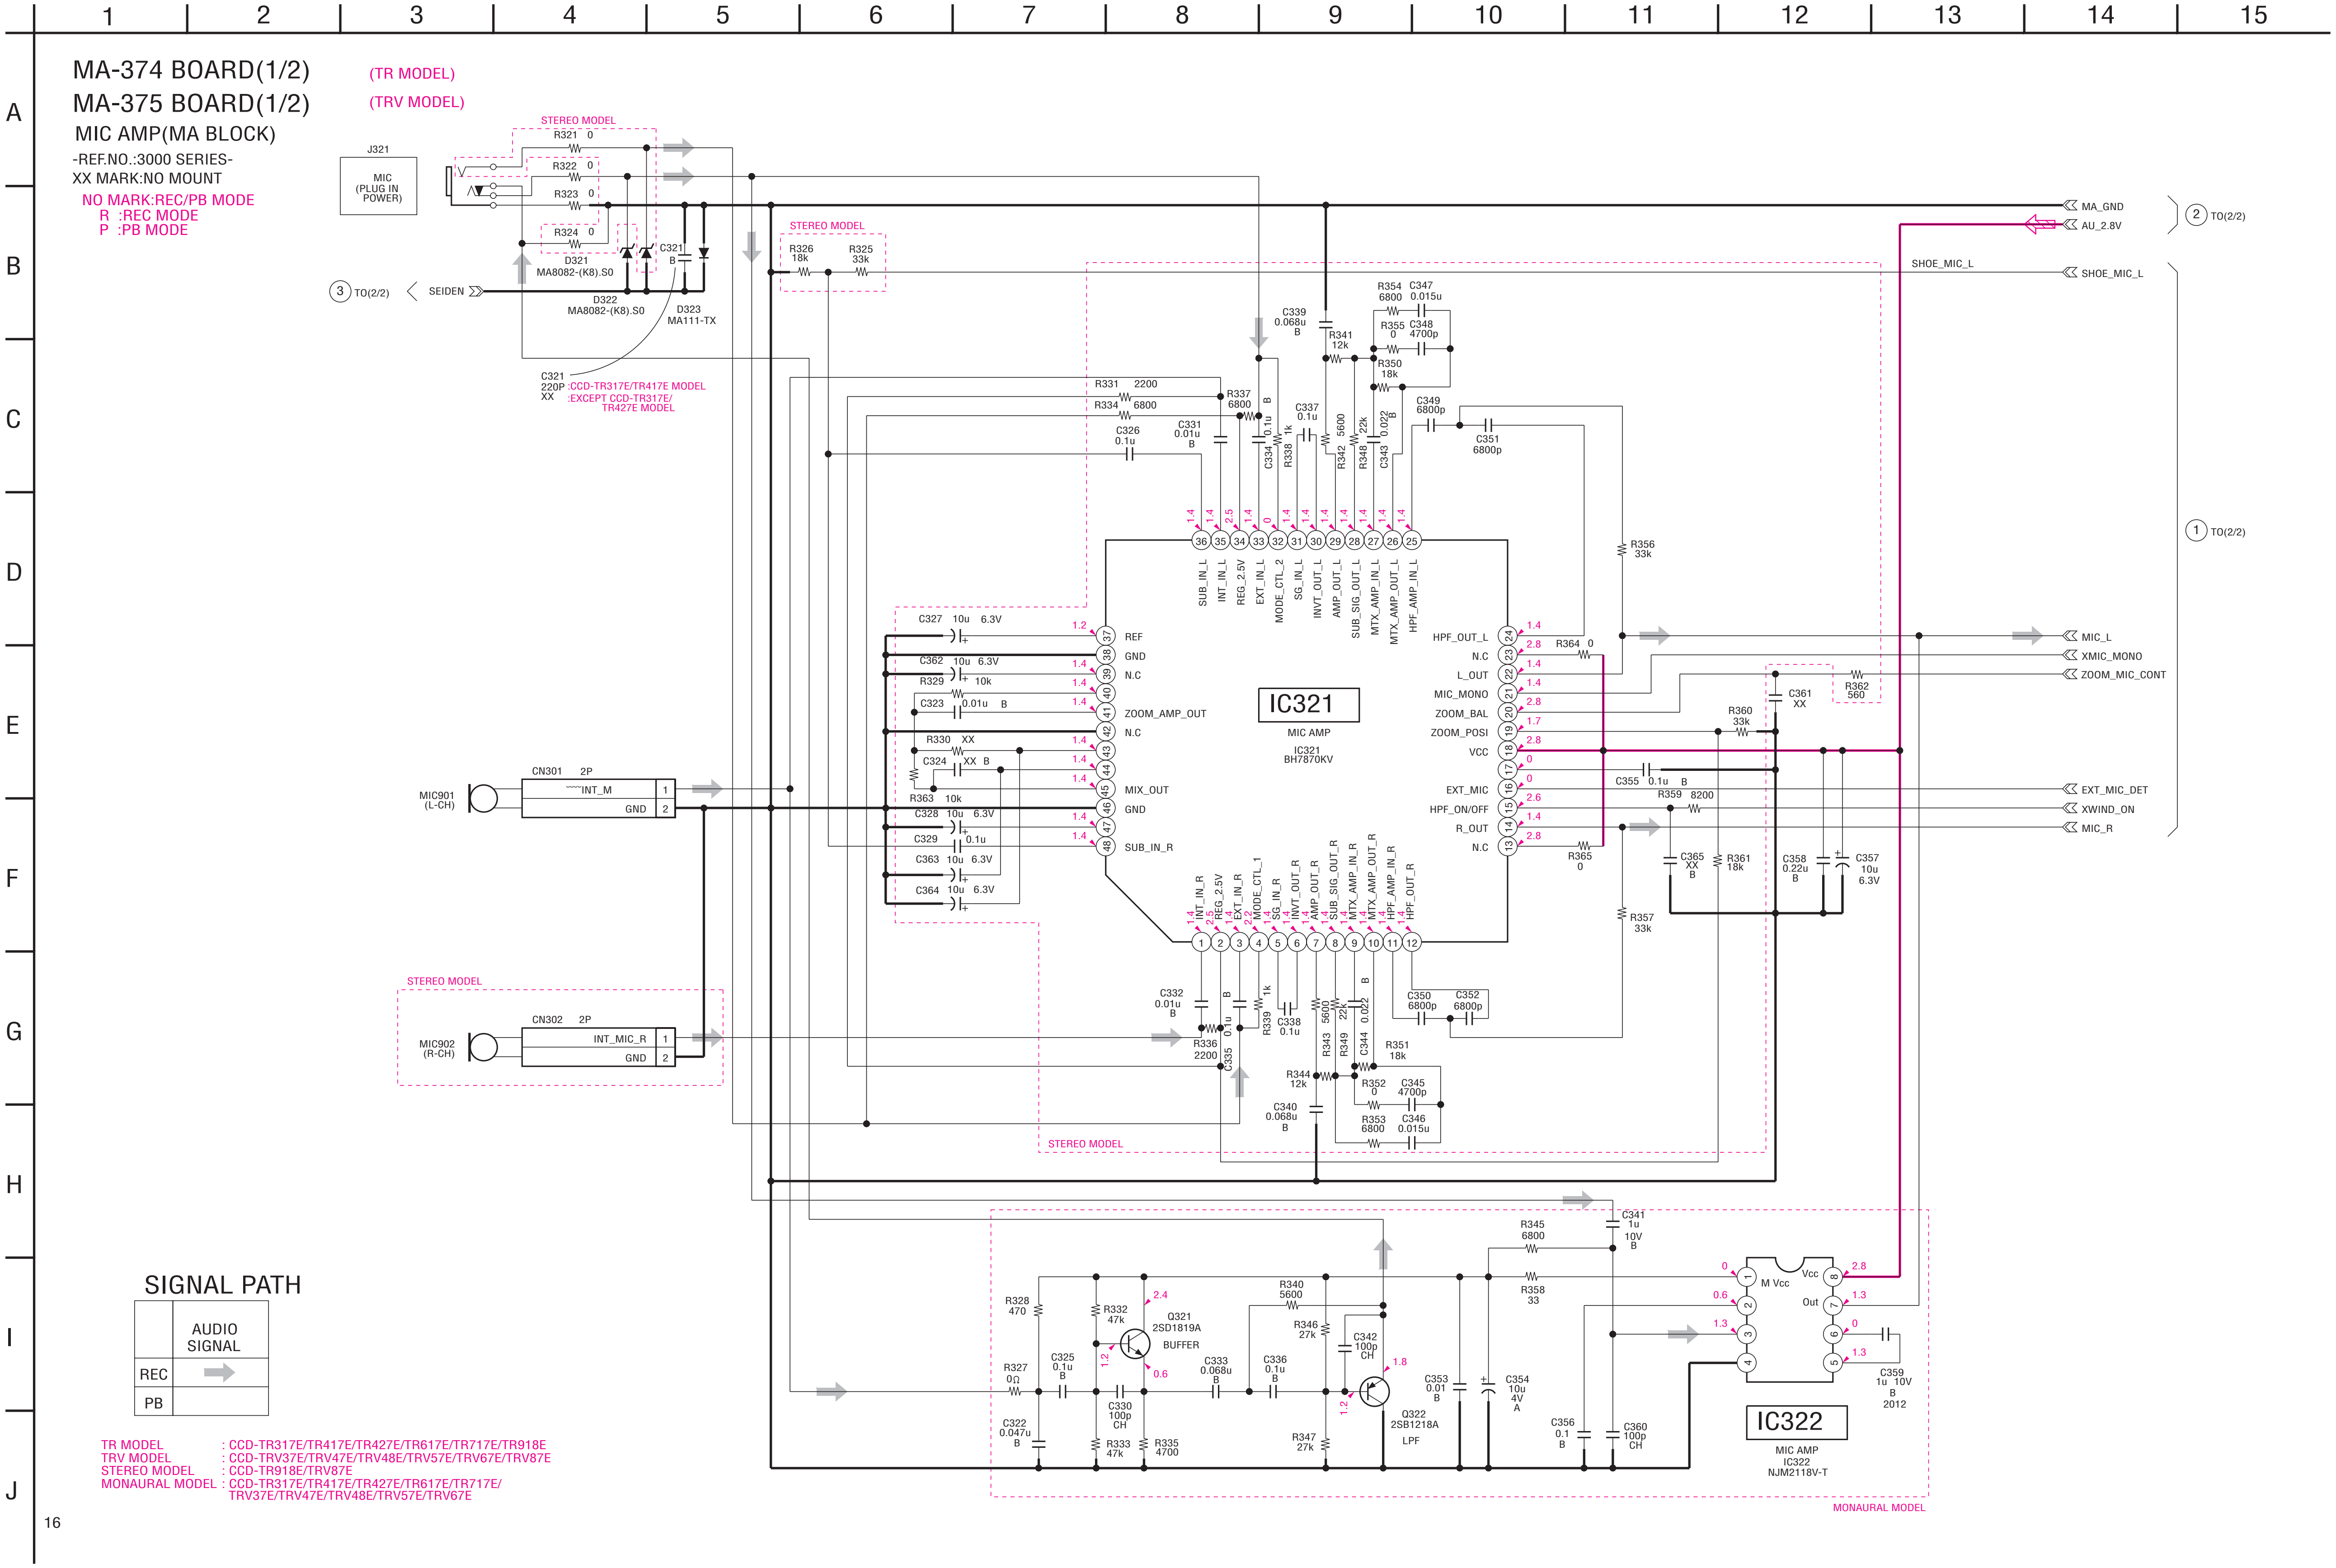
MA-374 BOARD(1/2) (TR MODEL)
MA-375 BOARD(1/2) (TRV MODEL)
MIC AMP(MA BLOCK)
-REF.NO.:3000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
J321 MIC (PLUG IN POWER)
STEREO MODEL
R321 0
R322 0
R323 0
R324 0
D321 MA8082-(K8).S0
D322 MA8082-(K8).S0
D323 MA111-TX
C321 B
C321 220P :CCD-TR317E/TR417E MODEL
XX :EXCEPT CCD-TR317E/TR427E MODEL
3 TO(2/2) SEIDEN
R326 18k
R325 33k
MIC901 (L-CH)
CN301 2P
INT_M
GND
MIC902 (R-CH)
CN302 2P
INT_MIC_R
GND
IC321 MIC AMP IC321 BH7870KV
REF
GND
N.C
ZOOM_AMP_OUT
MIX_OUT
SUB_IN_R
SUB_IN_L
INT_IN_L
REG_2.5V
EXT_IN_L
MODE_CTL_2
SG_IN_L
INVT_OUT_L
AMP_OUT_L
SUB_SIG_OUT_L
MTX_AMP_IN_L
MTX_AMP_OUT_L
HPF_AMP_IN_L
HPF_OUT_L
L_OUT
MIC_MONO
ZOOM_BAL
ZOOM_POSI
VCC
EXT_MIC
HPF_ON/OFF
R_OUT
INT_IN_R
EXT_IN_R
MODE_CTL_1
SG_IN_R
INVT_OUT_R
AMP_OUT_R
SUB_SIG_OUT_R
MTX_AMP_IN_R
MTX_AMP_OUT_R
HPF_AMP_IN_R
HPF_OUT_R
MA_GND
AU_2.8V
2 TO(2/2)
SHOE_MIC_L
1 TO(2/2)
MIC_L
XMIC_MONO
ZOOM_MIC_CONT
EXT_MIC_DET
XWIND_ON
MIC_R
Q321 2SD1819A BUFFER
Q322 2SB1218A LPF
IC322 MIC AMP IC322 NJM2118V-T
M Vcc
Vcc
Out
MONAURAL MODEL
SIGNAL PATH
AUDIO SIGNAL
REC
PB
TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
STEREO MODEL : CCD-TR918E/TRV87E
MONAURAL MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
A B C D E F G H I J
16

For Schematic Diagram
- Refer to page 4-65 for printed wiring board.

MA-374 BOARD(2/2)
MA-375 BOARD(2/2)
LASER LINK (CN BLOCK)
-REF.NO.:3000 SERIES-
XX MARK:NO MOUNT

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE

(Note)
Resistor is mounted to the location
where L301 is mounted.

VIDEO LIGHT MODEL	: CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
REMOTE COMMANDER MODEL	: CCD-TR427E/TR617E/TR717E/TR918E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
LASER LINK MODEL	: CCD-TR918E/TRV87E
TR MODEL	: CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL	: CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

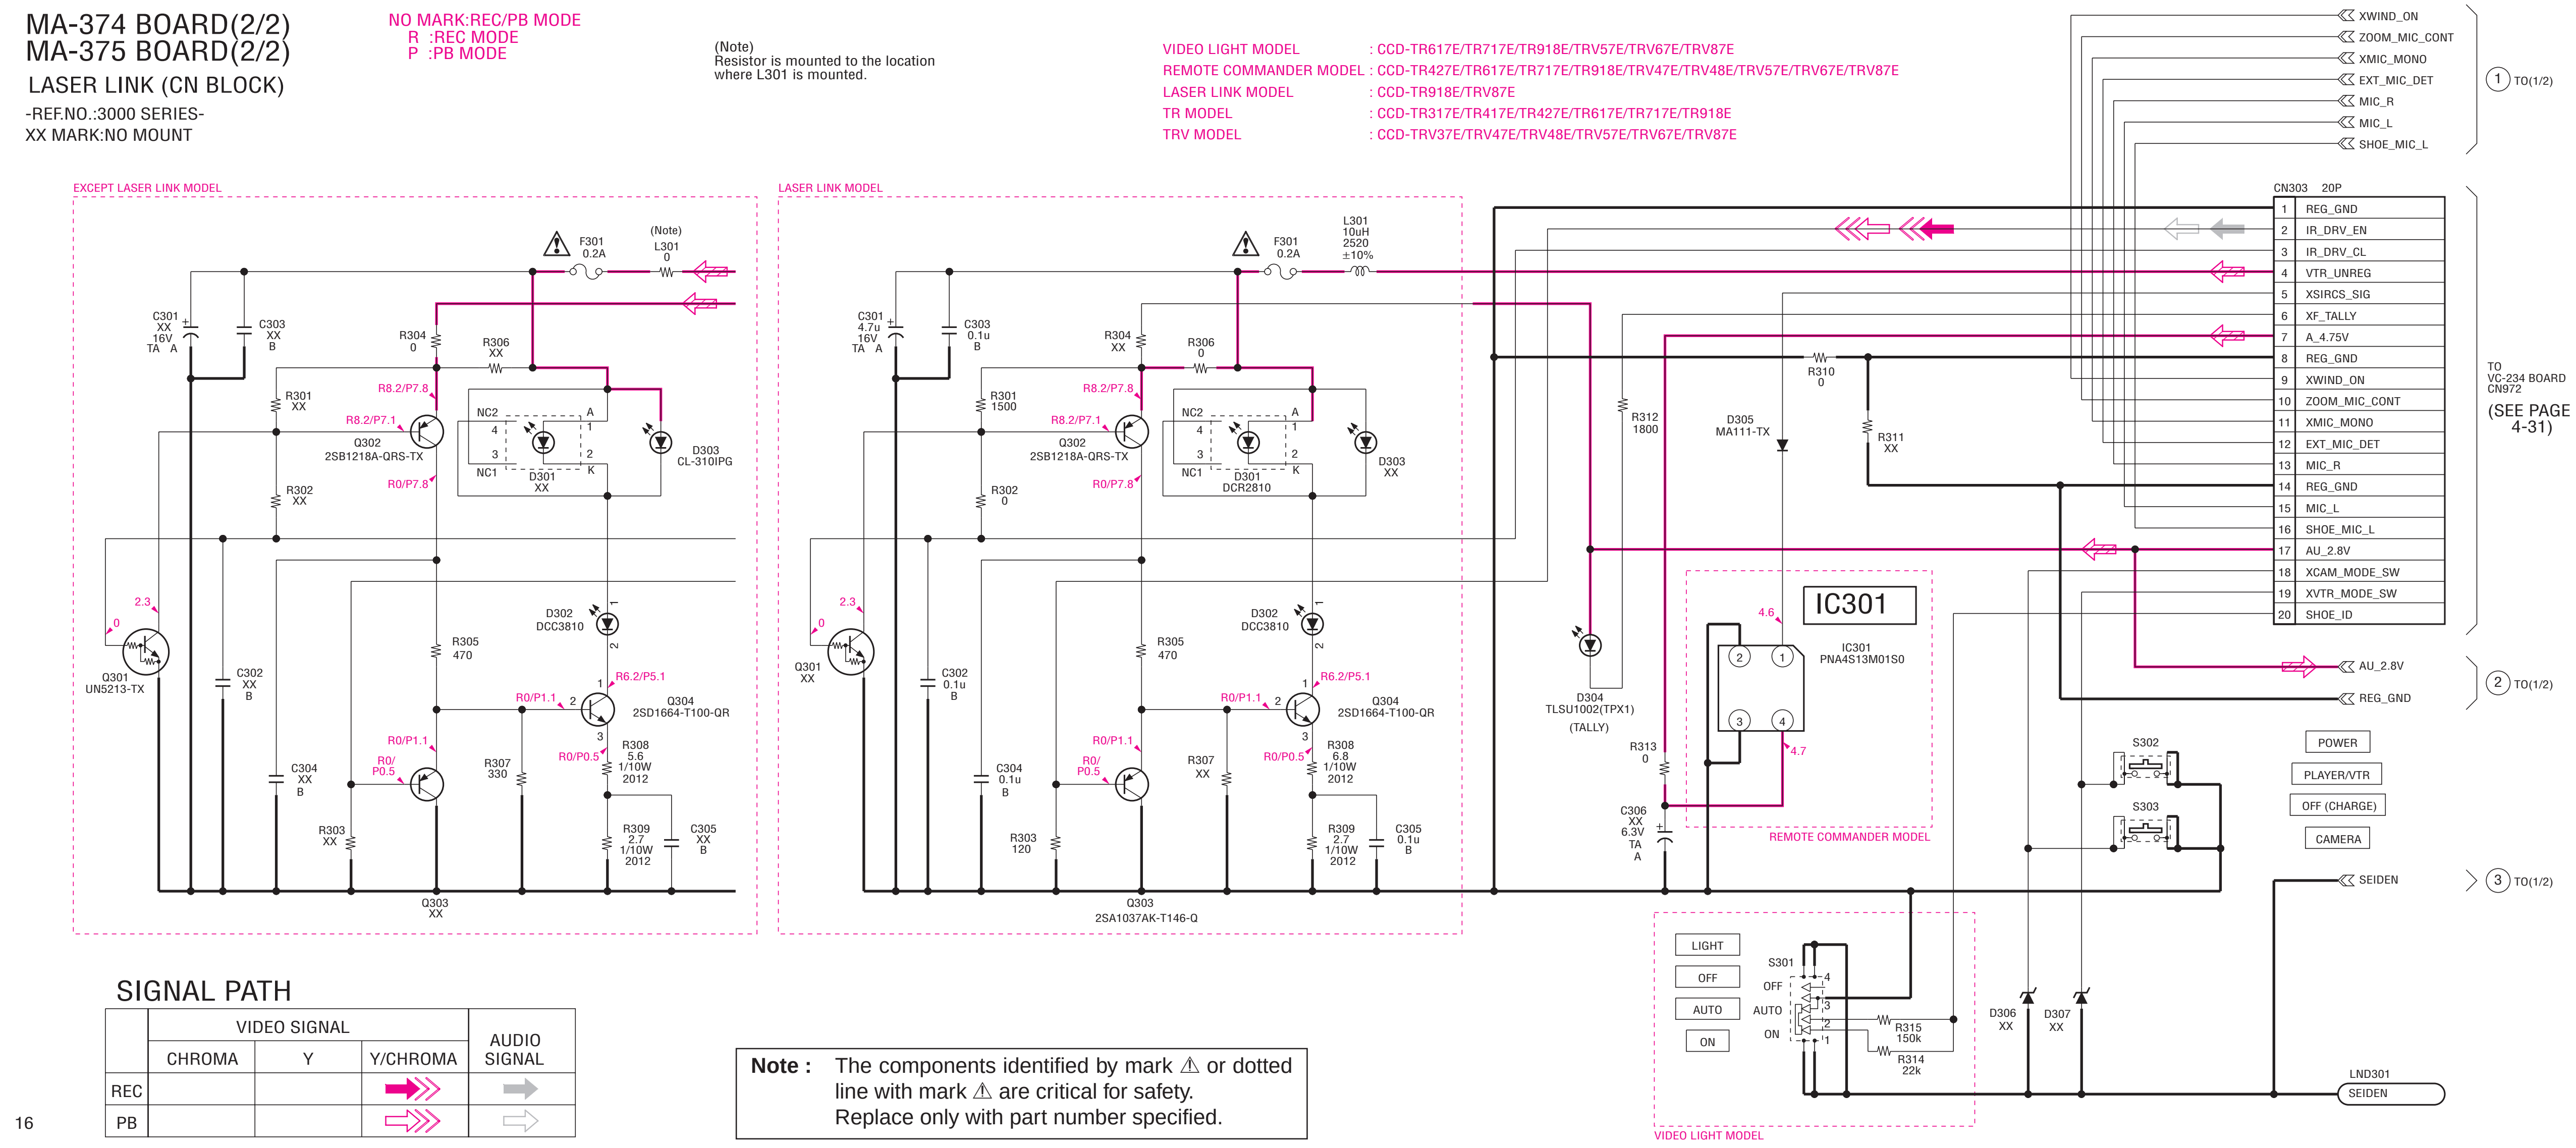
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
A
B
C
D
E
F
G
EXCEPT LASER LINK MODEL
LASER LINK MODEL
F301 0.2A
L301 0
L301 10uH 2520 ±10%
C301 XX 16V TA A
C301 4.7u 16V TA A
C303 XX B
C303 0.1u B
R304 0
R304 XX
R306 XX
R306 0
R301 XX
R301 1500
R302 XX
R302 0
Q302 2SB1218A-QRS-TX
NC2
NC1
D301 XX
D301 DCR2810
D303 CL-310IPG
D303 XX
R8.2/P7.8
R8.2/P7.1
R0/P7.8
Q301 UN5213-TX
Q301 XX
C302 XX B
C302 0.1u B
D302 DCC3810
R305 470
R6.2/P5.1
R0/P1.1
Q304 2SD1664-T100-QR
R0/P0.5
R308 5.6 1/10W 2012
R308 6.8 1/10W 2012
R307 330
R307 XX
C304 XX B
C304 0.1u B
R303 XX
R303 120
R309 2.7 1/10W 2012
C305 XX B
C305 0.1u B
Q303 XX
Q303 2SA1037AK-T146-Q
R312 1800
D305 MA111-TX
R310 0
R311 XX
D304 TLSU1002(TPX1) (TALLY)
R313 0
C306 XX 6.3V TA A
IC301
IC301 PNA4S13M01S0
4.6
4.7
REMOTE COMMANDER MODEL
S302
S303
POWER
PLAYER/VTR
OFF (CHARGE)
CAMERA
LIGHT
OFF
AUTO
ON
S301
R315 150k
R314 22k
D306 XX
D307 XX
VIDEO LIGHT MODEL
LND301 SEIDEN
XWIND_ON
ZOOM_MIC_CONT
XMIC_MONO
EXT_MIC_DET
MIC_R
MIC_L
SHOE_MIC_L
① TO(1/2)
CN303 20P
1 REG_GND
2 IR_DRV_EN
3 IR_DRV_CL
4 VTR_UNREG
5 XSIRCS_SIG
6 XF_TALLY
7 A_4.75V
8 REG_GND
9 XWIND_ON
10 ZOOM_MIC_CONT
11 XMIC_MONO
12 EXT_MIC_DET
13 MIC_R
14 REG_GND
15 MIC_L
16 SHOE_MIC_L
17 AU_2.8V
18 XCAM_MODE_SW
19 XVTR_MODE_SW
20 SHOE_ID
TO VC-234 BOARD CN972
(SEE PAGE 4-31)
AU_2.8V
REG_GND
② TO(1/2)
SEIDEN
③ TO(1/2)
16

SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡	➡
PB			⇨	⇨

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

PD-117 (RGB LCD DRIVER, TIMING GENERATOR, CG LCD DRIVER, BACK LIGHT DRIVE) PRINTED WIRING BOARD

— Ref. No. PD-117 Board; 10,000 Series —

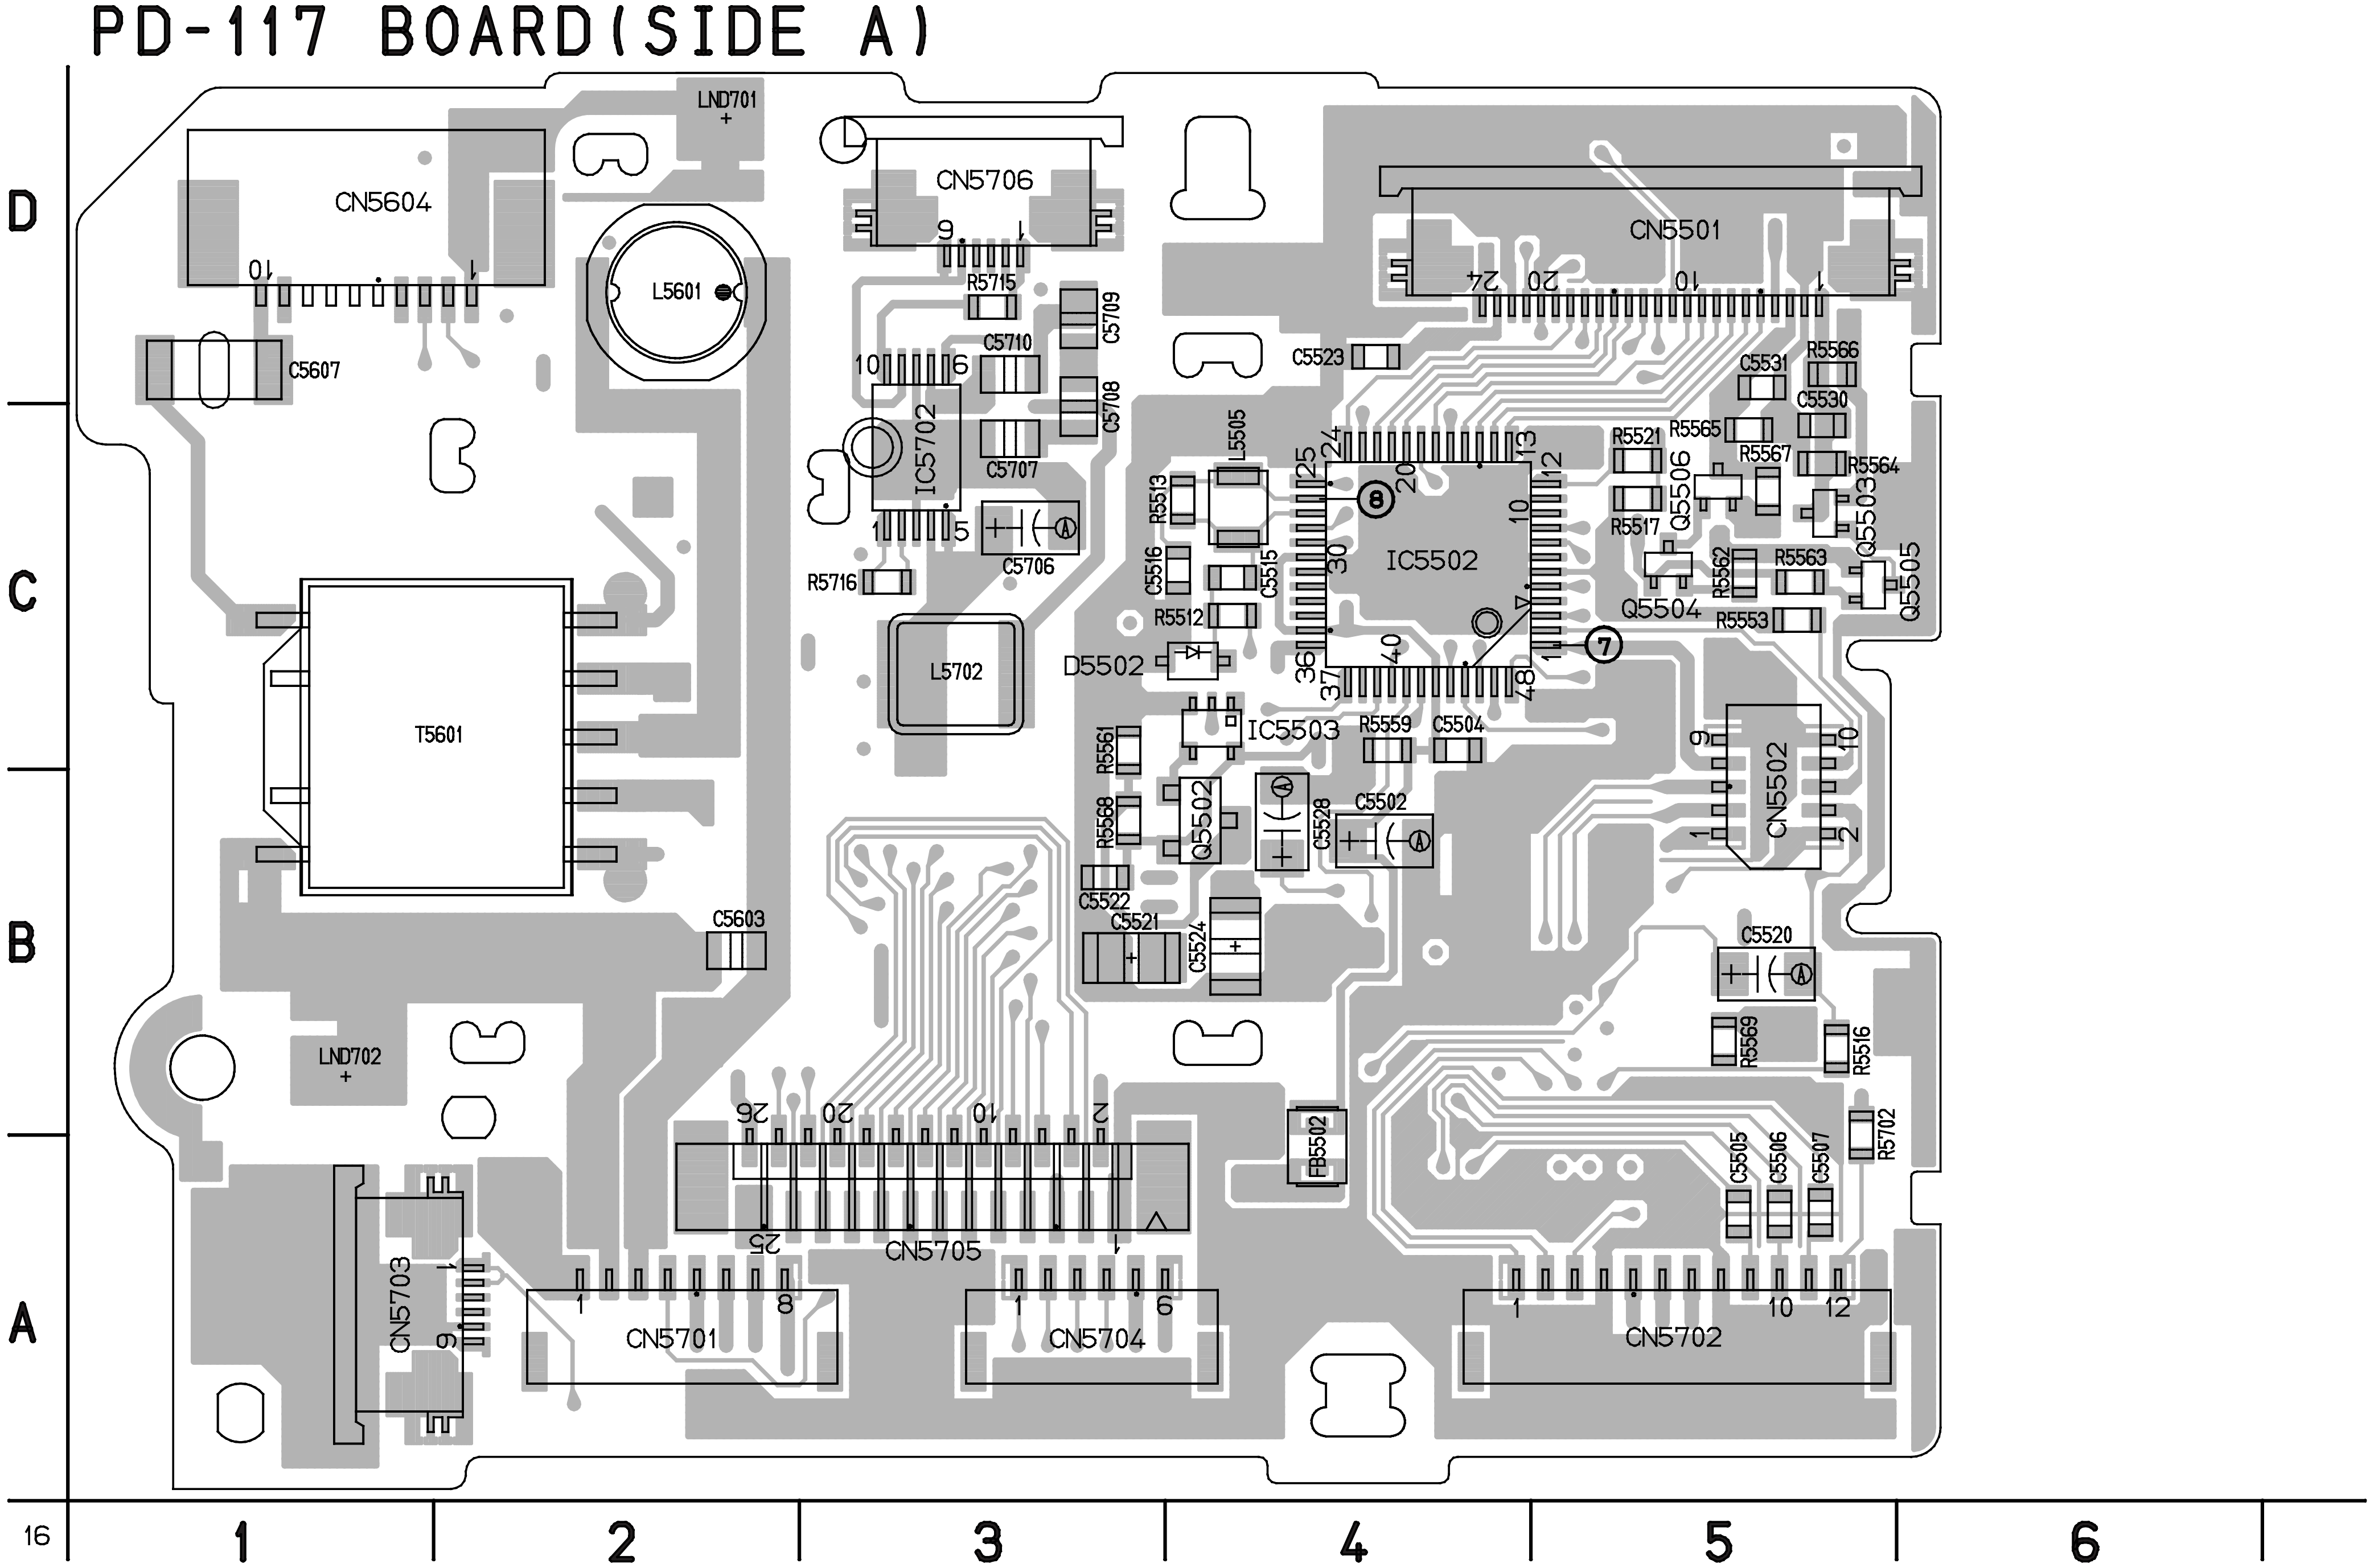
PD-117 BOARD(SIDE A)
D
C
B
A
16
1
2
3
4
5
6
LND701
CN5604
10
1
L5601
C5607
T5601
C5603
LND702
CN5703
CN5701
8
CN5706
9
R5715
C5710
C5709
C5708
IC5702
C5707
C5706
R5716
L5702
CN5705
26
20
10
2
25
CN5704
6
C5523
L5505
R5513
C5516
C5515
R5512
D5502
IC5502
IC5503
R5559
C5504
R5561
R5568
Q5502
C5528
C5502
C5522
C5521
C5524
FB5502
CN5501
24
20
C5531
R5566
C5530
R5521
R5565
R5567
R5564
Q5506
R5517
Q5503
R5562
R5563
Q5505
Q5504
R5553
CN5502
C5520
R5569
R5516
R5702
C5505
C5506
C5507
CN5702
12

For printed wiring board

- Refer to page 4-94 for location.
- This board is four-layer print board. However, the patterns of layers two and three have not been included in the diagram.
- Chip parts

Transistor


C
B
E
6 5 4
1 2 3
4 5 6
3 2 1

There are few cases that the part printed on this diagram isn't mounted in this model.

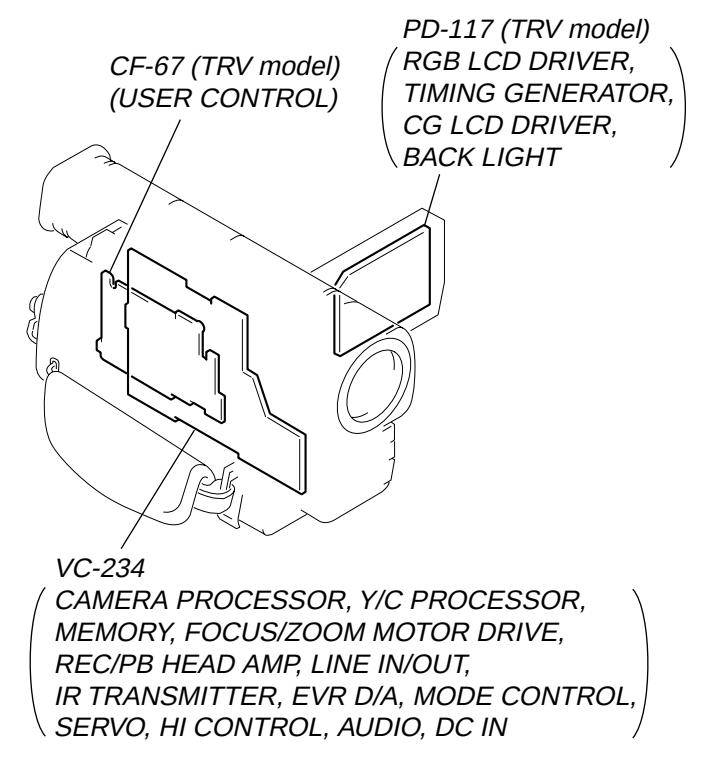
CF-67 (TRV model)
(USER CONTROL)
PD-117 (TRV model)
RGB LCD DRIVER,
TIMING GENERATOR,
CG LCD DRIVER,
BACK LIGHT
VC-234
CAMERA PROCESSOR, Y/C PROCESSOR,
MEMORY, FOCUS/ZOOM MOTOR DRIVE,
REC/PB HEAD AMP, LINE IN/OUT,
IR TRANSMITTER, EVR D/A, MODE CONTROL,
SERVO, HI CONTROL, AUDIO, DC IN

PD-117 BOARD(SIDE B)

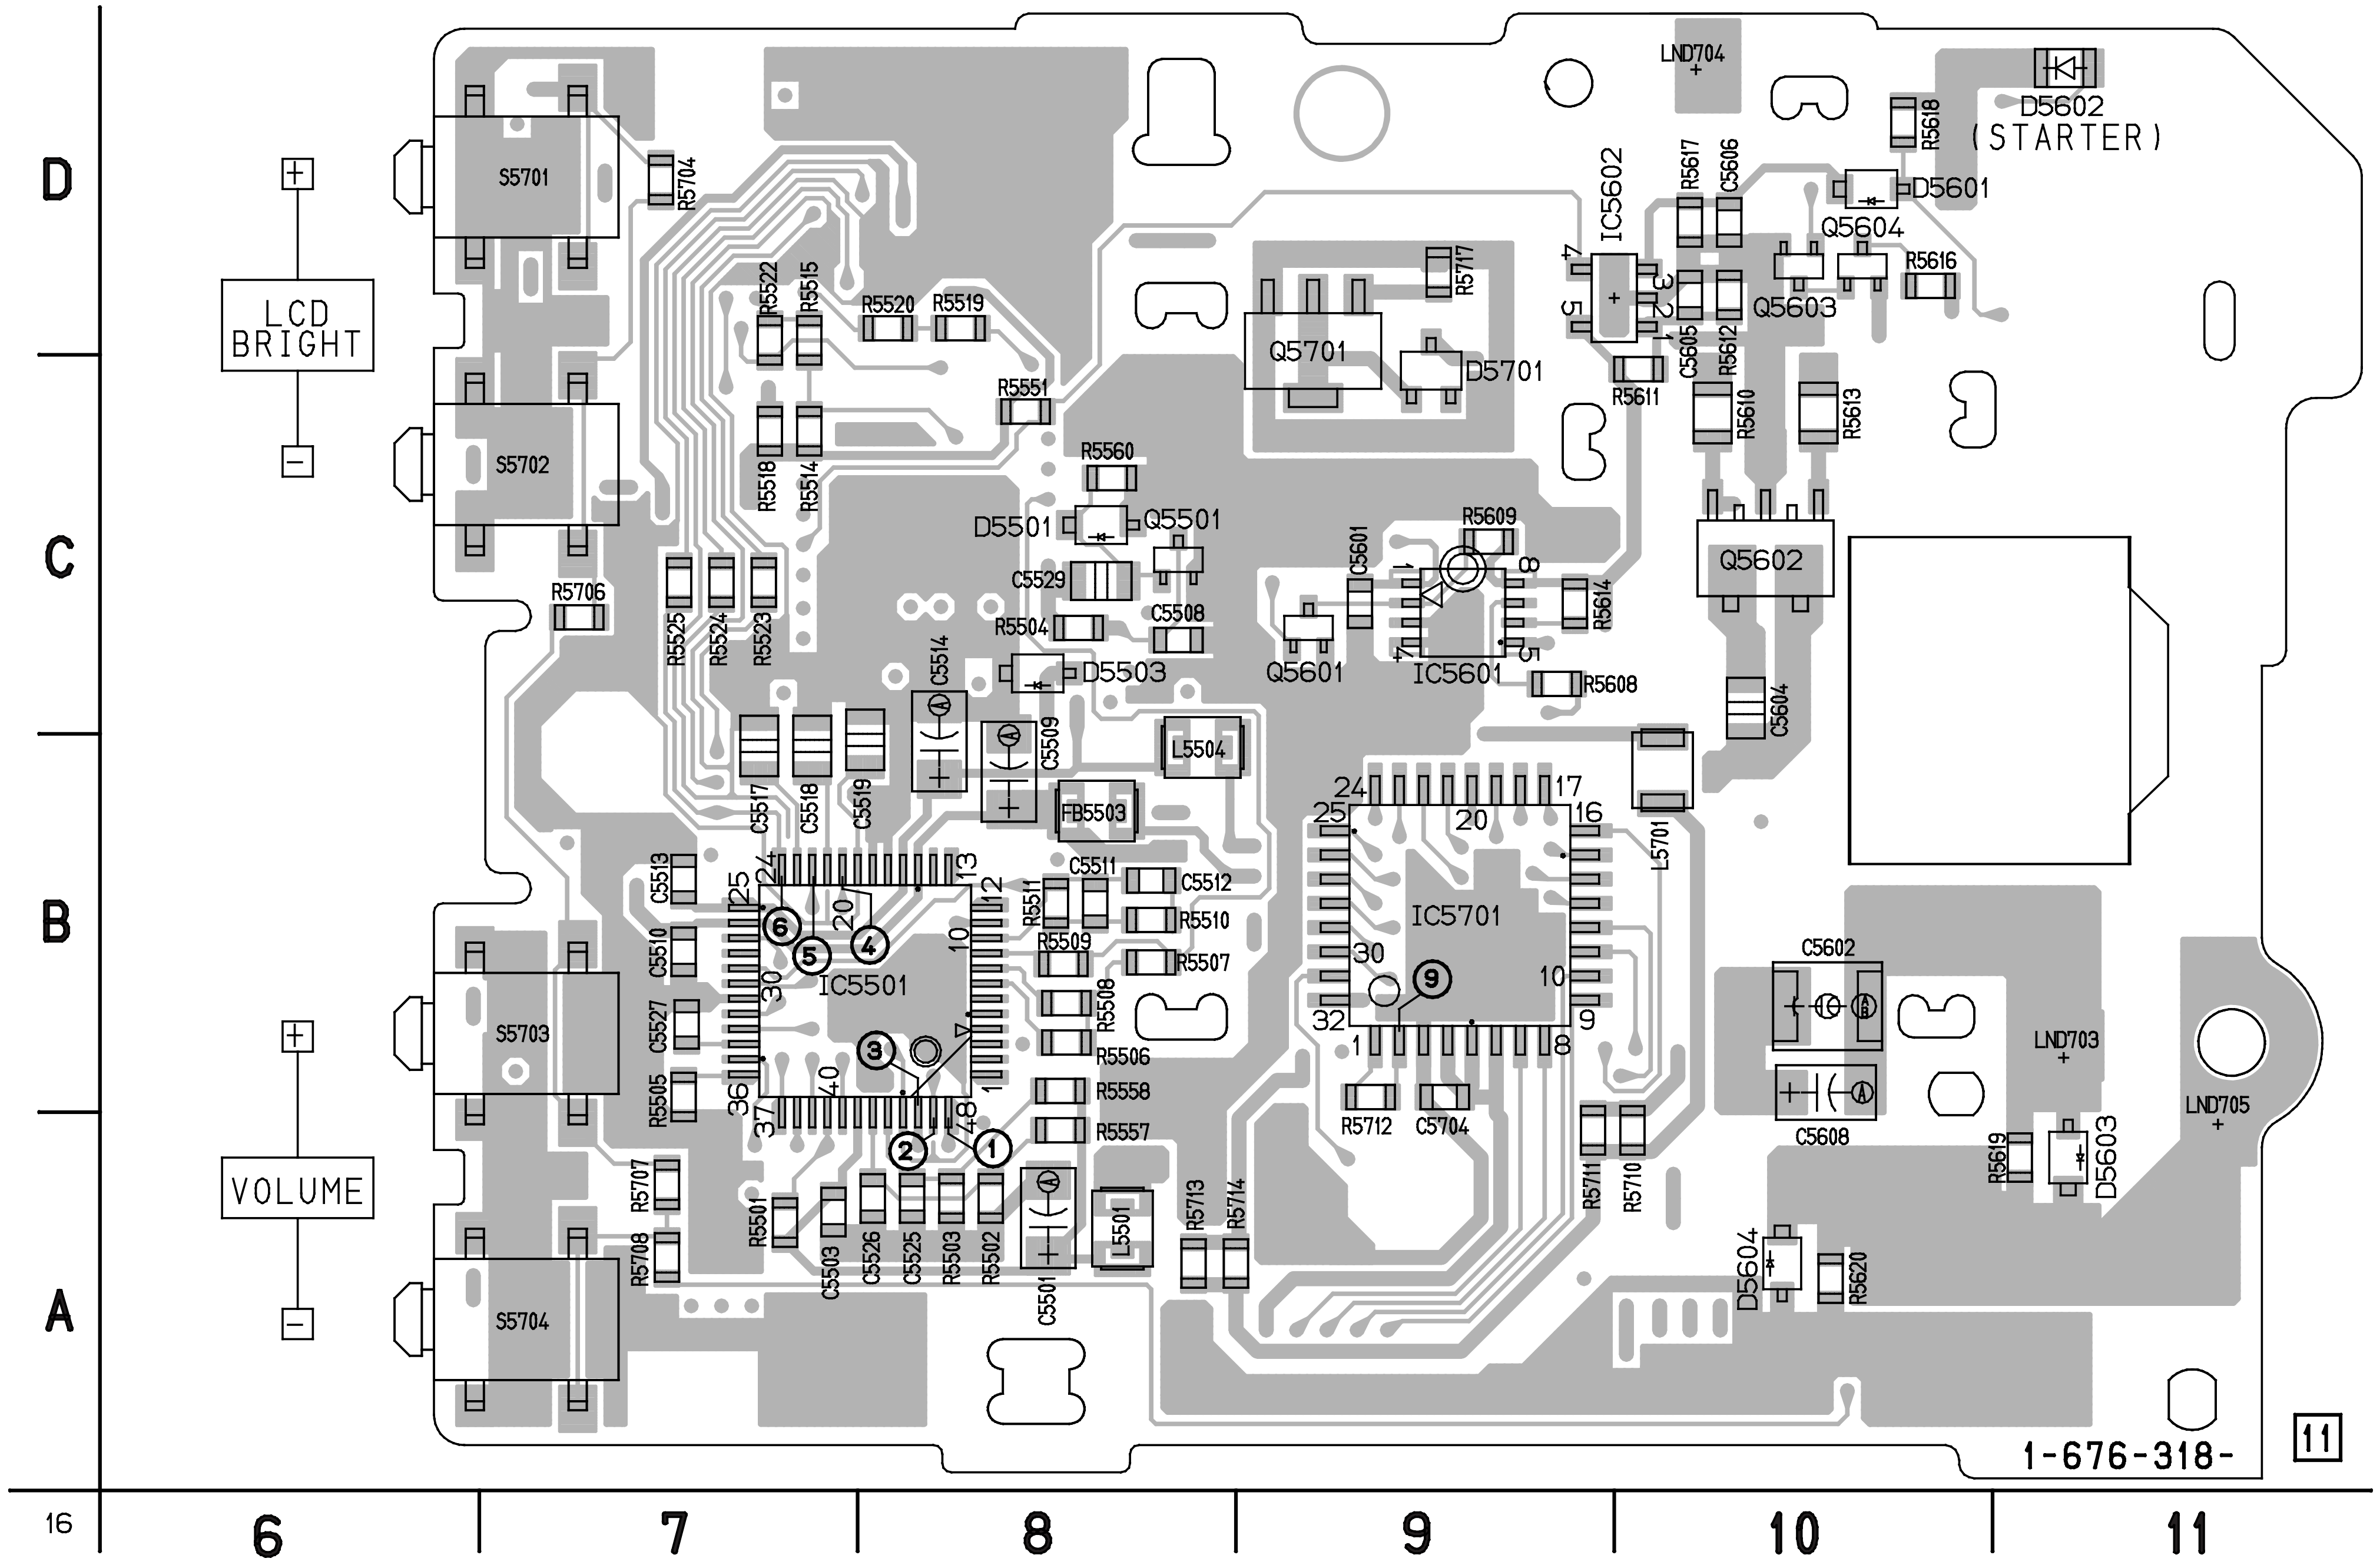
D
C
B
A
16
6
7
8
9
10
11
LCD BRIGHT
VOLUME
S5701
S5702
S5703
S5704
R5704
R5706
R5707
R5708
R5522
R5515
R5520
R5519
R5551
R5560
R5518
R5514
D5501
Q5501
C5529
R5504
C5508
D5503
C5514
C5509
L5504
FB5503
R5525
R5524
R5523
C5517
C5518
C5519
C5513
C5510
C5527
R5505
IC5501
C5511
C5512
R5510
R5507
R5511
R5509
R5508
R5506
R5558
R5557
R5501
C5503
C5526
C5525
R5503
R5502
C5501
L5501
R5713
R5714
Q5701
D5701
R5717
IC5602
R5617
C5606
R5618
D5602 (STARTER)
D5601
Q5604
R5616
Q5603
C5605
R5612
R5611
R5610
R5613
LND704
Q5602
C5601
R5609
IC5601
Q5601
R5614
R5608
C5604
L5701
IC5701
R5712
C5704
R5711
R5710
C5602
C5608
LND703
LND705
R5619
D5603
D5604
R5620
1-676-318-
11

FP-152 FLEXIBLE BOARD

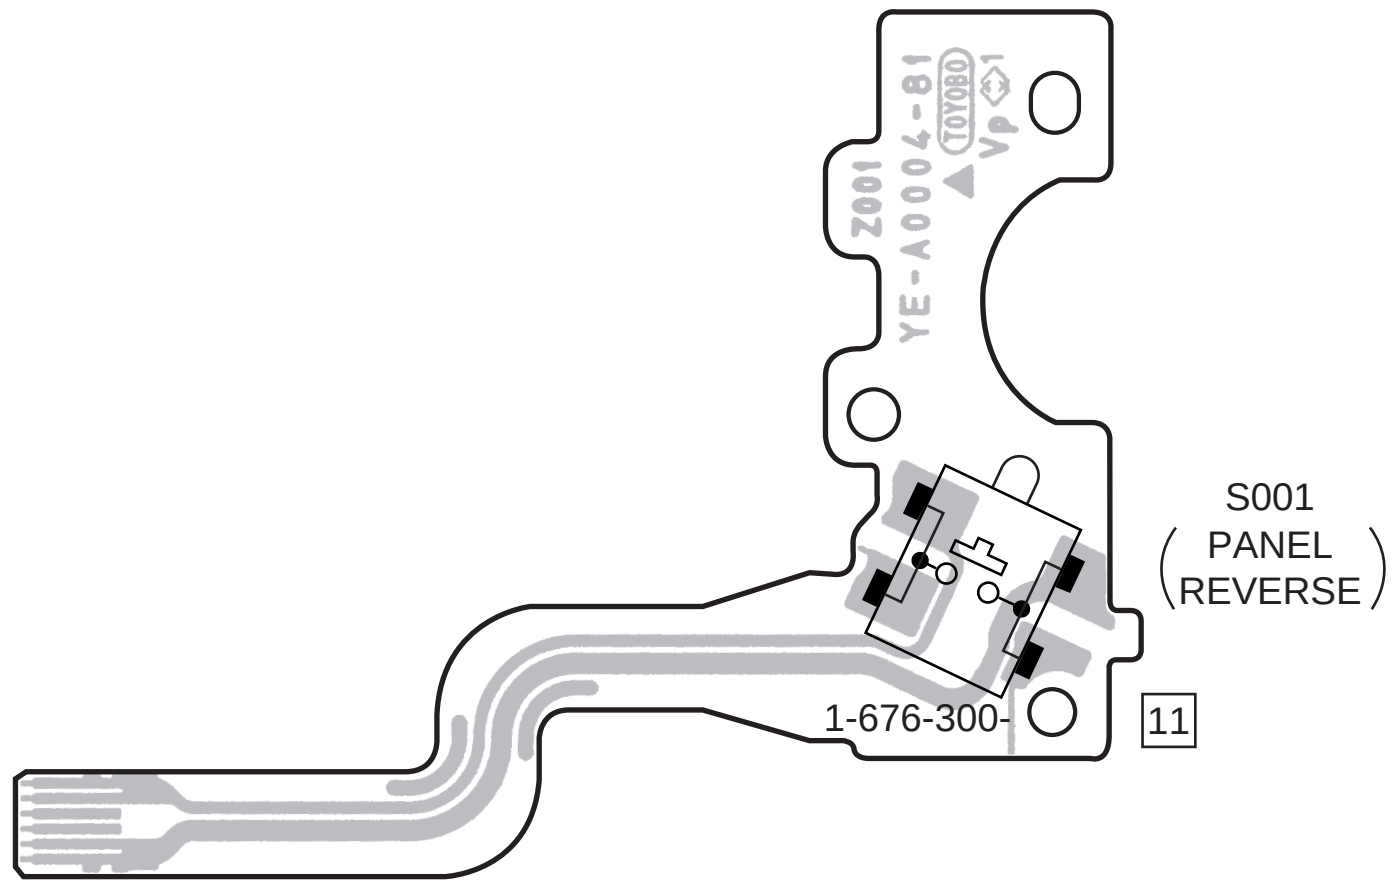
S001
PANEL
REVERSE
1-676-300-
11
YE-A0004-81
Z001

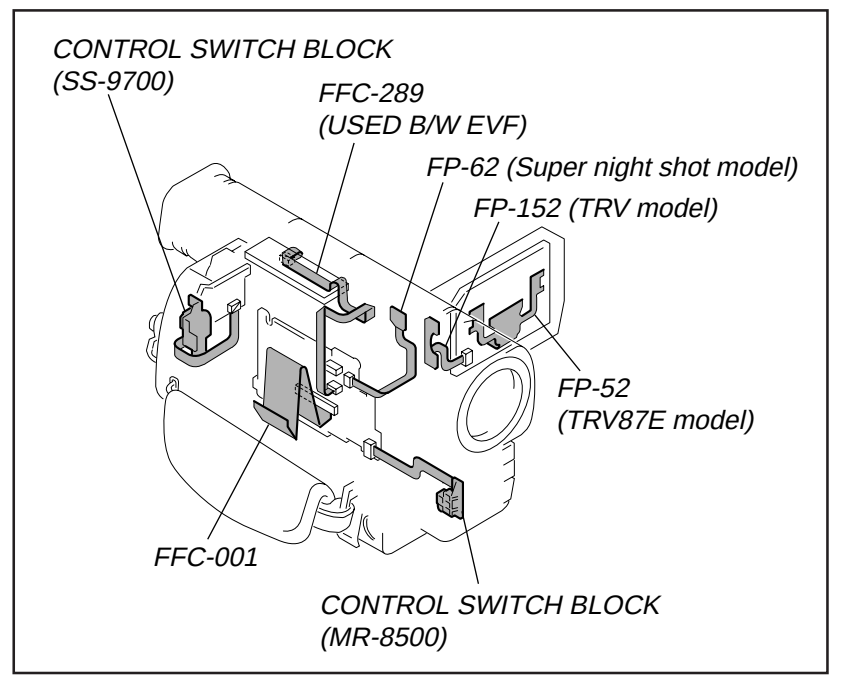
CONTROL SWITCH BLOCK
(SS-9700)
FFC-289
(USED B/W EVF)
FP-62 (Super night shot model)
FP-152 (TRV model)
FP-52
(TRV87E model)
FFC-001
CONTROL SWITCH BLOCK
(MR-8500)

For Schematic Diagram
- Refer to page 4-71 for printed wiring board.
- Refer to page 4-90 for waveforms.

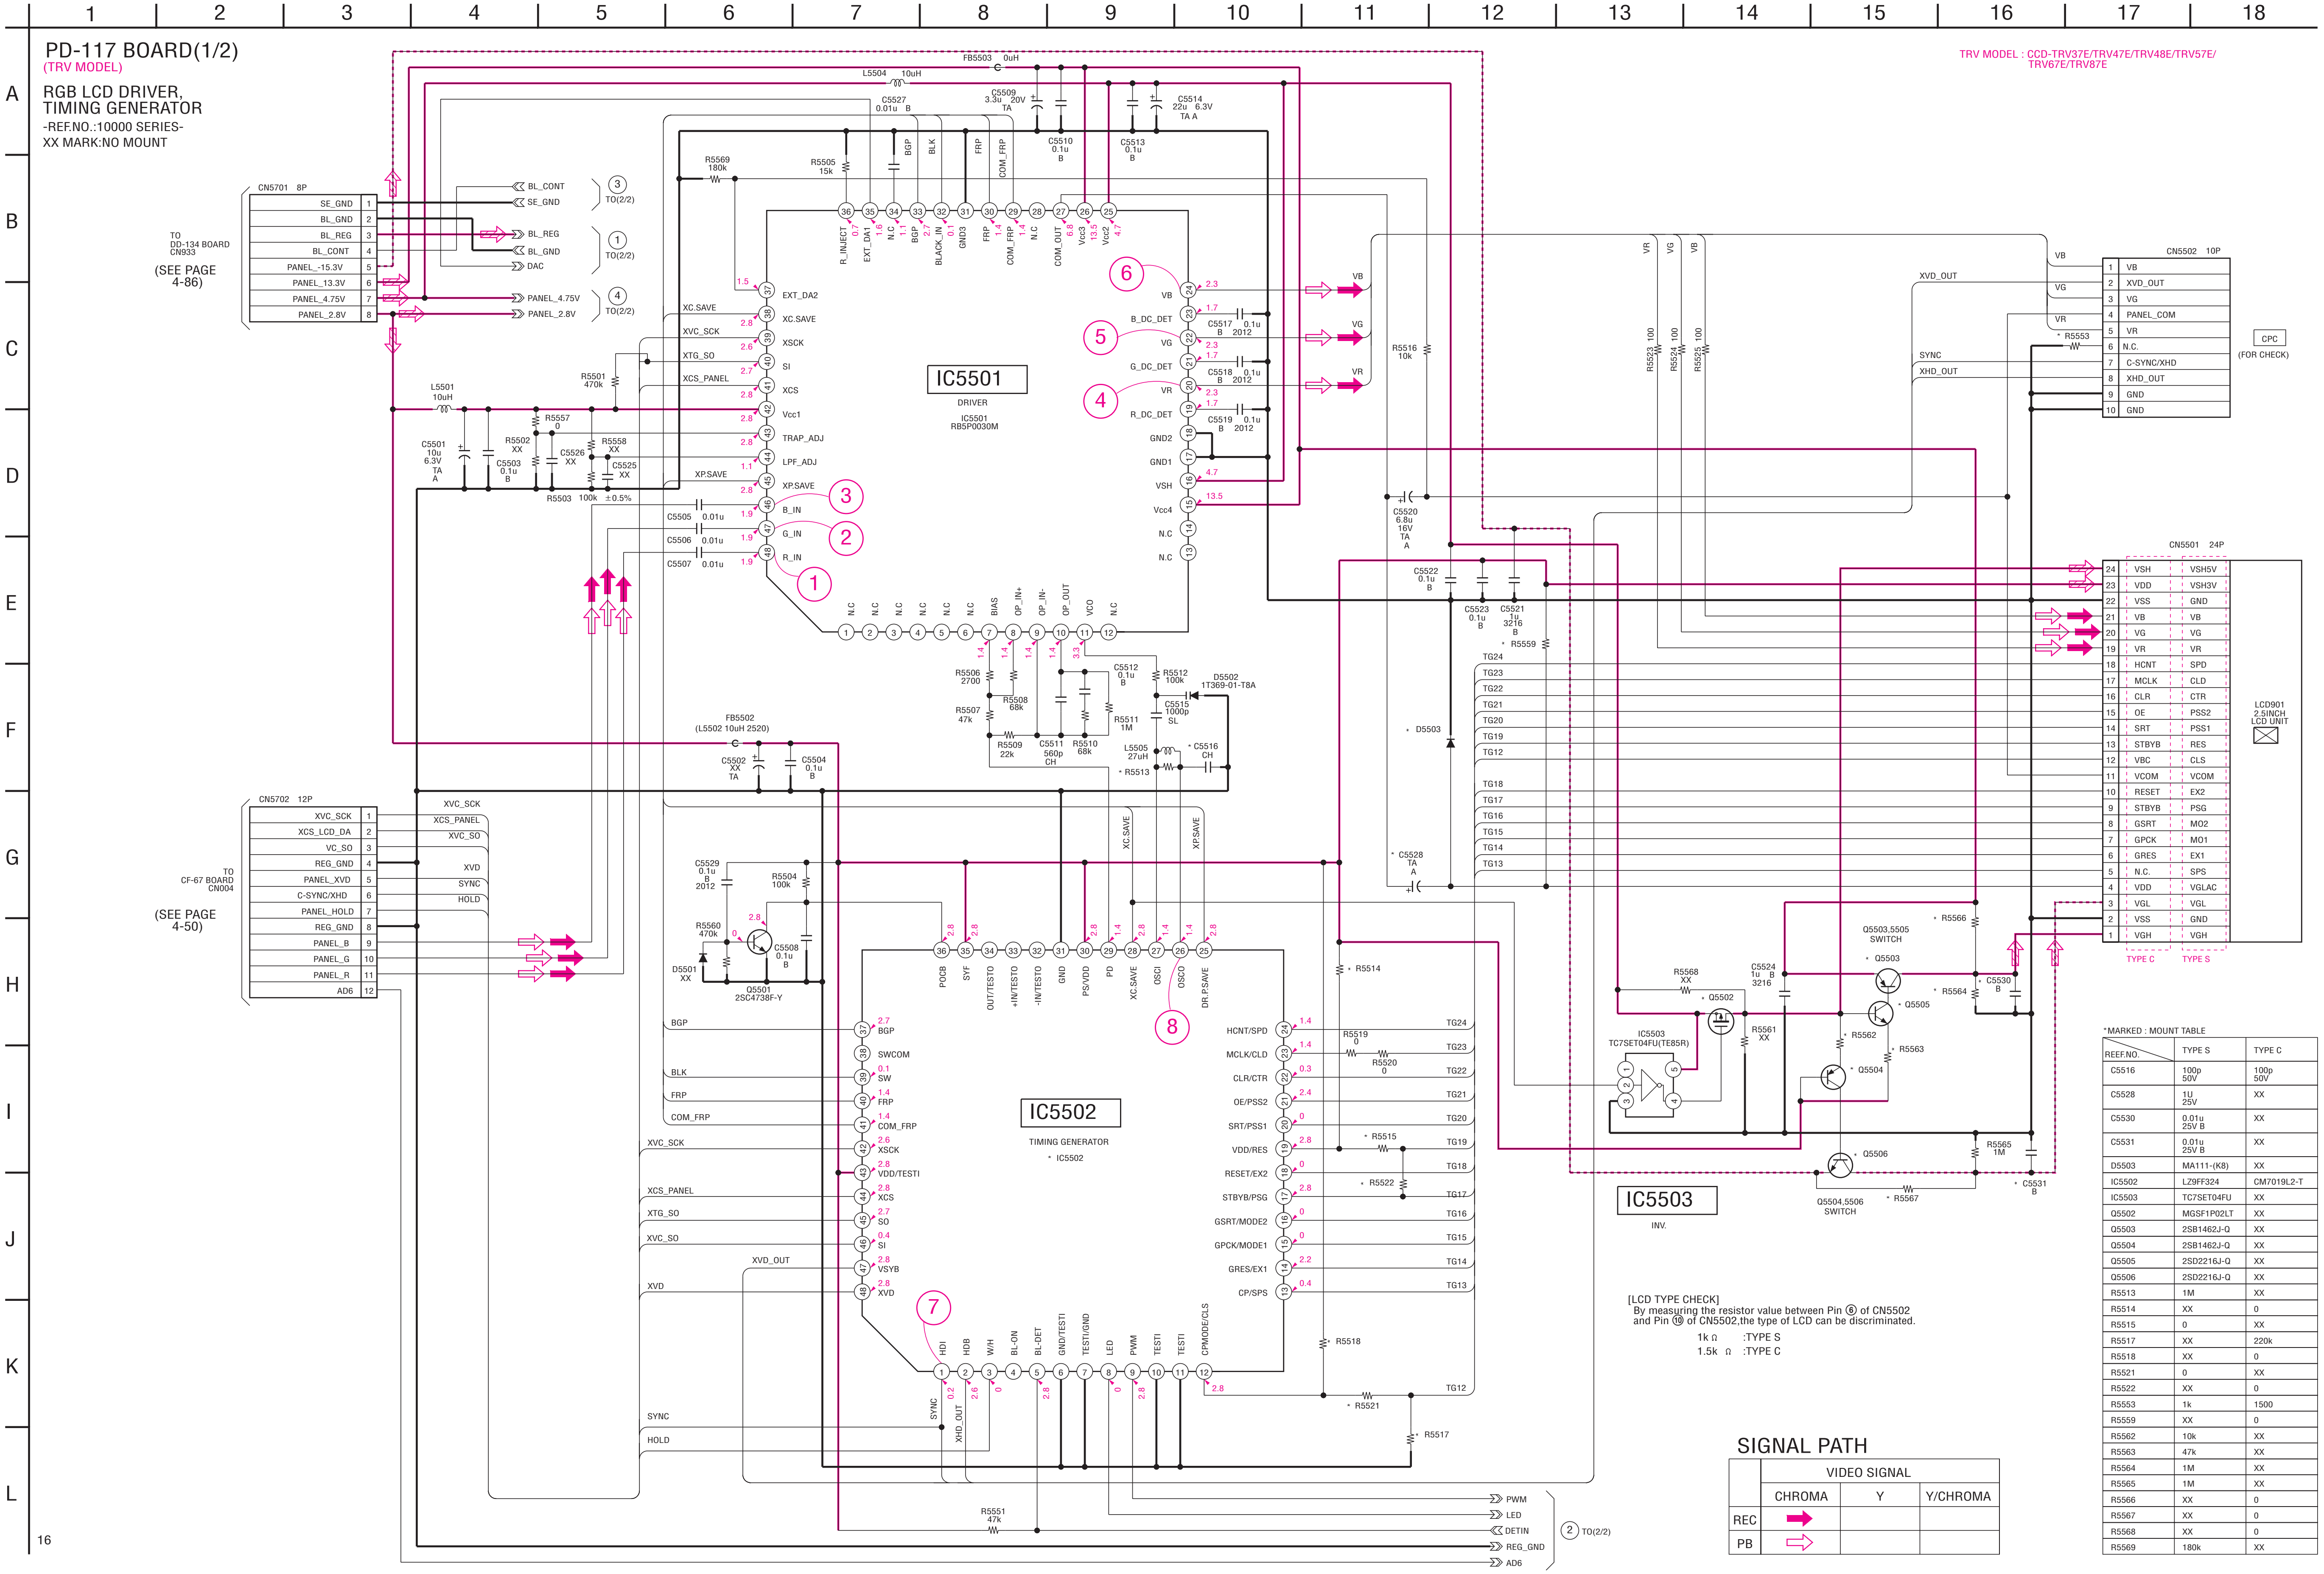
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18
A B C D E F G H I J K L
PD-117 BOARD(1/2)
(TRV MODEL)
RGB LCD DRIVER,
TIMING GENERATOR
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/
TRV67E/TRV87E
CN5701 8P
SE_GND
BL_GND
BL_REG
BL_CONT
PANEL_-15.3V
PANEL_13.3V
PANEL_4.75V
PANEL_2.8V
TO
DD-134 BOARD
CN933
(SEE PAGE
4-86)
BL_CONT
SE_GND
BL_REG
BL_GND
DAC
PANEL_4.75V
PANEL_2.8V
TO(2/2)
IC5501
DRIVER
IC5501
RB5P0030M
IC5502
TIMING GENERATOR
* IC5502
IC5503
INV.
CN5502 10P
VB
XVD_OUT
VG
PANEL_COM
VR
N.C.
C-SYNC/XHD
XHD_OUT
GND
GND
CPC
(FOR CHECK)
CN5501 24P
LCD901
2.5INCH
LCD UNIT
TYPE C
TYPE S
CN5702 12P
XVC_SCK
XCS_LCD_DA
VC_SO
REG_GND
PANEL_XVD
C-SYNC/XHD
PANEL_HOLD
REG_GND
PANEL_B
PANEL_G
PANEL_R
AD6
TO
CF-67 BOARD
CN004
(SEE PAGE
4-50)
Q5501
2SC4738F-Y
Q5503,5505
SWITCH
Q5504,5506
SWITCH
IC5503
TC7SET04FU(TE85R)
PWM
LED
DETIN
REG_GND
AD6
TO(2/2)
16

[LCD TYPE CHECK]
By measuring the resistor value between Pin ⑥ of CN5502 and Pin ⑩ of CN5502,the type of LCD can be discriminated.

1k Ω :TYPE S
1.5k Ω :TYPE C

*MARKED : MOUNT TABLE

REEF.NO.	TYPE S	TYPE C
C5516	100p 50V	100p 50V
C5528	1U 25V	XX
C5530	0.01u 25V B	XX
C5531	0.01u 25V B	XX
D5503	MA111-(K8)	XX
IC5502	LZ9FF324	CM7019L2-T
IC5503	TC7SET04FU	XX
Q5502	MGSF1P02LT	XX
Q5503	2SB1462J-Q	XX
Q5504	2SB1462J-Q	XX
Q5505	2SD2216J-Q	XX
Q5506	2SD2216J-Q	XX
R5513	1M	XX
R5514	XX	0
R5515	0	XX
R5517	XX	220k
R5518	XX	0
R5521	0	XX
R5522	XX	0
R5553	1k	1500
R5559	XX	0
R5562	10k	XX
R5563	47k	XX
R5564	1M	XX
R5565	1M	XX
R5566	XX	0
R5567	XX	0
R5568	XX	0
R5569	180k	XX

SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC	➡		
PB	⇨		

RGB LCD DRIVER, TIMING GENERATOR
PD-117 (1/2)

For Schematic Diagram
- Refer to page 4-71 for printed wiring board.
- Refer to page 4-90 for waveform.

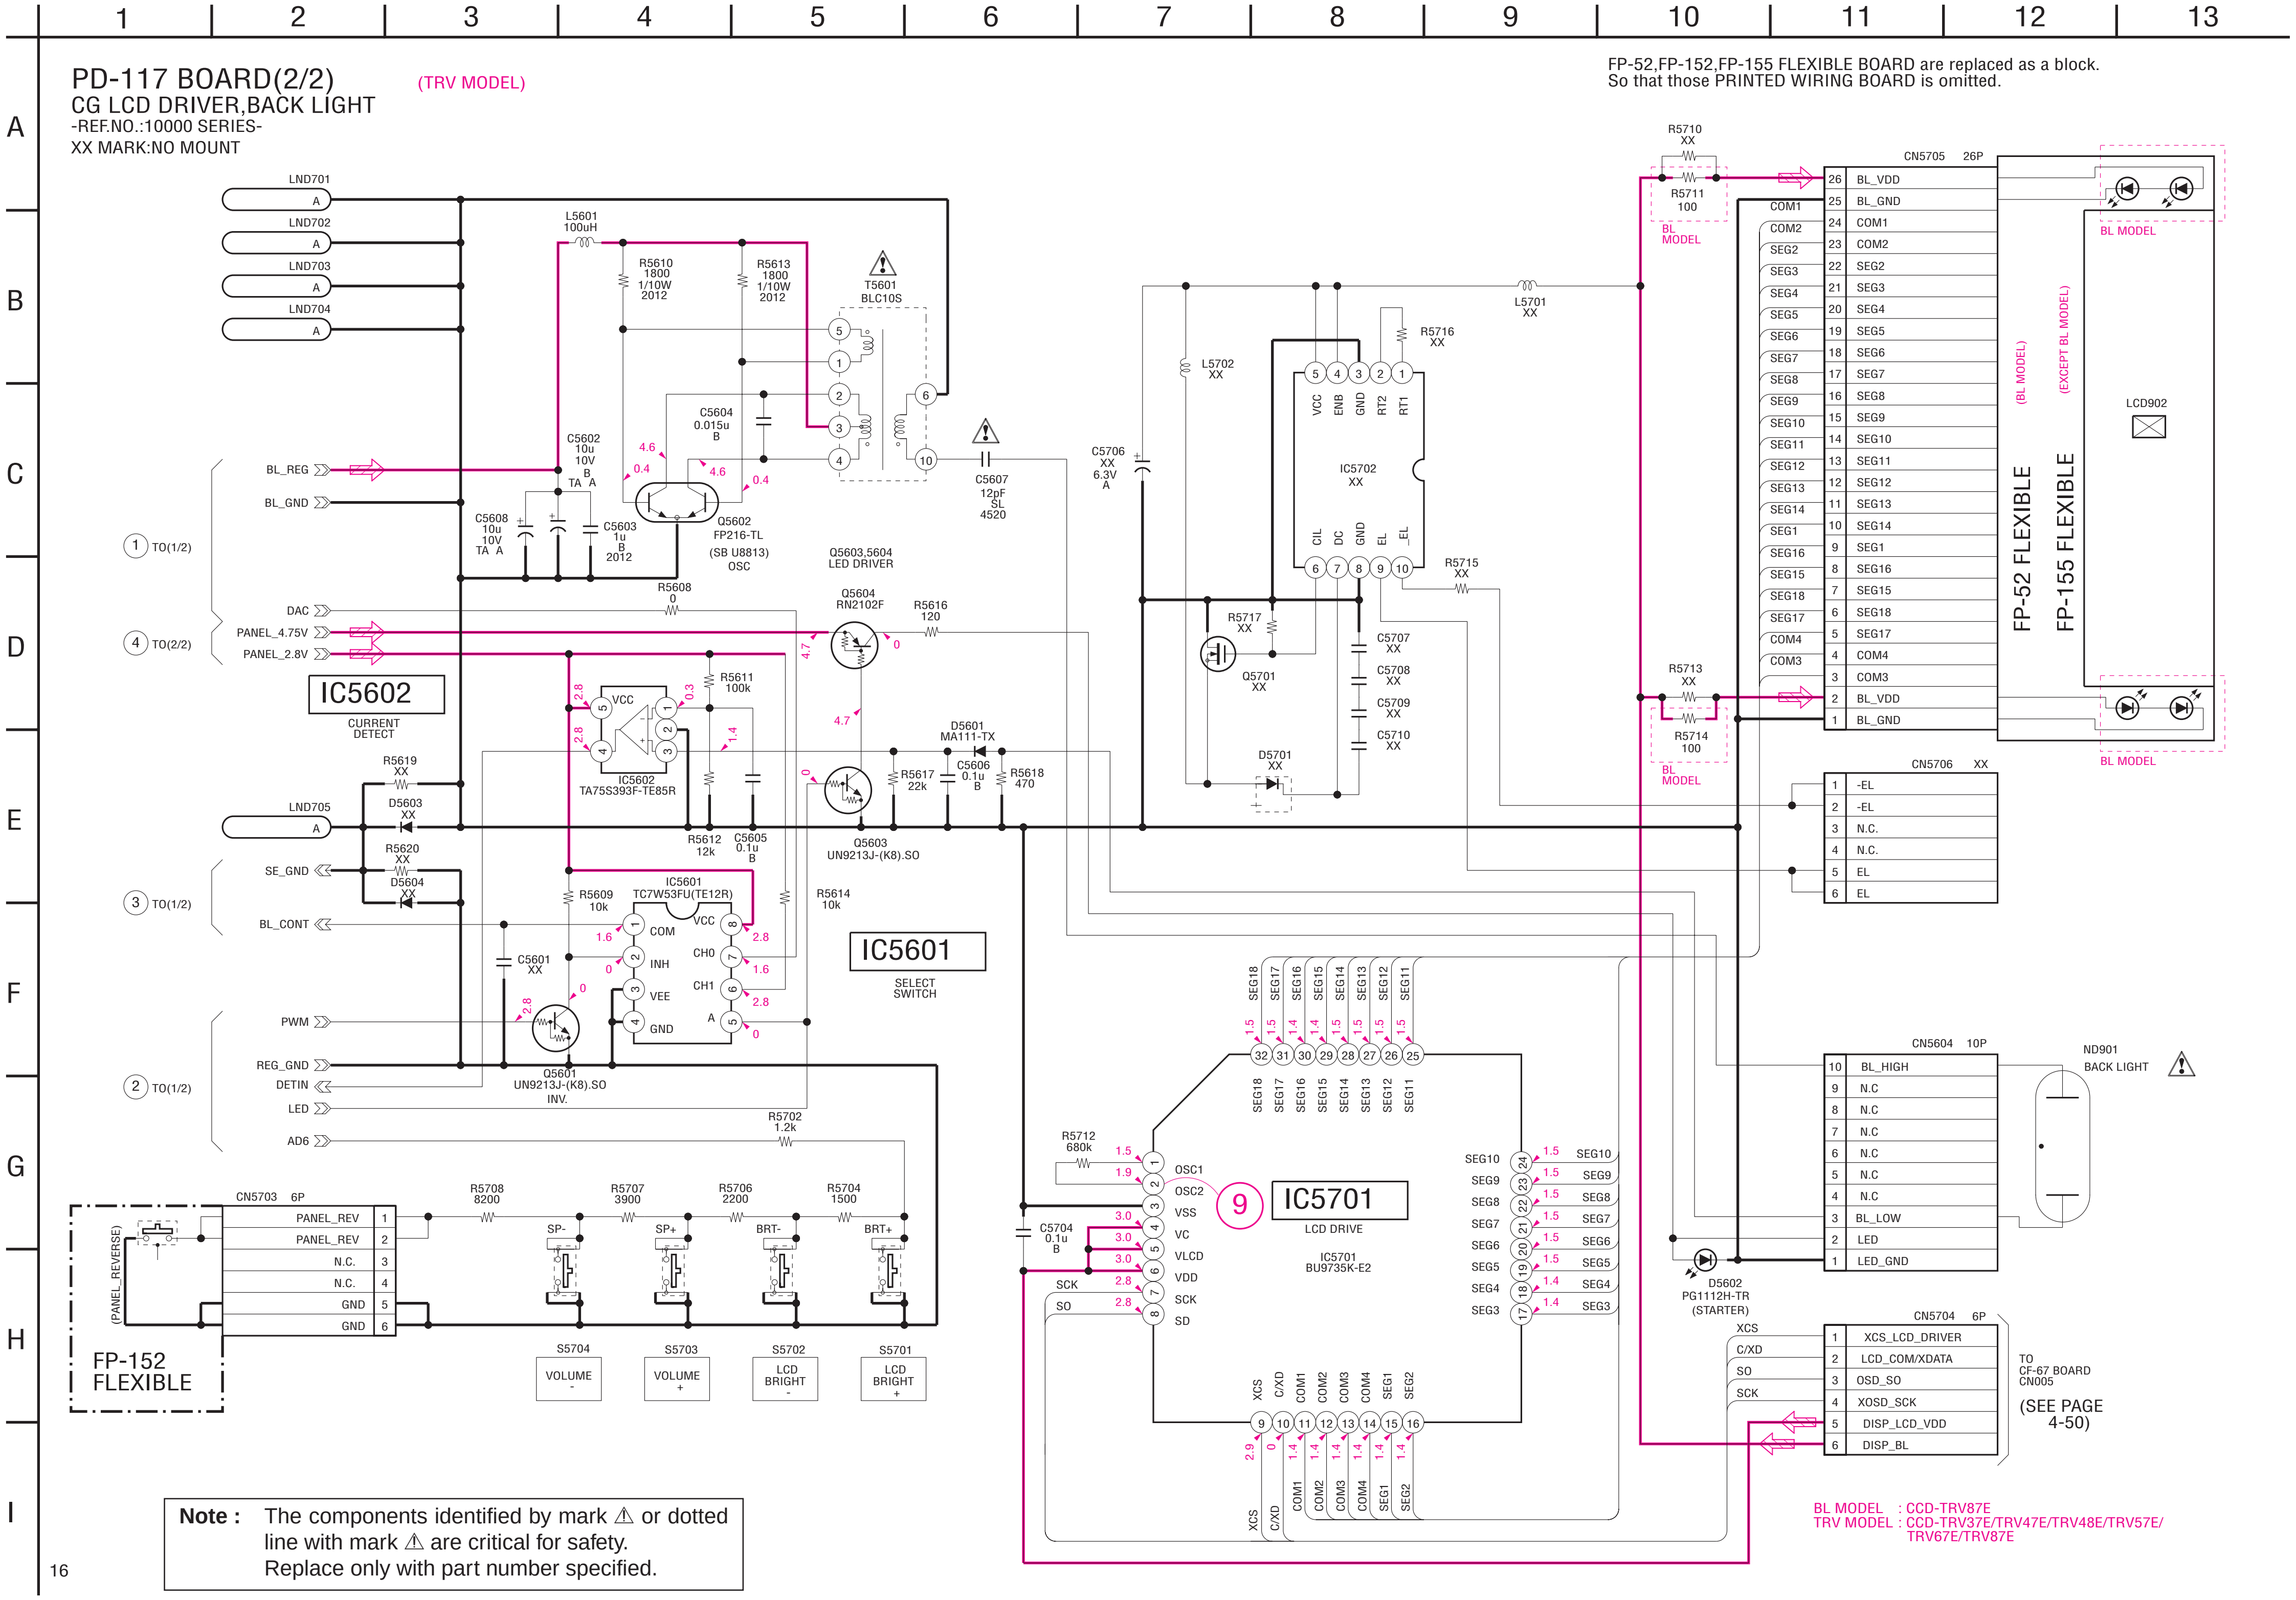
1 2 3 4 5 6 7 8 9 10 11 12 13
A B C D E F G H I
PD-117 BOARD(2/2)
CG LCD DRIVER,BACK LIGHT
-REF.NO.:10000 SERIES-
XX MARK:NO MOUNT
(TRV MODEL)
FP-52,FP-152,FP-155 FLEXIBLE BOARD are replaced as a block.
So that those PRINTED WIRING BOARD is omitted.
LND701
LND702
LND703
LND704
LND705
L5601 100uH
R5610 1800 1/10W 2012
R5613 1800 1/10W 2012
T5601 BLC10S
C5604 0.015u B
C5602 10u 10V B TA A
C5608 10u 10V TA A
C5603 1u B 2012
Q5602 FP216-TL (SB U8813) OSC
C5607 12pF SL 4520
Q5603,5604 LED DRIVER
Q5604 RN2102F
R5616 120
R5608 0
R5611 100k
IC5602
CURRENT DETECT
IC5602 TA75S393F-TE85R
D5601 MA111-TX
R5617 22k
C5606 0.1u B
R5618 470
R5612 12k
C5605 0.1u B
Q5603 UN9213J-(K8).SO
R5619 XX
D5603 XX
R5620 XX
D5604 XX
R5609 10k
IC5601 TC7W53FU(TE12R)
R5614 10k
IC5601
SELECT SWITCH
C5601 XX
Q5601 UN9213J-(K8).SO INV.
R5702 1.2k
BL_REG
BL_GND
TO(1/2)
DAC
PANEL_4.75V
PANEL_2.8V
TO(2/2)
SE_GND
BL_CONT
PWM
REG_GND
DETIN
LED
AD6
CN5703 6P
PANEL_REV
PANEL_REV
N.C.
N.C.
GND
GND
(PANEL_REVERSE)
FP-152 FLEXIBLE
R5708 8200
R5707 3900
R5706 2200
R5704 1500
SP-
SP+
BRT-
BRT+
S5704 VOLUME -
S5703 VOLUME +
S5702 LCD BRIGHT -
S5701 LCD BRIGHT +
L5702 XX
C5706 XX 6.3V A
IC5702 XX
VCC ENB GND RT2 RT1
CIL DC GND EL EL
R5716 XX
R5715 XX
R5717 XX
Q5701 XX
C5707 XX
C5708 XX
C5709 XX
C5710 XX
D5701 XX
L5701 XX
R5712 680k
C5704 0.1u B
IC5701
LCD DRIVE
IC5701 BU9735K-E2
OSC1 OSC2 VSS VC VLCD VDD SCK SD
SEG18 SEG17 SEG16 SEG15 SEG14 SEG13 SEG12 SEG11
SEG10 SEG9 SEG8 SEG7 SEG6 SEG5 SEG4 SEG3
XCS C/XD COM1 COM2 COM3 COM4 SEG1 SEG2
SCK
SO
R5710 XX
R5711 100
R5713 XX
R5714 100
BL MODEL
CN5705 26P
BL_VDD BL_GND COM1 COM2 SEG2 SEG3 SEG4 SEG5 SEG6 SEG7 SEG8 SEG9 SEG10 SEG11 SEG12 SEG13 SEG14 SEG1 SEG16 SEG15 SEG18 SEG17 COM4 COM3 BL_VDD BL_GND
FP-52 FLEXIBLE
(BL MODEL)
FP-155 FLEXIBLE
(EXCEPT BL MODEL)
LCD902
CN5706 XX
-EL -EL N.C. N.C. EL EL
CN5604 10P
BL_HIGH N.C. N.C. N.C. N.C. N.C. N.C. BL_LOW LED LED_GND
ND901
BACK LIGHT
D5602 PG1112H-TR (STARTER)
CN5704 6P
XCS_LCD_DRIVER LCD_COM/XDATA OSD_SO XOSD_SCK DISP_LCD_VDD DISP_BL
XCS C/XD SO SCK
TO CF-67 BOARD CN005
(SEE PAGE 4-50)
16

BL MODEL : CCD-TRV87E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

VF-129 (B/W EVF) PRINTED WIRING BOARD

— Ref. No. VF-129 Board; 3,000 Series —

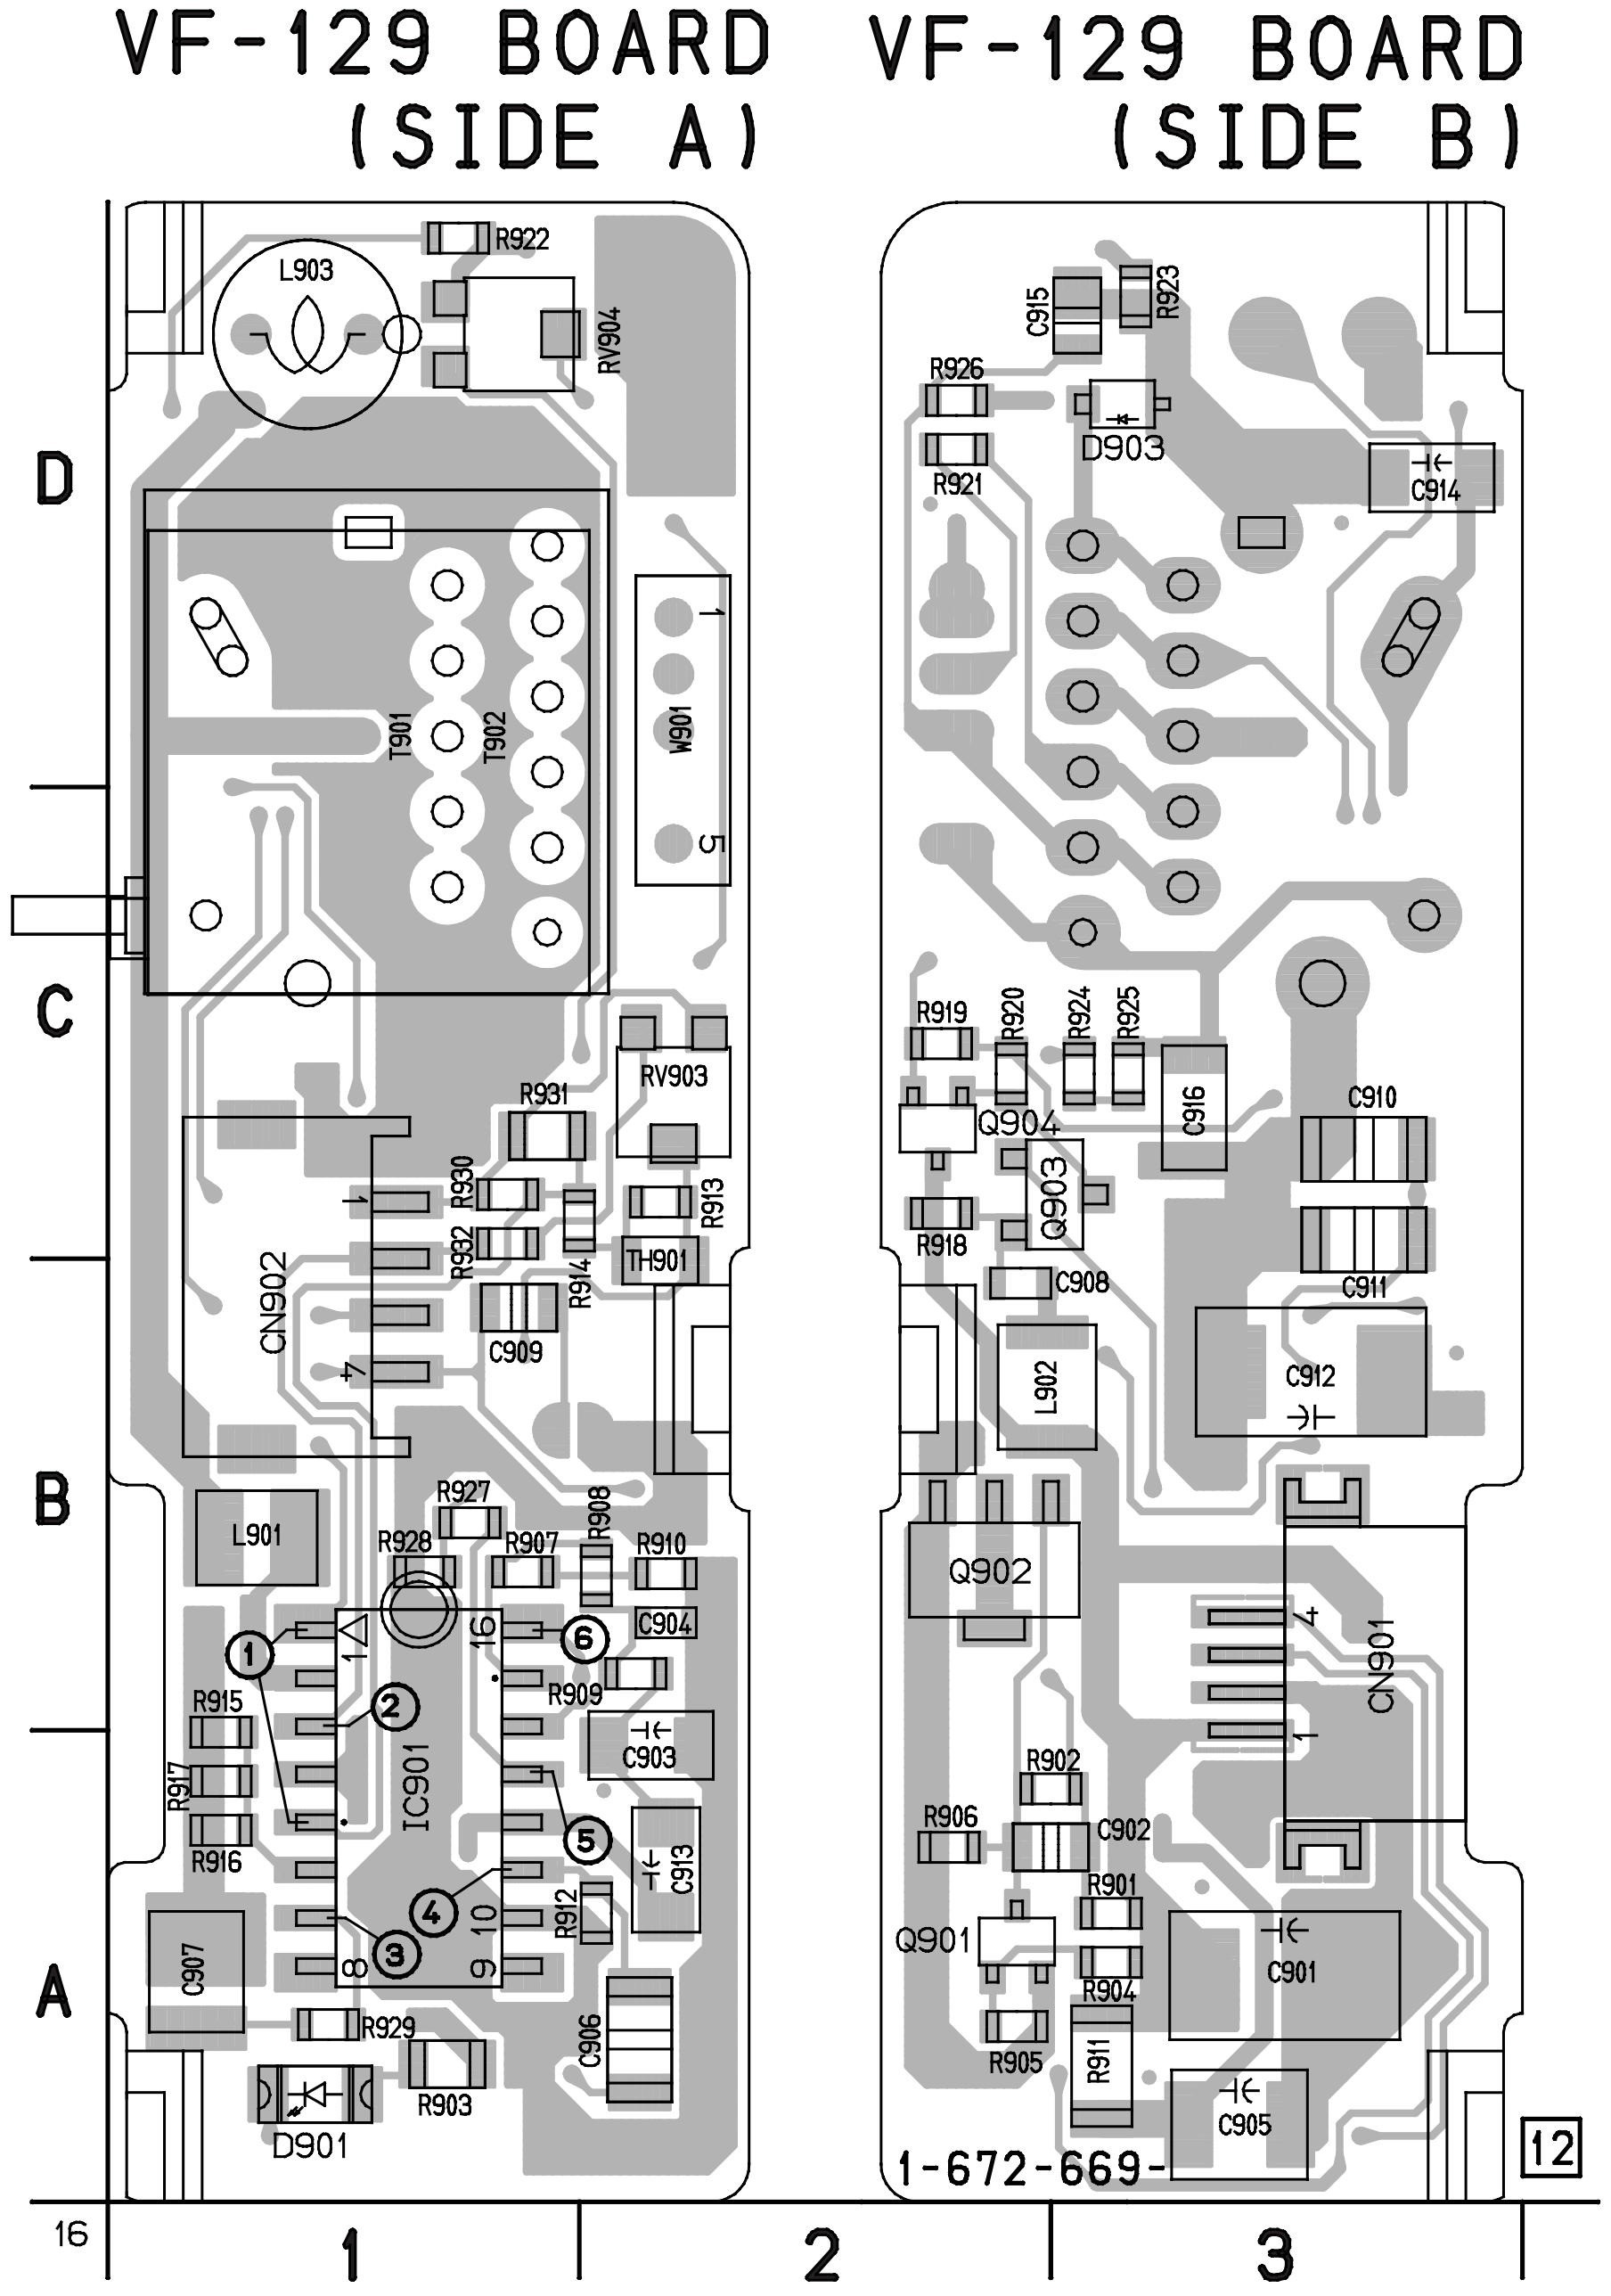
VF-129 BOARD (SIDE A)
VF-129 BOARD (SIDE B)
D
C
B
A
1
2
3
16
L903
R922
RV904
T901
T902
W901
1
5
RV903
R931
R930
R932
R914
R913
TH901
C909
CN902
1
7
L901
R927
R928
R907
R908
R910
C904
R909
C903
R915
R917
R916
IC901
1
8
9
10
16
R912
C913
C907
R929
C906
D901
R903
C915
R923
R926
R921
D903
C914
R919
R920
R924
R925
C916
C910
Q904
Q903
R918
C908
C911
L902
C912
Q902
CN901
4
1
R902
R906
C902
R901
Q901
R904
C901
R905
R911
C905
1-672-669-
12

For printed wiring board

- Refer to page 4-95 for location.
- Chip parts

Transistor



There are few cases that the part printed on this diagram isn't mounted in this model.

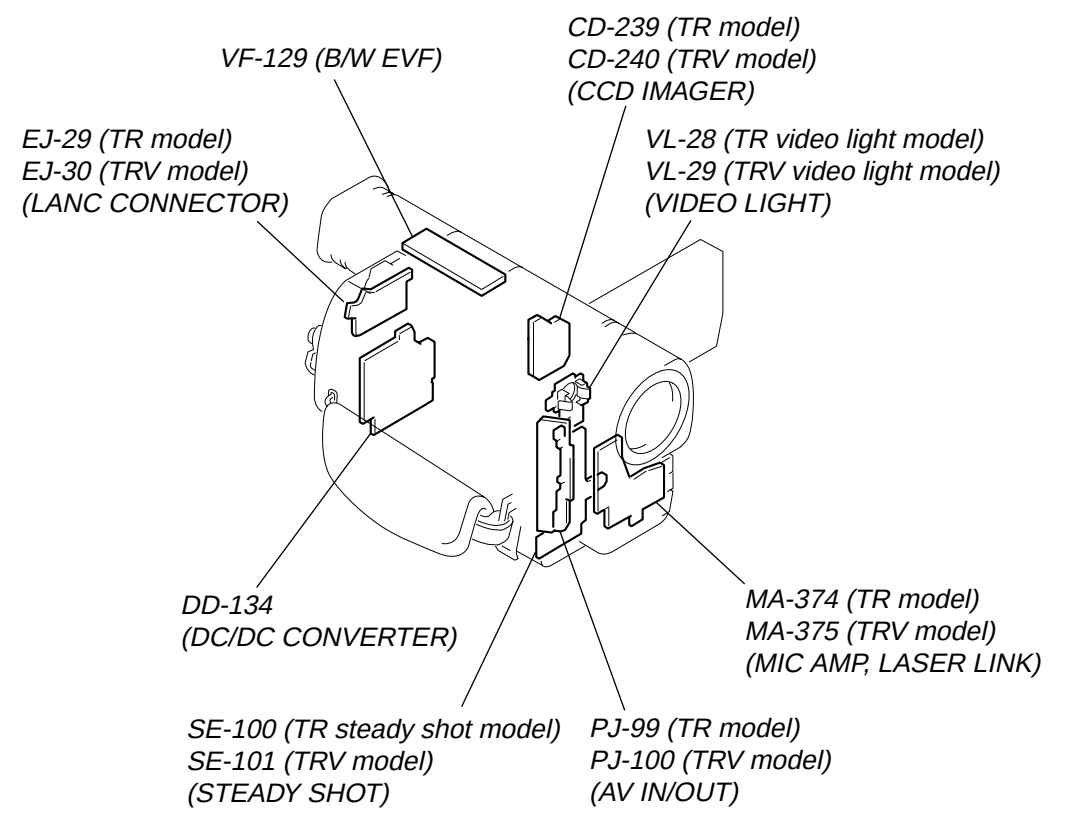
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

For Schematic Diagram

- Refer to page 4-90 for waveforms.

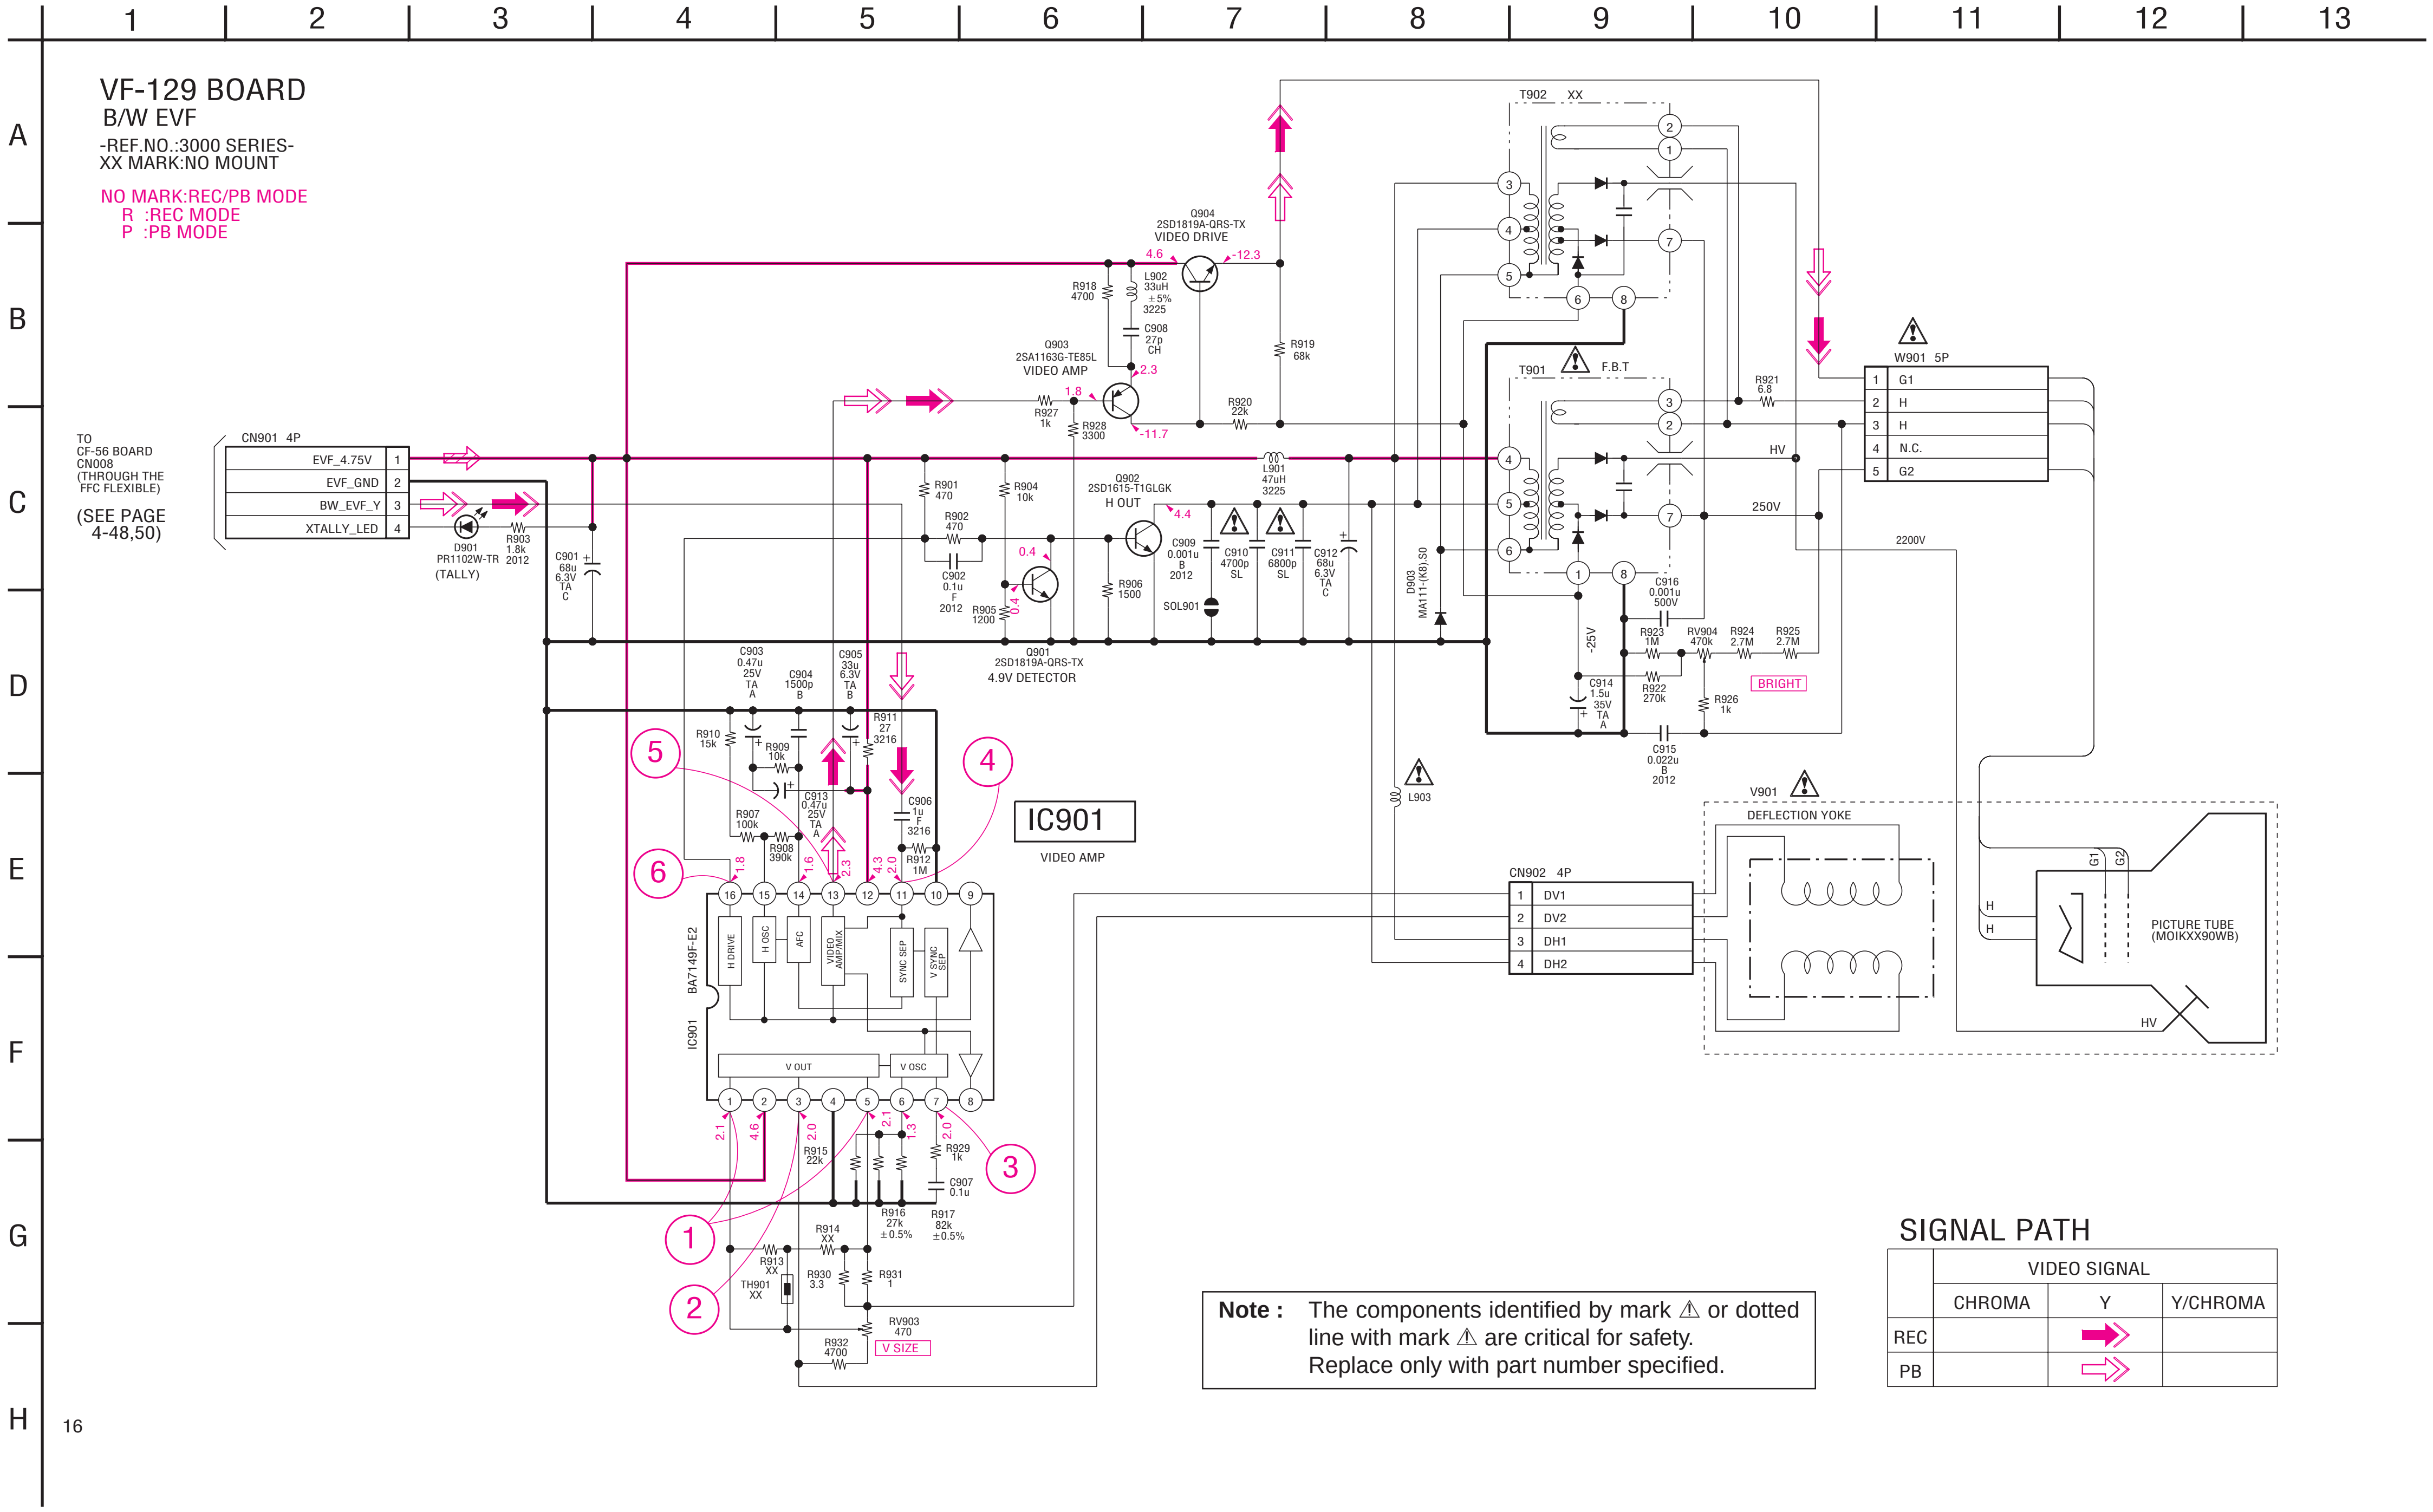
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
G
H
VF-129 BOARD
B/W EVF
-REF.NO.:3000 SERIES-
XX MARK:NO MOUNT
NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
TO
CF-56 BOARD
CN008
(THROUGH THE
FFC FLEXIBLE)
(SEE PAGE
4-48,50)
CN901 4P
EVF_4.75V
EVF_GND
BW_EVF_Y
XTALLY_LED
D901
PR1102W-TR
(TALLY)
R903
1.8k
2012
C901
68u
6.3V
TA
C
Q904
2SD1819A-QRS-TX
VIDEO DRIVE
4.6
-12.3
R918
4700
L902
33uH
±5%
3225
C908
27p
CH
2.3
Q903
2SA1163G-TE85L
VIDEO AMP
1.8
R927
1k
R928
3300
-11.7
R919
68k
R920
22k
R901
470
R904
10k
R902
470
C902
0.1u
F
2012
R905
1200
0.4
Q902
2SD1615-T1GLGK
H OUT
4.4
C909
0.001u
B
2012
C910
4700p
SL
C911
6800p
SL
C912
68u
6.3V
TA
C
L901
47uH
3225
R906
1500
SOL901
Q901
2SD1819A-QRS-TX
4.9V DETECTOR
D903
MA111-(K8).SO
T902 XX
T901
F.B.T
W901 5P
G1
H
H
N.C.
G2
R921
6.8
HV
250V
2200V
C916
0.001u
500V
-25V
R923
1M
RV904
470k
R924
2.7M
R925
2.7M
BRIGHT
C914
1.5u
35V
TA
A
R922
270k
R926
1k
C915
0.022u
B
2012
L903
V901
DEFLECTION YOKE
CN902 4P
DV1
DV2
DH1
DH2
G1
G2
H
H
HV
PICTURE TUBE
(M01KXX90WB)
C903
0.47u
25V
TA
A
C904
1500p
B
C905
33u
6.3V
TA
B
R911
27
3216
R910
15k
R909
10k
C913
0.47u
25V
TA
A
C906
1u
F
3216
R907
100k
R908
390k
R912
1M
1.8
1.6
2.3
4.3
2.0
IC901
VIDEO AMP
BA7149F-E2
IC901
H DRIVE
H OSC
AFC
VIDEO AMP/MIX
SYNC SEP
V SYNC SEP
V OUT
V OSC
16
15
14
13
12
11
10
9
1
2
3
4
5
6
7
8
2.1
4.6
2.0
2.1
1.3
2.0
R915
22k
R929
1k
C907
0.1u
R916
27k
±0.5%
R917
82k
±0.5%
R914
XX
R913
XX
TH901
XX
R930
3.3
R931
1
RV903
470
V SIZE
R932
4700
①
②
③
④
⑤
⑥
16

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC		➡	
PB		⇨	

DD-134 (DC/DC CONVERTER) PRINTED WIRING BOARD

— Ref. No. DD-134 Board; 2,000 Series —

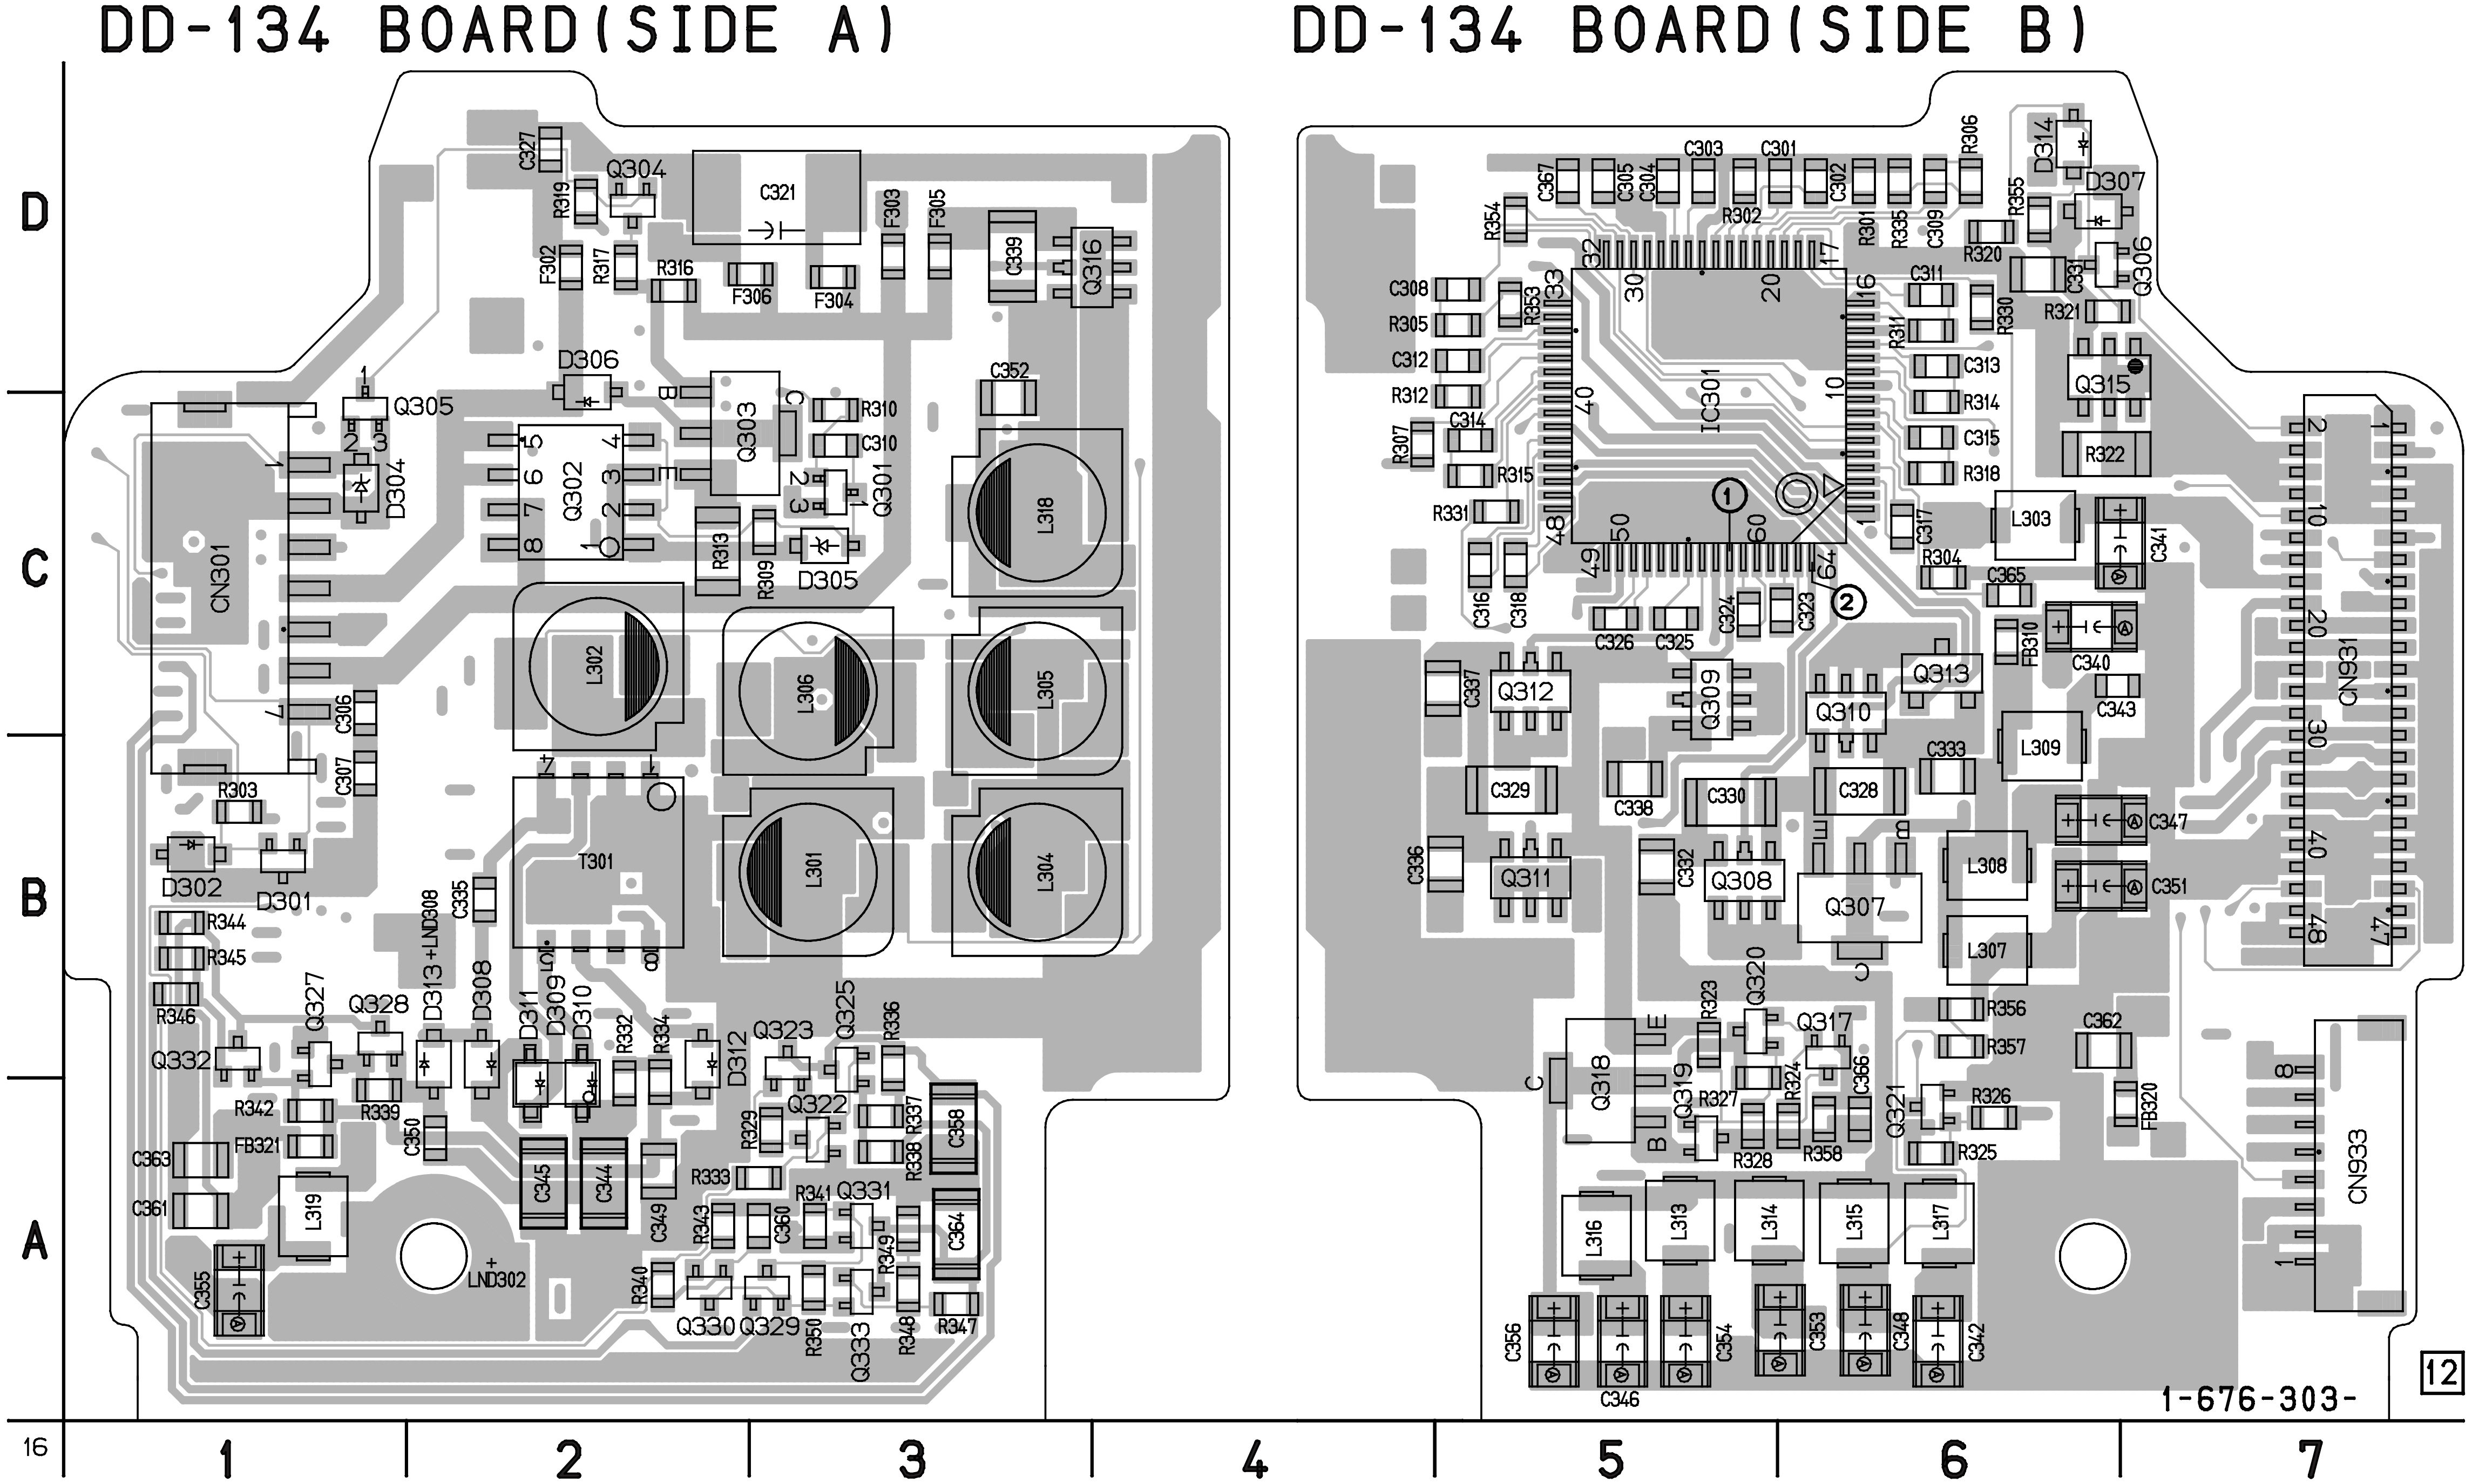
DD-134 BOARD(SIDE A)
DD-134 BOARD(SIDE B)
D
C
B
A
1
2
3
4
5
6
7
16
CN301
C327
Q304
R319
C321
F303
F305
C339
Q316
F302
R317
R316
F306
F304
D306
Q305
D304
Q302
Q303
R310
C310
Q301
C352
L318
R313
R309
D305
L302
L306
L305
R303
C306
C307
T301
L301
L304
D302
D301
R344
R345
R346
C335
D313 +LND308
D308
D311
D309
D310
Q327
Q328
Q332
R342
R339
FB321
C363
C361
L319
C355
C350
R332
R334
D312
Q323
Q325
R336
Q322
R329
R337
C358
R338
C345
C344
C349
R333
R341
Q331
R343
C360
C364
R349
LND302
R340
Q330
Q329
R350
Q333
R348
R347
C303
C301
R306
D314
C367
C305
C304
C302
R355
D307
R354
R302
R301
R335
C309
R320
Q306
C308
R353
C311
C331
R305
R311
R330
R321
C312
C313
R312
R314
Q315
IC301
C314
C315
R307
R315
R318
R322
R331
C317
L303
C341
R304
C365
C316
C318
C326
C325
C324
C323
FB310
C340
C337
Q312
Q309
Q313
Q310
C343
CN931
C333
L309
C329
C338
C330
C328
C347
C336
Q311
C332
Q308
Q307
L308
C351
L307
R323
Q320
Q317
R356
R357
C362
Q318
Q319
R327
R324
C366
Q321
R326
FB320
R328
R358
R325
CN933
L316
L313
L314
L315
L317
C356
C346
C354
C353
C348
C342
1-676-303-
12

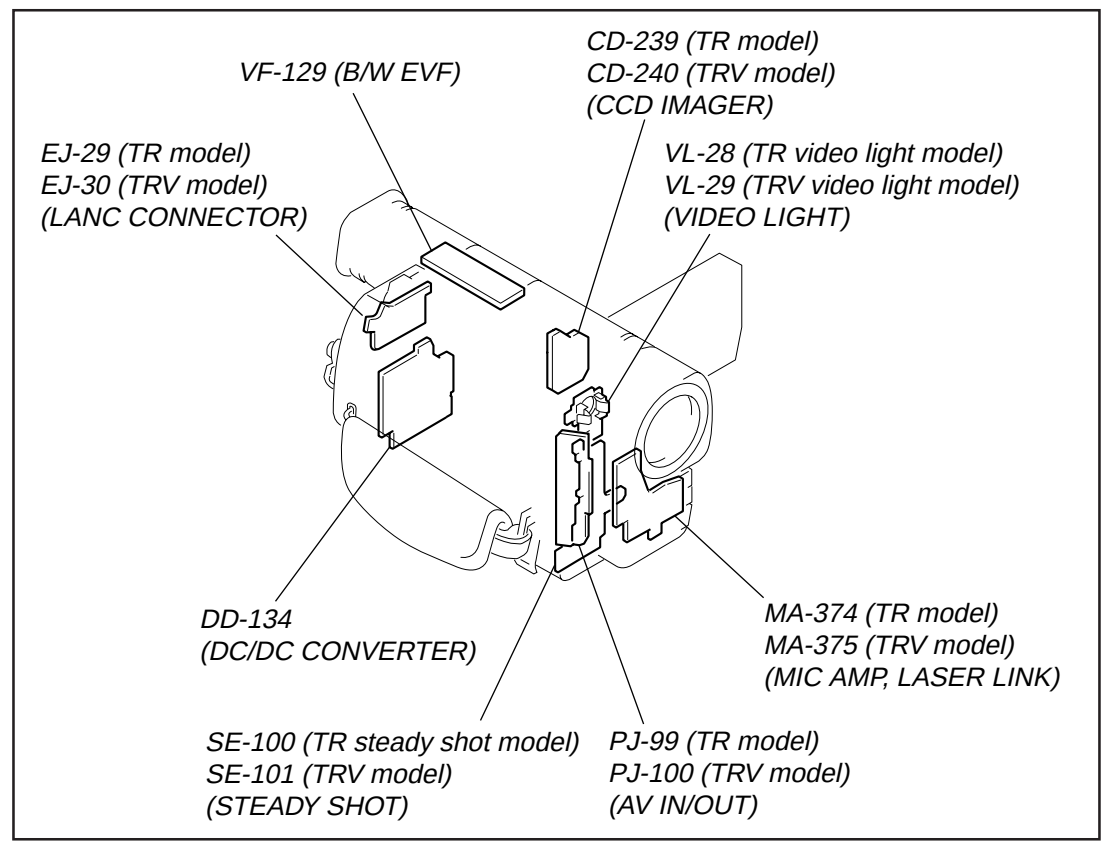
VF-129 (B/W EVF)
CD-239 (TR model)
CD-240 (TRV model)
(CCD IMAGER)
EJ-29 (TR model)
EJ-30 (TRV model)
(LANC CONNECTOR)
VL-28 (TR video light model)
VL-29 (TRV video light model)
(VIDEO LIGHT)
DD-134
(DC/DC CONVERTER)
MA-374 (TR model)
MA-375 (TRV model)
(MIC AMP, LASER LINK)
SE-100 (TR steady shot model)
SE-101 (TRV model)
(STEADY SHOT)
PJ-99 (TR model)
PJ-100 (TRV model)
(AV IN/OUT)

For printed wiring board

- Refer to page 4-95 for location.
- This board is four-layer print board. However, the patterns of layers two and three have not been included in the diagram.
- Chip parts

Transistor



There are few cases that the part printed on this diagram isn't mounted in this model.

For Schematic Diagram
- Refer to page 4-90 for waveforms.

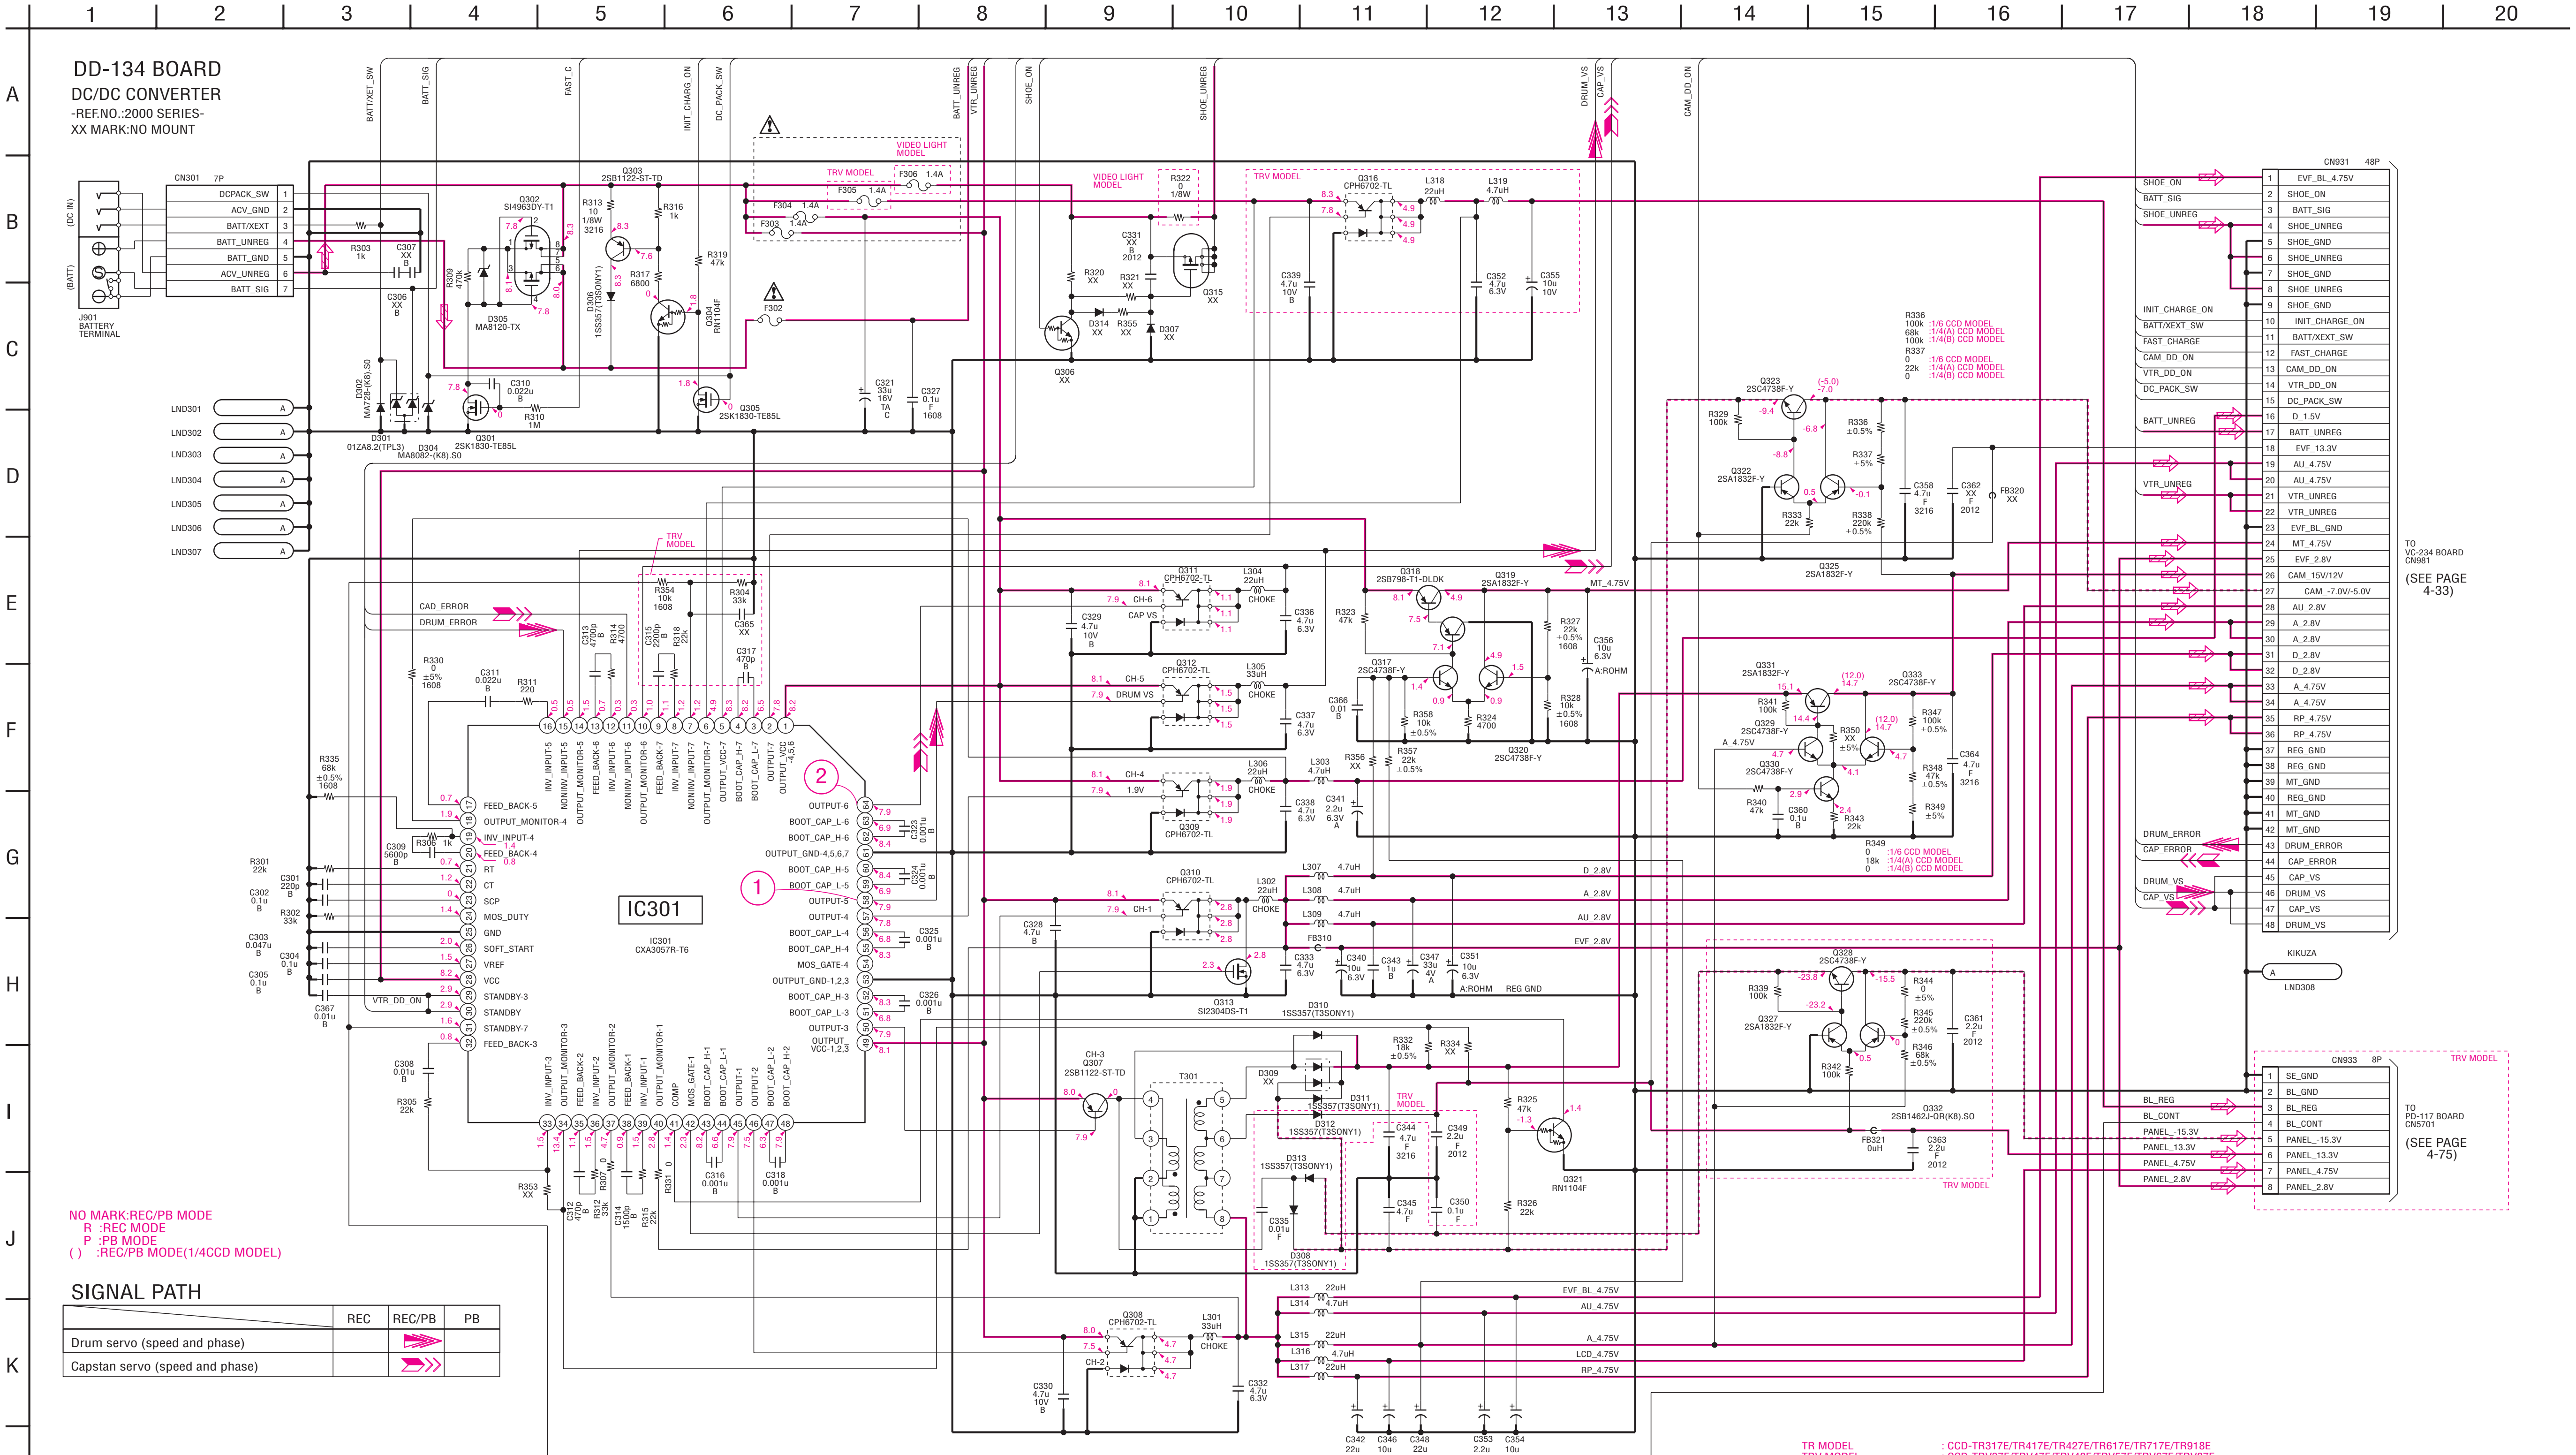
DD-134 BOARD
DC/DC CONVERTER
-REF.NO.:2000 SERIES-
XX MARK:NO MOUNT
CN301 7P
J901 BATTERY TERMINAL
IC301
IC301 CXA3057R-T6
CN931 48P
TO VC-234 BOARD CN981
(SEE PAGE 4-33)
CN933 8P
TO PD-117 BOARD CN5701
(SEE PAGE 4-75)
TRV MODEL
VIDEO LIGHT MODEL
LND308
KIKUZA

NO MARK:REC/PB MODE
R :REC MODE
P :PB MODE
( ) :REC/PB MODE(1/4CCD MODEL)

SIGNAL PATH

	REC	REC/PB	PB
Drum servo (speed and phase)		⇛	
Capstan servo (speed and phase)		⇛	

TR MODEL : CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV MODEL : CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
1/6 CCD MODEL : CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E
1/4(A) CCD MODEL : CCD-TR617E/TR717E/TRV57E/TRV67E/TRV87E
1/4(B) CCD MODEL : CCD-TR918E
SUPER NIGHT SHOT MODEL : CCD-TR918E/TRV87E
VIDEO LIGHT MODEL : CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E

16

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

4-3. WAVEFORMS

CD-239/240 BOARD

CAMERA REC

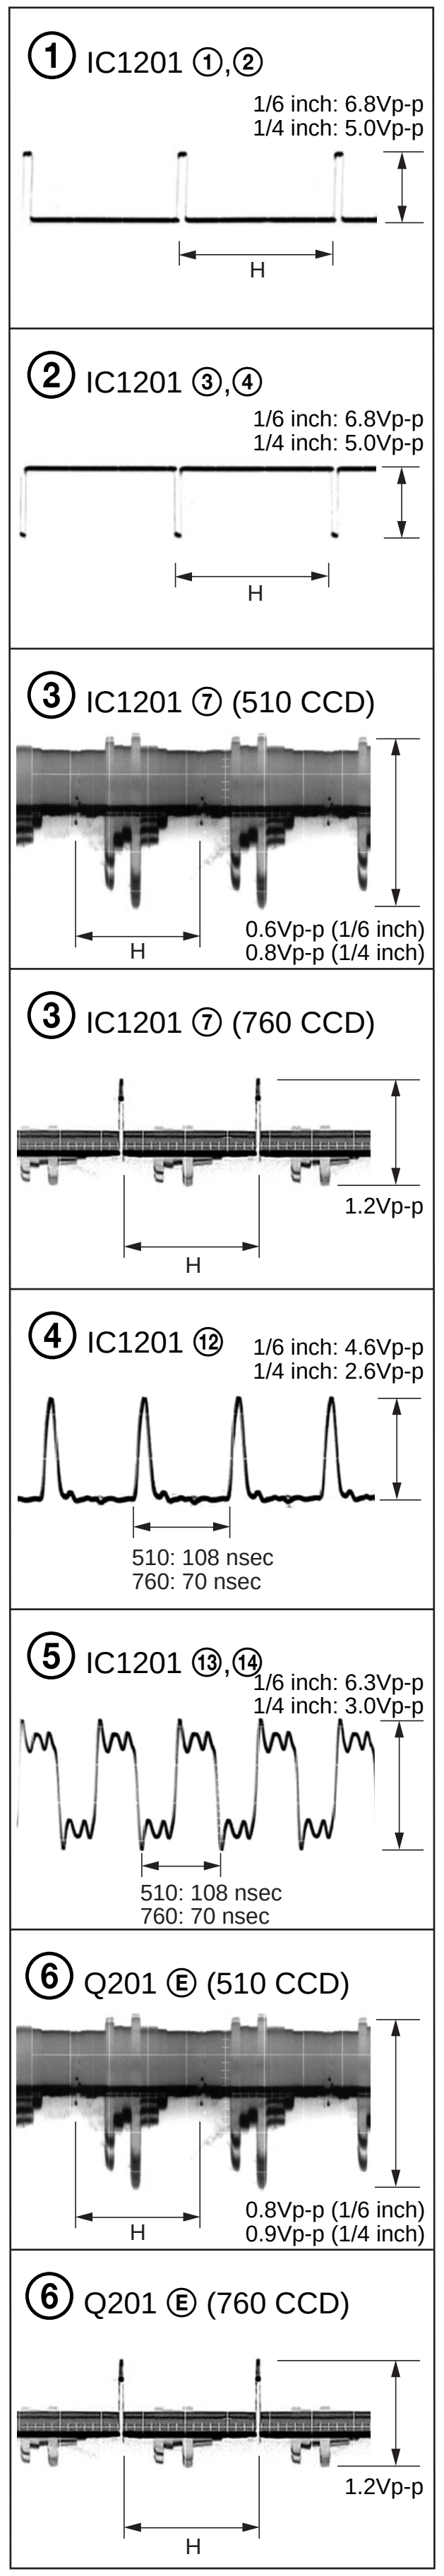

VC-234 BOARD (1/13)

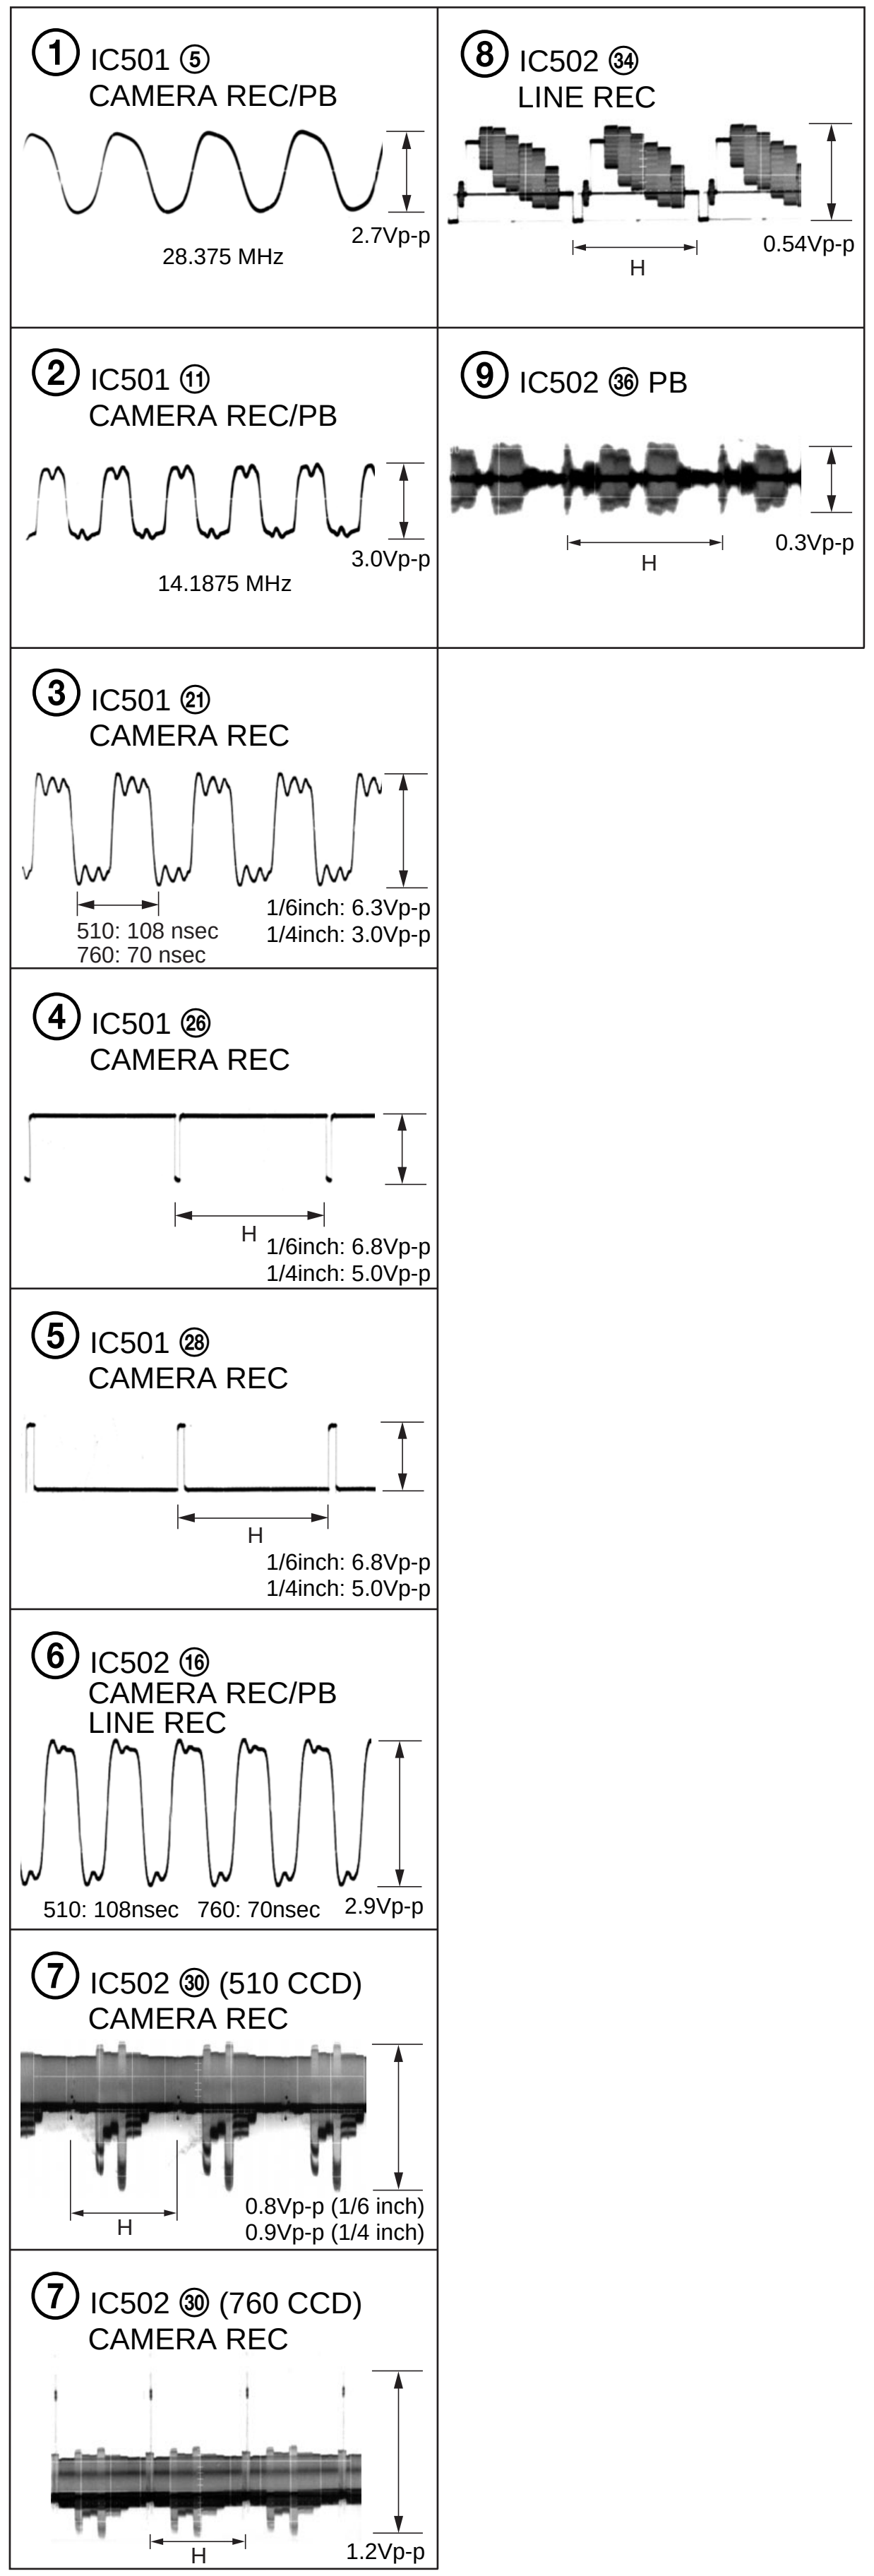

VC-234 BOARD (2/13)

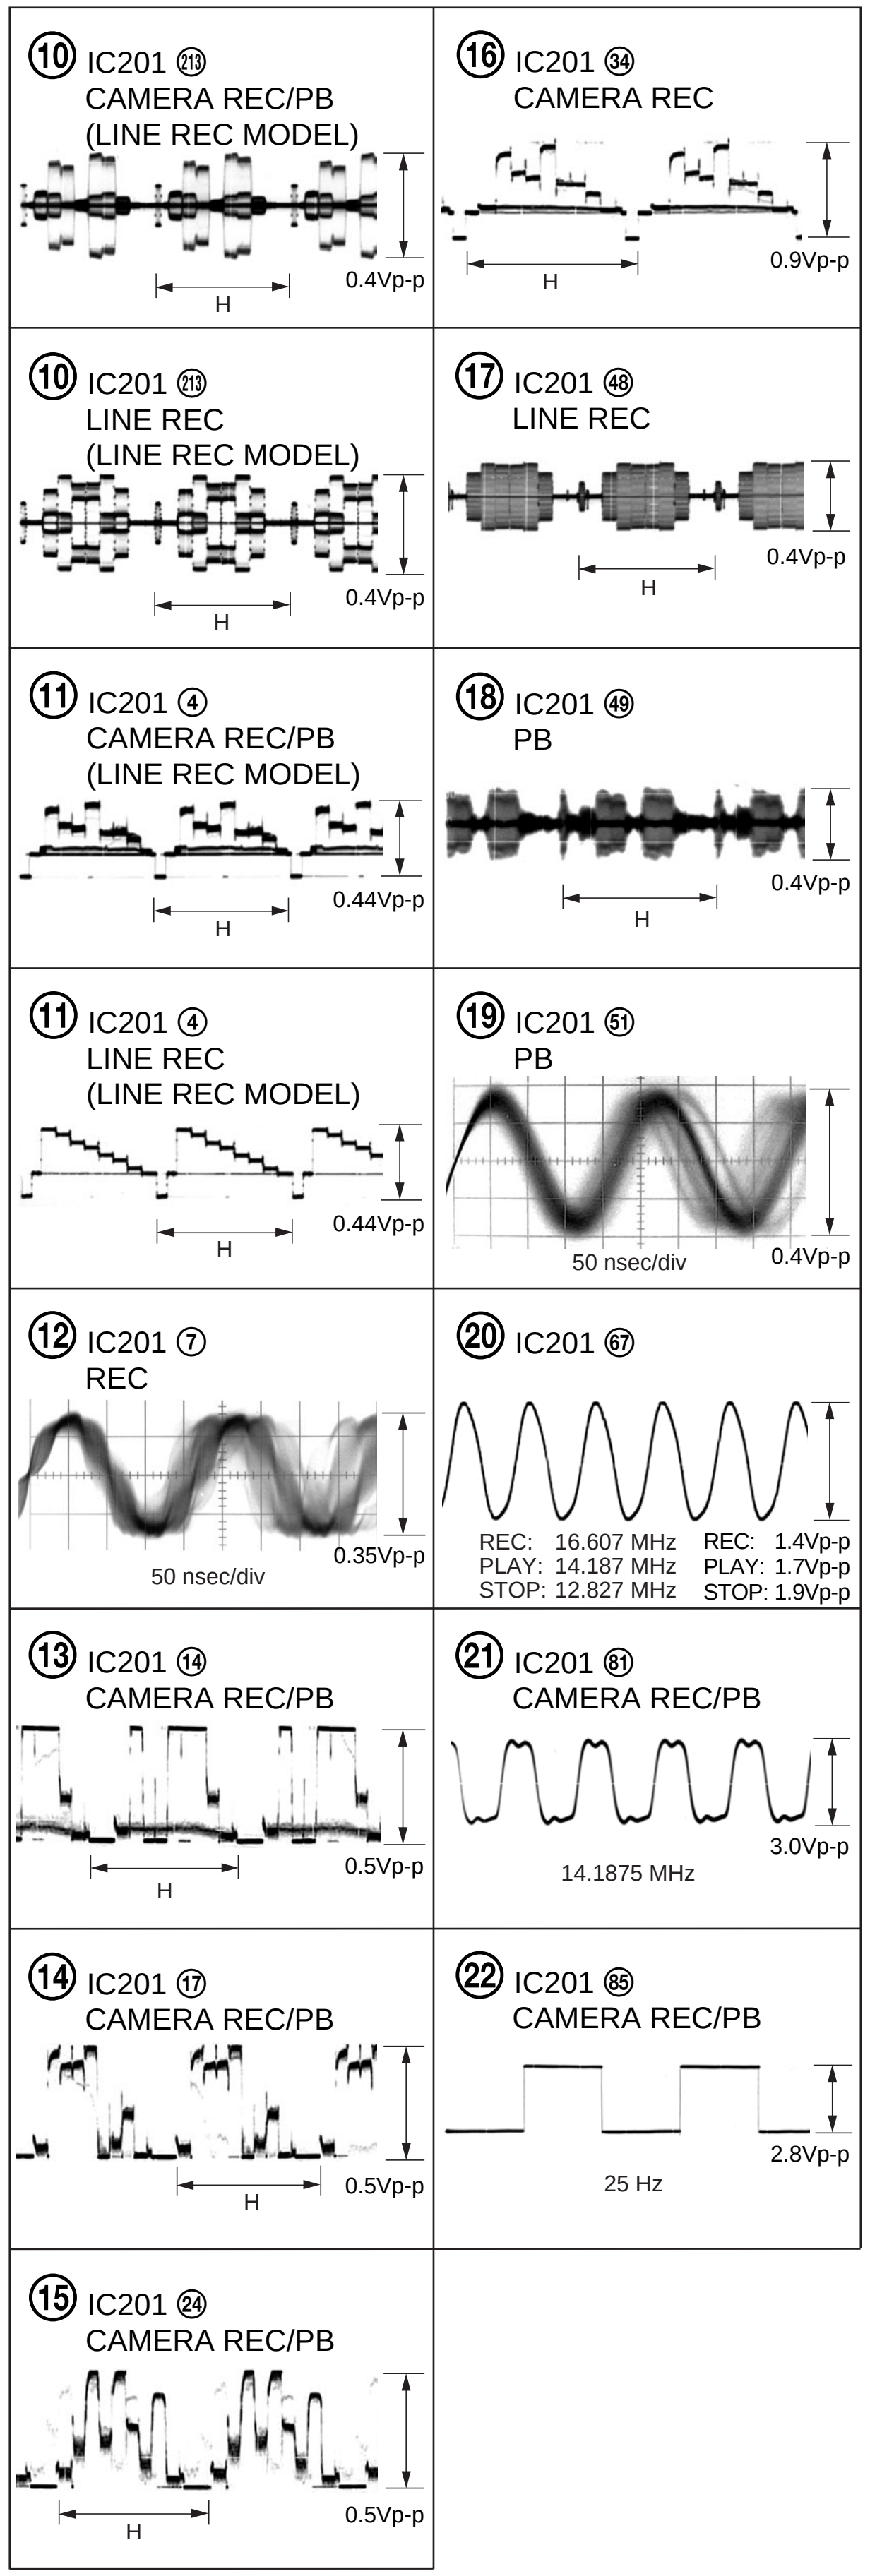

VC-234 BOARD (5/13)

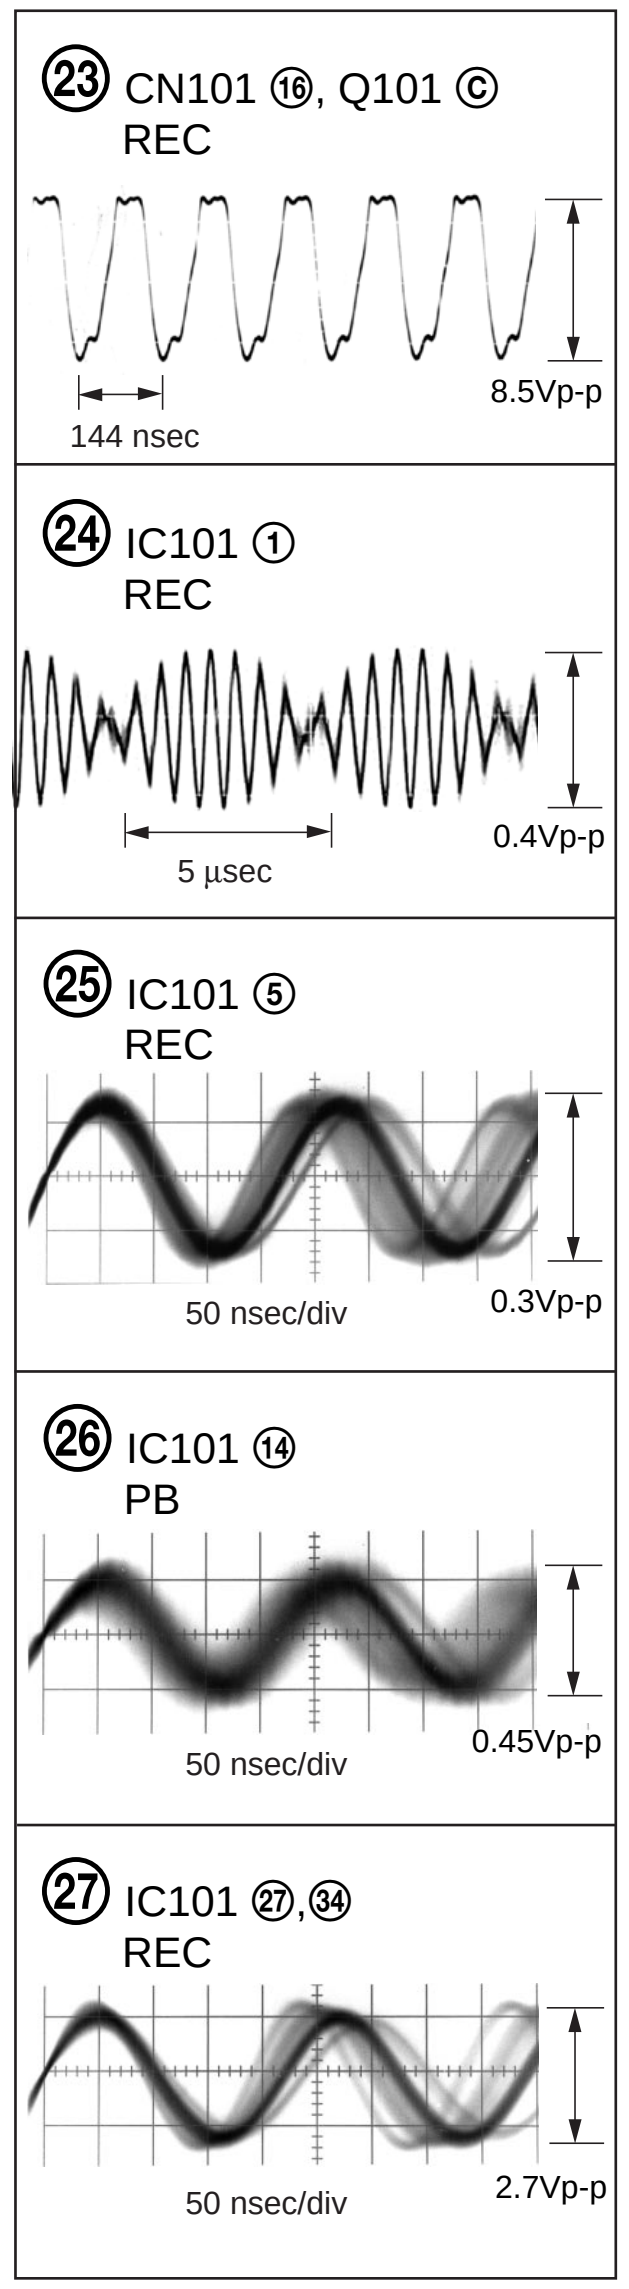

VC-234 BOARD (6/13)

㉘ IC641 ㊹
CAMERA REC/PB
(LINE REC MODEL)



㉘ IC641 ㊹
LINE REC
(LINE REC MODEL)



㉙ IC641 ⑤
CAMERA REC/PB
(LINE REC MODEL)



㉙ IC641 ⑤
LINE REC
(LINE REC MODEL)



㉚ IC641 ⑭
CAMERA REC/PB
(S VIDEO OUT)



㉛ IC641 ⑱
CAMERA REC/PB
(S VIDEO OUT)



㉜ IC641 ㉔
CAMERA REC/PB
IR ON



㉝ IC641 ㉒
CAMERA REC/PB
(LINE REC MODEL)



㉞ IC641 ㉘
LINE REC
(LINE REC MODEL)

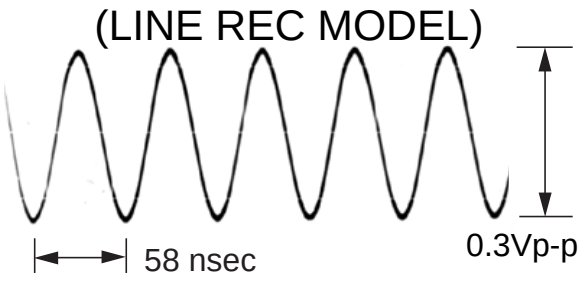

㉟ IC641 ㉞
LINE REC
(LINE REC MODEL)



㊱ IC641 ㊱
LINE REC
(LINE REC MODEL)

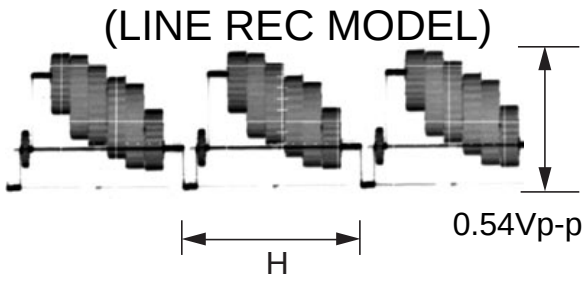

㊲ IC641 ㊴
LINE REC (S-VIDEO IN)
(LINE REC MODEL)



㊳ IC641 ㊷
LINE REC (VIDEO IN)
(LINE REC MODEL)



㊴ IC641 ㊽
LINE REC (S-VIDEO IN)
(LINE REC MODEL)



VC-234 BOARD (7/13)

㊵ IC751 ⑦
CAMERA REC/PB

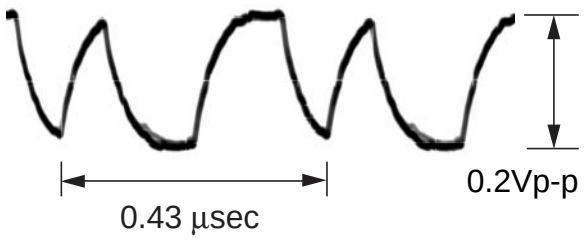

㊶ IC751 ㉒
CAMERA REC/PB
IR ON

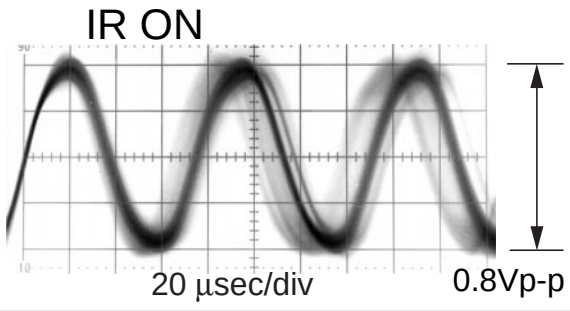

㊷ IC751 ㊶
CAMERA REC/PB
IR ON

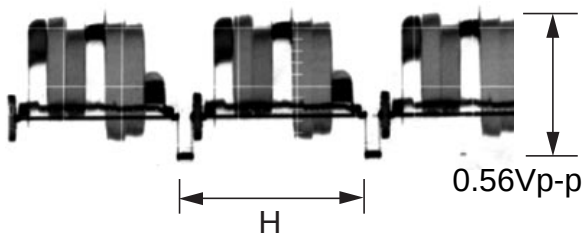

VC-234 BOARD (9/13)

CAMERA REC/PB

㊸ IC902 ①



㊹ IC902 ㊼



VC-234 BOARD (10/13)

CAMERA REC/PB

㊺ IC401 (57),(59),(61)



㊻ IC401 ㉒



㊼ IC401 ⑯

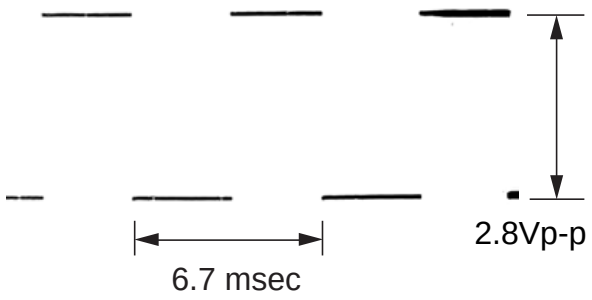

㊽ IC401 ㉕



㊾ IC401 ㉘

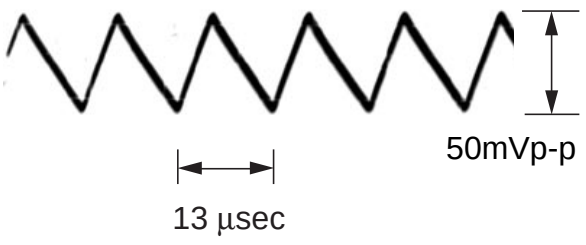

VC-234 BOARD (11/13)

CAMERA REC/PB

㊿ IC803 ㊵



(51) IC803 (53)



PD-117 BOARD (1/2)

① IC5501 ㊽

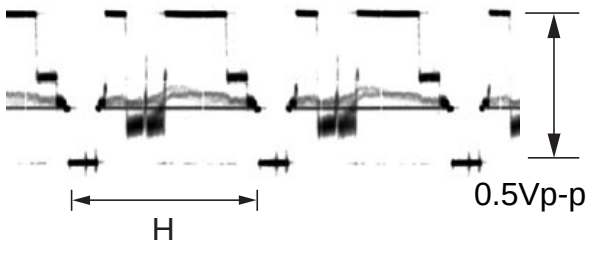

② IC5501 ㊼

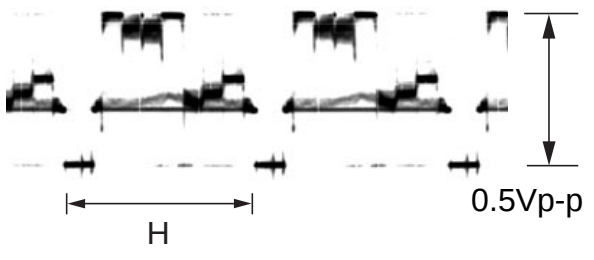

③ IC5501 ㊻

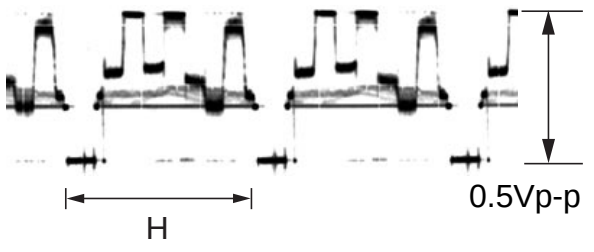

④ IC5501 ⑳

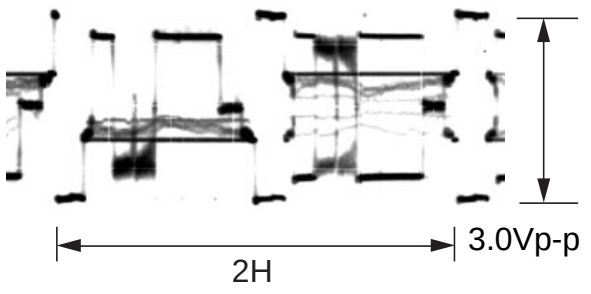

⑤ IC5501 ㉒

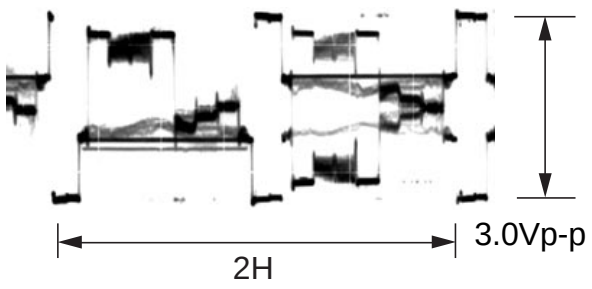

⑥ IC5501 ㉔

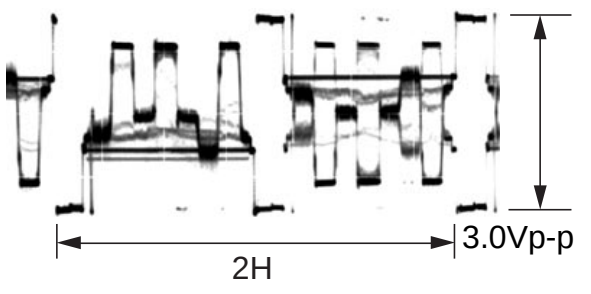

⑦ IC5502 ①



⑧ IC5502 ㉖

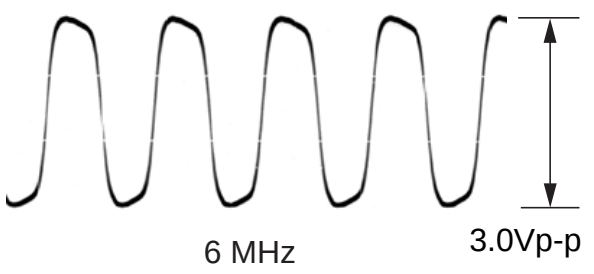

PD-117 BOARD (2/2)

⑨ IC5701 ②

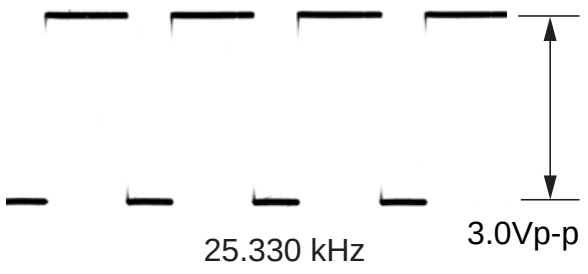

VF-129 BOARD

CAMERA REC/PB

① IC901 ①,⑤



② IC901 ③

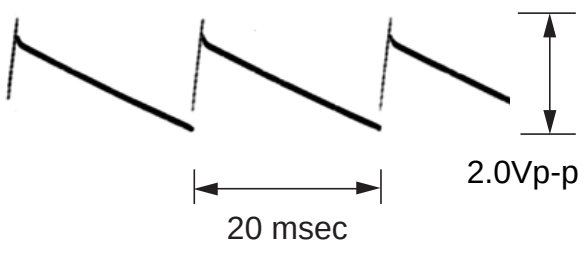

③ IC901 ⑦

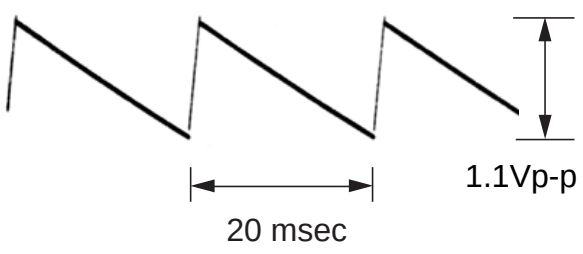

④ IC901 ⑪



⑤ IC901 ⑬

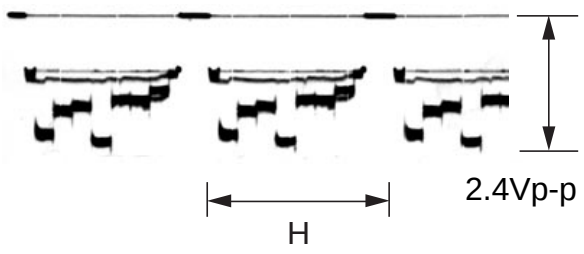

⑥ IC901 ⑯

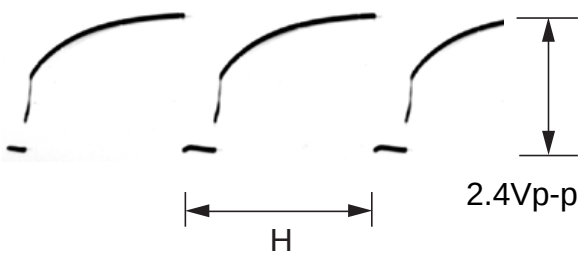

DD-134 BOARD

CAMERA REC/PB

① IC301 (58)

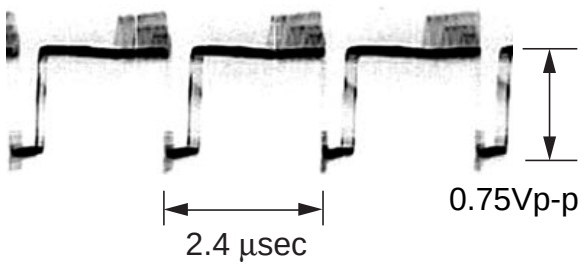

② IC301 (64)

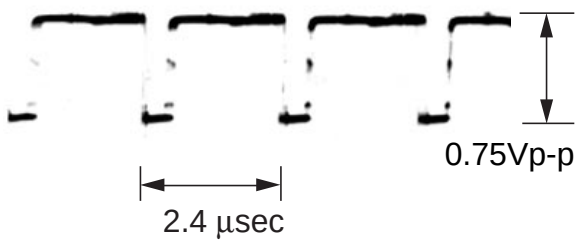

4-4. MOUNTED LOCATION

CD-239/240 BOARD (SIDE A)

C201	A-1
C202	B-1
C203	B-1
C204	A-1
C205	A-1
CN201	B-2
L201	A-2
LND201	A-2
Q201	B-1
R201	B-2
R202	B-1
R203	B-1
R204	A-1

CD-239/240 BOARD (SIDE B)

IC201	A-3

VC-234 BOARD (SIDE A)

C104	A-5
C108	B-4
C109	B-5
C110	B-5
C111	B-5
C112	B-5
C113	A-4
C114	A-5
C115	B-4
C116	B-5
C117	B-5
C118	B-4
C120	B-5
C121	B-4
C123	B-4
C125	C-5
C131	B-4
C133	B-5
C134	B-5
C135	C-5
C136	C-4
C137	B-4
C138	C-4
C139	C-4
C141	B-5
C160	C-4
C206	E-9
C211	E-9
C212	D-8
C216	E-9
C217	D-8
C218	D-6
C219	E-7
C220	D-7
C221	D-7
C222	D-7
C223	E-7
C224	E-8
C225	E-8
C226	E-8
C227	E-8
C228	E-8
C231	D-8
C232	E-8
C236	E-8
C243	E-6
C245	F-6
C246	E-9
C247	F-9
C249	F-6
C250	G-9
C251	G-9
C256	F-6
C259	G-9
C261	G-6
C402	A-8
C410	A-8
C414	A-9
C506	F-5
C508	F-6
C511	F-5
C513	F-5
C514	F-5
C515	F-5
C516	E-5
C517	E-5
C518	E-5
C519	E-5
C520	E-5
C521	E-6
C522	E-6
C523	E-6
C524	E-6
C527	F-5
C528	F-6
C551	G-4
C552	G-4
C554	G-4
C559	F-4
C560	F-4
C562	F-4
C564	F-5
C565	E-4
C566	F-4
C567	F-5
C568	E-4
C570	F-5
C571	F-5
C572	F-4
C573	F-4
C642	C-1
C643	C-2
C650	C-2
C651	C-2
C664	C-1
C671	C-2
C672	C-2
C673	C-2
C701	A-2
C702	A-2
C703	B-2
C704	B-2
C705	A-1
C706	A-1
C707	B-2
C708	A-2
C709	B-1
C710	B-1
C711	B-1
C712	B-1
C713	A-2
C714	B-2
C715	A-1
C716	B-2
C717	A-2
C718	C-3
C719	A-2
C720	B-3
C721	B-2
C722	B-3
C723	A-3
C724	B-3
C725	B-3
C726	C-3
C727	C-3
C728	A-3
C729	B-3
C730	A-3
C731	B-3
C732	B-3
C733	A-3
C734	B-3
C735	A-3
C736	B-3
C737	B-3
C738	B-3
C739	A-3
C740	A-3
C741	A-3
C742	B-3
C743	B-3
C744	B-3
C745	A-3
C746	B-2
C747	B-2
C815	B-8
C817	B-8
C819	D-8
C820	C-7
C821	C-7
C822	D-7
C823	C-7
C824	B-7
C825	C-7
C826	C-7
C901	D-4
C902	D-4
C903	D-4
C904	D-4
C908	E-5
C909	D-5
C910	D-5
C911	C-6
C912	C-6
C913	C-6
C914	D-6
C971	D-9
C972	D-9
CN101	A-4
CN501	E-5
CN551	G-5
CN972	A-1
CN974	A-2
CN975	B-7
CN976	A-6
CN977	F-9
CN978	A-7
CN979	A-8
CN981	B-9
CN983	D-9
D551	G-4
D973	G-9
FB101	A-4
FB102	A-5
FB201	G-6
FB502	F-5
FB503	F-5
FB504	F-6
FB505	F-6
FB641	C-3
IC101	B-4
IC201	F-7
IC202	G-6
IC502	F-6
IC552	F-4
IC701	B-3
IC803	C-8
IC902	D-5
L108	C-4
L203	D-8
L291	C-4
L553	E-5
L642	C-3
L644	C-3
LND101	B-6
LND102	C-6
LND103	C-4
Q101	B-5
Q102	B-5
Q103	B-5
Q104	B-5
Q202	E-6
Q204	E-7
Q205	E-7
Q206	E-7
Q207	E-7
Q208	E-8
Q209	E-8
Q212	E-6
Q401	A-9
Q551	G-4
Q554	E-4
Q641	C-3
Q642	C-2
Q643	C-2
Q644	C-1
Q701	B-1
Q703	B-1
Q704	B-1
Q706	B-1
Q707	A-1
Q709	A-1
Q710	B-2
Q711	B-2
Q712	C-3
Q713	C-3
Q974	D-9
Q975	D-9
R101	A-5
R102	A-5
R105	B-5
R110	B-5
R111	B-5
R112	B-5
R113	B-5
R114	B-4
R115	B-5
R116	B-5
R117	B-5
R120	B-4
R121	B-5
R122	C-5
R127	B-4
R128	C-4
R201	E-9
R202	E-9
R206	E-6
R207	E-6
R208	E-8
R209	E-9
R210	E-7
R211	E-7
R212	E-7
R213	E-7
R214	E-8
R215	E-8
R216	E-7
R217	E-7
R218	E-7
R219	E-7
R220	E-8
R221	E-8
R225	E-8
R226	E-9
R228	E-9
R230	E-8
R231	E-8
R233	E-8
R234	E-6
R235	E-6
R236	D-7
R237	E-7
R238	D-7
R239	E-7
R240	E-7
R241	D-7
R242	D-7
R243	E-7
R244	E-7
R245	D-7
R246	D-8
R247	E-8
R248	D-8
R249	E-8
R250	E-8
R254	E-6
R255	E-6
R256	E-6
R257	E-6
R258	G-9
R259	F-9
R263	G-9
R273	G-9
R282	G-9
R401	A-7
R402	A-7
R403	A-3
R404	A-3
R405	A-7
R406	A-3
R407	A-8
R411	A-9
R414	A-8
R416	A-9
R432	A-8
R436	A-8
R504	F-5
R505	F-5
R506	F-6
R508	F-6
R509	F-5
R515	E-6
R516	E-6
R517	E-6
R551	G-4
R552	E-4
R553	G-4
R554	F-4
R555	G-5
R556	F-4
R557	G-5
R560	E-4
R561	F-4
R562	F-4
R563	F-4
R564	F-4
R565	F-4
R566	F-4
R567	G-4
R568	F-4
R569	F-4
R570	F-4
R571	F-4
R572	F-5
R573	F-4
R574	E-4
R575	E-4
R576	E-4
R577	E-4
R578	E-5
R641	C-2
R642	C-2
R643	C-1
R644	C-2
R645	C-2
R646	C-1
R647	C-2
R649	C-1
R703	A-2
R705	B-1
R706	B-1
R707	A-2
R707	A-2
R708	A-2
R710	B-2
R711	B-2
R712	A-2
R713	A-3
R714	B-3
R715	B-3
R716	A-3
R717	A-3
R718	B-3
R720	A-3
R721	B-2
R722	B-2
R723	B-2
R724	B-2
R725	B-1
R726	B-1
R727	B-2
R728	C-3
R729	B-2
R730	B-3
R731	C-3
R732	B-3
R813	C-8
R814	C-8
R815	C-8
R816	C-8
R817	C-8
R818	C-8
R819	D-8
R820	B-8
R821	C-8
R822	C-8
R825	C-8
R831	D-8
R832	D-8
R834	B-8
R837	D-8
R838	D-8
R839	D-8
R840	D-8
R843	B-8
R844	B-8
R845	B-8
R847	D-8
R848	B-8
R849	D-8
R866	D-7
R867	D-7
R868	B-8
R869	B-7
R870	B-7
R871	D-7
R872	D-7
R873	D-7
R874	B-7
R875	B-7
R876	C-7
R877	C-7
R878	C-7
R879	B-7
R880	B-7
R881	C-7
R882	C-7
R887	B-7
R888	C-7
R889	C-7
R890	C-7
R891	C-7
R892	C-8
R901	D-4
R902	D-4
R903	D-5
R905	D-5
R906	C-5
R907	C-5
R908	C-4
R909	C-5
R910	C-5
R911	C-5
R991	D-9
R912	D-5
R915	C-5
R916	E-5
R917	D-5
R918	C-6
R919	C-6
R920	C-6
R922	D-6
R923	D-6
R924	D-6
R925	D-6
R930	D-6
R931	D-6
R932	D-6
R933	D-6
R934	D-6
R973	F-9
R974	F-9
R984	D-9
R985	D-6
R986	D-6
R987	D-9
R988	D-6
R989	D-6
R990	D-9
X801	D-8
X802	D-7
X901	E-5

VC-234 BOARD (SIDE B)

C101	A-14
C102	A-15
C103	B-14
C105	A-15
C106	B-15
C107	B-14
C119	A-15
C126	B-15
C128	B-15
C130	B-14
C142	B-14
C143	A-15
C145	A-16
C146	B-14
C147	A-16
C148	B-15
C149	B-16
C150	B-16
C151	B-15
C152	B-15
C153	B-16
C154	A-16
C155	A-16
C156	C-15
C157	B-15
C158	C-15
C159	C-15
C201	D-11
C202	D-11
C203	E-10
C207	E-12
C210	E-11
C213	E-11
C233	E-12
C234	E-12
C237	E-11
C238	E-11
C239	E-13
C240	E-13
C241	E-10
C242	E-10
C244	F-10
C252	G-10
C253	G-12
C254	E-12
C255	E-12
C257	G-12
C258	F-12
C260	G-11
C262	F-13
C263	G-11
C265	G-11
C266	G-11
C291	C-15
C292	C-15
C293	D-15
C401	B-11
C403	B-12
C404	B-12
C405	B-12
C406	B-11
C407	B-11
C408	B-10
C409	A-12
C411	A-12
C412	A-12
C413	B-12
C415	B-11
C416	B-11
C417	B-12
C418	B-11
C419	A-12
C420	B-11
C421	B-12
C422	A-11
C423	A-11
C424	A-12
C425	A-11
C427	A-11
C428	A-12
C429	A-12
C430	A-12
C431	A-11
C433	A-11
C434	A-11
C435	A-11
C436	A-11
C501	F-14
C502	E-14
C503	F-14
C504	F-14
C505	F-13
C507	F-13
C509	F-13
C510	G-13
C512	F-13
C525	F-14
C526	E-14
C553	E-15
C556	E-15
C561	F-15
C569	F-15
C641	C-16
C644	C-16
C645	C-18
C646	C-17
C647	C-16
C648	C-17
C649	C-17
C652	C-17
C653	C-17
C654	C-17
C655	C-17
C656	C-16
C657	C-18
C658	D-15
C659	C-18
C660	C-18
C661	C-18
C662	B-18
C663	B-17
C665	B-17
C666	B-17
C667	B-17
C668	B-17
C669	B-17
C704	B-17
C751	A-17
C752	A-17
C752	A-17
C753	A-17
C754	A-17
C755	A-17
C756	A-18
C758	A-17
C759	B-17
C760	B-17
C761	B-17
C762	B-17
C763	B-17
C765	A-17
C766	A-18
C767	B-17
C768	B-18
C769	A-18
C770	A-18
C771	B-18
C772	A-18
C773	B-18
C774	A-18
C775	A-17
C777	A-18
C778	A-18
C781	A-18
C782	A-16
C801	C-11
C802	C-12
C803	C-11
C804	B-11
C805	B-11
C806	C-12
C807	C-11
C809	B-11
C810	B-11
C811	B-11
C813	B-11
C814	B-11
C818	B-11
C907	D-13
C915	D-13
C973	G-15
C974	G-15
CN971	A-18
CN973	G-15
CN980	F-10
CN982	D-10
D201	E-11
D202	E-10
D203	F-13
D401	B-10
D501	F-13
D502	E-14
D801	B-12
D802	B-12
D803	D-12
D804	C-11
D805	B-11
D971	G-15
D972	G-15
FB103	B-16
FB104	B-16
FB202	E-13
FB203	F-12
FB204	F-12
FB205	E-12
FB207	E-12
FB291	D-15
FB501	E-13
FB505	E-14
FB801	C-12
FB901	D-13
IC102	B-16
IC203	F-12
IC204	G-10
IC205	E-10
IC291	D-15
IC401	A-11
IC501	F-14
IC551	F-15
IC641	C-17
IC751	A-17
IC801	C-12
IC802	B-11
IC901	D-14
L101	A-14
L102	B-14
L103	A-15
L104	B-14
L105	A-16
L107	C-15
L204	E-13
L205	E-13
L206	D-11
L208	E-13
L209	F-10
L501	E-13
L551	E-15
L552	E-15
L641	C-16
L643	C-18
L751	B-18
L752	B-17
L753	B-18
L754	A-18
Q105	B-14
Q106	B-14
Q107	A-15
Q108	A-15
Q109	B-15
Q110	B-15
Q111	C-15
Q112	A-14
Q113	A-14
Q203	E-11
Q211	E-11
Q213	E-12
Q214	G-10
Q552	F-15
Q553	F-15
Q801	C-11
Q802	C-11
Q803	C-11
Q804	D-12
Q805	C-11
Q806	C-11
Q972	F-10
Q973	F-10
R103	B-14
R104	B-15
R106	B-14
R107	B-15
R108	B-15
R109	B-14
R129	A-15
R130	A-16
R131	A-15
R132	A-16
R133	B-14
R134	A-16
R135	B-14
R136	A-15
R137	A-16
R138	B-15
R139	B-16
R140	B-16
R141	B-15
R142	B-15
R143	B-16
R144	B-16
R145	B-16
R146	C-15
R147	C-15
R148	B-15
R149	B-15
R150	B-15
R151	B-15
R152	B-15
R153	B-15
R155	C-15
R156	C-15
R204	E-11
R205	E-11
R222	G-12
R223	G-12
R224	E-11
R229	E-11
R232	E-11
R251	E-11
R252	E-11
R253	E-10
R260	G-10
R261	G-12
R262	G-12
R264	F-13
R265	E-12
R266	E-11
R270	F-13
R271	E-12
R274	G-10
R275	F-11
R276	F-10
R277	F-10
R278	D-13
R279	F-10
R280	E-12
R283	G-13
R408	B-12
R409	B-12
R410	B-12
R412	B-11
R413	B-11
R417	A-11
R419	A-11
R423	A-11
R424	A-11
R425	A-12
R426	A-12
R427	A-11
R428	A-12
R429	A-12
R430	A-11
R431	A-11
R433	A-11
R434	A-12
R435	A-12
R501	E-14
R502	E-14
R503	F-14
R512	F-13
R518	F-14
R519	E-14
R558	F-15
R559	F-15
R648	C-18
R650	C-16
R651	C-17
R652	C-16
R653	C-18
R655	B-17
R656	B-17
R657	B-17
R658	B-17
R719	B-16
R755	B-17
R756	B-16
R757	A-16
R758	A-17
R759	A-17
R760	B-17
R761	A-17
R762	A-18
R763	A-17
R764	B-17
R765	B-17
R766	A-17
R767	B-18
R768	A-18
R770	A-18
R771	A-18
R772	A-18
R773	A-18
R774	A-18
R775	B-18
R776	A-17
R777	A-17
R801	C-11
R802	C-11
R803	D-12
R805	C-11
R806	C-11
R807	C-11
R808	C-12
R809	C-11
R810	C-11
R811	D-12
R812	C-11
R823	C-11
R824	B-12
R833	B-11
R835	B-12
R836	B-11
R865	C-11
R886	B-12
R904	D-14
R913	E-14
R914	E-14
R921	D-13
R935	E-14
R971	G-14
R972	G-15
R975	G-10
R976	F-10
R977	C-12
R978	B-12
R979	C-13
R980	B-12
R981	B-12
R982	D-10
R983	D-10
R992	B-13
R993	B-12
R995	B-12
R997	B-11
R998	C-13
X501	F-13
X641	B-18

CF-66 BOARD (SIDE A)

C001	B-6
C002	B-6
C003	C-5
C004	C-4
C008	D-6
CN010	D-5
D001	A-1
D003	D-8
D004	B-4
D005	B-6
D006	A-6
D007	B-7
D008	D-6
D009	C-6
IC001	C-5
L001	D-4
L004	C-6
L005	B-6
Q001	D-4
Q002	D-6
Q003	C-6
R001	D-4
R002	D-6
R003	C-6
R004	D-6
R009	D-6
R010	D-6
R011	C-5
R012	B-4
R013	B-3
R014	B-2
R015	C-3
R016	B-4
R017	B-4
R018	B-2
R019	C-3
R020	B-4
R021	C-2
R025	C-2
R032	B-1
R033	B-1
R038	D-4
R039	D-4
R040	C-4
R041	C-4
R042	C-6
R043	C-6
R044	D-6
R045	D-6
R046	D-6
R047	D-6
S001	B-4
S002	D-8
S003	B-5
S005	D-8
S008	B-9
S009	B-1
S010	B-3
S011	D-9
S012	C-1
S014	B-5
S015	B-6
S016	B-7

CF-66 BOARD (SIDE B)

BH001	B-13
BZ001	B-17
BZ002	C-17
C005	D-13
C006	D-12
C007	D-11
C009	C-15
CN001	C-13
CN002	A-18
CN006	D-13
CN007	D-15
CN008	C-16
D002	C-12
L002	D-13
L003	D-11
Q004	D-12
Q005	D-12
Q006	D-12
R005	B-15
R006	B-16
R007	B-16
R008	B-16
R022	C-16
R023	C-16
R026	C-16
R027	D-12
R028	D-12
R029	D-12
R030	D-12
R034	C-16
R035	D-12
R036	D-12
R037	D-11
R048	D-16
S006	C-11
S007	D-11

CF-67 BOARD (SIDE A)

BH001	D-5
D001	A-1
D004	A-4
D007	A-5
LND001	A-6
R002	A-4
R004	B-4
R006	A-4
R008	B-4
R013	B-5
R014	A-5
R017	A-5
R019	B-6
R020	A-3
R022	B-6
R027	B-5
R036	B-5
R043	C-1
S001	A-3
S002	B-3
S004	A-5
S005	B-4
S006	B-6
S008	B-6
S009	A-7
S011	A-6
S012	B-3
S014	B-5

CF-67 BOARD (SIDE B)

C001	D-12
C002	D-10
C003	D-10
C004	D-12
C005	C-13
C006	C-12
C007	D-12
C008	C-13
C009	C-12
CN001	B-11
CN002	A-14
CN003	D-11
CN004	C-14
CN005	B-14
CN006	D-12
CN007	C-12
CN008	D-13
CN009	B-13
D002	D-11
D003	B-9
D005	D-10
D006	D-10
D008	D-11
D009	D-10
JL001	C-11
JL002	D-11
L001	D-12
L002	C-13
L003	D-12
LND002	A-13
Q001	B-13
Q002	C-10
Q003	C-10
Q004	C-13
Q005	C-12
Q006	D-12
R001	C-13
R003	C-9
R005	C-9
R007	B-9
R009	C-10
R010	C-10
R011	C-10
R012	C-9
R015	C-10
R016	C-10
R018	C-9
R021	D-9
R023	C-13
R024	D-12
R026	D-9
R028	C-13
R029	C-13
R030	D-12
R031	D-12
R032	C-13
R034	D-9
R035	D-9
R037	C-13
R038	C-13
R039	C-12
R040	C-12
R041	C-12
R042	C-13
R044	C-13
R048	C-12
S003	C-8
S007	C-8
S010	D-8
S013	E-8

EJ-29/30 BOARD (SIDE A)

J251	B-4

EJ-29/30 BOARD (SIDE B)

CN251	A-8
CN252	B-8
CN253	A-7
D251	B-6
D252	A-6
D253	B-6
D254	A-7
D255	B-7
D256	B-6
D257	B-6
FB251	B-6
FB252	A-6
FB253	B-6
LND251	A-6
R251	B-8
R252	B-8
R253	B-7
R254	B-7
R255	A-7
R256	A-7
R256	B-8
R257	A-8
R259	B-7
S251	B-7

PJ-99/100 BOARD (SIDE A)

J101	C-1

PJ-99/100 BOARD (SIDE B)

C101	C-4
C102	D-4
C103	B-4
C104	A-3
C105	B-3
C106	B-4
C107	E-3
C108	E-4
CN101	C-3
D101	D-4
D102	E-4
D103	E-4
D104	E-3
D105	B-4
L101	C-3
L102	C-4
L104	B-3
L105	B-3
LND101	B-4
Q101	E-3
Q102	D-3
R102	D-3
R103	D-4
R104	D-3
R105	D-3
R108	E-4
R109	C-3
VDR101	C-4
VDR102	A-3

SE-100/101 BOARD (SIDE A)

C453	C-3
C454	D-3
C460	C-3
C465	A-2
C466	A-2
CN451	A-3
J451	A-2
L451	B-3
L452	A-3
L453	A-2
R461	A-3
SE451	C-3
SE452	E-4
VDR451	A-3
VDR452	A-2

SE-100/101 BOARD (SIDE B)

C451	B-6
C452	D-7
C455	C-7
C456	C-7
C457	C-7
C459	C-7
C461	D-6
C462	B-7
C463	C-6
C464	B-7
IC451	C-7
LND451	A-7
R451	B-6
R452	D-7
R453	D-7
R454	B-6
R455	C-6
R456	C-7
R457	C-7
R458	C-6
R459	C-6
R460	B-7

VL-29 BOARD (SIDE A)

C151	A-2
C153	A-2
D151	A-2
D152	A-2
L151	A-2
Q151	A-2
R153	A-2
R154	A-2

VL-29 BOARD (SIDE B)

C152	A-3
CN151	A-3
D153	A-4
LND151	B-4
LND152	B-4
LND153	A-4
LND154	B-3
LND155	B-3
Q152	A-3
R151	A-3
R152	A-3

MA-374/375 BOARD (SIDE A)

C306	B-4
C323	C-2
C324	C-2
C326	C-2
C329	C-2
C333	C-2
C336	B-2
C339	C-2
C340	C-2
C341	C-3
C342	B-2
C343	D-2
C344	D-2
C345	D-2
C346	D-2
C347	D-2
C348	D-2
C353	B-3
C354	B-3
C356	B-3
C357	E-2
C359	B-4
C360	B-3
C365	D-2
D302	A-3
D303	A-3
D304	B-2
D305	B-4
D306	B-3
D307	E-2
D321	C-2
D322	C-2
IC301	A-4
IC322	B-3
J321	B-1
LND301	A-3
Q322	B-2
R321	C-2
R322	B-2
R324	B-2
R325	C-2
R326	C-2
R329	C-2
R330	C-2
R334	C-2
R340	B-2
R342	C-2
R343	C-2
R344	C-2
R345	C-3
R346	B-3
R347	B-2
R348	C-2
R349	C-2
R350	D-2
R351	D-2
R352	D-2
R353	D-2
R354	D-2
R355	D-2
R358	B-3
R359	D-2
R361	D-2
R362	D-2
R363	C-2
S301	D-1

MA-374/375 BOARD (SIDE B)

C301	A-7
C302	B-6
C303	A-7
C304	A-6
C305	B-7
C321	A-8
C322	C-7
C325	C-7
C327	C-8
C328	C-8
C330	C-7
C331	C-8
C332	C-9
C334	C-7
C335	C-9
C337	C-7
C338	C-9
C349	C-7
C351	D-8
C352	D-8
C355	D-8
C358	B-6
C361	D-8
C362	C-8
C363	C-8
C364	C-8
CN301	B-7
CN302	B-8
D323	A-8
F301	A-7
IC321	C-8
L301	B-7
Q301	A-6
Q302	A-6
Q303	B-6
Q304	B-7
Q321	C-7
R301	A-6
R302	A-6
R303	B-6
R304	A-6
R305	A-6
R306	A-7
R307	B-6
R308	B-7
R309	B-7
R310	B-6
R311	B-6
R312	A-8
R313	B-6
R314	D-8
R315	E-8
R323	B-8
R327	C-7
R328	C-7
R331	C-8
R332	C-7
R333	C-7
R335	C-7
R336	C-9
R337	C-7
R338	C-7
R339	C-9
R356	D-8
R357	D-8
R360	D-8
R364	D-8
R365	D-8
S302	D-8
S303	C-6

PD-117 BOARD (SIDE A)

C5502	B-4
C5504	C-4
C5505	A-5
C5506	A-5
C5507	A-5
C5515	C-4
C5516	C-4
C5520	B-5
C5521	B-3
C5522	B-3
C5523	D-4
C5524	B-4
C5528	B-4
C5530	C-5
C5531	C-5
C5706	C-3
C5707	C-3
C5708	C-3
C5709	D-3
C5710	D-3
CN5501	D-5
CN5502	B-5
CN5604	D-1
CN5701	A-2
CN5702	A-5
CN5703	A-1
CN5704	A-3
CN5705	A-3
CN5706	D-3
D5502	C-4
FB5502	A-4
IC5502	C-4
IC5503	C-4
IC5702	C-3
L5505	C-4
L5601	D-2
L5702	C-3
LND701	D-2
LND702	B-1
Q5502	B-4
Q5503	C-5
Q5504	C-5
Q5505	C-5
Q5506	C-5
Q5607	D-1
R5512	C-4
R5513	C-4
R5516	B-5
R5517	C-5
R5521	C-5
R5553	C-5
R5559	C-4
R5561	B-3
R5562	C-5
R5563	B-3
R5563	C-5
R5564	C-5
R5565	C-5
R5566	D-5
R5567	C-5
R5569	B-5
R5702	A-5
R5715	D-3
R5716	C-3
T5601	C-1

PD-117 BOARD (SIDE B)

C5501	A-8
C5503	A-7
C5508	C-8
C5509	B-8
C5510	B-7
C5511	B-8
C5512	B-8
C5513	B-7
C5514	B-8
C5517	B-7
C5518	B-7
C5519	B-8
C5525	A-8
C5526	A-8
C5527	B-7
C5529	C-8
C5601	C-9
C5604	B-10
C5605	D-10
C5606	D-10
C5608	B-10
C5612	B-10
C5704	B-9
D5501	C-8
D5503	C-8
D5601	D-10
D5602	D-11
D5603	A-11
D5604	A-10
D5701	C-9
FB5503	B-8
IC5501	B-8
IC5601	C-9
IC5602	D-10
IC5701	B-9
L5501	A-8
L5504	B-8
L5701	B-10
LND703	B-11
LND704	D-10
LND705	A-11
Q5501	C-8
Q5601	C-9
Q5602	C-10
Q5603	D-10
Q5604	D-10
Q5701	C-9
R5501	A-7
R5502	A-8
R5503	A-8
R5504	C-8
R5505	B-7
R5506	B-8
R5507	B-8
R5508	B-8
R5509	B-8
R5510	B-8
R5511	B-8
R5514	C-7
R5515	C-7
R5518	C-7
R5519	D-8
R5520	D-8
R5522	C-7
R5523	C-7
R5524	C-7
R5525	C-7
R5551	C-8
R5557	A-8
R5558	B-8
R5560	C-8
R5603	C-9
R5609	C-9
R5610	C-10
R5611	C-10
R5612	D-10
R5613	C-10
R5614	C-9
R5616	D-10
R5617	D-10
R5618	D-10
R5619	A-11
R5620	A-10
R5704	D-7
R5706	C-7
R5707	A-7
R5708	A-7
R5710	A-10
R5711	A-9
R5712	B-9
R5713	A-8
R5714	A-9
R5717	D-9
S5701	D-7
S5702	C-7
S5703	B-7
S5704	A-7

VF-129 BOARD (SIDE A)

C903	A-2
C904	B-2
C906	A-2
C907	A-1
C909	B-1
C913	A-2
CN902	B-1
D901	A-1
IC901	A-1
L901	B-1
L903	D-1
R903	A-1
R907	B-1
R908	B-2
R909	B-2
R910	B-2
R912	A-2
R913	C-2
R914	C-2
R915	B-1
R916	A-1
R917	A-1
R922	E-1
R927	B-1
R928	B-1
R929	A-1
R930	C-1
R931	C-1
R932	C-1
RV903	C-2
RV904	D-1
T901	D-1
T902	D-1
TH901	B-2
W901	D-2

VF-129 BOARD (SIDE B)

C901	A-3
C902	A-3
C905	A-3
C908	C-2
C910	C-3
C911	C-3
C912	B-3
C914	D-3
C915	E-3
C916	C-3
CN901	B-3
D903	D-3
L902	B-3
Q901	A-2
Q902	B-2
Q903	C-3
Q904	C-2
R901	A-3
R902	A-3
R904	A-3
R905	A-2
R906	A-2
R911	A-3
R918	C-2
R919	C-2
R920	C-2
R921	D-2
R923	E-3
R924	C-3
R925	C-3
R926	D-2

DD-134 BOARD (SIDE A)

C306	C-1
C307	B-1
C310	C-3
C321	D-3
C327	D-2
C335	B-2
C339	D-3
C344	A-2
C345	A-2
C349	A-2
C350	A-2
C352	C-3
C355	A-1
C358	A-3
C360	A-3
C361	A-1
C363	A-1
C364	A-3
CN301	C-1
D301	B-1
D302	B-1
D304	C-1
D305	C-3
D306	C-2
D308	B-2
D309	A-2
D310	A-2
D311	A-2
D312	B-2
D313	B-2
F302	D-2
F303	D-3
F304	D-3
F305	D-3
F306	D-2
FB321	A-1
L301	B-3
L302	C-2
L304	B-3
L305	C-3
L306	C-3
L318	C-3
L319	A-1
LND302	A-2
LND308	B-2
Q301	C-3
Q302	C-2
Q303	C-2
Q304	D-2
Q305	C-1
Q316	D-3
Q322	A-3
Q323	B-3
Q325	B-3
Q327	B-1
Q328	B-1
Q329	A-3
Q330	A-2
Q331	A-3
Q332	B-1
Q333	A-3
R303	B-1
R309	C-3
R310	C-3
R313	C-2
R316	D-2
R317	D-2
R319	D-2
R329	A-3
R332	A-2
R333	A-3
R334	A-2
R336	B-3
R337	A-3
R338	A-3
R339	A-1
R340	A-2
R341	A-3
R342	A-1
R343	A-2
R344	B-1
R345	B-1
R346	B-1
R347	A-3
R348	A-3
R349	A-3
R350	A-3
T301	B-2

DD-134 BOARD (SIDE B)

C301	D-6
C302	D-6
C303	D-5
C304	D-5
C305	D-5
C308	D-5
C309	D-6
C311	D-6
C312	C-5
C313	C-6
C314	C-5
C315	C-6
C316	C-5
C317	C-6
C318	C-5
C323	C-6
C324	C-5
C325	C-5
C326	C-5
C328	B-6
C329	B-5
C330	B-5
C331	D-6
C332	B-5
C333	B-6
C336	B-5
C337	C-5
C338	B-5
C340	C-6
C341	C-6
C342	A-6
C343	C-6
C346	A-5
C347	B-6
C348	A-6
C351	B-6
C353	A-6
C354	A-5
C356	A-5
C362	A-6
C367	D-5
C366	A-6
CN933	A-7
D307	D-6
D314	D-6
FB310	C-6
FB320	A-7
IC301	C-5
L303	C-6
L307	B-6
L308	B-6
L309	B-6
L313	A-5
L314	A-5
L315	A-6
L316	A-5
L317	A-6
Q306	D-6
Q307	B-6
Q308	B-5
Q309	C-5
Q310	B-6
Q311	B-5
Q312	C-5
Q313	C-6
Q315	C-6
Q317	A-6
Q318	A-5
Q319	A-5
Q321	A-6
R301	D-6
R302	D-5
R304	C-6
R305	D-5
R306	D-6
R307	C-4
R311	D-6
R312	C-5
R314	C-6
R315	C-5
R318	C-6
R320	D-6
R321	D-6
R322	C-6
R323	A-5
R324	A-6
R325	A-6
R326	A-6
R327	A-5
R328	A-5
R330	D-6
R331	C-5
R335	D-6
R353	D-5
R354	D-5
R355	D-6
R356	B-6
R357	A-6
R358	A-6

SECTION 5
ADJUSTMENTS

1. Before starting adjustment

EVR Data Re-writing Procedure When Replacing Board

The data that is stored in the repair board, is not necessarily correct.
Perform either procedure 1 or procedure 2 or procedure 3 when replacing board.

Procedure 1

Save the EVR data of the machine in which a board is going to be replaced. Download the saved data after a board is replaced.

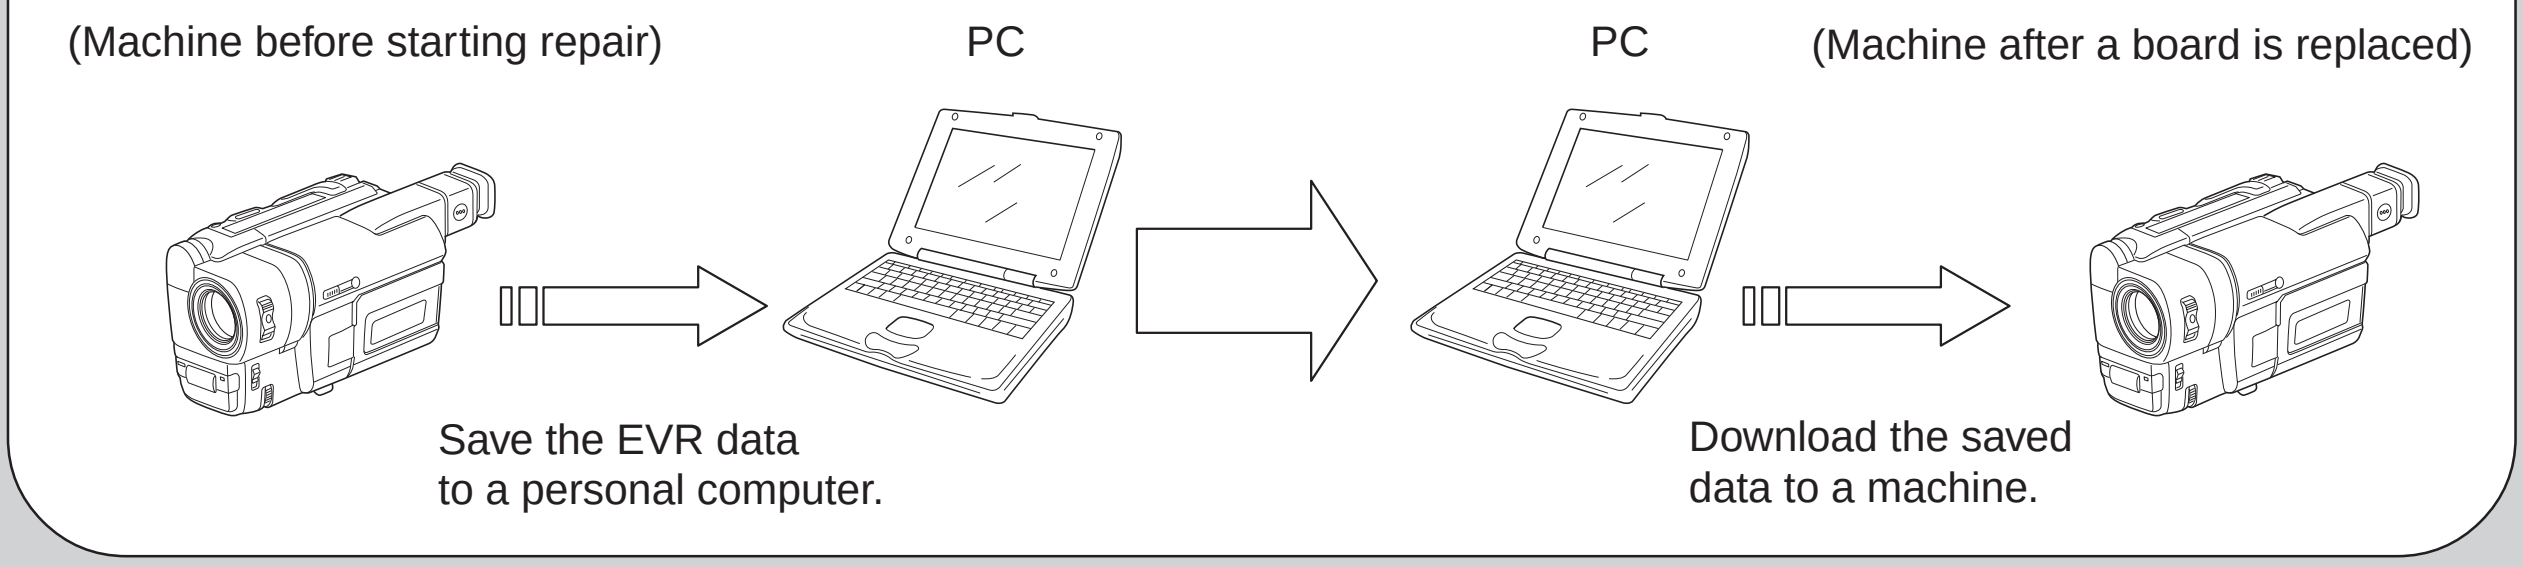
(Machine before starting repair)
PC
PC
(Machine after a board is replaced)
Save the EVR data
to a personal computer.
Download the saved
data to a machine.

Procedure 2

Remove the EEPROM from the board of the machine that is going to be repaired. Install the removed EEPROM to the replaced board.

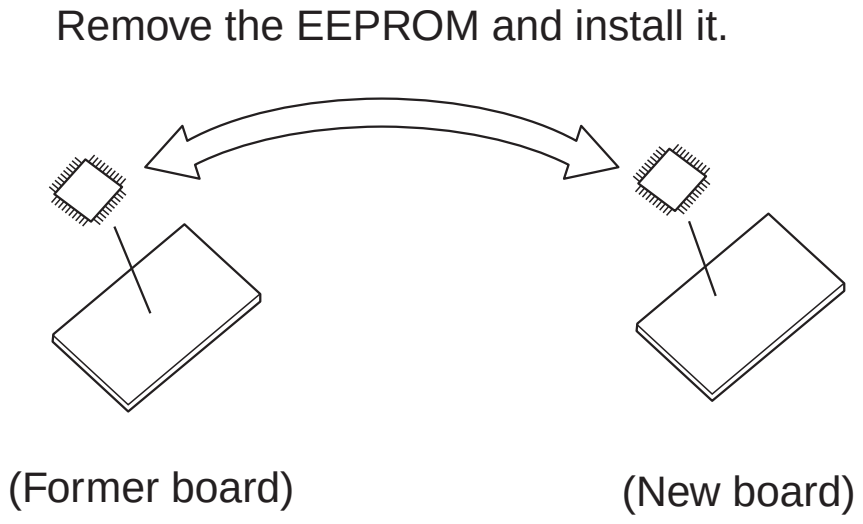
Remove the EEPROM and install it.
(Former board)
(New board)

Procedure 3

When the data cannot be saved due to defective EEPROM, or when the EEPROM cannot be removed or installed, save the data from the same model of the same destination, and download it.

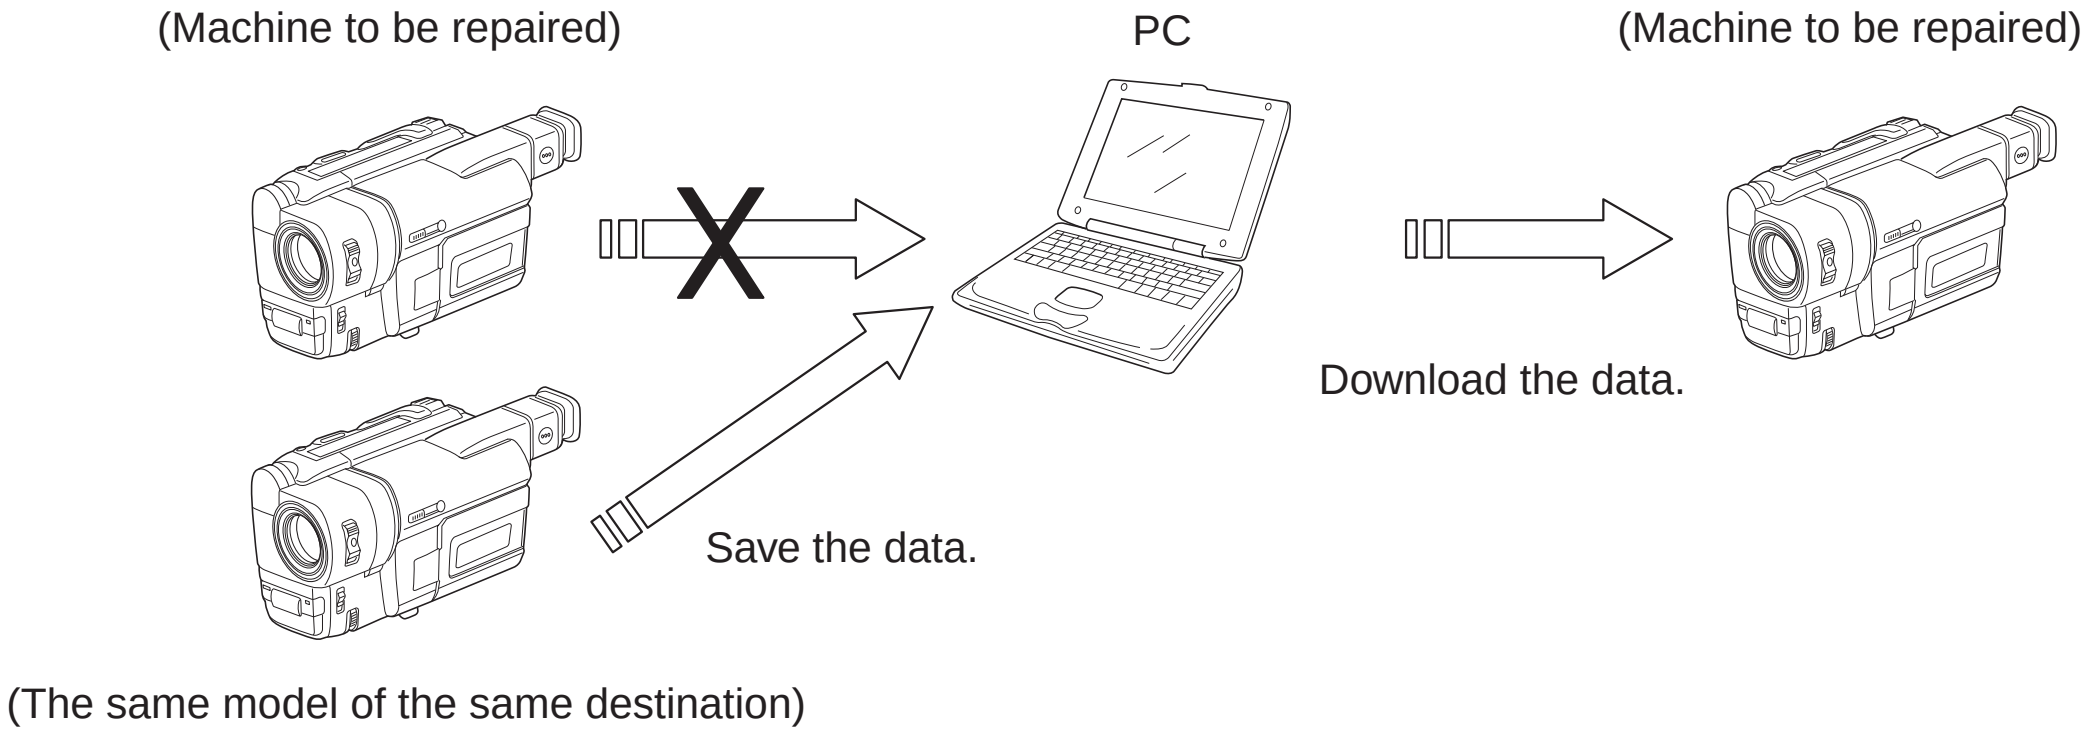
(Machine to be repaired)
PC
(Machine to be repaired)
X
Download the data.
Save the data.
(The same model of the same destination)

After the EVR data is saved and downloaded, check the respective items of the EVR data.
(Refer to page 5-3 for the items to be checked.)

1-1. Adjusting items when replacing main parts and boards.

• Adjusting items when replacing main parts

When replacing main parts, adjust the items indicated by ● in the following table.

Adjustment Section	Adjustment	Replaced parts																				
		Block replacement							Parts replacement													
		Lens device	Mechanism deck	LCD block (*1) LCD901 (LCD panel)	LCD block (*1) ND901 (Fluorescent tube)	B/W EVF block V901 (Picture tube)	Mechanism deck M901 (Drum assy)	Mechanism deck M902 (Capstan motor)	CD-239/240 board IC201 (CCD imager)	PD-117 board (*1) IC5501 (RGB decoder (LCD))	PD-117 board (*1) IC5502 (Timing generator (LCD))	SE-100/101 board (*3) SE451,452 (PITCH,YAW sensor)	VC-234 board IC501, X501 (Timing generator)	VC-234 board IC502 (S/H, AGC, A/D conv.)	VC-234 board IC201 (Y, C process)	VC-234 board IC205 (VCO)	VC-234 board IC641 (Y, C IN/OUT)	VC-234 board IC101 (REC/PB AMP)	VC-234 board (*4) IC751 (IR transmitter)	VC-234 board IC701 (AFM Audio process)	VF-129 board IC901 (CRT driver)	VF-129 board T901 (FBT)
Initialization of D, E, F, 7 page data	Initialization of D, E, F, 7 page data																					
Camera	Hall adj.	●																				
	Flange back adj.	●							●													
	Color reproduction adj.								●					●								
	AWB & LV standard data input								●					●								
	Auto white balance adj.								●					●								
	Steady shot check (*3)											●										
B/W EVF	Centering adj.					●															●	●
	Focus adj.					●															●	●
	Aberration adj.					●															●	●
	Horizontal amplitude adj.					●															●	●
	Vertical amplitude adj.					●															●	●
	Brightness adj.					●															●	●
LCD (*1)	LCD Initial data input																					
	VCO adj.										●											
	RGB AMP adj.									●												
	Contrast adj.									●												
	COM AMP adj.									●												
	V-COM adj.			●						●												
	White balance adj.			●	●					●												
Servo	CAP FG offset adj.		●					●														
	Switching position adj.		●				●															
Video	28MHz origin oscillation adj.												●									
	AFC f_0 adj.														●	●						
	Filter f_0 adj.																●					
	Y OUT level adj.														●		●					
	C OUT level adj.														●		●					
	REC Y current adj.														●			●				
	REC C/AFM current adj.														●			●				
IR (*4)	IR video carrier frequency adj.																●		●			
	IR video deviation adj.																●		●			
	IR audio deviation adj.																		●			
Audio	1.5MHz deviation adj.																			●		
	1.7MHz deviation adj. (*2)																			●		
	BPF f_0 adj.																			●		
Mechanism	Tape path adj.		●				●	●														

Table. 5-1-1(1).

• Adjusting items when replacing a board or EEPROM

When replacing a board or EEPROM, adjust the items indicated by ● in the following table.

*1: TRV model (CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E) only.
*2: STEREO model (CCD-TR918E/TRV87E) only.
*3: STEADY SHOT model (CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E) only.
*4: LASER LINK model (CCD-TR918E/TRV87E) only.

Adjustment Section	Adjustment	Replaced parts				
		Board replacement				
		SE-100/101 board (*3) (COMPLETE)	VC-234 board (COMPLETE)	PD-117 board (*1) (COMPLETE)	VF-129 board (COMPLETE)	VC-234 board IC901 (EEPROM)
Initialization of D, E, F, 7 page data	Initialization of D, E, F, 7 page data					●
Camera	Hall adj.		●			●
	Flange back adj.		●			●
	Color reproduction adj.		●			●
	AWB & LV standard data input		●			●
	Auto white balance adj.		●			●
	Steady shot check (*3)	●	●			●
B/W EVF	Centering adj.				●	
	Focus adj.				●	
	Aberration adj.				●	
	Horizontal amplitude adj.				●	
	Vertical amplitude adj.				●	
	Brightness adj.				●	
LCD (*1)	LCD Initial data input		●			●
	VCO adj.		●	●		●
	RGB AMP adj.		●	●		●
	Contrast adj.		●	●		●
	COM AMP adj.		●	●		●
	V-COM adj.		●	●		●
	White balance adj.		●	●		●
Servo	CAP FG offset adj.		●			●
	Switching position adj.		●			●
Video	28MHz origin oscillation adj.					●
	AFC f_0 adj.					●
	Filter f_0 adj.					●
	Y OUT level adj.					●
	C OUT level adj.					●
	REC Y current adj.					●
	REC C/AFM current adj.					●
IR (*4)	IR video carrier frequency adj.					●
	IR video deviation adj.					●
	IR audio deviation adj.					●
Audio	1.5MHz deviation adj.					●
	1.7MHz deviation adj. (*2)					●
	BPF f_0 adj.					●
Mechanism	Tape path adj.					

Table. 5-1-1(2).

5-1. CAMERA SECTION ADJUSTMENT

1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

1-1-1. List of Service Tools

- Oscilloscope
- Regulated power supply
- Color monitor
- Digital voltmeter
- Vectorscope

Ref. No.	Name	Parts Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto white balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	White balance check
	ND filter 0.4	J-6080-806-A	White balance check
	ND filter 0.1	J-6080-807-A	White balance check
J-3	Pattern box PTB-450	J-6082-200-A	
J-4	Color chart for pattern box	J-6020-250-A	
J-5	Adjustment remote commander (RM-95 upgraded) (Note1)	J-6082-053-B	
J-6	Siemens star chart	J-6080-875-A	For checking the flange back
J-7	Clear chart for pattern box	J-6080-621-A	
J-8	Multi CPC jig	J-6082-311-A	For adjusting the LCD block
J-9	CPC-7 jig	J-6082-382-A	For adjusting the video section
J-10	Power code (Note2)	J-6082-223-A	For connecting the battery terminal and DC power supply
J-11	AFM DEV jig	J-6082-312-A	For adjusting the deviation
J-12	IR receiver jig	J-6082-383-A	For adjusting the IR transmitter
J-13	Mini pattern box	J-6082-353-B	For adjusting the flange back
J-14	Camera table	J-6082-384-A	For adjusting the flange back

Note1: If the micro processor IC in the adjustment remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new micro processor (8-759-148-35).

Note2: Connect the adjustment remote commander to the LANC jack, and set to HOLD switch to the "ADJ" side.

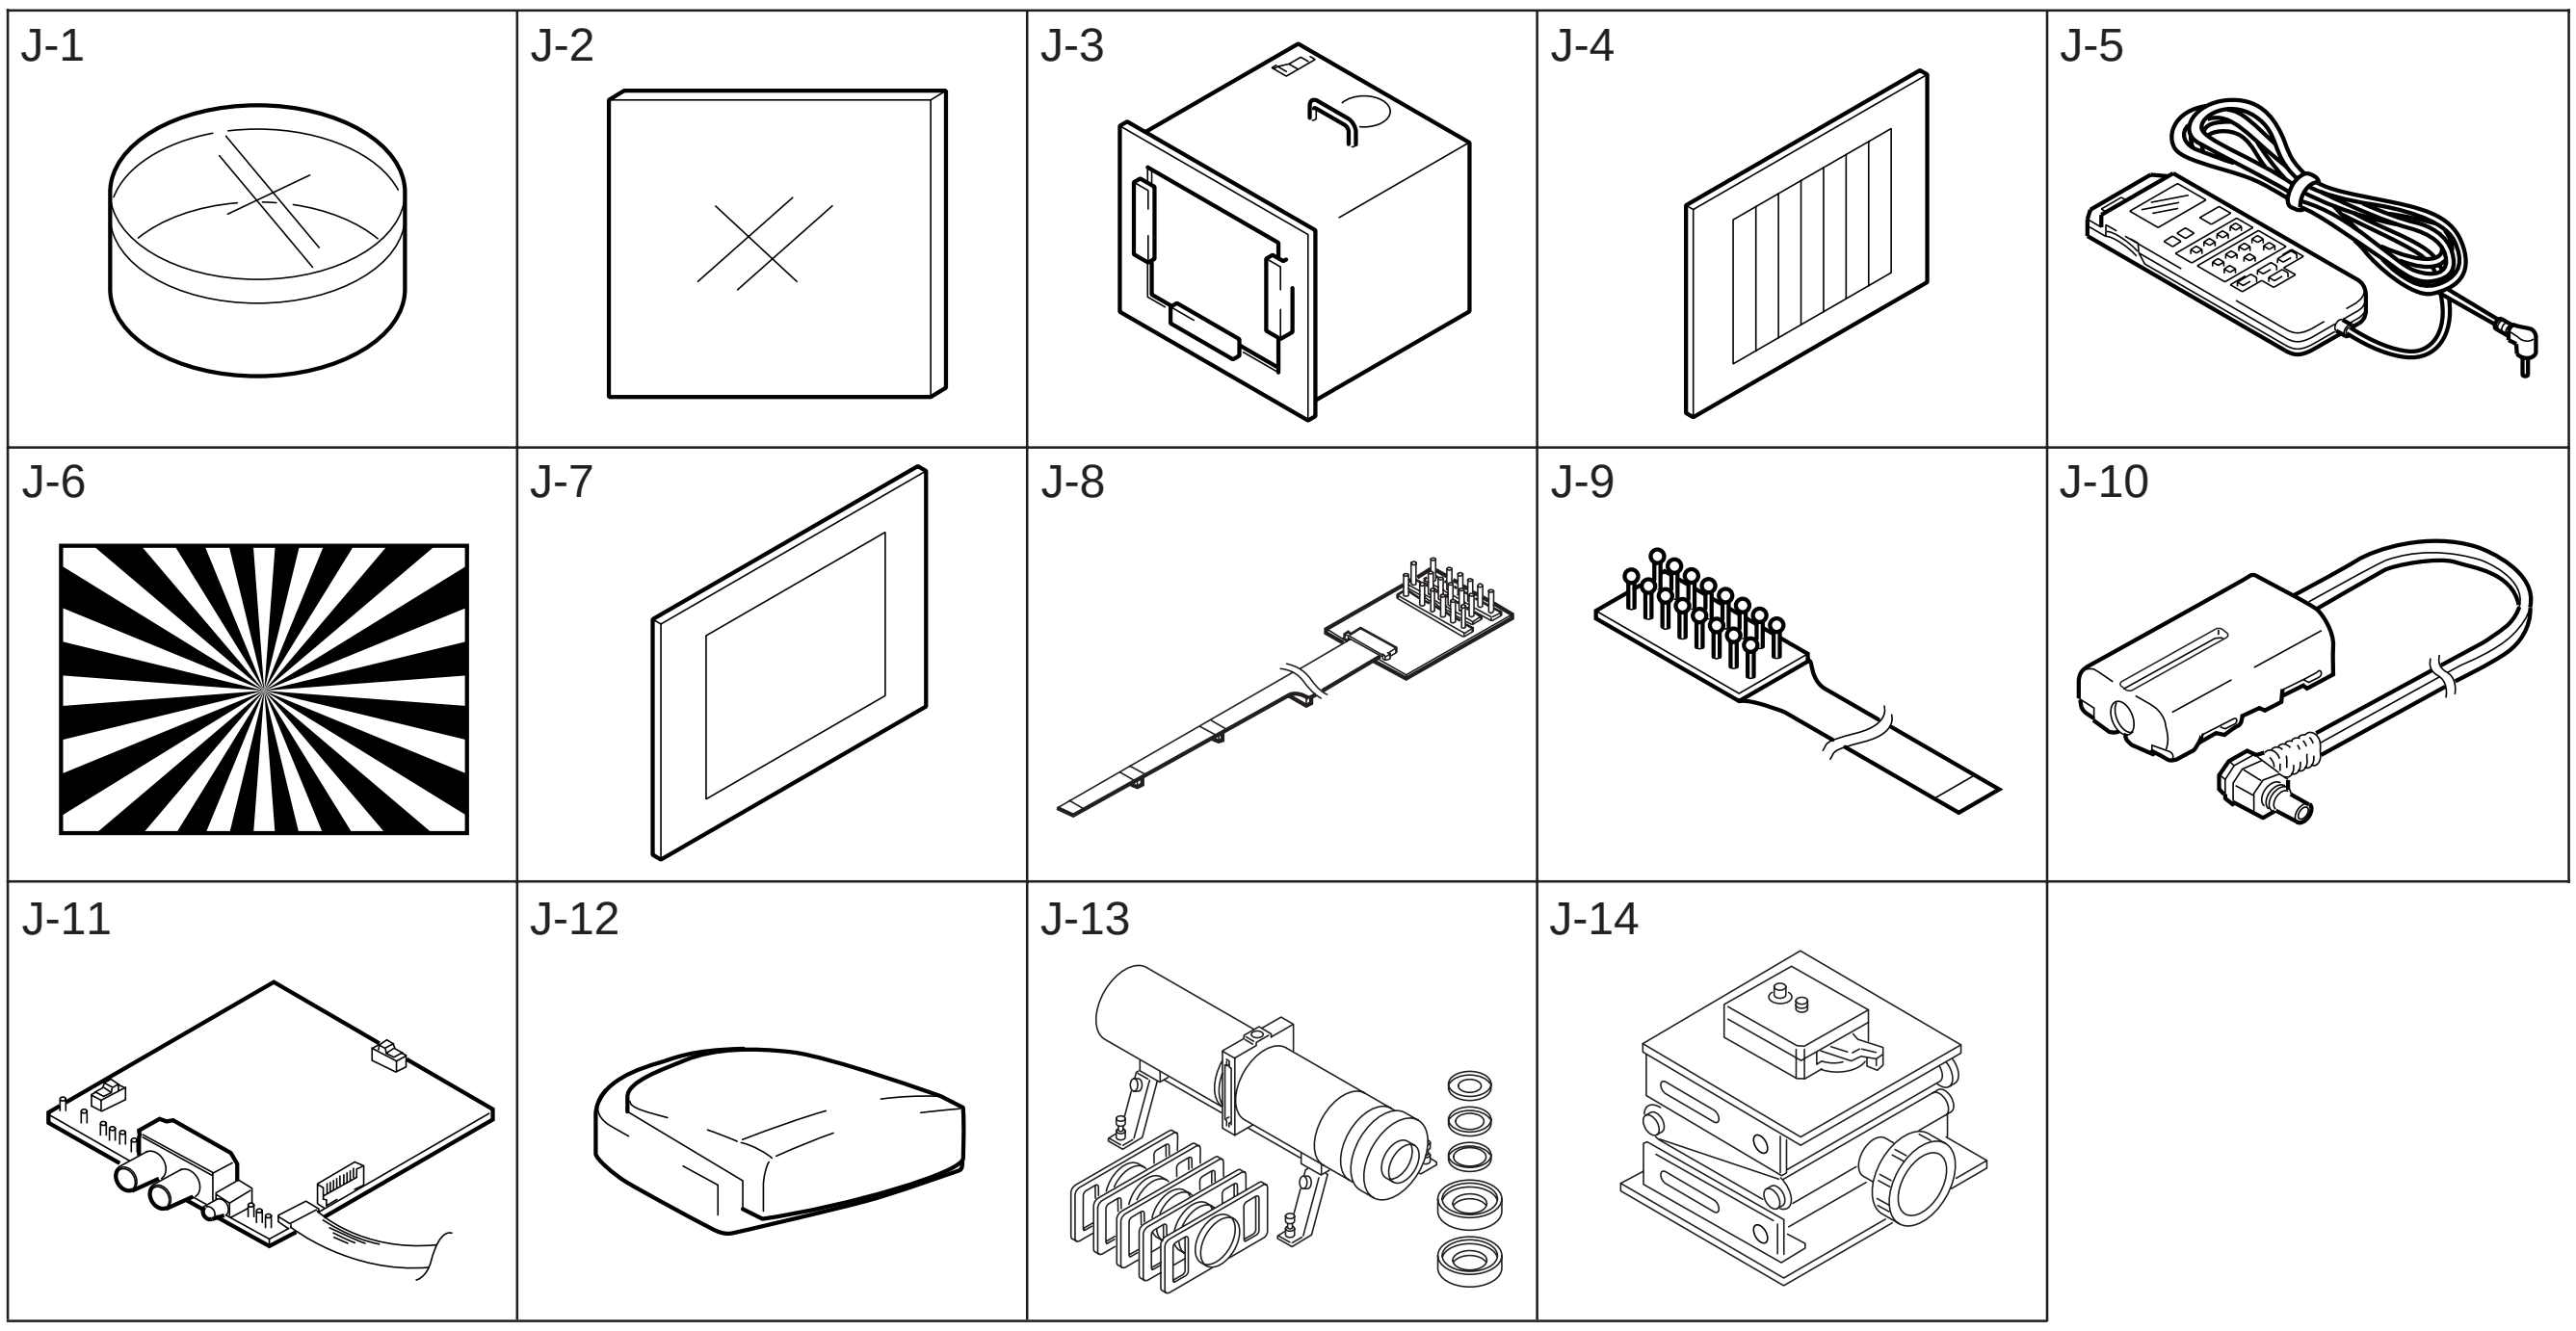

Fig. 5-1-1.

1-1-2. Preparations

Note1: For details of how remove the cabinet and boards, refer to "2. DISASSEMBLY".

Note2: When performing only the adjustments, the lens block and boards need not be disassembled.

Note3: TR model / TRV model
TR model: CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV model: CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

1) Connect the equipment for adjustments according to Fig. 5-1-3, 5-1-4.
2) By setting the "Forced Camera Power ON mode", the camera power can be turned ON even if the front panel block (MA-374/375 board, power switch, microphone unit) has been removed. When removing the front panel block, disconnect the following connector.
   1. VC-234 board CN972 (20P 0.5mm)

Note4: As removing the cabinet (R) (removing the VC-234 board CN975) means removing the lithium 3V power supply (CF-66/67 board BH001), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and data on history use (data of page: 2, address: A2 to AA). (Refer to "SELF-DIAGNOSIS FUNCTION" for the self-diagnosis data, and refer to "5-4. Service Mode" for the data on the history use.)

Note5: Setting the "Forced Camera Power ON" Mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.
The above procedure will enable the camera power to be turned on with the front panel block removed. After completing adjustments, be sure to exit the "Forced Camera Power ON Mode".

Note6: Exiting the "Forced Camera Power ON" Mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
3) Select page: 0, address: 01, and set data: 00.

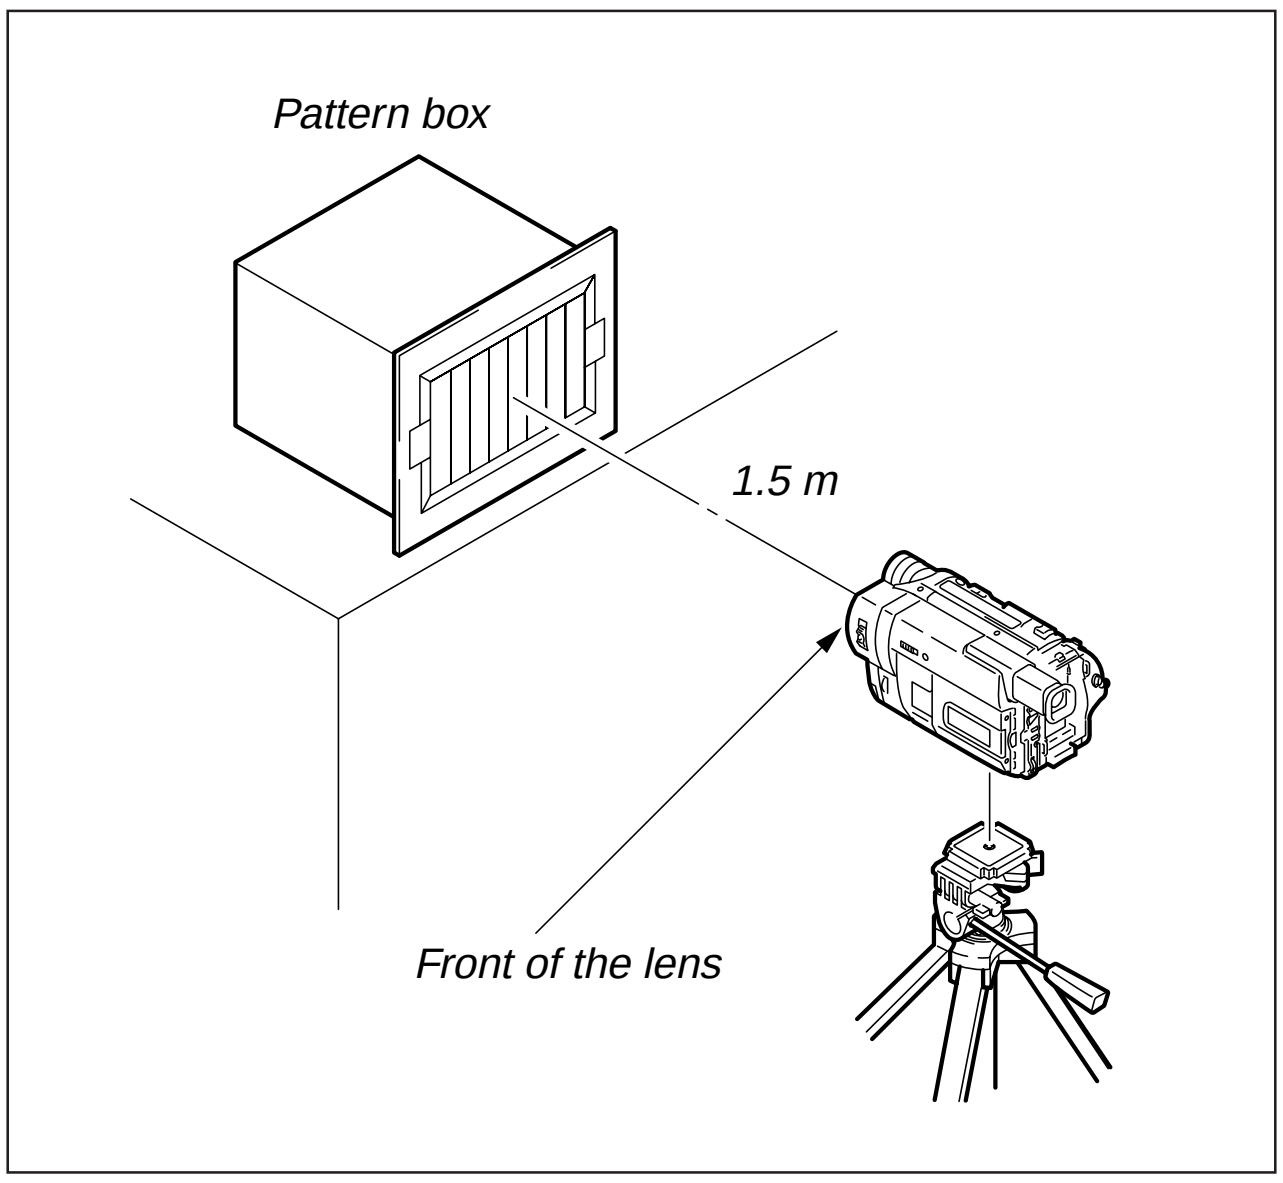

Fig. 5-1-2.

TRV model (CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)

*1: Press the battery switch of the battery terminal using adhesive tape, etc.
*2: CCD-TRV87E model only.
*3: CCD-TRV57E/TRV67E/TRV87E model only.

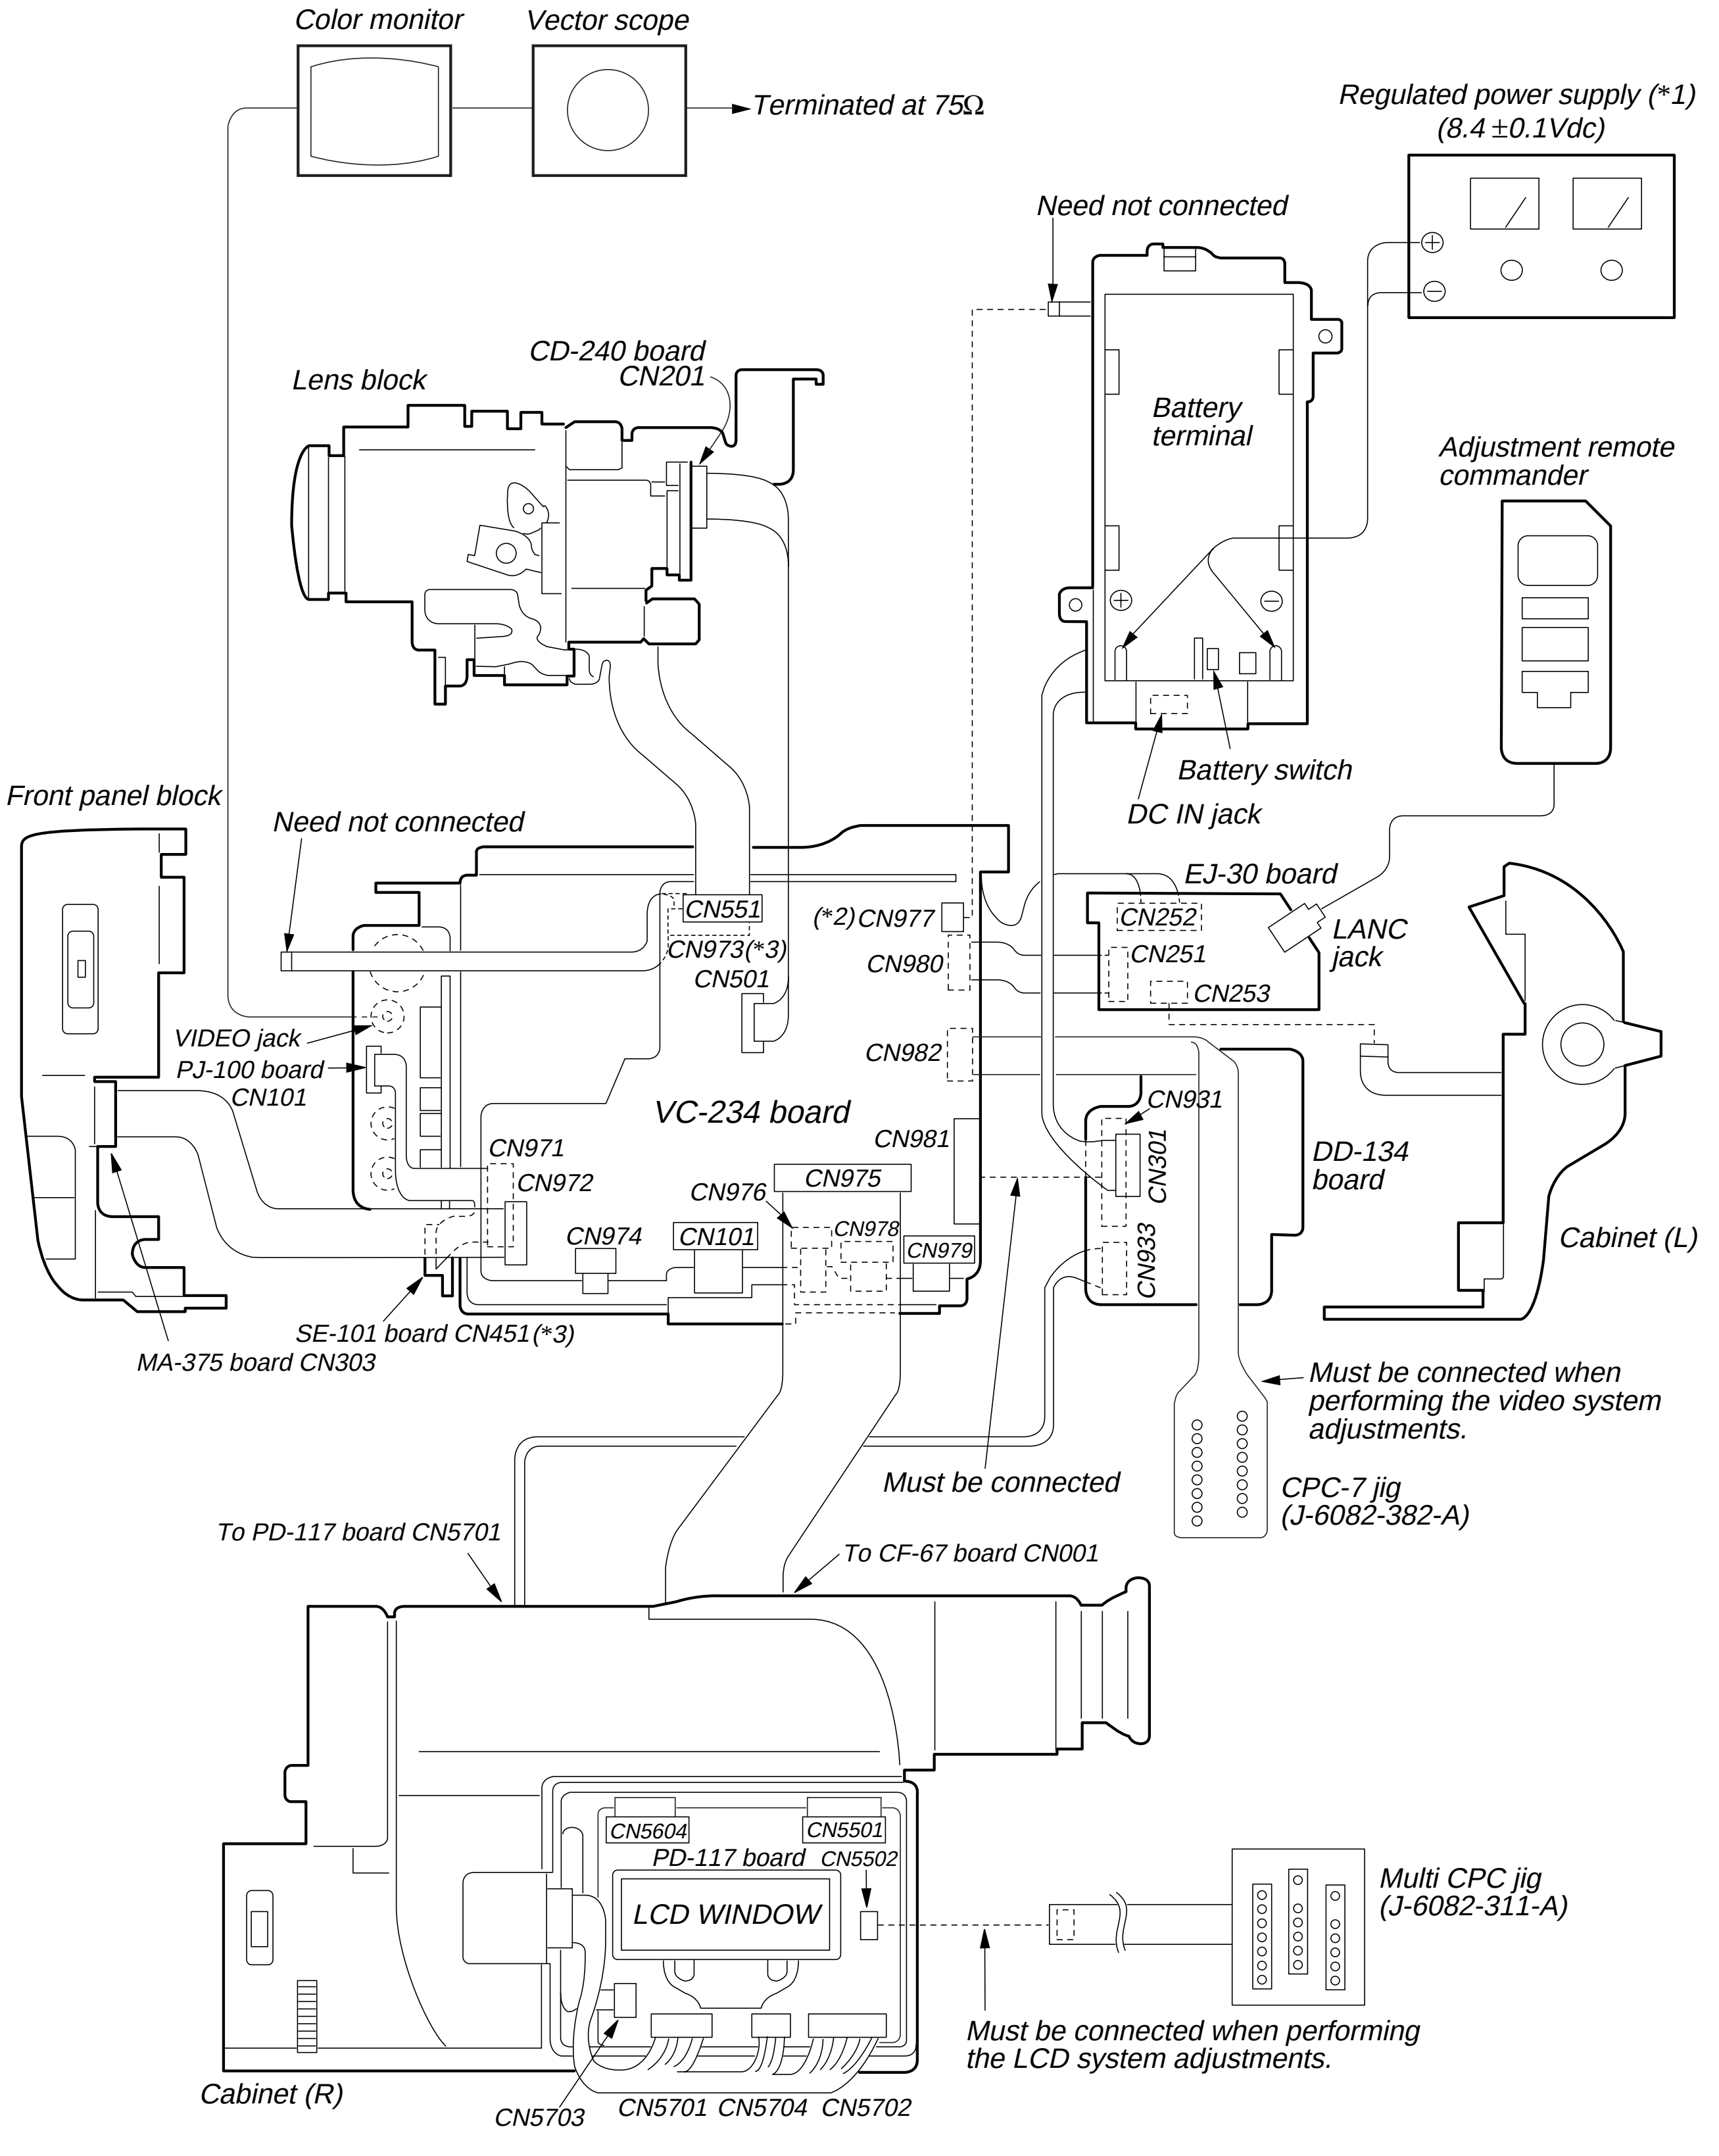

Color monitor
Vector scope
Terminated at 75Ω
Regulated power supply (*1)
(8.4 ±0.1Vdc)
Need not connected
CD-240 board
CN201
Lens block
Battery terminal
Adjustment remote commander
Battery switch
DC IN jack
Front panel block
Need not connected
EJ-30 board
CN551
(*2) CN977
CN252
LANC jack
CN973(*3)
CN980
CN251
CN501
CN253
VIDEO jack
PJ-100 board
CN101
CN982
CN931
VC-234 board
CN981
DD-134 board
CN971
CN301
CN972
CN976
CN975
CN978
CN974
CN101
CN979
CN933
Cabinet (L)
SE-101 board CN451(*3)
MA-375 board CN303
Must be connected when performing the video system adjustments.
Must be connected
CPC-7 jig
(J-6082-382-A)
To PD-117 board CN5701
To CF-67 board CN001
CN5604
CN5501
PD-117 board
CN5502
LCD WINDOW
Multi CPC jig
(J-6082-311-A)
Must be connected when performing the LCD system adjustments.
Cabinet (R)
CN5703
CN5701
CN5704
CN5702

Fig. 5-1-3.

TR model (CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)

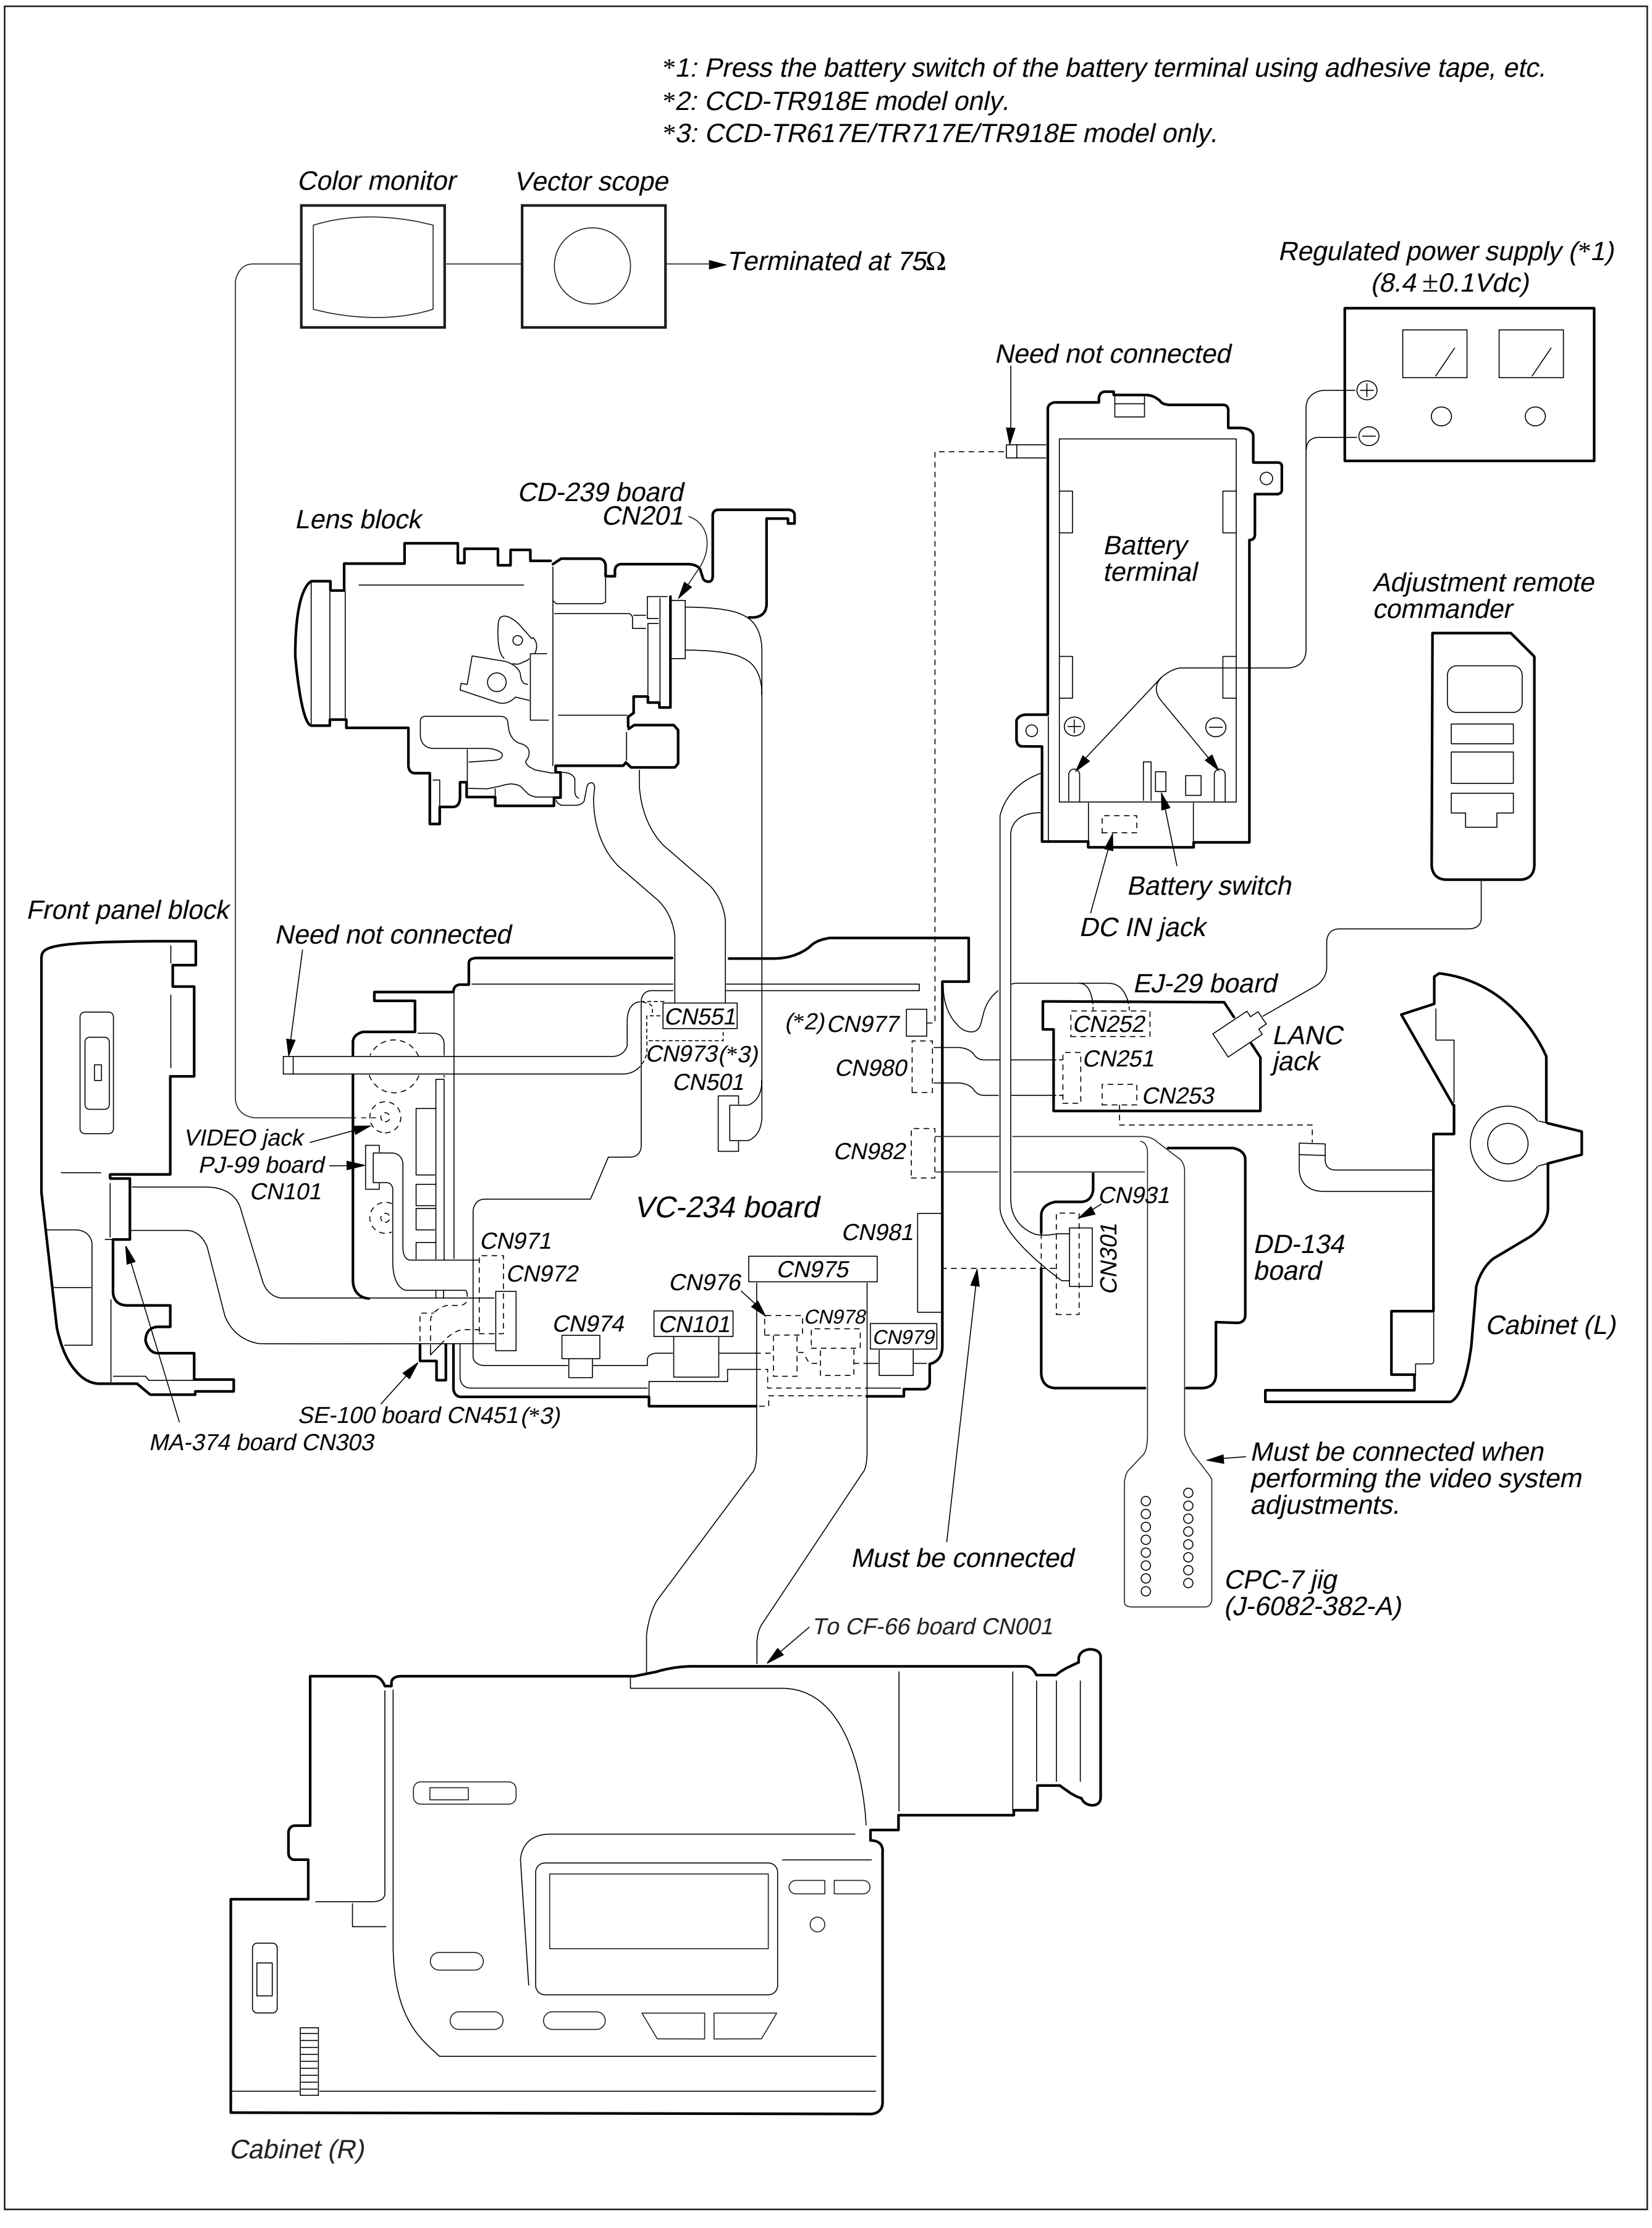

*1: Press the battery switch of the battery terminal using adhesive tape, etc.
*2: CCD-TR918E model only.
*3: CCD-TR617E/TR717E/TR918E model only.

Color monitor
Vector scope
Terminated at 75Ω
Regulated power supply (*1)
(8.4 ±0.1Vdc)
Need not connected
Battery terminal
Adjustment remote commander
CD-239 board
CN201
Lens block
Battery switch
DC IN jack
Front panel block
Need not connected
EJ-29 board
CN551
(*2) CN977
CN252
LANC jack
CN973(*3)
CN980
CN251
CN501
CN253
VIDEO jack
PJ-99 board
CN101
CN982
CN931
VC-234 board
DD-134 board
CN981
CN301
CN971
CN972
CN976
CN975
CN974
CN101
CN978
CN979
Cabinet (L)
SE-100 board CN451(*3)
MA-374 board CN303
Must be connected when performing the video system adjustments.
Must be connected
CPC-7 jig
(J-6082-382-A)
To CF-66 board CN001
Cabinet (R)

Fig. 5-1-4.

1-1-3. Precaution

1. Setting the Switch

Unless otherwise specified, set the switches as follows and perform adjustments without loading cassette.

1. POWER switch (MA-374/375 board) .... CAMERA
2. NIGHT SHOT switch (Lens block) .... OFF
3. VIDEO LIGHT switch (MA-374/375 board) (Note1) ..... OFF
4. DEMO MODE (Menu display) .... OFF
5. DIGITAL ZOOM (Menu display) .... OFF
6. STEADY SHOT (Menu display) (Note2) .... OFF
7. DISPLAY (Menu display) (Note3) .... V-OUT/LCD
8. DISPLAY (CF-66/67 board) (Note3) .... ON
9. FOCUS switch (MR-8500 block) .... MANUAL
10. PROGRAM AE (CF-66/67 board) .... Auto
11. BACK LIGHT (CF-66/67 board) .... OFF
12. PICTURE EFFECT (CF-66/67 board) .... OFF
13. DIGITAL EFFECT (CF-66/67 board) (Note4) .... OFF
14. 16 : 9 WIDE (MENU display) .... OFF

Note1: VIDEO LIGHT model (CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E) only.
Note2: STEADY SHOT model (CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E) only.
Note3: TRV model (CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E) only.
Note4: DIGITAL EFFECT model (CCD-TR918E/TRV87E) only.

2. Order of Adjustments

Basically carry out adjustments in the order given.

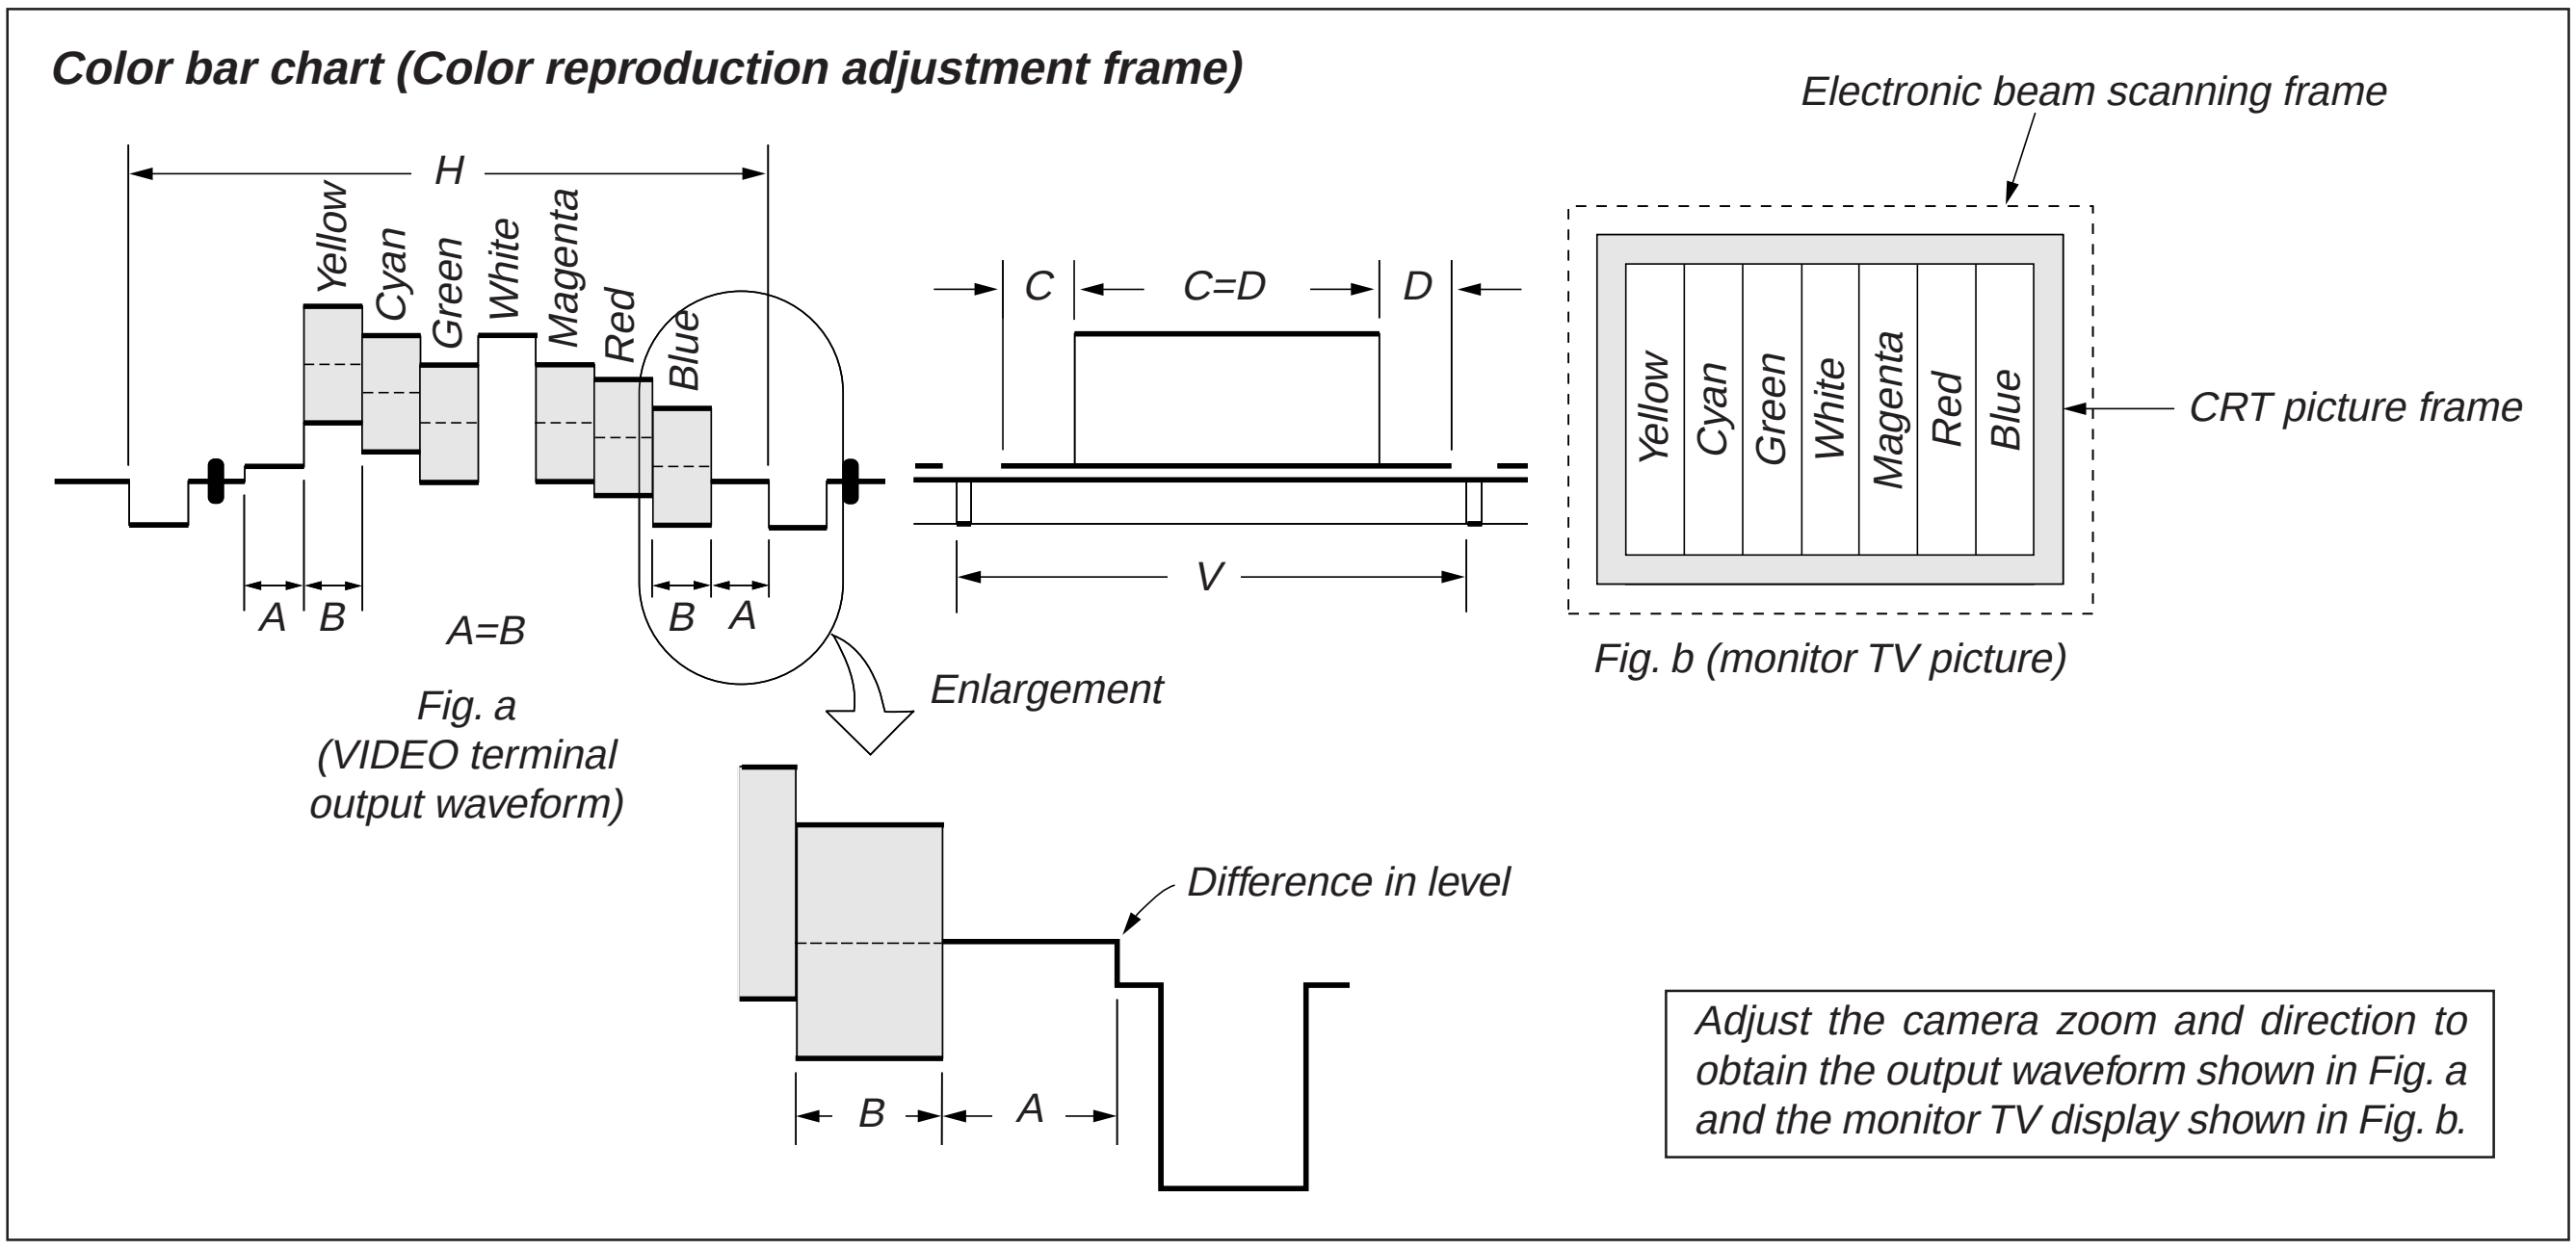

Color bar chart (Color reproduction adjustment frame)

H
Yellow
Cyan
Green
White
Magenta
Red
Blue
A
B
A=B
B
A
C
C=D
D
V
Electronic beam scanning frame
Yellow
Cyan
Green
White
Magenta
Red
Blue
CRT picture frame
Enlargement
Difference in level
B
A

Fig. a (VIDEO terminal output waveform)

Fig. b (monitor TV picture)

Adjust the camera zoom and direction to obtain the output waveform shown in Fig. a and the monitor TV display shown in Fig. b.

Fig.5-1-5.

3. Subjects

1) Color bar chart (Color reproduction adjustment frame)
   When performing adjustments using the color bar chart, adjust the picture frame as shown in Fig. 5-1-5. (Color reproduction adjustment frame)
2) Clear chart (Color reproduction adjustment frame)
   Remove the color bar chart from the pattern box and insert a clear chart in its place. (Do not perform zoom operations during this time.)
3) Flange back adjustment chart
   Make the chart shown in Fig. 5-1-6 using A0 size (1189mm × 841mm) black and white vellum paper.

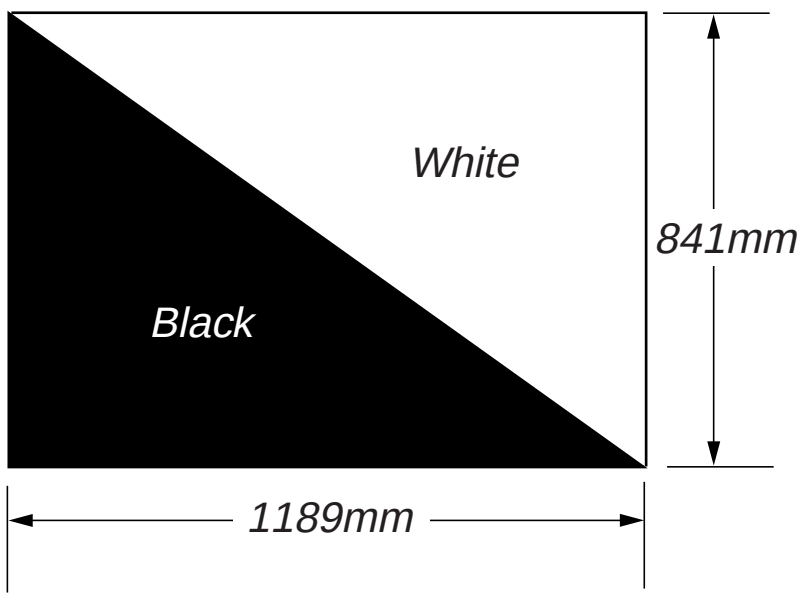

White
Black
841mm
1189mm

Fig. 5-1-6.

Note: Use matte vellum paper bigger than A0, and make sure the edges of the black and white paper joined together are not rough.

1-2. INITIALIZATION OF D, E, F, 7 PAGE DATA

1. Initializing the D, E, F, 7 Page Data

Note 1: If “Initializing the D, E, F, 7 Page Data” is performed, all data of the D page, E page, F page and 7 page will be initialized. (It is impossible to initialize a single page.)

Note 2: If the D, E, F, 7 page data has been initialized, “Modification of D, E, F, 7 Page Data” and all adjustments need to be performed again.

Adjusting page	D
Adjusting Address	00 to 85
Adjusting page	F
Adjusting Address	00 to FF
Adjusting page	E
Adjusting Address	00 to FF
Adjusting page	7
Adjusting Address	00 to FF

Initializing Method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 6, address: 00, and set data: 51.
3) Select page: 6, address: 01, set data: 51, and press the PAUSE button of the adjustment remote commander.
4) Select page: 6, address: 02, and check that the data is 01.
5) Select page: 2, address: 00, and set data: 29.
6) Select page: 2, address: 01, set data: 29, and press the PAUSE button.
7) Perform “Modification of D, E, F, 7 Page Data”.

2. Modification of D, E, F, 7 Page Data

If the D, E, F, 7 page data has been initialized, change the data of the “Fixed data-2” address shown in the following tables by manual input.

Modifying Method:

1) Before changing the data, select page: 0, address: 01, and set data: 01.
2) New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.
   Note: If copy the data built in the different model, the camcorder may not operate.
3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
4) Check that the data of adjustment addresses is the initial value. If not, change the data to the initial value.

Processing after Completing Modification of D, E, F, 7 Page data

1) Select page: 2, address: 00, and set data: 29.
2) Select page: 2, address: 01, and set data: 29, and press the PAUSE button of the adjustment remote commander.

Note: If the following symptoms occur after completing of the “Modification of D, E, F, 7 page data”, check that the data of the “Fixed data-2” addresses of D page are same as those of the same model of the same destination.
1) The battery end mark on the LCD or viewfinder screen is flashing.
2) The power is shut off so that unit cannot operate.

3. D Page Table

Note1: Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

Address	Remark	
	Initial value	
00 to 0F		
10	00	Test mode
11		Fixed data-1 (Initialized data)
12		
13		Fixed data-2 (Modified data. Copy the data built in the same model.)
14		
15		
16		Fixed data-1
17		Fixed data-2 (Modified data. Copy the data built in the same model.)
18		
19		
1A		
1B		
1C		
1D		
1E		
1F		
20		
21		Fixed data-1
22		Fixed data-2
23		Fixed data-1 (Initialized data)
24		
25		
26		
27		
28		Fixed data-2 (Modified data. Copy the data built in the same model.)
29		
2A		Fixed data-1 (Initialized data)
2B		
2C		
2D		
2E		
2F		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
3A		
3B		
3C		
3D		
3E		
3F		

D page

Address	Initial value	Remark
40		Fixed data-2 (Modified data. Copy the data built in the same model.)
41		
42		Fixed data-1
43		Fixed data-2 (Modified data. Copy the data built in the same model.)
44		
45		
46		Fixed data-1
47		
48		Fixed data-2 (Modified data. Copy the data built in the same model.)
49		
4A		Fixed data-1 (Initialized data)
4B		
4C		
4D		Fixed data-2
4E		
4F		Fixed data-1
50		Fixed data-2 (Modified data. Copy the data built in the same model.)
51		
52		
53		
54		
55		
56		
57		Fixed data-1
58		Fixed data-2 (Modified data. Copy the data built in the same model.)
59		
5A		
5B		
5C		
5D		Fixed data-1 (Initialized data)
5E		
5F		
60		
61		
62		
63		
64		
65		Fixed data-2 (Modified data. Copy the data built in the same model.)
66		
67		
68		
69		
6A		Fixed data-1 (Initialized data)
6B		
6C		
6D		
6E		
6F		
70		
71		
72		
73		
74		
75		
76		Fixed data-1 (Initialized data)
77		
78		
79		
7A		
7B		
7C		
7D		
7E		
7F		
80		
81		
82		
83		
84		Fixed data-2
85		Fixed data-1

Table. 5-1-2

4. F Page table

Note1: Fixed data-1: Initialized data. (Refer to "1. Initializing the D, E, F, 7 Page Data".)
Fixed data-2: Modified data. (Refer to "2. Modification of D, E, F, 7 Page Data".)

Address	Initial value	Remark
00 to 0F		
10	00	Emergency memory address
11	00	
12	00	
13	00	
14	00	
15	00	
16	00	
17	00	
18	00	
19	00	
1A	00	
1B	00	
1C		Fixed data-2 (Modified data. Copy the data built in the same model.)
1D		
1E		Fixed data-1
1F		Fixed data-2
20		Fixed data-1 (Initialized data)
21		
22		
23		
24		Fixed data-2
25		Fixed data-1
26		Fixed data-2
27		Fixed data-1 (Initialized data)
28		
29		
2A		
2B		
2C		
2D		
2E		
2F		
30		
31		
32		
33		Fixed data-2
34		Fixed data-1 (Initialized data)
35		
36		
37		
38	68	HALL adj.
39	80	
3A	8D	
3B		Fixed data-2
3C	80	AWB & LV standard data input
3D	7A	
3E	2B	
3F	80	
40	65	
41	80	
42	8D	Auto white balance adj.
43	87	
44		Fixed data-1 (Initialized data)
45		
46		
47	33	Color reproduction adj.
48		Fixed data-1
49	34	Color reproduction adj.
4A		Fixed data-1 (Initialized data)
4B		
4C		
4D	8C	28MHz origin osc. Adj.
4E	28	Flange back adj.
4F	07	
50	3A	
51	4A	
52	12	
53	0B	
54	54	
55	00	
56	19	
57	00	
58	37	
59	00	
5A	00	
5B	04	
5C	00	
5D	00	
5E		Fixed data-2
5F		
60		Fixed data-1 (Initialized data)
61		
62	0A	Switching position adj.
63	00	
64	83	CAP FG offset adj.
65	40	AFC f_0 adj.
66	77	Filter f_0 adj.
67	6B	Y OUT level adj.
68	9A	C OUT level adj.
69		Fixed data-2
6A	D7	REC Y current adj.
6B	D7	
6C		Fixed data-1
6D		Fixed data-2 (Modified data. Copy the data built in the same model.)
6E		
6F		
70		
71	A0	REC C/AFM current adj.
72		Fixed data-1
73		Fixed data-2 (Modified data. Copy the data built in the same model.)
74		
75		
76		
77		Fixed data-1 (Initialized data)
78		
79		Fixed data-2

F page

Address	Initial value	Remark
7A		Fixed data-1
7B	A6	1.5MHz deviation adj.
7C	94	1.7MHz deviation adj.
7D	80	BPF f_0 adj.
7E	41	IR video deviation Adj.
7F	33	IR audio deviation Adj.
80	C7	IR video carrier freq. Adj.
81		Fixed data-2
82		Fixed data-1 (Initialized data)
83		
84		
85		
86		
87		
88		
89		
8A		
8B		Fixed data-2
8C		Fixed data-1 (Initialized data)
8D		
8E		Fixed data-2 (Modified data. Copy the data built in the same model.)
8F		
90		Fixed data-1 (Initialized data)
91		
92		
93		Fixed data-2
94		Fixed data-1 (Initialized data)
95		
96		
97		
98		
99		
9A		
9B		
9C		
9D		
9E		Fixed data-2 (Modified data. Copy the data built in the same model.)
9F		
A0		
A1		Fixed data-1 (Initialized data)
A2		
A3		
A4		
A5		
A6		
A7		
A8		
A9		
AA		
AB		
AC		
AD		
AE		
AF		
B0		
B1		Fixed data-1 (Initialized data)
B2		
B3		
B4		
B5		
B6		
B7		
B8		Fixed data-2 (Modified data. Copy the data built in the same model.)
B9		
BA		
BB		
BC		Fixed data-1 (Initialized data)
BD		
BE		
BF		
C0		
C1		
C2		
C3		
C4		
C5		
C6		
C7		
C8		
C9		
CA		
CB		
CC		
CD		Fixed data-2
CE		Fixed data-1 (Initialized data)
CF		
D0		
D1		
D2		
D3		
D4		Fixed data-2
D5		Fixed data-1 (Initialized data)
D6		
D7	FC	Color reproduction adj.
D8	F2	
D9	11	
DA	33	
DB		Fixed data-2
DC		Fixed data-1 (Initialized data)
DD		
DE		Fixed data-2
DF		
E0		Fixed data-1
E1		Fixed data-2
E2		Fixed data-1 (Initialized data)
E3		
E4		
E5		
E6		
E7		
E8		

Address	Initial value	Remark
E9		Fixed data-1 (Initialized data)
EA		
EB		
EC		
ED		Fixed data-2
EE		
EF		Fixed data-1 (Initialized data)
F0		
F1		
F2		
F3		Fixed data-2 (Modified data. Copy the data built in the same model.)
F4		
F5		
F6		
F7		Fixed data-1 (Initialized data)
F8		
F9		
FA		Fixed data-2
FB		Fixed data-1 (Initialized data)
FC		
FD		
FE		
FF		

Table. 5-1-3

5. E Page Table

Note: Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

Address	Remark
00	Fixed data-1 (Initialized data)
01	
02	Fixed data-2 (Modified data. Copy the data built in the same model.)
03	
04	
05	
06	
07	Fixed data-1
08	Fixed data-2 (Modified data. Copy the data built in the same model.)
09	
0A	Fixed data-1 (Initialized data)
0B	
0C	
0D	
0E	
0F	Fixed data-2 (Modified data. Copy the data built in the same model.)
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
1A	Fixed data-1 (Initialized data)
1B	
1C	
1D	
1E	
1F	
20	
21	
22	
23	
24	
25	
26	
27	
28	Fixed data-2
29	Fixed data-1 (Initialized data)
2A	
2B	
2C	
2D	
2E	
2F	
30	Fixed data-2
31	Fixed data-1 (Initialized data)
32	

E page

Address	Remark
33	Fixed data-1
34	Fixed data-2
35	Fixed data-1
36	Fixed data-2
37	Fixed data-1
38	Fixed data-2 (Modified data. Copy the data built in the same model.)
39	
3A	Fixed data-1
3B	Fixed data-2 (Modified data. Copy the data built in the same model.)
3C	
3D	
3E	Fixed data-1 (Initialized data)
3F	
40	
41	Fixed data-2
42	Fixed data-1 (Initialized data)
43	
44	
45	
46	
47	
48	
49	
4A	
4B	
4C	
4D	
4E	
4F	
50	
51	Fixed data-2
52	Fixed data-1 (Initialized data)
53	
54	
55	
56	
57	
58	
59	Fixed data-2
5A	Fixed data-1 (Initialized data)
5B	
5C	
5D	
5E	
5F	
60	
61	
62	
63	
64	
65	
66	
67	
68	
69	

Address	Remark
6A	Fixed data-1 (Initialized data)
6B	
6C	
6D	
6E	
6F	
70	
71	
72	Fixed data-2
73	Fixed data-1 (Initialized data)
74	
75	
76	
77	
78	
79	
7A	
7B	
7C	Fixed data-2 (Modified data. Copy the data built in the same model.)
7D	
7E	
7F	Fixed data-1
80	Fixed data-2
81	Fixed data-1 (Initialized data)
82	
83	
84	
85	
86	
87	
88	
89	
8A	
8B	
8C	Fixed data-2 (Modified data. Copy the data built in the same model.)
8D	
8E	
8F	Fixed data-1
90	Fixed data-2
91	Fixed data-1 (Initialized data)
92	
93	Fixed data-2
94	Fixed data-1 (Initialized data)
95	
96	
97	
98	Fixed data-2
99	Fixed data-1 (Initialized data)
9A	
9B	
9C	
9D	
9E	
9F	
A0	
A1	

Address	Remark
A2	Fixed data-1 (Initialized data)
A3	
A4	
A5	
A6	
A7	
A8	Fixed data-2
A9	Fixed data-1 (Initialized data)
AA	
AB	Fixed data-2
AC	Fixed data-1 (Initialized data)
AD	
AE	
AF	
B0	
B1	
B2	
B3	
B4	
B5	
B6	
B7	Fixed data-2
B8	Fixed data-1
B9	Fixed data-2
BA	Fixed data-1
BB	Fixed data-2
BC	Fixed data-1 (Initialized data)
BD	
BE	
BF	
C0	Fixed data-2
C1	Fixed data-1
C2	Fixed data-2
C3	Fixed data-1
C4	Fixed data-2 (Modified data. Copy the data built in the same model.)
C5	
C6	
C7	Fixed data-1 (Initialized data)
C8	
C9	Fixed data-2
CA	Fixed data-1 (Initialized data)
CB	
CC	Fixed data-2
CD	Fixed data-1 (Initialized data)
CE	
CF	
D0	Fixed data-2
D1	Fixed data-1 (Initialized data)
D2	
D3	Fixed data-2
D4	Fixed data-1 (Initialized data)
D5	
D6	Fixed data-2
D7	Fixed data-1 (Initialized data)
D8	
D9	Fixed data-2
DA	Fixed data-2 (Modified data. Copy the data built in the same model.)
DB	
DC	
DD	
DE	Fixed data-1
DF	Fixed data-2
E0	Fixed data-1 (Initialized data)
E1	
E2	
E3	Fixed data-2
E4	Fixed data-1 (Initialized data)
E5	
E6	
E7	
E8	
E9	
EA	
EB	
EC	
ED	
EE	
EF	
F0	
F1	
F2	
F3	
F4	
F5	Fixed data-2 (Modified data. Copy the data built in the same model.)
F6	
F7	
F8	
F9	
FA	
FB	Fixed data-1 (Initialized data)
FC	
FD	
FE	
FF	

Table. 5-1-4

6. 7 Page Table

Note: Fixed data-1: Initialized data. (Refer to “1. Initializing the D, E, F, 7 Page Data”.)
Fixed data-2: Modified data. (Refer to “2. Modification of D, E, F, 7 Page Data”.)

Address	Initial value	Remark
00		Fixed data-1 (Initialized data)
01		
02		
03		
04		
05		
06		Fixed data-2
07		
08		Fixed data-1 (Initialized data)
09		
0A		
0B		Fixed data-2
0C		Fixed data-1 (Initialized data)
0D		
0E		
0F		
10		Fixed data-2
11		
12		Fixed data-1 (Initialized data)
13		
14		Fixed data-2
15		Fixed data-1 (Initialized data)
16		
17		
18		
19		
1A		
1B		
1C		
1D		
1E		
1F		
20		
21		
22		
23		
24		
25		
26		
27		
28		Fixed data-2
29		Fixed data-1
2A		Fixed data-2
2B		Fixed data-1 (Initialized data)
2C		
2D		
2E		Fixed data-2
2F		Fixed data-1
30		Fixed data-2
31		Fixed data-1
32		Fixed data-2
33		Fixed data-1
34		Fixed data-1 (Initialized data)
35		
36		Fixed data-2
37		Fixed data-1
38		Fixed data-2
39		Fixed data-1 (Initialized data)
3A		
3B		
3C		
3D		
3E		
3F		
40		
41		
42		Fixed data-2
43		Fixed data-1 (Initialized data)
44		
45		
46		
47		
48		
49		
4A		
4B		
4C		
4D		
4E		
4F		
50		
51		
52		
53		
54		
55		
56		
57		
58		
59		
5A		
5B		
5C		Fixed data-2 (Modified data. Copy the data built in the same model.)
5D		
5E		
5F		
60		Fixed data-1 (Initialized data)
61		
62		
63		
64		Fixed data-2 (Modified data. Copy the data built in the same model.)
65		
66		
67		
68		Fixed data-1 (Initialized data)
69		
6A		
6B		Fixed data-2

Address	Initial value	Remark
6C		Fixed data-2 (Modified data. Copy the data built in the same model.)
6D		
6E		
6F		Fixed data-1 (Initialized data)
70		
71		
72		
73		
74		
75		
76		
77		Fixed data-2 (Modified data. Copy the data built in the same model.)
78		
79		Fixed data-1
7A		Fixed data-2
7B		Fixed data-1 (Initialized data)
7C		
7D		
7E		
7F		
80		
81		
82		
83		
84		
85		Fixed data-2
86		Fixed data-1 (Initialized data)
87		
88		
89		
8A		
8B		
8C		
8D		
8E		
8F		
90		
91		
92		
93		
94		
95		
96		
97		
98		
99		
9A		
9B		
9C		
9D		
9E		
9F		
A0		
A1		
A2		

Address	Initial value	Remark
A3		Fixed data-1 (Initialized data)
A4		
A5		
A6		
A7		
A8		
A9		
AA		
AB		Fixed data-2
AC		Fixed data-1 (Initialized data)
AD		
AE		
AF		
B0		
B1		
B2		
B3		
B4		
B5		
B6		
B7		
B8		
B9		
BA		
BB		
BC		
BD		
BE		
BF		
C0		
C1		
C2		
C3		
C4		Fixed data-2
C5		Fixed data-1
C6		Fixed data-2 (Modified data. Copy the data built in the same model.)
C7		
C8		
C9		
CA		Fixed data-1
CB		
CC		Fixed data-2 (Modified data. Copy the data built in the same model.)
CD		
CE		
CF		
D0		
D1		Fixed data-1 (Initialized data)
D2		
D3		
D4		
D5		
D6		
D7		
D8		
D9		
DA		

7 page

Address	Initial value	Remark
DB		Fixed data-1 (Initialized data)
DC		
DD		
DE		
DF		
E0		
E1		
E2		
E3		
E4		
E5	6E	VCO adj.(LCD)
E6	63	
E7	8E	V-COM adj.(LCD)
E8	29	RGB AMP adj.(LCD)
E9		Fixed data-1
EA	C3	COM AMP adj.(LCD)
EB	60	White balance adj.(LCD)
EC	65	
ED	50	Contrast adj.(LCD)
EE		Fixed data-1 (Initialized data)
EF		
F0		Fixed data-2
F1		Fixed data-1 (Initialized data)
F2		
F3		Fixed data-2
F4		Fixed data-1 (Initialized data)
F5		
F6		
F7		
F8		
F9	FF	REC Y current adj.(LCD)
FA		Fixed data-1 (Initialized data)
FB		
FC		
FD		
FE		
FF		

Table. 5-1-5

1-3. CAMERA SYSTEM ADJUSTMENTS

Before perform the camera system adjustments, Check that the specified value of “28MHz Origin Oscillation Adjustment”, “Y OUT level Adjustment” and “C OUT level Adjustment” of “VIDEO SYSTEM ADJUSTMENT” are satisfied.

1. HALL Adjustment

For detecting the position of the lens iris, adjust the hall AMP gain and offset.

Subject	Not required
Measurement Point	Display data of page 1
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	38, 39, 3A
Specified Value	When the data of page: 6, address: 01 is “01”: 86 to 8A (Note2) When the data of page: 6, address: 01 is “03”: 15 to 19 (Note2)

Note1: Displayed data of page 1 of the adjustment remote commander.

1 : 00 : XX

Display data

Note2: The PAUSE button of the Adjustment remote commander must be pressed.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 6, address: 94, and set data: 88.
3) Select page: 6, address: 95, and set data: 17.
4) Select page: 6, address: 01, set data: 6D, and press the PAUSE button of the adjustment remote commander. (The HALL adjustment is performed and the adjustment data is stored in page: F, address: 38 to 3A.)
5) Select page: 6, address: 02, and check that the data is “01”.
6) Select page: 6, address: 01, set data: 00, and press the PAUSE button.

Checking method:

1) Select page: 0, address: 03, and set data: 03.
2) Select page: 6, address: 01, set data: 01, and press the PAUSE button.
3) Select page: 1, and check that the display data (Note1) satisfies the specified value.
4) Select page: 6, address: 01, set data: 03, and press the PAUSE button.
5) Select page: 1, and check that the display data (Note1) satisfies the specified value.

Processing after Completing Adjustments

1) Select page: 6, address: 01, set data: 00, and press the PAUSE button.
2) Select page: 6, address: 94, and set data: 00.
3) Select page: 6, address: 95, and set data: 00.
4) Select page: 0, address: 01, and set data: 00.
5) Select page: 0, address: 03, and set data: 00.

2. Flange Back Adjustment (Using Minipattern Box)

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

Subject	Siemens star chart with ND filter for the minipattern box (Note1)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	4E to 5D

Note1: Dark Siemens star chart.
Note2: Make the lens horizontal and perform this adjustment.

Switch setting:

1) NIGHT SHOT .... OFF
2) DIGITAL ZOOM (Menu display) .... OFF
3) STEADY SHOT (Menu display) .... OFF
4) VIDEO LIGHT .... OFF

Preparations before adjustments:

The minipattern box is installed as shown in the following figure.

Note: The attachment lenses are not used.

Specified voltage: The specified voltage varies according to the minipattern box, so adjust the power supply output voltage to the specified voltage written on the sheet which is supplied with the minipattern box.

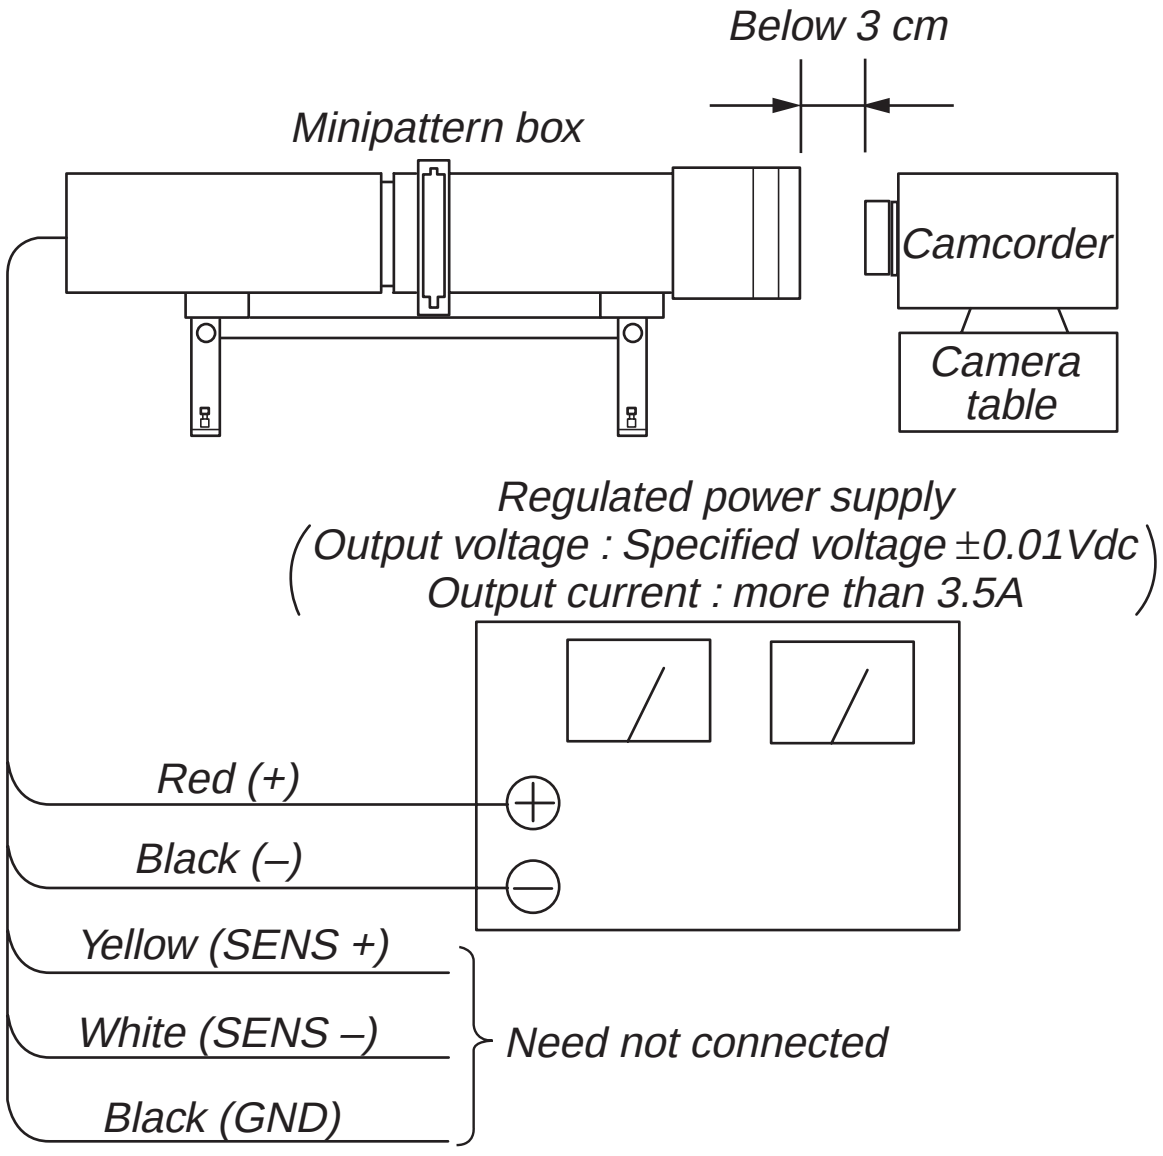

Fig. 5-1-7.

Adjusting method:

1) Install the minipattern box so that the distance between it and the front of the lens of the camcorder is less than 3cm.
2) Make the height of the minipattern box and the camcorder equal.
3) Check that the output voltage of the regulated power supply is the specified voltage.
4) Check that at both the zoom lens TELE end and WIDE end, the center of the Siemens star chart and center of the exposure screen coincide.
5) Select page: 0, address: 01, and set data: 01.
6) Check that the data of page: F, address: 4E to 5D is the initial value (See table below).

Address	Data	Address	Data
4E	28	56	19
4F	07	57	00
50	3A	58	37
51	4A	59	00
52	12	5A	00
53	0B	5B	04
54	54	5C	00
55	00	5D	00

7) Select page: 6, address: 02, and check that the data is “00”.
8) Select page: 6, address: 01, set data: 13, and press the PAUSE button of the adjustment remote commander.
9) Select page: 6, address: 01, set data: 27, and press the PAUSE button.
(The adjustment data will be automatically input to page: F, addresses: 4E to 5D.)
10) Select page: 6, address: 02, and check that the data is “01”.

Processing after Completing Adjustments:

1) Select page: 0, address: 01, and set data: 00.
2) Turn off the power and turn on again.
3) Perform “Flange Back Check”.

3. Flange Back Adjustment (Using Flange Back Adjustment Chart and Subject More Than 500m Away)

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

3-1. Flange Back Adjustment (1)

Subject	Flange back adjustment chart (2.0 m from the front of the lens) (Luminance: 350 ± 50 lux)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	4E to 5D

Note: Make the lens horizontal and perform this adjustment.

Switch setting:

1) NIGHT SHOT .... OFF
2) DIGITAL ZOOM (Menu display) .... OFF
3) STEADY SHOT (Menu display) .... OFF
4) VIDEO LIGHT .... OFF

Adjusting method:

1) Check that at both the zoom lens TELE end and WIDE end, the center of the chart for the flange back adjustment and center of the exposure screen coincide.
2) Select page: 0, address: 01, and set data: 01.
3) Check that the data of page: F, address: 4E to 5D is the initial value (See table below).

Address	Data	Address	Data
4E	28	56	19
4F	07	57	00
50	3A	58	37
51	4A	59	00
52	12	5A	00
53	0B	5B	04
54	54	5C	00
55	00	5D	00

4) Select page: 6, address: 02, and check that the data is “00”.
5) Select page: 6, address: 01, set data: 13, and press the PAUSE button of the adjustment remote commander.
6) Select page: 6, address: 01, set data: 15, and press the PAUSE button.
(The adjustment data will be automatically input to page: F, addresses: 4E to 5D.)
7) Select page: 6, address: 02, and check that the data is “01”.

Processing after Completing Adjustments:

1) Select page: 0, address: 01, and set data: 00.
2) Turn off the power and turn on again.
3) Perform “Flange Back Adjustment (2)”.

3-2. Flange Back Adjustment (2)

Perform this adjustment after performing “Flange Back Adjustment (1)”.

Subject	Subject more than 500m away (Subjects with clear contrast such as buildings, etc.)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	4E to 5D

Note: Make the lens horizontal and perform this adjustment.

Switch setting:

1) NIGHT SHOT .... OFF
2) DIGITAL ZOOM (Menu display) .... OFF
3) STEADY SHOT (Menu display) .... OFF
4) VIDEO LIGHT .... OFF

Adjusting method:

1) Set the zoom lens to the TELE end and expose a subject that is more than 500m away (subject with clear contrast such as building, etc.). (Nearby subjects less than 500 m away should not be in the screen.)
2) Select page: 0, address: 01, and set data: 01.
3) Select page: 6, address: 02, and check that the data is “00”.
4) Select page: 6, address: 01, set data: 13, and press the PAUSE button of the adjustment remote commander.
5) Place a ND filter on the lens so that the optimum image is obtain.
6) Select page: 6, address: 01, set data: 29, and press the PAUSE button.
(The adjustment data will be automatically input to page: F, addresses: 4E to 5D.)
7) Select page: 6, address: 02, and check that the data is “01”.

Processing after Completing Adjustments:

1) Select page: 0, address: 01, and set data: 00.
2) Turn off the power and turn on again.
3) Perform “Flange Back Check”.

4. Flange Back Check

Subject	Siemens star (2.0 m from the front of the lens) (Luminance : approx. 200 lux)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Specified Value	Focused at the TELE end and WIDE end.

Switch setting:

1) NIGHT SHOT .... OFF
2) VIDEO LIGHT .... OFF

Checking method:

1) Place the Siemens star 2.0m from the front of the lens.
2) To open the IRIS, decrease the luminous intensity to the Siemens star up to a point before noise appear on the image.
3) Select page: 6, address: 40, and set data: 02.
4) Select page: 6, address: 41, and set data: 01.
5) Shoot the Siemens star with the zoom TELE end.
6) Turn on the auto focus.
7) Check that the lens is focused (Note).
8) Select page: 6, address: 21, and set data: 10.
9) Shoot the Siemens star with the zoom WIDE end.
10) Observe the TV monitor and check that the lens is focused.

Note: When the auto focus is ON, the lens can be checked if it is focused or not by observing the data on the page 1 of the adjustment remote commander.
1) Select page: 0, address: 03, and set data: 0F.
2) Page 1 shows the state of the focus.

1 : 00 : XX
Odd: Focused
Even: Unfocused

Processing after Completing Adjustments

1) Select page: 6, address: 21, and set data: 00.
2) Select page: 6, address: 40, and set data: 00.
3) Select page: 6, address: 41, and set data: 00.
4) Select page: 0, address: 03, and set data: 00.

5. Picture Frame Setting

Subject	Color bar chart (Color reproduction adjustment frame) (1.5m from the front of the lens)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor
Specified Value	A=B, C=D, E=F

Switch setting:

1) NIGHT SHOT .... OFF
2) DIGITAL ZOOM (Menu display) .... OFF
3) STEADY SHOT (Menu display) .... OFF
4) VIDEO LIGHT .... OFF

Setting method:

1) Adjust the zoom and the camera direction, and set to the specified position.
2) Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using “Color reproduction adjustment frame”.

Check on the oscilloscope

1. Horizontal period

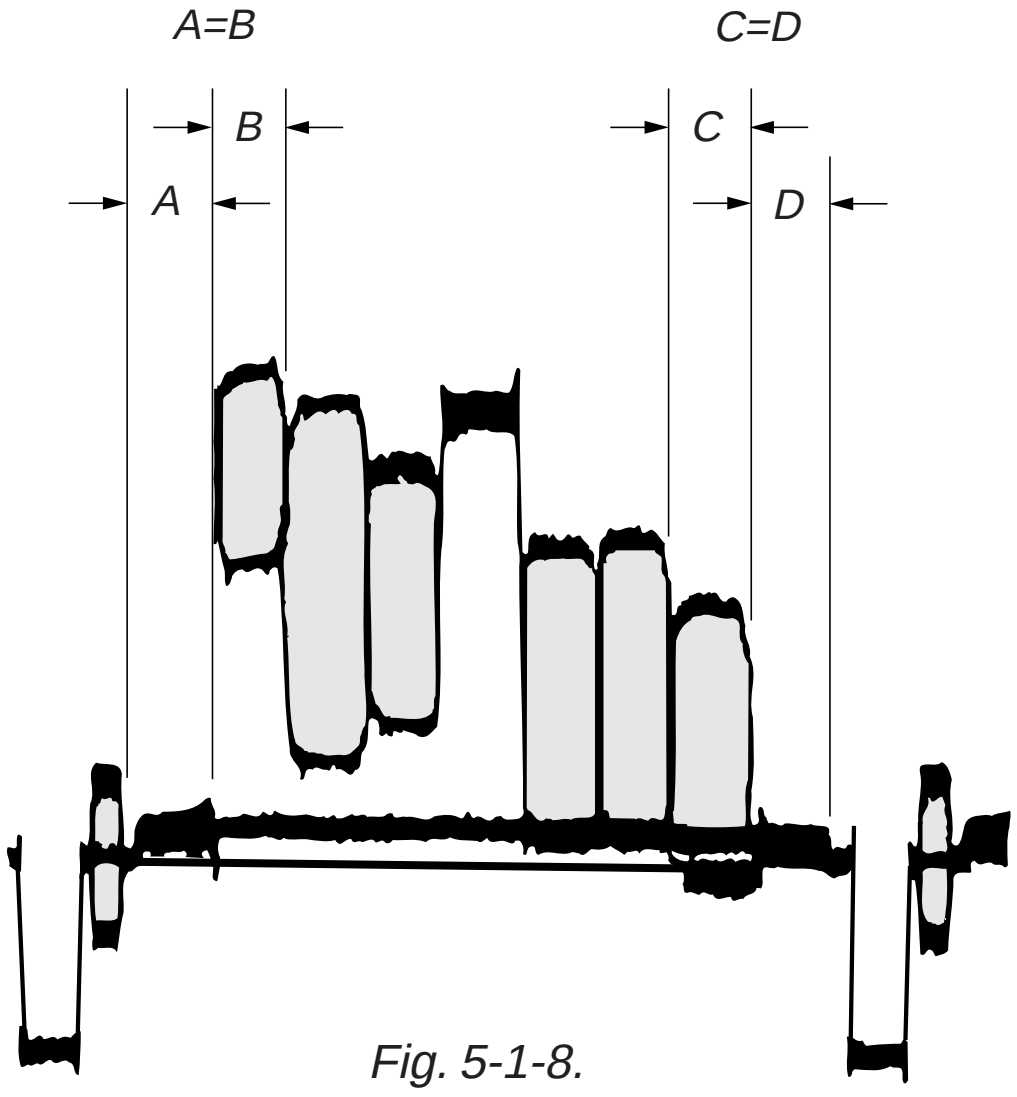

Fig. 5-1-8.

2. Vertical period

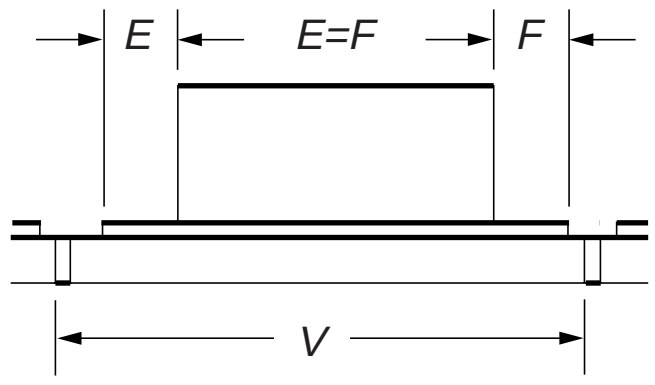

Fig. 5-1-9.

Check on the monitor TV (Underscanned mode)

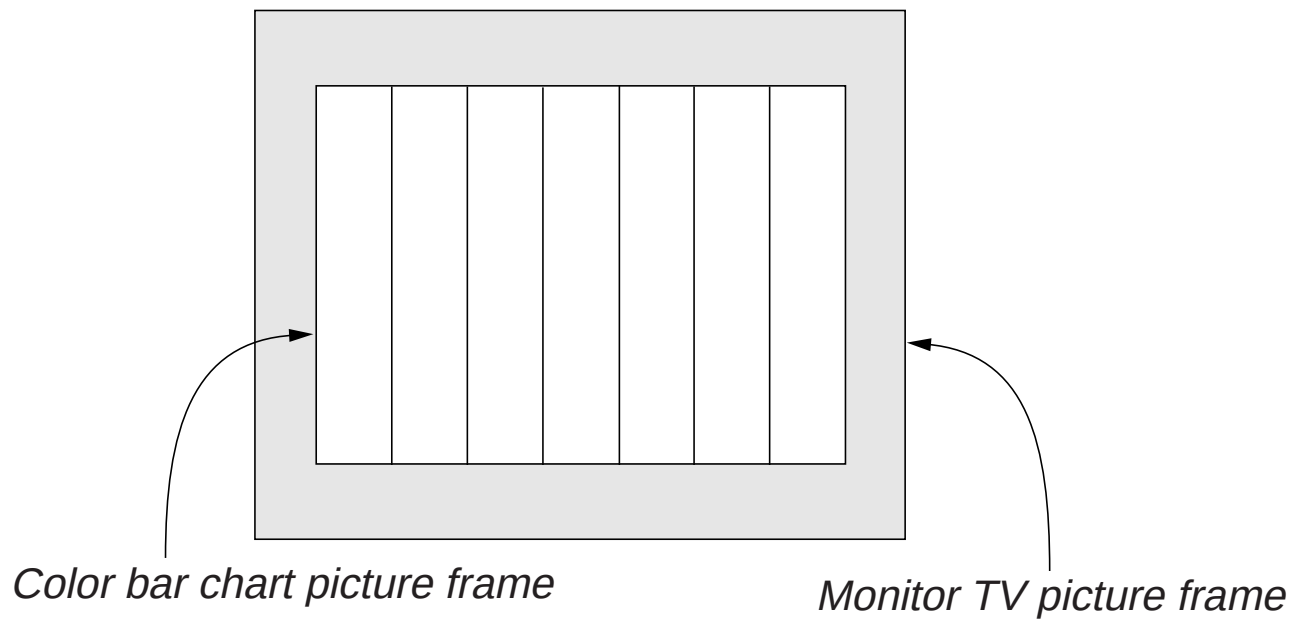

Fig. 5-1-10.

6. Color Reproduction Adjustment

Adjust the color Separation matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart (Color reproduction adjustment frame)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	47, 49, D7, D8
Specified Value	All color luminance points should settle within each color reproduction frame.

Note: 760H TYPE S model:
CCD-TRV87E
760H TYPE P model:
CCD-TR918E
510H 1/4 inch model:
CCD-TR617E/TR717E/TRV57E/TRV67E
510H 1/6 inch model:
CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E

Switch setting:

1) NIGHT SHOT .... OFF
2) DIGITAL ZOOM (Menu display) .... OFF
3) STEADY SHOT (Menu display) .... OFF
4) VIDEO LIGHT .... OFF

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 2B, set data: 97, and press the PAUSE button.
3) Select page: F, address: 8B, and note down the data.
4) Input the following data to page: F, address: 8B.

	Data
760H model	26
510H 1/4 inch model	29
510H 1/6 inch model	29

Note: Press the PAUSE button of the adjustment remote commander each time to set the data.

5) Select page: 6, address: 01, set data: 3D, and press the PAUSE button.
6) Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
7) Change the data of page: F, address: 47, 49, D7 and D8, and settle each color luminance point in each color reproduction frame.

   Note: Be sure to press the PAUSE button of the adjustment remote commander before changing the addresses. If not, the new data will not be written to the memory.
8) Select page: F, address: 8B, input the data noted down at step 3), and press the PAUSE button.

Processing after Completing Adjustments

1) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
2) Select page: 0, address: 01, and set data: 00.

For 510H model and 760H TYPE S model

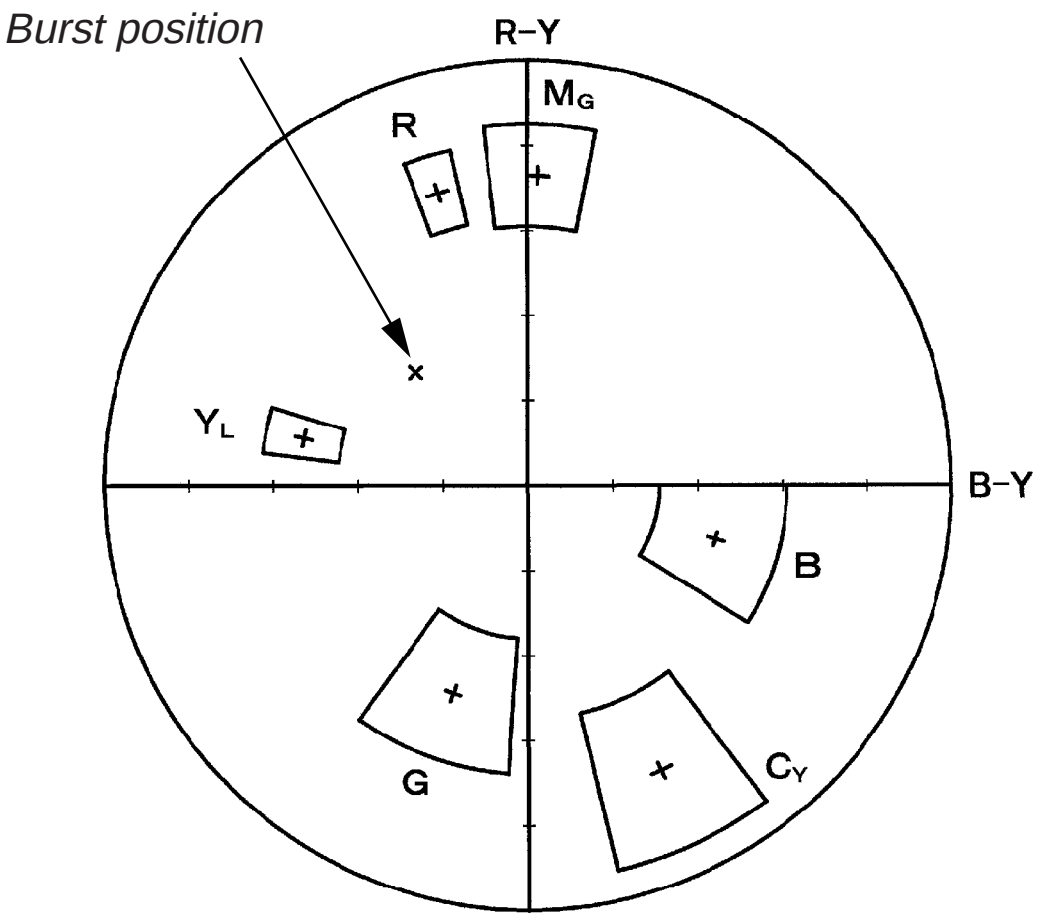

For 760H TYPE P model

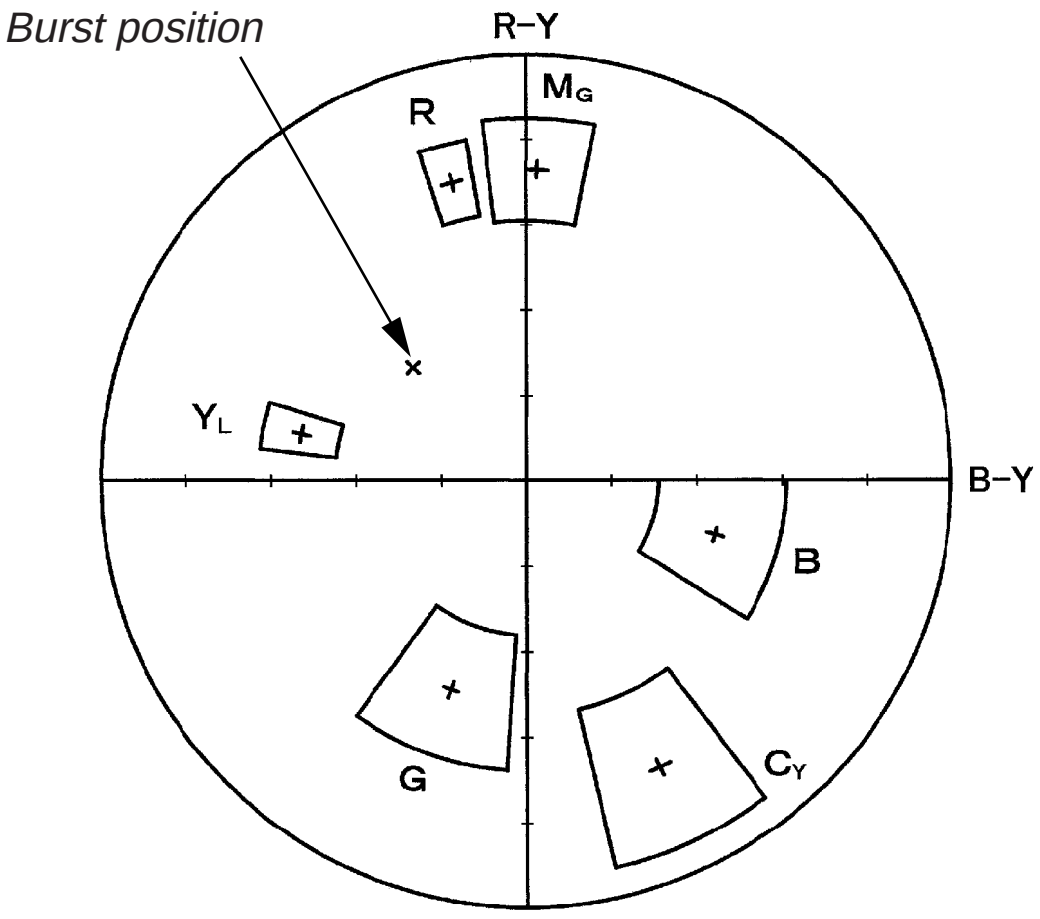

Fig. 5-1-11.

7. Auto White Balance & LV Standard Data Input

Subject	Clear chart (Color reproduction adjustment frame)
Adjustment Page	F
Adjustment Address	3C to 41

Note1: This adjustment should be carried out upon completion of "6. Color Reproduction Adjustment".

Note2: Check that the data of page: 6, address: 02 is "00". If not, turn off the power and turn on again.

Switch setting:

1) NIGHT SHOT .... OFF
2) DIGITAL ZOOM (Menu display) .... OFF
3) STEADY SHOT (Menu display) .... OFF
4) VIDEO LIGHT .... OFF

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 6, address: 01, set data: 11, and press the PAUSE button of the adjustment remote commander.
3) Select page: 6, address: 01, set data: 0D, and press the PAUSE button.
   (When the standard data is take in, the data will be automatically input to page: F, address: 3C to 41.)
4) Select page: 6, address: 02, and check that the data is "01".

Processing after Completing Adjustments

1) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
2) Select page: 0, address: 01, and set data: 00.
3) Perform "Auto White Balance Adjustment".

8. Auto White Balance Adjustment

Adjust to the proper auto white balance output data.
If it is not correct, auto white balance and color reproducibility will be poor.

Subject	Clear chart (Color reproduction adjustment frame)
Filter	Filter C14 for color temperature correction
Measurement Point	Display data of page 1 (Note2)
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	42, 43
Specified Value	760H TYPE S model: R ratio: 2B70 to 2BF0 B ratio: 5E80 to 5F40 760H TYPE P model: R ratio: 2A60 to 2AE0 B ratio: 6020 to 60E0 510H 1/4 inch model: R ratio: 2B40 to 2BC0 B ratio: 5EA0 to 5F60 510H 1/6 inch model: R ratio: 29C0 to 2A40 B ratio: 6040 to 6100

Note1: Perform “Auto White Balance & LV Standard Data Input” before this adjustment.

Note2: Displayed data of page 1 of the adjustment remote commander.

1 : XX : XX
Display data

Note3: 760H TYPE S model:
CCD-TRV87E
760H TYPE P model:
CCD-TR918E
510H 1/4 inch model:
CCD-TRV57E/TRV67E/TR617E/TR717E
510H 1/6 inch model:
CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E

Switch setting:

1) NIGHT SHOT .... OFF
2) DIGITAL ZOOM (Menu display) .... OFF
3) STEADY SHOT (Menu display) .... OFF
4) VIDEO LIGHT .... OFF

Adjusting method:

1) Place the C14 filter for color temperature correction on the lens.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: F, address: B8 to BB, and note down the data of each address.
4) Input the following data to page: F, addresses: B8 to BB.

Address		B8	B9	BA	BB
Data	760H TYPE S model	2B	B0	5E	E0
	760H TYPE P model	2A	A0	60	80
	510H 1/4 inch model	2B	80	5F	00
	510H 1/6 inch model	2A	00	60	A0

Note: Press the PAUSE button of the adjustment remote commander each time to set the data.

5) Select page: 6, address: 01, set data: A7, and press the PAUSE button.
6) Select page: 6, address: 01, set data: A5, and press the PAUSE button.
(The auto white balance adjustment is performed and the adjustment data is stored in page: F, address: 42 and 43.)
7) Select page: 6, address: 02, and check that the data is “01”.
8) Select page: 6, address: 01, set data: 3F, and press the PAUSE button.
9) Select page: 0, address: 03, and set data: 04.
10) Select page: 1, and check that the display data (Note2) satisfies the R ratio specified value.
11) Select page: 0, address: 03, and set data: 05.
12) Select page: 1, and check that the display data (Note2) satisfies the B ratio specified value.
13) Select page: F, address: B8 to BB, and input the data noted down at step 3).
Note: After setting each data, be sure to press the PAUSE button of the adjustment remote commander.

Processing after Completing Adjustments:

1) Select page: 6, address: 01, set data: 00, and press the PAUSE button.
2) Select page: 0, address: 03, and set data: 00.
3) Select page: 0, address: 01, and set data: 00.

9. White Balance Check

Subject	Clear chart (Color reproduction adjustment frame)
Filter	Filter C14 for color temperature correction ND filter 1.0 and 0.4 and 0.1
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Specified Value	Fig. 5-1-12. A to C

Switch setting:
1) NIGHT SHOT .... OFF
2) DIGITAL ZOOM (Menu display) .... OFF
3) STEADY SHOT (Menu display) .... OFF
4) VIDEO LIGHT .... OFF

Checking method:
1) Check that the lens is not covered with either filter.
2) Select page: 6, address: 01, set data: 0F, and press the PAUSE button of the adjustment remote commander.
3) Check that the center of the white luminance point is within the circle shown Fig. 5-1-12. (A).
4) Select page: 6, address: 01, set data: 00, and press the PAUSE button.
5) Select page: 6, address: 01, set data: 23, and press the PAUSE button.
6) Place the C14 filter on the lens.
7) Check that the center of the white luminance point settles in the circle shown Fig. 5-1-12. (B).
8) Remove the C14 filter, and place the ND filter 1.5 (1.0 +0.4+0.1) on the lens.
9) Check that the white luminance point stopped moving, and then remove the ND filter 1.5.
10) Check that the center of the white luminance point settles within the circle shown Fig. 5-1-12. (C).

Processing after Completing Adjustments
1) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.

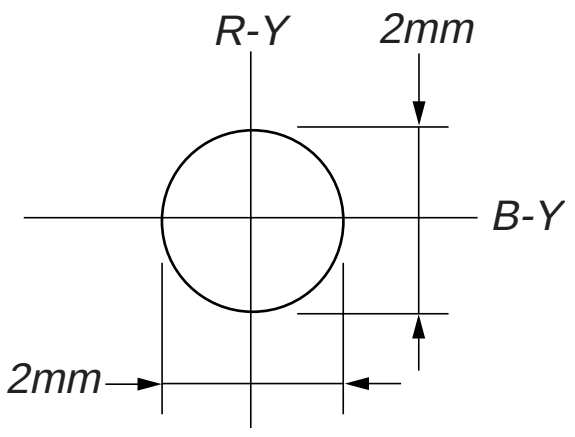

Fig. 5-1-12. (A)

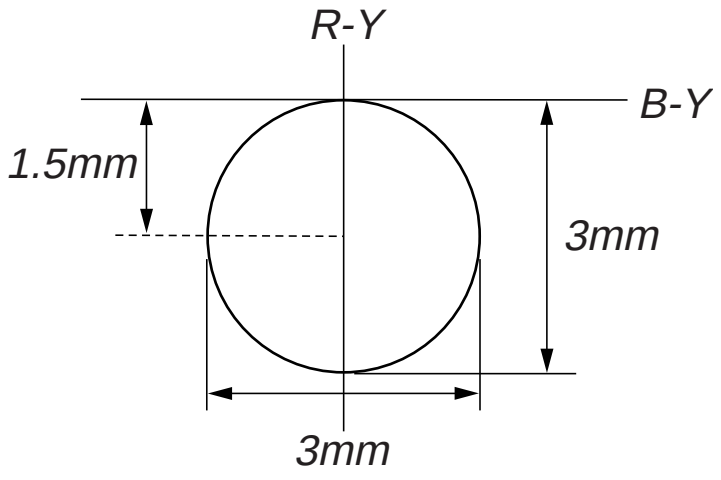

Fig. 5-1-12. (B)

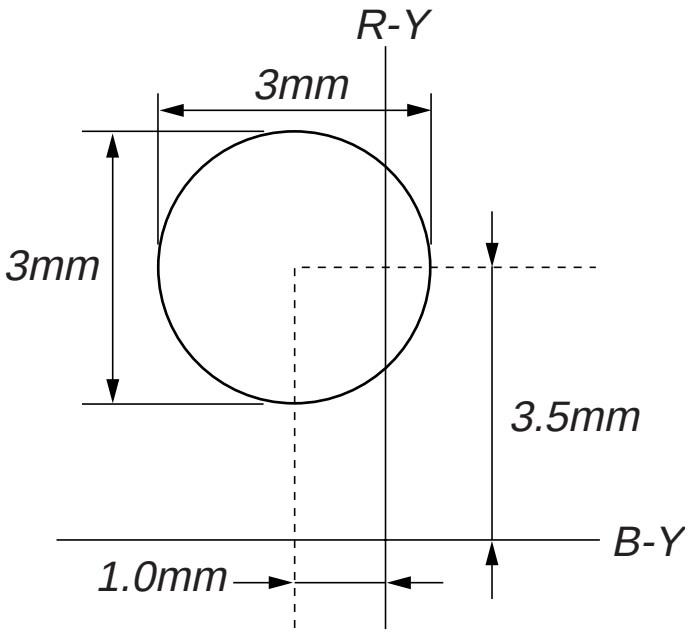

Fig. 5-1-12. (C)

10. Steady Shot Check
(CCD-TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)

Precautions on the Angular Velocity Sensor Replacement

There are two types of repair parts.

Type A	ENC03JA
Type B	ENC03JB

Replace the broken sensor with a same type sensor. If replace with other type parts, the image will vibrate up and down or left and right during hand-shake correction operations. After replacing, check the steady shot operations.

Precautions on Angular Velocity Sensor

The sensor incorporates a precision oscillator. Handle it with care as if it dropped, the balance of the oscillator will be disrupted and operations will not be performed properly.

Steady Shot Check

Check the output of the angular velocity sensor.

Subject	Arbitrary
Measurement Point	Display data of page 1 (Note)
Measuring Instrument	Adjustment remote commander
Specified Value	PITCH data : 2700 to 5100 YAW data : 2700 to 5100

Note: Displayed data of page 1 of the adjustment remote commander.

1 : XX : XX
Display data

Switch setting:
1) ZOOM .... TELE end
2) STEADY SHOT (Menu display) .... ON

Checking method:
1) Select page: 0, address: 03, and set data: 11.
2) Select page: 1, and check that the PITCH data satisfies the specified value.
3) Select page: 0, address: 03, and set data: 12.
4) Select page: 1, and check that the YAW data satisfies the specified value.

Processing after Completing Adjustments
1) Select page: 0, address: 03, and set data: 00.
2) Check that the steady shot operations have been performed normally.

1-4. MONOCHROME ELECTRONIC VIEWFINEDER SYSTEM ADJUSTMENT

1-4-1. Horizontal Slant Check

Mode	Playback
Signal	Alignment tape : For checking operation (WR5-5CSP) Monoscope section
Specified Value	± 1.5°

Adjusting method:

1) Adjust RV904 (BRIGHT) (VF-129 board) so that the CRT can be seen easily and clearly.
2) Check that the difference between the horizontal line and the tilt of black mask satisfies the specified value.

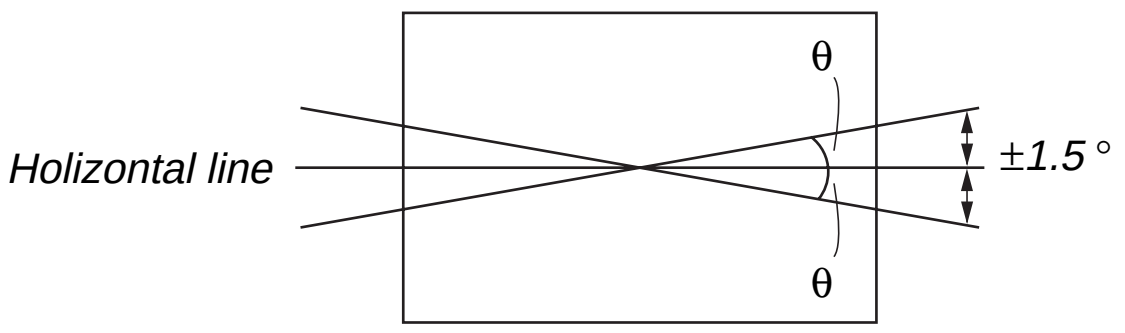
θ
Holizontal line
±1.5 °
θ

Specified value : The image should be within ± 1.5 ° of the holizontal line.

Fig. 5-1-13.

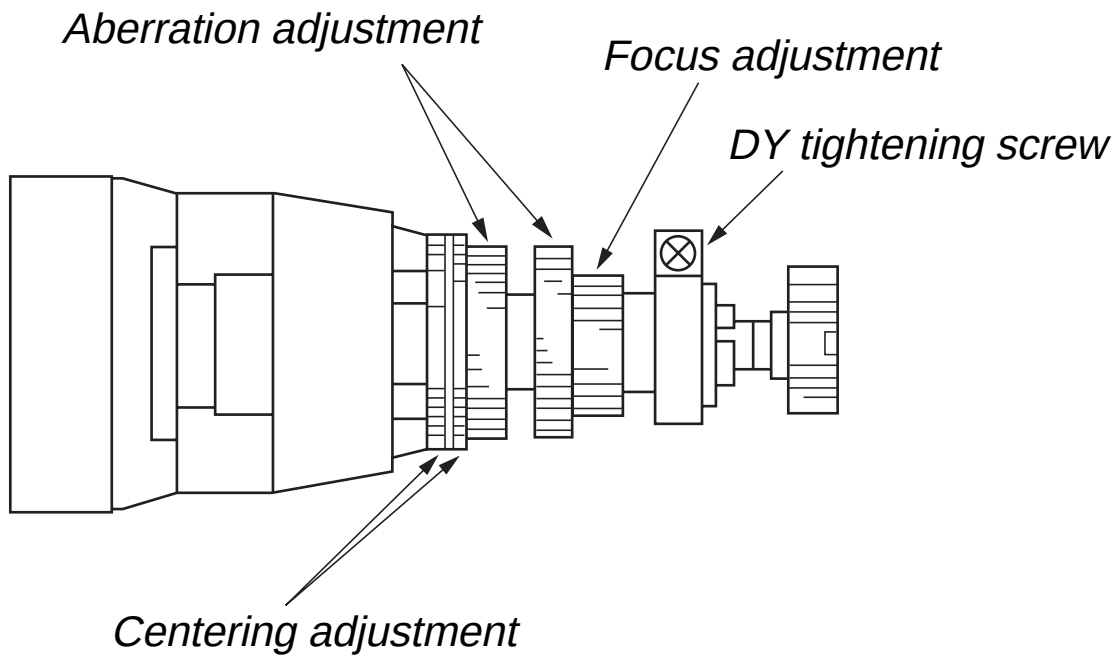
Aberration adjustment
Focus adjustment
DY tightening screw
Centering adjustment

Fig. 5-1-14.

VF-129 BOARD

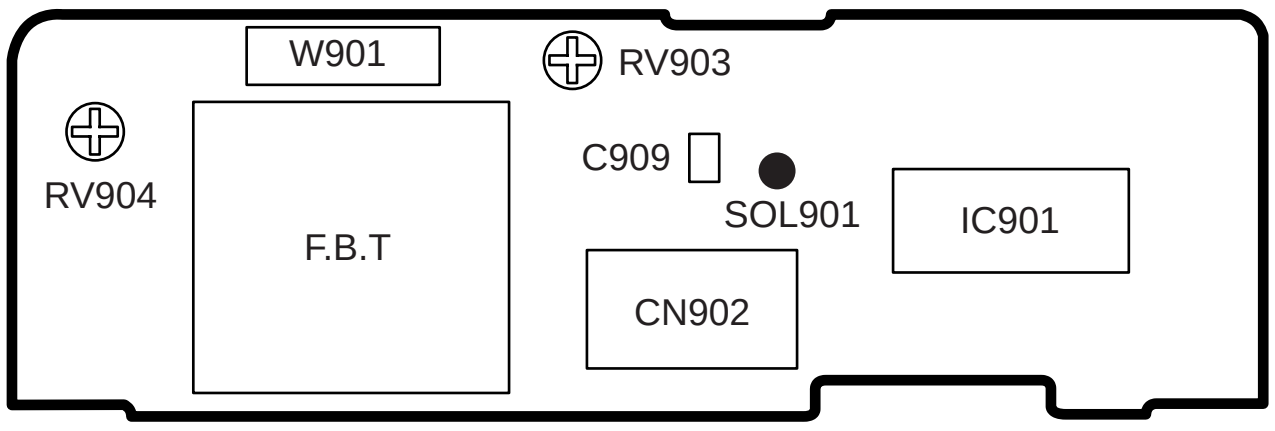
W901
RV903
RV904
C909
SOL901
F.B.T
IC901
CN902

1-4-2. Centering Adjustment

Mode	Playback
Signal	Alignment tape : For checking operation (WR5-5CSP) Monoscope section
Specified Value	± 4%

Adjusting method:

1) Use the centering adjustment ring and adjust so that the left, light, top, and bottom sides of the display are uniform. (Refer to Fig. 5-1-14.)

   Note: As the centering position changes due to earth magnetism, rotate it 360° in the horizontal direction, and adjust with the center section of the modifying position.

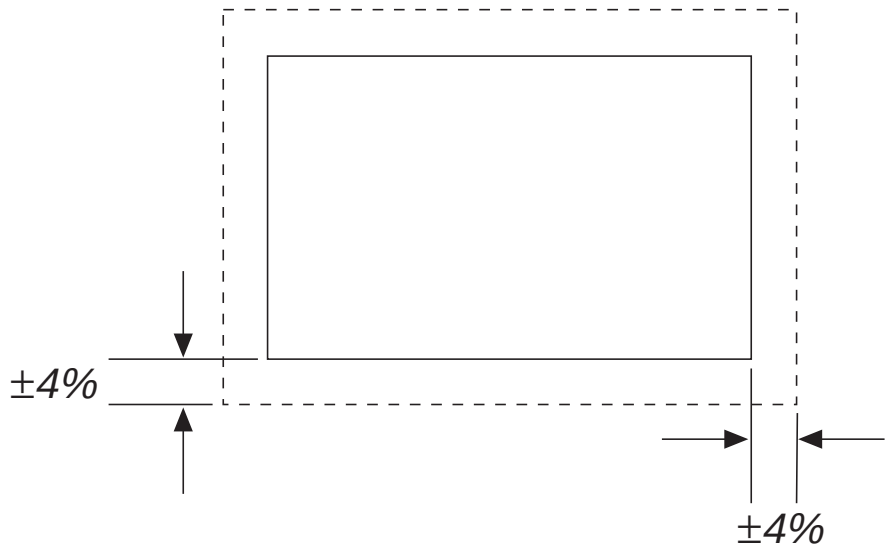

Adjustment value : ±4%

Fig. 5-1-15.

1-4-3. Focus Adjustment

Mode	Playback
Signal	Alignment tape : For checking operation (WR5-5CSP) Monoscope section

Adjusting method:

1) Adjust the focus ring to obtain the optimum focus. (Refer to Fig. 5-1-14.)

1-4-4. Aberration Adjustment

Mode	VTR stop
Signal	Dot pattern
Specified Value	$b1 \leqq 2 \times a1$ $b2 \leqq 0.8 \times a2$

Adjusting method:

1) Adjust the aberration adjustment ring so that the tracing of the dot satisfies the specified value.
2) If the centering becomes displaced here, perform the centering adjustment from the beginning again.

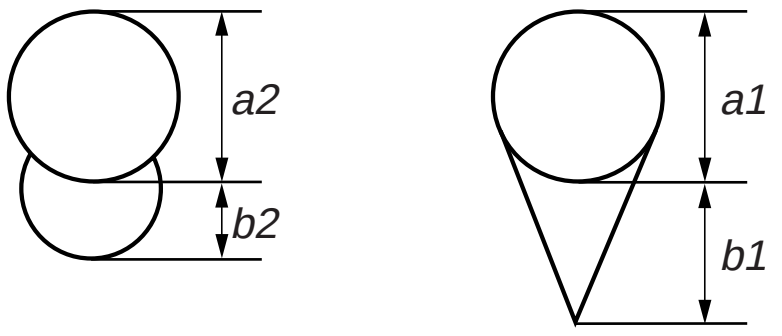

Fig. 5-1-16.

1-4-5. Horizontal Amplitude Adjustment (VF-129 board)

Mode	Playback
Signal	Alignment tape : For checking operation (WR5-5CSP) Monoscope section
Adjusting Element	C909 (SOL901)
Specified Value	10 ± 6%

Adjusting method:

1) Rotate RV903, and adjust the top and bottom side of the monoscope image to the top and bottom edges of the display.
2) Rotate RV904 so that the brightness is the normal level.
3) Solder or unsolder SOL901 pattern of the H size adjustment capacitor (C909) to “short” or “open”, so that the horizontal direction over scan becomes 10 ± 6% (Left and right totals).

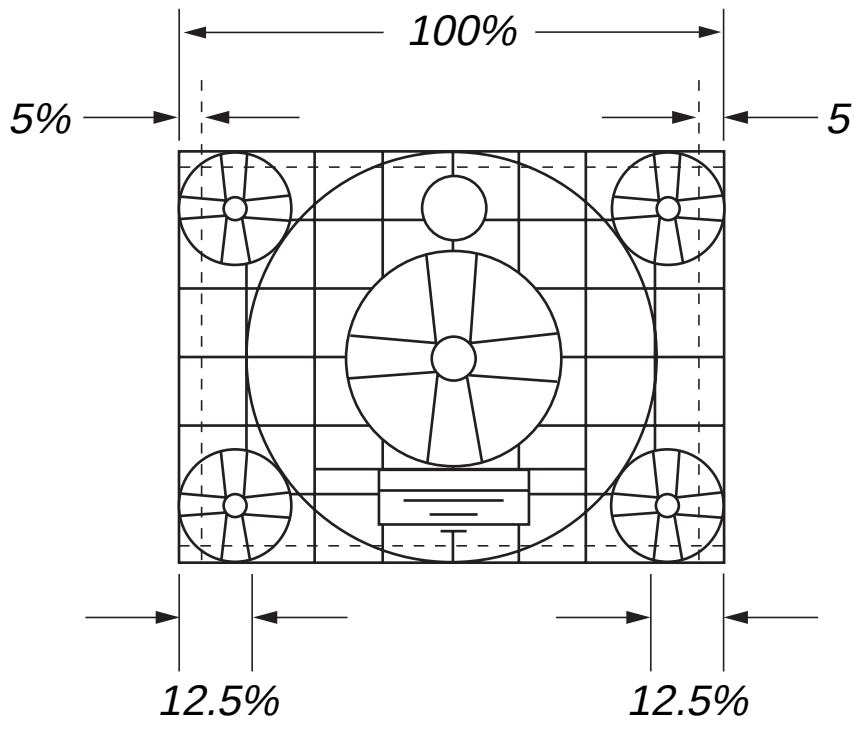

SOL901	Size H
Open	Small
Short	Big

Fig. 5-1-17.

VF-129 BOARD

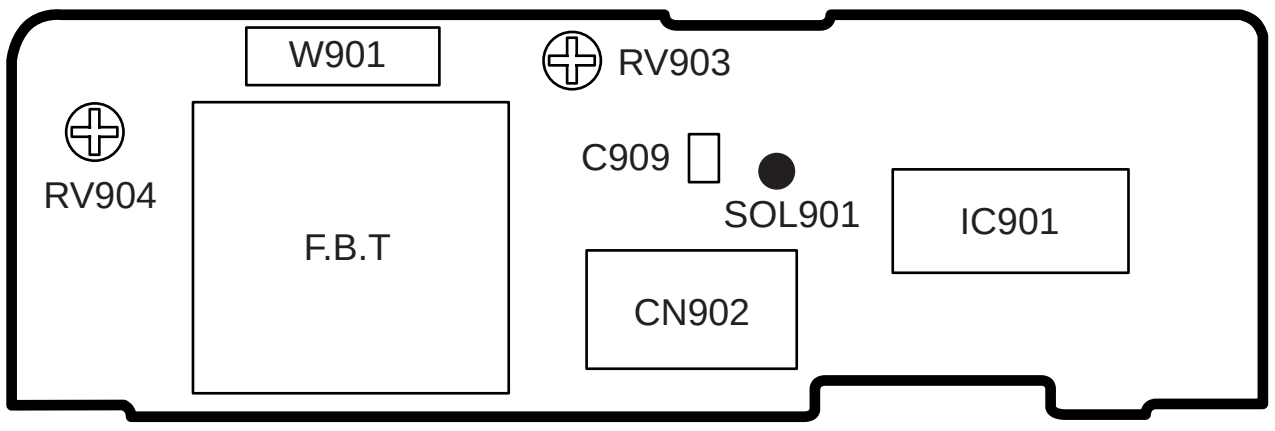

1-4-6. Vertical Amplitude Adjustment (VF-129 board)

Mode	Playback
Signal	Alignment tape : For checking operation (WR5-5CSP) Monoscope section
Adjusting Element	RV903
Specified Value	10 ± 3%

Adjusting method:

1) Adjust RV903 so that the vertical direction over scan becomes 10 ± 3% (Top and bottom totals).

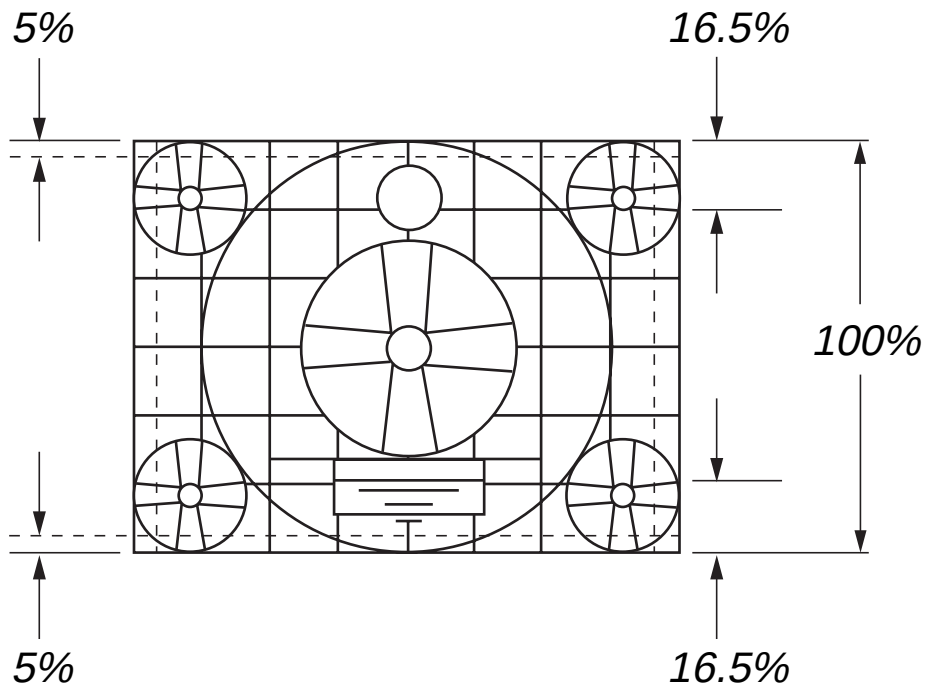

Fig. 5-1-18.

1-4-7. Brightness Adjustment (VF-129 board)

Mode	Playback
Signal	Alignment tape : For checking operation (WR5-5CSP) Monoscope section
Adjusting Element	RV904

Adjusting method:

1) Rotate RV904, and adjust so that the bright/dark sections of gray scale are displayed correctly. (The bright section should be unsatisfactory till the cross hatch appears vague in the monoscope circle. The dark section should be unsatisfactory till the darkest section of the gray scale cannot be differentiate.)

1-4-8. Horizontal Amplitude, Vertical Amplitude, Focus Check

“1-4-5. Horizontal Amplitude Adjustment” and “1-4-6. Vertical Amplitude Adjustment” should be both satisfy the specified values. If not, perform the adjustments from the beginning again. In this case, perform “1-4-7. Brightness Adjustment” again.
Moreover, check the focus, and if it found to be vague, perform “1-4-3. Focus Adjustment” and “1-4-4. Aberration Adjustment”.

1-5. LCD SYSTEM ADJUSTMENT (CCD-TRV37E/TRV47E/TRV48E/TRV57E/ TRV67E/ TRV87E)

Note1: The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

Note2: When replacing the LCD unit, be careful to prevent damages caused by static electricity.

Note 3: Set the LCD BRIGHT to the center.
Set the LCD COLOR (Menu display) to the center.

[Adjusting connector]

Most of the measuring points for adjusting the LCD display are concentrated in the following connector.

CN5502 of the PD-117 board

Connect the Measuring Instruments via the multi CPC jig (J-6082-311-A).

The following table shows the Pin No. and signal name of the connector.

Pin No.	Signal Name	Pin No.	Signal Name
1	VB	2	XVD OUT
3	VG	4	PANEL COM
5	VR	6	N.C.
7	C SYNC	8	XHD OUT
9	GND	10	GND

[LCD type check]

By measuring the resistor value between Pin ⑥ of CN5502 and Pin ⑩ of CN5502, the type of LCD can be discriminated.

Resistor value	LCD type
1kΩ	LCD TYPE S
1.5kΩ	LCD TYPE C

PD-117 board

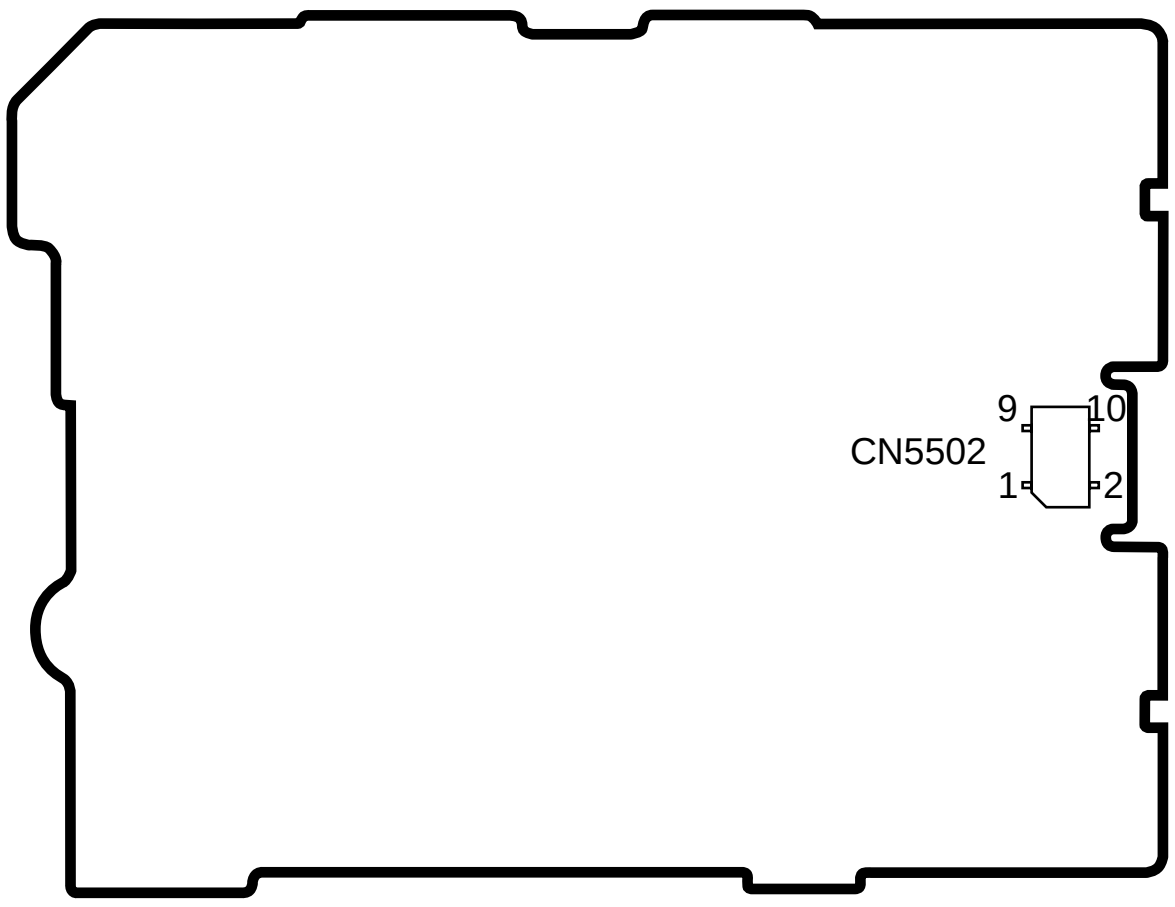

1. LCD Initial Data Input

Mode	Camera
Subject	Arbitrary
Adjustment Page	7
Adjustment Address	A8 to AB, C4 to D2, E3 to ED, EF to F3

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 7, and input the data in the following table.
   Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjustment remote commander each time to set the data.
3) Select page: 0, address: 01, and set data: 00.

Address	Data	Remark
A8	E3	Fixed data
A9	E3	Fixed data
AA	E3	Fixed data
AB	F7	Fixed data
C4	45	Fixed data
C5	00	Fixed data
C6	90	Fixed data
C7	90	Fixed data
C8	66	Fixed data
C9	26	Fixed data
CA	00	Fixed data
CB	80	Fixed data
CC	13	Fixed data
CD	C9	Fixed data
CE	23	Fixed data
CF	1A	Fixed data
D0	08	Fixed data
D1	33	Fixed data
D2	33	Fixed data
E3	78	Fixed data
E4	91	Fixed data
E5	6E	VCO adj.
E6	63	VCO adj.
E7	8E	V-COM adj.
E8	29	RGB AMP adj.
E9	00	Fixed data
EA	C3	COM AMP adj.
EB	60	White balance adj.
EC	65	White balance adj.
ED	50	Contrast adj.
EF	10	Fixed data
F0	6B	Fixed data
F1	9F	Fixed data
F2	1F	Fixed data
F3	DA	Fixed data

2. VCO Adjustment (PD-117 board)

Set the VCO free-run frequency. If deviated, the LCD screen will be blurred.

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑧ of CN5502 (XHD OUT)
Measuring Instrument	Frequency counter
Adjustment Page	7
Adjustment Address	E5, E6
Specified Value	f = 15625 ± 30Hz

Note: Refer to “LCD type check” for the discrimination of the LCD type.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 7, address: E5, change the data and set the XHD OUT frequency (f) to the specified value.
3) Press the PAUSE button of the adjustment remote commander.
4) Select page: 7, address: E5, read the data, and this data is named D_{E5}.
5) Convert D_{E5} to decimal notation, and obtain D_{E5}'. (Refer to Table 5-4-1. Hexadecimal-decimal Conversion Table.)
6) Calculate D_{E6}' using following equations (Decimal calculation), convert it to a hexadecimal number, and input to address: E6.
   LCD TYPE S:
   When $D_{E5}' \geqq 20$
   $D_{E6}' = D_{E5}' - 20$
   When $D_{E5}' < 20$
   $D_{E6}' = 00$
   LCD TYPE C:
   When $D_{E5}' \geqq 22$
   $D_{E6}' = D_{E5}' - 22$
   When $D_{E5}' < 22$
   $D_{E6}' = 00$
7) Press the PAUSE button.
8) Select page: 0, address: 01, and set data: 00.

3. RGB AMP Adjustment (PD-117 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ③ of CN5502 (VG) External trigger : Pin ④ of CN5502 (PANEL COM)
Measuring Instrument	Oscilloscope
Adjustment Page	7
Adjustment Address	E8
Specified Value	LCD TYPE S: A = 3.63 ± 0.05V LCD TYPE C: A = 3.00 ± 0.05V

Note1: Press the DISPLAY button and erase the screen indictors on the LCD screen.

Note2: Refer to “LCD type check” for the discrimination of the LCD type.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 7, address: E8, change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
   (The data of address: E8 should be “00” to “3F”.)
3) Press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.

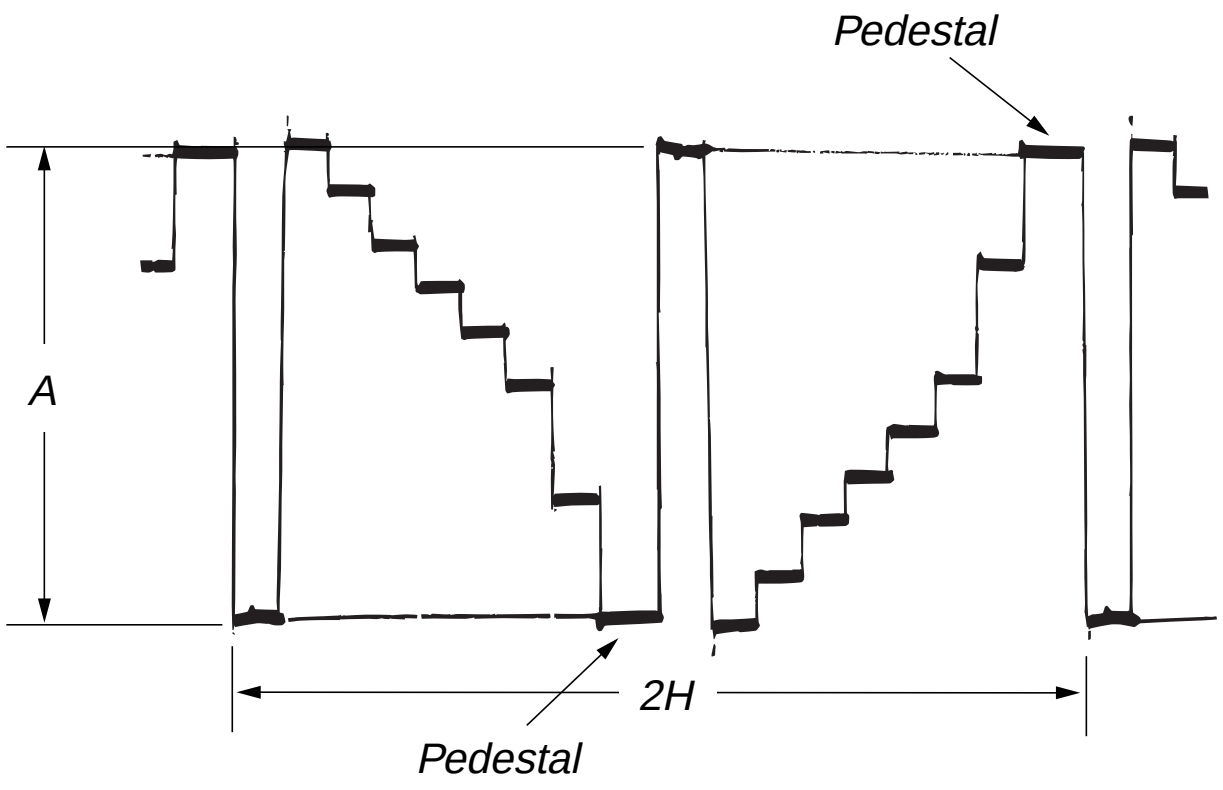

Fig. 5-1-19.

4. Contrast Adjustment (PD-117 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ③ of CN5502 (VG) External trigger : Pin ④ of CN5502 (PANEL COM)
Measuring Instrument	Oscilloscope
Adjustment Page	7
Adjustment Address	ED
Specified Value	LCD TYPE S: A = 3.68 ± 0.07V LCD TYPE C: A = 2.84 ± 0.07V

Note: Refer to "LCD type check" for the discrimination of the LCD type.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 7, address: ED, change the data and set the voltage (A) between the pedestal (0 IRE) and 100 IRE to the specified value.
   (The data of address: ED should be "00" to "7F".)
3) Press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.

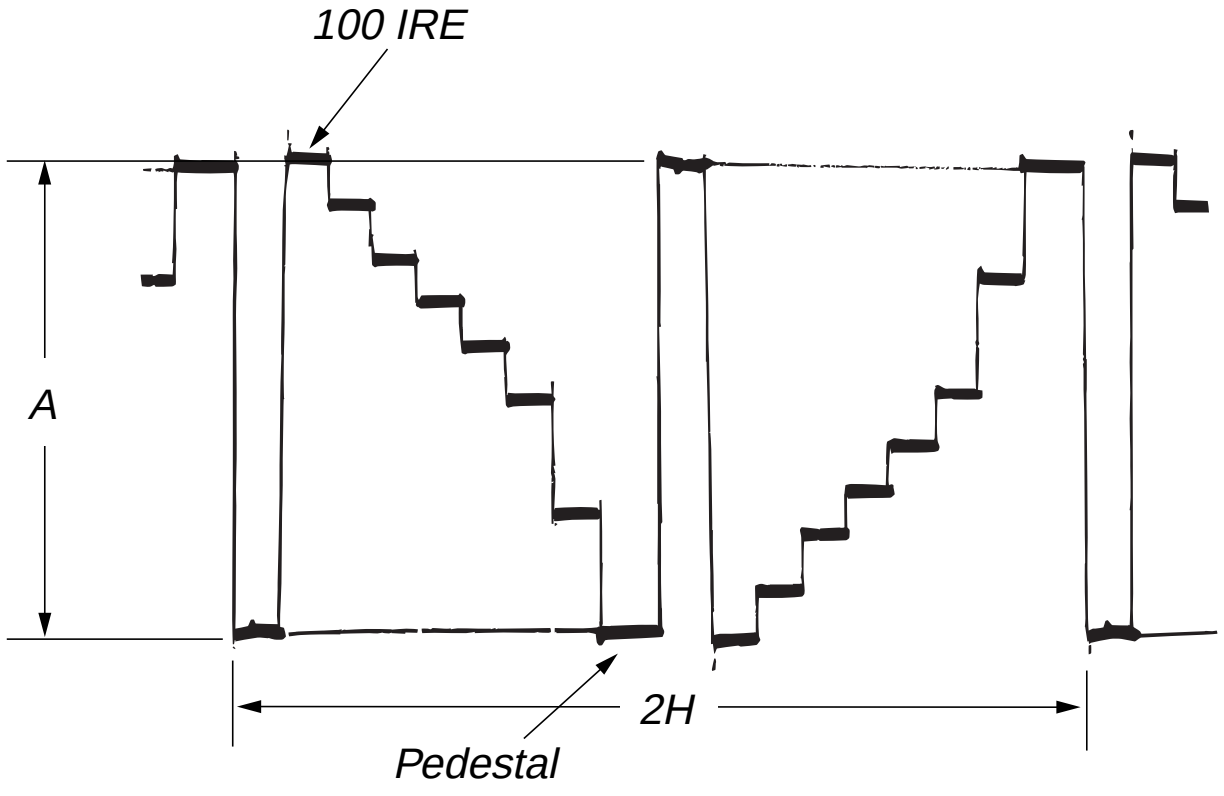

Fig. 5-1-20.

5. COM AMP Adjustment (PD-117 board)

Set the common electrode drive signal level of LCD to the specified value.

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ④ of CN5502 (PANEL COM)
Measuring Instrument	Oscilloscope
Adjustment Page	7
Adjustment Address	EA
Specified Value	LCD TYPE S: A = 6.40 ± 0.05V LCD TYPE C: A = 4.88 ± 0.05V

Note: Refer to "LCD type check" for the discrimination of the LCD type.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 7, address: EA, change the data and set the PANEL COM signal level (A) to the specified value.
3) Press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.

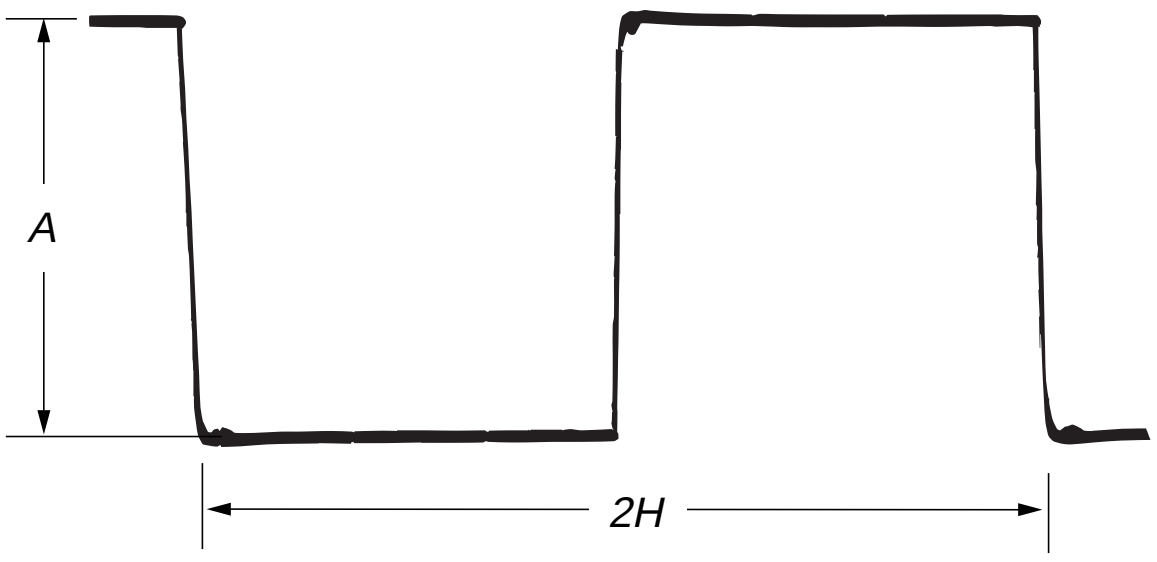

Fig. 5-1-21.

6. V-COM Adjustment (PD-117 board)

Set the DC bias of the common electrode drive signal of LCD to the specified value.
If deviated, the LCD display will move, producing flicker and conspicuous vertical lines.

Mode	Camera
Subject	Arbitrary
Measurement Point	Check on LCD display
Measuring Instrument	
Adjustment Page	7
Adjustment Address	E7
Specified Value	The brightness difference between the section A and section B is minimum.

Note1: Perform “RGB AMP Adjustment”, “Contrast Adjustment” and “COM AMP Adjustment” before this adjustment.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 7, address: E7, change the data so that the brightness of the section A and that of the section B is equal.
3) Press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.

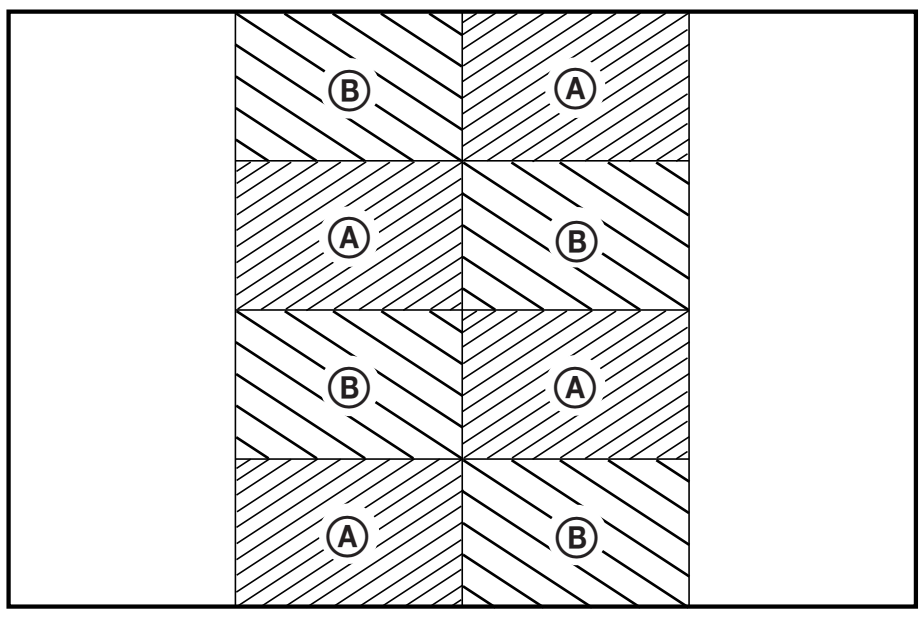

Fig. 5-1-22.

7. White Balance Adjustment (PD-117 board)

Correct the white balance.
If deviated, the LCD screen color cannot be reproduced.

Mode	Camera
Subject	Arbitrary
Measurement Point	Check on LCD display
Measuring Instrument	
Adjustment Page	7
Adjustment Address	EB, EC
Specified Value	The LCD screen should not be colored.

Note1: Check the white balance only when replacing the following parts. If necessary, adjust them.
1. LCD panel
2. Light induction plate
3. IC5501

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 7, address: EB and EC, and set the data to the initial value.
   Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjustment remote commander each time to set the data.

Address	EB	EC
Data	60	65

3) Check that the LCD screen is not colored. If colored, change the data of page: 7, address: EB and EC so that the LCD screen is not colored.
   Note: To write in the non-volatile memory (EEPROM), press the PAUSE button of the adjustment remote commander each time to set the data.
4) Select page: 0, address: 01, and set data: 00.

5-2. MECHANISM SECTION ADJUSTMENT

Mechanism Section adjustments, checks, and replacement of mechanism parts, refer to the separate volume “8mm Video Mechanism Adjustment Manual Ⅶ B Mechanism ”.

2-1. OPERATING WITHOUT CASSETTE

1) Refer to “Section 2. DISASSEMBLY” and supply the power with the cabinet assembly removed. (So that the mechanical deck can be operated.)
2) Connect the adjustment remote commander to the LANC jack.
3) Turn on the HOLD switch of the adjustment remote commander.
4) Close the cassette compartment without loading a cassette and complete loading.
5) Select page: 0, address: 01, and set data: 01.
6) Select page: F, address: 22, set data: 81, and press the PAUSE button of the adjustment remote commander.
7) Select page: D, address: 10, set data: 10, and press the PAUSE button of the adjustment remote commander.
8) Disconnect the power supply of the unit.

By carrying out the above procedure, the unit can be operated without loading a cassette.

Be sure to carry out “Processing after Operations” after checking the operations.

Set the data of page: D, address: 10 to the following if the sensor ineffective mode, forced VTR power supply On mode or forced camera power supply ON mode are to be used together.

Forced VTR power ON mode 12
Forced camera power ON mode 11

[Procedure after checking operations]

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 22, set data: 80, and press the PAUSE button of the adjustment remote commander.
3) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.
5) Disconnect the power supply of the unit.

2-2. TAPE PATH ADJUSTMENT

1. Preparations for Adjustment

1) Clean the tape path face (tape guide, capstan shaft, pinch roller).
2) Connect the adjustment remote commander to the LANC jack.
3) Turn on the HOLD switch of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 01.
5) Select page: F, address: 22, set data: 88, and press the PAUSE button of the adjustment remote commander.
(Be sure to perform “Processing after operation” after completing adjustments.)
6) Connect the oscilloscope to VC-234 board CN982 via CPC-7 jig (J-6082-382-A).
Channel 1: VC-234 board, CN982 Pin ⑥
External trigger: VC-234 board, CN982 Pin ⑪
7) Playback an alignment tape for tracking. (WR5-1CP)
8) Check that the oscilloscope RF waveform is flat at the entrance and exit.
If not flat, adjust according to the separate volume “8mm Video Mechanical Adjustment Manual Ⅶ B Mechanism ”.
9) Perform “Processing after operations”, after completing adjustment.

CN982 of VC-234 board

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	9	RF AGC OUT
2	XCPC IN	10	REC RF
3	IR VIDEO	11	RF SWP
4	AFC F0	12	CAP FG
5	BPF MONI	13	EVF BL
6	PB RF	14	EVF BL 4.75V
7	RF AGC IN	15	VCO
8	REG GND	16	EVF VG

Table 5-2-1.

[Procedure after operations]

1) Connect the adjustment remote commander, and turn on the HOLD switch.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: F, address: 22, set data: 80, and press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.
5) Remove the power supply from the unit.

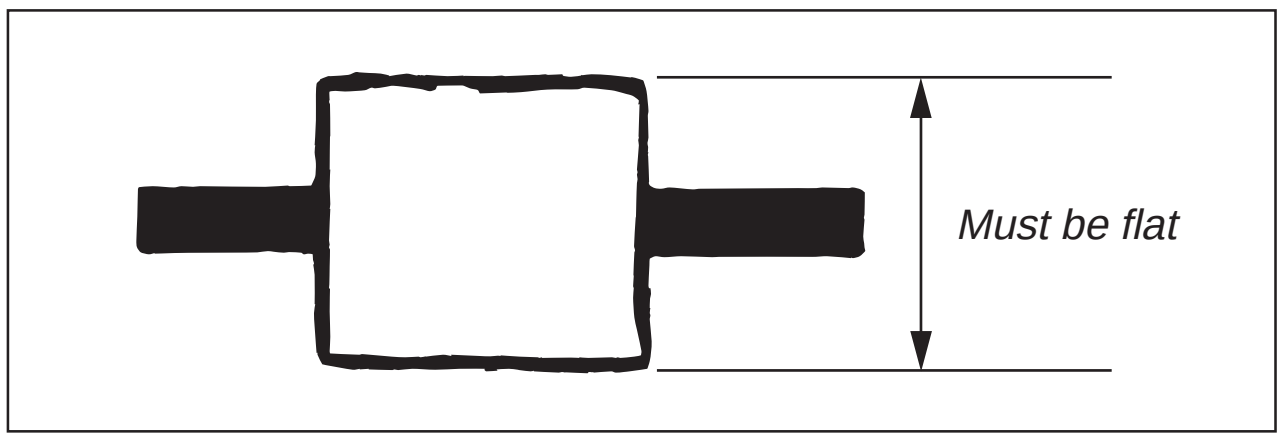

Fig. 5-2-1.

5-3. VIDEO SECTION ADJUSTMENTS

3-1. PREPARATIONS BEFORE ADJUSTMENTS

Use the following measuring instruments for video section adjustments.

3-1-1. Equipment to Required

1) TV monitor
2) Oscilloscope (dual-phenomenon, band width above 30 MHz with delay mode) (Unless specified otherwise, use a 10 : 1 probe.)
3) Frequency counter
4) Pattern generator with video output terminal
5) Digital voltmeter
6) Audio generator
7) Audio level meter
8) Audio distortion meter
9) Audio attenuator
10) Regulated power supply
11) Alignment tapes
    - For tracking adjustment (WR5-1CP)
      Parts code : 8-967-995-07
    - For video frequency characteristics adjustment (WR5-7CE)
      Parts code : 8-967-995-18
    - For checking Standard 8 mode operations
    - For LP (WR5-4CL)
      Parts code : 8-967-995-56
    - For SP (WR5-5CSP)
      Parts code : 8-967-995-47

    Note: The following alignment tapes can also be used.
      1) WR5-3CL (8-967-995-36)
      2) WR5-4CSP (8-967-995-46)
    - For checking Hi8 mode operations
    - For LP (WR5-8CLE)
      Parts code : 8-967-995-57
    - For SP (WR5-8CSE)
      Parts code : 8-967-995-48
    - For Checking AFM stereo operations (WR5-9CS)
      Parts code : 8-967-995-28
    - For BPF adjustment (WR5-11CS)
      Parts code : 8-967-995-76
12) Adjustment remote commander (J-6082-053-B)
13) CPC-7 jig (J-6082-382-A)
14) Power code (J-6082-223-A)

    Note: Connect the adjustment remote commander to the LANC jack, and set the HOLD switch to the “ADJ” side.
15) AFM DEV jig (J-6082-312-A)
16) IR receiver jig (J-6082-383-A)

3-1-2. Precautions on Adjusting

Note1: TR model / TRV model
TR model: CCD- TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV model: CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

1) The adjustments of this unit are performed in the VTR mode or camera mode.
   To set to the VTR mode, set the power switch to "VTR or PLAYER" or set the "Forced VTR Power ON mode" using the adjustment remote commander (Note 2).
   To set to the Camera mode, set the power switch to "CAMERA" or set the "Forced Camera Power ON mode" using the adjustment remote commander (Note 3).
   After completing adjustments, be sure to exit the "Forced VTR Power ON Mode" or "Forced Camera Power ON Mode". (Note 4)
2) By setting the "Forced VTR Power ON mode" or "Forced Camera Power ON mode", the video section can be operate even if the front panel block (MA-374/375 board, power switch, microphone unit) has been removed. When removing the front panel block, disconnect the following connector.
   1. VC-234 board CN972 (20P 0.5mm)
3) The cabinet (R) (Camera function switch (CF-66/67 board), LCD block (TRV model only), Viewfinder) need not be connected. But removing the cabinet (R) (removing the VC-234 board CN975) means removing the lithium 3V power supply (CF-66/67 board BH001), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and data on history use (data of page: 2, address: A2 to AA). (Refer to the "Service Mode" for the data on the history use.)
   To remove the cabinet (R), disconnect the following connectors.
   1. VC-234 board CN975 (45P, 0.5mm)
   2. DD-134 board CN933 (8P, 1.0mm)(TRV model only)
4) The video light board (VL-28/29 board) need not be connected. To remove, disconnect the following connector. (Except for CCD-TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
   1. VL-28/29 board CN151 (8P, 0.5mm)
5) The lens block (CD-239/240 board) need not be connected. To remove, disconnect the following connectors.
   1. VC-234 board CN501 (14P, 0.5mm)
   2. VC-234 board CN551 (24P, 0.5mm)

Note2: Setting the "Forced VTR Power ON" mode (VTR mode)
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 02, and press the PAUSE button of the adjustment remote commander.
   The above procedure will enable the VTR power to be turned on with the front panel block removed.
   After completing adjustments, be sure to exit the "Forced VTR Power ON mode".

Note3: Setting the "Forced Camera Power ON" mode (Camera mode)
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.
   The above procedure will enable the camera power to be turned on with the front panel block removed.
   After completing adjustments, be sure to exit the "Forced Camera Power ON mode".

Note4: Exiting the "Forced Power ON" mode
1) Select page: 0, address: 01, and set data: 01.
2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
3) Select page: 0, address: 01, and set data: 00.

3-1-3. Adjusting Connectors

Some of the adjusting points of the video section are concentrated at VC-234 board CN982. Connect the measuring instruments via the CPC-7 jig (J-6082-382-A). The following table lists the pin numbers and signal names of CN982.

Pin No.	Signal Name	Pin No.	Signal Name
1	LANC SIG	9	RF AGC OUT
2	XCPC IN	10	REC RF
3	IR VIDEO	11	RF SWP
4	AFC F0	12	CAP FG
5	BPF MONI	13	EVF BL
6	PB RF	14	EVF BL 4.75V
7	RF AGC IN	15	VCO
8	REG GND	16	EVF VG

Table 5-3-1.

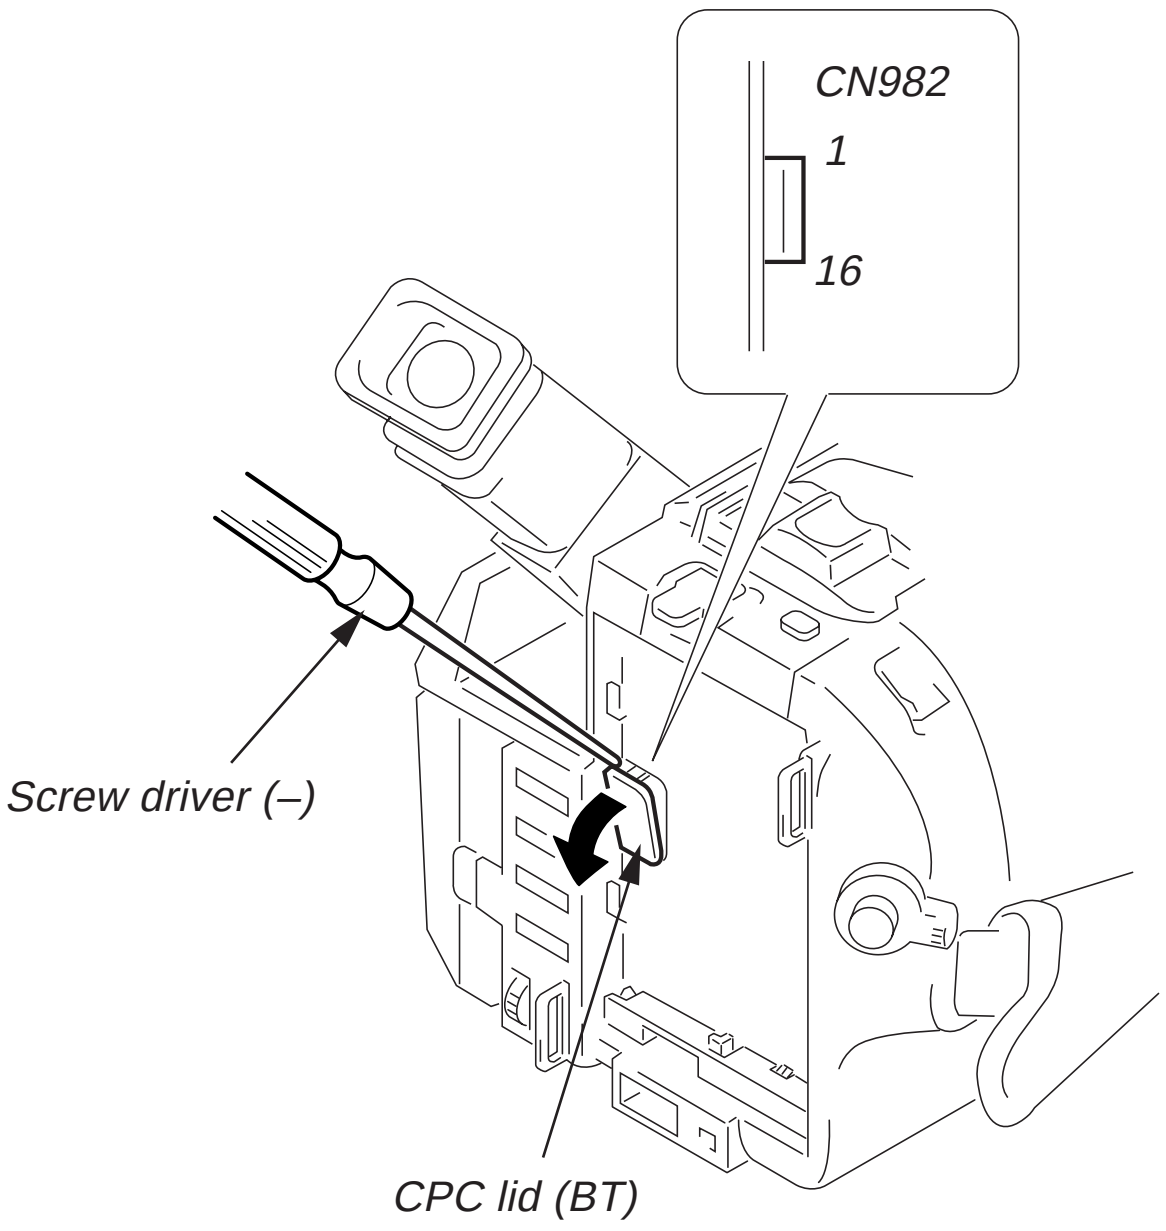

Fig. 5-3-1.

3-1-4. Connecting the Equipments

Connecting the measuring instruments as shown in Fig. 5-3-2 and perform the adjustments.

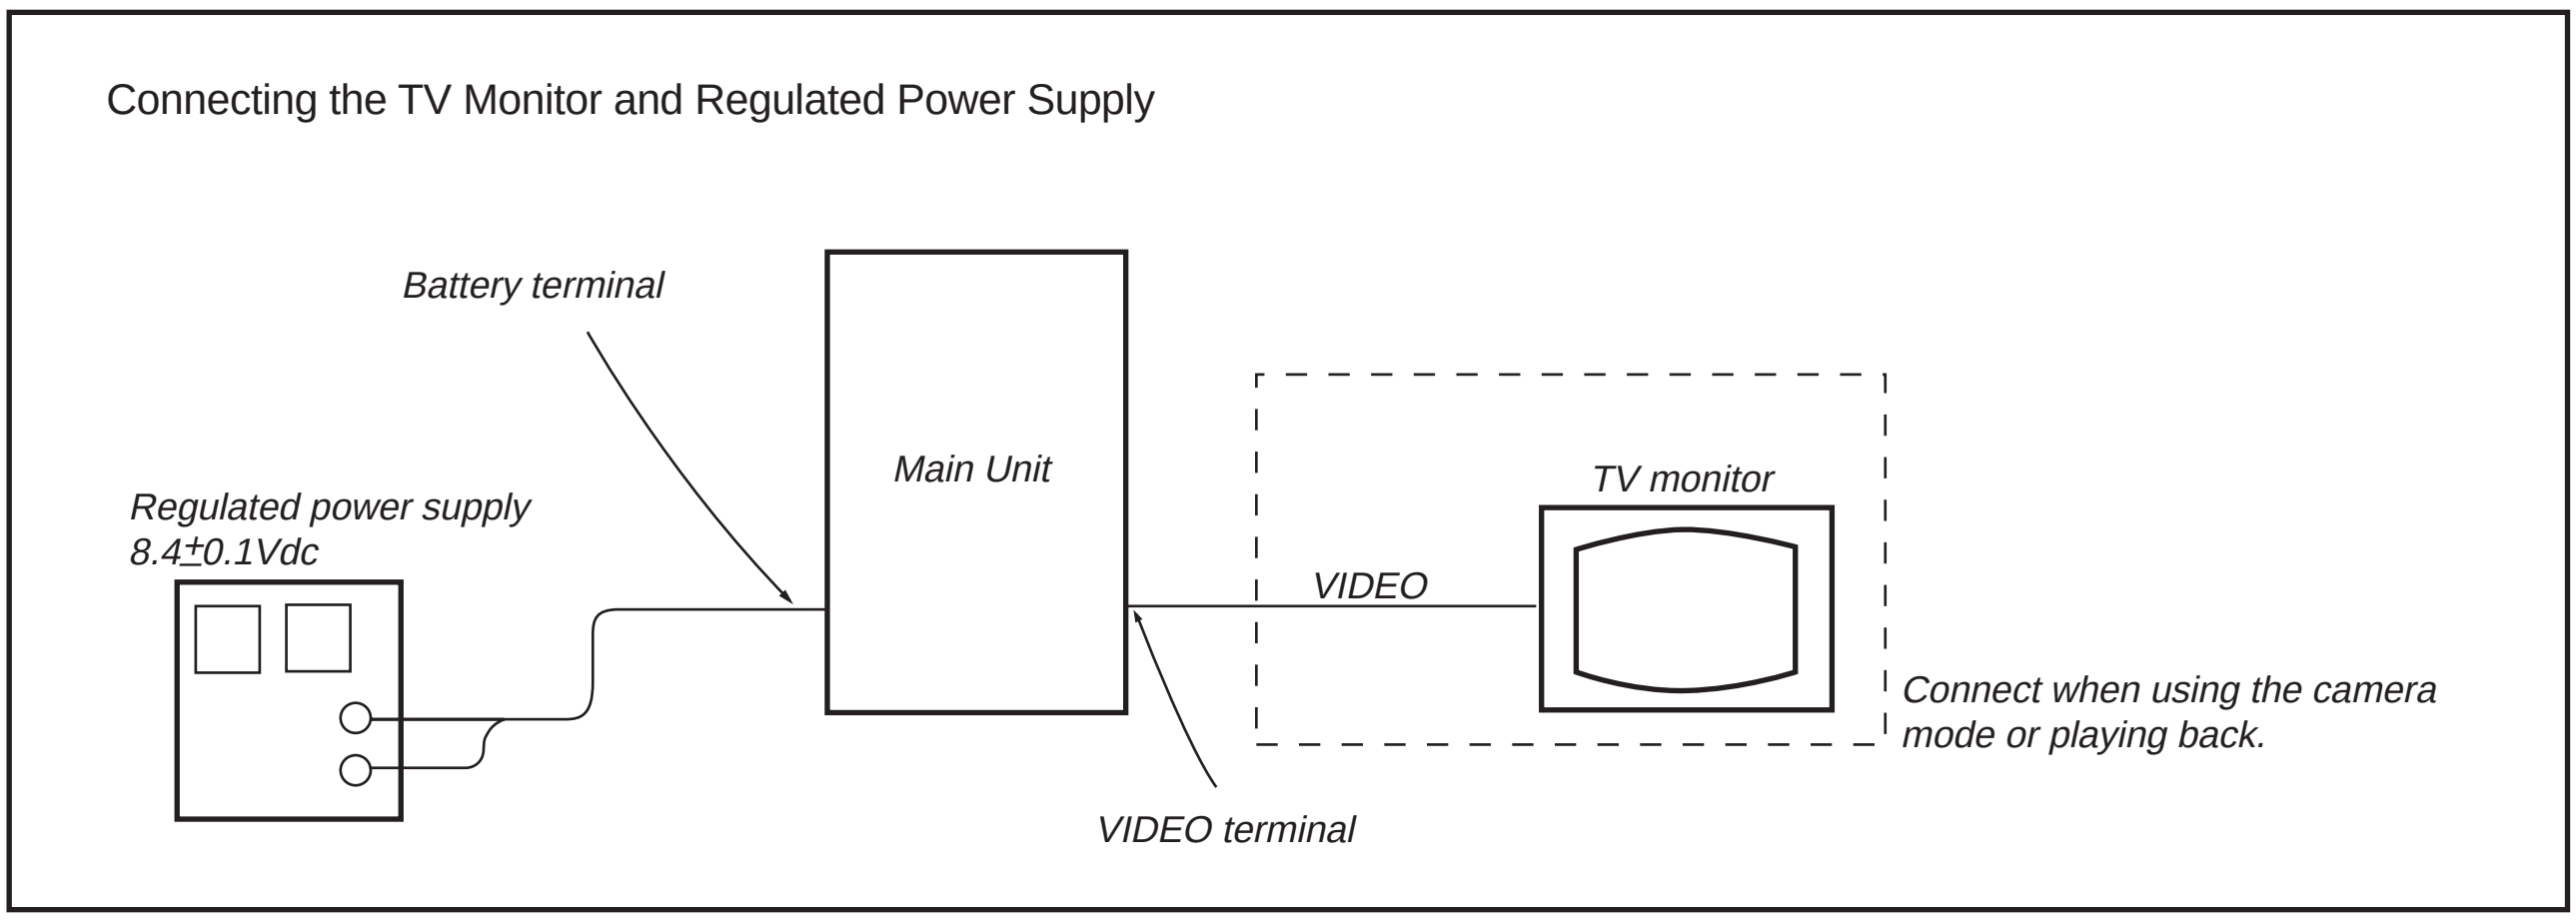
Connecting the TV Monitor and Regulated Power Supply

Battery terminal
Main Unit
Regulated power supply
8.4±0.1Vdc
TV monitor
VIDEO
Connect when using the camera mode or playing back.
VIDEO terminal

Fig. 5-3-2.

3-1-5. Alignment Tape

The following table lists alignment tapes which are available. Use the tape specified in the signal column for each adjustment. If the type of tape to be used for checking operations is not specified, use whichever type.

Name	Record -ing mode	Tape type	Tape speed	Usage
Tracking WR5-1CP	Standard 8 mm	MP	SP	Tape path adjustment Switching position adjustment
Video frequency characteristics WR5-7CE	Hi8	ME	LP	Frequency characteristics adjustment
Operation check (SP mode) WR5-5CSP	Standard 8 mm	MP	SP	Checking operations
Operation check (SP mode) WR5-8CSE	Hi8	ME	SP	
Operation check (LP mode) WR5-4CL	Standard 8 mm	MP	LP	
Operation check (LP mode) WR5-8CLE	Hi8	ME	LP	
AFM stereo Operation check WR5-9CS	Standard 8 mm	MP	SP	AFM stereo Checking operations
BPF adjustment WR5-11CS	Hi8	MP	SP	BPF adjustment

Fig. 5-3-3. Shows the color bar signals recorded on the alignment tape.

Note : Measure using the VIDEO terminal (Terminated at 75 Ω).

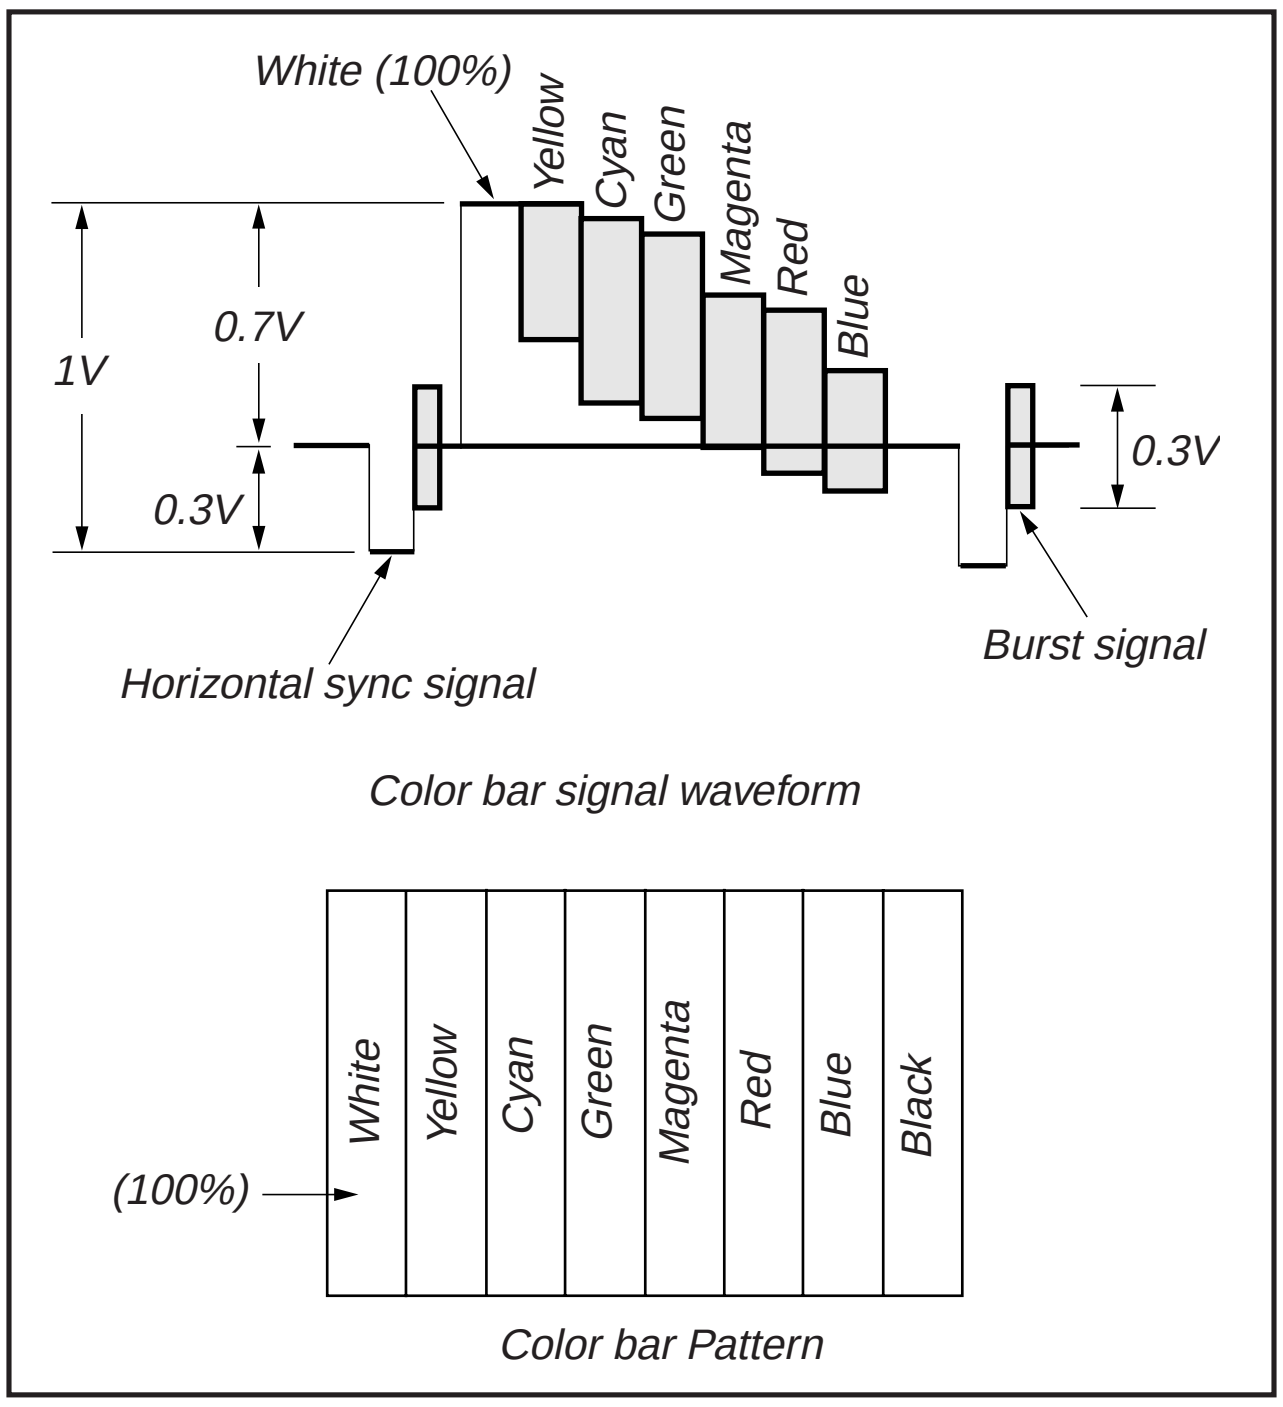

Color bar signal waveform

Color bar Pattern

Fig. 5-3-3. Color Bar Signals of the Alignment Tape

3-1-6. Input/Output Level and Impedance

Video input/output
Phono jack, 1 Vp-p, 75Ω,
unbalanced, sync negative
S video input/output (CCD-TR717E/TR918E/TRV67E/TRV87E only)
4-pin mini DIN
Luminance signal:
1Vp-p, 75Ω, unbalanced, sync negative
Chrominance signal:
0.286Vp-p 75Ω, unbalanced
Audio input/output
Phono jack,
Input: –7.5 dBs, input impedance more than 47 kΩ
Output: –7.5 dBs, (at load impedance 47 kΩ), impedance less than 2.2 kΩ

3-1-7. Recording Mode (Standard 8/Hi8) switching (CCD-TR717E/TR918E/TRV67E/TRV87E)

The record mode (Standard 8/Hi8) of this unit switches as shown in the following table. The playback mode (Standard 8/Hi8) switches automatically according to the recording mode of the tape played back.

Tape Used	Recording Mode
ME	Hi8
Hi8 MP	
MP	Standard 8

3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT

1. Initialization of D, E, F, 7 Page Data

If the D, E, F, 7 page data is erased due to some reason, perform “1-2. INITIALIZATION OF D, E, F, 7 PAGE DATA”, of “5-1. CAMERA SECTION ADJUSTMENT”

3-3. SERVO SYSTEM ADJUSTMENTS

1. CAP FG Offset Adjustment (VC-234 board)

Improve the capstan servo characteristic. If it is not correct. jitters will increase.

Mode	Camera recording (SP mode)
Subject	Arbitrary
Measurement Point	Pin ⑫ of CN982 (CAP FG)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	64
Specified value	Duty = 50 ± 1 %

Adjusting method:

1) Set to the Camera recording mode (SP mode).
2) Select page: 0, address: 01, and set data: 01.
3) Select page: 6, address: 01, set data: 81, and press the PAUSE button of the adjustment remote commander. (to start up automatic CAP FG offset adjustment.)
4) Select page: 6, address: 02, and check that the data is “01”.
5) Check that Duty of CAP FG signal satisfies the specified value. If not, select page: 6, address: 01, set data: 00, and press the PAUSE button, and then, repeat steps 1) to 5).
6) Select page: 6, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
7) Select page: 0, address: 01, and set data: 00.

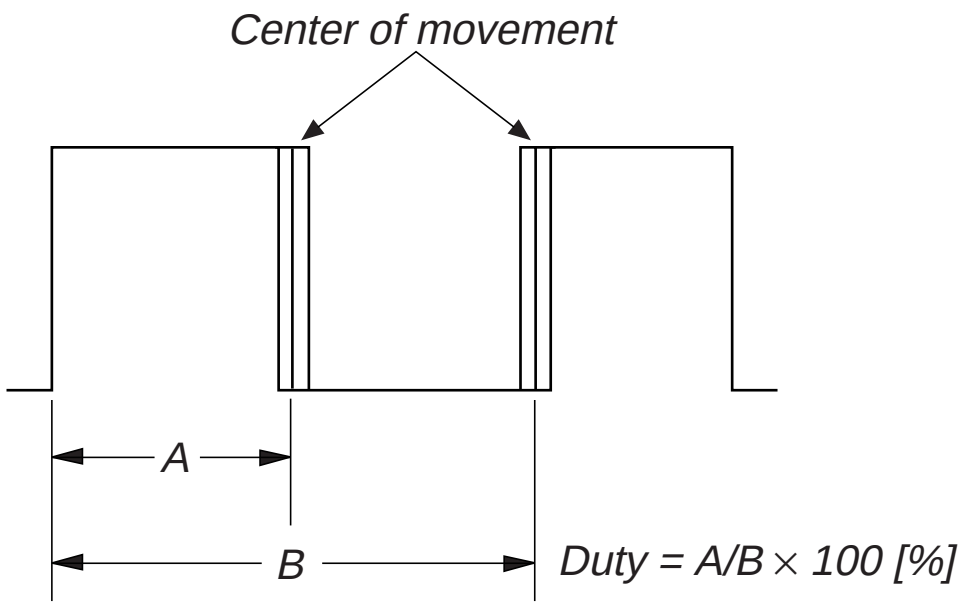

Fig. 5-3-4.

2. Switching Position Adjustment (VC-234 board)

If deviated in this case causes switching noise or jitter on the played back screen.

Mode	Playback
Signal	Alignment tape: For tracking adjustment (WR5-1CP)
Measurement Point	CH1: Pin ⑪ of CN982 (RF SWP) CH2: Pin ⑥ of CN982 (PB RF)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	62, 63
Specified Value	t1 = 0 ± 10 µsec

Adjusting Method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 22, set data: C0, and press the PAUSE button of the adjustment remote commander.
3) Select page: F, address: 62, change the data and minimize “t1”, and then press the PAUSE button of the adjustment remote commander. (Coarse adjustment)
4) Select page: F, address: 63, change the data and adjust so that the switching position (t1) becomes the specified value. (Fine adjustment)
5) Press the PAUSE button of the adjustment remote commander.
6) Select page: F, address: 22, set data: 80, and press the PAUSE button of the adjustment remote commander.
7) Select page: 0, address: 01, and set data: 00.

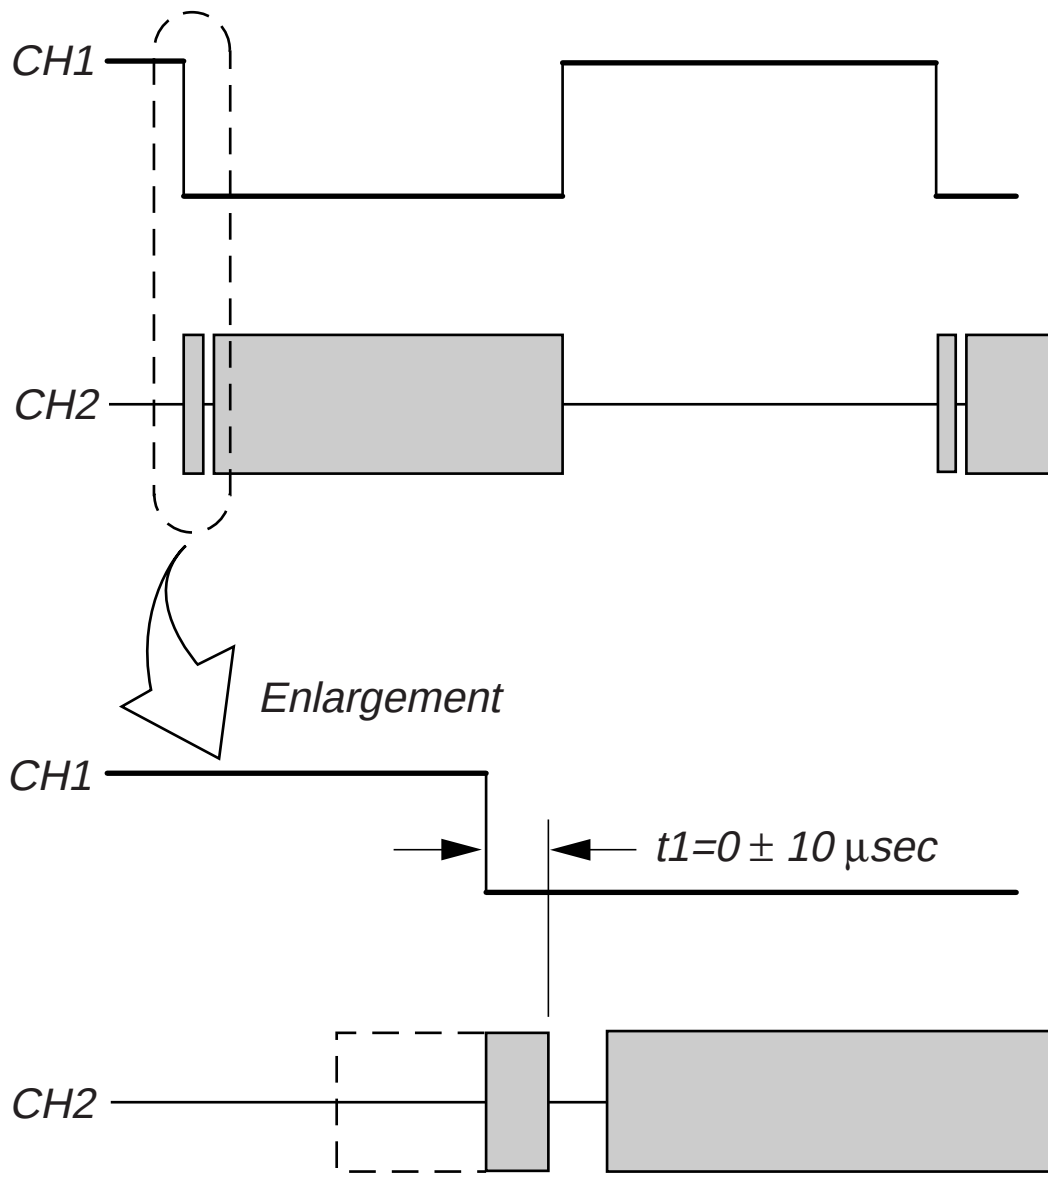

Fig. 5-3-5.

3-4. VIDEO SYSTEM ADJUSTMENTS

Video system adjustments must be performed in the following order.

[Adjusting Order]

1. 28MHz origin oscillation adjustment
2. AFC f_0 adjustment
3. Filter f_0 adjustment
4. Y OUT level adjustment
5. C OUT level adjustment
6. REC Y current adjustment
7. REC C/AFM Current Adjustment

1. 28 MHz Origin Oscillation Adjustment (VC-234 board)

Set the frequency of the clock for synchronization.
If deviated, the synchronization will be disrupted and the color will become inconsistent.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin (81) of IC201 or pin ⑫ of IC501
Measuring Instrument	Frequency counter
Adjustment Pag	F
Adjustment Address	4D
Specified Value	f=14187500 ± 55Hz

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, set data: 41, and press the PAUSE button of the adjustment remote commander.
3) Select page: 6, address: 61, and set data: 30.
4) Select page: F, address: 4D, change the data and set the clock frequency (f) to the specified value.
5) Press the PAUSE button of the adjustment remote commander.
6) Select page: 6, address: 61, and set data: 10.
7) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
8) Select page: 0, address: 01, and set data: 00.

VC-234 BOARD

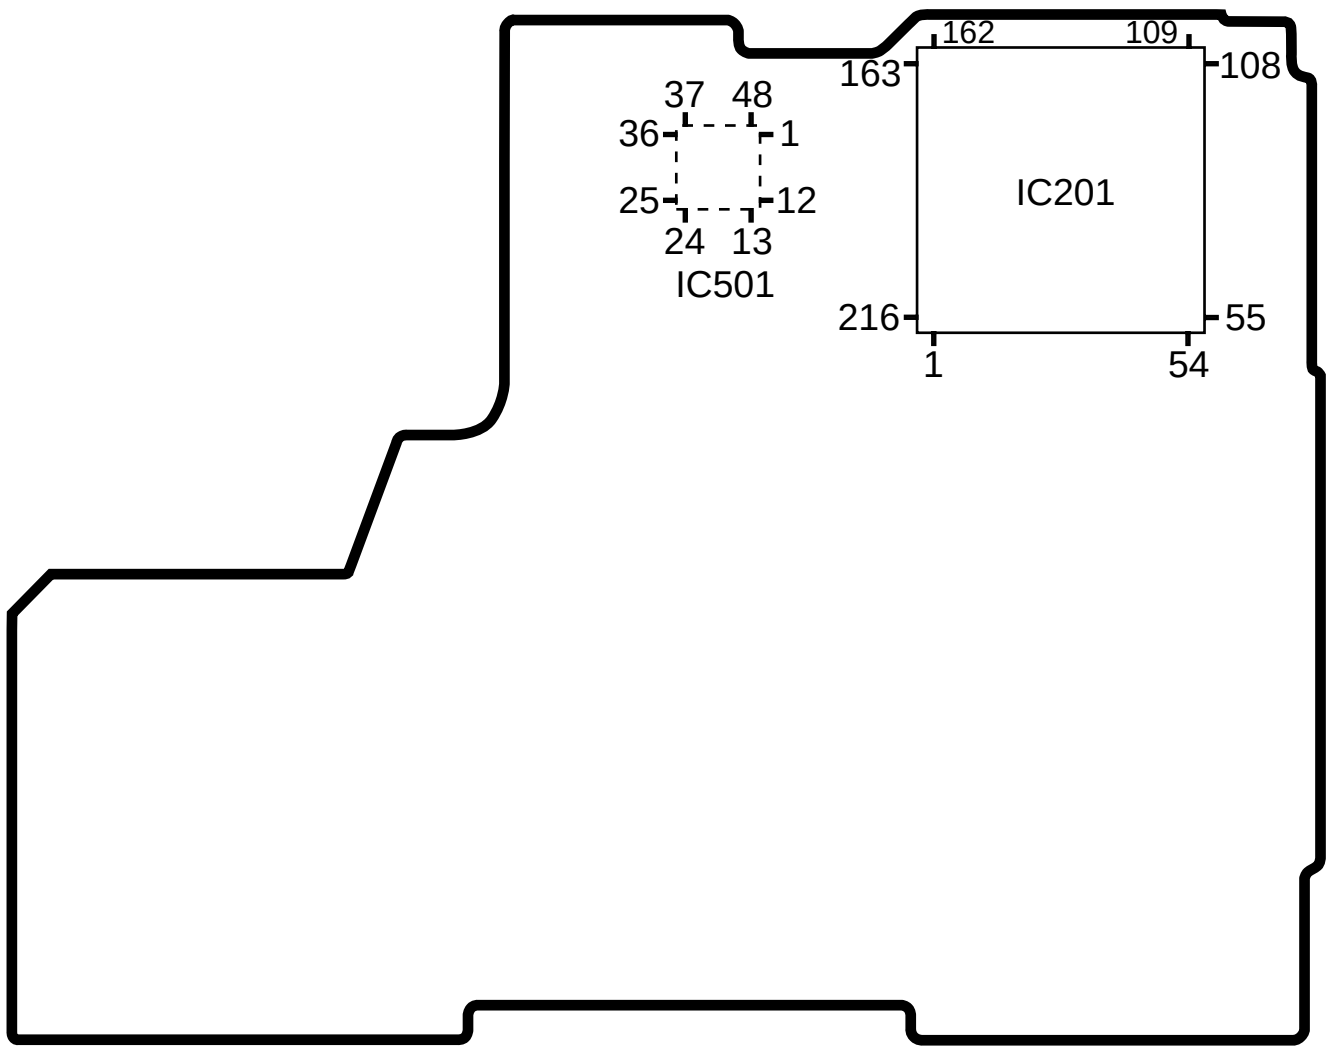

Fig. 5-3-6.

2. AFC f_0 Adjustment (VC-234 board)

Adjust the pull-in range of the A/D converted clock generator during playback.

Mode	VTR stop
Signal	No signal
Measurement Point	Display data of page: 6, address: 02
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	65
Specified Value	01

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, set data: 4D, and press the PAUSE button of the adjustment remote commander.
3) Select page: 6, address: 01, set data: C5, and press the PAUSE button.
   (The AFC fo adjustment is performed and the adjustment data is stored in page: F, address: 65.)
4) Select page: 6, address: 02, and check that the data is “01”.
5) Select page: 6, address: 01, set data: 00, and press the PAUSE button.
6) Select page: 2, address: 01, set data: 00, and press the PAUSE button.
7) Select page: 0, address: 01, and set data: 00.

3. Filter f_0 Adjustment (VC-234 board)

Adjust the f_0 frequency of the IC641 built-in filter.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ③ of CN982 (IR VIDEO)
Measuring Instrument	Oscilloscope (20 MHz BW LIMIT: ON)
Adjustment Page	F
Adjustment Address	66
Specified Value	Minimum residual chroma signal components

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, set data: 4F, and press the PAUSE button of the adjustment remote commander.
3) Select page: 2, address: 05, and set data: 40.
4) Select page: F, address: 66, change the data and minimize the residual chroma signal components (A).
   (The data of address: 66 should be “70” to “7F”.)
5) Press the PAUSE button of the adjustment remote commander.
6) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
7) Select page: 2, address: 05, and set data: 00.
8) Select page: 0, address: 01, and set data: 00.

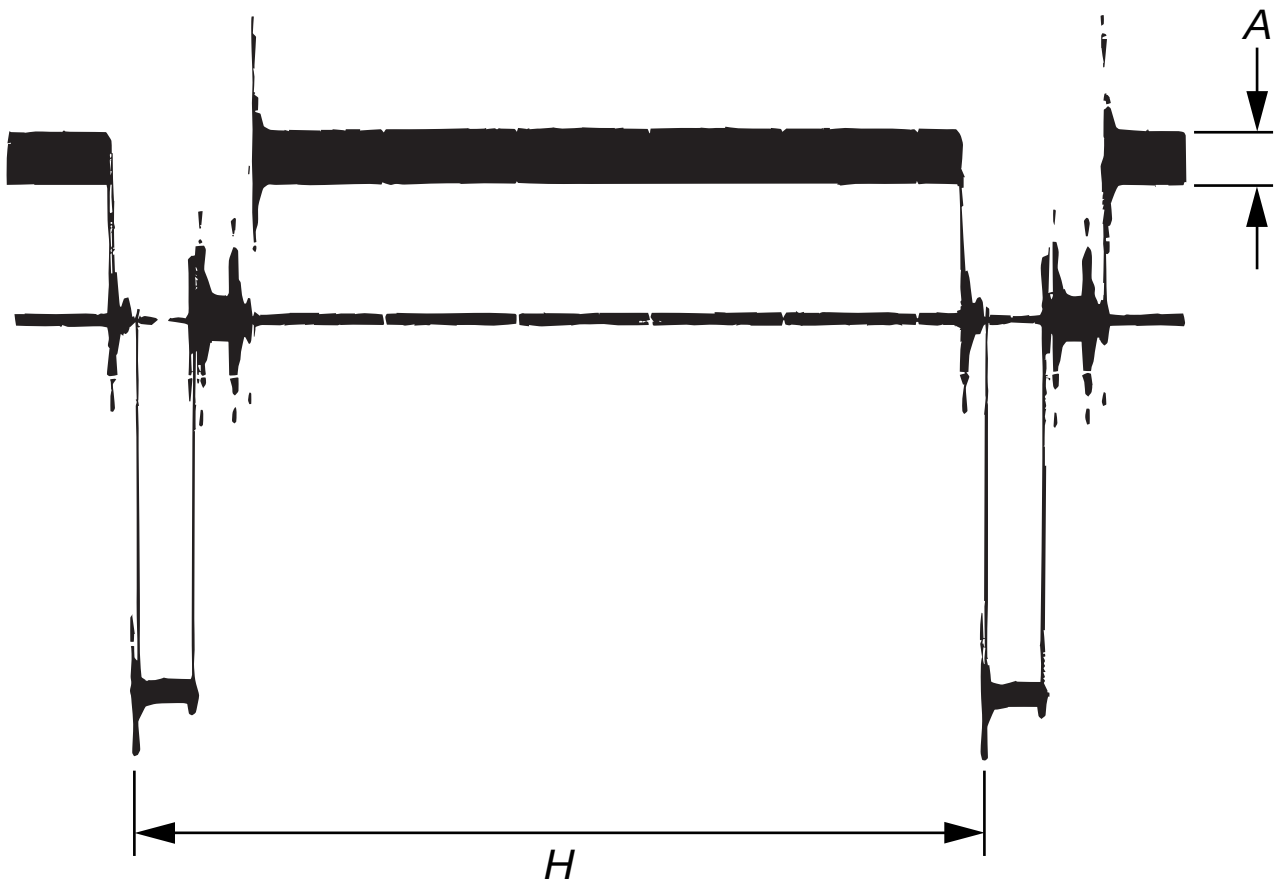

Fig. 5-3-7.

4. Y OUT Level Adjustment (VC-234 board)

Set the Y signal output level. (Adjust the D/A converter out put level of IC641.)

Mode	VTR stop
Signal	No signal
Measurement Point	Hi8 model: Y signal terminal of S VIDEO terminal (75Ω terminated) Standard8 model: VIDEO terminal (75Ω terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	67
Specified Value	A=300 ± 5mV

Note1: Hi8 model:
Insert the plug into the S VIDEO terminal.
Standard8 model:
Insert the plug into the VIDEO terminal.

Note2: Hi8 model:
CCD-TR717E/TR918E/TRV67E/TRV87E
Standard8 model:
CCD-TR317E/TR417E/TR427E/TR617E/TRV37E/TRV47E/TRV48E/TRV57E

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, set data: 41, and press the PAUSE button of the adjustment remote commander.
3) Select page: 6, address: 61, and set data: 30.
4) Select page: F, address: 67, change the data and set the SYNC level (A) to the specified value.
5) Press the PAUSE button of the adjustment remote commander.
6) Select page: 6, address: 61, and set data: 10.
7) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
8) Select page: 0, address: 01, and set data: 00.

Hi8 model

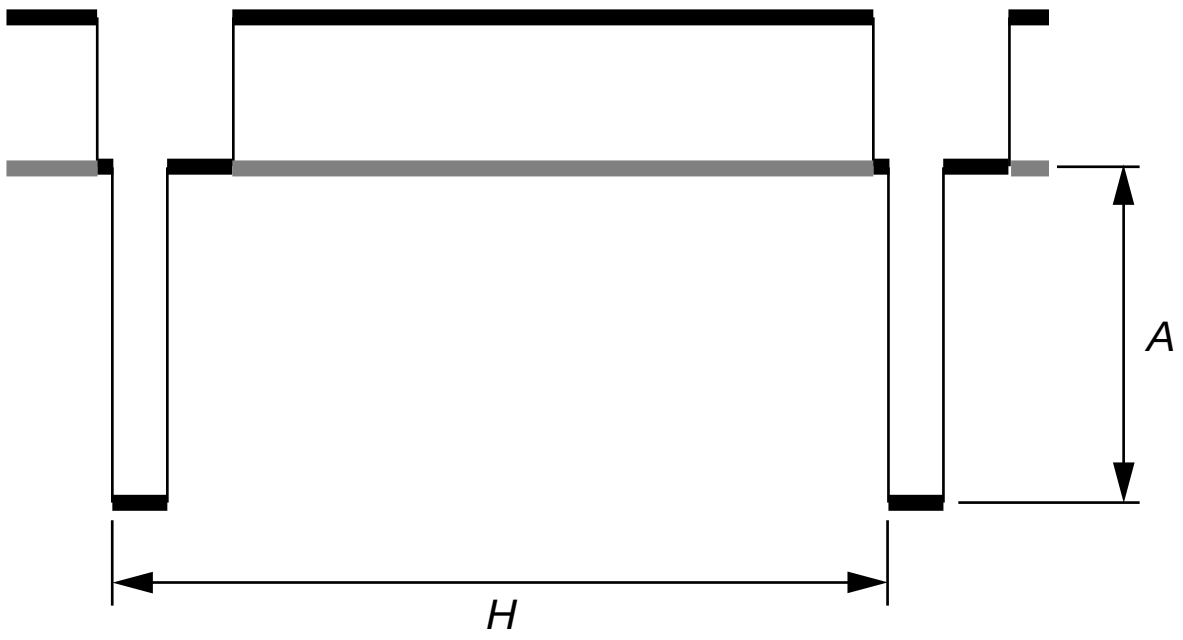

Standard8 model

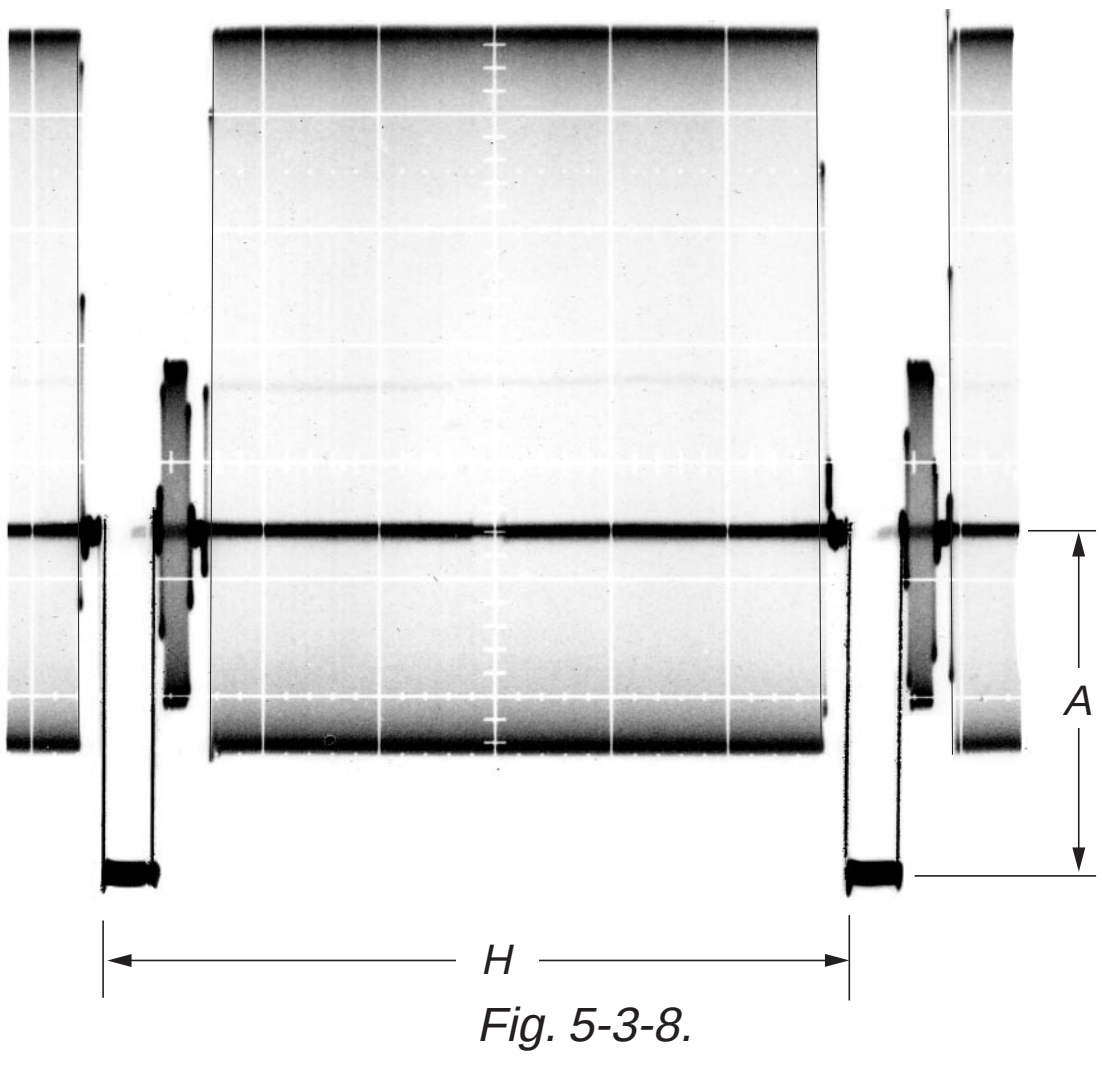

Fig. 5-3-8.

5. C OUT Level Adjustment (VC-234 board)

Set the chroma signal output level. (Adjust the D/A converter out put level of IC641.)

Mode	VTR stop
Signal	No signal
Measurement Point	Hi8 model: Chroma signal terminal of S VIDEO terminal (75Ω terminated) Standard8 model: VIDEO terminal (75Ω terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	68
Specified Value	A=300 ± 5mV

Note1: Hi8 model:
Insert the plug into the S VIDEO terminal.
Standard8 model:
Insert the plug into the VIDEO terminal.

Note2: Hi8 model:
CCD-TR717E/TR918E/TRV67E/TRV87E
Standard8 model:
CCD-TR317E/TR417E/TR427E/TR617E/TRV37E/TRV47E/TRV48E/TRV57E

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, set data: 41, and press the PAUSE button of the adjustment remote commander.
3) Select page: 6, address: 61, and set data: 30.
4) Select page: F, address: 68, change the data and set the burst level (A) to the specified value.
5) Press the PAUSE button of the adjustment remote commander.
6) Select page: 6, address: 61, and set data: 10.
7) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
8) Select page: 0, address: 01, and set data: 00.

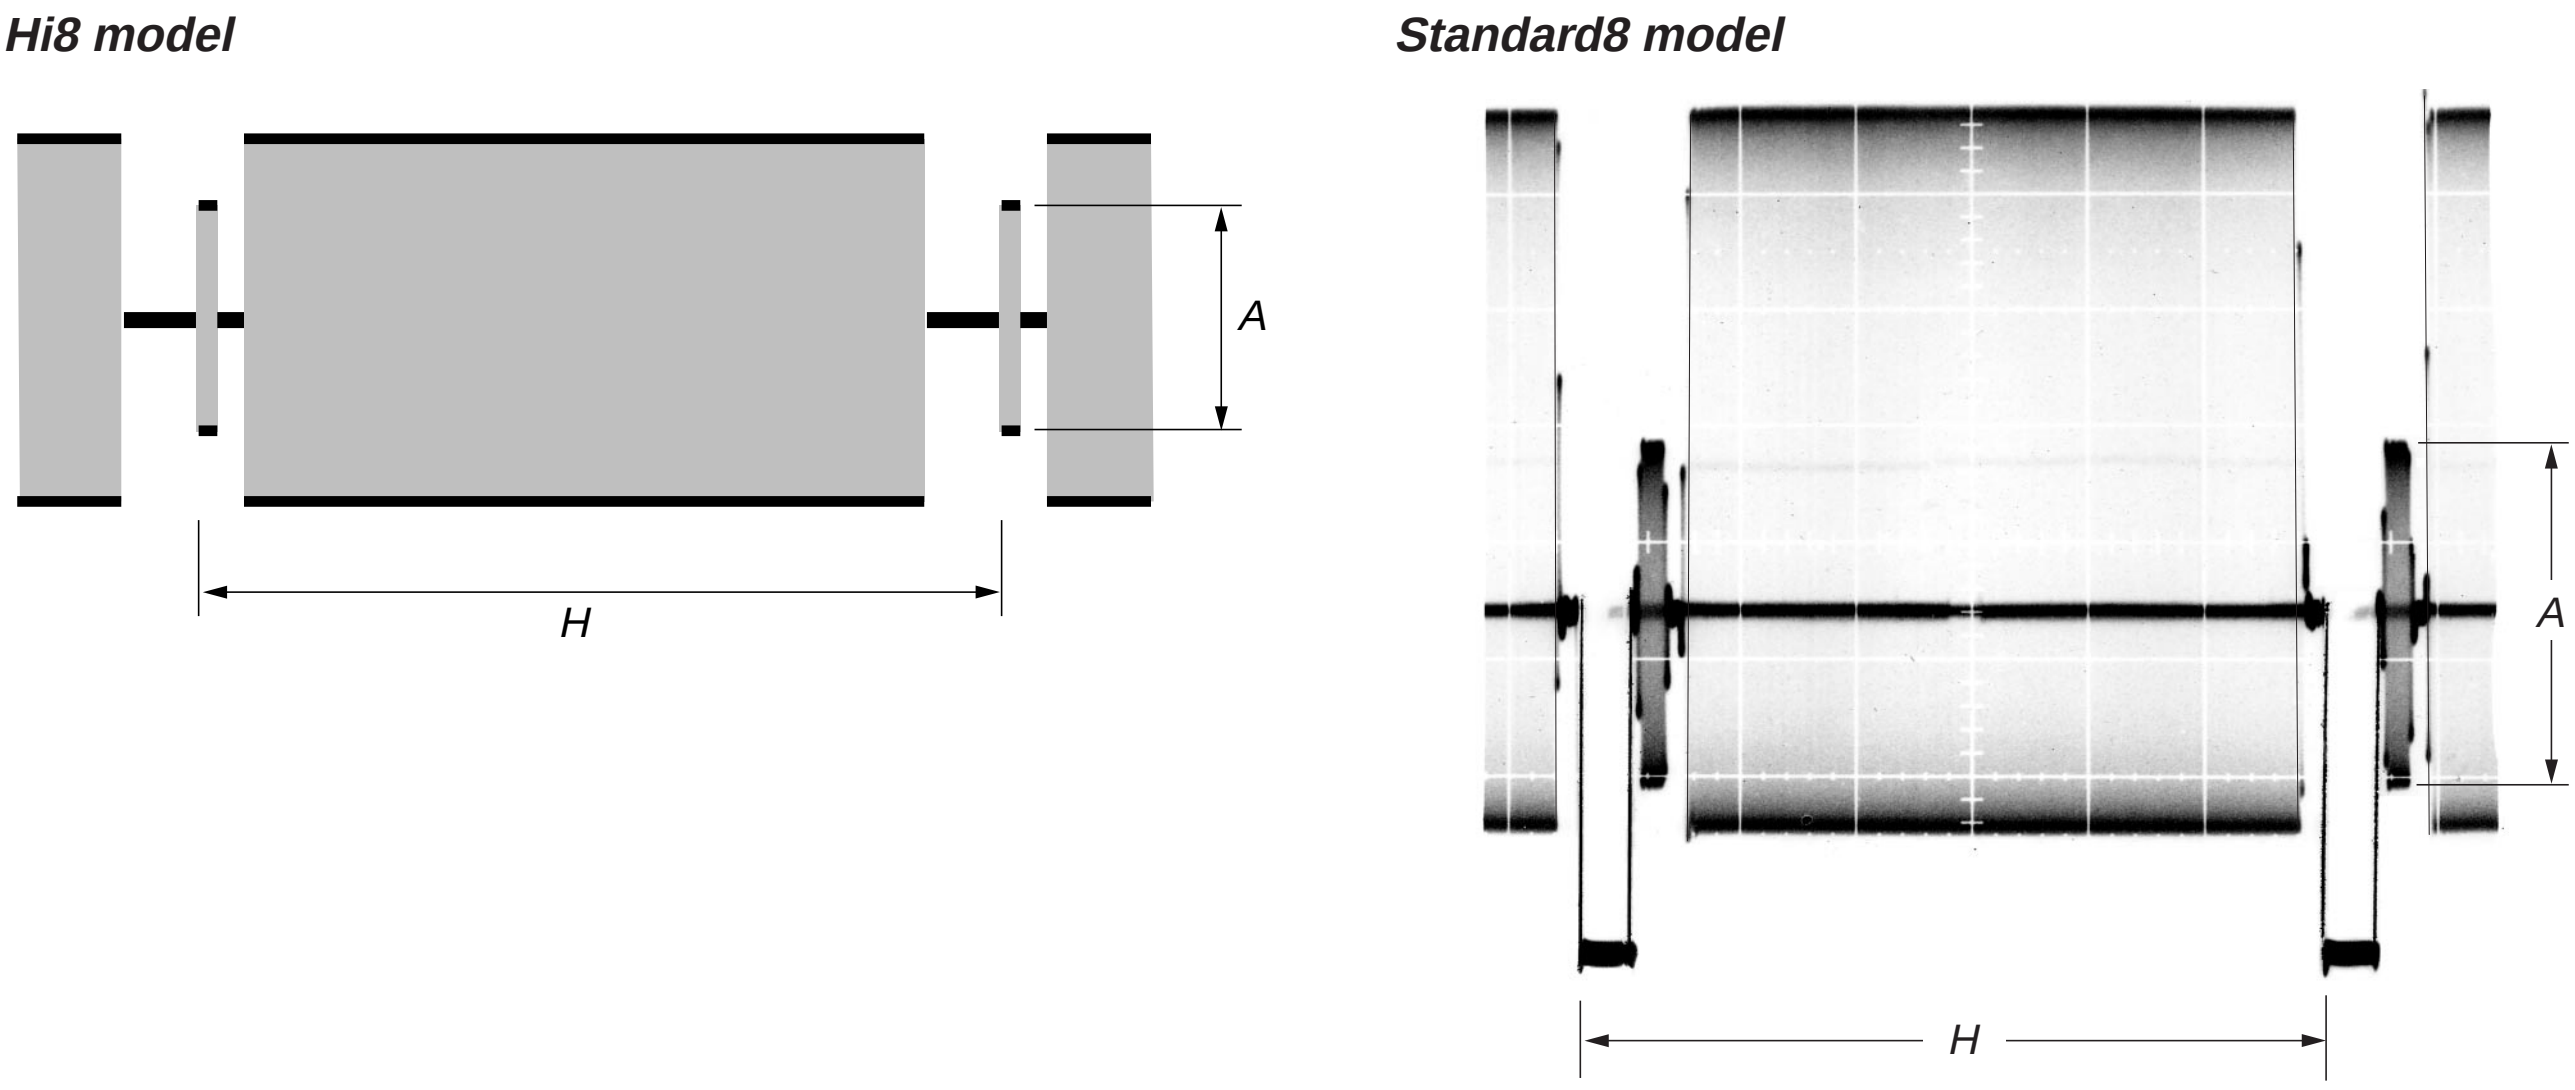

Fig. 5-3-9.

6. REC Y Current Adjustment (VC-234 board)

Adjust the Y FM signal recording current.

Mode	VTR recording (SP mode)	
Signal	No signal	
Measurement Point	Pin ⑩ of CN982 (REC RF)	
Measuring Instrument	Oscilloscope (20 MHz BW LIMIT: OFF)	
Adjustment Page	F	7
Adjustment Address	6A, 6B	F9
Specified Value	A=280 ± 5mV (Hi8 model) A=250 ± 5mV (Standard 8 model)	

Note: PLAYER model:
CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/
TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/
TRV87E :AEP, UK, EE, NE, RU
Hi8 model:
CCD-TR717E/TR918E/TRV67E/TRV87E
Standard8 model:
CCD-TR317E/TR417E/TR427E/TR617E/TRV37E/TRV47E/
TRV47E/TRV48E/TRV57E

Preparations only for the PLAYER model:

1) Select page: 0, address: 01, and set data: 01.
2) Only for the PLAYER model, select page: D, address: 14, after memorizing the data, set the bit value of bit1 to “1”. (Refer to “4-3, 3. Bit value discrimination” of “5-4. Service Mode”).
3) Select page: D, address: 15, and memorize the data.
4) Only for the PLAYER model, select page: D, address: 15, and set the bit value of bit7 to “0”.
5) Insert a tape, and set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin (93) of IC803 of VC-234 board and GND with 4.7kΩ resistor for a second.)
   4.7kΩ resistor: 1-249-425-11

Adjusting method:

1) Insert a tape, and set to recording mode.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: E, address: FB, set data: 06, and press the PAUSE button of the adjustment remote commander.
4) Select page: F, address: 71, after note down the data, set data: 00, and press the PAUSE button.
5) Select page: 2, address: 01, set data: 41, and press the PAUSE button of the adjustment remote commander.
6) Select page: 6, address: 63, and set data: 01.
7) Select page: F, address: 6B, change the data and set the Y signal level (A) to the specified value.
8) Press the PAUSE button.
9) Select page: F, address: 6A, and set the same data as page: F, address: 6B, and press the PAUSE button.
10) Only for Hi8 model, select page: F, address: 6B, and read the data (D_{6B}).
11) Only for Hi8 model, convert D_{6B} to decimal notation, and obtain D_{6B}'. (Refer to tabel 5-4-1. Hexadecimal-decimal conversion table.)
12) Only for Hi8 model, calculate D_{F9}' using following equations (Decimal calculation), convert it to a hexadecimal number, and input to page: 7, address: F9.
    When $D_{6B}' \geqq 243$ (When $D_{6B} \geqq$ F3)
    $D_{F9}' = 255$ (D_{F9} = FF)
    When $D_{6B}' < 243$ (When $D_{6B} <$ F3)
    $D_{F9}' = D_{6B}' + 12$
13) Press the PAUSE button.
14) Select page: F, address: 71, set the data noted down at step 4), and press the PAUSE button.
15) Select page: E, address: FB, set data: 04, and press the PAUSE button.
16) Select page: 6, address: 63, and set data: 00.
17) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
18) Select page: 0, address: 01, and set data: 00.

Processing after completed adjustment only for for the PLAYER model:

1) Select page: 0, address: 01, and set data: 01.
2) Only for the PLAYER model, select page: D, address: 14, and set the data memorized at step 2) of “Preparations only for the PLAYER model”.
3) Press the PAUSE button.
4) Only for the PLAYER model, select page: D, address: 15, and set the data memorized at step 3) of “Preparations only for the PLAYER model”.
5) Press the PAUSE button.
6) Select page: 0, address: 01, and set data: 00.

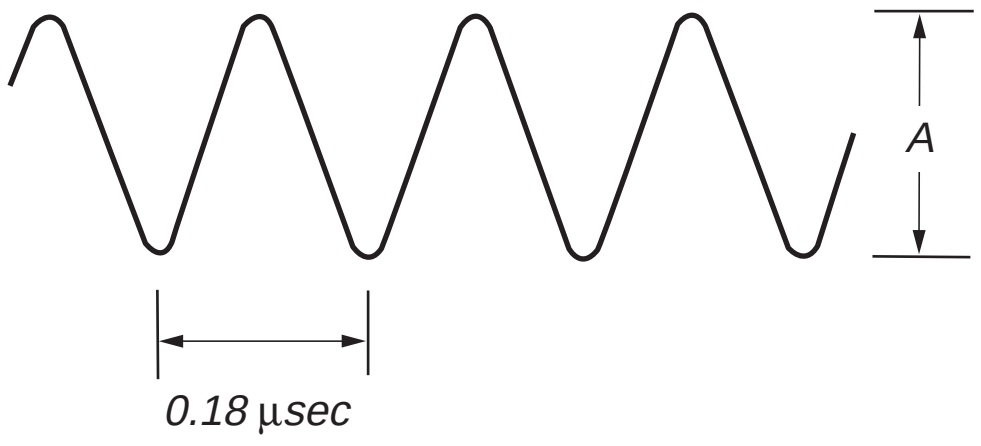

Fig. 5-3-10.

VC-234 BOARD

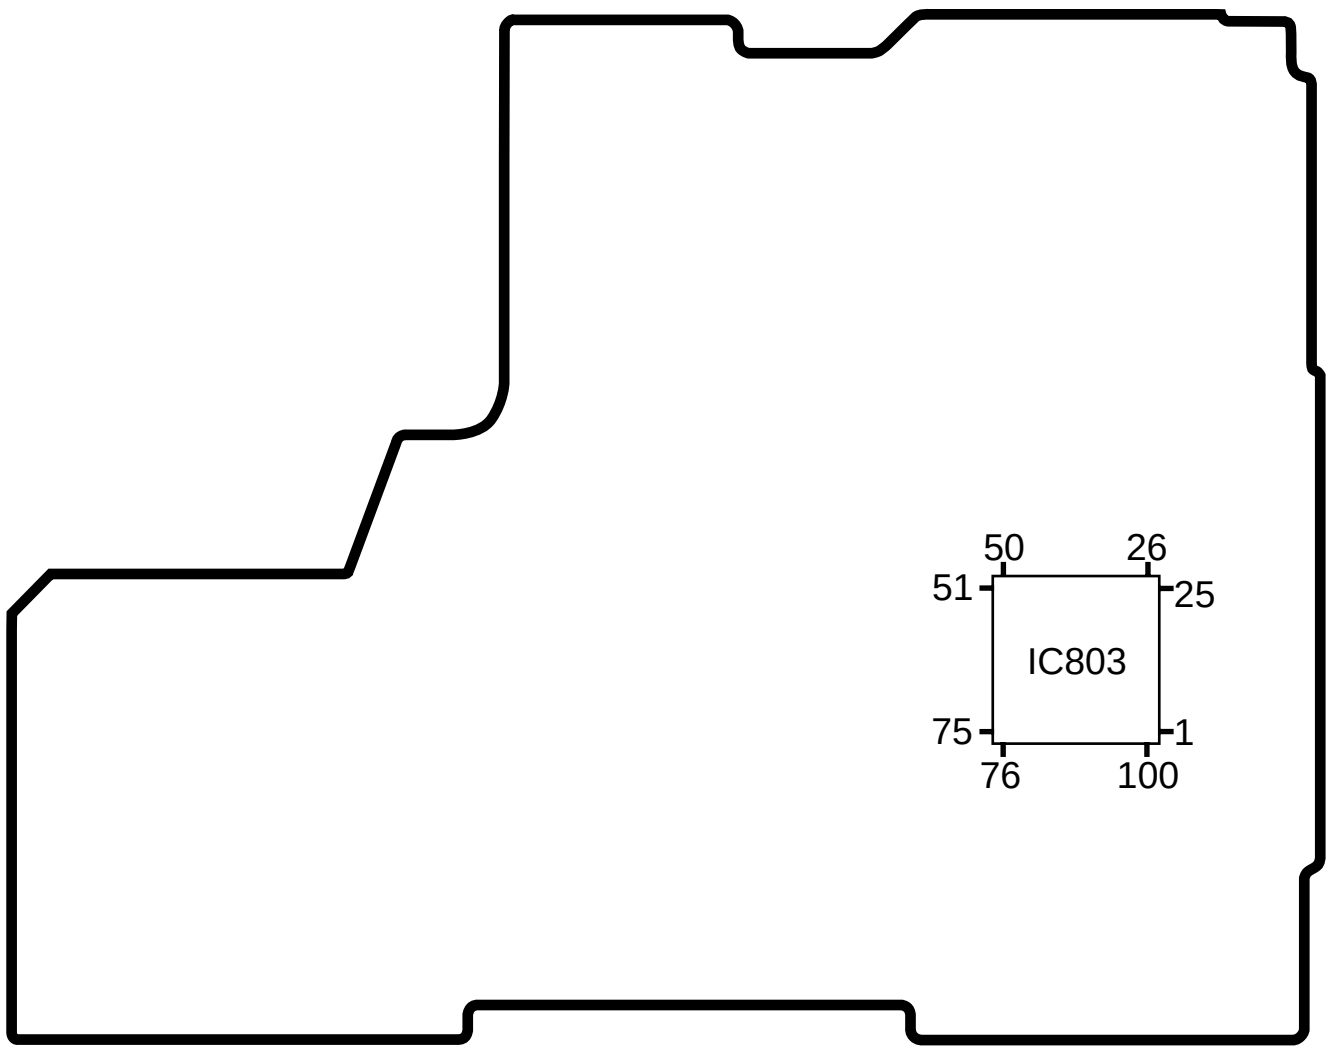

Fig. 5-3-11.

7. REC C/AFM Current Adjustment

Note: PLAYER model:
CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/
TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/
TRV87E: AEP, UK, EE, NE, RU
Hi8 model:
CCD-TR717E/TR918E/TRV67E/TRV87E
Standard8 model:
CCD-TR317E/TR417E/TR427E/TR617E/TRV37E/TRV47E/
TRV47E/TRV48E/TRV57E

7-1. Preparations only for the PLAYER model

1) Select page: 0, address: 01, and set data: 01.
2) Only for the PLAYER model, select page: D, address: 14, after memorizing the data, set the bit value of bit1 to "1". (Refer to "4-3, 3. Bit value discrimination" of "5-4. Service Mode").
3) Select page: D, address: 15, and memorize the data.
4) Only for the PLAYER model, select page: D, address: 15, and set the bit value of bit7 to "0".
5) Insert a Hi8 ME tape, and set to VTR recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin ㊸ of IC803 of VC-234 board and GND with 4.7kΩ resistor for a second.)
   4.7kΩ resistor: 1-249-425-11

7-2. REC C Current Check (VC-234 board)

Check the recording current levels of the REC Chroma signal. If it is too low, chroma signal noise in played back picture will be increased. If too high, Y signal noises will increase and white modulation noises will be produced.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin ⑩ of CN982 (REC RF)
Measuring Instrument	Oscilloscope (20 MHz BW LIMIT: OFF)
Specified Value	A=54.0 ± 4.0mV (Hi8 model) A=48.2 ± 3.0mV (Standard 8 model)

Adjusting method:

1) Insert a Hi8 ME tape, and set to recording mode.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: 2, address: 01, set data: 41, and press the PAUSE button of the adjustment remote commander.
4) Select page: 6, address: 61, and set data: 30.
5) Select page: E, address: FB, set data: 05, and press the PAUSE button.
6) Select page: F, address: 71, after note down the data, set data: 00, and press the PAUSE button.
7) Check that the REC chroma signal level (A) satisfies the specified value, and note down the signal level.
8) Select page: F, address: 71, set the data noted down at step 6), and press the PAUSE button.
9) Select page: E, address: FB, set data: 04, and press the PAUSE button.
10) Select page: 6, address: 61, and set data: 10.
11) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
12) Select page: 0, address: 01, and set data: 00.
13) Perform "REC AFM Current Adjustment" and "Processing after completed adjustment only for the PLAYER model".

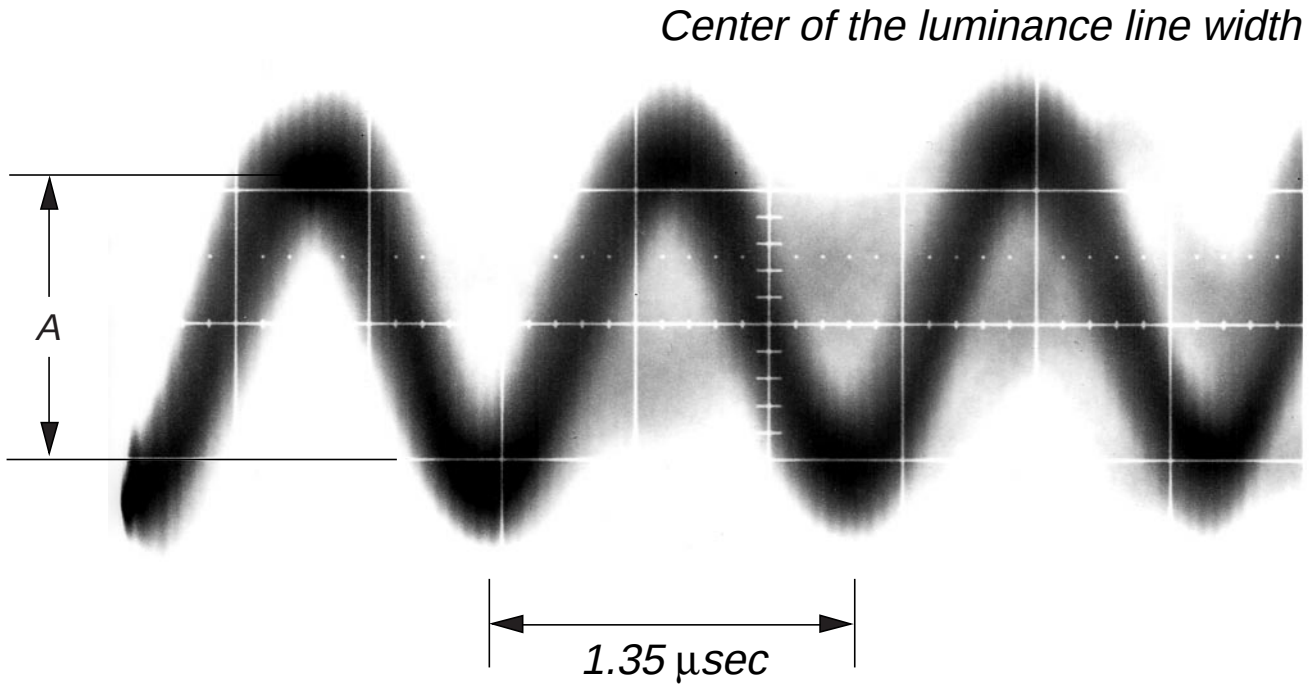

Fig. 5-3-12

7-3. REC AFM Current Adjustment (VC-234 board)

Set the recording levels of the REC AFM signal. If the level is too low, the audio S/N will be deteriorated. If too high, color beets will be produced on the self-recording / playback image.

Mode	VTR recording (SP mode)
Signal	No signal
Measurement Point	Pin ⑩ of CN982 (REC RF)
Measuring Instrument	Oscilloscope (20 MHz BW LIMIT: OFF)
Adjustment Page	F
Adjustment Address	71
Specified Value	A= (REC Chroma signal level) × 0.309 ± 0.9mV (Note2)

Note1: Only for the STEREO model, do not insert any plug into the AUDIO (R) terminal.

Note2: REC Chroma signal level is noted down at step 7) of "REC C Current Check".

Adjusting method:

1) Insert a Hi8 ME tape, and set to recording mode.
2) Select page: 0, address: 01, and set data: 01.
3) Select page: E, address: FB, set data: 07, and press the PAUSE button of the adjustment remote commander.
4) Select page: F, address: 71, change the data and set the REC AFM signal level (A) to the specified value.
5) Press the PAUSE button of the adjustment remote commander.
6) Select page: E, address: FB, set data: 04, and press the PAUSE button.
7) Select page: 0, address: 01, and set data: 00.
8) Perform "Processing after completed adjustment only for the PLAYER model".

7-4. Processing after completed adjustment only for the PLAYER model

1) Select page: 0, address: 01, and set data: 01.
2) Only for the PLAYER model, select page: D, address: 14, and set the data memorized at step 2) of "Preparations only for the PLAYER model".
3) Press the PAUSE button.
4) Only for the PLAYER model, select page: D, address: 15, and set the data memorized at step 3) of "Preparations only for the PLAYER model".
5) Press the PAUSE button.
6) Select page: 0, address: 01, and set data: 00.

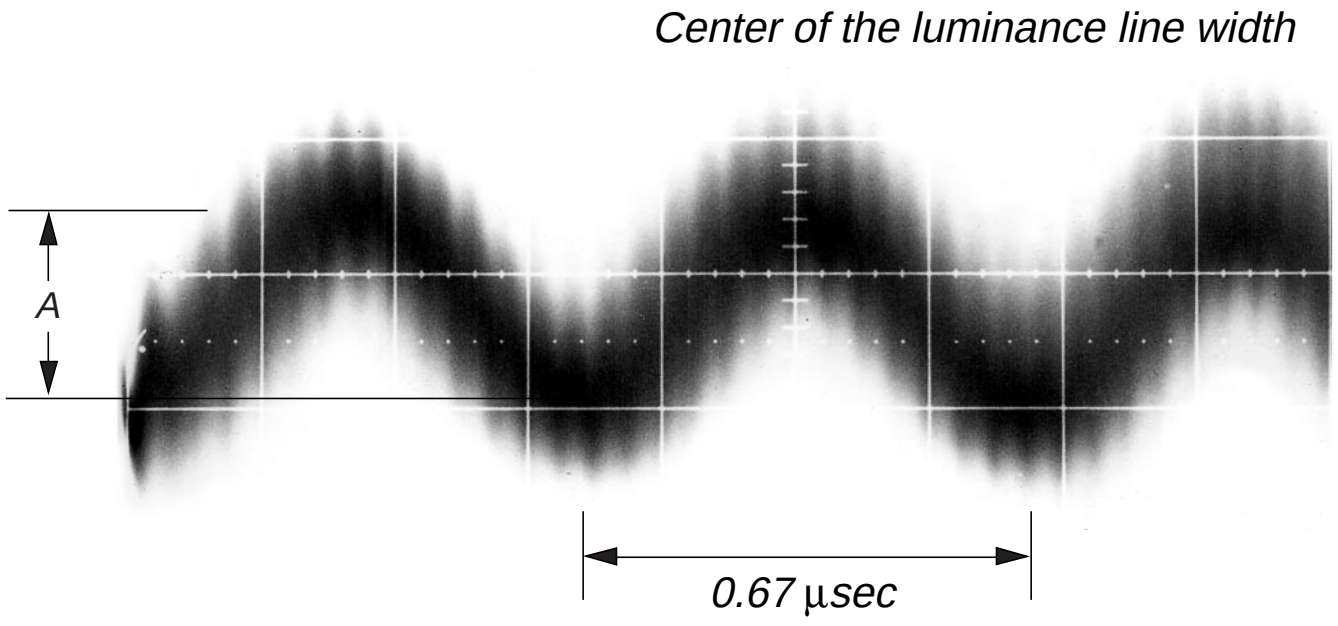

Fig. 5-3-13.

3-5. IR TRANSMITTER ADJUSTMENTS (CCD-TR918E/TRV87E)

Adjust using a IR receiver jig (J-6082-383-A).

Note : If the distance between the IR receiver jig and the camcorder is below 1m, cover the LASER LINK emitter with a ND filter. (For example, when the distance is 30cm to 50cm, cover the LASER LINK emitter with a ND filter 1.0.)

Switch setting:

LASER LINK .... ON (Red LED is lit)

1. IR Video Carrier Frequency Adjustment (VC-234 board)

Mode	Camera standby
Subject	Arbitrary
Measurement Point	Pin ⑤ of CN003 of IR receiver jig (RF) (Or Pin ⑯ of IC751 of VC-234 board)
Measuring Instrument	Frequency counter
Adjustment Page	F
Adjustment Address	80
Specified Value	f = 11.55 ± 0.05 MHz

Connection of Equipment

Connect the measuring device as shown in the following figure, and adjust.

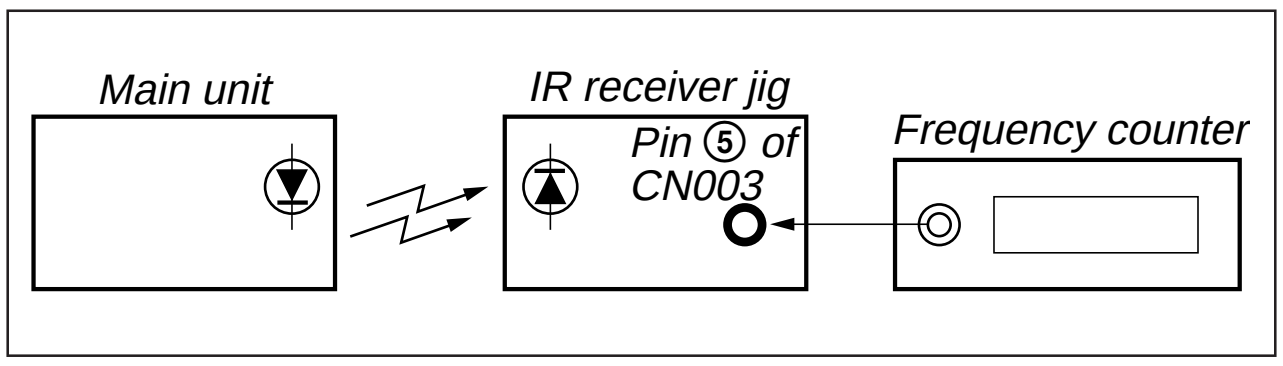

Fig. 5-3-14.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, set data: 37, and press the PAUSE button of the adjustment remote commander.
3) Select page: F, address: 80, change the data, and set the video carrier frequency (f) to the specified value.
4) Press the PAUSE button of the adjustment remote commander.
5) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
6) Select page: 0, address: 01, and set data: 00.

2. IR Video Deviation Adjustment (VC-234 board)

Mode	Camera standby
Subject	Arbitrary
Measurement Point	VIDEO OUT terminal of IR receiver jig (Terminated at 75Ω)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	7E
Specified Value	A = 0.87 ± 0.04 V

Connection of Equipment

Connect the measuring device as shown in the following figure, and adjust.

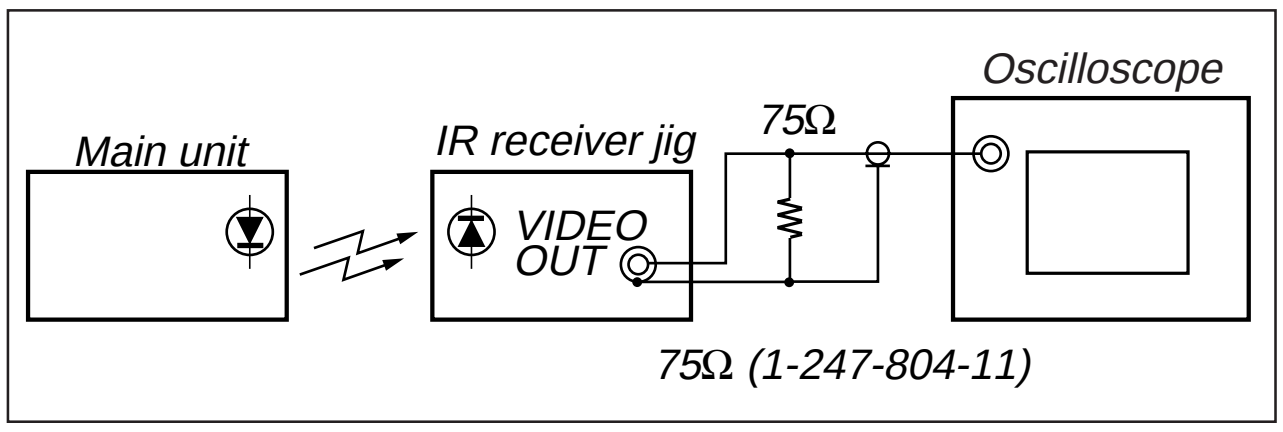

Fig. 5-3-15.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Select page: 2, address: 01, set data: 39, and press the PAUSE button of the adjustment remote commander.
3) Select page: F, address: 7E, and change the data, set the video signal amplitude (A) to the specified value.
4) Press the PAUSE button of the adjustment remote commander.
5) Select page: 2, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander.
6) Select page: 0, address: 01, and set data: 00.

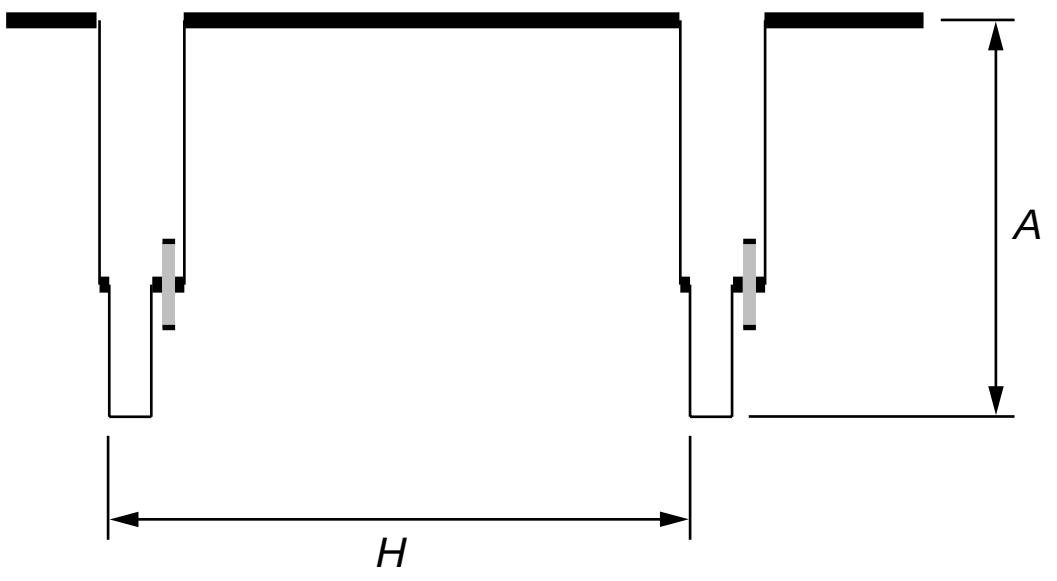

Fig. 5-3-16.

3. IR Audio Deviation Adjustment (VC-234 board)

Mode	VTR recording
Signal	Audio signal : 400Hz, –7.5dBs : L or R of AUDIO terminal Video signal : No signal : VIDEO terminal
Measurement Point	AUDIO L terminal and AUDIO R terminal of IR receiver jig (Terminated at 47kΩ)
Measuring Instrument	Audio level meter
Adjustment Page	F
Adjustment Address	7F
Specified Value	Signal level: –7.5 ± 2.0 dBs Level difference of L and R: Below 2dB

Connection of Equipment

Connect the measuring device as shown in the following figure, and adjust.

Adjusting method:

1) Select page: 0, address: 01, and set data: 01.
2) Connect the audio level meter to the AUDIO L terminal of the IR receiver jig.
3) Select page: F, address: 7F, change the data and set the 400Hz audio signal level to the specified value.
4) Press the PAUSE button of the adjustment remote commander.
5) Connect the audio level meter to the AUDIO R terminal of the IR receiver jig.
6) Check that the 400Hz audio signal level is within the specified value. If outside, repeat from step 2).
7) Select page: 0, address: 01, and set data: 00.

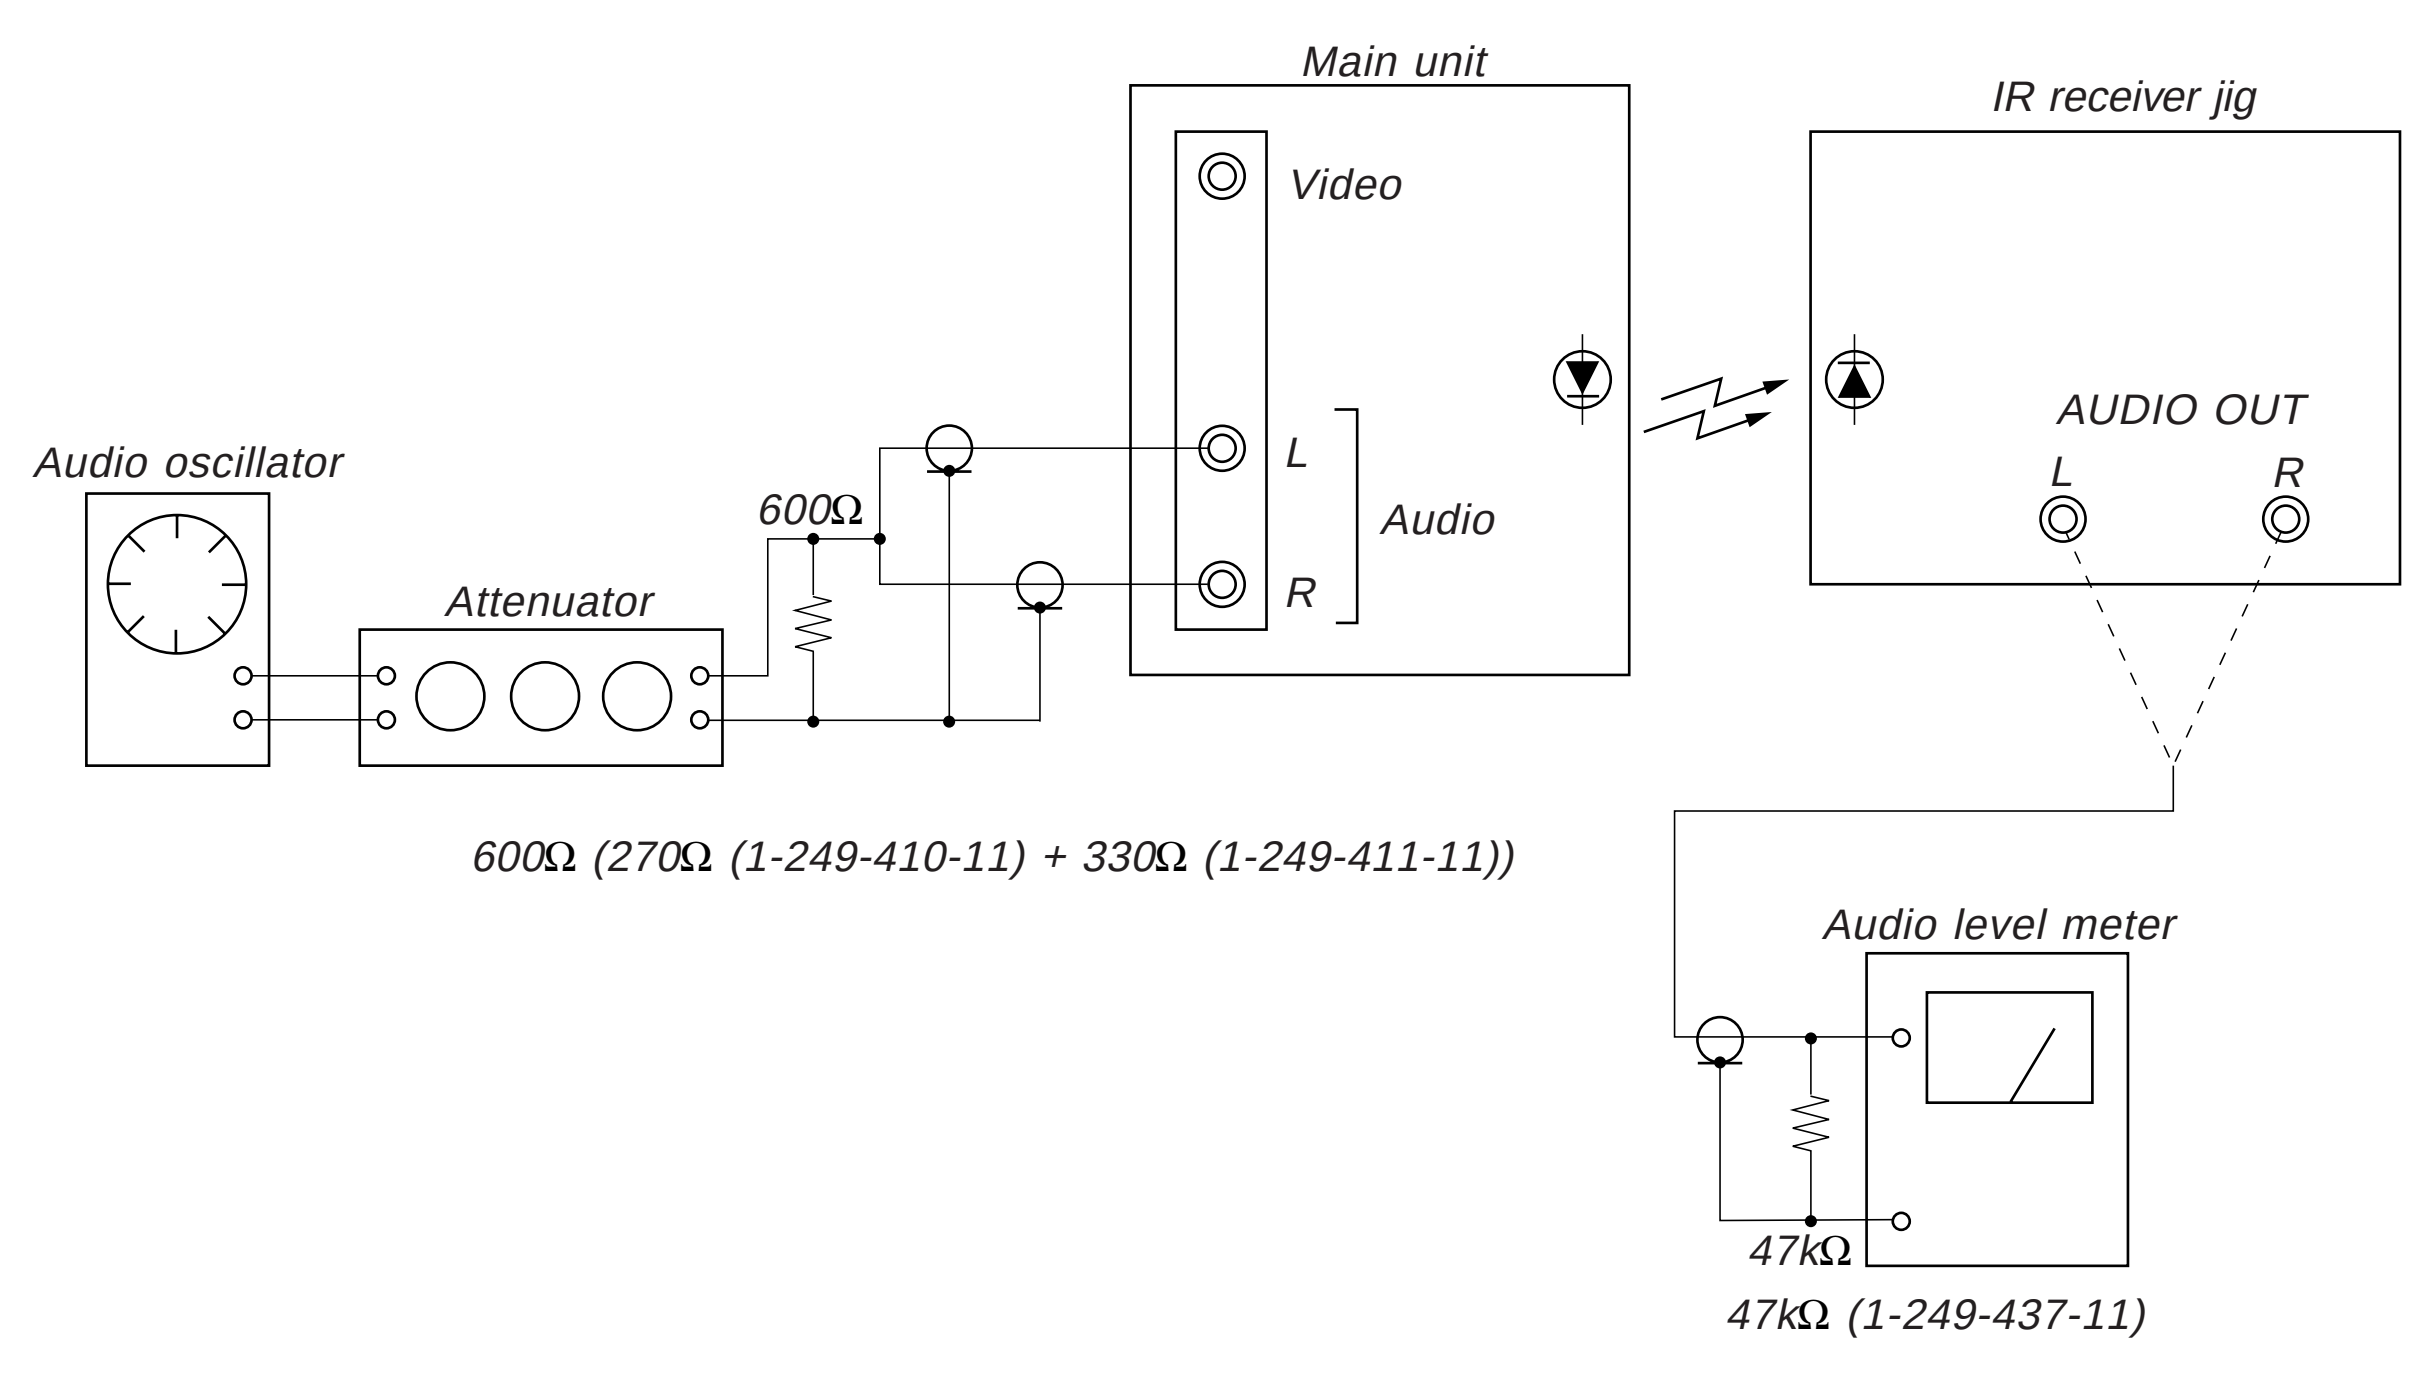
Main unit
IR receiver jig
Video
AUDIO OUT
L
R
Audio oscillator
600Ω
L
Audio
R
Attenuator
600Ω (270Ω (1-249-410-11) + 330Ω (1-249-411-11))
Audio level meter
47kΩ
47kΩ (1-249-437-11)

Fig. 5-3-17.

3-6. STEREO AUDIO SYSTEM ADJUSTMENT (CCD-TR918E/TRV87E)

- Perform the adjustment using color bar signal as a video signal input for the VIDEO terminal.
- The items to be adjusted for the R channel will be indicated within the [ ], in regard to the adjusting items to be adjusted for both L and R channels.
- Set the Hi-Fi sound switch in the menu display to “STEREO” position unless specified otherwise.

Note :

1) When inputting the audio signal, input same signal to both the L and R channels, unless otherwise.
2) Be sure insert the plug (Shorting plug or dummy plug, etc) into the AUDIO terminal (Right). If the plug is not inserted, the monaural mode will be set, and correct adjustments can not be carried out.

[Monaural mode]

During recording .... REC AFM RF 1.7MHz carrier will not be output.
During playback .... The L + R signal will be output from the AUDIO terminal (Left).

[Connecting the measuring instruments for the audio]

Connect the audio system measuring instruments in addition to the video system measuring instruments as shown in Fig. 5-3-18, and perform adjustments at the power switch [VTR or PLAYER] position.

[Adjustment Procedure]

1) 1.5MHz deviation adjustment
2) 1.7MHz deviation adjustment
3) BPF adjustment

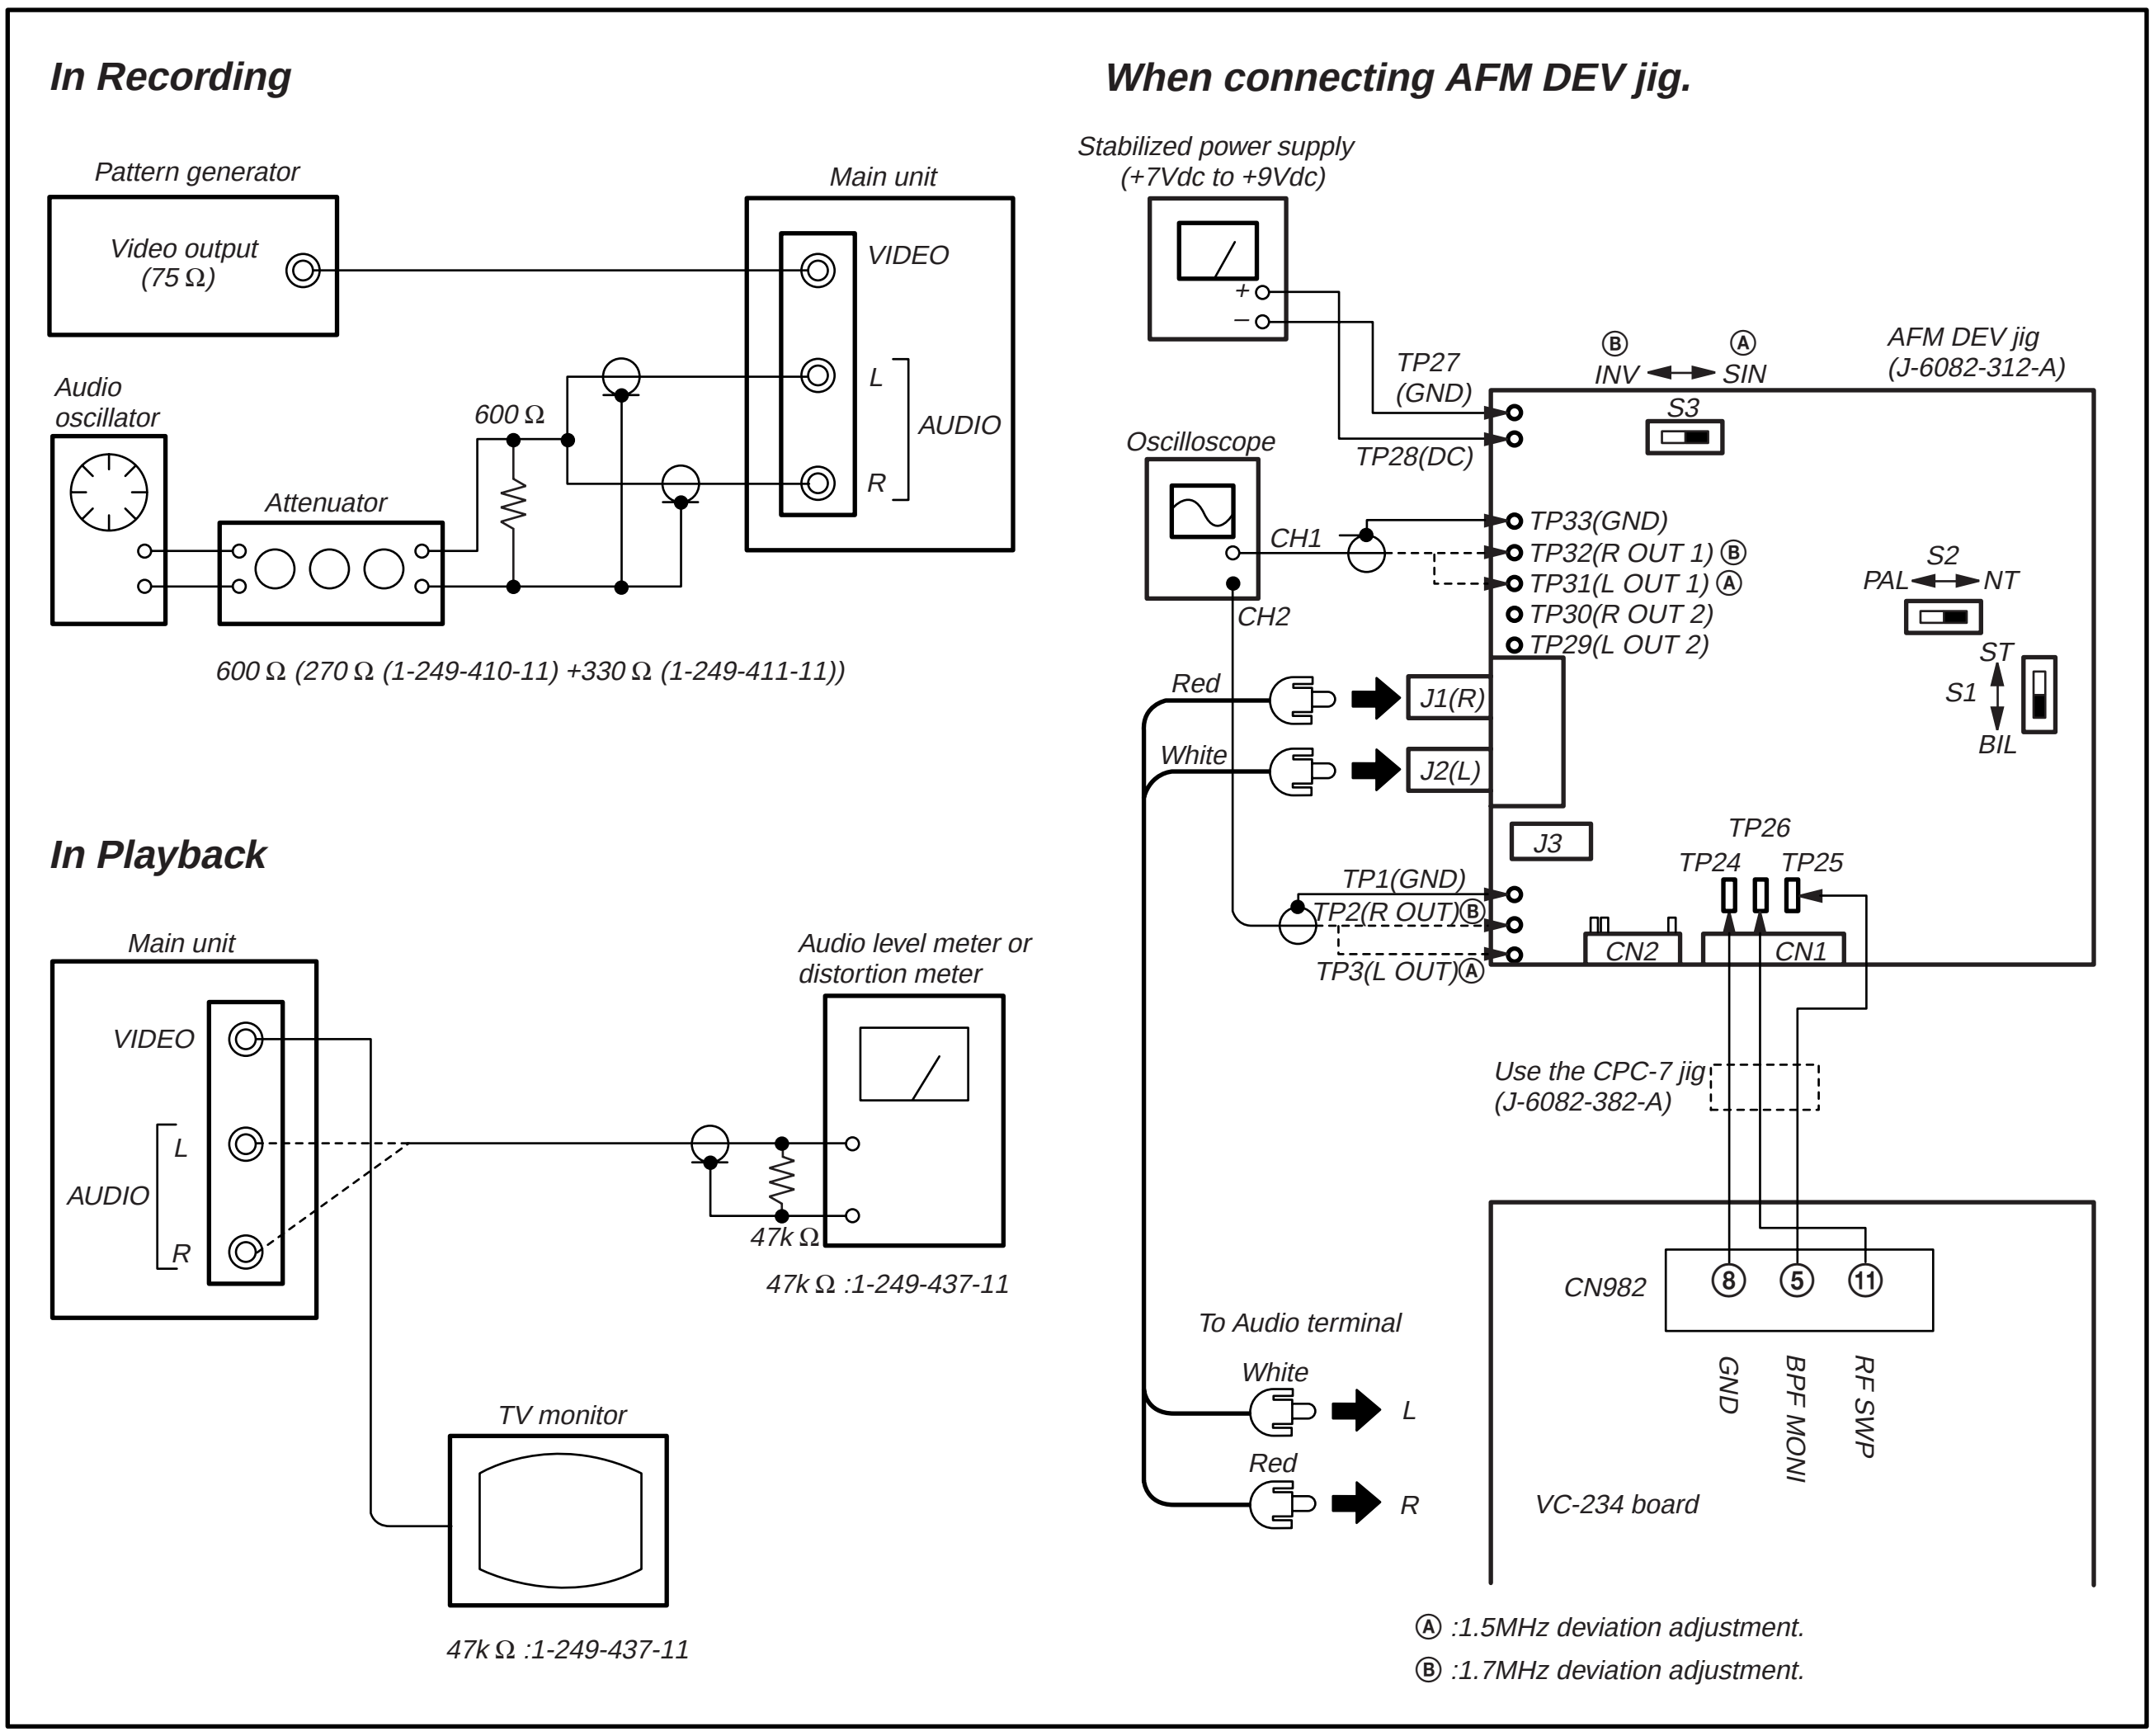
In Recording
Pattern generator
Video output (75 Ω)
Main unit
VIDEO
L
R
AUDIO
Audio oscillator
Attenuator
600 Ω
600 Ω (270 Ω (1-249-410-11) +330 Ω (1-249-411-11))
In Playback
Main unit
VIDEO
AUDIO
L
R
Audio level meter or distortion meter
47k Ω
47k Ω :1-249-437-11
TV monitor
47k Ω :1-249-437-11
When connecting AFM DEV jig.
Stabilized power supply (+7Vdc to +9Vdc)
+
−
TP27 (GND)
TP28(DC)
Ⓑ INV ◀▶ Ⓐ SIN
S3
AFM DEV jig (J-6082-312-A)
Oscilloscope
CH1
CH2
TP33(GND)
TP32(R OUT 1) Ⓑ
TP31(L OUT 1) Ⓐ
TP30(R OUT 2)
TP29(L OUT 2)
S2
PAL ◀▶ NT
ST
S1
BIL
Red
White
J1(R)
J2(L)
J3
TP26
TP24
TP25
TP1(GND)
TP2(R OUT)Ⓑ
TP3(L OUT)Ⓐ
CN2
CN1
Use the CPC-7 jig (J-6082-382-A)
CN982
⑧ ⑤ ⑪
GND
BPF MONI
RF SWP
To Audio terminal
White
L
Red
R
VC-234 board
Ⓐ :1.5MHz deviation adjustment.
Ⓑ :1.7MHz deviation adjustment.

Fig. 5-3-18.

1. Deviation Adjustment

1-1. Connections

1) Connect TP24, TP25 and TP26 of the AFM DEV jig to CN982 of the VC-234 board.
   TP24(GND) .... Pin ⑧ of CN982
   TP25(REC RF) .... Pin ⑤ of CN982
   TP26(RF SWP) .... Pin ⑪ of CN982
2) Connect the audio output terminal (J1 and J2) of the AFM DEV jig to AUDIO terminal of the unit.
3) Connect TP28 (DC), TP27 (GND) of the AFM DEV jig to the DC power supply (+7Vdc to +9Vdc).

1-2. Preparations only for the PLAYER model

Note: PLAYER model:
CCD-TR918E/TRV87E: AEP, UK, EE, NE, RU

1) Select page: 0, address: 01, and set data: 01.
2) Only for the PLAYER model, select page: D, address: 14, after memorizing the data, set the bit value of bit1 to “1”. (Refer to “4-3, 3. Bit value discrimination” of “5-4. Service Mode”).
3) Select page: D, address: 15, and memorize the data.
4) Only for the PLAYER model, select page: D, address: 15, and set the bit value of bit7 to “0”.
5) Insert a tape, and set to recording mode. (Use the wireless remote commander of 8mm VCR, or connect Pin (93) of IC803 of VC-234 board and GND with 4.7kΩ resistor for a second.)
   4.7kΩ resistor: 1-249-425-11

1-3. 1.5 MHz Deviation Adjustment (VC-234 board)

Sets the spectrum of the L-ch ((L+R)/2 signal) level modulated during recording. If deviated, the crosstalk signal of the audio signal will occur and the audio level will drop during both playback and recording.

Mode	VTR recording
Signal	Input the AFM DEV jig output signal to the left and right audio input terminal
Measurement Point	CH1: AFM DEV jig TP31 CH2: AFM DEV jig TP3
Measuring Instrument	Oscilloscope ADD mode CH2 INV mode
Adjustment Page	F
Adjustment Address	7B
Specified Value	The level difference between CH1 signal and CH2 signal should be minimum.

Switch setting:
Set the AFM DEV jig switches to the following positions.

S1 .... BIL Position
S2 .... PAL Position
S3 .... SIN Position

Adjusting method:

1) Set to recording mode. (Only for the PLAYER model, refer to “Preparations only for the PLAYER model”.)
2) Match the vertical ranges of CH1 and CH2 of the oscilloscope to each other.
3) Set the oscilloscope to the ADD mode and CH2 to the INV (invert) mode.
4) Select page: 0, address: 01, and set data: 01.
5) Select page: F, address: 7B, change the data and minimize the audio signal level difference (A).
6) Press the PAUSE button of the adjustment remote commander.
7) Select page: 0, address: 01, and set data: 00.
8) Perform “1.7 MHz Deviation Adjustment” and “Processing after completed adjustment only for the PLAYER model”.

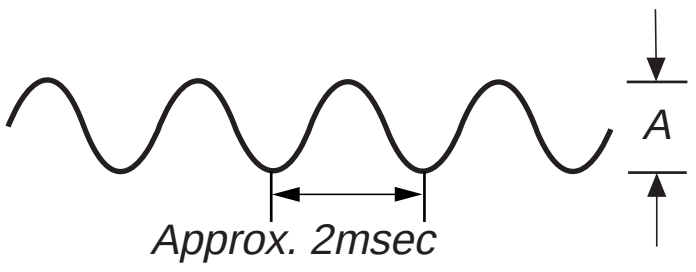

Fig. 5-3-19.

1-4. 1.7 MHz Deviation Adjustment (VC-234 board)

Sets the spectrum of the R-ch ((L-R)/2 signal) level modulated during recording. If deviated, the crosstalk signal of the audio signal will occur and the audio level will drop during both playback and recording.

Mode	VTR recording
Signal	Input the AFM DEV jig output signal to the left and right audio input terminal
Measurement Point	CH1: AFM DEV jig TP32 CH2: AFM DEV jig TP2
Measuring Instrument	Oscilloscope ADD mode CH2 normal mode
Adjustment Page	F
Adjustment Address	7C
Specified Value	The level difference between CH1 signal and CH2 signal should be minimum.

Switch setting:

Set the AFM DEV jig switches to the following positions.

S1 .... BIL Position
S2 .... PAL Position
S3 .... INV Position

Adjusting method:

1) Set to recording mode. (Only for the PLAYER model, refer to "Preparations only for the PLAYER model".)
2) Match the vertical ranges of CH1 and CH2 of the oscilloscope to each other.
3) Set the oscilloscope to the ADD mode and CH2 to the normal mode.
4) Select page: 0, address: 01, and set data: 01.
5) Select page: F, address: 7C, change the data and minimize the audio signal level difference (A).
6) Press the PAUSE button of the adjustment remote commander.
7) Select page: 0, address: 01, and set data: 00.
8) Perform "Processing after completed adjustment only for the PLAYER model".

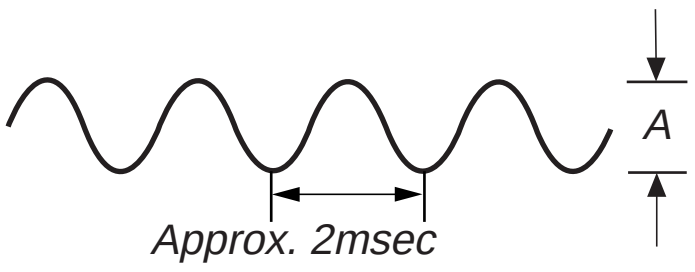

Fig. 5-3-20.

1-5. Processing after completed adjustment only for the PLAYER model

1) Select page: 0, address: 01, and set data: 01.
2) Only for the PLAYER model, select page: D, address: 14, and set the data memorized at step 2) of "Preparations only for the PLAYER model".
3) Press the PAUSE button.
4) Only for the PLAYER model, select page: D, address: 15, and set the data memorized at step 3) of "Preparations only for the PLAYER model".
5) Press the PAUSE button.
6) Select page: 0, address: 01, and set data: 00.

2. BPF f0 Adjustment (VC-234 board)

Sets the BPF passing frequency so that the AFM signal can separate from the playback RF signal properly. If deviated. the mono/stereo mode will be differentiated incorrectly, and noises and distortions will increase during high volume playback.

Mode	Playback
Signal	Alignment tape: For BPF adjustment (WR5-11CS)
Measurement Point	Audio output terminal left or right
Measuring Instrument	distortion meter
Adjustment Page	F
Adjustment Address	7D
Specified Value	The Main and Sub channel distortion rate should be almost the same (within ± 1%) and minimum.

Adjusting method :

1) Select page: 0, address: 01, and set data: 01.
2) Set the Hi-Fi sound switch (menu display) to "2".
3) Select page: F, address: 7D, change the data and minimize the distortion rate.
4) Press the PAUSE button of the adjustment remote commander.
5) Set the Hi-Fi sound switch (menu display) to "1".
6) Select page: F, address: 7D, change the data and minimize the distortion rate.
7) Press the PAUSE button of the adjustment remote commander.
8) Repeat steps 2) to 7) and set the data of address: 7D so that the distortions rates when the Hi-Fi sound switch is set to "2" and set to "1" respectively are almost the same and minimum.
9) Press the PAUSE button of the adjustment remote commander.
10) Select page: 0, address: 01, and set data: 00.
11) Set the Hi-Fi sound switch to "STEREO".

3-7. MONAURAL AUDIO SYSTEM ADJUSTMENT (CCD-TR317E/TR417E/TR427E/TR617E/ TR717E/TRV37E/TRV47E/TRV48E/TRV57E/ TRV67E)

[Connecting the measuring instruments for the audio]

Connect the audio system measuring instruments besides the video system measuring instruments as shown Fig. 5-3-21.

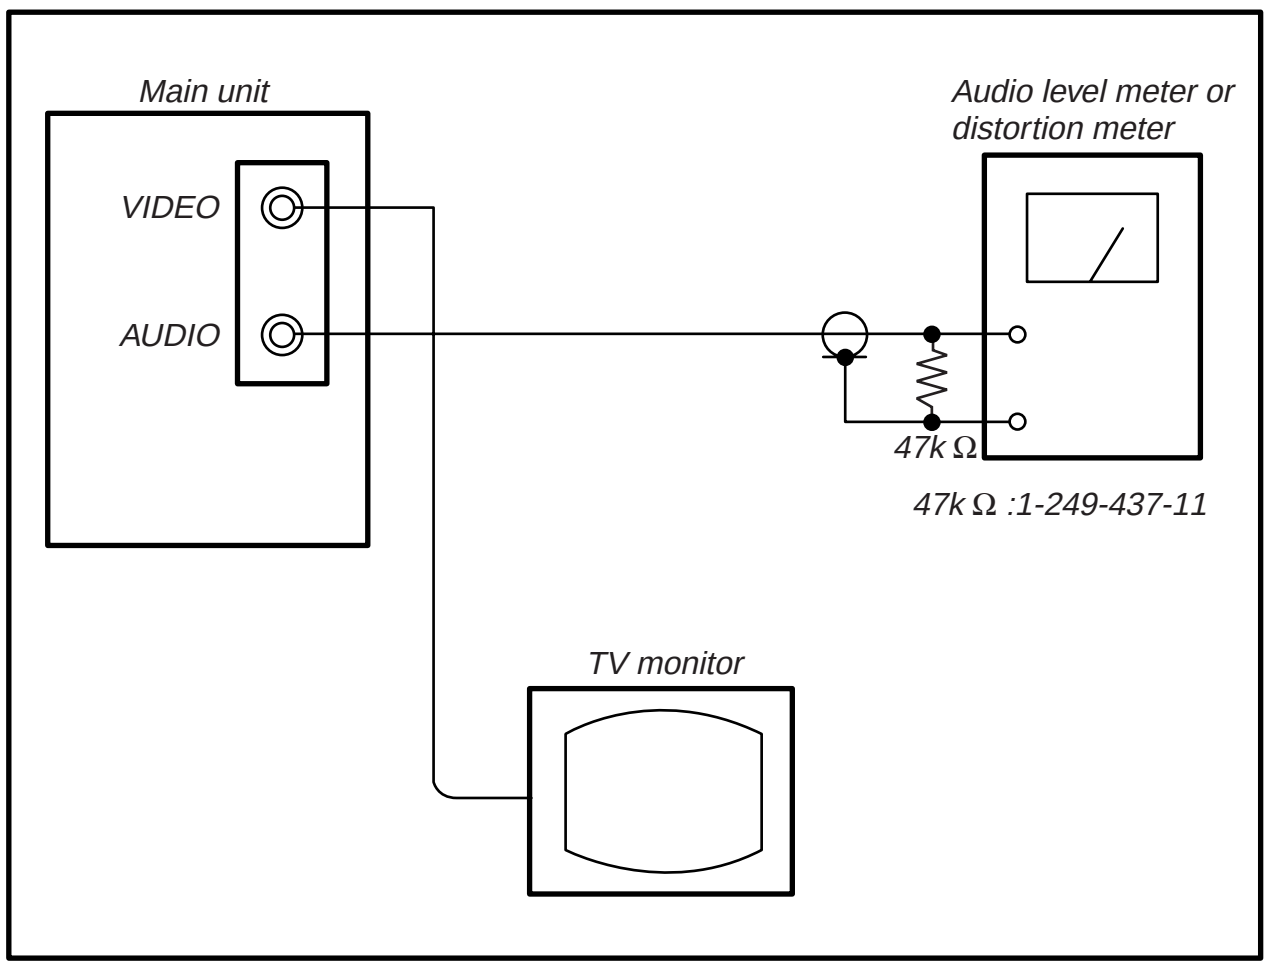

Fig. 5-3-21.

1. 1.5 MHz Deviation Adjustment (VC-234 board)

Adjust to the optimum audio FM signal deviation.
If the adjustment is not correct, its playback level will differ from that of other units.

Mode	Playback
Signal	Alignment tape: For checking the operation (WR5-5CSP)
Measurement Point	Audio output terminal
Measuring Instrument	Audio level meter
Adjustment Page	F
Adjustment Address	7B
Specified Value	–7.5 ± 0.5dBs

Adjusting method :

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 7B, change the data and set the 400Hz signal level to the specified value.
3) Press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.

2. BPF f_0 Adjustment (VC-234 board)

Adjust to the optimum audio BPF characteristics of the IC.
If the adjustment is not correct, the distortion rate and S/N ratio will worsen.

Mode	Playback
Signal	Alignment tape: For BPF adjustment (WR5-11CS)
Measurement Point	Audio output terminal
Measuring Instrument	Distortion meter
Adjustment Page	F
Adjustment Address	7D
Specified Value	The distortion rate should be and minimum.

Adjusting method :

1) Select page: 0, address: 01, and set data: 01.
2) Select page: F, address: 7D, change the data and minimize the distortion rate.
3) Press the PAUSE button of the adjustment remote commander.
4) Select page: 0, address: 01, and set data: 00.

5-4. SERVICE MODE

4-1. ADJUSTMENT REMOTE COMMANDER

The adjustment remote commander is used for changing the calculation coefficient in signal processing, EVR data, etc. The adjustment remote commander performs bi-directional communication with the unit using the remote commander signal line (LANC). The resultant data of this bi-directional communication is written in the non-volatile memory.

1. Using the Adjustment Remote Commander

1) Connect the adjustment remote commander to the LANC terminal.
2) Set the HOLD switch of the adjustment remote commander to “HOLD” (SERVICE position). If it has been properly connected, the LCD on the adjustment remote commander will display as shown in Fig. 5-4-1.

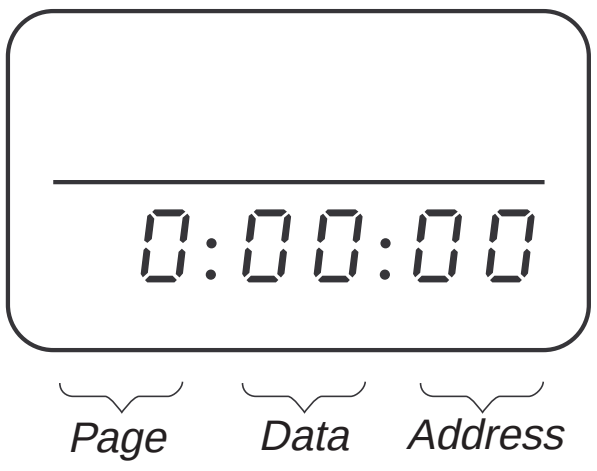

Fig. 5-4-1.

3) Operate the adjustment remote commander as follows.
   - Changing the page
     The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH– button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
LCD Display	0	1	2	3	4	5	6	7	8	9	A	b	c	d	E	F
Decimal notation conversion value	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

   - Changing the address
     The address increases when the FF (▶▶) button is pressed, and decreases when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.
   - Changing the data (Data setting)
     The data increases when the PLAY (▶) button is pressed, and decreases when the STOP (■) button is pressed. There are altogether 256 data, from 00 to FF.
   - Writing the adjustment data
     The PAUSE button must be pressed to write the adjustment data (D, E, F, 7 page) in the nonvolatile memory. (The new adjusting data will not be recorded in the nonvolatile memory if this step is not performed.)
4) After completing all adjustments, turn off the main power supply (8.4 V) once.

2. Precautions Upon Using the Adjustment Remote Commander

Mishandling of the adjustment remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

4-2. DATA PROCESS

The calculation of the DDS display and the adjustment remote commander display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Indicates the hexadecimal-decimal conversion table.

Hexadecimal-decimal Conversion Table

Lower digit of hexadecimal / Upper digit of hexadecimal	0	1	2	3	4	5	6	7	8	9	A (A)	B (b)	C (c)	② D (d)	E (E)	F (F)
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
4	64	65	66	67	68	69	70	71	72	73	74	77	76	77	78	79
5	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
A (A)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
① B (b)	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
C (c)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
D (d)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
E (E)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
F (F)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

Note: The characters shown in the parenthesis ( ) shown the display on the adjustment remote commander.

(Example) If the DDS display or the adjustment remote commander shows BD (bd);
Because the upper digit of the adjustment number is B (b), and the lower digit is D (d), the meeting point "189" of ① and ② in the above table is the corresponding decimal number.

Table. 5-4-1.

4-3. SERVICE MODE

Note: After the completion of the all adjustments, cancel the service mode by either of the following ways.

1) Unplug the main power supply and remove the lithium battery. (In this case, date and time and menu setting have been set by users are canceled. Perform resetting.)
2) After data on page: D and F is restored, return data of the address: 01 on page: 0 to 00. And when data on page: 2 is changed, return the data to the original condition.

1. Test Mode Setting

Set/release each test mode. Set page: 0, address: 01, data: 01 before setting the data of page D and F.

Page F	Address 22

Data	Function
80	Normal
81	Test mode Various emergency prohibitions and releases Drum emergency, capstan emergency, loading motor emergency, reel emergency, tape top and end, DEW detection

Page D	Address 10

Data	Function
00	Normal
01	Camera power ON
02	VTR power ON
03	Camera + VTR power ON

* For page D and F, the data set will be recorded in the nonvolatile memory by pressing the PAUSE button on the adjustment remote commander. Take note that, in this case, the test mode will not be released even if the main power has been turned off.

* Be sure to return the data of page: F, address: 22 to 80, and the data of page : D, address: 10 to 00 after completing adjustments/ repairs and press the PAUSE button of the adjustment remote commander. And set page: 0, address: 01, data: 00.

2. Emergency Memory Address

Page F	Address 10 to 1B

Address	Contents
10	1st EMG code
12	Upper: MSW code when the mechanism starts shifting the 1st time Lower: MSW code when the 1st emergency occurs
13	Lower: Target MSW code of the 1st emergency occurs
14	2nd EMG code
16	Upper: MSW code when the mechanism starts shifting the 2nd time Lower: MSW code when the 2nd emergency occurs
17	Lower: Target MSW code of the 2nd emergency occurs
18	Last EMG code
1A	Upper: MSW code when the mechanism starts shifting the last time Lower: MSW code when the last emergency occurs
1B	Lower: Target MSW code of the last emergency occurs

When there are no emergency, data 00 will be written in the above addresses (10 to 1B). When the first emergency occurs, the data corresponding to the emergency will be written in the address (10 to 13) for this first emergency. In the same way, when the second emergency occurs, the data corresponding to the emergency will be written in the address (14 to 17) for this second emergency.
The data corresponding to the emergency occurring the last will be written in the address (18 to 1B) for this last emergency.
Therefore the data of addresses 18 to 1B are renewed each time an emergency occurs.

Note 1: Be sure to rewrite the data of addresses 10 to 1B to 00 after repairs/adjustments.
Note 2: When rewriting the data, be sure to press the PAUSE button of the remote commander after setting the data.

2-1. EMG code (Emergency code)

The codes shown in the following table which correspond to errors that occur are recorded in addresses 10, 14, and 18.

Code	Type of Emergency
00	No error
10	Loading motor time-out during load
11	Loading motor time-out during unload
20	T reel emergency (reel slack) during unloading
21	S reel emergency (reel slack) during unloading
22	T reel emergency
23	S reel emergency
30	FG emergency at the start up of the capstan
31	FG emergency during the normal rotation of the capstan
40	FG emergency at the start up of the drum
41	PG emergency at the start up of the drum
42	FG emergency during the normal rotation of the drum
43	PG emergency during the normal rotation of the drum
44	Phase emergency during the normal rotation of the drum

2-2. MSW codes

- The lower parts of the data of addresses 12, 16 and 1A represent the MSW codes (mode switch, mechanism position) when errors occurs.
- The upper parts of the data of addresses 12, 16 and 1A represent, when the mechanism position is to be moved, the MSW codes at the start of movement (when moving the loading motor).
- The lower parts of the data of addresses 13, 17 and 1B represent the MSW codes of the desired movement when the mechanism position is to be moved.

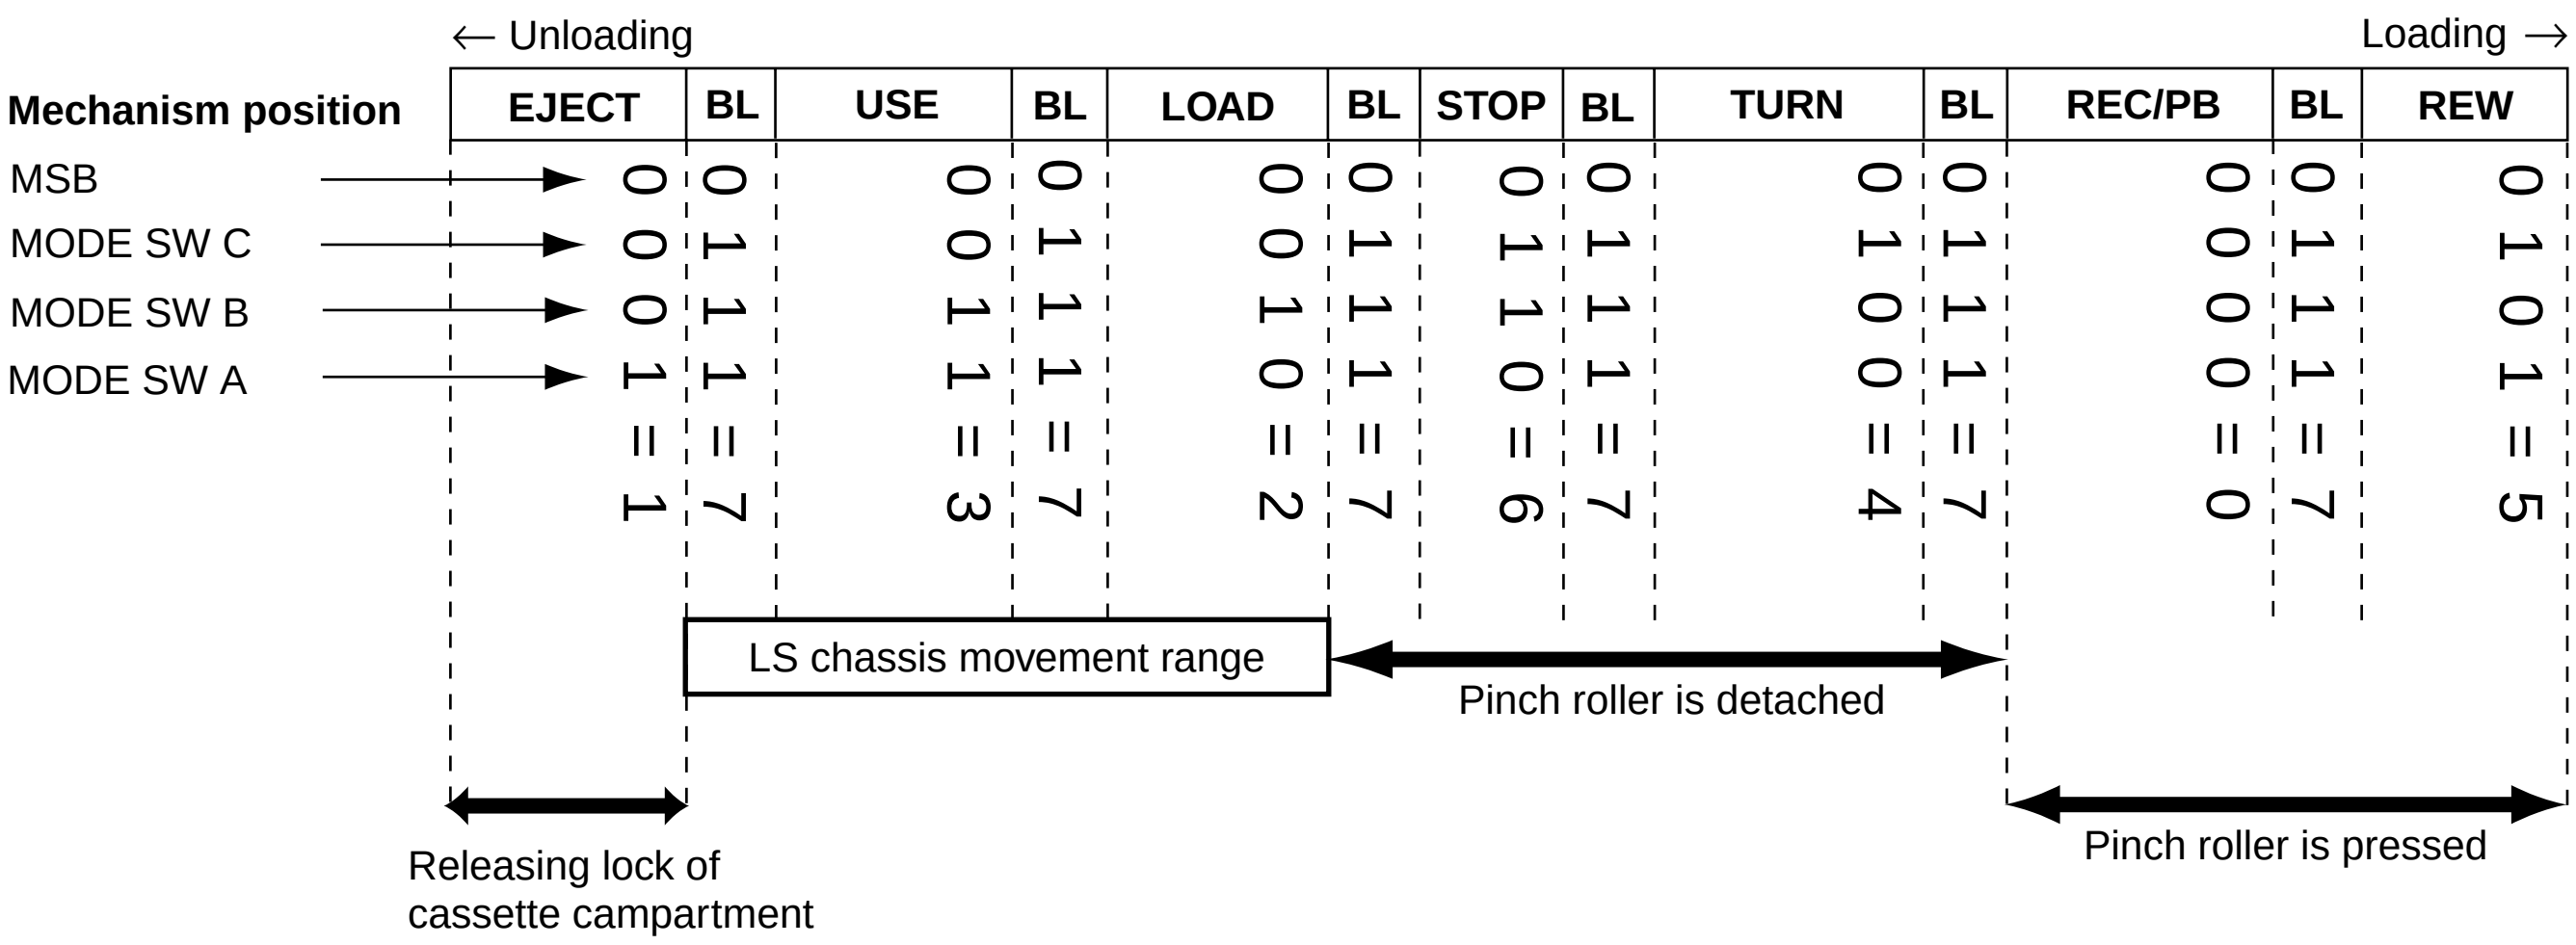
← Unloading
Loading →
Mechanism position
EJECT
BL
USE
BL
LOAD
BL
STOP
BL
TURN
BL
REC/PB
BL
REW
MSB
MODE SW C
MODE SW B
MODE SW A
0 0 0 1 = 1
0 1 1 1 = 7
0 0 1 1 = 3
0 1 1 1 = 7
0 0 1 0 = 2
0 1 1 1 = 7
0 1 1 0 = 6
0 1 1 1 = 7
0 1 0 0 = 4
0 1 1 1 = 7
0 0 0 0 = 0
0 1 1 1 = 7
0 1 0 1 = 5
LS chassis movement range
Pinch roller is detached
Releasing lock of cassette campartment
Pinch roller is pressed

Mechanism Position	MSW Code	Contents
EJECT	1	Position at which the cassette compartment lock is released. The mechanism will not move any further in the unloading direction.
BL	7	BLANC code. Between two codes. The mechanism will not be stopped by this code while it is operating.
USE	3	EJECT completion position. When the cassette is ejected, the mechanism will stop at this position.
LOAD	2	Code during loading/unloading. Code that is used while the LS chassis is moving.
STOP	6	Normal stop position. The pinch roller separates, the tension regulator returns, and the brakes of both reels turn on.
TURN	4	Position at which is used when the pendulum gear swings from S to T or from T to S.
RECP/PB	0	PB, REC, CUE, REV, PAUSE, FF positions. The pinch roller is pressed and tension regulator is on.
REW	5	REW position. REW are carried at this position. The mechanism will not move any further in the loading direction.

3. Bit Value Discrimination

Bit values must be discriminated using the display data of the adjustment remote commander for the following items. Us the table below to discriminate if the bit value is “1” or “0”.

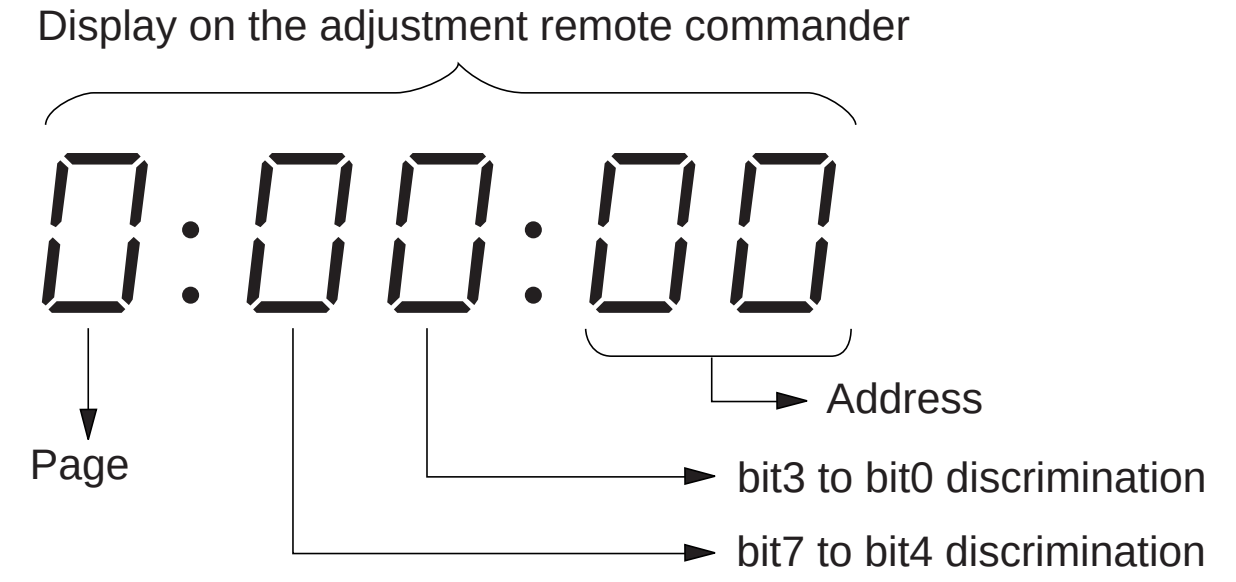
Display on the adjustment remote commander
0:00:00
Address
Page
bit3 to bit0 discrimination
bit7 to bit4 discrimination

(Example) If the remote commander display is “8E”, bit value from bit 7 to bit 4 can be discriminated from the column Ⓐ, and those from bit 3 to bit 0 from column Ⓑ.

	Display on the adjustment remote commander	Bit values			
		bit3 or bit7	bit2 or bit6	bit1 or bit5	bit0 or bit4
	0	0	0	0	0
	1	0	0	0	1
	2	0	0	1	0
	3	0	0	1	1
	4	0	1	0	0
	5	0	1	0	1
	6	0	1	1	0
	7	0	1	1	1
Ⓐ	8	1	0	0	0
	9	1	0	0	1
	A (A)	1	0	1	0
	B (b)	1	0	1	1
	C (C)	1	1	0	0
	D (d)	1	1	0	1
Ⓑ	E (E)	1	1	1	0
	F (F)	1	1	1	1

4. Input/output selection check

Page 2	Address 49

Bit	Function	When bit value = 1	When bit value = 0
0			
1			
2			
3			
4	MIC jack (Note 1)	MIC jack is used	
5	AUDIO terminal (Note 1)	Monaural	Stereo
6	VIDEO terminal	VIDEO terminal is used	
7	S VIDEO terminal (Note 2)		S VIDEO terminal is used

Note 1: STEREO model only.
Note 2: Hi8 model only.

Using method:

1) Select page: 2, address: 49.
2) By discriminating the bit value of display data, the state of the input/output selection can be discriminated.

5. LED, LCD (display window) check

Page 2	Address 05	Bit5

Using method:

1) Select page: 2, address: 05, and set the bit value of Bit5 to “1”.
2) Check that all LED are lit and all segments of LCD (display window) are lit.
3) Select page: 2, address: 05, and set the bit value of Bit5 to “0”.

6. Record of Use check

Page 2	Address A2 to AA

Bit	Function		Remarks
A2	Drum rotation counted time (BCD code)	Hour (H)	1000th place digit and 100th place digit of counted time (decimal digit)
A3		Hour (L)	10th place digit and 1st place digit of counted time (decimal digit)
A4		Minute	
A5	User initial power on date (BCD code)	Year	After setting the clock, set the date of power on next
A6		Month	
A7		Day	
A8	Final condensation occurrence date (BCD code)	Year	
A9		Month	
AA		Day	

Using method:

1) The record of use data is displayed at page: 2, addresses: A2 to AA.
   Note: This data will be erased when the coin lithium battery (CF-66/67 board BH001) is removed (reset).

7. Switch check (1)

Page 2	Address 43

Bit	Function	When bit value = 1	When bit value = 0
0	VTR MODE SW (MA-374/375 board S302)	OFF	ON
1	CAM MODE SW (MA-374/375 board S303)	OFF	ON
2	START/STOP SW (SS-8500 block S002)	OFF	ON
3	EJECT SW (SS-8500 block S003)	OFF	ON
4	CC DOWN SW (Mechanism chassis)	OFF (UP)	ON (DOWN)
5	PHOTO FREEEZE SW (FP-49 flexible)(Note)	OFF	ON
6			
7			

Note: CCD-TR918E/TRV87E model only.

Using method:

1) Select page: 2, address: 43.
2) By discriminating the bit value of display data, the state of the switches can be discriminated.

8. Switch check (2)

Page 2	Address 60 to 66

Using method:

1) Select page: 2, address: 60 to 66.
2) By discriminating the display data, the pressed key can be discriminated.

Address	Data							
	00 to 0B	0C to 23	24 to 3E	3F to 5C	5D to 80	81 to A9	AA to D6	D7 to FF
60 (KEY AD0) (IC803 (93))	LASER LINK (FK-8500 block) (S008) Note2	STOP (FK-8500 block) (S001)	FF (FK-8500 block) (S003)	REC (FK-8500 block) (S005, 007) Note6	EDIT SEARCH(+) (FK-8500 block) (S009)	EDIT SEARCH(–) (FK-8500 block) (S010)		No key input
61 (KEY AD1) (IC803 (94))	PHOTO REC (FP-49 flexible) Note2	PAUSE (FK-8500 block) (S002)	REW (FK-8500 block) (S004)	PLAY (FK-8500 block) (S006)				No key input
62 (KEY AD2) (IC803 (95))	DIGITAL EFFECT (CF-66/67 board) (S001) Note2	PICTURE EFFECT (CF-66/67 board) (S016/004)	MENU (CF-66/67 board) (S006)	EXECUTE (CF-66/67 board) (S008/009)	TIME (CF-66/67 board) (S011/012)			No key input
64 (KEY AD4) (IC803 (97))			EXPOSURE (CF-66/67 board) (S007)	BACK LIGHT (CF-66/67 board) (S009/010)	FADER (CF-66/67 board) (S012/013)	FOCUS INFINITY (MR-8500 block) (S001)	FOCUS AUTO (MR-8500 block) (S001)	FOCUS MANUAL (MR-8500 block) (S001)
65 (KEY AD5) (IC803 (98))	DATE (CF-66/67 board) (S002)	COUNTER RESET (CF-66/67 board) (S005)	END SEARCH (CF-67 board) (S008) Note3	TITLE (CF-66/67 board) (S010/011)	DISPLAY (CF-67 board) (S014) Note3	SUPER NIGHT SHOT (FP-62 flexible) Note2	PANEL CLOSE	PANEL OPEN
66 (KEY AD6) (IC803 (99))	PROGRAM AE (CF-66/67 board) (S003 (Note4)) (S014 (Note5))	BRIGHT(+) (PD-117 board) (S5701)	BRIGHT(–) (PD-117 board) (S5702)	VOLUME(+) (PD-117 board) (S5703)	VOLUME(–) (PD-117 board) (S5704)	PANEL REVERSE (FP-152 flexible)		PANEL NORMAL (FP-152 flexible)

Note1: TR model / TRV model
TR model: CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
TRV model: CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
Note2: CCD-TRV918E/TRV87E model only
Note3: TRV model only
Note4: Except CCD-TR317E/TR417E/TR427E/TR617E/TR717E model
Note5: CCD-TR317E/TR417E/TR427E/TR617E/TR717E model only
Note6: CCD-TRV87E: E, HK, AUS, CN, JE model only

9. Headphone jack check (TRV model only)

Page 2	Address 45

Bit	Function	When bit value = 1	When bit value = 0
1	Headphone jack	Headphone jack is used	

Using method:

1) Select page: 2, address: 45.
2) By discriminating the bit value of display data, the state of the headphone jack can be discriminated.

SECTION 6
REPAIR PARTS LIST

6-1. EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation

AUS : Australian model
HK : Hong Kong model
CN : Chinese model
EE : East European model
NE : North European model
RU : Russian model
JE : Tourist model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

6-1-1. FRONT PANEL BLOCK ASSEMBLY AND BATTERY PANEL BLOCK ASSEMBLY

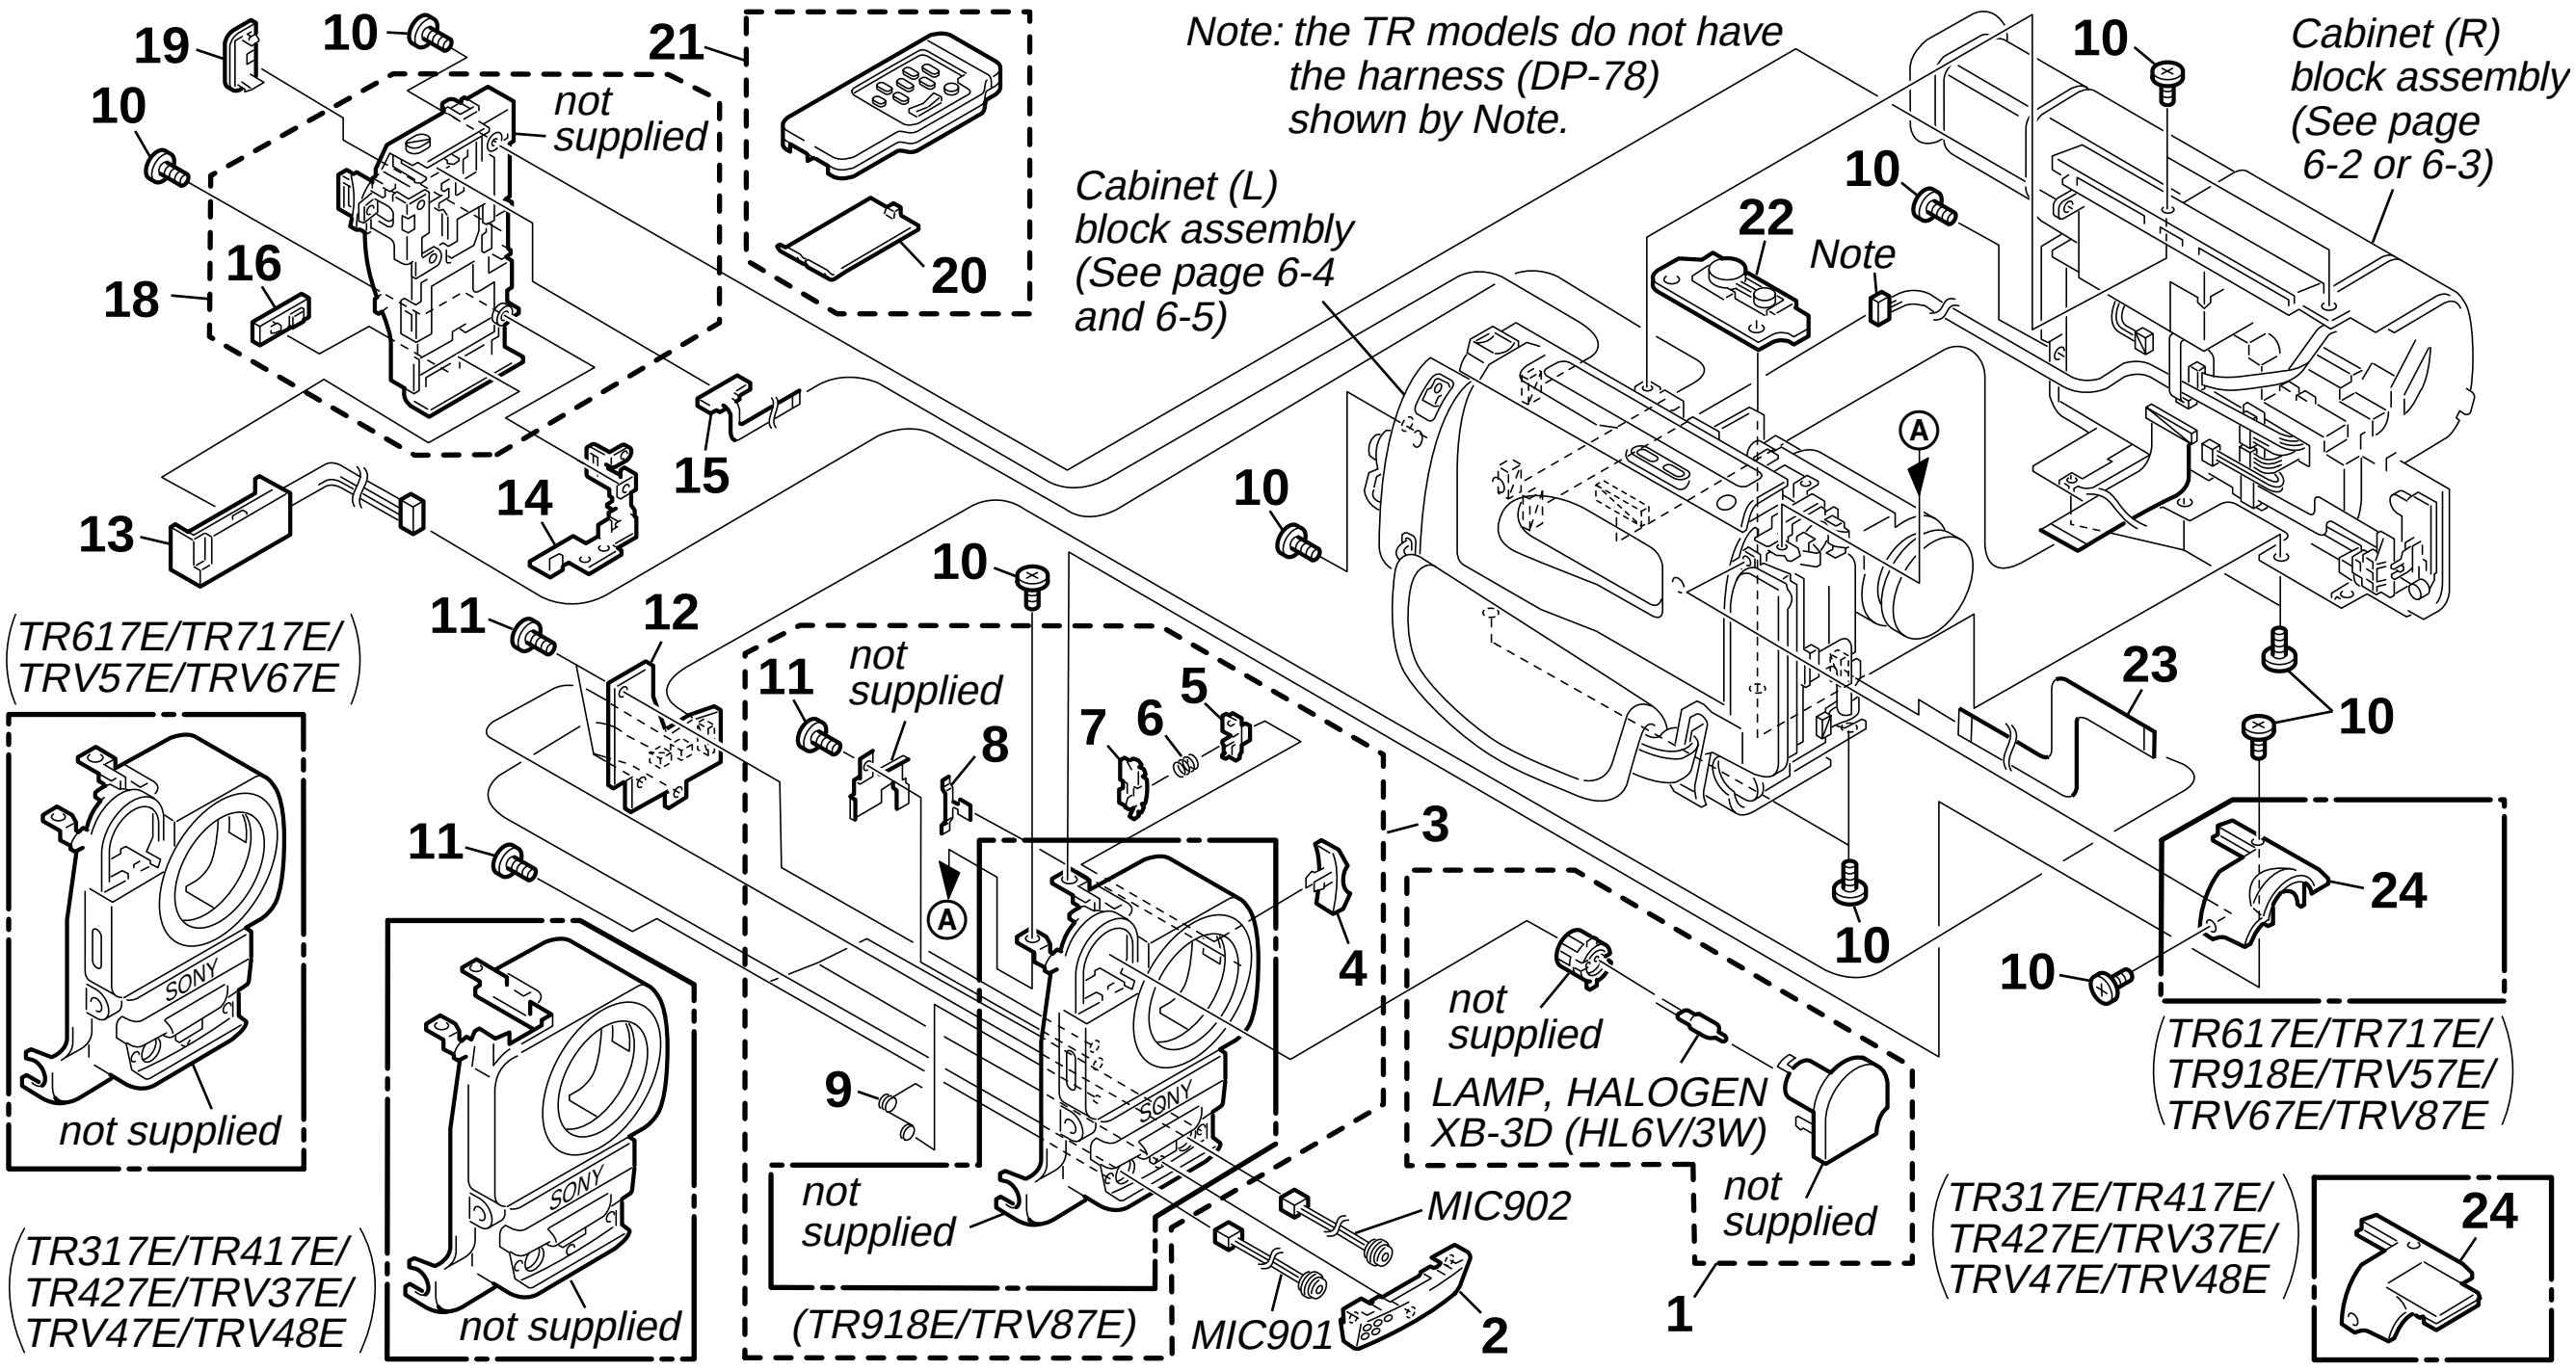
19
10
21
10
not supplied
18
16
20
Note: the TR models do not have the harness (DP-78) shown by Note.
Cabinet (L) block assembly (See page 6-4 and 6-5)
10
Cabinet (R) block assembly (See page 6-2 or 6-3)
10
22
Note
A
13
14
15
10
10
11
12
TR617E/TR717E/TRV57E/TRV67E
11
not supplied
5
7
6
8
23
10
10
3
11
A
24
4
10
10
not supplied
SONY
9
not supplied
LAMP, HALOGEN XB-3D (HL6V/3W)
TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E
not supplied
MIC902
not supplied
TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E
24
TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E
not supplied
(TR918E/TRV87E)
MIC901
2
1

Ref. No.	Part No.	Description	Remarks
1	1-517-857-11	LIGHT, VIDEO	(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
2	X-3949-326-1	GRILLE (D) ASSY, MICROPHONE	
3	X-3950-120-1	PANEL(97) ASSY, FRONT	(TRV87E:E,HK,AUS,CN,JE)
3	X-3950-121-1	PANEL(97) ASSY, FRONT	(TR617E/TR717E/TRV57E/TRV67E)
3	X-3950-122-1	PANEL(97) ASSY, FRONT	(TR317E/TR417E:AEP,UK/TRV37)
3	X-3950-123-1	PANEL(97) ASSY, FRONT	(TR417E:EE,NE,RU/TR427E/TRV47E/TRV48E)
3	X-3950-124-1	PANEL(97) ASSY, FRONT	(TR918E/TRV87E:AEP,EE,NE,RU,UK)
4	3-987-631-01	KNOB, P	
5	3-053-597-01	BUTTON (D), LOCK	
6	3-973-619-01	SPRING, COMPRESSION	
7	3-053-596-01	HOLDER (D), P KNOB	
8	3-987-642-01	SPRING, CLICK	
9	3-987-882-01	SPRING, TORSION	
10	3-968-729-91	SCREW (M2), LOCK ACE, P2	
11	3-948-339-61	TAPPING	
12	A-7074-114-A	MA-375 (N-VLO) BOARD, COMPLETE	(TRV37E)
12	A-7074-121-A	MA-375 (N-VHMMBO) BOARD, COMPLETE	(TRV57E/TRV67E)
12	A-7074-127-A	MA-375 (N-VHXRIBO) BOARD, COMPLETE	(TRV87E)
12	A-7074-135-A	MA-374 (HXRIBO) BOARD, COMPLETE	(TR918E)
12	A-7074-153-A	MA-374 (LO) BOARD, COMPLETE	(TR317E/TR417E)
12	A-7074-157-A	MA-374 (O) BOARD, COMPLETE	(TR427E)
12	A-7074-167-A	MA-374 (HMMBO) BOARD, COMPLETE	(TR617E/TR717E)
12	A-7074-191-A	MA-375 (VO) BOARD, COMPLETE	(TRV47E/TRV48E)
13	1-694-384-11	TERMINAL BOARD, BATTERY	
14	3-053-723-01	SHEET METAL (LOWER), STRAP	
15	1-672-663-21	FP-49 FLEXIBLE BOARD	(TR918E/TRV87E)
16	3-987-656-01	LID, JACK	
18	X-3950-109-1	PANEL (97) ASSY, BATTERY	(TR918E/TRV87E)
18	X-3950-110-1	PANEL (97) ASSY, BATTERY	(TR317E/TR417E/TR427E/TR617E/TR717E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
19	3-975-752-01	LID (BT), CPC	
20	3-958-131-01	LID, BATTERY CASE (For RMT-708)	(TR427E/TR617E/TR717E/TR918E/TRV47E/ TRV48E/TRV57E/TRV67E/TRV87E)
21	1-467-574-21	REMOTE COMMANDER (RMT-708)	(TR427E/TR617E/TR717E/TR918E/TRV47E/ TRV48E/TRV57E/TRV67E/TRV87E)
22	3-987-717-01	SCREW	
23	1-672-670-11	FP-43 FLEXIBLE BOARD	
24	3-053-603-01	CABINET (L), SHOE	(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
24	3-058-251-01	CABINET (N) (97), SHOE	(TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
MIC901	1-542-312-11	MICROPHONE (R)	
MIC902	1-542-312-11	MICROPHONE (L)	(TR918E/TRV87E)

6-1-2. CABINET (R) BLOCK ASSEMBLY (TRV MODEL)
(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)

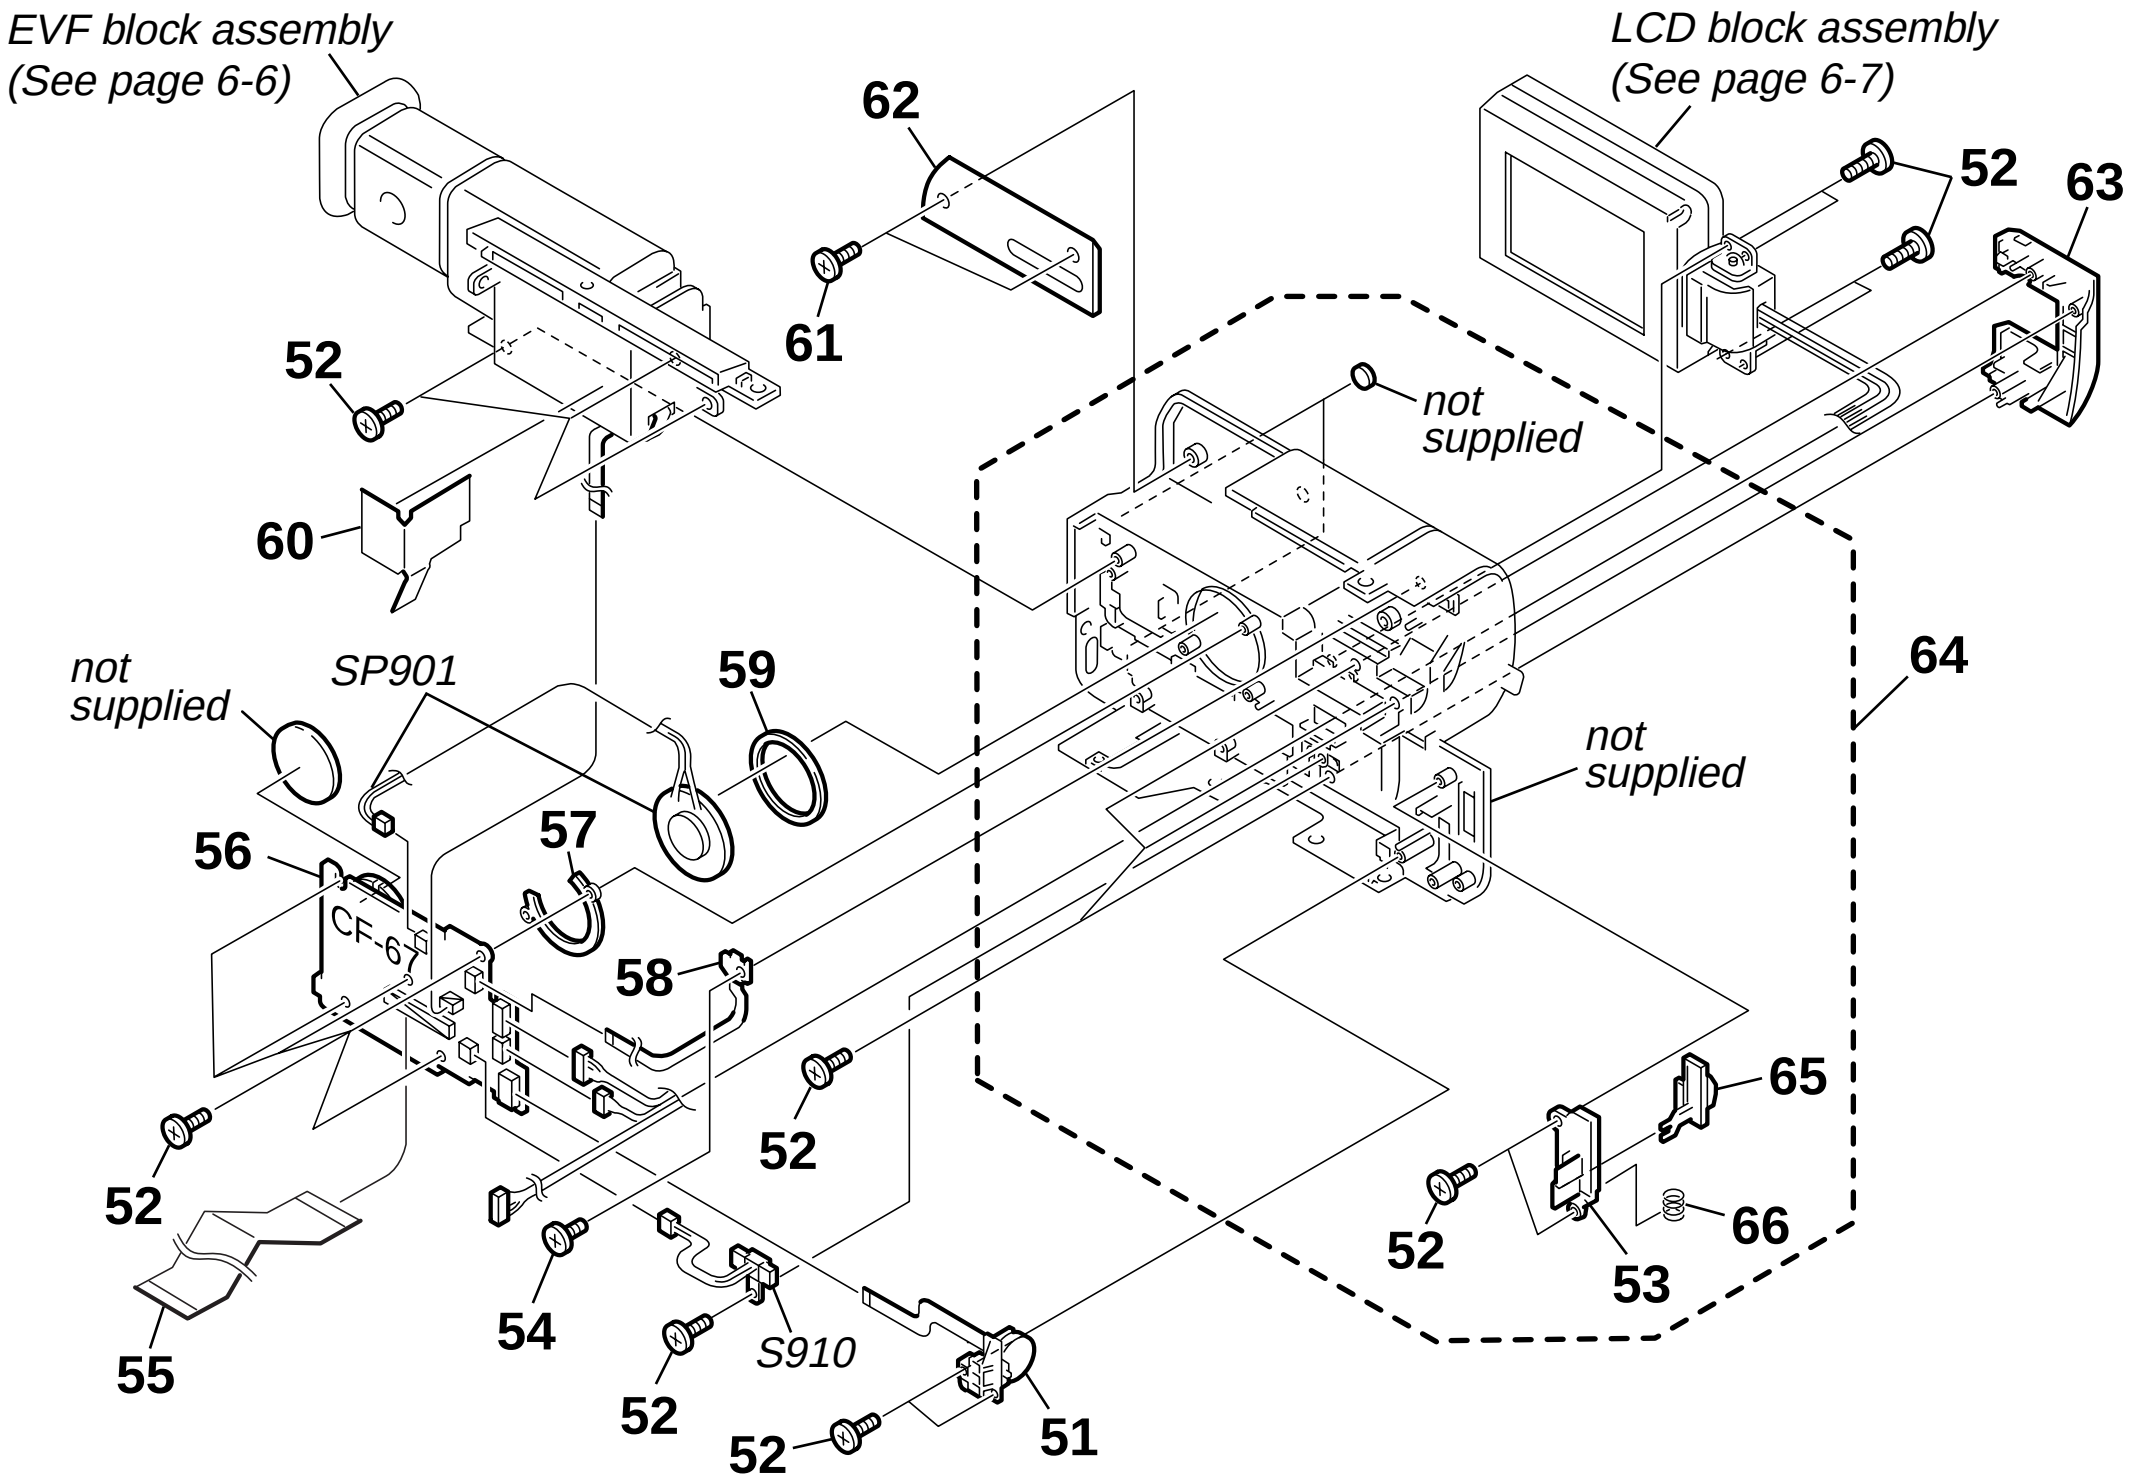
EVF block assembly
(See page 6-6)
LCD block assembly
(See page 6-7)
62
52
63
61
52
not
supplied
60
not
supplied
SP901
59
64
not
supplied
56
57
CF-67
58
65
52
52
66
52
53
54
55
S910
52
52
51

Ref. No.	Part No.	Description	Remarks
51	1-475-621-11	SWITCH BLOCK, CONTROL (MR-8500)	
52	3-948-339-61	TAPPING	
53	3-053-690-01	RETAINER (93), MF	
54	3-713-791-01	SCREW (M1.7X4), TAPPING, P2 (TRV87E)	
55	1-791-948-11	CABLE, FLEXIBLE FLAT (FFC-001)	
56	A-7074-120-A	CF-67 (N-VHMMBO) BOARD, COMPLETE (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)	
56	A-7074-126-A	CF-67 (N-VHXRIBO) BOARD, COMPLETE (TRV87E)	
* 57	3-053-783-01	RETAINER (93), SPEAKER	
58	1-672-668-21	FP-62 FLEXIBLE BOARD (TRV87E)	
59	3-060-141-01	SPACER (97), SP	
* 60	3-059-290-01	GUIDE (97), HARNESS	
61	3-948-339-81	TAPPING	
62	3-053-684-01	GUIDE (B) (93), TILT	
63	3-053-706-31	COVER (R) (93), HINGE (TRV87E:AEP1,EE,NE,RU,E,HK,AUS,CN,JE)	
63	3-053-706-41	COVER (R) (93), HINGE (TRV48E:AEP1,EE,NE,RU/TRV57E:AEP1,EE,NE,RU,E,HK,AUS,CN,JE/ TRV67E:AEP1,EE,NE,RU,E,HK,AUS,CN,JE)	
63	3-053-706-51	COVER (R) (93), HINGE (TRV47E)	
63	3-053-706-61	COVER (R) (93), HINGE (TRV37E:AEP1)	
63	3-053-706-71	COVER (R) (93), HINGE (TRV37E:AEP2,EE,NE,RU,UK)	
63	3-053-706-81	COVER (R) (93), HINGE (TRV87E:AEP2,UK)	
63	3-053-706-91	COVER (R) (93), HINGE (TRV48E:AEP2,UK/TRV57E:AEP2,UK/TRV67E:AEP2,UK)	
64	X-3950-096-1	CABINET (R) (98) ASSY (TRV87E)	
64	X-3950-097-1	CABINET (R) (98) ASSY (TRV57E/TRV67E)	
64	X-3950-098-1	CABINET (R) (98) ASSY (TRV37E/TRV47E/TRV48E)	
65	3-053-689-01	KNOB(93), MF	
66	3-568-315-01	SPRING, COMPRESSION	
S910	1-771-848-11	SWITCH, PUSH	
SP901	1-504-753-41	SPEAKER (2.8CM)	

6-1-3. CABINET (R) BLOCK ASSEMBLY (TR MODEL)
(TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)

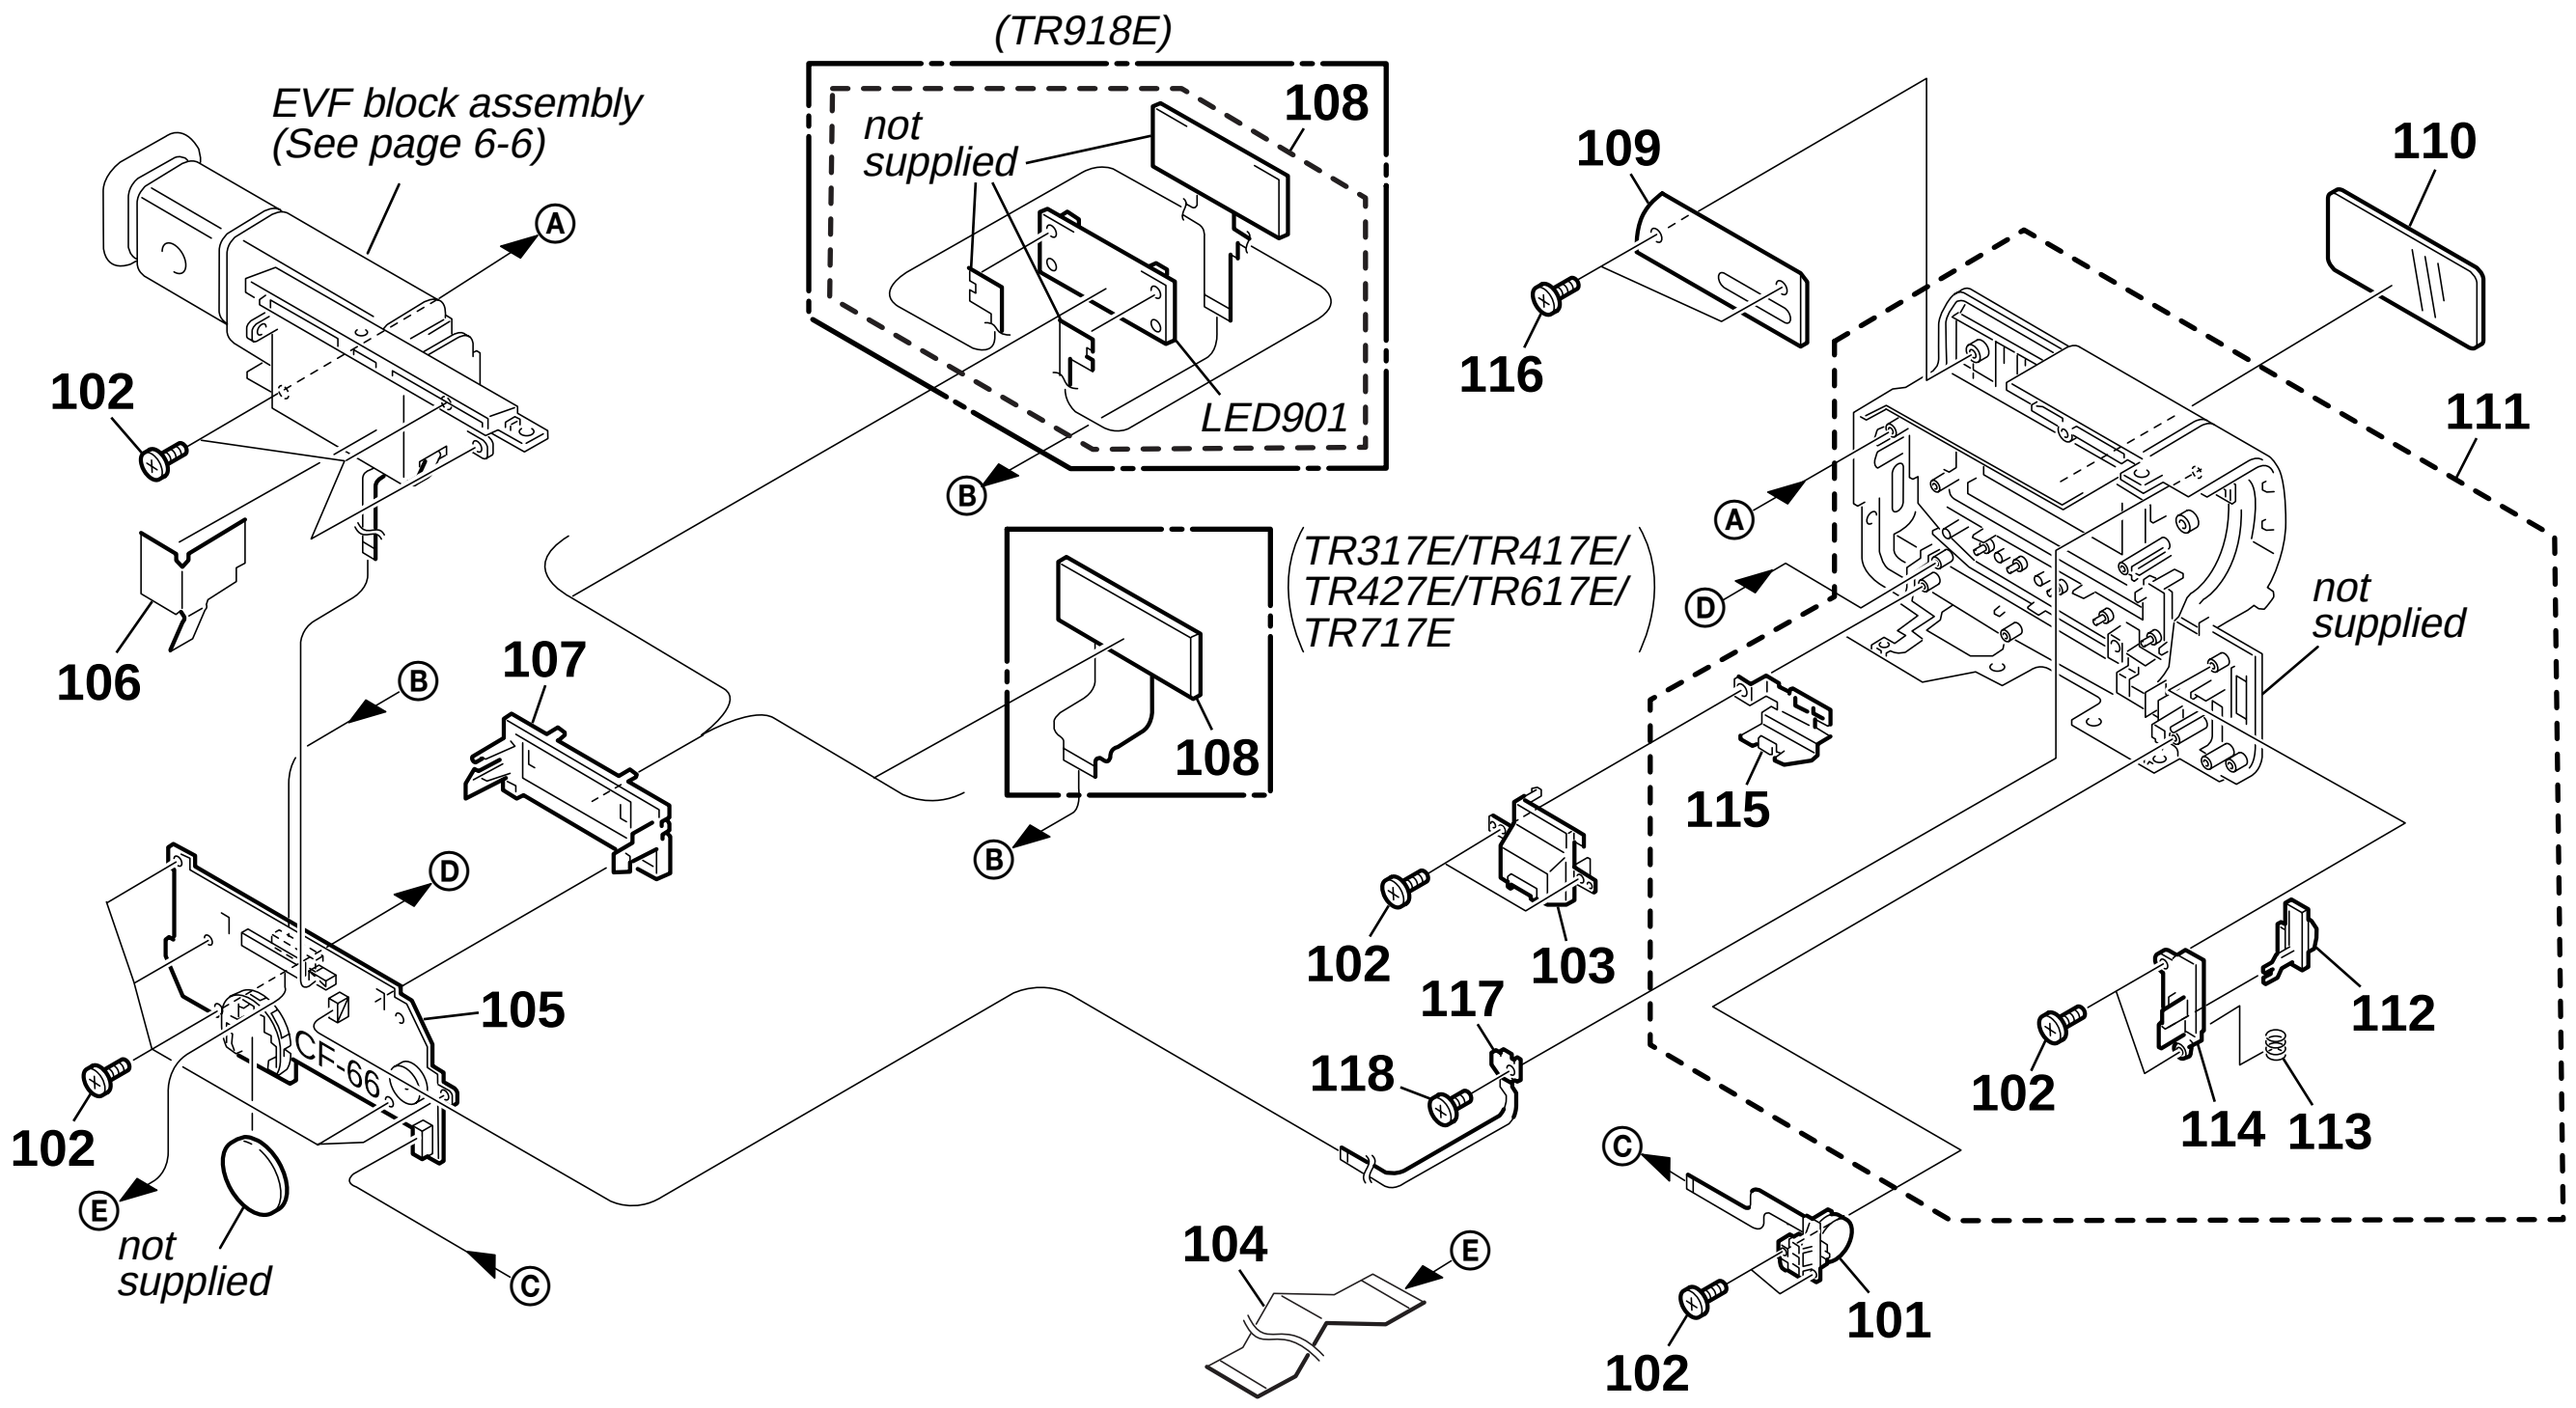
(TR918E)
EVF block assembly
(See page 6-6)
not supplied
108
109
110
A
116
102
LED901
111
B
A
(TR317E/TR417E/TR427E/TR617E/TR717E)
D
not supplied
106
B
107
108
B
115
D
102
103
105
CF-66
117
112
118
102
102
114
113
E
C
not supplied
C
104
E
101
102

Ref. No.	Part No.	Description	Remarks
101	1-475-621-11	SWITCH BLOCK, CONTROL (MR-8500)	
102	3-948-339-61	TAPPING	
103	3-053-717-11	RETAINER, LITHIUM BATTERY	
104	1-791-948-11	CABLE, FLEXIBLE FLAT (FFC-001)	
105	A-7074-134-A	CF-66 (P-HXRIBO) BOARD, COMPLETE (TR918E)	
105	A-7074-152-A	CF-66 (N-LO) BOARD, COMPLETE (TR317E)	
105	A-7074-164-A	CF-66 (P-LO) BOARD, COMPLETE (TR417E/TR427E/TR617E/TR717E)	
* 106	3-059-290-01	GUIDE (97), HARNESS	
107	3-053-718-01	HOLDER (92), LCD (TR918E)	
107	3-058-238-01	HOLDER (97), LCD (TR317E/TR417E/TR427E/TR617E/TR717E)	
108	1-803-844-81	DISPLAY, PANEL, LIQUID CRYSTAL (TR317E/TR417E/TR427E/TR617E/TR717E)	
108	A-7094-150-A	INDICATION LCD BLOCK ASSY (TR918E)	
109	3-053-684-01	GUIDE (B) (93), TILT	
110	3-058-219-21	WINDOW (97), LCD (TR918E)	
110	3-058-219-31	WINDOW (97), LCD (TR417E)	
110	3-058-219-41	WINDOW (97), LCD (TR427E)	
110	3-058-219-51	WINDOW (97), LCD (TR717E)	
110	3-058-219-61	WINDOW (97), LCD (TR317E)	
110	3-058-219-71	WINDOW (97), LCD (TR617E)	
111	X-3950-087-1	CABINET (R) (97) ASSY (TR427E:AEP1,EE,NE,RU)	
111	X-3950-088-1	CABINET (R) (97) ASSY (TR317E)	
111	X-3950-089-1	CABINET (R) (97) ASSY (TR918E:AEP1,EE,NE,RU)	
111	X-3950-090-1	CABINET (R) (97) ASSY (TR918E:AEP2,UK)	
111	X-3950-091-1	CABINET (R) (97) ASSY (TR417E:AEP1,EE,NE,RU)	
111	X-3950-092-1	CABINET (R) (97) ASSY (TR417E:AEP2,UK)	
111	X-3950-093-1	CABINET (R) (97) ASSY (TR427E:AEP2,UK)	
111	X-3950-094-1	CABINET (R) (97) ASSY (TR617E:AEP1,EE,NE,RU/TR717E:AEP1)	
111	X-3950-095-1	CABINET (R) (97) ASSY (TR617E:AEP2/TR717E:AEP2,EE,NE,RU,UK)	
112	3-056-469-01	KNOB (93), MF	
113	3-568-315-01	SPRING, COMPRESSION	
114	3-053-690-01	RETAINER (93), MF	
115	3-053-713-01	LID (92), LITHIUM BATTERY	
116	3-948-339-81	TAPPING	
117	1-672-668-21	FP-62 FLEXIBLE BOARD (TR918E)	
118	3-713-791-01	SCREW (M1.7X4), TAPPING, P2 (TR918E)	
⚠LED901	1-517-858-11	LIGHT, BACK (TR918E)	

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

6-1-4. CABINET (L) BLOCK ASSEMBLY

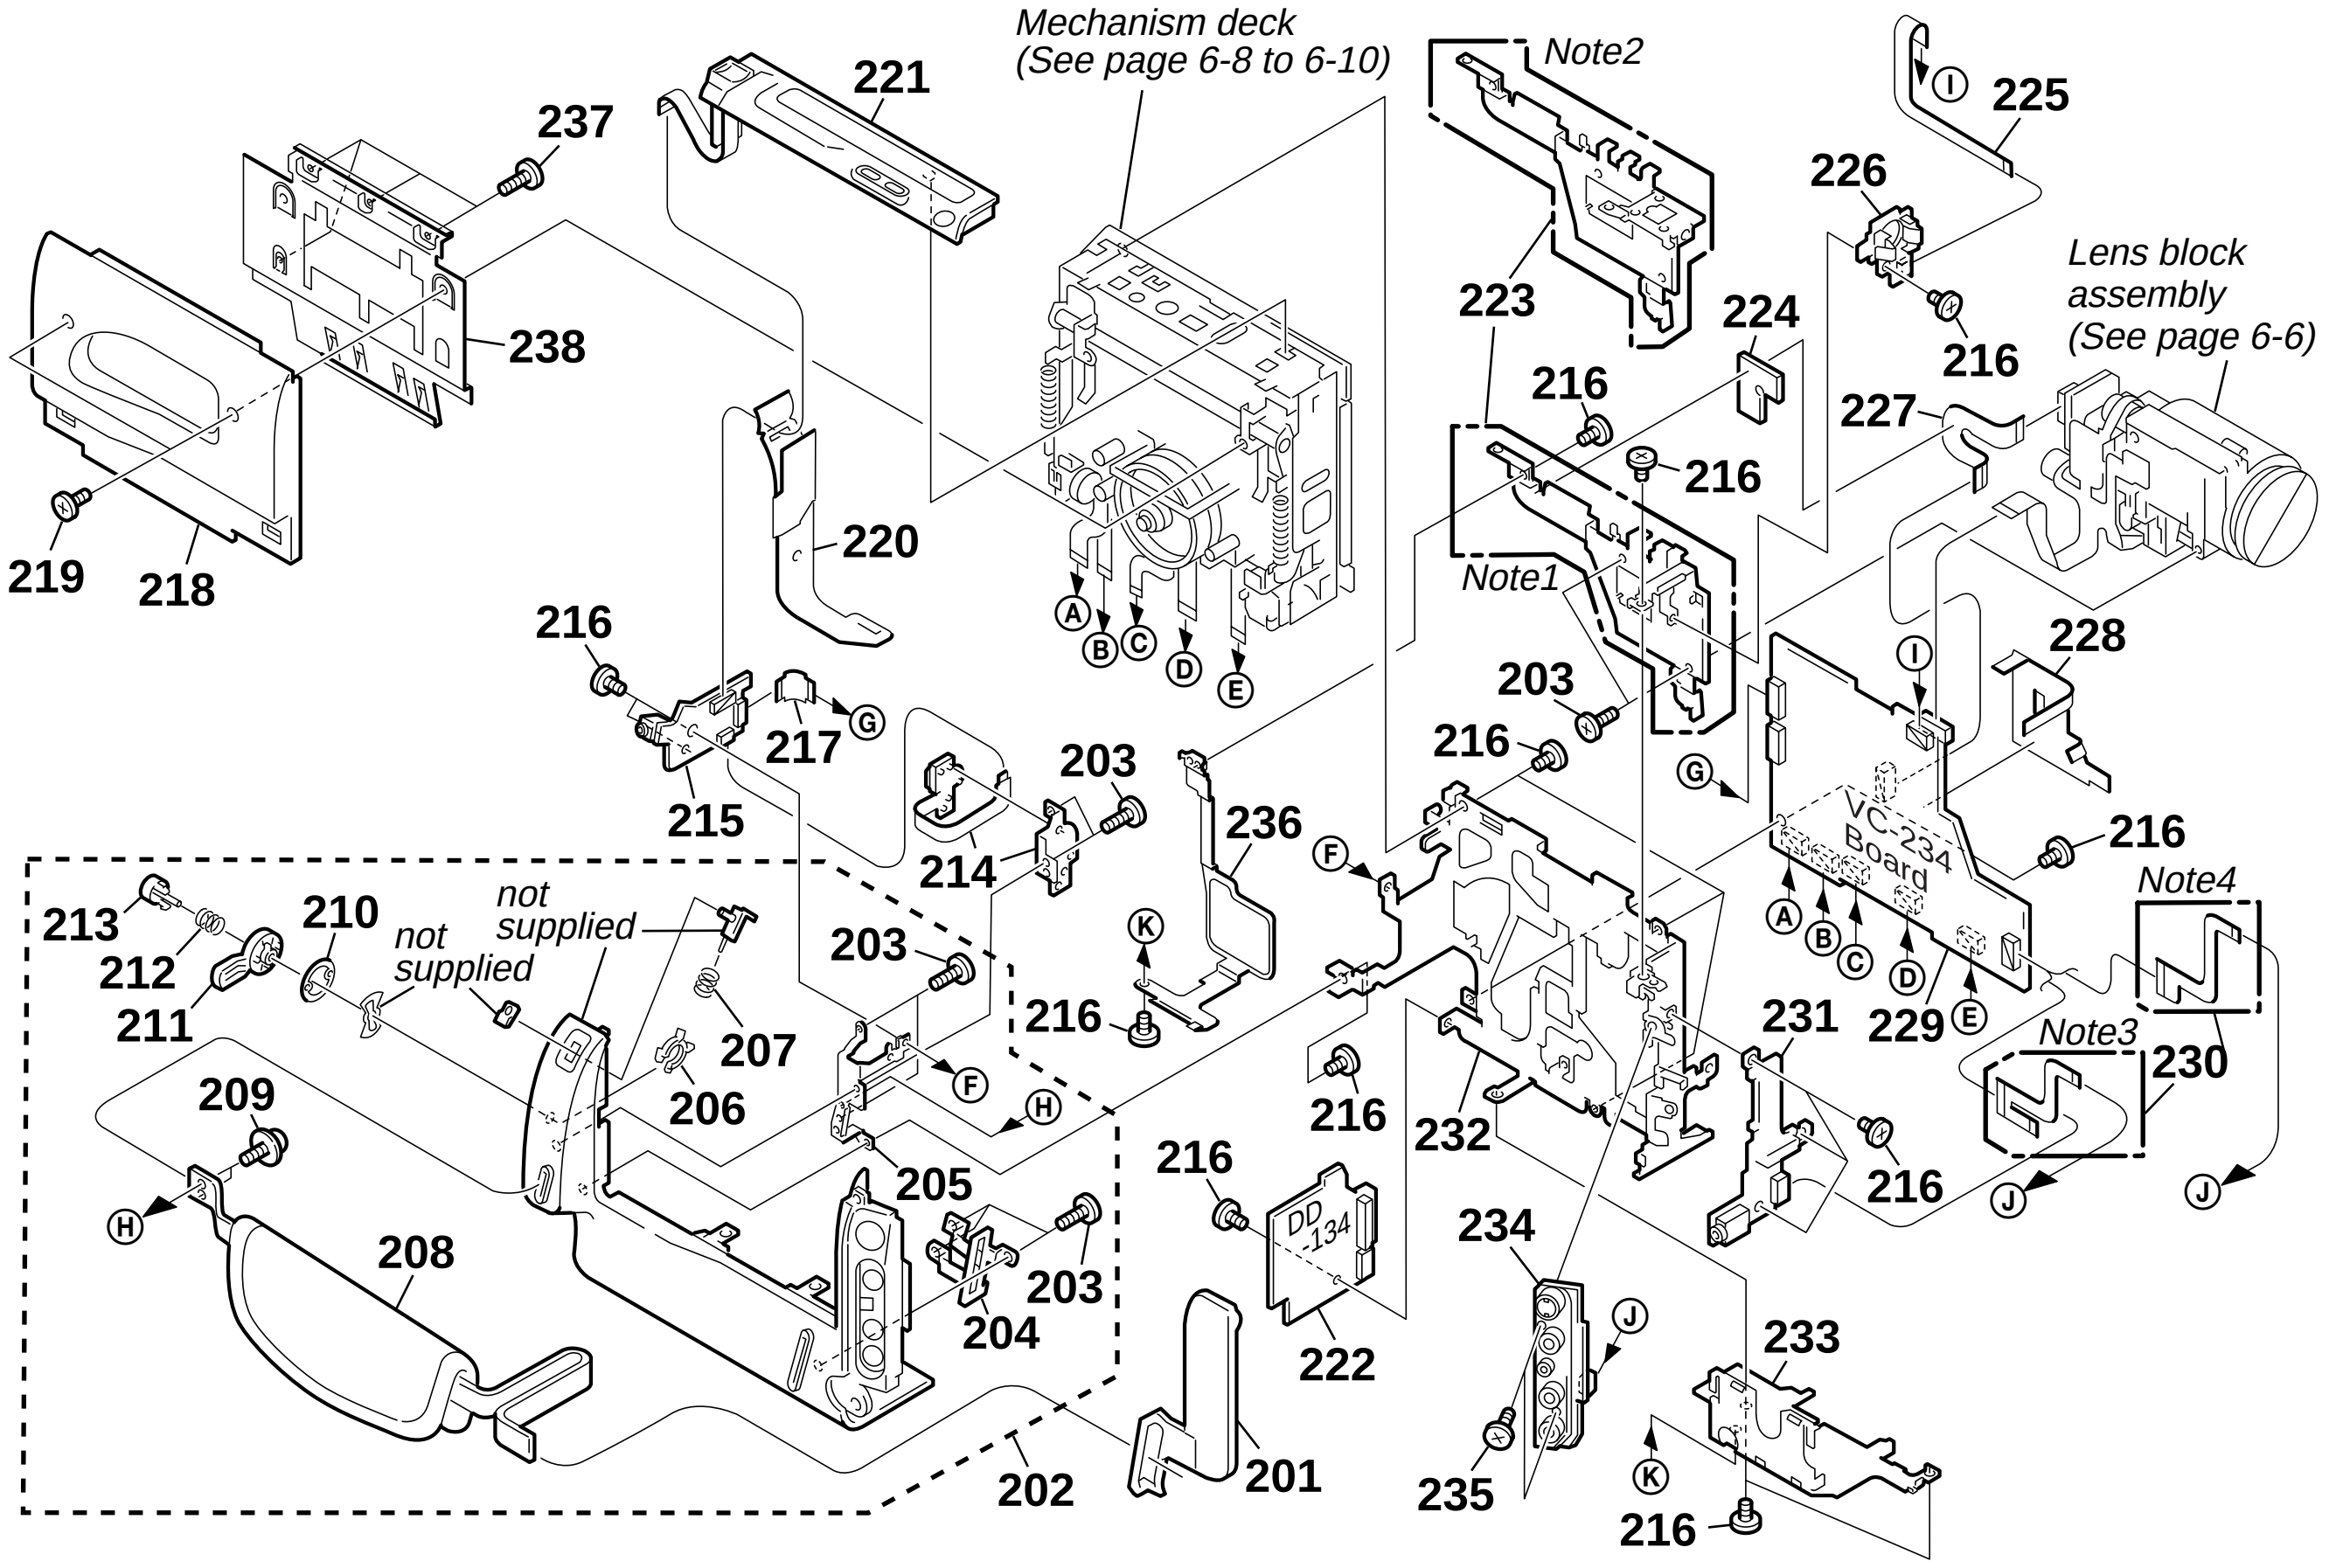

Mechanism deck
(See page 6-8 to 6-10)
Note2
221
237
225
226
238
223
224
Lens block
assembly
(See page 6-6)
216
216
227
216
220
219
218
Note1
A
B
C
D
E
216
228
I
I
203
217
G
216
G
203
215
214
236
216
VC-234
Board
Note4
213
210
not
supplied
not
supplied
F
K
A
B
C
D
E
212
211
203
229
216
231
Note3
230
207
F
H
216
232
206
209
216
216
J
J
H
205
234
208
203
J
204
222
233
K
202
201
235
216
DD
-134

Note1: TR617E/TR717E/TR918E/
TRV57E/TRV67E/TRV87E

Note2: TR317E/TR417E/TR427E/
TRV37E/TRV47E/TRV48E

Note3: TR617E/TR717E/TR918E/
TRV37E/TRV47E/TRV48E/
TRV57E/TRV67E/TRV87E

Note4: TR317E/TR417E/TR427E

Ref. No.	Part No.	Description	Remarks
* 201	3-975-522-11	COVER, JACK	
202	X-3950-112-1	CABINET (L) ASSY (TRV87E)	
202	X-3950-113-1	CABINET (L) ASSY (TRV67E)	
202	X-3950-114-1	CABINET (L) ASSY	(TRV37E/TRV47E/TRV48E/TRV57E)
202	X-3950-115-1	CABINET (L) ASSY	(TR317E/TR417E/TR427E/TR617E)
202	X-3950-116-1	CABINET (L) ASSY (TR918E)	
202	X-3950-117-1	CABINET (L) ASSY (TR717E)	
203	3-948-339-61	TAPPING	
204	3-975-966-01	SHEET METAL (2), SS	
* 205	3-058-248-01	HOLDER (97), EL	
206	3-949-192-01	HOLDER, STAND-BY KNOB	
207	3-979-642-01	SPRING, COMPRESSION	
208	3-052-815-01	BELT (ES), GRIP	
209	3-679-362-11	SCREW	
210	3-970-854-01	SPRING, STAND-BY	
211	3-969-081-01	KNOB, STAND-BY	
212	3-302-492-00	SPRING, COMPRESSION	
213	3-054-010-01	BUTTON, SS	
214	1-418-758-21	SWITCH BLOCK, CONTROL (SS-9700)	
215	A-7074-149-A	EJ-30 (VHXRIBO) BOARD, COMPLETE	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
215	A-7074-162-A	EJ-29 (CO) BOARD, COMPLETE	(TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)
216	3-713-786-21	SCREW (M2X3)	
217	1-676-298-11	FP-150 FLEXIBLE BOARD	
218	X-3948-329-1	LID ASSY, CASSETTE	(TR317E/TR417E/TR427E/TR617E/TRV37E/TRV47E/TRV48E/TRV57E)
218	X-3948-331-1	LIDASSY, CASSETTE	(TR717E/TR918E/TRV67E/TRV87E)
219	3-968-729-81	SCREW (M2), LOCK ACE, P2	
* 220	3-058-247-01	PROTECTOR (97), LS FLEXIBLE	
221	1-418-760-11	SWITCH BLOCK, CONTROL (FK-8500)	(TRV87E:E,HK,AUS,CN,JE)
221	1-418-760-21	SWITCH BLOCK, CONTROL (FK-8500)	(TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
221	1-418-760-41	SWITCH BLOCK, CONTROL (FK-8500)	(TR918E/TRV87E:AEP,EE,NE,RU,UK)
222	A-7074-113-A	DD-134 (VO) BOARD, COMPLETE	(TRV37E/TRV47E/TRV48E)
222	A-7074-125-A	DD-134 (VHXRIBO) BOARD, COMPLETE	(TRV57E/TRV67E/TRV87E)
222	A-7074-133-A	DD-134 (HXRIBO) BOARD, COMPLETE	(TR918E)
222	A-7074-151-A	DD-134 (LO) BOARD, COMPLETE	(TR317E/TR417E/TR427E)
222	A-7074-166-A	DD-134 (HMMBO) BOARD, COMPLETE	(TR617E/TR717E)
223	3-053-741-01	FRAME (S), LENS	(TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
* 223	3-053-742-01	FRAME (L), LENS	(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
* 224	3-058-969-01	CUSHION (97), CD FLEXIBLE	
225	1-672-673-11	FP-46 FLEXIBLE BOARD	(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
226	A-7074-130-A	VL-29 (VHXRIBO) BOARD, COMPLETE	(TRV57E/TRV67E/TRV87E)
226	A-7074-169-A	VL-28 (BO) BOARD, COMPLETE	(TR617E/TR717E/TR918E)
227	1-676-296-11	FP-147 FLEXIBLE BOARD	
* 228	3-058-250-01	SHEET (97), IM GUARD	
229	A-7094-704-A	VC-234 (P-LO) BOARD, COMPLETE	(TR317E/TR417E/TR427E)
229	A-7094-705-A	VC-234 (P-HMMBO) BOARD, COMPLETE	(TR717E)
229	A-7094-706-A	VC-234 (P-HXIRBO) BOARD, COMPLETE	(TR918E)
229	A-7094-708-A	VC-234 (P-VLO) BOARD, COMPLETE	(TRV37E/TRV47E/TRV48E)
229	A-7094-709-A	VC-234 (P-VHMMBO) BOARD, COMPLETE	(TRV67E)
229	A-7094-710-A	VC-234 (P-VHXRIBO) BOARD, COMPLETE	(TRV87E)
229	A-7094-807-A	VC-234 (P-MMBO) BOARD, COMPLETE	(TR617E)
229	A-7094-808-A	VC-234 (P-VHMBO) BOARD, COMPLETE	(TRV57E)
230	1-672-671-11	FP-44 FLEXIBLE BOARD	(TR617E/TR717E/TR918E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
230	1-676-297-11	FP-149 FLEXIBLE BOARD	(TR317E/TR417E/TR427E)
231	A-7074-116-A	SE-101 (N-VLO) BOARD, COMPLETE (TRV47E)	
231	A-7074-123-A	SE-101 (N-VHMMBO) BOARD, COMPLETE	(TRV57E:E,HK,AUS,CN,JE/TRV67E:E,HK,AUS,CN,JE)
231	A-7074-129-A	SE-101 (N-VHXRIBO) BOARD, COMPLETE	(TRV87E:E,HK,AUS,CN,JE)
231	A-7074-137-A	SE-100 (HXRIBO) BOARD, COMPLETE	(TR617E/TR717E/TR918E)
231	A-7074-140-A	SE-101 (P-VLO) BOARD, COMPLETE	(TRV37E/TRV48E)
231	A-7074-144-A	SE-101 (P-VHMMBO) BOARD, COMPLETE	(TRV57E:AEP,EE,NE,RU,UK/TRV67E:AEP,EE,NE,RU,UK)
231	A-7074-147-A	SE-101 (P-VHXRIBO) BOARD, COMPLETE	(TRV87E:AEP,EE,NE,RU,UK)
232	3-053-743-01	FRAME (A), MD	
233	3-987-675-01	FRAME (B), MD	(TR317E/TRV47E/TRV57E:E,HK,AUS,CN,JE/TRV67E:E,HK,AUS,CN,JE/TRV87E:E,HK,AUS,CN,JE)
233	3-987-675-11	FRAME (B), MD	(TR417E/TR427E/TR617E/TR717E/TR918E/TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/TRV67E:AEP,EE,NE,RU,UK/TRV87E:AEP,EE,NE,RU,UK)
234	A-7074-115-A	PJ-100 (N-VLO) BOARD, COMPLETE	(TRV47E/TRV57E:E,HK,AUS,CN,JE)
234	A-7074-122-A	PJ-100 (N-VHMMBO) BOARD, COMPLETE	(TRV67E:E,HK,AUS,CN,JE)
234	A-7074-128-A	PJ-100 (N-VHXRIBO) BOARD, COMPLETE	(TRV87E:E,HK,AUS,CN,JE)
234	A-7074-136-A	PJ-99 (HXRIBO) BOARD, COMPLETE (TR918E)	
234	A-7074-139-A	PJ-100 (P-VLO) BOARD, COMPLETE	(TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK)
234	A-7074-143-A	PJ-100 (P-VHMMBO) BOARD, COMPLETE	(TRV67E:AEP,EE,NE,RU,UK)
234	A-7074-146-A	PJ-100 (P-VHXRIBO) BOARD, COMPLETE	(TRV87E:AEP,EE,NE,RU,UK)
234	A-7074-158-A	PJ-99 (CO) BOARD, COMPLETE	(TR317E/TR417E/TR427E/TR617E)
234	A-7074-168-A	PJ-99 (HMMBO) BOARD, COMPLETE (TR717E)	
235	3-968-729-91	SCREW (M2), LOCK ACE, P2	
236	X-3950-104-1	SHIELD ASSY (97), IM	(TR417E/TR427E/TR617E/TR717E/TR918E/TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/TRV67E:AEP,EE,NE,RU,UK/TRV87E:AEP,EE,NE,RU,UK)
237	3-713-791-01	SCREW (M1.7X4), TAPPING, P2	(TR417E/TR427E/TR617E/TR717E/TR918E/TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/TRV67E:AEP,EE,NE,RU,UK/TRV87E:AEP,EE,NE,RU,UK)
* 238	3-058-253-01	PLATE (97), CASSETTE SHIELD	(TR417E/TR427E/TR617E/TR717E/TR918E/TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/TRV67E:AEP,EE,NE,RU,UK/TRV87E:AEP,EE,NE,RU,UK)

6-1-5. EVF BLOCK ASSEMBLY AND LENS BLOCK ASSEMBLY

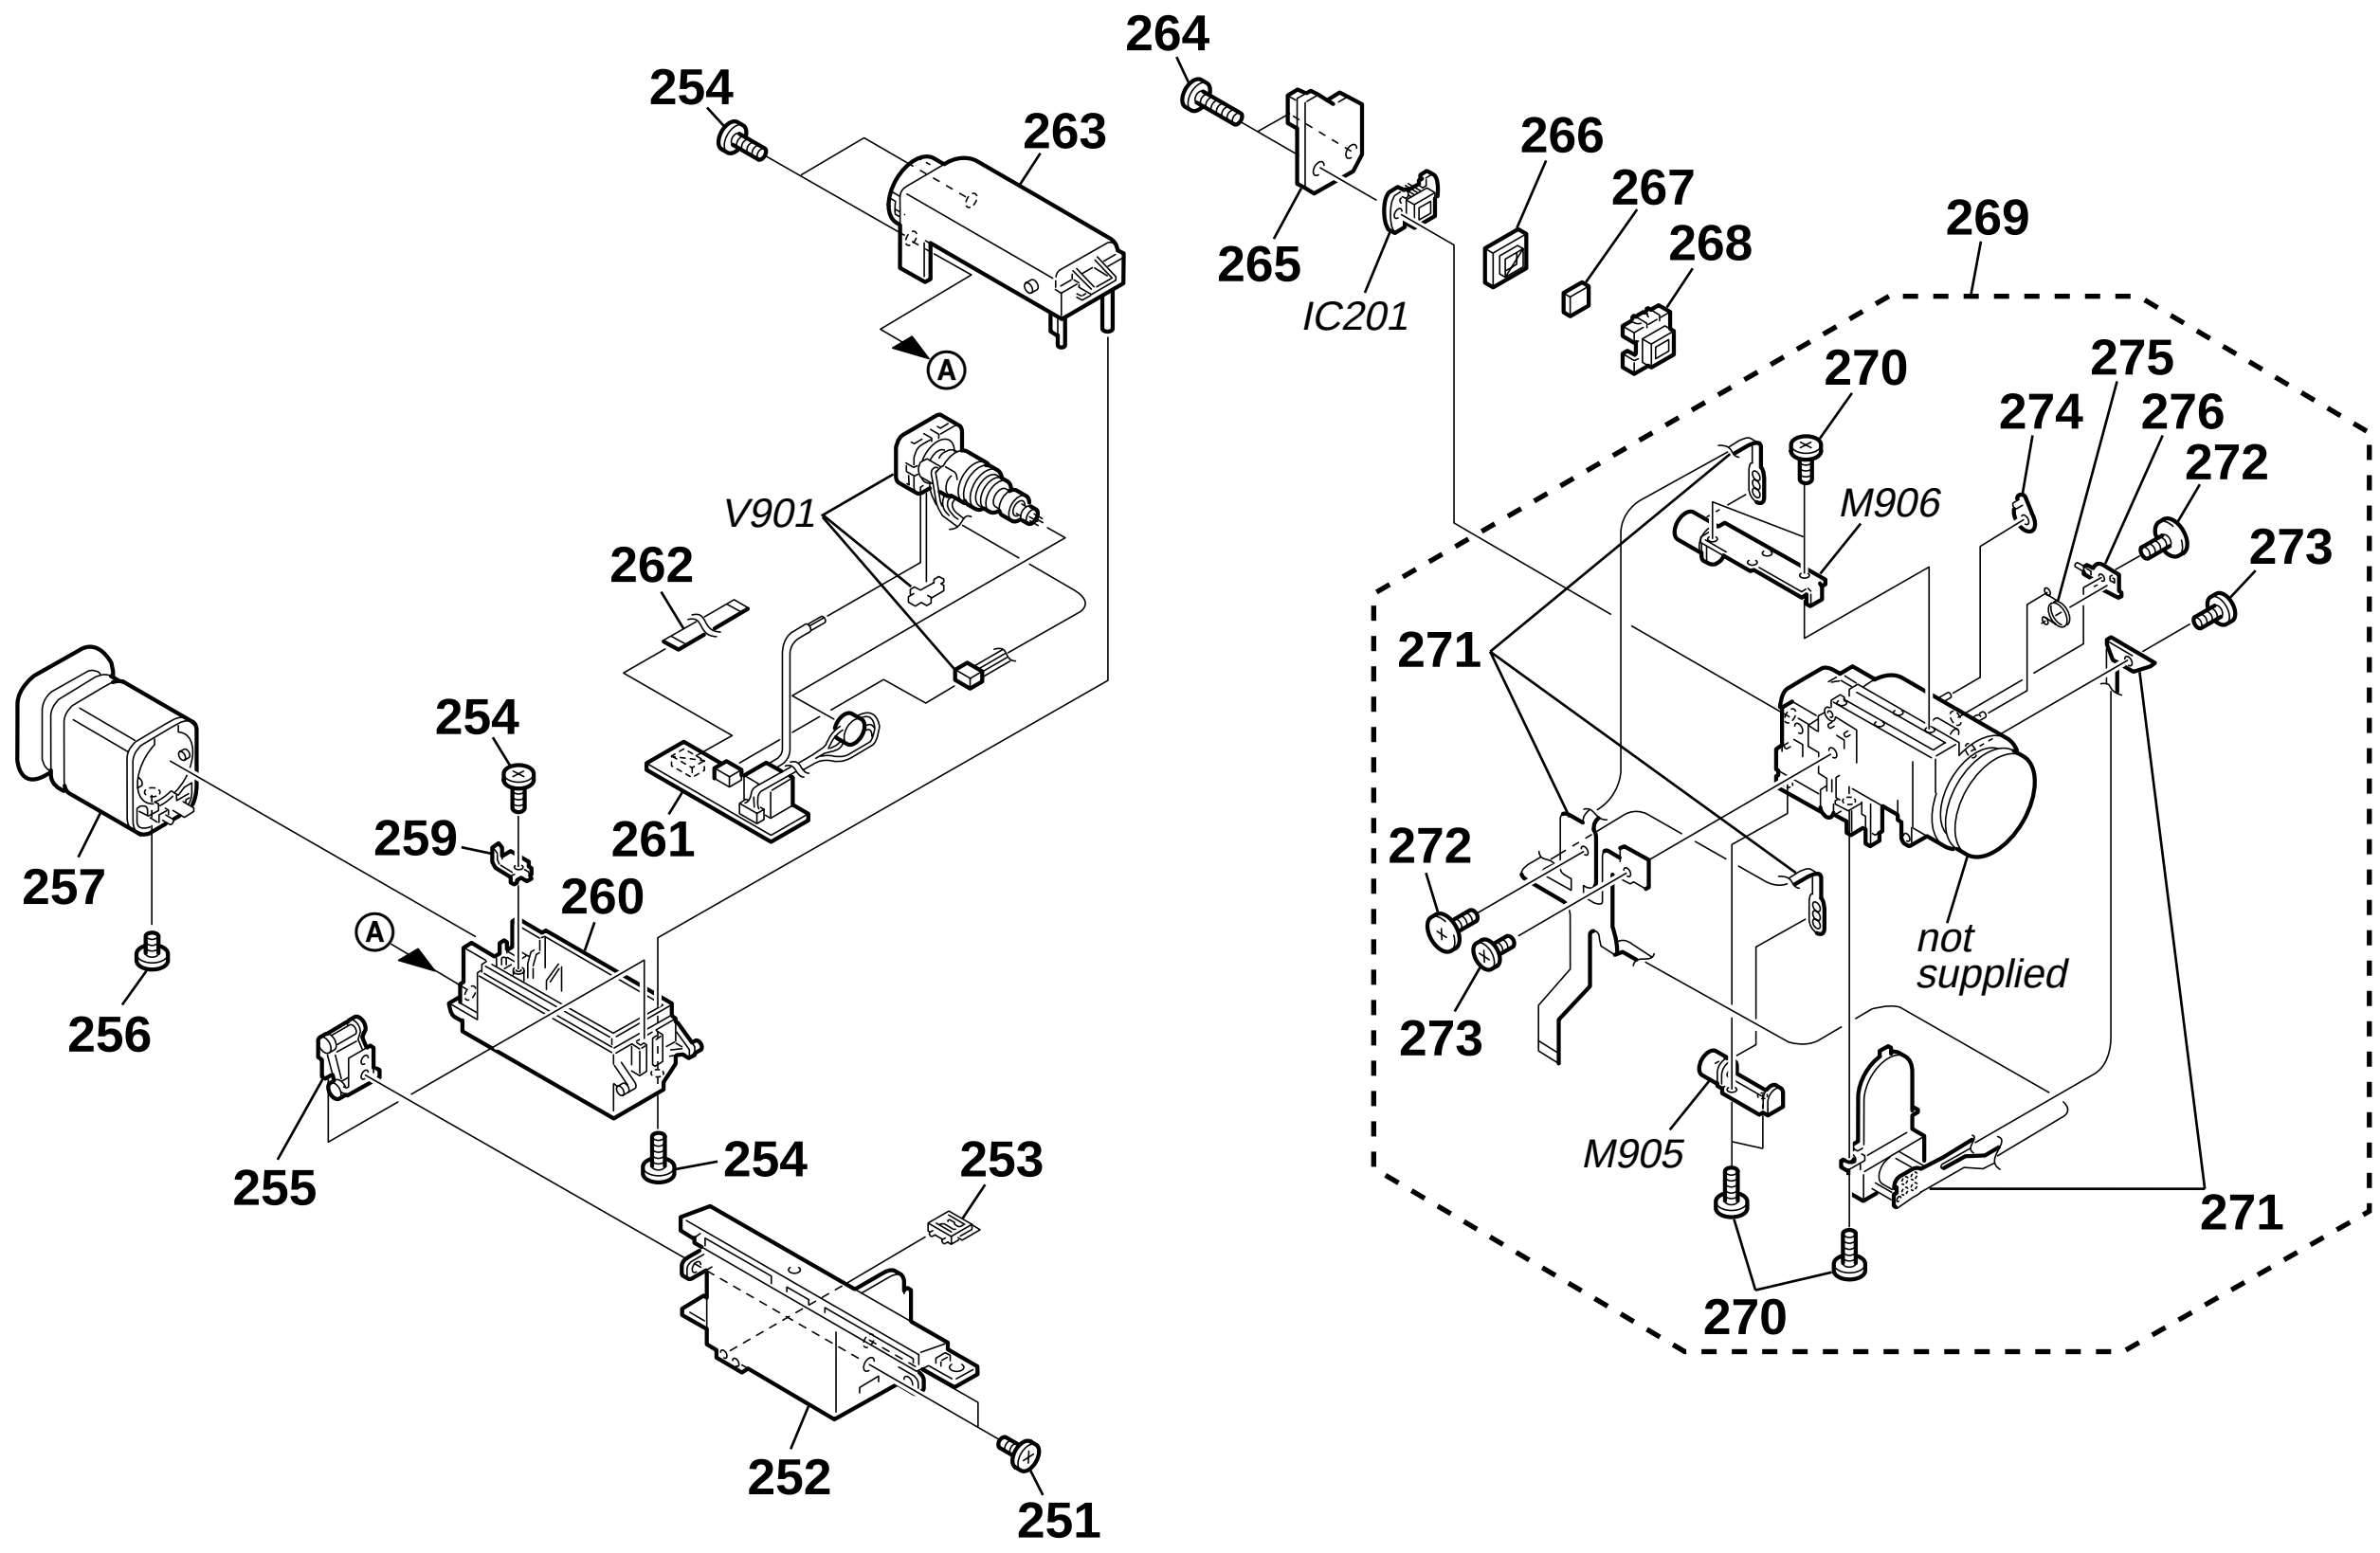

Be sure to read “Precautions upon replacing CCD imager” on page 4-8 when changing the CCD imager.

Ref. No.	Part No.	Description	Remarks
251	3-713-786-21	SCREW (M2X3)	
252	3-058-245-01	BASE (B) (97), VF	
253	3-053-685-01	LOCK (93), TILT	
254	3-948-339-81	TAPPING	
255	X-3949-327-1	ARM(B) ASSY, CRANK	
256	3-975-898-01	SCREW (T), F LOCK	
257	X-3949-329-1	FINDER (S) ASSY	
259	3-053-681-01	TALLY, EVF	
260	3-053-679-02	CABINET (LOWER B) (93), EVF	(TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
260	3-053-679-21	CABINET (LOWER B) (93), EVF	(TR918E/TRV87E)
261	A-7073-855-A	VF-129 (P) BOARD, COMPLETE	
262	1-792-454-11	CABLE, FLEXIBLE FLAT (FFC-289)	
263	X-3949-328-2	CABINET (UPPER B) (93) ASSY	(TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
263	X-3950-119-1	CABINET (UPPER B) (93) ASSY	(TR918E/TRV87E)
264	3-318-203-11	SCREW (B1.7X6), TAPPING	
265	A-7074-148-A	CD-240 (VHXRIBO) BOARD, COMPLETE	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
265	A-7074-161-A	CD-239 (CO) BOARD, COMPLETE	(TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)
266	3-953-817-01	RUBBER (F), SEAL	(TR617E/TR717E/TRV57E/TRV67E)
266	3-968-054-11	RUBBER (FM), SHIELD	(TR317E/TR417E/TR427E/TR918E/TRV37E/TRV47E/TRV48E/TRV87E)
267	1-758-084-21	FILTER BLOCK, OPTICAL	(TR317E/TR417E/TR427E/TR918E/TRV37E/TRV47E/TRV48E/TRV87E)
267	1-758-133-21	FILTER BLOCK, OPTICAL	(TR617E/TR717E/TRV57E/TRV67E)
268	3-978-981-11	ADAPTOR (FK), CCD FITTING	
269	8-848-729-01	DEVICE, LENS LSV-630A	
270	3-713-791-41	SCREW, TAPPING (M1.7X5), P2	
271	X-3949-355-2	IRIS FLEXIBLE ASSY 630	
272	3-056-022-01	TAPPING (B1.7X3.5), HEAD	
273	3-713-791-51	SCREW, TAPPING (M1.7X3.5), P2	
274	3-053-799-01	GEAR, IR	
275	3-053-800-01	SPRING, RETAIN	
276	3-053-827-01	LEVER, IR	
IC201	A-7031-043-A	CCD BLOCK ASSY	(TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
IC201	A-7031-046-A	CCD BLOCK ASSY	(TR918E)
IC201	A-7031-049-A	CCD BLOCK ASSY	(TR617E/TR717E/TRV57E/TRV67E)
IC201	A-7031-060-A	CCD BLOCK ASSY	(TRV87E)
M905	1-763-262-11	MOTOR, STEPPING F630	
M906	1-763-046-21	MOTOR, STEPPING Z600	
⚠V901	1-452-673-61	CRT ASSY (M01KXX90WB)	

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

6-1-6. LCD BLOCK ASSEMBLY (TRV MODEL)
(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)

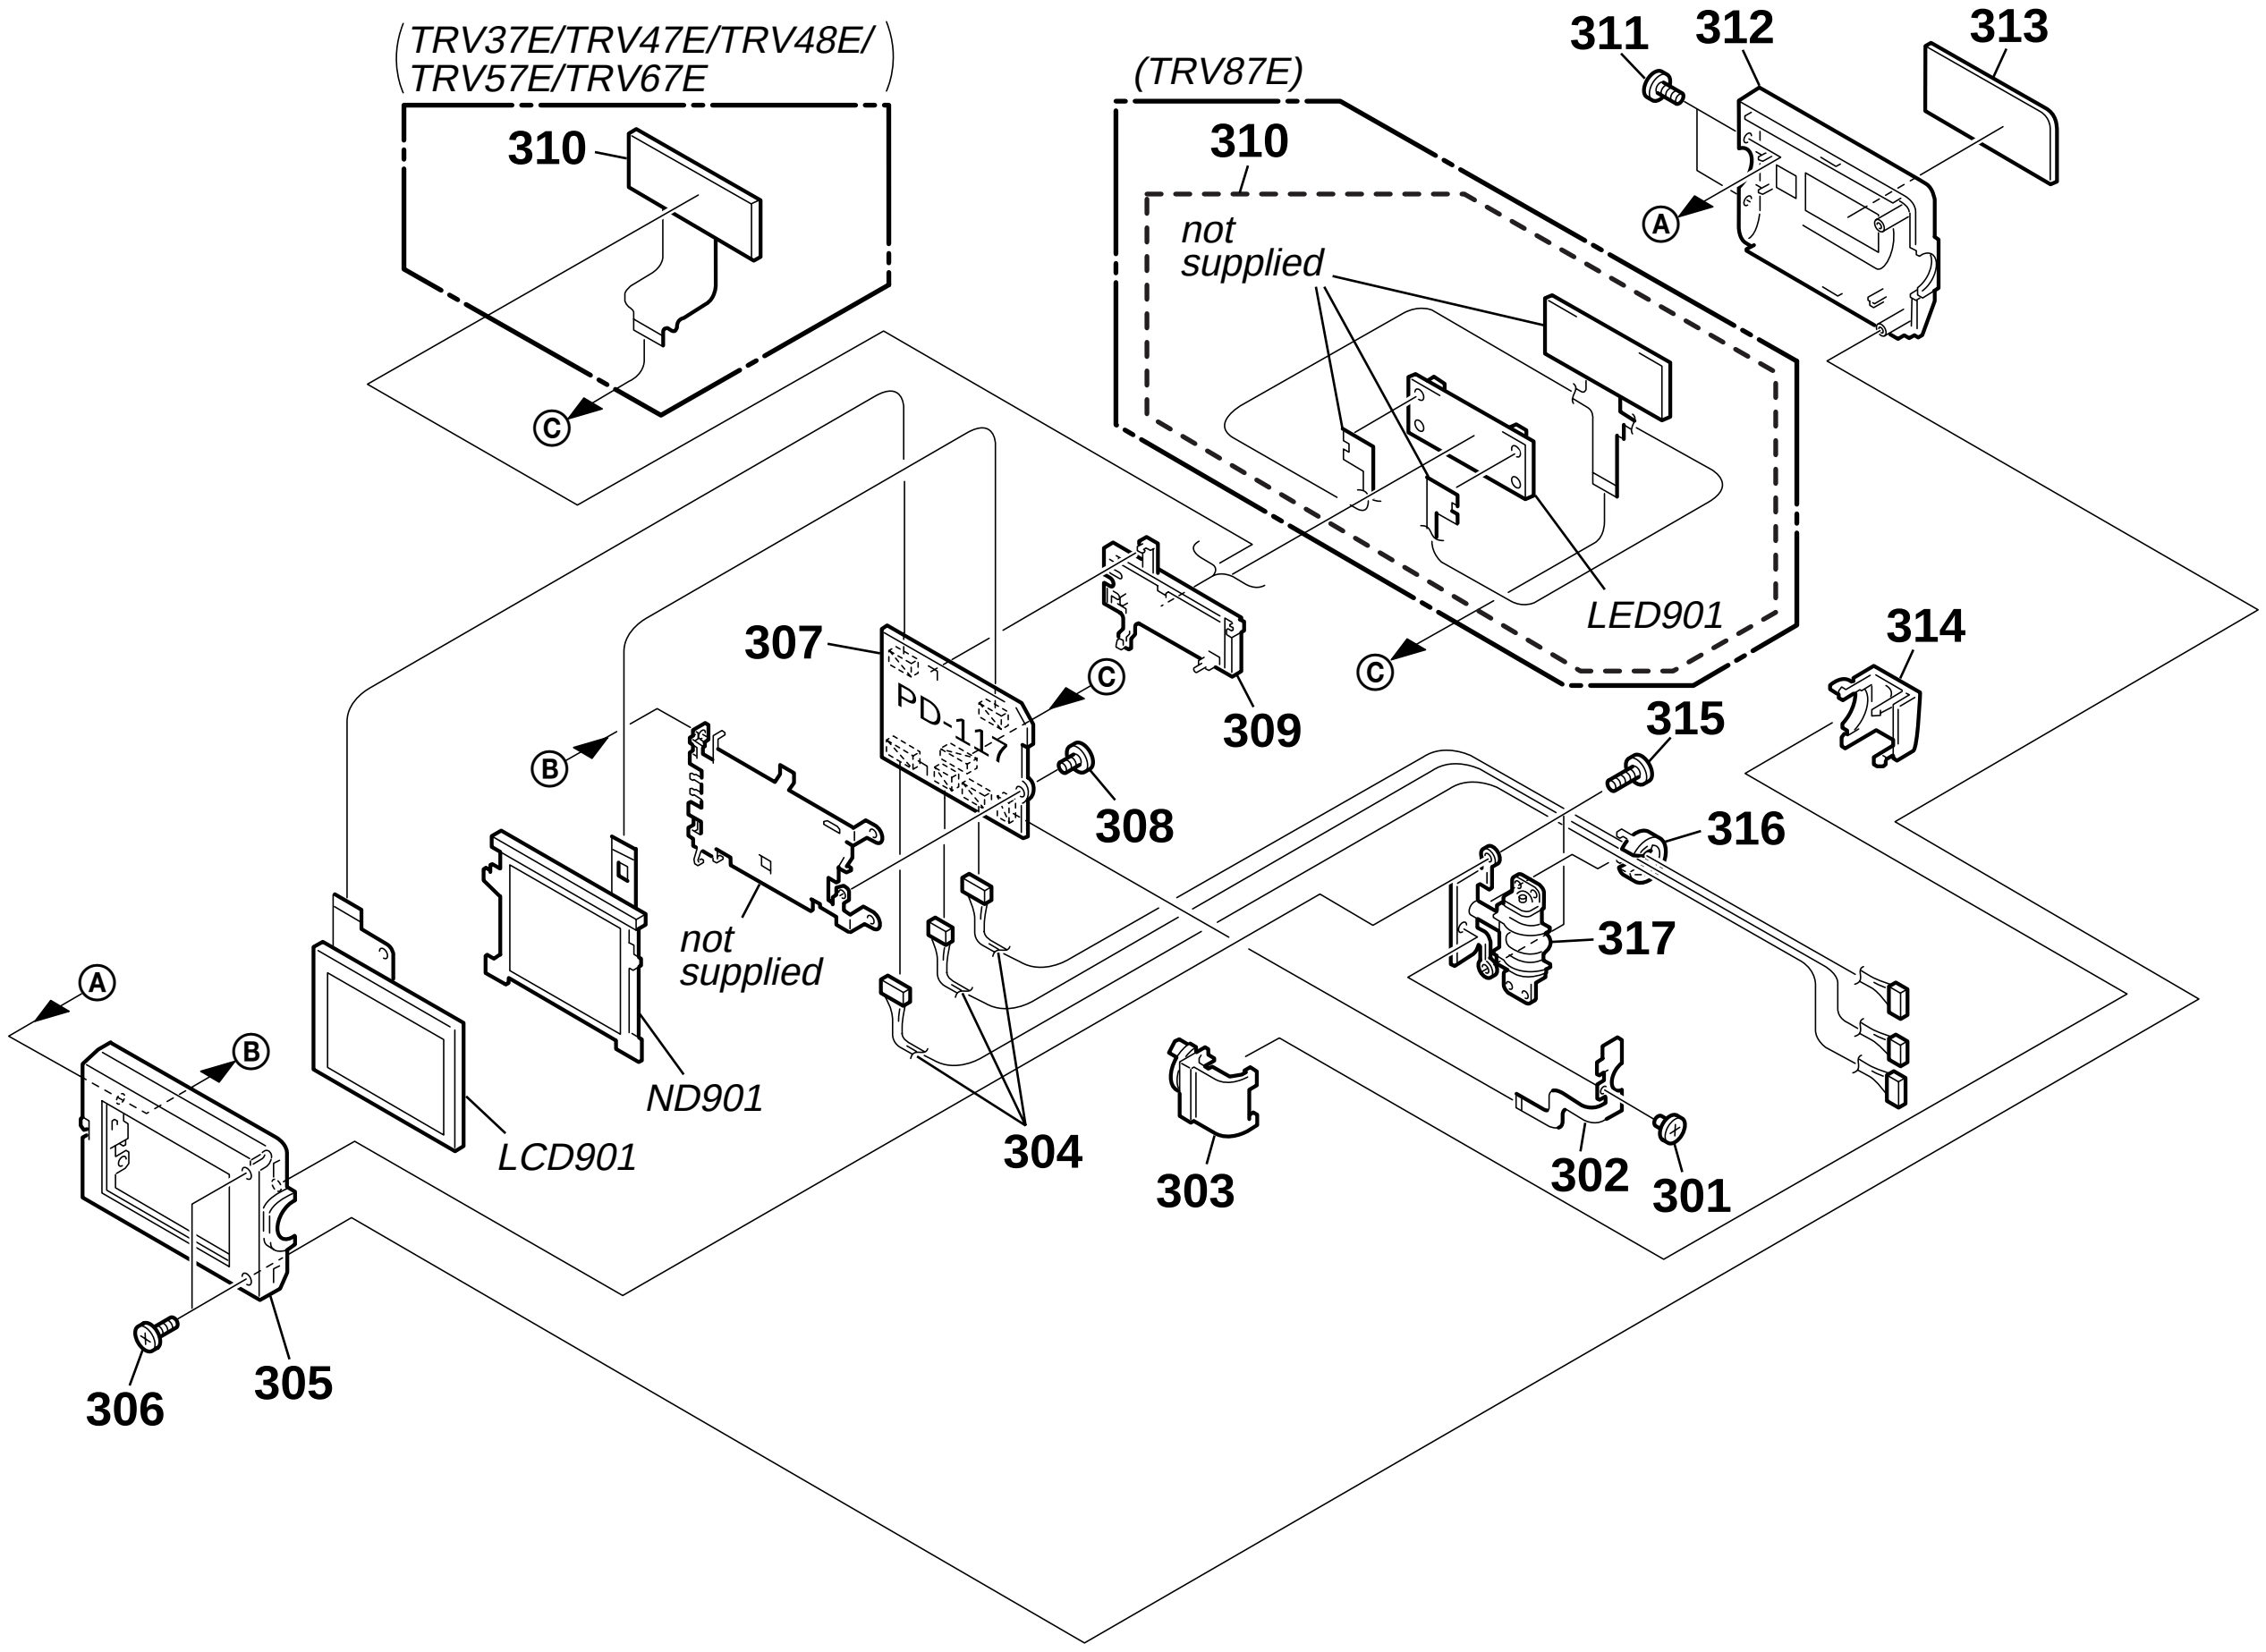
TRV37E/TRV47E/TRV48E/
TRV57E/TRV67E
310
C
(TRV87E)
310
not
supplied
LED901
C
311
312
313
A
314
315
316
317
307
PD-117
C
309
308
B
not
supplied
ND901
LCD901
A
B
304
303
302
301
306
305

Ref. No.	Part No.	Description	Remarks
301	4-981-286-01	SCREW (M1.7X2) (IB LOCK)	
302	1-676-300-11	FP-152 FLEXIBLE BOARD	
303	3-058-244-01	COVER (M) (98), HINGE	
304	1-960-161-11	HARNESS (DP-78)	
305	X-3949-335-1	CABINET (M) (93) ASSY, P	
306	3-948-339-81	TAPPING	
307	A-7074-141-A	PD-117 (P-VLO) BOARD, COMPLETE	
308	3-713-786-21	SCREW (M2X3)	
309	3-053-702-01	HOLDER (93), LCD (TRV87E)	
309	3-058-243-01	HOLDER (98), LCD (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)	
310	1-803-844-81	DISPLAY PANEL, LIQUID CRYSTAL (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)	
310	A-7094-150-A	INDICATION LCD BLOCK ASSY (TRV87E)	
311	3-968-729-91	SCREW (M2), LOCK ACE, P2	
312	3-058-210-01	CABINET (C) (98), P (TRV87E)	
312	3-058-210-11	CABINET (C) (98), P (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)	
313	3-058-220-51	WINDOW (98), LCD (TRV37E)	
313	3-058-220-61	WINDOW (98), LCD (TRV87E)	
313	3-058-220-71	WINDOW (98), LCD (TRV67E)	
313	3-058-220-81	WINDOW (98), LCD (TRV48E)	
313	3-058-220-91	WINDOW (98), LCD (TRV47E)	
313	3-059-033-21	WINDOW (98), LCD (TRV57E)	
314	3-053-707-01	COVER (C) (93), HINGE (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)	
314	3-053-707-21	COVER (C) (93), HINGE (TRV87E)	
315	3-948-339-31	SCREW, TAPPING	
316	3-987-623-01	CLAMP, HARNESS	
317	X-3950-108-1	HINGE (98) ASSY	
LCD901	1-803-859-21	INDICATOR MODULE, LIQUID CRYSTAL	(SERVICE)
⚠LED901	1-517-858-11	LIGHT, BACK (TRV87E)	
⚠ND901	1-517-752-31	TUBE, FLUORESCENT, COLD CATHODE	

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

6-1-7. CASSETTE COMPARTMENT ASSEMBLY

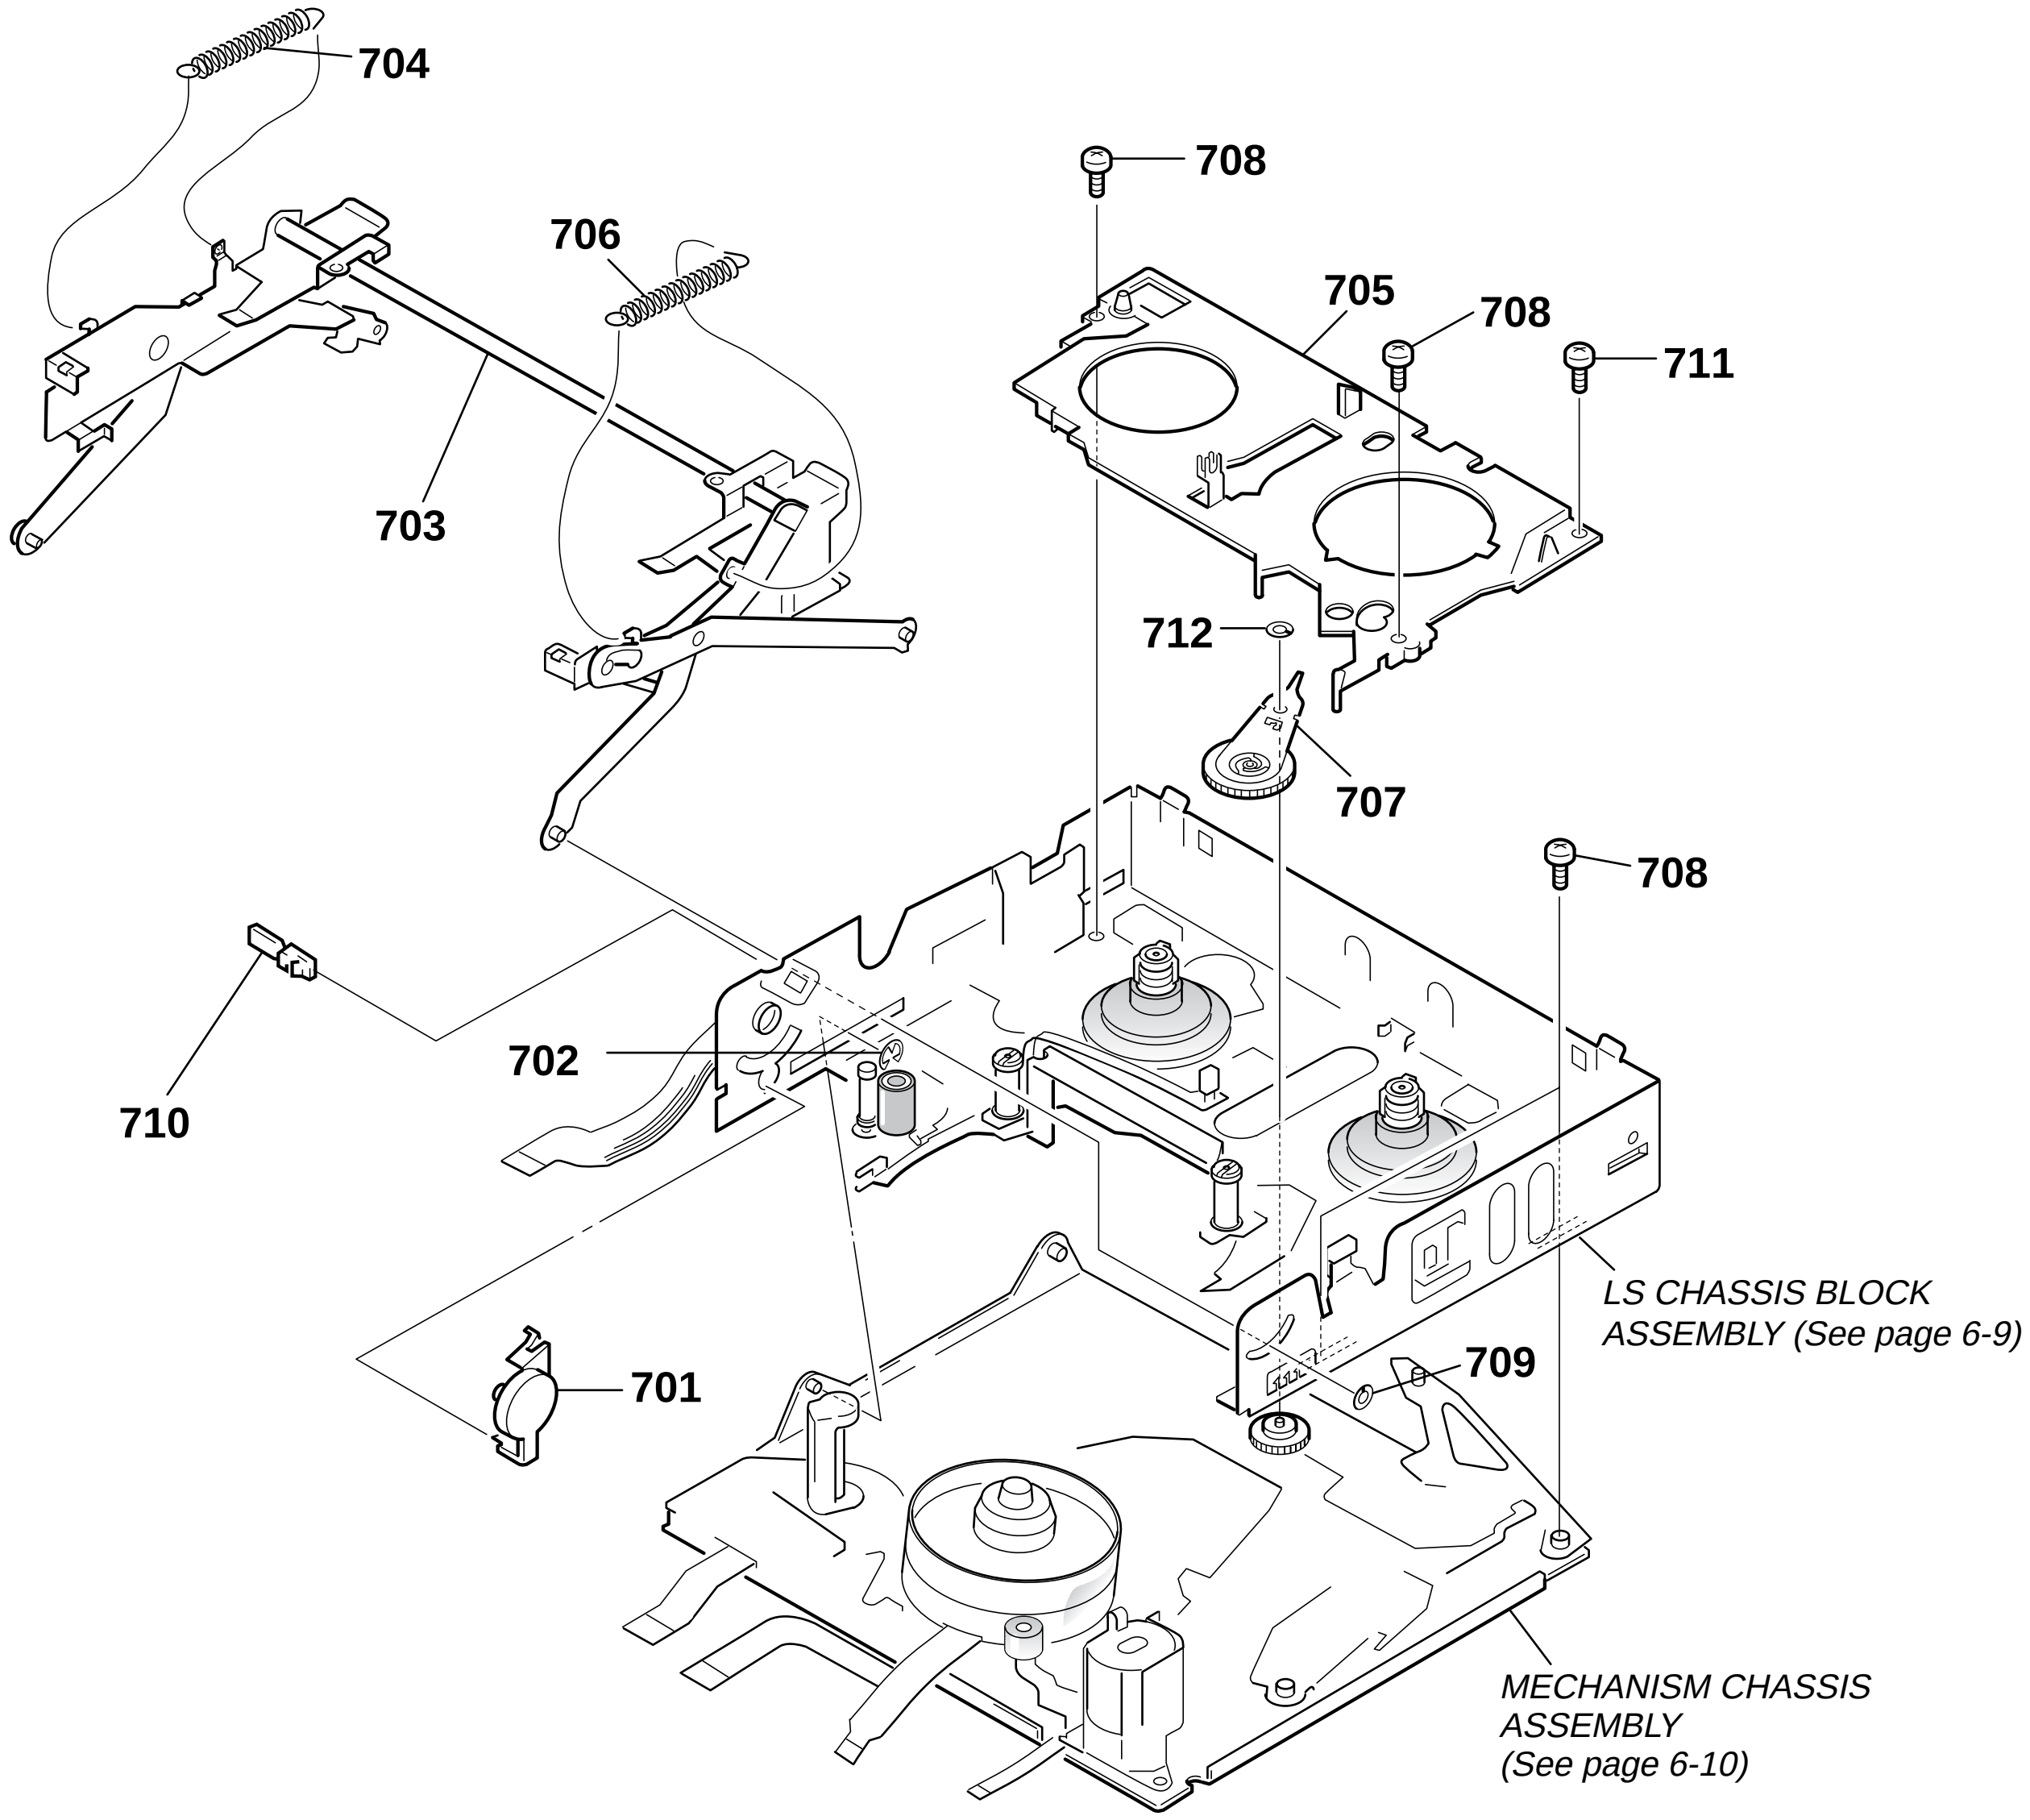
704
708
706
705
708
711
703
712
707
708
702
710
LS CHASSIS BLOCK ASSEMBLY (See page 6-9)
709
701
MECHANISM CHASSIS ASSEMBLY (See page 6-10)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
701	A-7040-421-A	DAMPER ASSY		707	X-3945-399-1	GEAR ASSY, GOOSENECK	
702	7-624-102-04	STOP RING 1.5, TYPE -E		708	3-947-503-01	SCREW (M1.4X2.5)	
703	X-3949-153-2	CASSETTE COMPARTMENT ASSY		709	3-979-686-01	WASHER, STOPPER	
704	3-965-587-03	SPRING (POWER TENSION), TENSION		710	3-971-076-01	FASTENER, D	
705	3-989-479-01	RETAINER (2), GOOSENECK		711	3-976-055-01	SCREW (M1.4X1)	
706	3-973-268-01	SPRING (POWER TENSION), TENSION		712	3-331-007-21	WASHER	

6-1-8. LS CHASSIS BLOCK ASSEMBLY

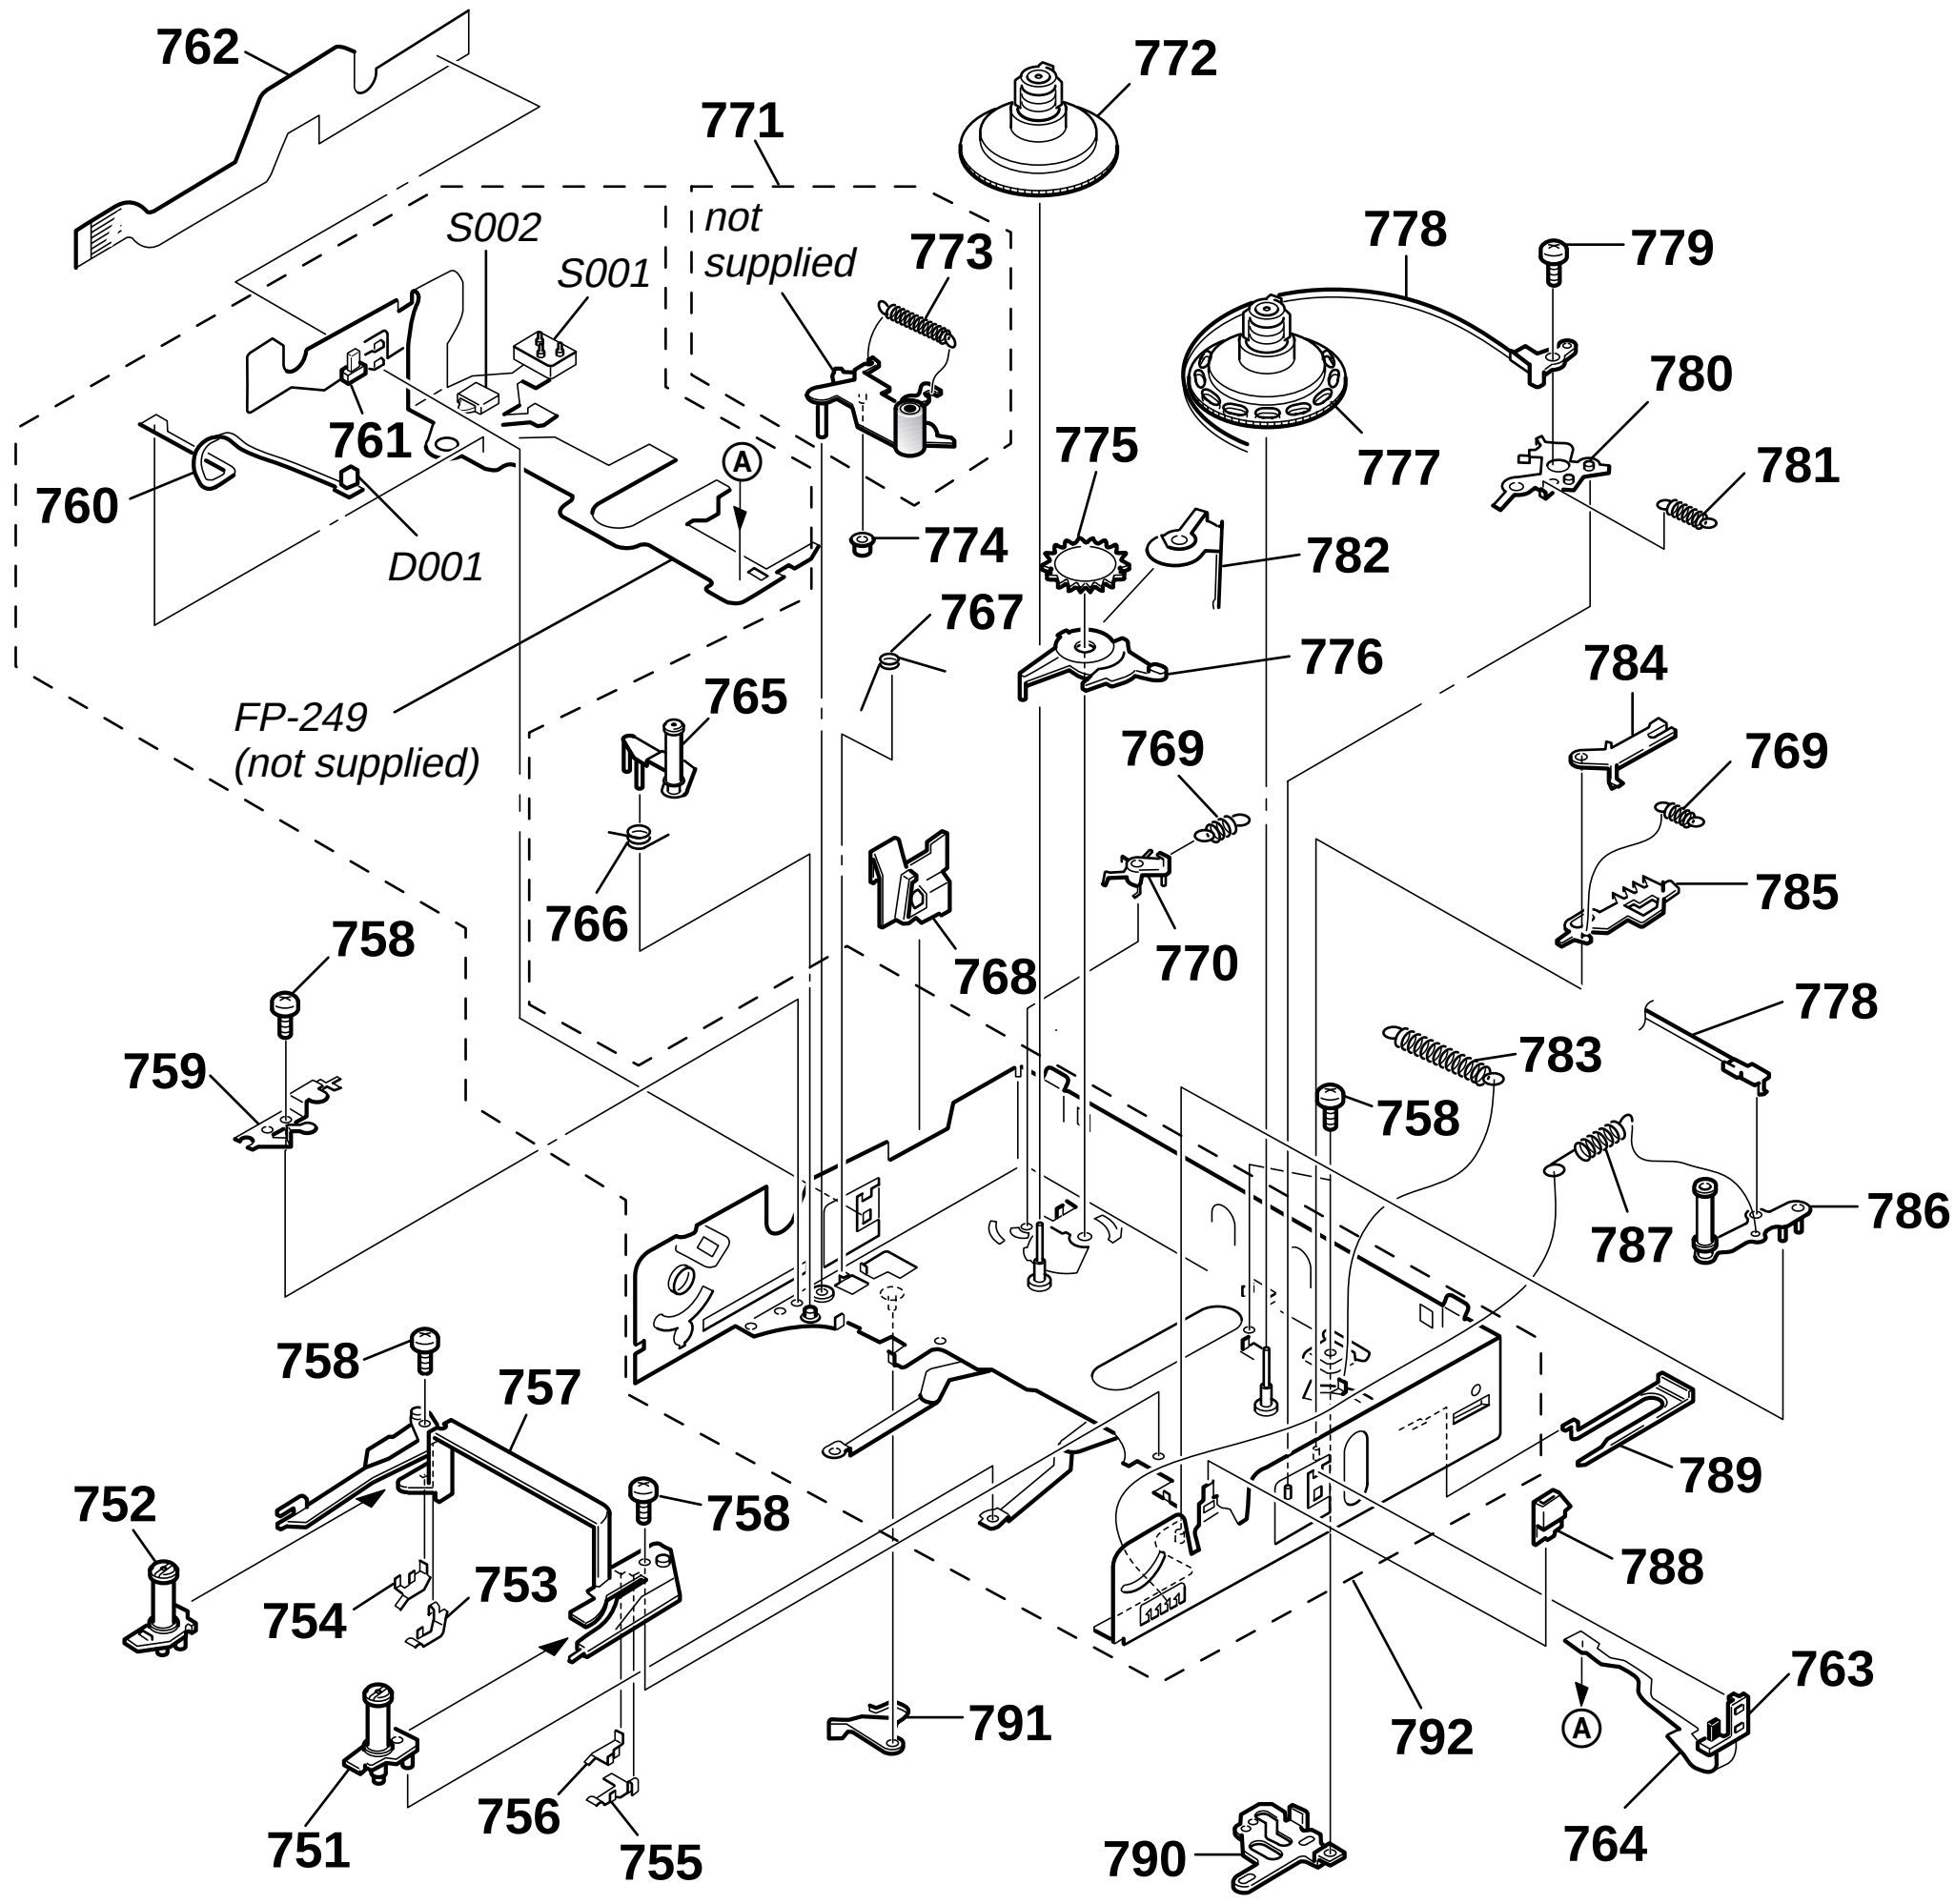
762
772
771
not supplied
S002
S001
773
778
779
780
761
760
D001
775
777
781
774
782
767
776
FP-249 (not supplied)
A
765
784
769
769
785
766
768
770
758
778
759
783
758
786
787
758
757
789
752
758
788
753
754
763
791
792
A
751
756
755
790
764

Ref. No.	Part No.	Description	Remarks
751	A-7040-419-A	BASE (S) BLOCK ASSY, GUIDE	
752	A-7040-418-B	BASE (T) BLOCK ASSY, GUIDE	
753	3-965-559-01	STOPPER (T)	
754	3-965-557-01	STOPPER (T), GB	
755	3-965-558-01	STOPPER (S)	
756	3-965-556-01	STOPPER (S), GB	
757	3-965-553-01	RAIL, GUIDE	
758	3-947-503-01	SCREW (M1.4X2.5)	
759	3-965-573-01	RETAINER, TG4	
760	1-658-213-11	FP-355 FLEXIBLE BOARD	
761	3-965-552-01	HOLDER, SENSOR (T)	
762	1-657-786-13	FP-221 FLEXIBLE BOARD	
763	3-965-551-01	HOLDER, SENSOR (S)	
764	1-658-214-11	FP-356 FLEXIBLE BOARD	
765	A-7040-417-A	ARM BLOCK ASSY, TG4	
766	3-965-574-01	SPRING (RETURN, TG4), TORSION	
767	3-965-575-01	SPRING (PINCH), TORSION	
768	3-965-568-11	GUIDE, LOCK	
769	3-965-562-01	SPRING (RATCHET), TENSION	
770	3-965-581-03	RATCHET, T	
771	X-3949-380-1	ARM ASSY (E), PINCH	
772	X-3945-398-2	DECK ASSY, REEL, T	
773	3-965-648-01	SPRING (PINCH), TENSION	
774	3-965-579-01	ROLLER, PINCH PRESS	
775	3-965-563-01	GEAR, T SOFT	
776	3-965-565-01	CLAW, T SOFT	
777	X-3945-397-1	DECK ASSY, REEL, S	
778	X-3945-396-1	BAND ASSY, TENSION REGULATOR	
779	3-945-756-01	SCREW (M1.4X3)	
780	3-965-583-01	ARM, RVS	
781	3-965-580-01	SPRING (ARM, RVS), TENSION	
782	3-966-384-01	SPRING, T SOFT	
783	3-965-578-01	SPRING, TENSION COIL	
784	3-965-560-01	RATCHET, S	
785	3-965-561-01	PLATE, RELEASE, S RATCHET	
786	X-3945-395-1	ARM ASSY, TG1	
787	3-965-576-01	SPRING (TG1), TENSION	
788	3-965-567-01	LID OPEN	
789	3-965-566-01	COVER, LS GUIDE	
* 790	3-965-577-01	PLATE, CAM, LS	
791	3-965-569-01	ARM, EJ	
792	A-7040-427-B	CHASSIS (S1) ASSY, LS	
D001	8-719-988-42	DIODE GL453	
S001	1-682-614-11	SWITCH, PUSH (3KEY)	(Hi8 MP,ME/MP,REC PROOF)
S002	1-572-688-11	SWITCH, PUSH (1 KEY) (C.C.LOCK)	

6-1-9. MECHANISM CHASSIS ASSEMBLY

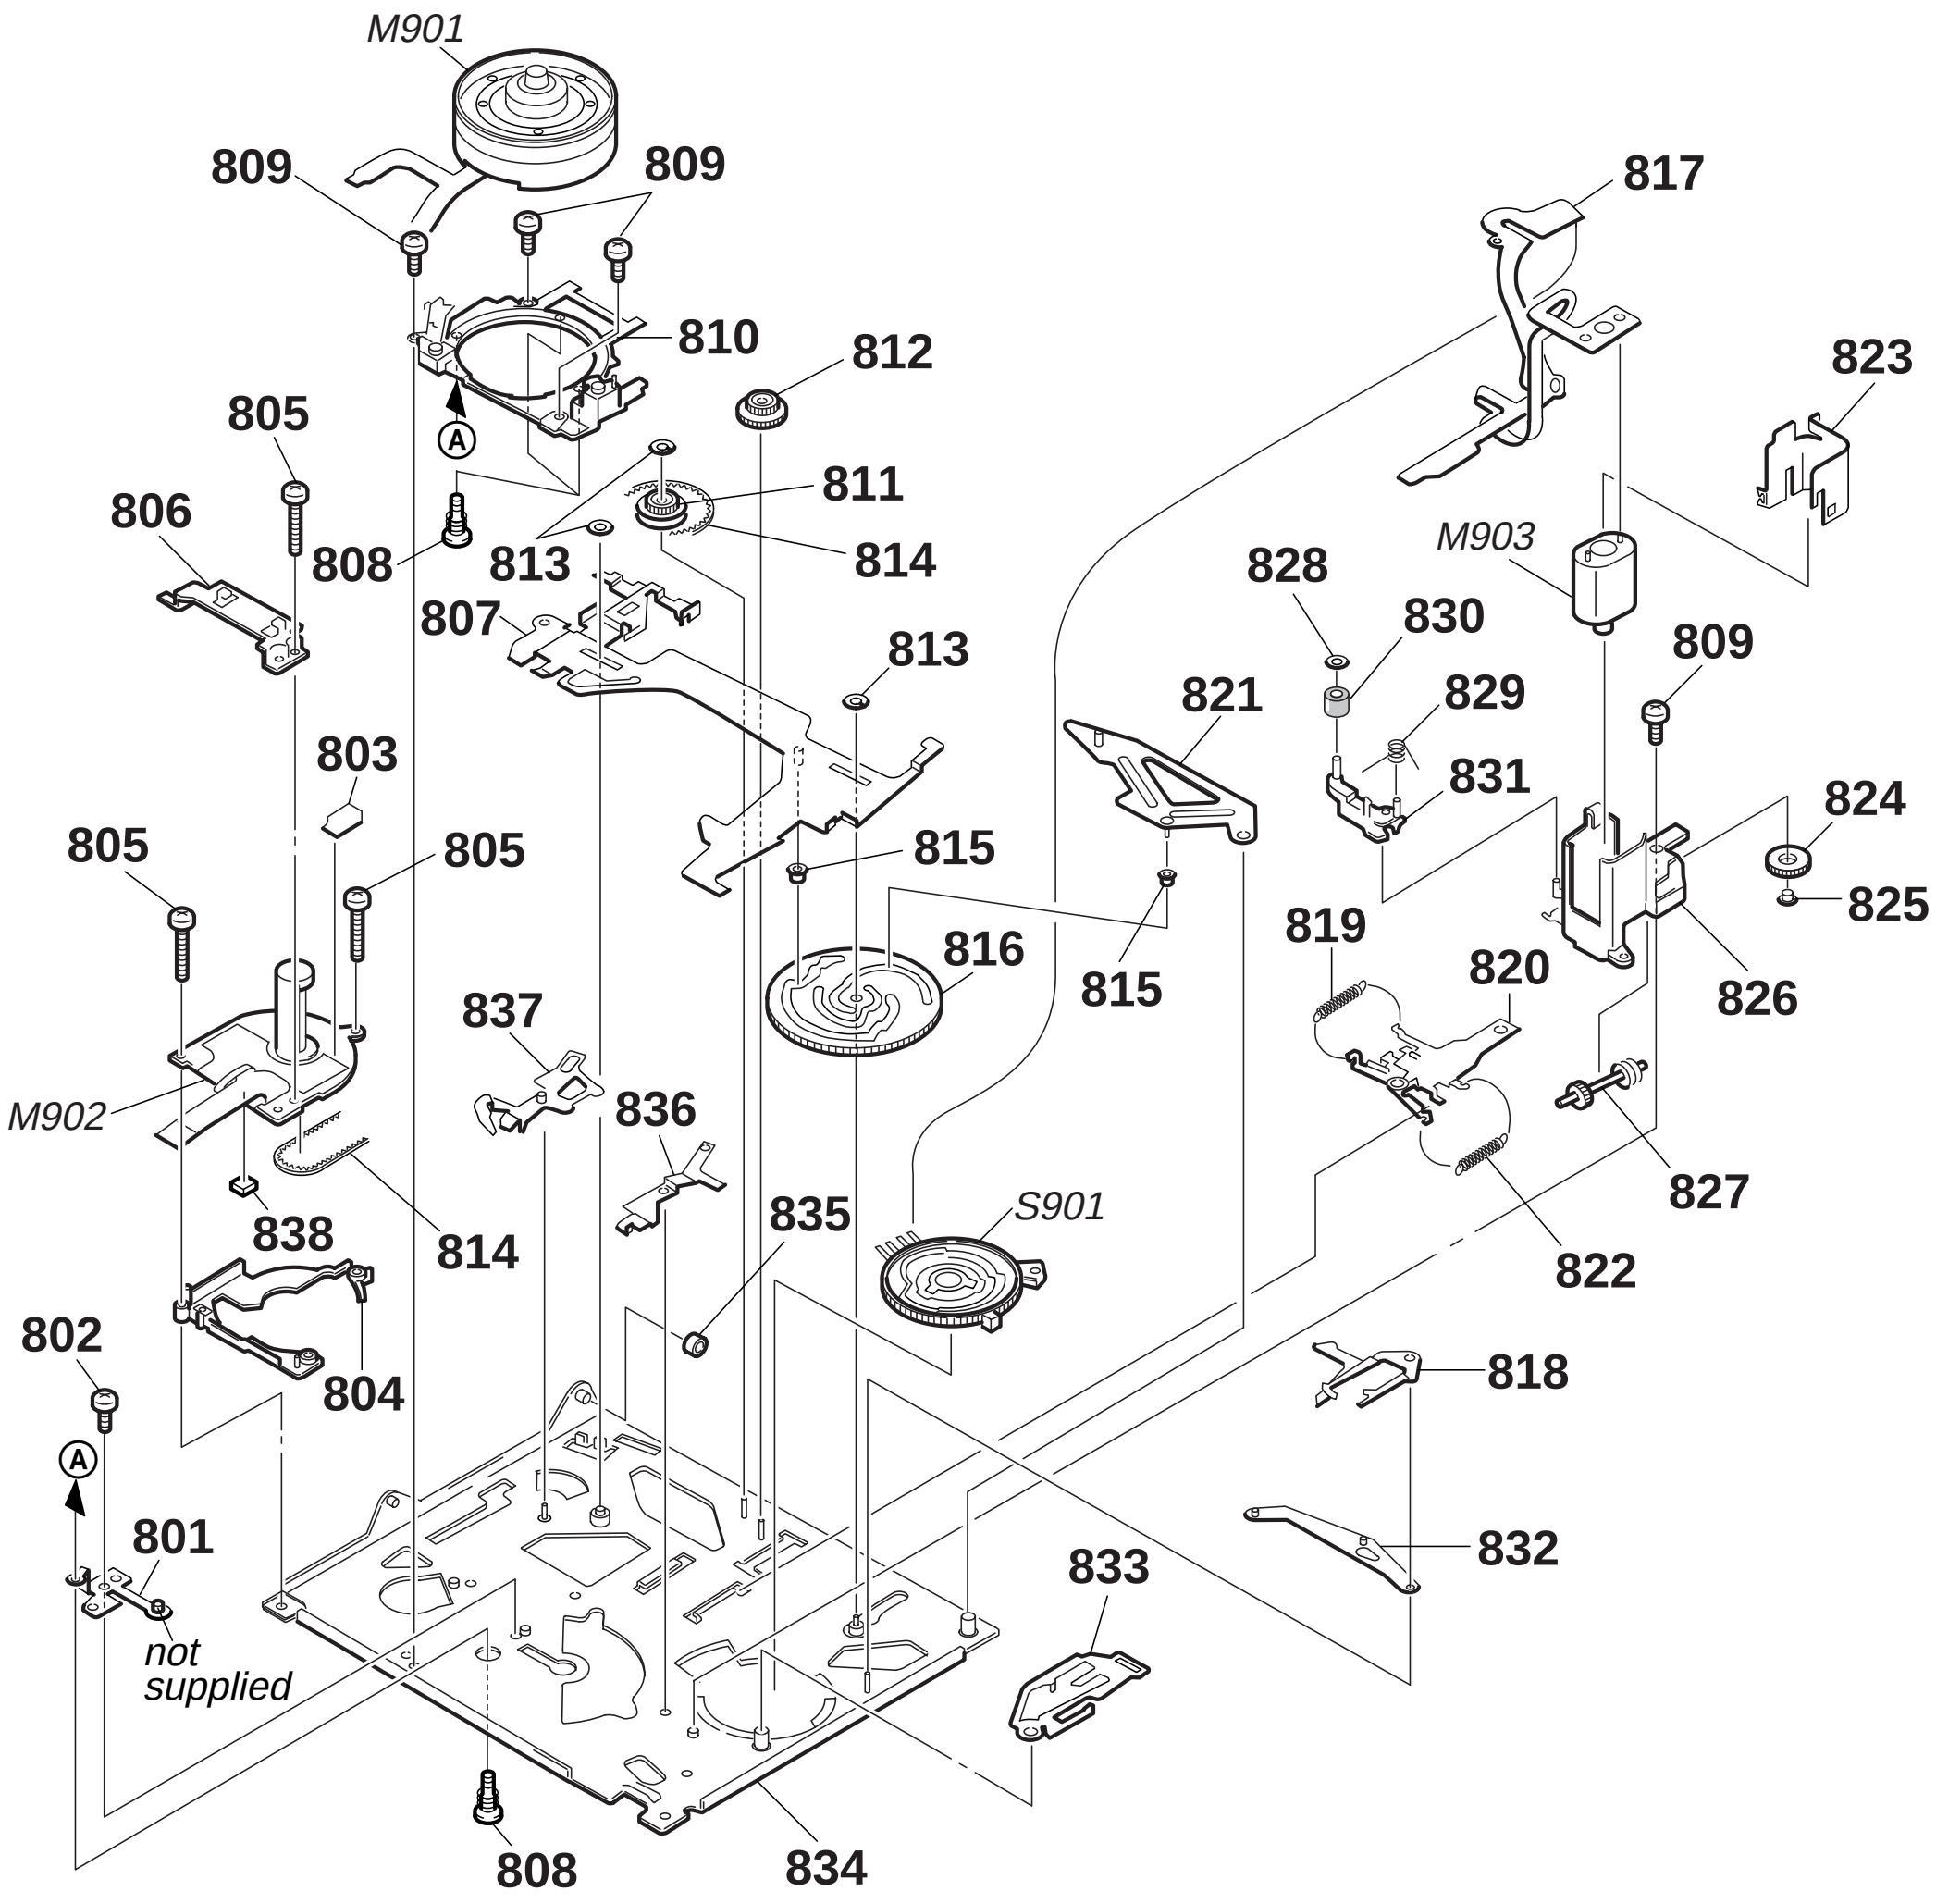
M901
809
809
817
810
812
823
805
A
806
808
813
811
814
828
M903
830
807
813
809
821
829
803
831
824
805
805
815
825
816
819
820
815
826
837
M902
836
827
838
814
835
S901
822
802
804
818
A
801
832
833
not supplied
808
834

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
801	3-974-320-02	GROUND (IM), SHAFT		822	3-965-535-01	SPRING (LIMITTER ARM S), COIL	
802	3-965-550-02	SCREW (M1.7X1.6)		823	3-965-542-01	SHIELD, MOTOR	
803	1-657-785-11	FP-248 FLEXIBLE BOARD		824	3-965-539-01	GEAR (A)	
804	3-054-404-01	SPACER, CAPSTAN		825	3-965-538-01	SLEEVE, MOTOR HOLDER	
805	3-965-549-01	SCREW (M1.4X6.5)		826	3-965-540-01	HOLDER, MOTOR	
806	3-966-349-01	HOLDER, FLEXIBLE		827	3-965-541-01	SHAFT, WORM	
807	3-971-644-02	SLIDER (2), M		828	3-321-393-01	WASHER, STOPPER	
808	X-3947-895-1	SCREW ASSY, DRUM ATTACHED		829	3-965-724-01	SPRING (RETURN, HC), TORSION	
809	3-947-503-01	SCREW (M1.4X2.5)		830	A-7040-423-A	ROLLER BLOCK ASSY, HC	
810	A-7040-494-A	BASE BLOCK ASSY, DRUM		831	X-3945-407-1	ARM ASSY, HC ROLLER	
811	3-965-527-01	GEAR, CHANGE		832	3-965-531-01	ARM, GL	
812	3-965-544-01	GEAR, RELAY		833	3-965-530-01	PLATE (2), REGULATOR, TENSION	
813	3-331-007-21	WASHER		834	X-3949-589-3	CHASSIS ASSY, MECHANICAL	
814	3-965-546-01	BELT, TIMING		835	3-965-526-02	ROLLER, LS GUIDE	
815	3-965-533-01	ROLLER, LS		836	3-965-547-01	ARM, HC DRIVING	
816	3-965-528-01	GEAR, CAM		837	3-965-534-01	PLATE, PRESS, PINCH	
817	1-657-784-11	FP-220 FLEXIBLE BOARD		838	3-987-953-01	SPACER, RUBBER	
818	3-965-529-01	PLATE, REGULATOR, TENSION		M901	A-7048-899-A	DRUM BLOCK ASSY (DGH-0F1A-R) (PAL)	
819	3-965-536-01	SPRING (LIMITTER ARM T), COIL		M902	8-835-531-32	MOTOR, DC SCE-0601A/C-NP (CAPSTAN)	
820	X-3945-388-1	SLIDER ASSY, GL		M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
821	3-965-532-21	ARM, LS		S901	1-762-436-15	SWITCH (ENCODER), ROTARY	

6-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
  uF: μF
- RESISTORS
  All resistors are in ohms.
  METAL: metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- COILS
  uH: μH
- SEMICONDUCTORS
  In each case, u: μ, for example:
  uA...: μA... , uPA... , μPA... ,
  uPB... , μPB... , uPC... , μPC... ,
  uPD..., μPD...

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

- Abbreviation
  AUS : Australian model
  HK : Hong Kong model
  CN : Chinese model
  EE : East European model
  NE : North European model
  RU : Russian model
  JE : Tourist model

Ref. No.	Part No.	Description			Remarks
	A-7074-161-A	CD-239 (CO) BOARD, COMPLETE (TR317E/TR417E/TR427E/TR617E/TR717E/TR918E) ** (Ref.No.;2000Series) (IC201 is not included in this complete board.)			
		< CAPACITOR >			
C201	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
C204	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C205	1-135-210-11	TANTALUM CHIP	4.7uF	20%	10V
		< CONNECTOR >			
CN201	1-573-354-11	CONNECTOR, FFC/FPC 14P			
		< COIL >			
L201	1-414-757-11	INDUCTOR	100uH		
		< TRANSISTOR >			
Q201	8-729-117-73	TRANSISTOR	2SC4178-F13F14-T1		
		< RESISTOR >			
R201	1-216-797-11	METAL CHIP	10	5%	1/16W
R202	1-216-809-11	METAL CHIP	100	5%	1/16W
R203	1-216-833-91	RES-CHIP	10K	5%	1/16W

Ref. No.	Part No.	Description			Remarks
	A-7074-148-A	CD-240 (VHXRIBO) BOARD, COMPLETE (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E) ** (Ref.No.;2000Series) (IC201 is not included in this complete board.)			
		< CAPACITOR >			
C201	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
C204	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C205	1-135-210-11	TANTALUM CHIP	4.7uF	20%	10V
		< CONNECTOR >			
CN201	1-573-354-11	CONNECTOR, FFC/FPC 14P			
		< COIL >			
L201	1-414-757-11	INDUCTOR	100uH		
		< TRANSISTOR >			
Q201	8-729-117-73	TRANSISTOR	2SC4178-F13F14-T1		
		< RESISTOR >			
R201	1-216-797-11	METAL CHIP	10	5%	1/16W
R202	1-216-809-11	METAL CHIP	100	5%	1/16W
R203	1-216-833-91	RES-CHIP	10K	5%	1/16W

Be sure to read "Precautions upon replacing CCD imager" on page 4-8 when changing the CCD imager.

Ref. No.	Part No.	Description			Remarks
	A-7074-134-A	CF-66 (P-HXRIBO) BOARD, COMPLETE (TR918E) **			
	A-7074-152-A	CF-66 (N-LO) BOARD, COMPLETE (TR317E) ************************************			
	A-7074-164-A	CF-66 (P-LO) BOARD, COMPLETE (TR417E/TR427E/TR617E/TR717E) ** (Ref.No.;3000Series)			
		< HOLDER >			
BH001	1-550-104-11	HOLDER, BATTERY			
		< BUZZER >			
BZ001	1-529-107-11	BUZZER, PIEZOELECTRIC (TR417E/TR427E/TR617E/TR717E/TR918E)			
BZ002	1-529-104-21	BUZZER, PIEZOELECTRIC (TR317E)			
		< CAPACITOR >			
C003	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C004	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
		< CONNECTOR >			
CN001	1-785-760-11	CONNECTOR, FFC/FPC (ZIF) 45P			
CN002	1-774-765-11	CONNECTOR, FFC/FPC 8P			
CN007	1-778-283-11	CONNECTOR, FFC/FPC 4P			
CN008	1-779-328-21	CONNECTOR, FFC/FPC 8P (TR918E)			
CN010	1-691-364-21	CONNECTOR, FFC/FPC (ZIF) 26P			
		< DIODE >			
D002	8-719-421-27	DIODE MA728-(K8).S0			
D005	8-719-073-03	DIODE MA8082-(K8).S0			
D006	8-719-073-03	DIODE MA8082-(K8).S0			
D008	8-719-073-01	DIODE MA111-TX			
		< IC >			
IC001	8-759-573-02	IC BU9735K-E2			

CF-66 CF-67

Ref. No.	Part No.	Description	Remarks
		< COIL >	
L004	1-469-527-91	INDUCTOR 47uH	
L005	1-469-527-91	INDUCTOR 47uH	
		< TRANSISTOR >	
Q001	8-729-402-42	TRANSISTOR UN5213-TX	
Q002	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	(TR918E)
Q003	8-729-230-72	TRANSISTOR 2SA1362-YG-EL (TR918E)	
		< RESISTOR >	
R002	1-216-849-11	METAL CHIP 220K 5% 1/16W	(TR918E)
R003	1-216-833-91	RES-CHIP 10K 5% 1/16W	(TR918E)
R004	1-216-853-11	METAL CHIP 470K 5% 1/16W	(TR918E)
R005	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R006	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R007	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R008	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R009	1-216-837-11	METAL CHIP 22K 5% 1/16W	(TR918E)
R010	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	(TR918E)
R011	1-216-855-11	METAL CHIP 680K 5% 1/16W	
R012	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R013	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R014	1-216-826-11	METAL CHIP 2.7K 5% 1/16W	
R015	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R016	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R017	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R018	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R019	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R020	1-216-828-11	METAL CHIP 3.9K 5% 1/16W	
R021	1-216-828-11	METAL CHIP 3.9K 5% 1/16W	
R023	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R025	1-216-832-11	METAL CHIP 8.2K 5% 1/16W	
R032	1-216-838-11	METAL CHIP 27K 5% 1/16W	
R040	1-216-809-11	METAL CHIP 100 5% 1/16W	(TR918E)
R043	1-216-809-11	METAL CHIP 100 5% 1/16W	(TR918E)
R048	1-216-864-11	METAL CHIP 0 5% 1/16W	
		< SWITCH >	
S001	1-771-138-61	SWITCH, KEY BOARD (DIGITAL EFFECT)	(TR918E)
S002	1-771-138-61	SWITCH, KEY BOARD (DATE)	
S003	1-771-138-61	SWITCH, KEY BOARD (PROGRAM AE)	(TR918E)
S005	1-771-138-61	SWITCH, KEY BOARD (COUNTER RESET)	
S006	1-771-029-21	SWITCH, TACTILE (MENU)	
S007	1-771-029-21	SWITCH, TACTILE (EXPOSURE)	
S008	1-771-025-41	SWITCH, ROTARY (ENCODER)	(SEL/PUSH EXEC)
S009	1-771-138-61	SWITCH, KEY BOARD (BACK LIGHT)	
S010	1-771-138-61	SWITCH, KEY BOARD (TITLE)	
S011	1-771-138-61	SWITCH, KEY BOARD (TIME)	

Ref. No.	Part No.	Description	Remarks
S012	1-771-138-61	SWITCH, KEY BOARD (FADER)	
S014	1-771-138-61	SWITCH, KEY BOARD (PROGRAM AE)	(TR317E/TR417E/TR427E/TR617E/TR717E)
S015	1-771-138-61	SWITCH, KEY BOARD (PICTURE EFFECT)	(TR317E/TR417E/TR427E/TR617E/TR717E)
S016	1-771-138-61	SWITCH, KEY BOARD (PICTURE EFFECT)	(TR918E)

Ref. No.	Part No.	Description	Remarks
	A-7074-120-A	CF-67 (N-VHMMBO) BOARD, COMPLETE	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
		***************************************	
	A-7074-126-A	CF-67 (N-VHRIBO) BOARD, COMPLETE	(TRV87E)
		***************************************	
			(Ref.No.;4000Series)
		< HOLDER >	
BH001	1-550-104-11	HOLDER, BATTERY	
		< CAPACITOR >	
C001	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C004	1-110-569-11	TANTAL. CHIP 47uF 20% 6.3V	
		< CONNECTOR >	
CN001	1-785-760-11	CONNECTOR, FFC/FPC (ZIF) 45P	
CN002	1-566-540-11	CONNECTOR, FPC (NON ZIF) 8P	
* CN003	1-580-055-21	PIN, CONNECTOR (SMD) 2P	
CN004	1-779-064-11	PIN, CONNECTOR (PC BOARD) 12P	
CN005	1-778-508-21	PIN, CONNECTOR (PC BOARD) 6P	
CN007	1-778-283-11	CONNECTOR, FFC/FPC 4P	
CN008	1-766-644-21	CONNECTOR, FFC/FPC 8P (TRV87E)	
* CN009	1-580-055-21	PIN, CONNECTOR (SMD) 2P	
		< DIODE >	
D002	8-719-062-16	DIODE 01ZA8.2(TPL3)	
D005	8-719-073-03	DIODE MA8082-(K8).S0	
D006	8-719-073-03	DIODE MA8082-(K8).S0	
D008	8-719-421-27	DIODE MA728-(K8).S0	
D009	8-719-073-01	DIODE MA111-TX	
		< TRANSISTOR >	
Q001	8-729-402-42	TRANSISTOR UN5213-TX	
Q002	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	(TRV87E)
Q003	8-729-230-72	TRANSISTOR 2SA1362-YG-EL (TRV87E)	
		< RESISTOR >	
R002	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R003	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R004	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R005	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R006	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R007	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R008	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R009	1-216-849-11	METAL CHIP 220K 5% 1/16W	(TRV87E)
R010	1-216-833-91	RES-CHIP 10K 5% 1/16W	(TRV87E)
R011	1-216-853-11	METAL CHIP 470K 5% 1/16W	(TRV87E)

Ref. No.	Part No.	Description			Remarks
R012	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R013	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R014	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R015	1-216-837-11	METAL CHIP	22K	5%	1/16W (TRV87E)
R016	1-216-829-11	METAL CHIP	4.7K	5%	1/16W (TRV87E)
R017	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R018	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R019	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R020	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R021	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R022	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R026	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R027	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R034	1-216-838-11	METAL CHIP	27K	5%	1/16W
R036	1-216-838-11	METAL CHIP	27K	5%	1/16W
R043	1-216-864-11	METAL CHIP	0	5%	1/16W
R048	1-216-864-11	METAL CHIP	0	5%	1/16W
		< SWITCH >			
S001	1-771-138-61	SWITCH, KEY BOARD (DIGITAL EFFECT)			(TRV87E)
S002	1-771-138-61	SWITCH, KEY BOARD (DATE)			
S003	1-771-029-21	SWITCH, TACTILE (PROGRAM AE)			
S004	1-771-138-61	SWITCH, KEY BOARD (PICTURE EFFECT)			
S005	1-771-138-61	SWITCH, KEY BOARD (COUNTER RESET)			
S006	1-771-138-61	SWITCH, KEY BOARD (MENU)			
S007	1-771-029-21	SWITCH, TACTILE (EXPOSURE)			
S008	1-771-138-61	SWITCH, KEY BOARD (END SEARCH)			
S009	1-771-025-41	SWITCH, ROTARY (ENCODER)			(SEL/PUSH EXEC)
S010	1-771-029-21	SWITCH, TACTILE (BACK LIGHT)			
S011	1-771-138-61	SWITCH, KEY BOARD (TITLE)			
S012	1-771-138-61	SWITCH, KEY BOARD (TIME)			
S013	1-771-029-31	SWITCH, TACTILE (FADER)			
S014	1-771-138-61	SWITCH, KEY BOARD (DISPLAY)			
	A-7074-113-A	DD-134 (VO) BOARD, COMPLETE			(TRV37E/TRV47E/TRV48E)
		***			
	A-7074-125-A	DD-134 (VHXRIBO) BOARD, COMPLETE			(TRV57E/TRV67E/TRV87E)
		***			
	A-7074-133-A	DD-134 (HXRIBO) BOARD, COMPLETE			(TR918E)
		***			
	A-7074-151-A	DD-134 (L0) BOARD, COMPLETE			(TR317E/TR417E/427E)
		***			
	A-7074-166-A	DD-134 (HMMBO) BOARD, COMPLETE			(TR617E/TR717E)
		***			
					(Ref.No.;2000Series)
		< CAPACITOR >			
C301	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C302	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C303	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C304	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C305	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C308	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C309	1-164-172-11	CERAMIC CHIP	0.0056uF	10%	25V
C310	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C311	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C312	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C313	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C314	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C315	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C316	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C317	1-162-962-11	CERAMIC CHIP	470PF	10%	50V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C318	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C321	1-113-991-11	TANTAL. CHIP	33uF	20%	16V
C323	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C324	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C325	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C326	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C327	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C328	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C329	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C330	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C332	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
C333	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
C335	1-162-974-11	CERAMIC CHIP	0.01uF		50V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C336	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
C337	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
C338	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
C339	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C340	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C341	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C342	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C343	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C344	1-164-506-11	CERAMIC CHIP	4.7uF		16V
C345	1-164-506-11	CERAMIC CHIP	4.7uF		16V
C346	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C346	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C347	1-119-749-11	TANTAL. CHIP	33uF	20%	4V
C348	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C349	1-164-505-11	CERAMIC CHIP	2.2uF		16V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C350	1-164-156-11	CERAMIC CHIP	0.1uF		25V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C351	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C352	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C353	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C354	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C355	1-125-822-11	TANTALUM	10uF	20%	10V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C356	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C358	1-164-506-11	CERAMIC CHIP	4.7uF		16V
C360	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C361	1-164-505-11	CERAMIC CHIP	2.2uF		16V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C363	1-164-505-11	CERAMIC CHIP	2.2uF		16V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C364	1-164-506-11	CERAMIC CHIP	4.7uF		16V
C366	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C367	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

DD-134

Ref. No.	Part No.	Description	Remarks
		< CONNECTOR >	
* CN301	1-580-756-21	PIN, CONNECTOR (SMD) 7P	
CN931	1-691-520-11	CONNECTOR, BOARD TO BOARD 48P	
CN933	1-779-893-11	PIN, CONNECTOR (PC BOARD) 8P	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
		< DIODE >	
D301	8-719-062-16	DIODE 01ZA8.2(TPL3)	
D302	8-719-421-27	DIODE MA728-(K8).S0	
D304	8-719-073-03	DIODE MA8082-(K8).S0	
D305	8-719-056-89	DIODE MA8120-TX	
D306	8-719-078-02	DIODE 1SS357(T3SONY1)	
D308	8-719-078-02	DIODE 1SS357(T3SONY1)	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
D310	8-719-078-02	DIODE 1SS357(T3SONY1)	
D311	8-719-078-02	DIODE 1SS357(T3SONY1)	
D312	8-719-078-02	DIODE 1SS357(T3SONY1)	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
D313	8-719-078-02	DIODE 1SS357(T3SONY1)	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
		< FUSE >	
⚠F302	1-576-406-11	FUSE, MICRO (1608) (1.4A 32V)	
⚠F303	1-576-406-11	FUSE, MICRO (1608) (1.4A 32V)	
⚠F304	1-576-406-11	FUSE, MICRO (1608) (1.4A 32V)	
⚠F305	1-576-406-11	FUSE, MICRO (1608) (1.4A 32V)	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
⚠F306	1-576-406-11	FUSE, MICRO (1608) (1.4A 32V)	
			(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
		< FERRITE BEAD >	
FB310	1-414-760-21	FERRITE 0UH	
FB321	1-414-760-21	FERRITE 0UH	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
		< IC >	
IC301	8-752-090-20	IC CXA3057R-T6	
		< COIL >	
L301	1-416-670-11	INDUCTOR 33uH	
L302	1-416-669-11	INDUCTOR 22uH	
L303	1-412-056-11	INDUCTOR 4.7uH	
L304	1-416-669-11	INDUCTOR 22uH	
L305	1-416-670-11	INDUCTOR 33uH	
L306	1-416-669-11	INDUCTOR 22uH	
L307	1-412-056-11	INDUCTOR 4.7uH	
L308	1-412-056-11	INDUCTOR 4.7uH	
L309	1-412-056-11	INDUCTOR 4.7uH	
L313	1-414-400-41	INDUCTOR 22uH	
L314	1-412-056-11	INDUCTOR 4.7uH	
L315	1-414-400-41	INDUCTOR 22uH	
L316	1-412-056-11	INDUCTOR 4.7uH	
L317	1-414-400-41	INDUCTOR 22uH	
L318	1-416-669-11	INDUCTOR 22uH	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
L319	1-412-056-11	INDUCTOR 4.7uH	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)

Ref. No.	Part No.	Description	Remarks
		< TRANSISTOR >	
Q301	8-729-047-68	TRANSISTOR 2SK1830-TE85L	
Q302	8-729-046-77	TRANSISTOR SI4963DY-T1	
Q303	8-729-804-41	TRANSISTOR 2SB1122-ST-TD	
Q304	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q305	8-729-047-68	TRANSISTOR 2SK1830-TE85L	
Q307	8-729-804-41	TRANSISTOR 2SB1122-ST-TD	
Q308	8-729-046-98	TRANSISTOR CPH6702-TL	
Q309	8-729-046-98	TRANSISTOR CPH6702-TL	
Q310	8-729-046-98	TRANSISTOR CPH6702-TL	
Q311	8-729-046-98	TRANSISTOR CPH6702-TL	
Q312	8-729-046-98	TRANSISTOR CPH6702-TL	
Q313	8-729-044-58	TRANSISTOR SI2304DS-T1	
Q316	8-729-046-98	TRANSISTOR CPH6702-TL	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q317	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q318	8-729-101-07	TRANSISTOR 2SB798-T1-DLDK	
Q319	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q320	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q321	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q322	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q323	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q325	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q327	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q328	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q329	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q330	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q331	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q332	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q333	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
		< RESISTOR >	
R301	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R302	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R303	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R304	1-216-839-11	METAL CHIP 33K 5% 1/16W	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R305	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R306	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R307	1-216-864-11	METAL CHIP 0 5% 1/16W	
R309	1-216-853-11	METAL CHIP 470K 5% 1/16W	
R310	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R311	1-216-813-11	METAL CHIP 220 5% 1/16W	
R312	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R313	1-216-150-91	RES-CHIP 10 5% 1/8W	
R314	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R315	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R316	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R317	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
R318	1-216-837-11	METAL CHIP 22K 5% 1/16W	
			(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R319	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R322	1-216-296-91	SHORT 0	
			(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
R323	1-216-841-11	METAL CHIP 47K 5% 1/16W	

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description			Remarks
R324	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R325	1-216-841-11	METAL CHIP	47K	5%	1/16W
R326	1-216-837-11	METAL CHIP	22K	5%	1/16W
R327	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
R328	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
R329	1-216-845-11	METAL CHIP	100K	5%	1/16W
R330	1-216-864-11	METAL CHIP	0	5%	1/16W
R331	1-216-864-11	METAL CHIP	0	5%	1/16W
R332	1-218-877-11	METAL CHIP	18K	0.5%	1/16W
R333	1-216-837-11	METAL CHIP	22K	5%	1/16W
R335	1-218-891-11	METAL CHIP	68K	0.5%	1/16W
R336	1-218-895-11	METAL CHIP	100K	0.5%	1/16W
					(TR317E/TR417E/TR427E/TR918E/TRV37E/TRV47E/TRV48E)
R336	1-218-891-11	METAL CHIP	68K	0.5%	1/16W
					(TR617E/TR717E/TRV57E/TRV67E/TRV87E)
R337	1-216-864-11	METAL CHIP	0	5%	1/16W
					(TR317E/TR417E/TR427E/TR918E/TRV37E/TRV47E/TRV48E)
R337	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
					(TR617E/TR717E/TRV57E/TRV67E/TRV87E)
R338	1-218-903-11	METAL CHIP	220K	0.5%	1/16W
R339	1-216-845-11	METAL CHIP	100K	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R340	1-216-841-11	METAL CHIP	47K	5%	1/16W
R341	1-216-845-11	METAL CHIP	100K	5%	1/16W
R342	1-216-845-11	METAL CHIP	100K	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R343	1-216-837-11	METAL CHIP	22K	5%	1/16W
R344	1-216-864-11	METAL CHIP	0	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R345	1-218-903-11	METAL CHIP	220K	0.5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R346	1-218-891-11	METAL CHIP	68K	0.5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R347	1-218-895-11	METAL CHIP	100K	0.5%	1/16W
R348	1-218-887-11	METAL CHIP	47K	0.5%	1/16W
R349	1-216-864-11	METAL CHIP	0	5%	1/16W
					(TR317E/TR417E/TR427E/TR918E/TRV37E/TRV47E/TRV48E)
R349	1-218-877-11	METAL CHIP	18K	0.5%	1/16W
					(TR617E/TR717E/TRV57E/TRV67E/TRV87E)
R354	1-216-833-91	RES-CHIP	10K	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R357	1-218-879-11	METAL CHIP	22K	0.5%	1/16W
R358	1-218-871-11	METAL CHIP	10K	0.5%	1/16W
		< TRANSFORMER >			
⚠T301	1-435-252-21	TRANSFORMER, DC-DC CONVERTER			
	A-7074-162-A	EJ-29 (CO) BOARD, COMPLETE			
					(TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)
		***			
					(Ref.No.;2000Series)
		< CONNECTOR >			
CN251	1-766-346-21	CONNECTOR, FFC/FPC 16P			
CN252	1-764-709-11	CONNECTOR, FFC/FPC 10P			
CN253	1-764-703-11	CONNECTOR, FFC/FPC (LIF) 4P			
		< DIODE >			
D253	8-719-062-16	DIODE 01ZA8.2(TPL3)			
D256	8-719-073-01	DIODE MA111-TX			
D257	8-719-073-01	DIODE MA111-TX			

Ref. No.	Part No.	Description			Remarks
		< FERRITE BEAD >			
FB251	1-414-760-21	FERRITE	0UH		
FB252	1-414-760-21	FERRITE	0UH		
FB253	1-414-760-21	FERRITE	0UH		
		< JACK >			
J251	1-565-276-31	JACK, WING SMALL (LANC◐)			
		< RESISTOR >			
R251	1-216-821-11	METAL CHIP	1K	5%	1/16W
R252	1-216-821-11	METAL CHIP	1K	5%	1/16W
R253	1-216-821-11	METAL CHIP	1K	5%	1/16W
R254	1-216-821-11	METAL CHIP	1K	5%	1/16W
R255	1-216-821-11	METAL CHIP	1K	5%	1/16W
R256	1-216-821-11	METAL CHIP	1K	5%	1/16W
R257	1-216-821-11	METAL CHIP	1K	5%	1/16W
R258	1-216-821-11	METAL CHIP	1K	5%	1/16W
R259	1-216-029-00	METAL CHIP	150	5%	1/10W
		< SWITCH >			
S251	1-771-331-21	SWITCH, PUSH (1 KEY) (EJECT➡)			
	A-7074-149-A	EJ-30(VHXRIBO) BOARD, COMPLETE			
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
		***			
					(Ref.No.;2000Series)
		< CONNECTOR >			
CN251	1-766-346-21	CONNECTOR, FFC/FPC 16P			
CN252	1-764-709-11	CONNECTOR, FFC/FPC 10P			
CN253	1-764-703-11	CONNECTOR, FFC/FPC (LIF) 4P			
		< DIODE >			
D253	8-719-062-16	DIODE 01ZA8.2(TPL3)			
D256	8-719-073-01	DIODE MA111-TX			
D257	8-719-073-01	DIODE MA111-TX			
		< FERRITE BEAD >			
FB251	1-414-228-11	INDUCTOR CHIP	0UH		
FB252	1-414-228-11	INDUCTOR CHIP	0UH		
FB253	1-414-228-11	INDUCTOR CHIP	0UH		
		< JACK >			
J251	1-565-276-31	JACK, WING SMALL (LANC◐)			
		< RESISTOR >			
R251	1-216-821-11	METAL CHIP	1K	5%	1/16W
R252	1-216-821-11	METAL CHIP	1K	5%	1/16W
R253	1-216-821-11	METAL CHIP	1K	5%	1/16W
R254	1-216-821-11	METAL CHIP	1K	5%	1/16W
R255	1-216-821-11	METAL CHIP	1K	5%	1/16W
R256	1-216-821-11	METAL CHIP	1K	5%	1/16W
R257	1-216-821-11	METAL CHIP	1K	5%	1/16W
R258	1-216-821-11	METAL CHIP	1K	5%	1/16W
R259	1-216-029-00	METAL CHIP	150	5%	1/10W

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
		< SWITCH >	
S251	1-771-331-21	SWITCH, PUSH (1 KEY) (EJECT➡)	
		FP-249 MOUNT (Not supplied)	
		*************************	
			(Ref.No.;1000Series)
	3-965-552-01	HOLDER(T), SENSOR	
		< HOLE ELEMENT >	
H001	8-719-061-28	DIODE HW-105C-FT-V (S REEL)	
H002	8-719-061-28	DIODE HW-105C-FT-V (T REEL)	
		< TRANSISTOR >	
Q001	8-729-907-25	PHOTO TRANISTOR PT4850F (TAPE TOP)	
		< SWITCH >	
S001	1-692-614-11	SWITCH, PUSH (3 KEY)	
	1-658-213-11	FP-355 FLEXIBLE BOARD	
		*********************	
			(Ref.No.;1000Series)
		< DIODE >	
D001	8-719-988-42	DIODE GL453	
	1-658-214-11	FP-356 FLEXIBLE BOARD	
		*********************	
			(Ref.No.;1000Series)
	3-965-551-01	HOLDER(S), SENSOR	
		< TRANSISTOR >	
Q002	8-729-907-25	PHOTO TRANISTOR PT4850F (TAPE END)	
	A-7074-135-A	MA-374 (HXRIBO) BOARD, COMPLETE	(TR918E)
		**	
	A-7074-153-A	MA-374 (LO) BOARD, COMPLETE	(TR317E/TR417E)
		**	
	A-7074-157-A	MA-374 (O) BOARD, COMPLETE (TR427E)	
		************************************	
	A-7074-167-A	MA-374 (HMMBO) BOARD, COMPLETE	(TR617E/TR717E)
		**	
			(Ref.No.;3000Series)
		< CAPACITOR >	
C301	1-107-686-11	TANTAL. CHIP 4.7uF 20% 16V	(TR918E)
C302	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C303	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C304	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C305	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C321	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	(TR317E/TRV417E)
C322	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C323	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(TR918E)
C325	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C326	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C327	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TR918E)
C328	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TR918E)
C329	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C330	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C331	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(TR918E)
C332	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(TR918E)
C333	1-110-563-11	CERAMIC CHIP 0.068uF 10% 16V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C334	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C335	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C336	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C337	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C338	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C339	1-110-563-11	CERAMIC CHIP 0.068uF 10% 16V	(TR918E)
C340	1-110-563-11	CERAMIC CHIP 0.068uF 10% 16V	(TR918E)
C341	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	(TR317E/TR417E/TR427E/TR617E/TR717E
C342	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C343	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	(TR918E)
C344	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	(TR918E)
C345	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	(TR918E)
C346	1-164-245-11	CERAMIC CHIP 0.015uF 10% 25V	(TR918E)
C347	1-164-245-11	CERAMIC CHIP 0.015uF 10% 25V	(TR918E)
C348	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	(TR918E)
C349	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	(TR918E)
C350	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	(TR918E)
C351	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	(TR918E)

Ref. No.	Part No.	Description	Remarks
C352	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	(TR918E)
C353	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C354	1-104-851-11	TANTAL. CHIP 10uF 20% 4V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C355	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR918E)
C356	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C357	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	
C358	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
C359	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C360	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(TR317E/TR417E/TR427E/TR617E/TR717E)
C362	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TR918E)
C363	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TR918E)
C364	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TR918E)
		< CONNECTOR >	
* CN301	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P	
* CN302	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P	(TR918E)
CN303	1-779-334-11	CONNECTOR, FFC/FPC 20P	
		< DIODE >	
D301	8-719-078-23	DIODE DCR2815	(TR918E)
D302	8-719-060-65	DIODE LNA4905L01S0	
D303	8-719-067-44	DIODE CL-310IRS-X-TU	(TR317E/TR417E/TR427E/TR617E/TR717E)
D304	8-719-061-82	DIODE TLSU1002(TPX1,SONY)	
D305	8-719-073-01	DIODE MA111-TX	
D321	8-719-073-03	DIODE MA8082-(K8).S0	
D322	8-719-073-03	DIODE MA8082-(K8).S0	(TR918E)
D323	8-719-073-01	DIODE MA111-TX	
		< FUSE >	
⚠F301	1-533-874-11	FUSE, MICRO (0.2A 24V)	
		< IC >	
IC301	8-749-012-83	IC PNA4S13M01S0	(TR427E/TR617E/TR717E/TR918E)
IC321	8-759-643-77	IC BH7870KV-E2	(TR918E)
IC322	8-759-339-63	IC NJM2118V-TE2	(TR317E/TR417E/TR427E/TR617E/TR717E)
		< JACK >	
J321	1-691-737-11	JACK (SMALL TYPE) (MIC)	(TR918E)
J321	1-568-027-11	JACK, SMALL TYPE (MIC)	(TR317E/TR417E/TR427E/TR617E/TR717E)
		< COIL >	
L301	1-414-754-11	INDUCTOR 10uH	(TR918E)
L301	1-216-295-91	SHORT 0 (Note)	(TR317E/417/TR427E/TR617E/TR717E)

Note : Resistor is mounted to the location where L301 is printed.

Ref. No.	Part No.	Description	Remarks
		< TRANSISTOR >	
Q301	8-729-402-42	TRANSISTOR UN5213-TX	(TR317E/TR417E/TR427E/TR617E/TR717E)
Q302	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	(TR918E)
Q302	8-729-422-51	TRANSISTOR UN5110-QRS-TX	(TR317E/TR417E/TR427E/TR617E/TR717E)
Q303	8-729-026-48	TRANSISTOR 2SA1037AK-T146-Q	(TR918E)
Q304	8-729-920-85	TRANSISTOR 2SD1664-T100-QR	
Q321	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	(TR317E/TR417E/TR427E/TR617E/TR717E)
Q322	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	(TR317E/TR417E/TR427E/TR617E/TR717E)
		< RESISTOR >	
R301	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	(TR918E)
R302	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR918E)
R303	1-216-810-11	METAL CHIP 120 5% 1/16W	(TR918E)
R304	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R305	1-216-817-11	METAL CHIP 470 5% 1/16W	
R306	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR918E)
R307	1-216-815-11	METAL CHIP 330 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R308	1-216-311-00	METAL CHIP 6.8 5% 1/10W	(TR918E)
R308	1-216-309-00	METAL CHIP 5.6 5% 1/10W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R309	1-216-302-00	METAL CHIP 2.7 5% 1/10W	
R310	1-216-864-11	METAL CHIP 0 5% 1/16W	
R312	1-216-824-11	METAL CHIP 1.8K 5% 1/16W	
R313	1-216-864-11	METAL CHIP 0 5% 1/16W	
R314	1-216-837-11	METAL CHIP 22K 5% 1/16W	(TR617E/TR717E/TR918E)
R315	1-216-847-11	METAL CHIP 150K 5% 1/16W	(TR617E/TR717E/TR918E)
R321	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR918E)
R322	1-216-864-11	METAL CHIP 0 5% 1/16W	
R323	1-216-864-11	METAL CHIP 0 5% 1/16W	
R324	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR918E)
R325	1-216-839-11	METAL CHIP 33K 5% 1/16W	(TR918E)
R326	1-216-836-11	METAL CHIP 18K 5% 1/16W	(TR918E)
R327	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R328	1-216-817-11	METAL CHIP 470 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R329	1-216-833-91	RES-CHIP 10K 5% 1/16W	(TR918E)
R331	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	(TR918E)

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
R332	1-216-841-11	METAL CHIP 47K 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R333	1-216-841-11	METAL CHIP 47K 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R334	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	(TR918E)
R335	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R336	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	(TR918E)
R337	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	(TR918E)
R338	1-216-821-11	METAL CHIP 1K 5% 1/16W	(TR918E)
R339	1-216-821-11	METAL CHIP 1K 5% 1/16W	(TR918E)
R340	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R341	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R342	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	(TR918E)
R343	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	(TR918E)
R344	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R345	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R346	1-216-838-11	METAL CHIP 27K 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R347	1-216-838-11	METAL CHIP 27K 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R348	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R349	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R350	1-216-836-11	METAL CHIP 18K 5% 1/16W	(TR918E)
R351	1-216-836-11	METAL CHIP 18K 5% 1/16W	(TR918E)
R352	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR918E)
R353	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	(TR918E)
R354	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	(TR918E)
R355	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR918E)
R356	1-216-839-11	METAL CHIP 33K 5% 1/16W	(TR918E)
R357	1-216-839-11	METAL CHIP 33K 5% 1/16W	(TR918E)
R358	1-216-803-11	METAL CHIP 33 5% 1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E)
R359	1-216-832-11	METAL CHIP 8.2K 5% 1/16W	(TR918E)
R360	1-216-839-11	METAL CHIP 33K 5% 1/16W	(TR918E)
R361	1-216-836-11	METAL CHIP 18K 5% 1/16W	(TR918E)
R362	1-216-818-11	METAL CHIP 560 5% 1/16W	(TR918E)
R363	1-216-833-91	RES-CHIP 10K 5% 1/16W	(TR918E)
R364	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR918E)
R365	1-216-864-11	METAL CHIP 0 5% 1/16W	(TR918E)

Ref. No.	Part No.	Description	Remarks
		< SWITCH >	
S301	1-692-605-11	SWITCH, SLIDE (LIGHT ON/AUTO/OFF)	(TR617E/TR717E/TR918E)
S302	1-771-331-51	SWITCH, PUSH (1 KEY) (PLAYER/VTR)	
S303	1-771-331-71	SWITCH, PUSH (1 KEY) (CAMERA)	
	A-7074-114-A	MA-375 (N-VLO) BOARD, COMPLETE (TRV37E) **	
	A-7074-191-A	MA-375 (VO) BOARD, COMPLETE **	(TRV47E/TRV48E)
	A-7074-121-A	MA-375 (N-VHMMBO) BOARD, COMPLETE **	(TRV57E/TRV67E)
	A-7074-127-A	MA-375 (N-VHXRIBO) BOARD, COMPLETE **	(TRV87E)
			(Ref.No.;3000Series)
		< CAPACITOR >	
C301	1-107-686-11	TANTAL. CHIP 4.7uF 20% 16V	(TRV87E)
C302	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C303	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C304	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C305	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C322	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C323	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(TRV87E)
C325	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C326	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C327	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TRV87E)
C328	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TRV87E)
C329	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C330	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C331	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(TRV87E)
C332	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(TRV87E)
C333	1-110-563-11	CERAMIC CHIP 0.068uF 10% 16V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C334	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C335	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C336	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C337	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)

Ref. No.	Part No.	Description	Remarks
C338	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C339	1-110-563-11	CERAMIC CHIP 0.068uF 10% 16V	(TRV87E)
C340	1-110-563-11	CERAMIC CHIP 0.068uF 10% 16V	(TRV87E)
C341	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C342	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C343	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	(TRV87E)
C344	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	(TRV87E)
C345	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	(TRV87E)
C346	1-164-245-11	CERAMIC CHIP 0.015uF 10% 25V	(TRV87E)
C347	1-164-245-11	CERAMIC CHIP 0.015uF 10% 25V	(TRV87E)
C348	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	(TRV87E)
C349	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	(TRV87E)
C350	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	(TRV87E)
C351	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	(TRV87E)
C352	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	(TRV87E)
C353	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C354	1-104-851-11	TANTAL. CHIP 10uF 20% 4V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C355	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV87E)
C356	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C357	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	
C358	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
C359	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C360	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
C362	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TRV87E)
C363	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TRV87E)
C364	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	(TRV87E)
		< CONNECTOR >	
* CN301	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P	
* CN302	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P	(TRV87E)
CN303	1-779-334-11	CONNECTOR, FFC/FPC 20P	
		< DIODE >	
D301	8-719-078-23	DIODE DCR2815	(TRV87E)
D302	8-719-060-65	DIODE LNA4905L01S0	
D303	8-719-067-44	DIODE CL-310IRS-X-TU	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
D304	8-719-061-82	DIODE TLSU1002(TPX1,SONY)	
D305	8-719-073-01	DIODE MA111-TX	

Ref. No.	Part No.	Description	Remarks
D321	8-719-073-03	DIODE MA8082-(K8).S0	
D322	8-719-073-03	DIODE MA8082-(K8).S0	(TRV87E)
D323	8-719-073-01	DIODE MA111-TX	
		< FUSE >	
⚠F301	1-533-874-11	FUSE, MICRO (0.2A 24V)	
		< FERRITE BEAD >	
FB321	1-414-760-21	FERRITE 0UH	
		< IC >	
IC301	8-749-012-83	IC PNA4S13M01S0	(TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
IC321	8-759-643-77	IC BH7870KV-E2	(TRV87E)
IC322	8-759-339-63	IC NJM2118V-TE2	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
		< JACK >	
J321	1-691-737-11	JACK (SMALL TYPE) (MIC)	(TRV87E)
J321	1-568-027-11	JACK, SMALL TYPE (MIC)	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
		< COIL >	
L301	1-414-754-11	INDUCTOR 10uH	(TRV87E)
L301	1-216-295-91	SHORT 0 (Note)	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
		< TRANSISTOR >	
Q301	8-729-402-42	TRANSISTOR UN5213-TX	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
Q302	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	(TRV87E)
Q302	8-729-422-51	TRANSISTOR UN5110-QRS-TX	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
Q303	8-729-026-48	TRANSISTOR 2SA1037AK-T146-Q	(TRV87E)
Q304	8-729-920-85	TRANSISTOR 2SD1664-T100-QR	
Q316	8-729-046-98	TRANSISTOR XN09D58001S0	
Q321	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
Q322	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
Q327	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
Q328	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
Q332	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
		< RESISTOR >	
R301	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	(TRV87E)
R302	1-216-864-11	METAL CHIP 0 5% 1/16W	(TRV87E)
R303	1-216-810-11	METAL CHIP 120 5% 1/16W	(TRV87E)
R304	1-216-864-11	METAL CHIP 0 5% 1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R305	1-216-817-11	METAL CHIP 470 5% 1/16W	

Note : Resistor is mounted to the location where L301 is printed.

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description			Remarks
R306	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV87E)
R307	1-216-815-11	METAL CHIP	330	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R308	1-216-311-00	METAL CHIP	6.8	5%	1/10W (TRV87E)
R308	1-216-309-00	METAL CHIP	5.6	5%	1/10W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R309	1-216-302-00	METAL CHIP	2.7	5%	1/10W
R310	1-216-864-11	METAL CHIP	0	5%	1/16W
R312	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R313	1-216-864-11	METAL CHIP	0	5%	1/16W
R314	1-216-837-11	METAL CHIP	22K	5%	1/16W (TRV57E/TRV67E/TRV87E)
R315	1-216-847-11	METAL CHIP	150K	5%	1/16W (TRV57E/TRV67E/TRV87E)
R321	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV87E)
R322	1-216-864-11	METAL CHIP	0	5%	1/16W
R323	1-216-864-11	METAL CHIP	0	5%	1/16W
R324	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV87E)
R325	1-216-839-11	METAL CHIP	33K	5%	1/16W (TRV87E)
R326	1-216-836-11	METAL CHIP	18K	5%	1/16W (TRV87E)
R327	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R328	1-216-817-11	METAL CHIP	470	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R329	1-216-833-91	RES-CHIP	10K	5%	1/16W (TRV87E)
R331	1-216-825-11	METAL CHIP	2.2K	5%	1/16W (TRV87E)
R332	1-216-841-11	METAL CHIP	47K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R333	1-216-841-11	METAL CHIP	47K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R334	1-216-831-11	METAL CHIP	6.8K	5%	1/16W (TRV87E)
R335	1-216-829-11	METAL CHIP	4.7K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R336	1-216-825-11	METAL CHIP	2.2K	5%	1/16W (TRV87E)
R337	1-216-831-11	METAL CHIP	6.8K	5%	1/16W (TRV87E)
R338	1-216-821-11	METAL CHIP	1K	5%	1/16W (TRV87E)
R339	1-216-821-11	METAL CHIP	1K	5%	1/16W (TRV87E)
R340	1-216-830-11	METAL CHIP	5.6K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R341	1-216-834-11	METAL CHIP	12K	5%	1/16W
R342	1-216-830-11	METAL CHIP	5.6K	5%	1/16W (TRV87E)
R343	1-216-830-11	METAL CHIP	5.6K	5%	1/16W (TRV87E)
R344	1-216-834-11	METAL CHIP	12K	5%	1/16W
R345	1-216-831-11	METAL CHIP	6.8K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R346	1-216-838-11	METAL CHIP	27K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R347	1-216-838-11	METAL CHIP	27K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R348	1-216-837-11	METAL CHIP	22K	5%	1/16W
R349	1-216-837-11	METAL CHIP	22K	5%	1/16W
R350	1-216-836-11	METAL CHIP	18K	5%	1/16W (TRV87E)
R351	1-216-836-11	METAL CHIP	18K	5%	1/16W (TRV87E)
R352	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV87E)
R353	1-216-831-11	METAL CHIP	6.8K	5%	1/16W (TRV87E)
R354	1-216-831-11	METAL CHIP	6.8K	5%	1/16W (TRV87E)
R355	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV87E)
R356	1-216-839-11	METAL CHIP	33K	5%	1/16W (TRV87E)
R357	1-216-839-11	METAL CHIP	33K	5%	1/16W (TRV87E)
R358	1-216-803-11	METAL CHIP	33	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R359	1-216-832-11	METAL CHIP	8.2K	5%	1/16W (TRV87E)
R360	1-216-839-11	METAL CHIP	33K	5%	1/16W (TRV87E)
R361	1-216-836-11	METAL CHIP	18K	5%	1/16W (TRV87E)
R362	1-216-818-11	METAL CHIP	560	5%	1/16W (TRV87E)
R363	1-216-833-91	RES-CHIP	10K	5%	1/16W (TRV87E)
R364	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV87E)
R365	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV87E)
		< SWITCH >			
S301	1-692-605-11	SWITCH, SLIDE (LIGHT ON/AUTO/OFF)			(TRV57E/TRV67E/TRV87E)
S302	1-771-331-51	SWITCH, PUSH (1 KEY) (PLAYER/VTR)			
S303	1-771-331-71	SWITCH, PUSH (1 KEY) (CAMERA)			

A-7074-141-A PD-117 (P-VLO) BOARD, COMPLETE
(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
****
(Ref.No.;10000Series)

< CAPACITOR >

Ref. No.	Part No.	Description			Remarks
C5501	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C5503	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5504	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5505	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5506	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5507	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5508	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5509	1-107-687-11	TANTAL. CHIP	3.3uF	20%	20V
C5510	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5511	1-164-739-11	CERAMIC CHIP	560PF	5%	50V

Ref. No.	Part No.	Description			Remarks
C5512	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5513	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5514	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C5515	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C5516	1-164-217-11	CERAMIC CHIP	150PF	5%	50V
C5517	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C5518	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C5519	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C5520	1-113-994-11	TANTAL. CHIP	6.8uF	20%	16V
C5521	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C5522	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5523	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5524	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C5527	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C5529	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C5602	1-125-822-11	TANTALUM	10uF	20%	10V
C5603	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C5604	1-164-657-11	CERAMIC CHIP	0.015uF	10%	50V
C5605	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C5606	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
⚠C5607	1-131-959-91	CERAMIC CHIP	12PF	10%	3KV
C5608	1-125-822-11	TANTALUM	10uF	20%	10V
C5704	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		< CONNECTOR >			
CN5501	1-573-364-11	CONNECTOR, FFC/FPC 24P			
* CN5502	1-573-984-11	CONNECTOR, BOARD TO BOARD 10P			
CN5604	1-764-709-11	CONNECTOR, FFC/FPC (LIF) 10P			
CN5701	1-779-893-11	PIN, CONNECTOR (PC BOARD) 8P			
CN5702	1-779-064-11	PIN, CONNECTOR (PC BOARD) 12P			
CN5703	1-573-346-21	CONNECTOR, FFC/FPC 6P			
CN5704	1-778-508-21	PIN, CONNECTOR (PC BOARD) 6P			
CN5705	1-794-050-21	CONNECTOR, FFC/FPC (ZIF) 26P			
		< DIODE >			
D5502	8-713-102-80	DIODE 1T369-01-T8A			
D5601	8-719-073-01	DIODE MA111-(K8).S0			
D5602	8-719-062-44	DIODE PG1112H-TR			
		< FERRITE BEAD >			
FB5502	1-414-760-21	INDUCTOR CHIP	0UH		
FB5503	1-414-760-21	INDUCTOR CHIP	0UH		
		< IC >			
IC5501	8-759-591-94	IC RB5P0030M1			
IC5502	8-759-591-93	IC CM7019L3-T4			
IC5601	8-759-564-49	IC TC7W53FU(TE12R)			
IC5602	8-759-075-70	IC TA75S393F-TE85R			
IC5701	8-759-573-02	IC BU9735K-E2			
		< COIL >			
L5501	1-469-525-91	INDUCTOR	10uH		
L5504	1-469-525-91	INDUCTOR	10uH		
L5505	1-412-956-21	INDUCTOR	27uH		
L5601	1-419-387-21	INDUCTOR	100uH		

Ref. No.	Part No.	Description			Remarks
		< TRANSISTOR >			
Q5501	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
Q5601	8-729-042-29	TRANSISTOR	RN1104F(TPL3)		
Q5602	8-729-039-43	TRANSISTOR	FP216-TL		
Q5603	8-729-042-29	TRANSISTOR	RN1104F(TPL3)		
Q5604	8-729-042-58	TRANSISTOR	RN2102F(TPL3)		
		< RESISTOR >			
R5501	1-216-853-11	METAL CHIP	470K	5%	1/16W
R5503	1-218-895-11	METAL CHIP	100K	0.5%	1/16W
R5504	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5505	1-216-835-11	METAL CHIP	15K	5%	1/16W
R5506	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R5507	1-216-841-11	METAL CHIP	47K	5%	1/16W
R5508	1-216-843-11	METAL CHIP	68K	5%	1/16W
R5509	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5510	1-216-843-11	METAL CHIP	68K	5%	1/16W
R5511	1-216-857-11	METAL CHIP	1M	5%	1/16W
R5512	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5514	1-216-864-11	METAL CHIP	0	5%	1/16W
R5516	1-216-833-91	RES-CHIP	10K	5%	1/16W
R5517	1-216-849-11	METAL CHIP	220K	5%	1/16W
R5518	1-216-864-11	METAL CHIP	0	5%	1/16W
R5519	1-216-864-11	METAL CHIP	0	5%	1/16W
R5520	1-216-864-11	METAL CHIP	0	5%	1/16W
R5522	1-216-864-11	METAL CHIP	0	5%	1/16W
R5523	1-216-809-11	METAL CHIP	100	5%	1/16W
R5524	1-216-809-11	METAL CHIP	100	5%	1/16W
R5525	1-216-809-11	METAL CHIP	100	5%	1/16W
R5551	1-216-841-11	METAL CHIP	47K	5%	1/16W
R5553	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R5557	1-216-864-11	METAL CHIP	0	5%	1/16W
R5559	1-216-864-11	METAL CHIP	0	5%	1/16W
R5560	1-216-853-11	METAL CHIP	470K	5%	1/16W
R5566	1-216-864-11	METAL CHIP	0	5%	1/16W
R5567	1-216-864-11	METAL CHIP	0	5%	1/16W
R5568	1-216-864-11	METAL CHIP	0	5%	1/16W
R5608	1-216-864-11	METAL CHIP	0	5%	1/16W
R5609	1-216-833-91	RES-CHIP	10K	5%	1/16W
R5610	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R5611	1-216-845-11	METAL CHIP	100K	5%	1/16W
R5612	1-216-834-11	METAL CHIP	12K	5%	1/16W
R5613	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R5614	1-216-833-91	RES-CHIP	10K	5%	1/16W
R5616	1-216-810-11	METAL CHIP	120	5%	1/16W
R5617	1-216-837-11	METAL CHIP	22K	5%	1/16W
R5618	1-216-817-11	METAL CHIP	470	5%	1/16W
R5702	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R5704	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R5706	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R5707	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R5708	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R5711	1-216-809-11	METAL CHIP	100	5%	1/16W
R5712	1-216-855-11	METAL CHIP	680K	5%	1/16W
R5714	1-216-809-11	METAL CHIP	100	5%	1/16W

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
		< SWITCH >	
S5701	1-692-088-41	SWITCH, TACTILE	
S5702	1-692-088-41	SWITCH, TACTILE	
S5703	1-692-088-41	SWITCH, TACTILE	
S5704	1-692-088-41	SWITCH, TACTILE	
		< TRANSFORMER >	
⚠T5601	1-435-226-11	TRANSFORMER, INVERTER	

Ref. No.	Part No.	Description	Remarks
	A-7074-136-A	PJ-99 (HXRIBO) BOARD, COMPLETE	(TR918E)
		**	
	A-7074-158-A	PJ-99 (CO) BOARD, COMPLETE	(TR317E/TR417E/TR427E/TR617E)
		**	
	A-7074-168-A	PJ-99 (HMMBO) BOARD, COMPLETE	(TR717E)
		**	
			(Ref.No.;4000Series)
		< CAPACITOR >	
C101	1-110-569-11	TANTAL. CHIP 47uF 20% 6.3V	
C103	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C104	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	(TR918E)
C105	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	(TR918E)
C106	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	(TR918E)
		< CONNECTOR >	
CN101	1-779-330-21	CONNECTOR, FFC/FPC 12P	
		< DIODE >	
D101	8-719-062-16	DIODE 01ZA8.2(TPL3)	
D102	8-719-073-03	DIODE MA8082-(K8).S0	(TR717E/TR918E)
D103	8-719-062-16	DIODE 01ZA8.2(TPL3)	(TR717E/TR918E)
D104	8-719-062-16	DIODE 01ZA8.2(TPL3)	(TR717E/TR918E)
D105	8-719-988-61	DIODE 1SS355TE-17	
		< JACK >	
J101	1-537-747-21	TERMINAL BOARD (A/V)	(TR918E)
J101	1-694-643-11	TERMINAL BOARD (A/V)	(TR717E)
J101	1-537-747-41	TERMINAL BOARD (A/V)	(TR317E/TR417E/TR427E/TR617E)
		< COIL >	
L101	1-216-295-91	SHORT 0 (Note)	
L102	1-412-963-11	INDUCTOR 100uH	
L103	1-412-963-11	INDUCTOR 100uH	(TR918E)
L104	1-412-963-11	INDUCTOR 100uH	(TR918E)
		< TRANSISTOR >	
Q101	8-729-101-07	TRANSISTOR 2SB798-T1-DLDK	
Q102	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
		< RESISTOR >	
R102	1-216-138-00	METAL CHIP 3.3 5% 1/8W	
R103	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
R104	1-216-820-11	METAL CHIP 820 5% 1/16W	
R105	1-216-836-11	METAL CHIP 18K 5% 1/16W	
R108	1-216-821-11	METAL CHIP 1K 5% 1/16W	(TR717E/TR918E)
R109	1-216-821-11	METAL CHIP 1K 5% 1/16W	
		< VARISTOR >	
VDR101	1-801-862-11	VARISTOR, CHIP	
VDR102	1-801-862-11	VARISTOR, CHIP	(TR918E)

Ref. No.	Part No.	Description	Remarks
	A-7074-115-A	PJ-100 (N-VLO) BOARD, COMPLETE	(TRV47E/TRV57E:E,HK,AUS,CN,JE)
		**	
	A-7074-122-A	PJ-100 (N-VHMMBO) BOARD, COMPLETE	(TRV67E:E,HK,AUS,CN,JE)
		**	
	A-7074-128-A	PJ-100 (N-VHXRIBO) BOARD, COMPLETE	(TRV87E:E,HK,AUS,CN,JE)
		**	
	A-7074-139-A	PJ-100 (P-VLO) BOARD, COMPLETE	(TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK)
		**	
	A-7074-143-A	PJ-100 (P-VHMMBO) BOARD, COMPLETE	(TRV67E:AEP,EE,NE,RU,UK)
		**	
	A-7074-146-A	PJ-100 (P-VHXRIBO) BOARD, COMPLETE	(TRV87E:AEP,EE,NE,RU,UK)
		**	
			(Ref.No.;4000Series)
		< CAPACITOR >	
C101	1-110-569-11	TANTAL. CHIP 47uF 20% 6.3V	
C103	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	(TRV37E/TRV47E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/ TRV67E:AEP,EE,NE,RU,UK/TRV87E:AEP,EE,NE,RU,UK)
C104	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	(TRV87E:AEP,EE,NE,RU,UK)
C105	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	(TRV87E:AEP,EE,NE,RU,UK)
C106	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	(TRV87E:AEP,EE,NE,RU,UK)
		< CONNECTOR >	
CN101	1-779-330-21	CONNECTOR, FFC/FPC 12P	
		< DIODE >	
D101	8-719-062-16	DIODE 01ZA8.2(TPL3)	
D102	8-719-073-03	DIODE MA8082-(K8).S0	(TRV67E/TRV87E)
D103	8-719-062-16	DIODE 01ZA8.2(TPL3)	(TRV67E/TRV87E)
D104	8-719-062-16	DIODE 01ZA8.2(TPL3)	(TRV67E/TRV87E)
D105	8-719-988-61	DIODE 1SS355TE-17	
		< JACK >	
J101	1-537-747-21	TERMINAL BOARD (A/V)	(TRV87E)
J101	1-537-747-41	TERMINAL BOARD (A/V)	(TRV37E/TRV47E/TRV48E/TRV57E)
J101	1-694-643-11	TERMINAL BOARD (A/V)	(TRV67E)

Note : Resistor is mounted to the location where L101 is printed.

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
		< COIL >	
L101	1-216-295-91	SHORT 0 (Note)	
L102	1-216-295-91	SHORT 0 (Note)	(TRV47E/TRV57E:E,HK,AUS,CN,JE/TRV67E:E,HK,AUS,CN,JE/ TRV87E:E,HK,AUS,CN,JE)
L102	1-412-963-11	INDUCTOR 100uH	(TRV37E/TRV47E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/ TRV67E:AEP,EE,NE,RU,UK.0/TRV87E:AEP,EE,NE,RU,UK)
L103	1-216-295-91	SHORT 0 (Note)	(TRV87E:E,HK,AUS,CN,JE)
L103	1-412-963-11	INDUCTOR 100uH	(TRV87E:AEP,EE,NE,RU,UK)
L104	1-216-295-91	SHORT 0 (Note)	(TRV87E:E,HK,AUS,CN,JE)
L104	1-412-963-11	INDUCTOR 100uH	(TRV87E:AEP,EE,NE,RU,UK)
		< TRANSISTOR >	
Q101	8-729-101-07	TRANSISTOR 2SB798-T1-DLDK	
Q102	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
Q102	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
		< RESISTOR >	
R102	1-216-138-00	METAL CHIP 3.3 5% 1/8W	
R103	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
R104	1-216-820-11	METAL CHIP 820 5% 1/16W	
R105	1-216-836-11	METAL CHIP 18K 5% 1/16W	
R108	1-216-821-11	METAL CHIP 1K 5% 1/16W	(TRV67E/TRV87E)
R109	1-216-821-11	METAL CHIP 1K 5% 1/16W	
		< VARISTOR >	
VDR101	1-801-862-11	VARISTOR, CHIP	
VDR102	1-801-862-11	VARISTOR, CHIP (TRV87E)	

Ref. No.	Part No.	Description	Remarks
	A-7074-137-A	SE-100 (HXRIBO) BOARD, COMPLETE	(TR617E/TR717E/TR918E)
		***************************************	
			(Ref.No.;6000Series)
		< CAPACITOR >	
C451	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C452	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C453	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C454	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	
C455	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	
C456	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	
C457	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	
C458	1-110-666-11	ELECT CHIP 22uF 20% 6.3V	
C459	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	
C460	1-110-666-11	ELECT CHIP 22uF 20% 6.3V	
C462	1-110-501-11	CERAMIC CHIP 0.33uF 10% 16V	
C463	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C464	1-127-688-21	TANTAL. CHIP 10uF 20% 6.3V	
		< CONNECTOR >	
CN451	1-691-348-11	CONNECTOR, FFC/FPC (ZIF) 10P	

Note : Resistors are mounted to the location where L101,L102, L103, L104 are printed.

Ref. No.	Part No.	Description	Remarks
		< IC >	
IC451	8-759-489-19	IC uPC6756GR-8JG-E2	
		< COIL >	
L451	1-414-754-11	INDUCTOR 10uH	
		< RESISTOR >	
R451	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R452	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R453	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R454	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R455	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R456	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R457	1-216-833-91	RES-CHIP 10K 5% 1/16W	
R458	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R460	1-216-835-11	METAL CHIP 15K 5% 1/16W	
		< SENSOR >	
SE451	1-418-252-11	SENSOR, ANGULAR VELOCITY (PITCH)	
SE452	1-418-252-21	SENSOR, ANGULAR VELOCITY (YAW)	

Ref. No.	Part No.	Description	Remarks
	A-7074-116-A	SE-101 (N-VLO) BOARD, COMPLETE (TRV47E)	
		***************************************	
	A-7074-123-A	SE-101 (N-VHMMBO) BOARD, COMPLETE	(TRV57E:E,HK,AUS,CN,JE/TRV67E:E,HK,AUS,CN,JE)
		***************************************	
	A-7074-129-A	SE-101 (N-VHXRIBO) BOARD, COMPLETE	(TRV87E:E,HK,AUS,CN,JE)
		***************************************	
	A-7074-140-A	SE-101 (P-VLO) BOARD, COMPLETE	(TRV37E/TRV48E)
		***************************************	
	A-7074-144-A	SE-101 (P-VHMMBO) BOARD, COMPLETE	(TRV57E:AEP,EE,NE,RU,UK/TRV67E:AEP,EE,NE,RU,UK)
		***************************************	
	A-7074-147-A	SE-101 (P-VHXPIBO) BOARD, COMPLETE	(TRV87E:AEP,EE,NE,RU,UK)
		***************************************	
			(Ref.No.;6000Series)
		< CAPACITOR >	
C451	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	(TRV57E/TRV67E/TRV87E)
C452	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	(TRV57E/TRV67E/TRV87E)
C453	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	(TRV57E/TRV67E/TRV87E)
C454	1-104-847-11	TANTAL. CHIP 22uF 20% 4V	(TRV57E/TRV67E/TRV87E)
C455	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	(TRV57E/TRV67E/TRV87E)
C456	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	(TRV57E/TRV67E/TRV87E)
C457	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	(TRV57E/TRV67E/TRV87E)
C458	1-110-666-11	ELECT CHIP 22uF 20% 6.3V	(TRV57E/TRV67E/TRV87E)
C459	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	(TRV57E/TRV67E/TRV87E)
C460	1-110-666-11	ELECT CHIP 22uF 20% 6.3V	(TRV57E/TRV67E/TRV87E)

Ref. No.	Part No.	Description				Remarks
C462	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V	(TRV57E/TRV67E/TRV87E)
C463	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	(TRV57E/TRV67E/TRV87E)
C464	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V	(TRV57E/TRV67E/TRV87E)
C465	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	(TRV87E:AEP,EE,NE,RU,UK)
C466	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	(TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/ TRV67E:AEP,EE,NE,RU,UK/ TRV87E:AEP,EE,NE,RU,UK)
		< CONNECTOR >				
CN451	1-691-348-11	CONNECTOR, FFC/FPC (ZIF) 10P				
		< IC >				
IC451	8-759-489-19	IC uPC6756GR-8JG-E2				(TRV57E/TRV67E/TRV87E)
		< JACK >				
J451	1-695-514-21	JACK (SMALL TYPE) 1P				(TRV87E)
J451	1-695-514-11	JACK (SMALL TYPE) 1P				(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
		< COIL >				
L451	1-414-754-11	INDUCTOR	10uH			(TRV57E/TRV67E/TRV87E)
L452	1-412-963-11	INDUCTOR	100uH			(TRV87E)
L453	1-412-963-11	INDUCTOR	100uH			(TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/ TRV67E:AEP,EE,NE,RU,UK/ TRV87E:AEP,EE,NE,RU,UK)
L453	1-216-295-11	SHORT	0 (Note)			(TRV47E/TRV57E:E,HK,AUS,CN,JE/TRV67E:E,HK,AUS,CN,JE/ TRV87E:E,HK,AUS,CN,JE)
		< RESISTOR >				
R451	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R452	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R453	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R454	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R455	1-216-857-11	METAL CHIP	1M	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R456	1-216-833-91	RES-CHIP	10K	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R457	1-216-833-91	RES-CHIP	10K	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R458	1-216-857-11	METAL CHIP	1M	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R460	1-216-835-11	METAL CHIP	15K	5%	1/16W	(TRV57E/TRV67E/TRV87E)
R461	1-216-864-11	METAL CHIP	0	5%	1/16W	
		< SENSOR >				
SE451	1-418-252-11	SENSOR, ANGULAR VELOCITY (PITCH)				(TRV57E/TRV67E/TRV87E)
SE452	1-418-252-21	SENSOR, ANGULAR VELOCITY (YAW)				(TRV57E/TRV67E/TRV87E)
		< VARISTOR >				
VDR451	1-801-862-11	VARISTOR, CHIP				(TRV87E)
VDR452	1-801-862-11	VARISTOR, CHIP				
	A-7094-704-A	VC-234 (P-LO) BOARD, COMPLETE				(TR317E/TR417E/TR427E)
		**************************************				
	A-7094-705-A	VC-234 (P-HMMBO) BOARD, COMPLETE				(TR717E)
		**************************************				
	A-7094-706-A	VC-234 (P-HXIBO) BOARD, COMPLETE				(TR918E)
		**************************************				
	A-7094-708-A	VC-234 (P-VLO) BOARD, COMPLETE				(TRV37E/TRV47E/TRV48E)
		**************************************				
	A-7094-709-A	VC-234 (P-VHMMBO) BOARD, COMPLETE				(TRV67E)
		*************************************				
	A-7094-710-A	VC-234 (P-VHXRIBO) BOARD, COMPLETE				(TRV87E)
		**************************************				
	A-7094-807-A	VC-234 (P-MMBO) BOARD, COMPLETE				(TR617E)
		**************************************				
	A-7094-808-A	VC-234 (P-VHMBO) BOARD, COMPLETE				(TRV57E)
		**************************************				
						(Ref.No.;1000Series)
		< CAPACITOR >				
C101	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C102	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C103	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C105	1-119-661-11	TANTAL. CHIP	33uF	20%	6.3V	
C106	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	
C107	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	
C108	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C109	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C110	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
C111	1-164-217-11	CERAMIC CHIP	150PF	5%	50V	
C112	1-162-926-11	CERAMIC CHIP	82PF	5%	50V	
C113	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	
C114	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V	
C115	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C116	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C117	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	
C118	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C119	1-125-822-11	TANTALUM	10uF	20%	10V	
C121	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C123	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C125	1-164-156-11	CERAMIC CHIP	0.1uF		25V	
C128	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C130	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C131	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C133	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C134	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C135	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C136	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C137	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C138	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	

Note : Resistor is mounted to the location where L453 is printed.

Ref. No.	Part No.	Description			Remarks
C139	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C141	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C142	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C146	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C202	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C203	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C206	1-164-392-11	CERAMIC CHIP	390PF	5%	50V
C207	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C210	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C211	1-119-660-11	TANTAL. CHIP	4.7uF	20%	6.3V
C212	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C213	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C216	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C217	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C218	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C219	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C220	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C221	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C222	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C223	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C224	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C225	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C226	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C227	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C228	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C231	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C232	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C233	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C234	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C236	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C237	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C239	1-104-851-11	TANTAL. CHIP	10uF	20%	4V
C240	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C241	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C243	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C244	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C245	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C246	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C247	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C249	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C250	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C253	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C254	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V (TR918E/TRV87E)
C255	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C256	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C257	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C258	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C259	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C260	1-104-851-11	TANTAL. CHIP	10uF	20%	4V
C262	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C263	1-104-851-11	TANTAL. CHIP	10uF	20%	4V
C264	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C265	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C266	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C291	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C292	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C293	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C401	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C402	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C403	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C404	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C405	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C406	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C407	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C408	1-119-660-11	TANTAL. CHIP	4.7uF	20%	6.3V
C409	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C410	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C411	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C412	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C413	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C414	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C415	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C416	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C417	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C418	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C419	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C420	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C421	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C422	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C423	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C424	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C425	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C427	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C428	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C429	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C430	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C431	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C433	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C434	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C435	1-164-315-11	CERAMIC CHIP	470PF	2.00%	50V
C436	1-164-315-11	CERAMIC CHIP	470PF	2.00%	50V
C501	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C502	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C503	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C504	1-115-156-11	CERAMIC CHIP	1uF		10V
C505	1-115-156-11	CERAMIC CHIP	1uF		10V
C506	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
C507	1-104-851-11	TANTAL. CHIP	10uF	20%	4V
C508	1-115-156-11	CERAMIC CHIP	1uF		10V
C509	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C511	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C512	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C513	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C514	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C515	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C516	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C517	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C518	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C519	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C520	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C521	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C522	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C523	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C524	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C525	1-115-156-11	CERAMIC CHIP	1uF		10V (TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)

Ref. No.	Part No.	Description			Remarks
C526	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V (TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
C527	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C552	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C554	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C556	1-125-822-11	TANTALUM	10uF	20%	10V
C559	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C560	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C561	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C562	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C563	1-119-661-11	TANTAL. CHIP	33uF	20%	6.3V
C564	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C565	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C566	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C568	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C569	1-115-156-11	CERAMIC CHIP	1uF		10V
C570	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C571	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C572	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C573	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C641	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C644	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
C645	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C646	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C647	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (TRV87E)
C648	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C649	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C650	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR717E/TR918E/TRV67E/TRV87E)
C651	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C652	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V (TR717E/TR918E/TRV67E/TRV87E)
C653	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C654	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C655	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C656	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C657	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V (TRV87E)
C658	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C659	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V (TRV87E)
C660	1-162-928-11	CERAMIC CHIP	120PF	5%	50V (TRV87E)
C661	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (TRV87E)
C663	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (TRV87E)
C664	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TRV87E)
C665	1-162-919-11	CERAMIC CHIP	22PF	5%	50V (TRV87E)
C667	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C668	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C669	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V (TR717E/TR918E/TRV67E/TRV87E)
C671	1-126-246-11	ELECT CHIP	220uF	20%	4V
C672	1-126-246-11	ELECT CHIP	220uF	20%	4V (TR717E/TR918E/TRV67E/TRV87E)
C673	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR717E/TR918E/TRV67E/TRV87E)
C701	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C702	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C705	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C706	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V
C707	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C708	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C709	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C710	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V (TRV87E)
C711	1-104-851-11	TANTAL. CHIP	10uF	20%	4V
C712	1-104-851-11	TANTAL. CHIP	10uF	20%	4V (TR918E/TRV87E)
C713	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C714	1-119-661-11	TANTAL. CHIP	33uF	20%	6.3V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C715	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V
C716	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C717	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V (TR918E/TRV87E)
C718	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C719	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V (TR918E/TRV87E)
C720	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C721	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C722	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C723	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C724	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C725	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V (TR918E/TRV87E)
C726	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V (TR918E/TRV87E)
C727	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C728	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C729	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C730	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C731	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C732	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C733	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C734	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C735	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C736	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V (TR918E/TRV87E)
C737	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C738	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C739	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (TR918E/TRV87E)
C740	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

Ref. No.	Part No.	Description			Remarks
C741	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C742	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C743	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V (TR918E/TRV87E)
C744	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C745	1-162-925-11	CERAMIC CHIP	68PF	5%	50V
C746	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C747	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C753	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR918E/TRV87E)
C754	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V (TR918E/TRV87E)
C755	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V (TR918E/TRV87E)
C756	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V (TR918E/TRV87E)
C757	1-135-177-21	TANTALUM CHIP	1uF	20%	20V (TR918E/TRV87E)
C758	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C759	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR918E/TRV87E)
C760	1-119-660-11	TANTAL. CHIP	4.7uF	20%	6.3V (TR918E/TRV87E)
C761	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR918E/TRV87E)
C762	1-164-668-11	CERAMIC CHIP	510PF	5%	50V (TR918E/TRV87E)
C763	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR918E/TRV87E)
C764	1-127-688-21	TANTAL. CHIP	10uF	20%	6.3V (TR918E/TRV87E)
C765	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR918E/TRV87E)
C766	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C767	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V (TR918E/TRV87E)
C768	1-162-913-11	CERAMIC CHIP	8PF	0.50PF	50V (TR918E/TRV87E)
C769	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V (TR918E/TRV87E)
C770	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V (TR918E/TRV87E)
C771	1-162-921-11	CERAMIC CHIP	33PF	5%	50V (TR918E/TRV87E)
C772	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C773	1-162-922-11	CERAMIC CHIP	39PF	5%	50V (TR918E/TRV87E)
C774	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C775	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V (TR918E/TRV87E)
C777	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR918E/TRV87E)
C778	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TR918E/TRV87E)
C781	1-104-847-11	TANTAL. CHIP	22uF	20%	4V (TR918E/TRV87E)
C782	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (TR918E/TRV87E)
C801	1-115-156-11	CERAMIC CHIP	1uF		10V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)

Ref. No.	Part No.	Description			Remarks
C802	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C803	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C804	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C805	1-162-638-11	CERAMIC CHIP	1uF		16V
C806	1-119-749-11	TANTAL. CHIP	33uF	20%	4V
C807	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C809	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C810	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C811	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C813	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C814	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C815	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C817	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C818	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C819	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C820	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C821	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C822	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
C823	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C824	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C825	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C826	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C901	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C902	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C903	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C904	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C907	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C908	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C909	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C910	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C911	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C912	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C913	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C914	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C915	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C971	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C972	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
C973	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
C974	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V
		< CONNECTOR >			
CN101	1-766-346-21	CONNECTOR, FFC/FPC 16P			
CN151	1-766-644-21	CONNECTOR, FFC/FPC 8P			(TR717E/TR918E/TRV57E/TRV67E/TRV87E)
CN501	1-779-331-11	CONNECTOR, FFC/FPC 14P			
CN551	1-691-362-11	CONNECTOR, FFC/FPC (ZIF) 24P			
CN973	1-766-340-21	CONNECTOR, FFC/FPC 10P			(TR717E/TR918E/TRV57E/TRV67E/TRV87E)
CN971	1-766-352-21	CONNECTOR, FFC/FPC 22P			
CN972	1-766-350-21	CONNECTOR, FFC/FPC 20P			
CN973	1-774-635-21	CONNECTOR, FFC/FPC 10P			(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
CN974	1-766-644-21	CONNECTOR, FFC/FPC 8P			
CN975	1-785-760-11	CONNECTOR, FFC/FPC (ZIF) 45P			
CN976	1-766-340-21	CONNECTOR, FFC/FPC 10P			
CN977	1-774-631-21	CONNECTOR, FFC/FPC 6P (TR918E/TRV87E)			
CN978	1-766-342-21	CONNECTOR, FFC/FPC 12P			
CN979	1-766-345-21	CONNECTOR, FFC/FPC 15P			
CN980	1-766-346-21	CONNECTOR, FFC/FPC 16P			

VC-234

Ref. No.	Part No.	Description	Remarks
CN981	1-691-542-21	CONNECTOR, BOARD TO BOARD 48P	
CN982	1-766-346-21	CONNECTOR, FFC/FPC 16P	
		< DIODE >	
D201	8-719-055-86	DIODE KV1470TL1-3	
D202	8-719-055-86	DIODE KV1470TL1-3	
D203	8-719-027-76	DIODE 1SS357-TPH3	(TR918E/TRV87E)
D401	8-719-075-12	DIODE MA3XD21001S0	
D501	8-713-103-84	DIODE 1T379-01-T8A	
D502	8-719-073-01	DIODE MA111-TX	(TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
D551	8-719-073-01	DIODE MA111-(K8).S0	
D801	8-719-073-01	DIODE MA111-(K8).S0	
D802	8-719-073-01	DIODE MA111-(K8).S0	
D803	8-719-073-01	DIODE MA111-(K8).S0	
D804	8-719-073-01	DIODE MA111-(K8).S0	
D971	8-719-073-03	DIODE MA8082-(K8).S0	(TR717E/TR918E/TRV57E/TRV67E/TRV87E)
D972	8-719-062-16	DIODE 01ZA8.2(TPL3)	(TR717E/TR918E/TRV57E/TRV67E/TRV87E)
D973	8-719-073-03	DIODE MA8082-(K8).S0	(TR918E/TRV87E)
		< FERRITE BEAD >	
FB101	1-414-228-11	INDUCTOR CHIP 0UH	
FB102	1-414-228-11	INDUCTOR CHIP 0UH	
FB201	1-414-760-21	FERRITE 0UH	
FB202	1-414-760-21	FERRITE 0UH	(TR918E/TRV87E)
FB203	1-414-760-21	FERRITE 0UH	
FB204	1-414-760-21	FERRITE 0UH	
FB205	1-414-760-21	FERRITE 0UH	
FB206	1-414-760-21	FERRITE 0UH	(TR918E/TRV87E)
FB207	1-414-760-21	FERRITE 0UH	
FB291	1-414-760-21	FERRITE 0UH	
FB501	1-414-760-21	FERRITE 0UH	
FB503	1-500-284-21	INDUCTOR CHIP 0UH	
FB504	1-414-760-21	FERRITE 0UH	
FB506	1-414-760-21	FERRITE 0UH	(TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
FB507	1-216-864-11	METAL CHIP 0 5% 1/16W	(Note)
FB508	1-216-864-11	METAL CHIP 0 5% 1/16W	(Note)
FB641	1-414-760-21	FERRITE 0UH	
FB801	1-414-760-21	FERRITE 0UH	
FB901	1-414-760-21	FERRITE 0UH	
		< IC >	
IC101	8-752-093-69	IC CXA3265R-T4	
IC201	8-759-599-07	IC HG75C012FFL	
IC202	8-759-579-44	IC MB90097PFV-G-118-BND-ER	(TR918E/TRV87E)
IC202	8-759-647-02	IC BU2995-07FV-E2	(TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
IC203	8-752-403-45	IC CXD1450R-T6	(TR918E/TRV87E)
IC204	8-759-058-58	IC TC7S04FU(TE85R)	(TRV87E:E,AUS,HK,CN,JE)
IC205	8-759-058-60	IC TC7SU04FU(TE85R)	
IC291	8-759-536-93	IC M62371GP-600D	
IC401	8-759-640-85	IC CXA8096R-TBM	
IC501	8-752-386-72	IC CXD2444R-T4	
IC502	8-759-638-66	IC AD80013JSTRL	
IC551	8-759-637-96	IC uPD16877MA-6A5-E2	
IC552	8-759-444-87	IC NJM324V(TE2)	
IC641	8-759-599-37	IC AN2225FHQ-EB	
IC701	8-752-093-72	IC CXA3284R-T6	(TR918E/TRV87E)
IC701	8-752-093-74	IC CXA3285R-T6	(TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
IC751	8-759-566-96	IC AN2920FHQ-EB	(TR918E/TRV87E)
IC801	8-759-424-79	IC S-8423YFS-T2	
IC802	8-759-642-45	IC TL1596CPWR	
IC803	8-759-669-16	IC S579623PZ-TEB	
IC901	8-759-640-87	IC BR9016RFV-E2	
IC902	8-759-665-32	IC MB91192PFF-G-108-BND-ER	
		< COIL >	
L101	1-414-406-41	INDUCTOR 220uH	
L102	1-412-952-11	INDUCTOR 12uH	
L103	1-469-526-91	INDUCTOR 22uH	
L104	1-414-406-41	INDUCTOR 220uH	
L203	1-469-525-91	INDUCTOR 10uH	
L204	1-469-525-91	INDUCTOR 10uH	
L205	1-469-525-91	INDUCTOR 10uH	
L206	1-469-525-91	INDUCTOR 10uH	
L208	1-469-525-91	INDUCTOR 10uH	
L209	1-412-945-11	INDUCTOR 3.3uH	
L291	1-469-525-91	INDUCTOR 10uH	
L501	1-414-398-11	INDUCTOR 10uH	
L551	1-414-398-11	INDUCTOR 10uH	
L552	1-469-525-91	INDUCTOR 10uH	
L553	1-469-525-91	INDUCTOR 10uH	
L641	1-469-525-91	INDUCTOR 10uH	
L642	1-469-525-91	INDUCTOR 10uH	
L643	1-412-937-11	INDUCTOR 0.68uH	(TRV87E)
L644	1-469-525-91	INDUCTOR 10uH	
L751	1-412-948-11	INDUCTOR 5.6uH	(TR918E/TRV87E)
L752	1-412-957-11	INDUCTOR 33uH	(TR918E/TRV87E)
L753	1-412-957-11	INDUCTOR 33uH	(TR918E/TRV87E)
L754	1-469-525-91	INDUCTOR 10uH	(TR918E/TRV87E)
		< TRANSISTOR >	
Q101	8-729-047-19	TRANSISTOR 2SA1965-S-TL	
Q102	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q103	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q104	8-729-037-52	TRANSISTOR 2SC4738F-Y/GR(TPL3)	
Q105	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q106	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q112	8-729-037-61	TRANSISTOR RN2104F(TPL3)	
Q113	8-729-042-29	TRANSISTOR RN1104F(TPL3)	
Q203	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	
Q204	8-729-037-53	TRANSISTOR 2SA1832F-Y/GR(TPL3)	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)

Note : Resistors are mounted to the location where FB507,FB508 are printed.

Ref. No.	Part No.	Description			Remarks
Q205	8-729-037-53	TRANSISTOR	2SA1832F-Y/GR(TPL3)		
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q206	8-729-037-53	TRANSISTOR	2SA1832F-Y/GR(TPL3)		
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q208	8-729-037-53	TRANSISTOR	2SA1832F-Y/GR(TPL3)		
Q211	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
Q213	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
					(TR918E/TRV87E)
Q214	8-729-042-29	TRANSISTOR	RN1104F(TPL3) (TRV87E)		
Q401	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
Q551	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
Q552	8-729-037-53	TRANSISTOR	2SA1832F-Y/GR(TPL3)		
Q553	8-729-037-53	TRANSISTOR	2SA1832F-Y/GR(TPL3)		
Q554	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
Q701	8-729-045-78	TRANSISTOR	RN1110F(TPL3) (TRV87E)		
Q703	8-729-045-78	TRANSISTOR	RN1110F(TPL3)		
					(TR918E/TRV87E)
Q704	8-729-045-78	TRANSISTOR	RN1110F(TPL3)		
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q706	8-729-045-78	TRANSISTOR	RN1110F(TPL3)		
Q707	8-729-037-63	TRANSISTOR	UN9115J-(K8).SO		
Q712	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q713	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q801	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q802	8-729-037-52	TRANSISTOR	2SC4738F-Y/GR(TPL3)		
					(TR918E/TRV87E)
Q803	8-729-042-29	TRANSISTOR	RN1104F(TPL3)		
Q804	8-729-041-43	TRANSISTOR	HN1L02FU(TE85R)		
Q805	8-729-042-29	TRANSISTOR	RN1104F(TPL3)		
					(TR918E/TRV87E)
Q806	8-729-042-58	TRANSISTOR	RN2102F(TPL3)		
Q974	8-729-042-29	TRANSISTOR	RN1104F(TPL3)		
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
Q975	8-729-041-23	TRANSISTOR	NDS356AP		
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
		< RESISTOR >			
R101	1-216-804-11	METAL CHIP	39	5%	1/16W
R102	1-216-818-11	METAL CHIP	560	5%	1/16W
R103	1-216-864-11	METAL CHIP	0	5%	1/16W
R104	1-216-864-11	METAL CHIP	0	5%	1/16W
R105	1-216-809-11	METAL CHIP	100	5%	1/16W
R106	1-216-838-11	METAL CHIP	27K	5%	1/16W
R107	1-216-838-11	METAL CHIP	27K	5%	1/16W
R108	1-216-813-11	METAL CHIP	220	5%	1/16W
R109	1-216-813-11	METAL CHIP	220	5%	1/16W
R110	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R111	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R112	1-216-814-11	METAL CHIP	270	5%	1/16W
R113	1-216-813-11	METAL CHIP	220	5%	1/16W
R114	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R115	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R116	1-216-837-11	METAL CHIP	22K	5%	1/16W
R117	1-216-839-11	METAL CHIP	33K	5%	1/16W
R120	1-218-899-11	METAL CHIP	150K	0.5%	1/16W
R121	1-216-837-11	METAL CHIP	22K	5%	1/16W
R122	1-216-837-11	METAL CHIP	22K	5%	1/16W
R127	1-216-853-11	METAL CHIP	470K	5%	1/16W
R128	1-216-853-11	METAL CHIP	470K	5%	1/16W
R133	1-216-839-11	METAL CHIP	33K	5%	1/16W
R135	1-216-833-91	RES-CHIP	10K	5%	1/16W
R155	1-216-864-11	METAL CHIP	0	5%	1/16W
R201	1-216-864-11	METAL CHIP	0	5%	1/16W
					(TR317E/TR417E/TR427E/TR617E/TR717E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R202	1-216-864-11	METAL CHIP	0	5%	1/16W
					(TR918E/TRV87E)
R203	1-216-295-91	SHORT	0		
R204	1-216-833-91	RES-CHIP	10K	5%	1/16W
R205	1-216-845-11	METAL CHIP	100K	5%	1/16W
R206	1-216-864-11	METAL CHIP	0	5%	1/16W
R208	1-216-833-91	RES-CHIP	10K	5%	1/16W
R209	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R210	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R211	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R212	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R214	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R222	1-216-864-11	METAL CHIP	0	5%	1/16W
					(TR918E/TRV87E)
R223	1-216-864-11	METAL CHIP	0	5%	1/16W
					(TR317E/TR417E/TR427E/TR617E/TR717E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R224	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R225	1-216-821-11	METAL CHIP	1K	5%	1/16W
R226	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R228	1-216-817-11	METAL CHIP	470	5%	1/16W
R229	1-216-809-11	METAL CHIP	100	5%	1/16W
R230	1-216-840-11	METAL CHIP	39K	5%	1/16W
R231	1-216-820-11	METAL CHIP	820	5%	1/16W
R232	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R233	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R234	1-216-834-11	METAL CHIP	12K	5%	1/16W
R235	1-216-817-11	METAL CHIP	470	5%	1/16W
R236	1-216-813-11	METAL CHIP	220	5%	1/16W
R237	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R238	1-216-834-11	METAL CHIP	12K	5%	1/16W
R239	1-216-814-11	METAL CHIP	270	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R240	1-216-814-11	METAL CHIP	270	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R241	1-216-834-11	METAL CHIP	12K	5%	1/16W
R242	1-216-834-11	METAL CHIP	12K	5%	1/16W
R243	1-216-814-11	METAL CHIP	270	5%	1/16W
					(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R245	1-216-834-11	METAL CHIP	12K	5%	1/16W
R246	1-216-833-91	RES-CHIP	10K	5%	1/16W
R247	1-216-817-11	METAL CHIP	470	5%	1/16W
R249	1-216-834-11	METAL CHIP	12K	5%	1/16W
R250	1-216-857-11	METAL CHIP	1M	5%	1/16W
R252	1-216-835-11	METAL CHIP	15K	5%	1/16W
R253	1-216-835-11	METAL CHIP	15K	5%	1/16W
R254	1-216-864-11	METAL CHIP	0	5%	1/16W
R256	1-216-834-11	METAL CHIP	12K	5%	1/16W
R257	1-216-817-11	METAL CHIP	470	5%	1/16W
R258	1-216-821-11	METAL CHIP	1K	5%	1/16W
R259	1-216-833-91	RES-CHIP	10K	5%	1/16W

VC-234

Ref. No.	Part No.	Description				Remarks
R260	1-216-841-11	METAL CHIP	47K	5%	1/16W	(TRV87E)
R261	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR918E/TRV87E)
R262	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R263	1-216-841-11	METAL CHIP	47K	5%	1/16W	(TRV87E)
R264	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R265	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	(TR918E/TRV87E)
R266	1-216-841-11	METAL CHIP	47K	5%	1/16W	(TR918E/TRV87E)
R271	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR918E/TRV87E)
R273	1-216-857-11	METAL CHIP	1M	5%	1/16W	(TRV87E)
R274	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R276	1-216-864-11	METAL CHIP	0	5%	1/16W	
R278	1-216-864-11	METAL CHIP	0	5%	1/16W	
R279	1-216-864-11	METAL CHIP	0	5%	1/16W	
R280	1-216-864-11	METAL CHIP	0	5%	1/16W	
R281	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R283	1-216-864-11	METAL CHIP	0	5%	1/16W	
R401	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R402	1-216-851-11	METAL CHIP	330K	5%	1/16W	
R403	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R404	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R405	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R406	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R407	1-216-817-11	METAL CHIP	470	5%	1/16W	
R408	1-217-671-11	METAL CHIP	1	5%	1/10W	
R409	1-217-671-11	METAL CHIP	1	5%	1/10W	
R410	1-217-671-11	METAL CHIP	1	5%	1/10W	
R411	1-216-023-00	METAL CHIP	82	5%	1/10W	
R413	1-216-864-11	METAL CHIP	0	5%	1/16W	
R414	1-216-817-11	METAL CHIP	470	5%	1/16W	
R416	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R423	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R424	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R425	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R426	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R427	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R428	1-217-671-11	METAL CHIP	1	5%	1/10W	
R429	1-217-671-11	METAL CHIP	1	5%	1/10W	
R430	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R431	1-216-864-11	METAL CHIP	0	5%	1/16W	
R432	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R433	1-216-864-11	METAL CHIP	0	5%	1/16W	
R434	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R435	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R436	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R501	1-216-864-11	METAL CHIP	0	5%	1/16W	
R502	1-216-864-11	METAL CHIP	0	5%	1/16W	
R503	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R504	1-216-814-11	METAL CHIP	270	5%	1/16W	
R505	1-216-809-11	METAL CHIP	100	5%	1/16W	
R506	1-216-812-11	METAL CHIP	180	5%	1/16W	
R509	1-216-857-11	METAL CHIP	1M	5%	1/16W	
R512	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R515	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R516	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R517	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R518	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
R519	1-216-845-11	METAL CHIP	100K	5%	1/16W	(TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
R551	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R552	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R553	1-216-295-91	SHORT	0			
R555	1-216-843-11	METAL CHIP	68K	5%	1/16W	
R556	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R557	1-216-843-11	METAL CHIP	68K	5%	1/16W	
R558	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R559	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R560	1-216-797-11	METAL CHIP	10	5%	1/16W	
R561	1-216-857-11	METAL CHIP	1M	5%	1/16W	
R562	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R563	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R564	1-216-849-11	METAL CHIP	220K	5%	1/16W	
R565	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R566	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R567	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R568	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R569	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R570	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R571	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R572	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R573	1-216-815-11	METAL CHIP	330	5%	1/16W	
R574	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R575	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R576	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R577	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R644	1-216-804-11	METAL CHIP	39	5%	1/16W	(TR717E/TR918E/TRV67E/TRV87E)
R645	1-216-803-11	METAL CHIP	33	5%	1/16W	(TR717E/TR918E/TRV67E/TRV87E)
R646	1-216-804-11	METAL CHIP	39	5%	1/16W	(TR717E/TR918E/TRV67E/TRV87E)
R647	1-216-803-11	METAL CHIP	33	5%	1/16W	(TR717E/TR918E/TRV67E/TRV87E)
R648	1-216-804-11	METAL CHIP	39	5%	1/16W	
R649	1-216-803-11	METAL CHIP	33	5%	1/16W	
R650	1-218-847-11	METAL CHIP	1K	0.5%	1/16W	
R651	1-218-879-11	METAL CHIP	22K	0.5%	1/16W	
R652	1-218-876-11	METAL CHIP	16K	0.5%	1/16W	
R653	1-216-837-11	METAL CHIP	22K	5%	1/16W	(TRV87E)
R655	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R656	1-216-821-11	METAL CHIP	1K	5%	1/16W	(TR717E/TR918E/TRV67E/TRV87E)

Ref. No.	Part No.	Description				Remarks
R657	1-216-821-11	METAL CHIP	1K	5%	1/16W	(TR717E/TR918E/TRV67E/TRV87E)
R658	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R703	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R704	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R705	1-216-809-11	METAL CHIP	100	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R706	1-216-809-11	METAL CHIP	100	5%	1/16W	(TRV87E)
R707	1-216-841-11	METAL CHIP	47K	5%	1/16W	(TR918E/TRV87E)
R708	1-216-833-91	RES-CHIP	10K	5%	1/16W	(TR918E/TRV87E)
R710	1-216-836-11	METAL CHIP	18K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R711	1-216-849-11	METAL CHIP	220K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R712	1-216-847-11	METAL CHIP	150K	5%	1/16W	
R713	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R714	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R715	1-216-853-11	METAL CHIP	470K	5%	1/16W	(TR918E/TRV87E)
R716	1-216-864-11	METAL CHIP	0	5%	1/16W	
R717	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR918E/TRV87E)
R719	1-216-864-11	METAL CHIP	0	5%	1/16W	
R720	1-216-820-11	METAL CHIP	820	5%	1/16W	
R721	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R722	1-216-821-11	METAL CHIP	1K	5%	1/16W	(TR918E/TRV87E)
R723	1-216-864-11	METAL CHIP	0	5%	1/16W	
R724	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR918E/TRV87E)
R725	1-216-833-91	RES-CHIP	10K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R726	1-216-833-91	RES-CHIP	10K	5%	1/16W	(TRV87E)
R728	1-216-841-11	METAL CHIP	47K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R729	1-216-833-91	RES-CHIP	10K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R730	1-216-833-91	RES-CHIP	10K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R731	1-216-841-11	METAL CHIP	47K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R755	1-216-836-11	METAL CHIP	18K	5%	1/16W	(TR918E/TRV87E)
R756	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	(TR918E/TRV87E)
R757	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	(TR918E/TRV87E)
R760	1-216-835-11	METAL CHIP	15K	5%	1/16W	(TR918E/TRV87E)
R761	1-216-857-11	METAL CHIP	1M	5%	1/16W	(TR918E/TRV87E)
R763	1-218-879-11	METAL CHIP	22K	0.5%	1/16W	(TR918E/TRV87E)
R764	1-216-815-11	METAL CHIP	330	5%	1/16W	(TR918E/TRV87E)
R765	1-216-821-11	METAL CHIP	1K	5%	1/16W	(TR918E/TRV87E)
R766	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR918E/TRV87E)
R767	1-216-819-11	METAL CHIP	680	5%	1/16W	(TR918E/TRV87E)
R768	1-216-847-11	METAL CHIP	150K	5%	1/16W	(TR918E/TRV87E)
R770	1-216-847-11	METAL CHIP	150K	5%	1/16W	(TR918E/TRV87E)
R771	1-216-818-11	METAL CHIP	560	5%	1/16W	(TR918E/TRV87E)
R772	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	(TR918E/TRV87E)
R773	1-216-817-11	METAL CHIP	470	5%	1/16W	(TR918E/TRV87E)
R774	1-216-840-11	METAL CHIP	39K	5%	1/16W	(TR918E/TRV87E)
R775	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R777	1-216-864-11	METAL CHIP	0	5%	1/16W	(TR918E/TRV87E)
R801	1-216-841-11	METAL CHIP	47K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R802	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	(TR918E/TRV87E)
R803	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R805	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	(TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)
R806	1-216-821-11	METAL CHIP	1K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R807	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	(TR918E/TRV87E)
R808	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R809	1-216-821-11	METAL CHIP	1K	5%	1/16W	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R810	1-216-821-11	METAL CHIP	1K	5%	1/16W	(TR918E/TRV87E)
R811	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R813	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R814	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R815	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R816	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R817	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R818	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R819	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R820	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R821	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R822	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R823	1-216-833-91	RES-CHIP	10K	5%	1/16W	
R824	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R825	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R831	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R832	1-216-857-11	METAL CHIP	1M	5%	1/16W	
R833	1-218-903-11	METAL CHIP	220K	0.5%	1/16W	
R834	1-218-903-11	METAL CHIP	220K	0.5%	1/16W	
R835	1-218-911-11	METAL CHIP	470K	0.5%	1/16W	
R836	1-218-911-11	METAL CHIP	470K	0.5%	1/16W	

Ref. No.	Part No.	Description			Remarks
R837	1-216-845-11	METAL CHIP	100K	5%	1/16W
R838	1-216-845-11	METAL CHIP	100K	5%	1/16W
R839	1-216-845-11	METAL CHIP	100K	5%	1/16W
R840	1-216-821-11	METAL CHIP	1K	5%	1/16W
R843	1-216-821-11	METAL CHIP	1K	5%	1/16W
R844	1-216-821-11	METAL CHIP	1K	5%	1/16W
R845	1-216-821-11	METAL CHIP	1K	5%	1/16W
R847	1-216-845-11	METAL CHIP	100K	5%	1/16W
R848	1-216-821-11	METAL CHIP	1K	5%	1/16W
R849	1-216-821-11	METAL CHIP	1K	5%	1/16W
R865	1-216-841-11	METAL CHIP	47K	5%	1/16W
R866	1-216-854-11	METAL CHIP	560K	5%	1/16W
R867	1-216-821-11	METAL CHIP	1K	5%	1/16W
R868	1-216-853-11	METAL CHIP	470K	5%	1/16W
R869	1-216-853-11	METAL CHIP	470K	5%	1/16W
R870	1-216-853-11	METAL CHIP	470K	5%	1/16W
R871	1-216-857-11	METAL CHIP	1M	5%	1/16W
R872	1-216-845-11	METAL CHIP	100K	5%	1/16W
R873	1-216-845-11	METAL CHIP	100K	5%	1/16W
R874	1-216-821-11	METAL CHIP	1K	5%	1/16W
R875	1-216-821-11	METAL CHIP	1K	5%	1/16W
R876	1-219-570-11	RES-CHIP	10M	5%	1/16W
R877	1-216-821-11	METAL CHIP	1K	5%	1/16W
R878	1-216-845-11	METAL CHIP	100K	5%	1/16W
R879	1-216-853-11	METAL CHIP	470K	5%	1/16W
R880	1-216-853-11	METAL CHIP	470K	5%	1/16W
R881	1-216-853-11	METAL CHIP	470K	5%	1/16W
R882	1-216-817-11	METAL CHIP	470	5%	1/16W
R886	1-216-853-11	METAL CHIP	470K	5%	1/16W
R887	1-216-853-11	METAL CHIP	470K	5%	1/16W
R888	1-216-821-11	METAL CHIP	1K	5%	1/16W
R889	1-216-821-11	METAL CHIP	1K	5%	1/16W
R890	1-216-845-11	METAL CHIP	100K	5%	1/16W
R891	1-216-845-11	METAL CHIP	100K	5%	1/16W
R892	1-216-833-91	RES-CHIP	10K	5%	1/16W
R901	1-216-821-11	METAL CHIP	1K	5%	1/16W
R902	1-216-854-11	METAL CHIP	560K	5%	1/16W
R903	1-216-845-11	METAL CHIP	100K	5%	1/16W
R904	1-216-845-11	METAL CHIP	100K	5%	1/16W
R905	1-216-845-11	METAL CHIP	100K	5%	1/16W (TR317E/TR417E/TR427E/TR617E/TR717E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
R906	1-216-853-11	METAL CHIP	470K	5%	1/16W
R907	1-216-845-11	METAL CHIP	100K	5%	1/16W
R908	1-216-845-11	METAL CHIP	100K	5%	1/16W
R909	1-216-845-11	METAL CHIP	100K	5%	1/16W
R910	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R911	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R912	1-216-845-11	METAL CHIP	100K	5%	1/16W
R913	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R914	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R915	1-216-864-11	METAL CHIP	0	5%	1/16W
R916	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R917	1-216-845-11	METAL CHIP	100K	5%	1/16W
R918	1-216-833-91	RES-CHIP	10K	5%	1/16W
R919	1-216-833-91	RES-CHIP	10K	5%	1/16W
R920	1-216-841-11	METAL CHIP	47K	5%	1/16W

Ref. No.	Part No.	Description			Remarks
R921	1-216-845-11	METAL CHIP	100K	5%	1/16W
R922	1-216-845-11	METAL CHIP	100K	5%	1/16W
R923	1-216-853-11	METAL CHIP	470K	5%	1/16W
R924	1-216-853-11	METAL CHIP	470K	5%	1/16W
R925	1-216-841-11	METAL CHIP	47K	5%	1/16W
R930	1-216-841-11	METAL CHIP	47K	5%	1/16W
R931	1-216-841-11	METAL CHIP	47K	5%	1/16W
R932	1-216-864-11	METAL CHIP	0	5%	1/16W
R933	1-216-864-11	METAL CHIP	0	5%	1/16W
R934	1-216-845-11	METAL CHIP	100K	5%	1/16W
R972	1-216-864-11	METAL CHIP	0	5%	1/16W (TR717E/TR918E/TRV57E/TRV67E/TRV87E)
R973	1-216-821-11	METAL CHIP	1K	5%	1/16W
R974	1-216-821-11	METAL CHIP	1K	5%	1/16W (TR918E/TRV87E)
R977	1-216-864-11	METAL CHIP	0	5%	1/16W (TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)
R978	1-216-864-11	METAL CHIP	0	5%	1/16W
R979	1-216-864-11	METAL CHIP	0	5%	1/16W
R980	1-216-821-11	METAL CHIP	1K	5%	1/16W
R981	1-216-864-11	METAL CHIP	0	5%	1/16W
R984	1-216-857-11	METAL CHIP	1M	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R985	1-216-845-11	METAL CHIP	100K	5%	1/16W (TR717E/TR918E/TRV67E/TRV87E)
R985	1-216-841-11	METAL CHIP	47K	5%	1/16W (TR617E)
R985	1-216-833-91	RES-CHIP	10K	5%	1/16W (TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
R986	1-216-833-91	RES-CHIP	10K	5%	1/16W (TRV57E)
R986	1-216-837-11	METAL CHIP	22K	5%	1/16W (TR918E/TRV87E)
R986	1-216-841-11	METAL CHIP	47K	5%	1/16W (TR717E/TRV67E)
R986	1-216-845-11	METAL CHIP	100K	5%	1/16W (TR617E)
R987	1-216-857-11	METAL CHIP	1M	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
R988	1-216-841-11	METAL CHIP	47K	5%	1/16W (TRV57E)
R988	1-216-845-11	METAL CHIP	100K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV67E/TRV87E)
R988	1-216-837-11	METAL CHIP	22K	5%	1/16W (TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)
R989	1-216-833-91	RES-CHIP	10K	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV67E/TRV87E)
R989	1-216-845-11	METAL CHIP	100K	5%	1/16W (TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/TRV57E)
R990	1-216-295-91	SHORT	0		(TR317E/TR417E/TR427E/TR617E/TR717E/TR918E)
R992	1-216-864-11	METAL CHIP	0	5%	1/16W (TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
		< VIBRATOR >			
X501	1-760-321-11	VIBRATOR, CRYSTAL (28.375MHz)			
X641	1-767-029-21	VIBRATOR, CRYSTAL (17.734475MHz)			(TRV87E)
X801	1-767-980-21	VIBRATOR, CERAMIC (20MHz)			
X802	1-760-458-21	VIBRATOR, CRYSTAL (32.768kHz)			
X901	1-760-655-41	VIBRATOR, CRYSTAL (20MHz)			

Ref. No.	Part No.	Description			Remarks
	A-7073-855-A	VF-129 (P) BOARD, COMPLETE			
		**************************			
					(Ref.No.;3000Series)
		< CAPACITOR >			
C901	1-107-854-11	TANTAL. CHIP	68uF	20%	6.3V
C902	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C903	1-135-145-11	TANTALUM CHIP	0.47uF	10%	35V
C904	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C905	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C906	1-162-638-11	CERAMIC CHIP	1uF		16V
C907	1-104-563-11	FILM CHIP	0.1uF	5%	16V
C908	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C909	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
⚠C910	1-162-625-11	CERAMIC CHIP	0.0047uF	5%	50V
⚠C911	1-164-715-11	CERAMIC CHIP	0.0068uF	5%	50V
C912	1-107-854-11	TANTAL. CHIP	68uF	20%	6.3V
C913	1-135-145-11	TANTALUM CHIP	0.47uF	10%	35V
C914	1-113-984-11	TANTAL. CHIP	1.5uF	20%	35V
C915	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C916	1-164-611-11	CERAMIC CHIP	0.001uF	10%	500V
		< CONNECTOR >			
* CN901	1-785-379-01	HOUSING, CONNECTOR			
* CN902	1-580-057-11	PIN, CONNECTOR (SMD) 4P			
		< DIODE >			
D901	8-719-951-21	DIODE PR1102W-TR			
D903	8-719-073-01	DIODE MA111-(K8).S0			
		< IC >			
IC901	8-759-196-14	IC BA7149F-E2			
		< COIL >			
L901	1-412-031-11	INDUCTOR CHIP	47uH		
L902	1-410-387-11	INDUCTOR CHIP	33uH		
⚠L903	1-402-680-21	COIL, FERRITE (HLC)(K)			
		< TRANSISTOR >			
Q901	8-729-230-63	TRANSISTOR	2SD1819A-QRS-TX		
Q902	8-729-106-68	TRANSISTOR	2SD1615-T1GLGK		
Q903	8-729-216-31	TRANSISTOR	2SA1163G-TE85L		
Q904	8-729-230-63	TRANSISTOR	2SD1819A-QRS-TX		
		< RESISTOR >			
R901	1-216-817-11	METAL CHIP	470	5%	1/16W
R902	1-216-817-11	METAL CHIP	470	5%	1/16W
R903	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R904	1-216-833-91	RES-CHIP	10K	5%	1/16W
R905	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R906	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R907	1-216-845-11	METAL CHIP	100K	5%	1/16W
R908	1-216-852-11	METAL CHIP	390K	5%	1/16W
R909	1-216-833-91	RES-CHIP	10K	5%	1/16W
R910	1-216-835-11	METAL CHIP	15K	5%	1/16W
R911	1-216-160-00	RES-CHIP	27	5%	1/8W
R912	1-216-857-11	METAL CHIP	1M	5%	1/16W
R916	1-218-881-11	METAL CHIP	27K	0.5%	1/16W
R917	1-218-893-11	METAL CHIP	82K	0.5%	1/16W
R918	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R919	1-216-843-11	METAL CHIP	68K	5%	1/16W
R920	1-216-837-11	METAL CHIP	22K	5%	1/16W
R921	1-216-795-11	RES-CHIP	6.8	5%	1/16W
R922	1-216-850-11	METAL CHIP	270K	5%	1/16W
R923	1-216-857-11	METAL CHIP	1M	5%	1/16W
R924	1-216-862-11	RES-CHIP	2.7M	5%	1/16W
R925	1-216-862-11	RES-CHIP	2.7M	5%	1/16W
R926	1-216-821-11	METAL CHIP	1K	5%	1/16W
R927	1-216-821-11	METAL CHIP	1K	5%	1/16W
R928	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R929	1-216-821-11	METAL CHIP	1K	5%	1/16W
R930	1-216-791-11	METAL CHIP	3.3	5%	1/16W
R931	1-217-671-11	METAL CHIP	1	5%	1/10W
R932	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
		< VARIABLE RESISTOR >			
RV903	1-238-852-11	RES, ADJ, CERMET 470			
RV904	1-238-095-11	RES, ADJ, CERMET 470K			
		< TRANSFORMER >			
⚠T901	1-453-124-11	TRANSFORMER ASSY, FLYBACK			
		< FLAT CABLE >			
⚠W901	1-540-019-21	SOCKET ASSY, CRT			

Ref. No.	Part No.	Description			Remarks
	A-7074-169-A	VL-28 (BO) BOARD, COMPLETE			
					(TR617E/TR717E/TR918E)
		**************************************			
					(Ref.No.;7000Series)
		< CAPACITOR >			
C151	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C153	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
		< CONNECTOR >			
CN151	1-766-644-21	CONNECTOR, FFC/FPC 8P			
		< COIL >			
L151	1-416-344-11	INDUCTOR	10uH		
		< TRANSISTOR >			
Q151	8-729-043-94	TRANSISTOR	CPH3106-PM-TL		
Q152	8-729-028-26	TRANSISTOR	2SK1829(TE85L)		
		< RESISTOR >			
R151	1-216-845-11	METAL CHIP	100K	5%	1/16W
R152	1-216-864-11	METAL CHIP	0	5%	1/16W
R153	1-216-813-11	METAL CHIP	220	5%	1/16W
R154	1-216-821-11	METAL CHIP	1K	5%	1/16W

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

VL-29

Ref. No.	Part No.	Description	Remarks
	A-7074-130-A	VL-29 (VHXRIBO) BOARD, COMPLETE	(TRV57E/TRV67E/TRV87E)
		**	
			(Ref.No.;7000Series)
		< CAPACITOR >	
C151	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C153	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
		< CONNECTOR >	
CN151	1-766-644-21	CONNECTOR, FFC/FPC 8P	
		< COIL >	
L151	1-416-344-11	INDUCTOR 10uH	
		< TRANSISTOR >	
Q151	8-729-043-94	TRANSISTOR CPH3106-PM-TL	
Q152	8-729-028-26	TRANSISTOR 2SK1829(TE85L)	
		< RESISTOR >	
R151	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R152	1-216-864-11	METAL CHIP 0 5% 1/16W	
R153	1-216-813-11	METAL CHIP 220 5% 1/16W	
R154	1-216-821-11	METAL CHIP 1K 5% 1/16W	
		MISCELLANEOUS	
		*************	
1	1-517-857-11	LIGHT, VIDEO	(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
13	1-694-384-11	TERMINAL BOARD, BATTERY	
15	1-672-663-21	FP-49 FLEXIBLE BOARD (TR918E/TRV87E)	
21	1-467-574-21	REMOTE COMMANDER (RMT-708)	(TR427E/TR617E/TR717E/TR918E/TRV47E/ TRV48E/TRV57E/TRV67E/TRV87E)
23	1-672-670-11	FP-43 FLEXIBLE BOARD	
51	1-475-621-11	SWITCH BLOCK, CONTROL (MR-8500)	
55	1-791-948-11	CABLE, FLEXIBLE FLAT (FFC-001)	
58	1-672-668-21	FP-62 FLEXIBLE BOARD	(TRV87E)
101	1-475-621-11	SWITCH BLOCK, CONTROL (MR-8500)	
104	1-791-948-11	CABLE, FLEXIBLE FLAT (FFC-001)	
108	1-803-844-81	DISPLAY, PANEL, LIQUID CRYSTAL	(TR317E/TR417E/TR427E/TR617E/TR717E)
108	A-7094-150-A	INDICATION LCD BLOCK ASSY (TR918E)	
117	1-672-668-21	FP-62 FLEXIBLE BOARD	(TR918E)
214	1-418-758-21	SWITCH BLOCK, CONTROL (SS-9700)	
217	1-676-298-11	FP-150 FLEXIBLE BOARD	
221	1-418-760-11	SWITCH BLOCK, CONTROL (FK-8500)	(TRV87E:E,HK,AUS,CN,JE)
221	1-418-760-21	SWITCH BLOCK, CONTROL (FK-8500)	(TR317E/TR417E/TR427E/TR617E/TR717E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
221	1-418-760-41	SWITCH BLOCK, CONTROL (FK-8500)	(TR918E/TRV87E:AEP,EE,NE,RU,UK)
225	1-672-673-11	FP-46 FLEXIBLE BOARD	(TR617E/TR717E/TR918E/TRV57E/TRV67E/TRV87E)
227	1-676-296-11	FP-147 FLEXIBLE BOARD	
230	1-672-671-11	FP-44 FLEXIBLE BOARD	(TR617E/TR717E/TR918E,TRV37E/TRV47E/ TRV48E/TRV57E/TRV67E/TRV87E)
230	1-676-297-11	FP-149 FLEXIBLE BOARD	(TR317E/TR417E/TR427E)
262	1-792-454-11	CABLE, FLEXIBLE FLAT (FFC-289)	
267	1-758-084-21	FILTER BLOCK, OPTICAL	(TR317E/TR417E/TR427E/TR918E/ TRV37E/TRV47E/TRV48E/TRV87E)
267	1-758-133-21	FILTER BLOCK, OPTICAL	(TR617E/TR717E/TRV57E/TRV67E)
269	8-848-729-01	DEVICE, LENS LSV-630A	
302	1-676-300-11	FP-152 FLEXIBLE BOARD	
304	1-960-161-11	HARNESS (DP-78)	
310	1-803-844-81	DISPLAY PANEL, LIQUID CRYSTAL	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
310	A-7094-150-A	INDICATION LCD BLOCK ASSY (TR918E)	
760	1-658-213-11	FP-355 FLEXIBLE BOARD	
762	1-657-786-13	FP-221 FLEXIBLE BOARD	
764	1-658-214-11	FP-356 FLEXIBLE BOARD	
803	1-657-785-11	FP-248 FLEXIBLE BOARD	
817	1-657-784-11	FP-220 FLEXIBLE BOARD	
D001	8-719-988-42	DIODE GL453	
IC201	A-7031-043-A	CCD BLOCK ASSY	(TR317E/TR417E/TR427E/TRV37E/TRV47E/TRV48E)
IC201	A-7031-046-A	CCD BLOCK ASSY (TR918E)	
IC201	A-7031-049-A	CCD BLOCK ASSY	(TR617E/TR717E/TRV57E/TRV67E)
IC201	A-7031-060-A	CCD BLOCK ASSY (TRV87E)	
LCD901	1-803-859-21	INDICATOR MODULE LIQUID CRYSTAL	(SERVICE)
⚠LED901	1-517-858-11	LIGHT, BACK	
M901	A-7048-899-A	DRUM BLOCK ASSY (DGH-0F1A-R) (PAL)	
M902	8-835-531-32	MOTOR, DC SCE-0601A/C-NP (CAPSTAN)	
M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
M905	1-763-262-11	MOTOR, STEPPING F630	
M906	1-763-046-21	MOTOR, STEPPING Z600	
MIC901	1-542-312-11	MICROPHONE (R)	
MIC902	1-542-312-11	MICROPHONE (L) (TR918E/TRV87E)	
⚠ND901	1-517-752-31	TUBE, FLUORESCENT, COLD CATHODE	(TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
S001	1-682-614-11	SWITCH, PUSH (3KEY)	(Hi8 MP,ME/MP,REC PROOF)
S002	1-572-688-11	SWITCH, PUSH (1 KEY) (C.C.LOCK)	
S901	1-762-436-15	SWITCH (ENCODER), ROTARY	
S910	1-771-848-11	SWITCH, PUSH	
SP901	1-504-753-41	SPEAKER (2.8CM)	
⚠V901	1-452-673-61	CRT ASSY (M01KXX90WB)	

Be sure to read “Precautions upon replacing CCD imager” on page 4-8 when changing the CCD imager.

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
		ACCESSORIES ***********	
	1-467-574-21	REMOTE COMMANDER (RMT-708)	(TR427E/TR617E/TR717E/TR918E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E)
⚠	1-475-599-11	ADAPTOR, AC	
	1-569-007-11	ADAPTOR, CONVERSION	(TRV47E:JE/TRV57E:JE/TRV67E:JE/TRV87E:JE)
	1-569-008-21	ADAPTOR, CONVERSION 2P	(TR317E:E,HK/TRV47E:E,HK/TRV57E:E,HK/TRV67E:E,HK/TRV87E:E,HK)
	1-575-334-11	CORD,CONNECTION (A/V)(1.5m)	(TR918E/TRV87E)
⚠	1-690-827-11	CORD SET, POWER	(TR417E:AEP,EE,NE,RU/TR427E:AEP,EE,NE,RU/TR617E/TR717E:AEP,EE,NE,RU/TR918E:AEP,EE,NE,RU/TRV37E:AEP,EENE,RU/TRV48E:AEP,EE,NE,RU/TRV57E:AEP,EE,NE,RU/TRV67E:AEP,EE,NE,RU/TRV87E:AEP,EE,NE,RU)
⚠	1-696-819-11	CORD,POWER	(TR317E:AUS/TRV47E:AUS/TRV57E:AUS/TRV67E:AUS/TRV87E:AUS)
	1-696-862-21	CORD,CONNECTION (A/V)(1.5m)	(TR317E/TR417E/TR427E/TR617E/TR717E/TRV37E/TRV47E/TRV48E/TRV57E/TRV67E)
⚠	1-769-608-11	CORD,POWER	(TR317E:E/TRV47E:E/TRV57E:E/TRV67E:E/TRV87E:E)
	1-770-783-11	CONNECTOR, CONVERSION (21 PIN)	(TR417E/TR427E/TR617E/TR717E/TR918E/TRV37E/TRV48E/TRV57E:AEP,EE,NE,RU,UK/TRV67E:AEP,EE,NE,RU,UK/TRV87E:AEP,EE,NE,RU,UK)
⚠	1-775-843-52	CORD,POWER (WITH FILTER)	(TR417E:UK/TR427E:UK/TR717E:UK/917:UK/TRV37E:UK/TRV57E:UK/TRV67E:UK/TRV87E:UK
⚠	1-782-476-11	CORD,POWER	(TR317E:CN/TRV47E:CN/TRV57E:CN/TRV67E:CN/TRV87E:CN)
⚠	1-783-374-11	CORD,POWER	(TR317E:HK/TRV47E:HK/TRV57E:HK/TRV67E:HK/TRV87E:HK)
⚠	1-790-073-11	CORD,POWER 2P	(TRV47E:JE/TRV57E:JE/TRV67E:JE/TRV87E:JE)
	3-868-321-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN)	(TR417E:EE,NE,RE,UK/TR427E:EE,NE,RU,UK/TR617E:EE,NE,RU/TR717E:EE,NE,RU,UK/TR918E:EE,NE,RU)
	3-868-321-21	MANUAL, INSTRUCTION (SPANISH/PORTURUESE)	(TR417E:AEP1/TR427E:AEP1/TR617E:AEP1/TR717E:AEP1/TR918E:AEP1)
	3-868-321-31	MANUAL, INSTRUCTION (GERMAN/ITALIAN)	(TR417E:AEP/TR427E:AEP/TR617E:AEP/TR717E:AEP,EE/TR918E:AEP)
	3-868-321-41	MANUAL, INSTRUCTION (FRENCH/DUTCH)	(TR417E:AEP2/TR427E:AEP2/TR617E:AEP2/TR717E:AEP2/TR918E:AEP2)
	3-868-321-51	MANUAL, INSTRUCTION (SWEDISH/POLISH)	(TR427E:EE,NE,RU/TR617E:EE,NE,RU/TR918E:EE,NE,RU)
	3-868-322-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN)	(TR317E:AUS,HK,CN)
	3-868-322-21	MANUAL, INSTRUCTION (FRENCH/GERMAN)	(TR317E:E)
	3-868-322-31	MANUAL, INSTRUCTION (ARABIC/PERSIAN)	(TR317E:E)
	3-868-322-41	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE)	(TR317E:CH)
	3-868-322-51	MANUAL, INSTRUCTION (TRADITIONAL CHINESE)	(TR317E:HK)
	3-868-324-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN)	(TRV37E:EE,NE,RU,UK/TRV48E:EE,NE,RU,UK/TRV57E:EE,NE,RU,UK/TRV67E:EE,NE,RU,UK/TRV87E:EE,NE,RU,UK)
	3-868-324-21	MANUAL, INSTRUCTION (SPANISH/PORTURUESE)	(TRV37E:AEP1/TRV48E:AEP1/TRV57E:AEP1/TRV67E:AEP1/TRV87E:AEP1)
	3-868-324-31	MANUAL, INSTRUCTION (GERMAN/ITALIAN)	(TRV37E:AEP/TRV48E:AEP/TRV57E:AEP/TRV67E:AEP/TRV87E:AEP)
	3-868-324-41	MANUAL, INSTRUCTION (FRENCH/DUTCH)	(TRV37E:AEP2/TRV48E:AEP2/TRV57E:AEP2/TRV67E:AEP2/TRV87E:AEP2)
	3-868-324-51	MANUAL, INSTRUCTION (SWEDISH/POLISH)	(TRV37E:EE,NE,RU/TRV48E:EE,NE,RU/TRV57E:EE,NE,RU/TRV67E:EE,NE,RU/TRV87E:EE,NE,RU)
	3-868-325-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN)	(TRV47E/TRV57E:E,HK,AUS,CN,JE/TRV67E:E,HK,AUS,CH,JE/TRV87E:E,HK,AUS,CH,JE)
	3-868-325-21	MANUAL, INSTRUCTION (FRENCH/GERMAN)	(TRV47E:E,JE/TRV57E:E,JE/TRV67E:E,JE/TRV87E:E,JE)
	3-868-325-31	MANUAL, INSTRUCTION (ARABIC/PERSIAN)	(TRV47E:E/TRV57E:E/TRV67E:E/TRV87E:E)
	3-868-325-41	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE)	(TRV47E:E,CN,JE/TRV57E:E,CN,JE/TRV67E:E,CH,JE/TRV87E:E,CH,JE)
	3-868-325-51	MANUAL, INSTRUCTION (TRADITIONAL CHINESE)	(TRV47E:HK/TRV57E:HK/TRV67E:HK/TRV87E:HK)
	3-987-015-01	BELT(S), SHOULDER	
	A-7094-141-A	NP-330 BATTERY PACK	

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

〈PARTS REFERENCE SHEET〉

You can find the parts position of location of mount locations applying to VC-234 board of a set.

VC-234 CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/
TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

SIDE A

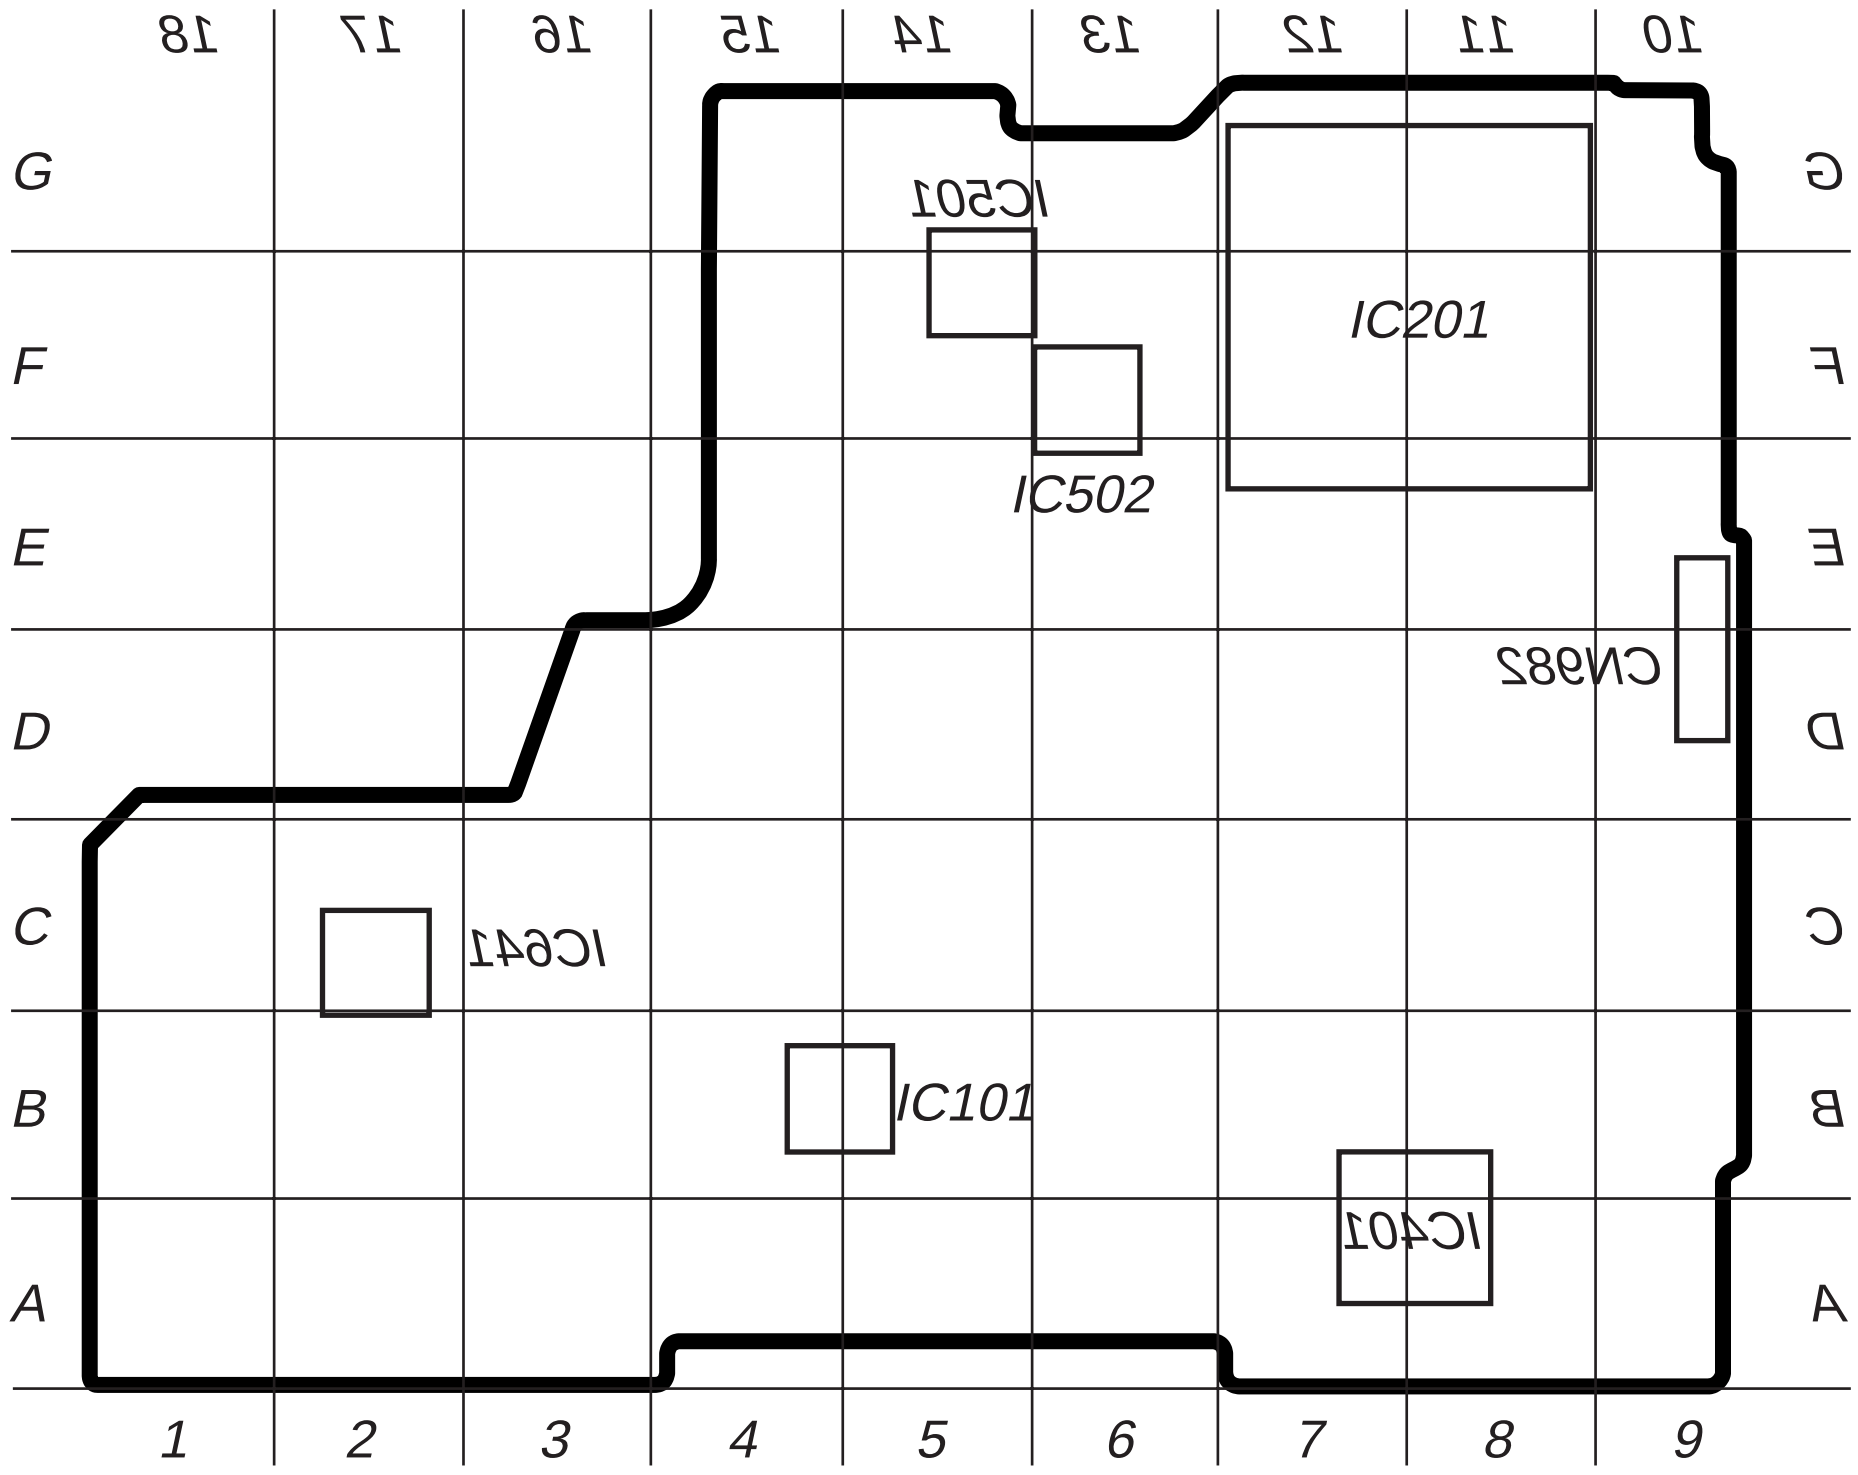
18
17
16
15
14
13
12
11
10
G
F
E
D
C
B
A
IC501
IC201
IC502
CN982
IC641
IC101
IC401
1
2
3
4
5
6
7
8
9

VC-234 CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/
TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

SIDE B

〈FOR CAMERA COLOR REPRODUCTION ADJUSTMENT〉

For 510H model and 760H TYPE S model

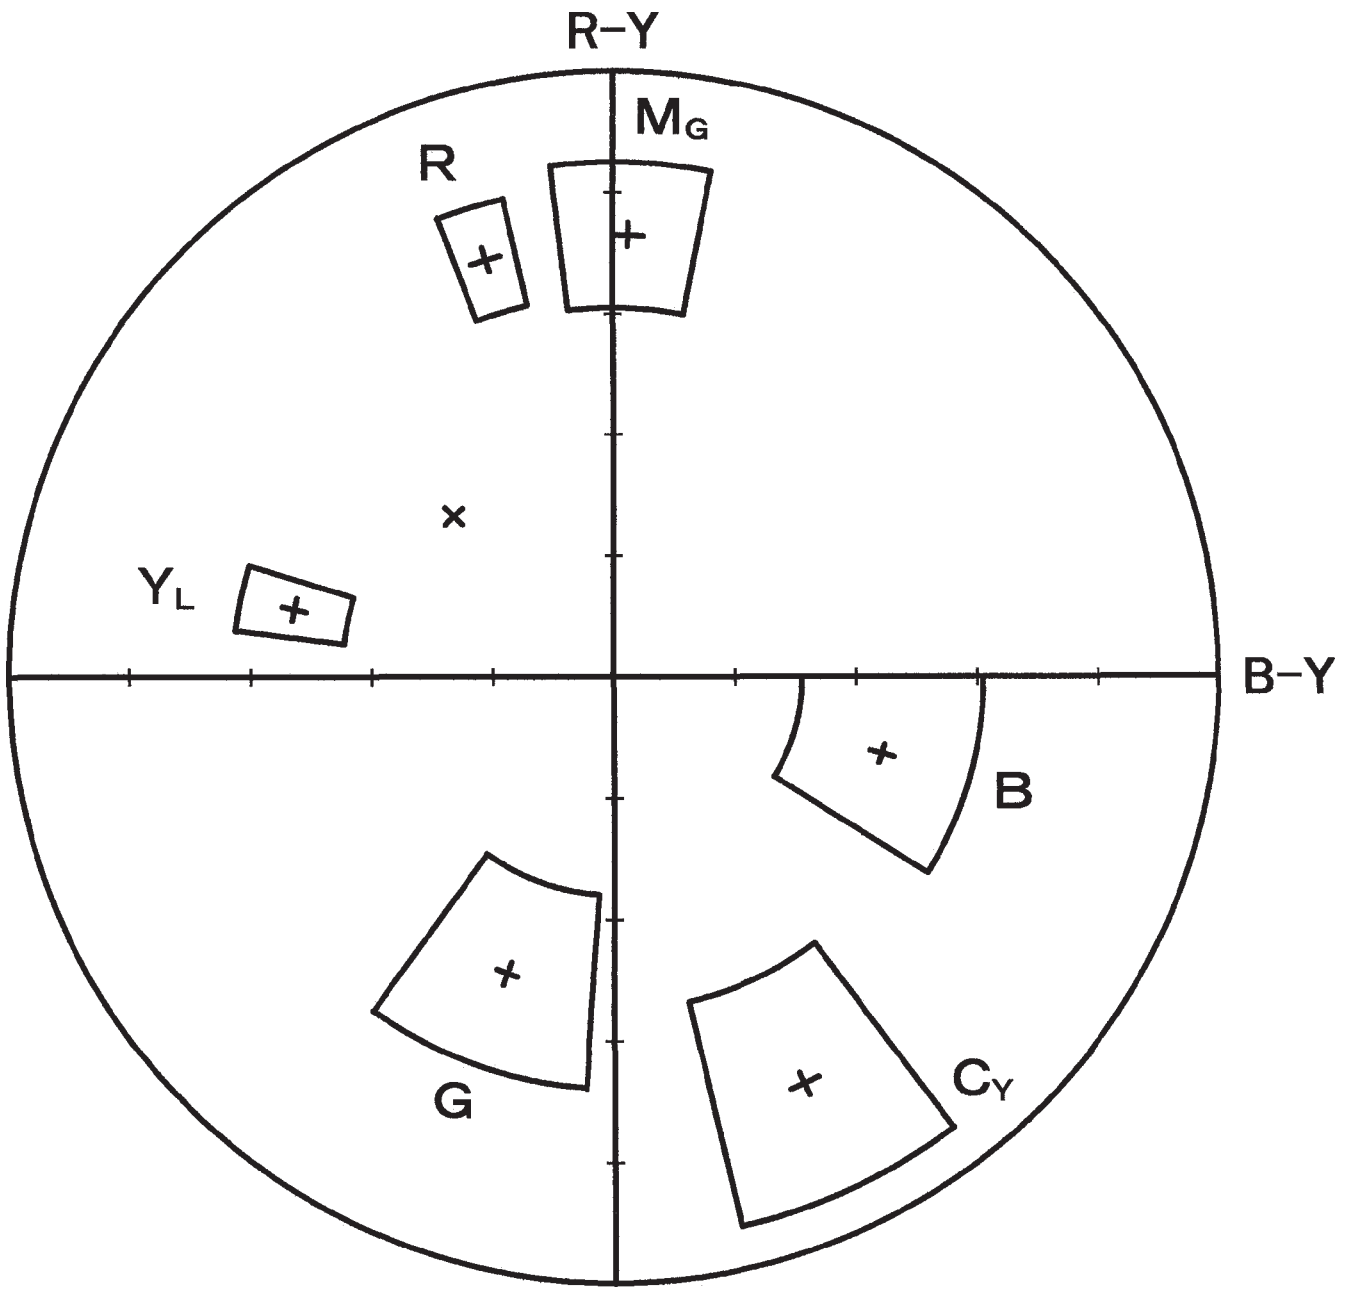

CCD-TR617E/TR717E/TR918E/
TRV57E/TRV67E/TRV87E

Take a copy of CAMERA COLOR REPRODUCTION FRAME and Parts referencesheets with a clear sheet for use.

For 760H TYPE P model

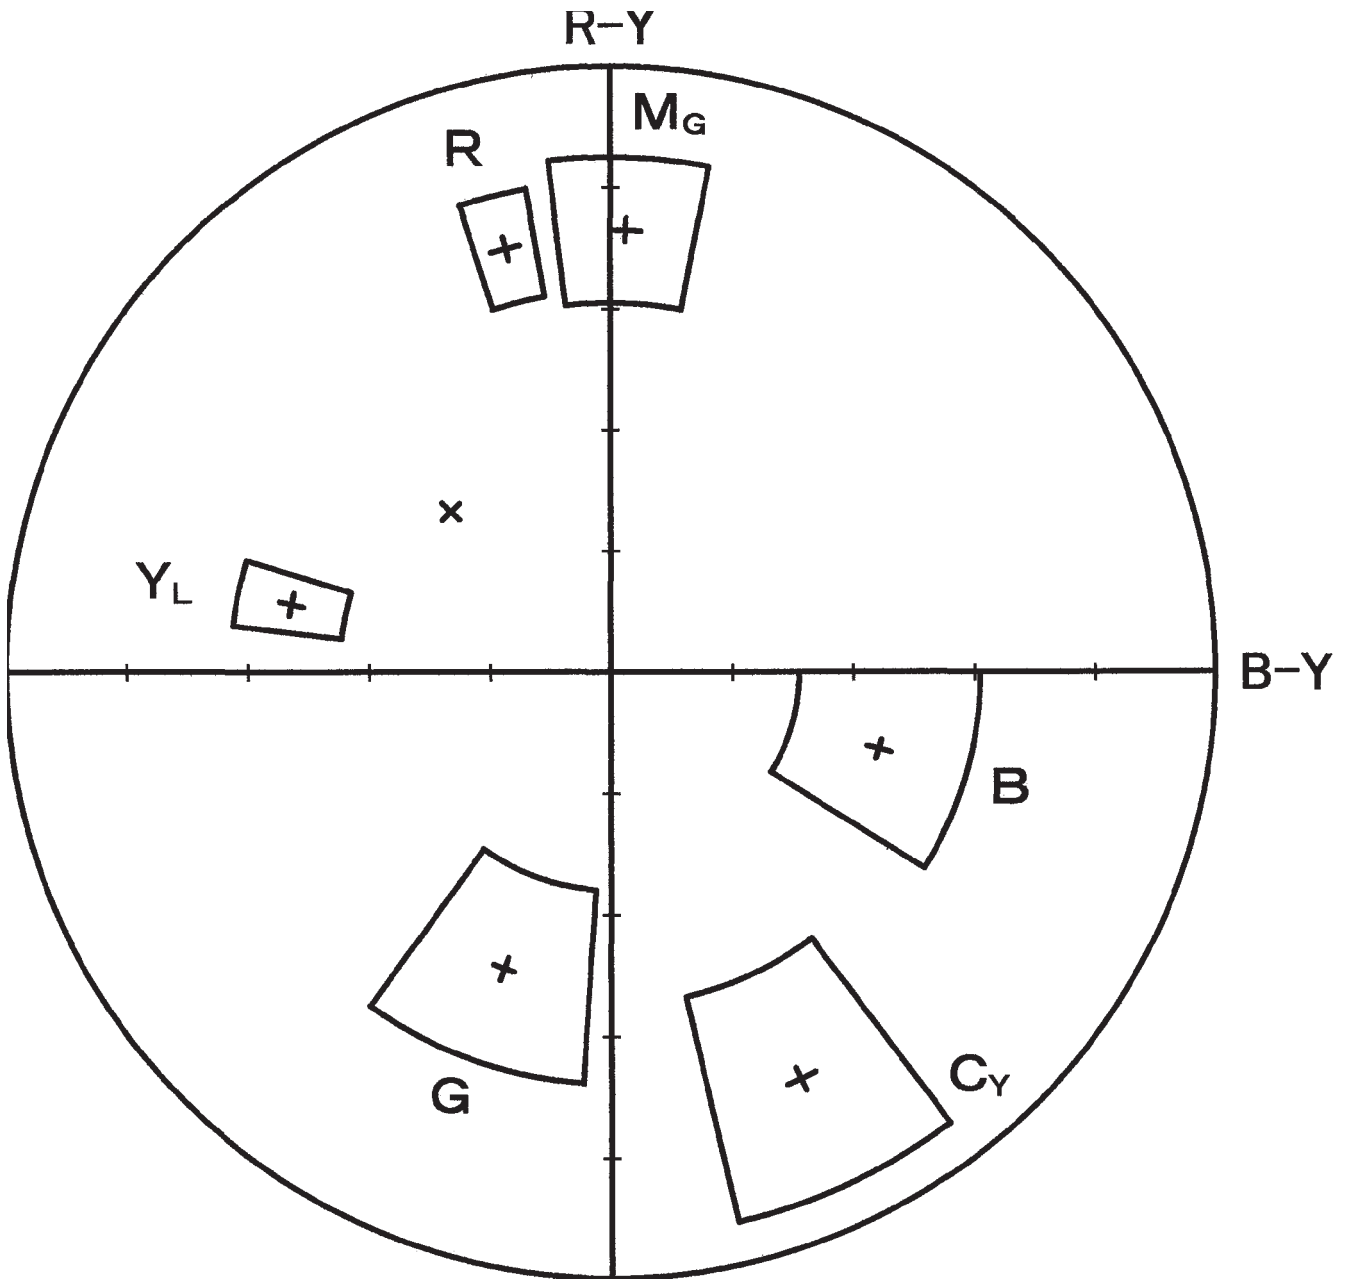

CCD-TR317E/TR417E/TR427E/
TRV37E/TRV47E/TRV48E

CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E/ TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E

9-974-197-11

Sony Corporation
Personal VIDEO Products Company

2000A1677-1
Printed in Japan ©2000.1
Published by Safety & Service Engineering Dept.

CCD-TR317E/TR417E/TR427E/TR617E/TR717E/TR918E
CCD-TRV37E/TRV47E/TRV48E/TRV57E/TRV67E/TRV87E
RMT-708

SONY®

SERVICE MANUAL

2000. 11

AEP Model
East European Model
North European Model
Russian Model
CCD-TR417E/TR427E/TR617E/TR717E/
TR918E/TRV37E/TRV48E/TRV57E/
TRV67E/TRV87E
UK Model
CCD-TR417E/TR427E/TR717E/
TR918E/TRV37E/TRV48E/
TRV57E/TRV67E/TRV87E
E Model
Hong Kong Model
Australian Model
Chinese Model
CCD-TR317E/TRV47E/TRV57E/
TRV67E/TRV87E
Tourist Model
CCD-TRV47E/TRV57E/TRV67E/TRV87E

CORRECTION-1

Correct your service manual as shown below.
(PV00-018)

Subject:
Change of panel name.
Change of part description.

SECTION 4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS
4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

MA-374/375 (MIC AMP) PRINTED WIRING BOARD
— Ref. No. MA-374/375 Board; 3,000 Series —

▨ : Changed portion.

Page	CORRECT
4-66	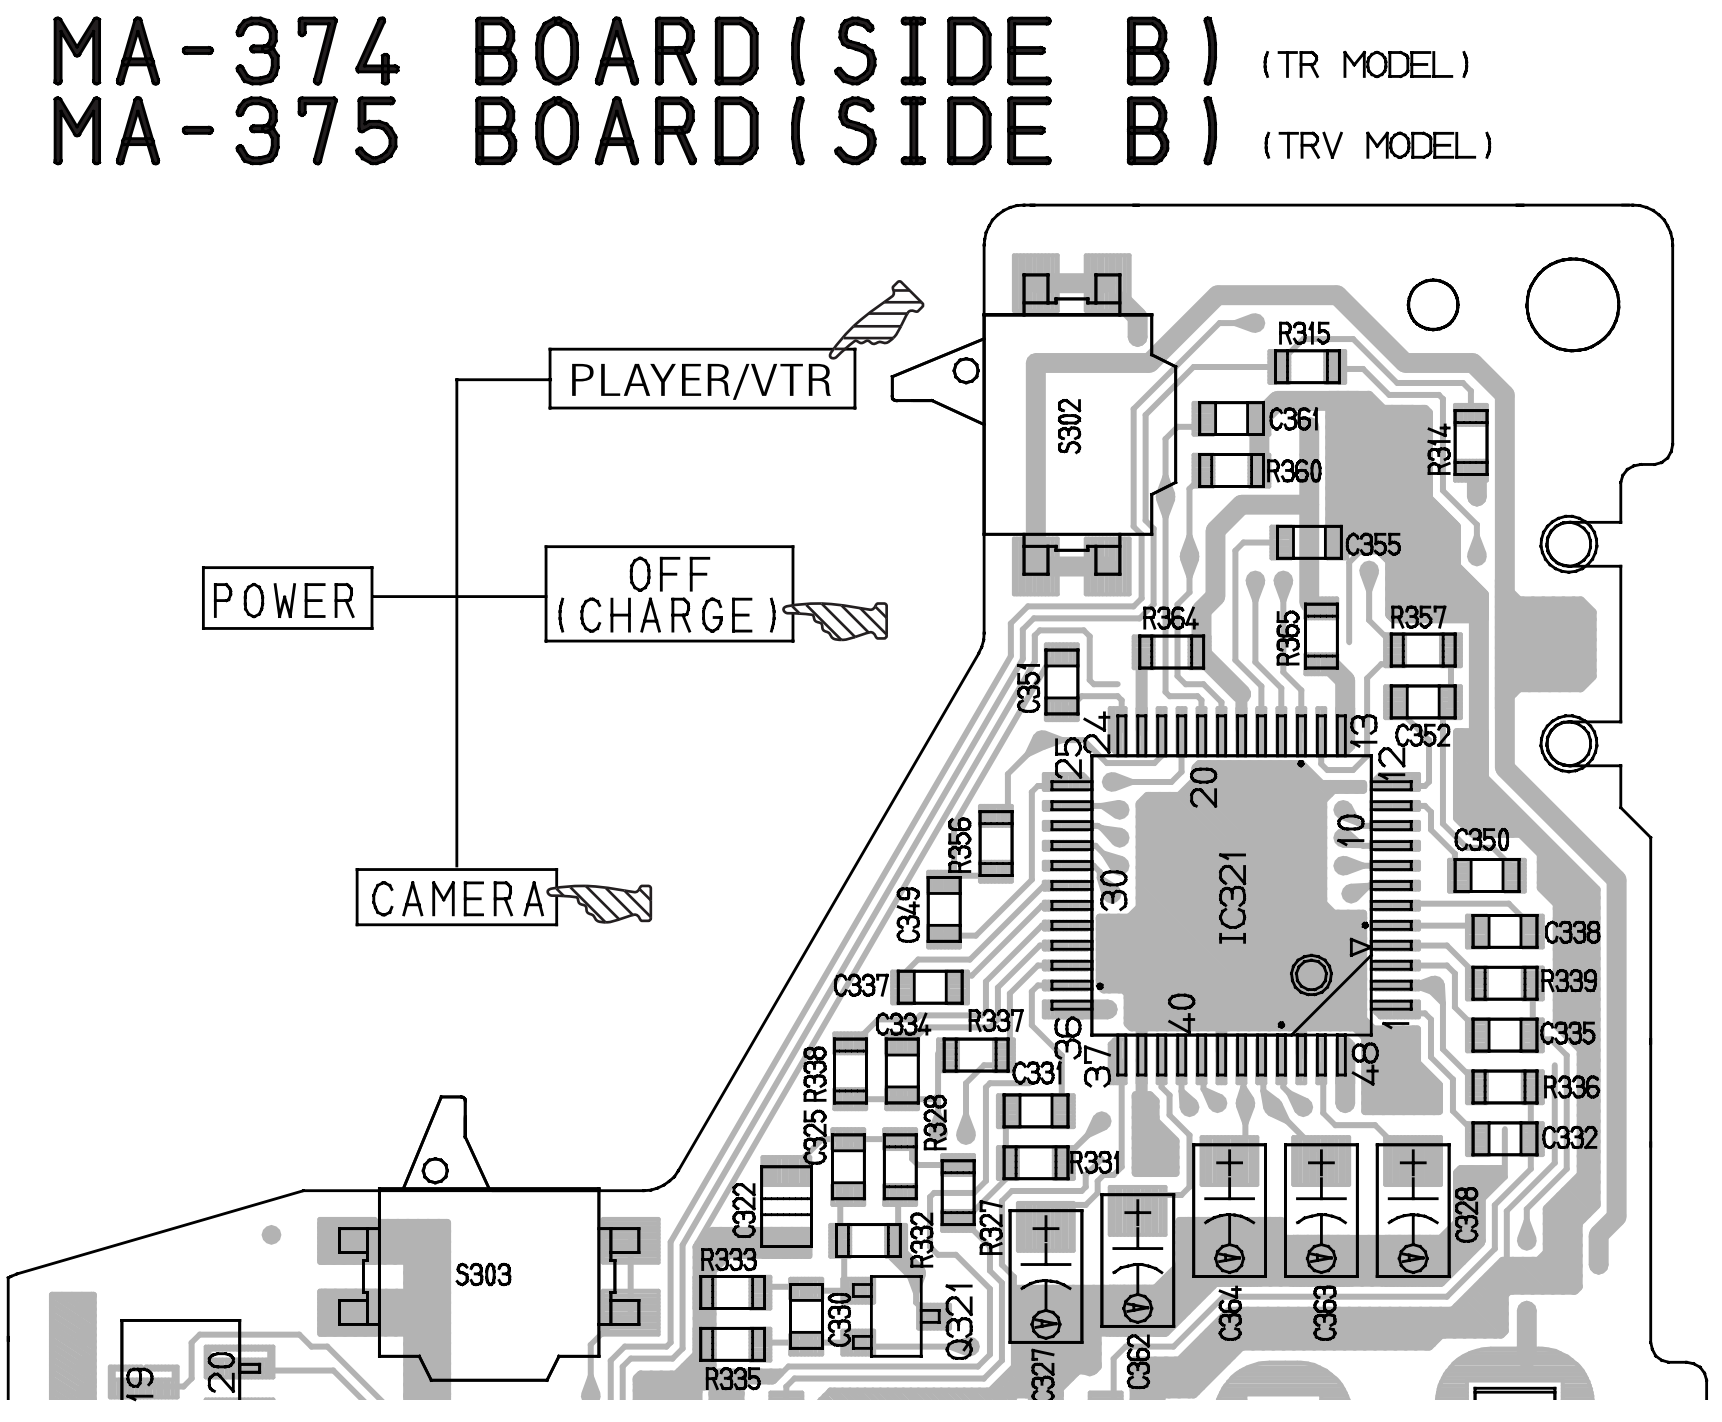 MA-374 BOARD(SIDE B) (TR MODEL) MA-375 BOARD(SIDE B) (TRV MODEL) PLAYER/VTR POWER OFF (CHARGE) CAMERA S302 S303 IC321 Q321 R315 C361 R360 R314 C355 R364 R365 R357 C351 C352 C350 R356 C349 C338 R339 C335 R336 C332 C337 C334 R337 C331 R338 R328 C325 R331 C322 R333 R332 R327 C330 R335 C327 C362 C364 C363 C328

: Added portion. : Changed portion.

Page	CORRECT
4-70	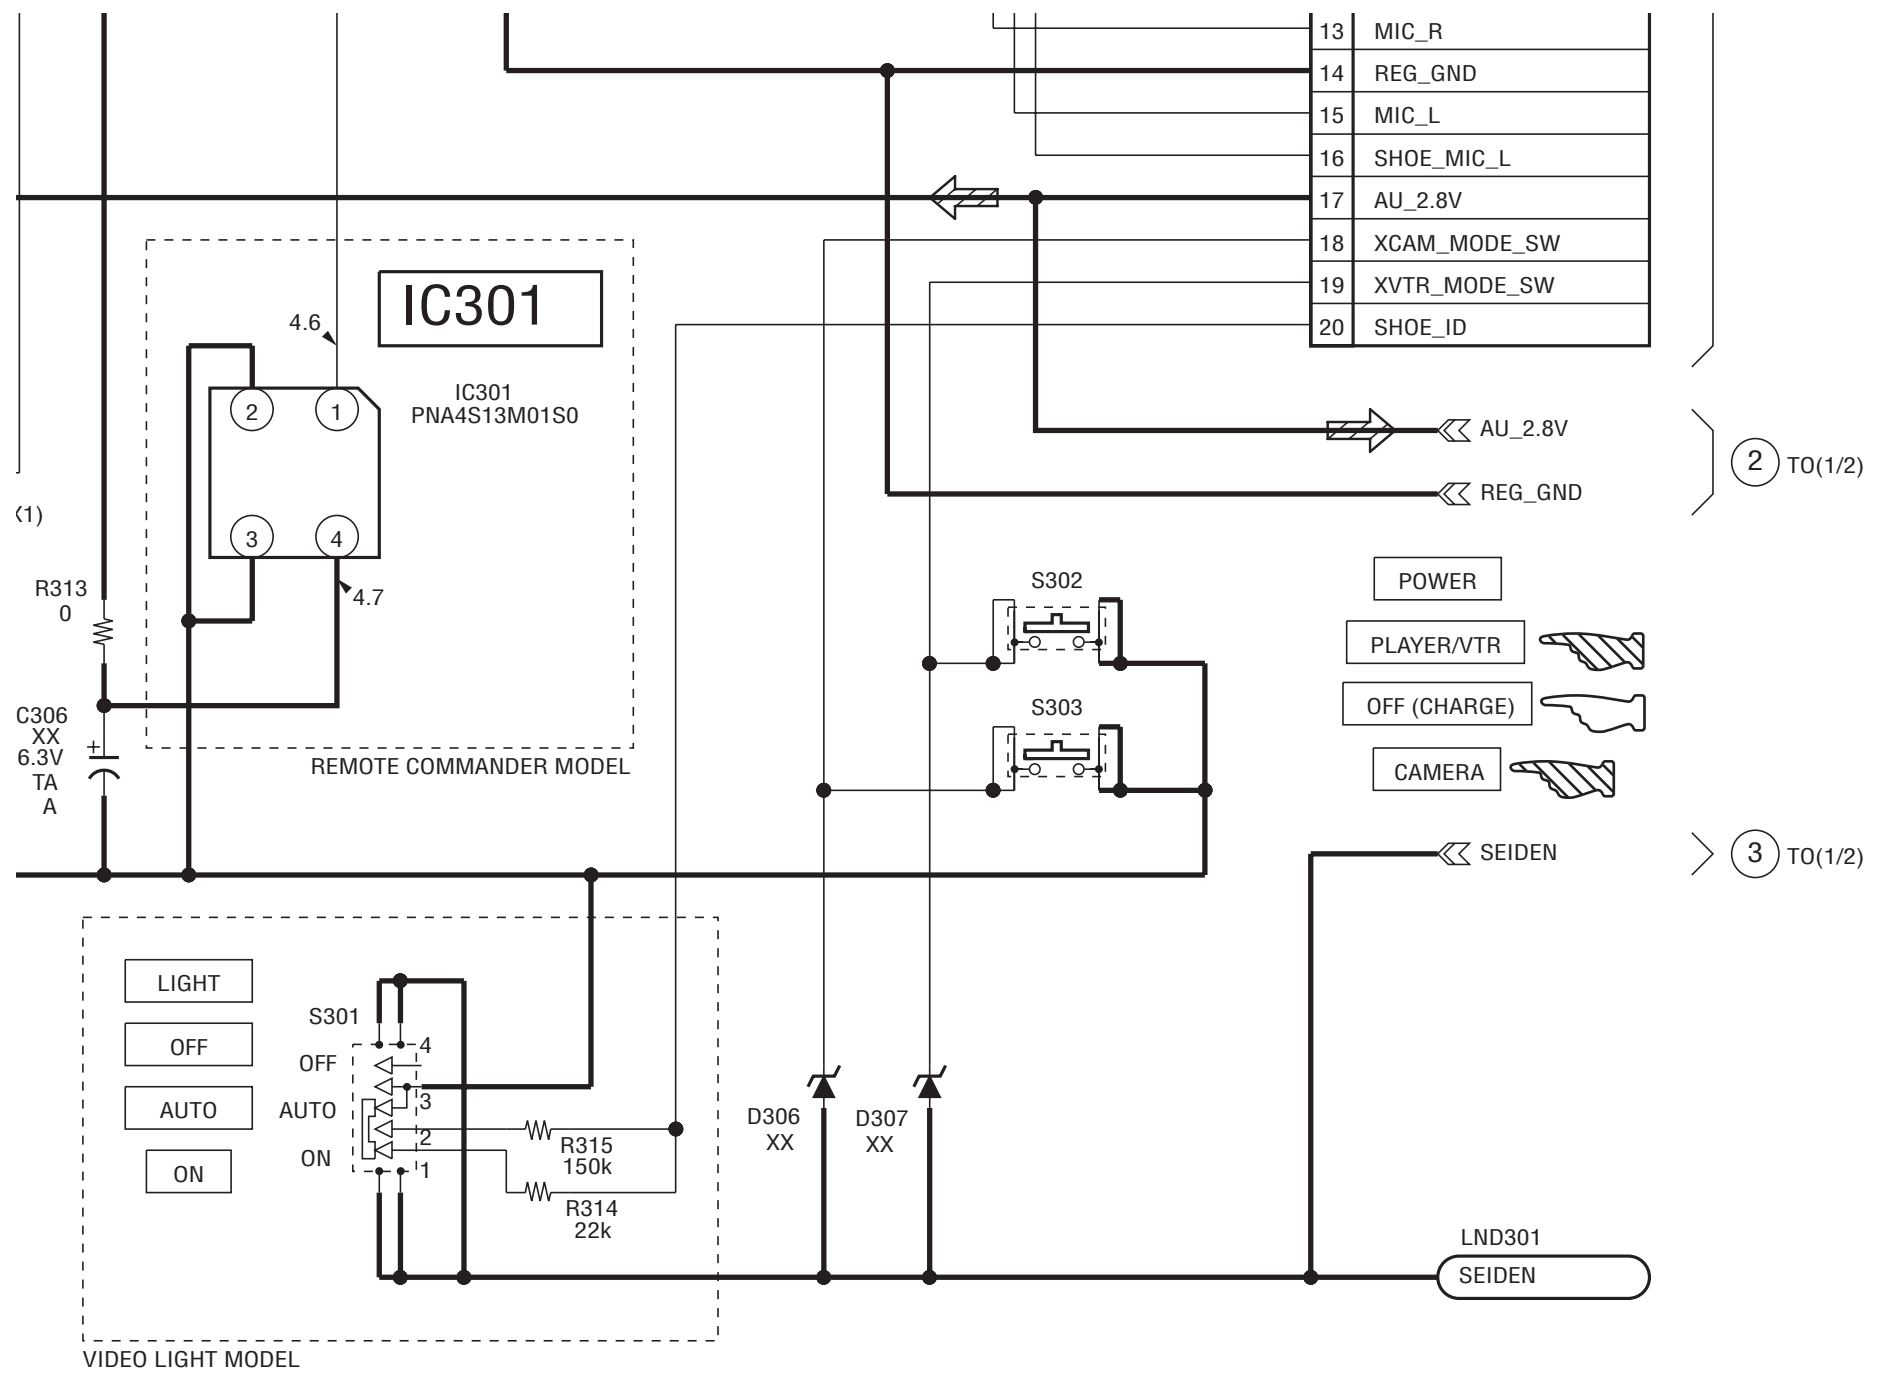

13 MIC_R
14 REG_GND
15 MIC_L
16 SHOE_MIC_L
17 AU_2.8V
18 XCAM_MODE_SW
19 XVTR_MODE_SW
20 SHOE_ID
IC301
4.6
IC301
PNA4S13M01S0
2
1
3
4
4.7
(1)
R313
0
C306
XX
6.3V
TA
A
REMOTE COMMANDER MODEL
AU_2.8V
REG_GND
2 TO(1/2)
S302
POWER
PLAYER/VTR
S303
OFF (CHARGE)
CAMERA
SEIDEN
3 TO(1/2)
LIGHT
OFF
AUTO
ON
S301
OFF
AUTO
ON
4
3
2
1
R315
150k
R314
22k
D306
XX
D307
XX
LND301
SEIDEN
VIDEO LIGHT MODEL

SECTION 6. REPAIR PARTS LIST

6-2. ELECTRICAL PARTS LIST

: Changed portion.

Page	INCORRECT				CORRECT			
	Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
6-18			< SWITCH >				< SWITCH >	
	S301	1-692-605-11	SWITCH, SLIDE (LIGHT ON/AUTO/OFF) (TR617E/TR717E/TR918E)		S301	1-692-605-11	SWITCH, SLIDE (LIGHT ON/AUTO/OFF) (TR617E/TR717E/TR918E)	
	S302	1-771-331-51	SWITCH, PUSH (1 KEY) (CAMERA ON)		S302	1-771-331-51	SWITCH, PUSH (1 KEY) (PLAYER/VTR)	
	S303	1-771-331-21	SWITCH, PUSH (1 KEY) (PLAYER ON)		S303	1-771-331-71	SWITCH, PUSH (1 KEY) (CAMERA)	
6-20			< SWITCH >				< SWITCH >	
	S301	1-692-605-11	SWITCH, SLIDE (LIGHT ON/AUTO/OFF) (TRV57E/TRV67E/TRV87E)		S301	1-692-605-11	SWITCH, SLIDE (LIGHT ON/AUTO/OFF) (TRV57E/TRV67E/TRV87E)	
	S302	1-771-331-51	SWITCH, PUSH (1 KEY) (CAMERA ON)		S302	1-771-331-51	SWITCH, PUSH (1 KEY) (PLAYER/VTR)	
	S303	1-771-331-21	SWITCH, PUSH (1 KEY) (PLAYER ON)		S303	1-771-331-71	SWITCH, PUSH (1 KEY) (CAMERA)	

Sony Corporation
Personal VIDEO Products Company

9-974-197-91

2000K1660-1

Printed in Japan ©2000.11

Published by Safety & Service Engineering Dept.